



Super Recycler[®]

Mower

Model No. 20042 – 9900001 & Up
Model No. 20043 – 9900001 & Up

Parts Catalog

ORDERING REPLACEMENT PARTS

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Contents

Description	Page	Description	Page
Housing, Handle Brackets, & Wheel Assembly	1-2	Rear Bagger Assembly	9
Gear Case Assembly	3	Engine Briggs & Stratton	
Engine & Blade Assembly	4	Model 12H802-1767-E1	10-16
Gear Case & Wheel Assembly	5-6	Toro Part Number Index	17-19
Handle & Controls Assembly	7	Maintenance	20-21
Rear Bagging Discharge Chute Assembly	8		

Note:

Accessories

Description	Model / Parts No.	Description	Model / Parts No.
Recycler Side Discharge Kit		Chute Plug Kit	
(Model No. 20042 Only)	Model No. 59197	(Model No. 20043 Only)	Model No. 59135
Dethatcher Kit		Traction Assist Handle Kit	Model No. 59196
(Model No. 20042 Only)	Model No. 59131		
Recycler Bagging Kit			
(Model No. 20042 Only)	Model No. 59194		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HWHTF	hex washer head thread forming
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	PH	pan head
FH	flat head	PPH	Phillips pan head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HFW	hex flange washer	SFH	slotted fillister head
HH	hex head	SH	square head
HHF	hex head flange	SHWH	slotted hex washer head
HHST	hex head self tapping	SPH	slotted pan head
HJ	hex jam	STD	standard
HOC	height-of-cut	TAP	self tapping
HS	hex socket	TH	truss head
HSBH	hex socket button head	TTH	Torx truss head
HSFH	hex socket flat head	WH	wing head
HSH	hex socket head		
HWH	hex washer head		

Important Format Explanations

This catalog uses special formats to convey information in illustrations and parts lists. Specifically, one format is used in conjunction with service assemblies and another with quantities associated with reference numbers.

Service Assemblies

Parts within service assemblies have reference numbers in the form $X:Y$. X is the reference number of the service assembly and Y is a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in part lists and as callouts in illustrations.

Reference Numbers with Quantities

Illustrations may have a quantity in parentheses next to a reference number, in the form $X (Y)$. X is the reference number. Y in parentheses is the quantity of the part identified by the reference number.

For example, the illustration callout 4 (2) indicates that two parts are used in that instance.

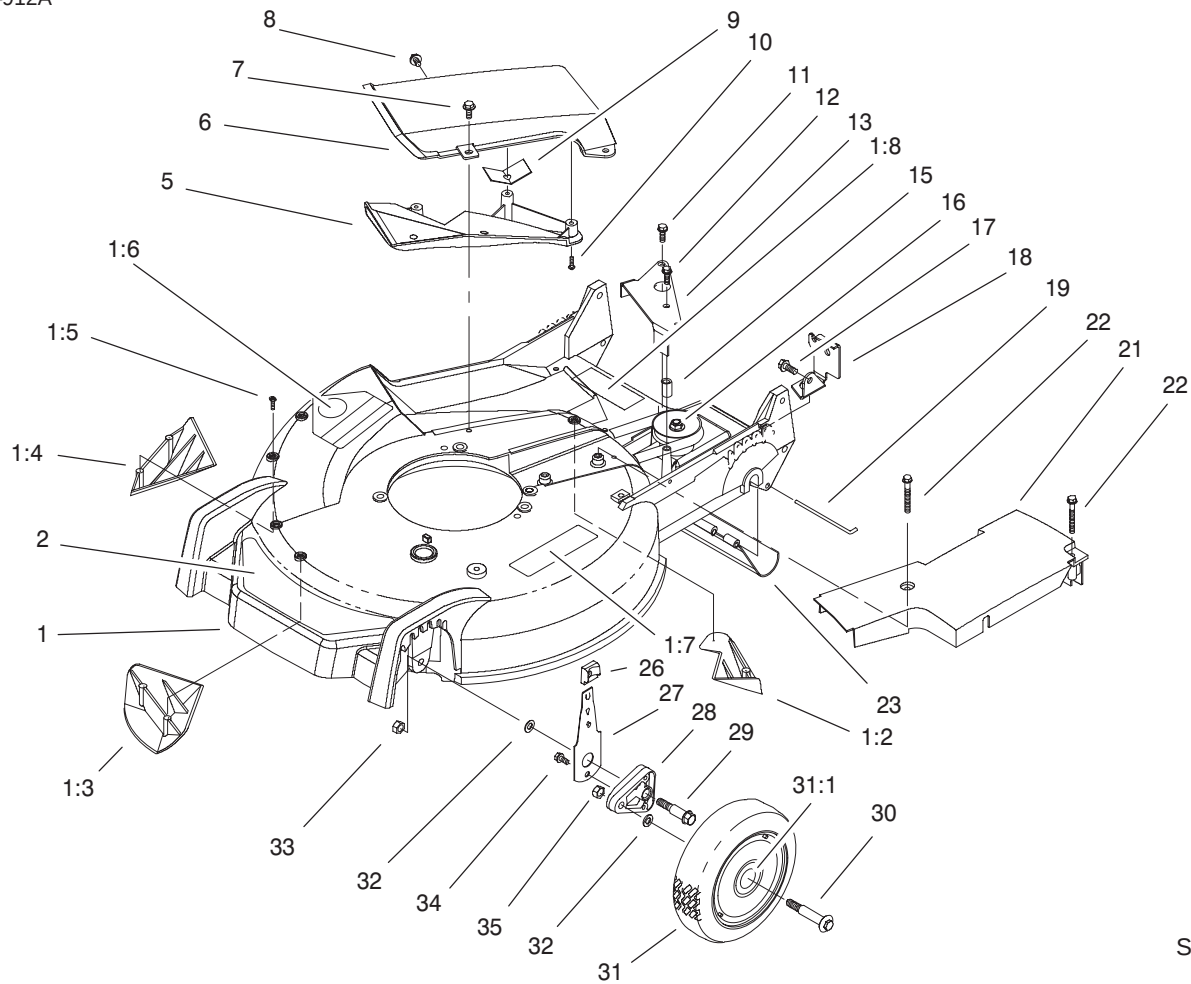


Sheet No.:2

Housing, Handle Brackets, & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7148	1	Housing-21"rwd
1:2	92-1750	1	Kicker - Rear, Sp
1:3	92-1720	1	Kicker - Front
1:4	92-1730	1	Kicker-RH
1:5	32144-111	6	Screw-PPH
1:6	43-8480	1	Decal-Danger
1:7	93-0248	1	Decal - Warning
1:8	99-6018	1	Decal - Warning
2	99-6010	1	Decal - Deck
5	82-8620	1	Deflector (Only On: 20042)
6	82-8612	1	Cover (Only On: 20042)
7	46-6811	3	Screw & Washer ASM (Only On: 20042)
8	46-6810	1	Screw & Washer ASM (Only On: 20042)
9	83-4750	1	Cover Guard (Only On: 20042)
10	32144-111	5	Screw-PPH (Only On: 20042)
11	49-2040	1	Screw-Taptite
12	92-1616	1	Screw-Thread Forming
13	99-1513-03	1	Bracket-Trans Actuator


Ref. No.	Part No.	Qty.	Description
15	614673	1	Bushing - Actuator Plt
16	99-1525	1	ASM-Gearcase
17	32144-70	1	Screw-HH
18	99-1512-03	1	Bracket-Tradtion Cable
19	33-3208	1	Rod-Shield
21	98-1502	1	Cover-Belt
22	37-7260	2	Screw-HH
23	44-0580	1	Shield - Trailing
26	25-7740	2	Knob-Arm
27	66-0541	2	Front Spring Arm ASM
28	66-0580	2	Arm-Pivot, Front
29	66-0560	2	Screw-Shoulder
30	92-1057	2	Bolt-Wheel (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-Serial No. 9900001-9907848)
30	27-6232	2	Bolt-Wheel (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)

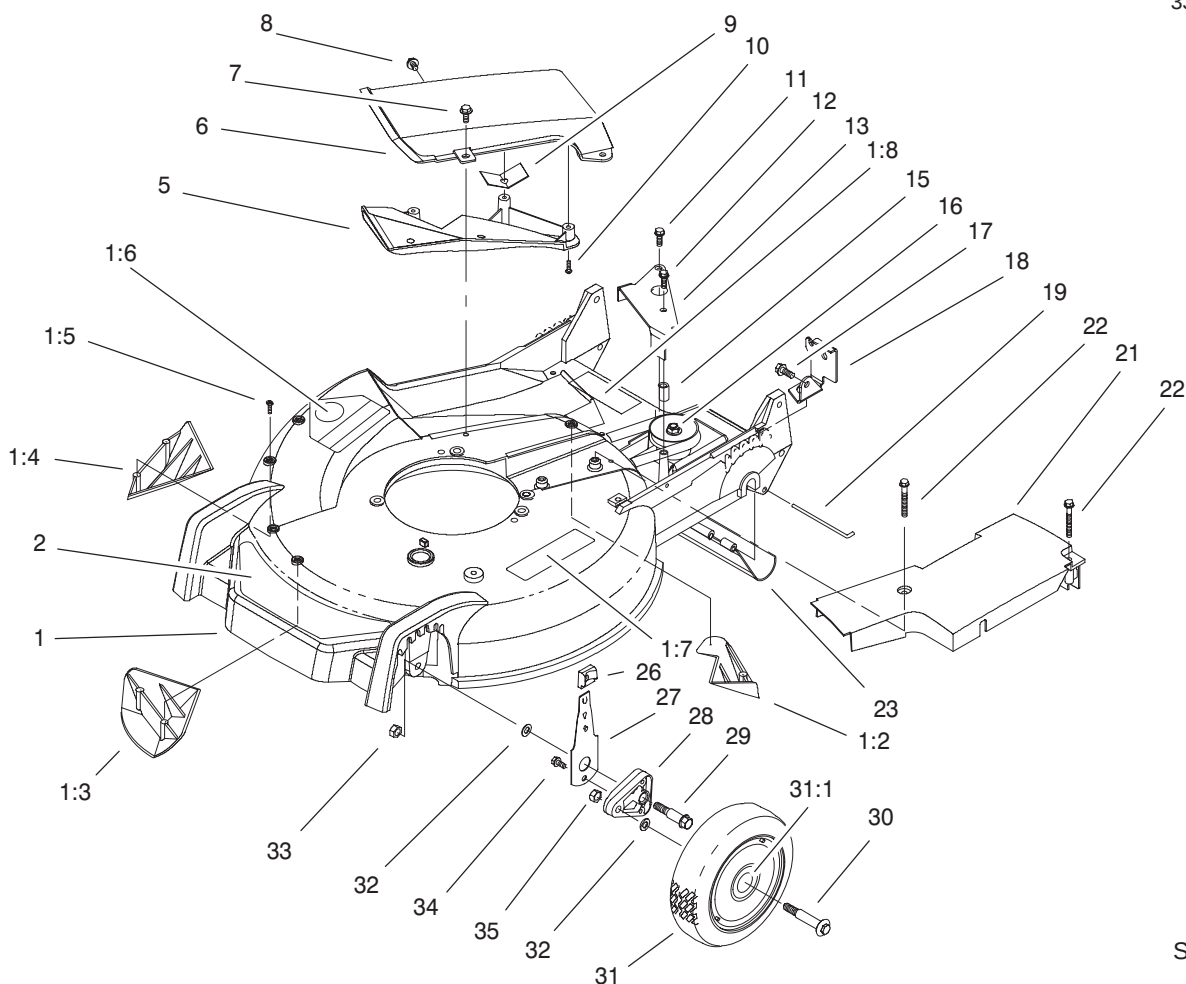

Sheet No.:2

Housing, Handle Brackets, & Wheel Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
31	98-7130	2	Wheel ASM (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-Serial No. 9900001-9907848)	35	3296-6	2	Nut-Lock (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)
31	14-9989	2	Wheel/Tire/ASM (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-9907849 & Up)				
31:1	27-6250	2	Bushing				
32	40-1940	4	Washer-Wheel Bolt				
33	3296-6	2	Nut-Lock				
34	32144-85	2	Screw-HH				
35	603773	2	Nut-Lock (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-Serial No. 9900001-9907848)				

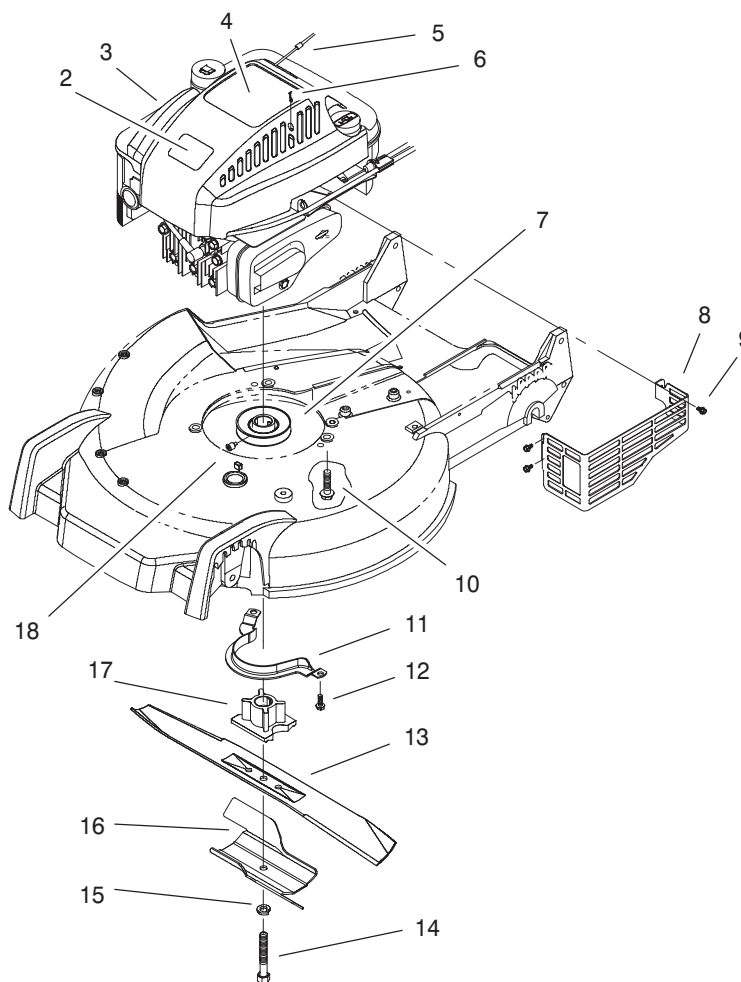

Sheet No.:3

Engine & Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	98-3206	1	Nameplate – Toro				
3	93-0243	1	Shroud–Quantum Wedge				
4	99-6013	1	Decal – Recoil				
5	2210-316	1	Stop–Rope				
6	32144-121	2	Screw–PPH				
7	100-1102	1	Pulley–Assy				
8	82-8550-03	1	Shield–Muffler				
9	32144-73	3	Screw–HWH				
10	32144-102	3	Screw–HWH				
11	99-1526-03	1	Guide–Belt				
12	32144-70	2	Screw–HH				
13	93-4106	1	Blade–Recycler, Gen. Iii				
14	95-1748	1	Screw–Blade				
15	3253-22	1	Washer–Lock/Sp				
16	94-1608-03	1	Accelerator–Blade				
17	100-1100	1	Retainer – Blade				
18	613227	1	Screw – Set				

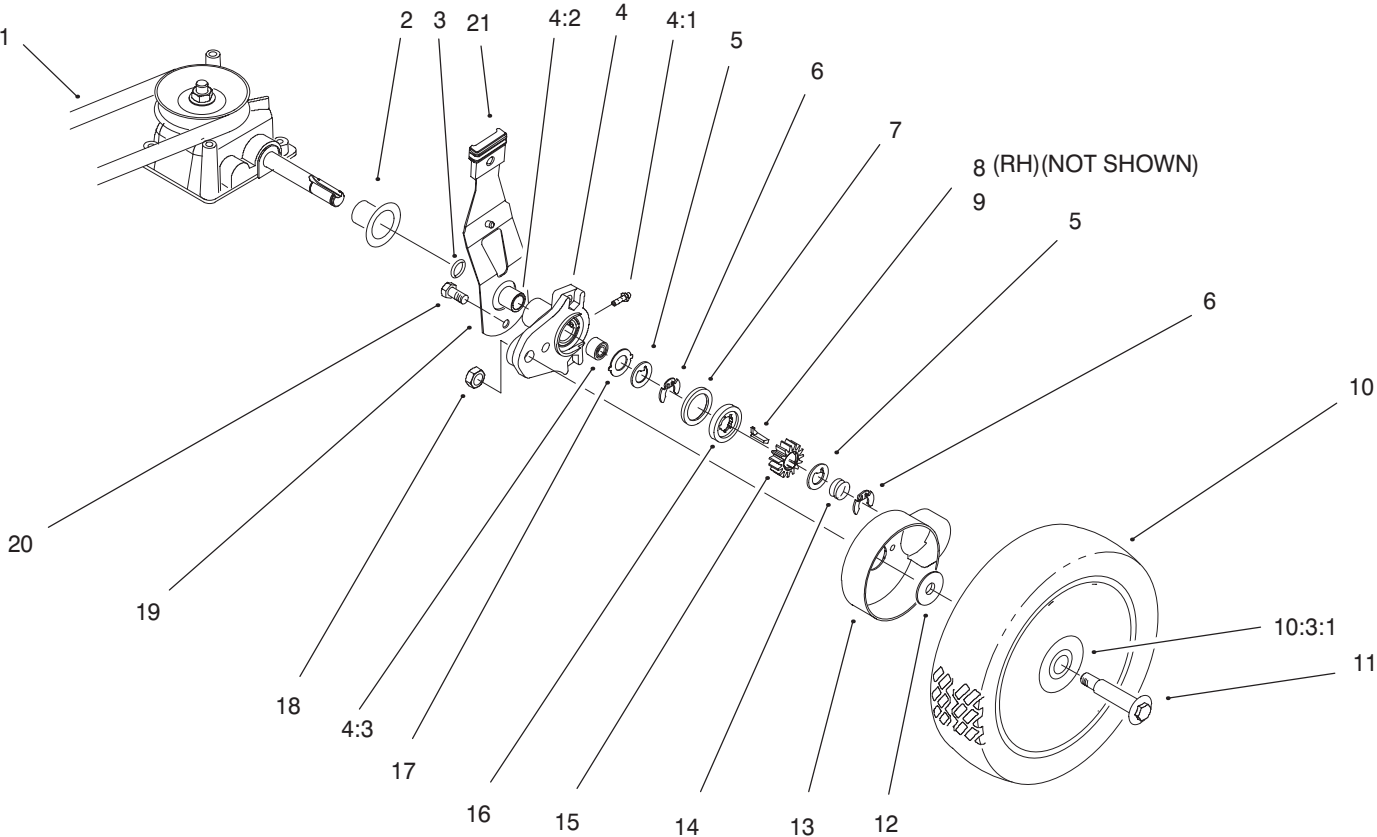


Sheet No.:4

Gear Case & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1598	1	V-Belt (Cast)
2	42-3520	2	End Cap
3	237-153	2	O-Ring
4	63-8701	2	Pivot Arm Assembly
4:1	302-56	1	Fitting-Zerk
4:2	48-2060	1	Bearing-Roller
4:3	70-9760	1	Bushing
5	65-4740	4	Washer-Keyed Thrust
6	65-2720	4	Klip Ring-Special
7	65-4710	2	Ring-Friction
8	66-6040	1	Key-Rocking
9	66-6050	1	Key-Rocking LH
10	98-7135	2	Wheel/Tire/Gear ASM (Model No. 20042-Serial No. 9900001-9909768)
10	16-0029	2	Fwd Whl,Tire/Gear ASM (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)
10:3:1	27-6250	2	Bushing

Ref. No.	Part No.	Qty.	Description
11	92-1057	2	Bolt-Wheel (Model No. 20042-Serial No. 9900001-9909768)
11	27-6232	2	Bolt-Wheel (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & up)
12	74-1671	2	Spacer-Cover, Wheel
13	74-1660	2	Cover-Wheel
14	65-4720	2	Spring-Compression
15	65-4750	2	Pinion-Gear, 15t
16	65-4760	2	Washer
17	65-4730	2	Washer-Pivot Arm
18	603773	2	Nut-Lock (Model No. 20042-Serial No. 9900001-9909768)

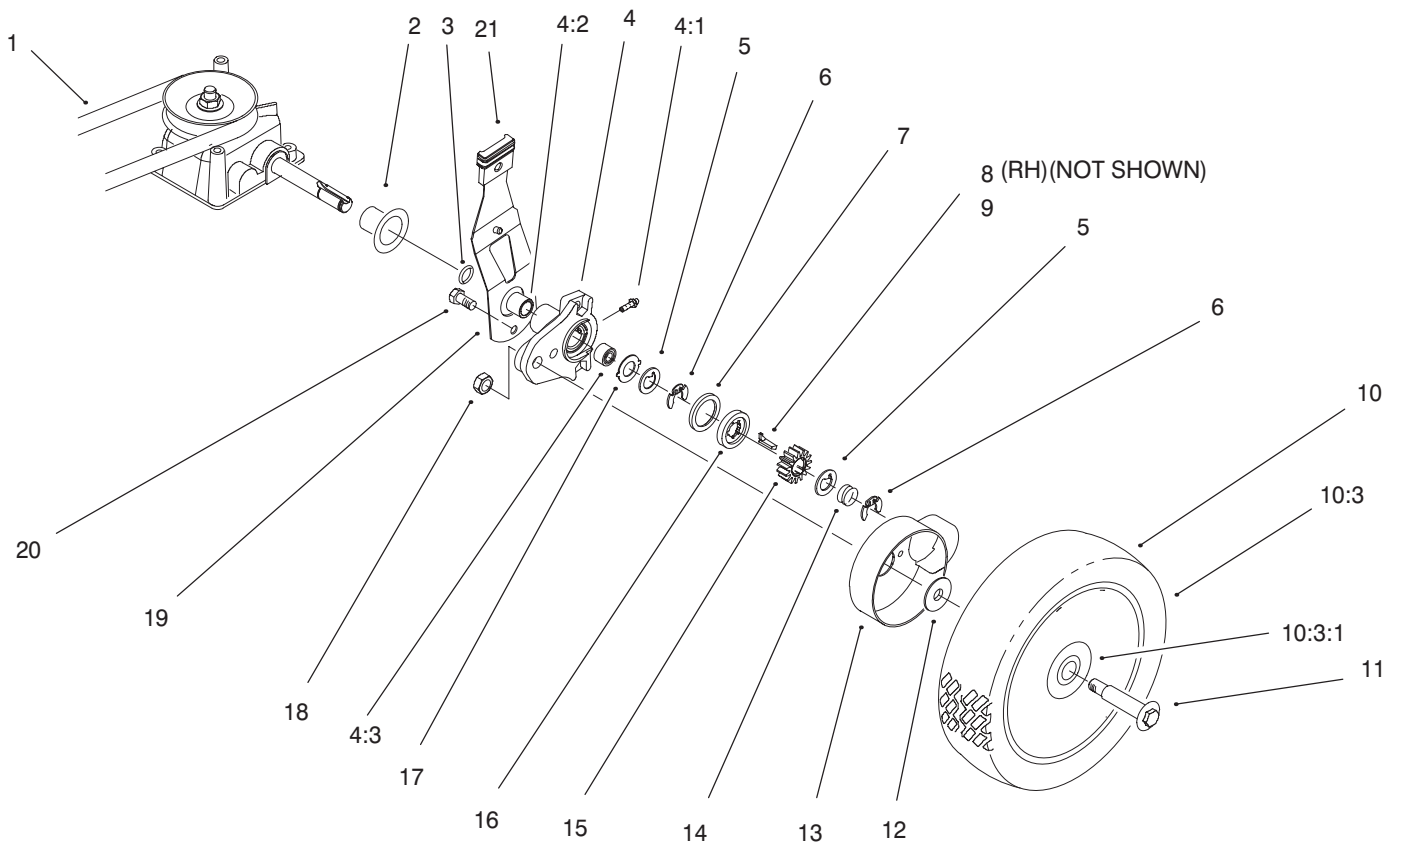


Sheet No.:4

Gear Case & Wheel Assembly

Ref. No.	Part No.	Qty.	Description
18	3296-6	2	Nut-Lock (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)
19	63-8721	2	Spring Arm ASM
20	32144-85	2	Screw-HH
21	25-7740	2	Knob-Arm

Ref. No.	Part No.	Qty.	Description

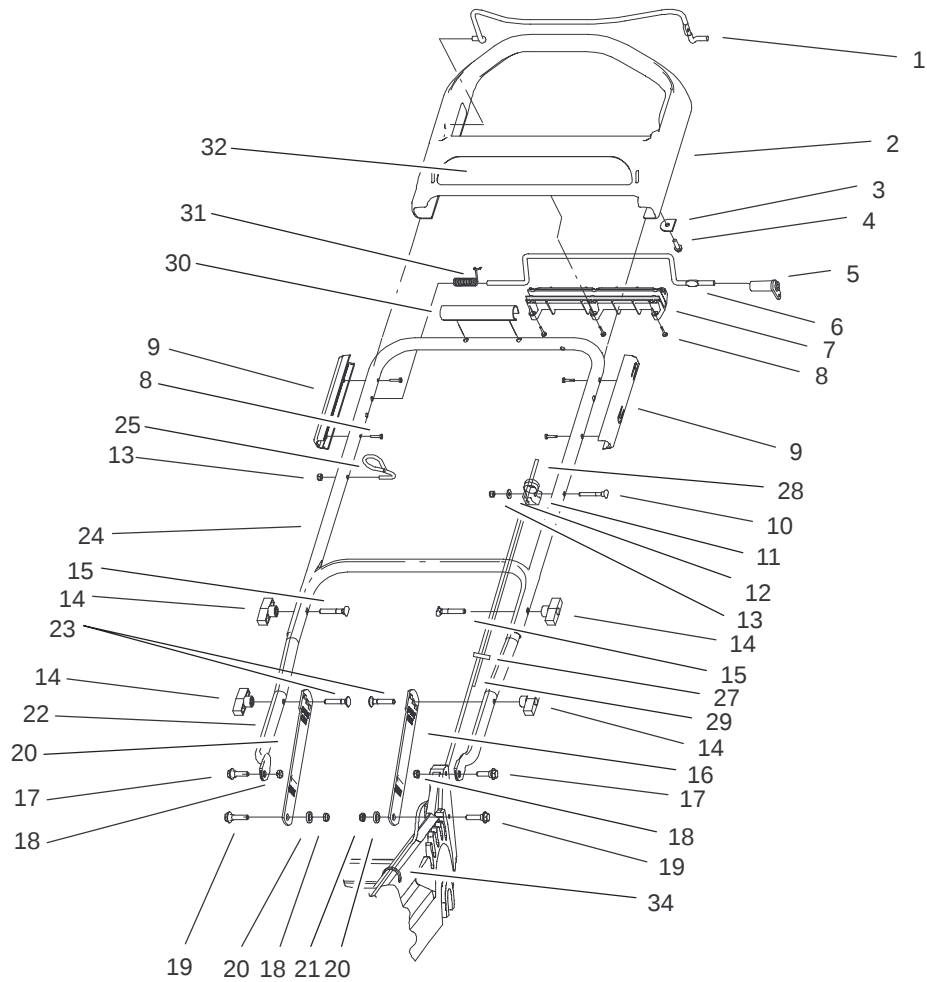


Sheet No.:5

Handle & Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake
2	99-1582	1	Handle-Control
3	99-1595	1	Retainer - Brake
4	46-8091	1	Special-HWH
5	99-1589	1	Lever-Traction
6	99-1588	1	Bar-Traction Control
7	99-6008	1	Retainer-Traction
8	94-4496	10	Control Rod
9	99-1590	2	Screw-Pan Hd
10	95-4453	1	Guide-Control Handle
11	99-5239	1	Screw - Handle
12	3256-1	1	Anchor-Cable
13	3296-73	1	Washer-Flat
14	98-7134	2	Nut-Lock Ni
15	92-2260	4	Knob-Handle
16	99-5248-03	4	Screw-Handle
17	27-7211	2	Latch-Handle
18	3296-72	2	Shoulder Screw
19	27-7210	3	Nut-Lock Ni
20	3-3287	2	Screw-Shoulder
21	3296-47	2	Spacer-Handle Latch
22	99-5249-05	1	Nut-Lock Ni
23	99-6019	1	Handle-Lower
24	99-1596-05	2	Screw-CARR
25		1	Handle-Upper

Ref. No.	Part No.	Qty.	Description
25	86-9671	1	Guide-Rope
27	3290-378	1	Tie-Cable
28	100-1186	1	Cable-Brake
29	99-1584	1	Cable-Traction
30	99-6339	1	Cover-Handle
31	99-1592	1	Spring-Torsion,RH
32	99-6009	1	Decal - Console
34	3290-381	1	Strap-Tie

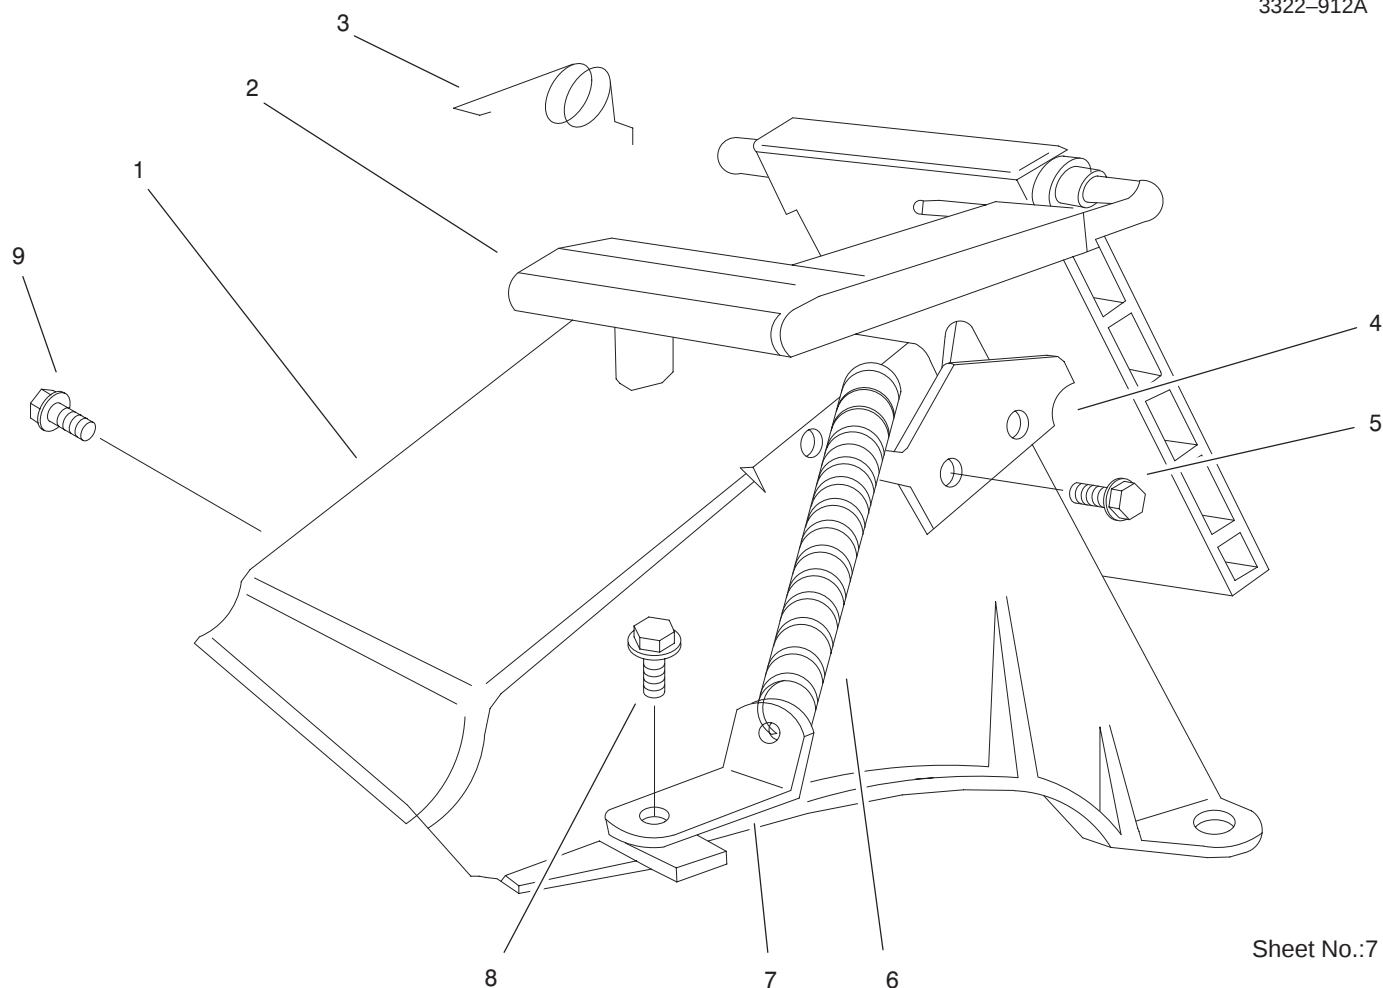


Sheet No.:7

Rear Bagging Discharge Chute Assembly

Ref. No.	Part No.	Qty.	Description
1	82-9153	1	Discharge Tunnel (Only On: 20043)
2	93-7351	1	ASM – Discharge Door (Only On: 20043)
3	76-4660	1	Spring–Door (Only On: 20043)
4	93-3154	1	Latch–Plate (Only On: 20043)
5	46-8090	2	Screw–Plastite (Only On: 20043)
6	80-3770	1	Retainer–Door (Only On: 20043)
7	71-9350	1	Bracket–Spring (Only On: 20043)
8	46-6811	3	Screw & Washer ASM (Only On: 20043)
9	46-6810	1	Screw & Washer ASM (Only On: 20043)

Ref. No.	Part No.	Qty.	Description

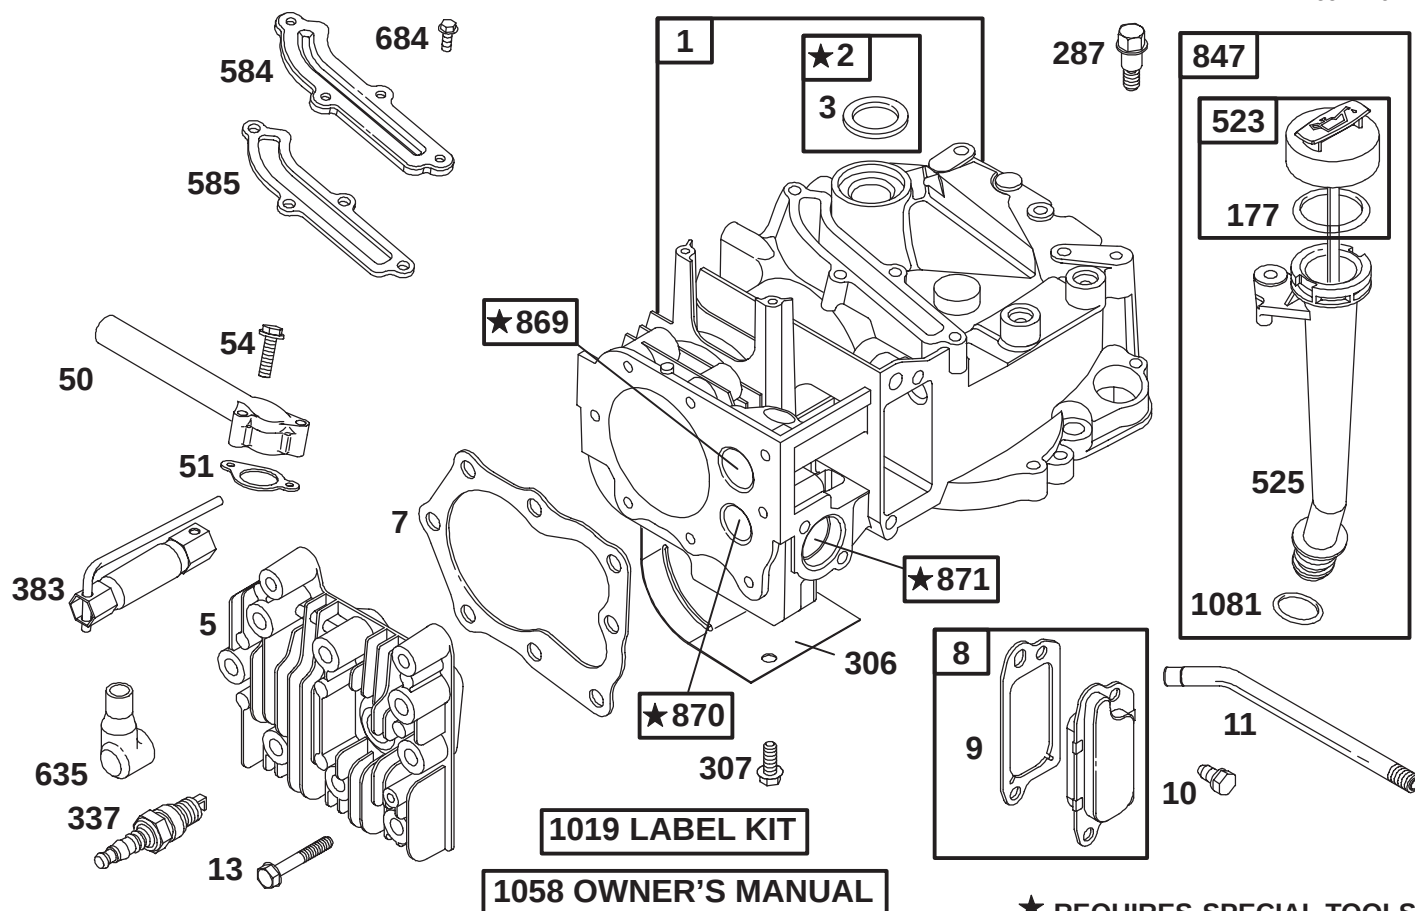

Assemblies include all parts shown in frames.

★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

Ref. No.	Part No.	Description	No. Used
1	493260	Cylinder Assembly	1
2	399269	Bushing	1
★3	299819	Seal—Oil	1
5	691160	Cylinder Head	1
★†7	272916	Cylinder Head Gasket	1
8	495786	Breather Assembly	1
★†9	272481	Breather Gasket	1
10	94650	Screw (Breather Assy)	1
11	231685	Breather Tube	1
13	94547	Screw (Cylinder Head)	1
50	497465	Intake Manifold	1
★51	272199	Intake Gasket	1
54	94526	Screw (Intake Manifold)	1
★177	280393	O-Ring Seal	1
287	94511	Screw (Dipstick Tube)	1
306	690450	Shield—Cylinder	1


Ref. No.	Part No.	Description	No. Used
307	690345	Screw (Cylinder Shield)	1
337	802592	Sparkplug	1
383	89838	Wrench—Sparkplug	1
523	495264	Dipstick	1
525	495265	Dipstick Tube	1
584	692342	Breather Passage Cover	1
★585	272238	Breather Passage Gasket	1
635	66538	Boot—Sparkplug	1
684	94515	Screw (Breather Passage Cover)	1
847	495263	Dipstick/Tube Assembly	1
869	691155	Seat—Valve (Intake)	1
870	690380	Seat—Valve (Exhaust)	1
871	262001	Bushing—Guide	1
1019	494256	Label Kit	1
1058	273693	Owner's Manual	1
★1081	280966	O-Ring Seal	1

★ Included in Gasket Set—See Ref. 358.

- Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

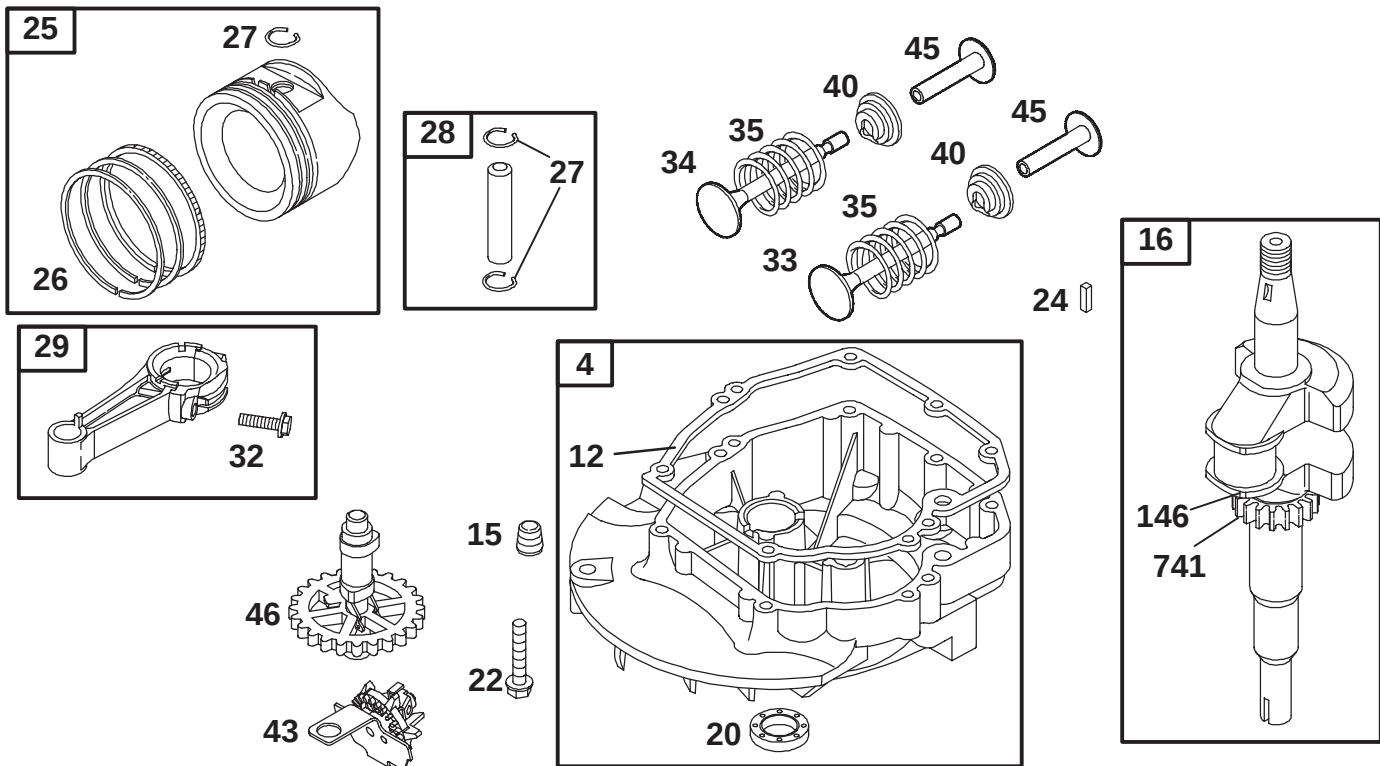

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

Ref. No.	Part No.	Description	No. Used
4	493279	Engine Sump	1
★12	272198	Crankcase Gasket	1
15	94880	Oil Drain Plug	1
16	694079	Crankshaft	1
★20	399781	Oil Seal	1
22	94220	Screw (Engine Sump)	1
	94612	Screw (Used in Hole Nearest Breather)	1
24	222698	Key—Flywheel	1
25	499429	Piston Assembly (Standard)	1
	499430	Piston Assembly (.010" O.S.)	1
	499431	Piston Assembly (.020" O.S.)	1
	499432	Piston Assembly (.030" O.S.)	1
26	499425	Ring Set (Standard)	1
	499426	Ring Set (.010" O.S.)	1

Ref. No.	Part No.	Description	No. Used
	499427	Ring Set (.020" O.S.)	1
	499428	Ring Set (.030" O.S.)	1
27	263190	Piston Pin Lock	1
28	499423	Piston Pin (Standard)	1
	298908	Piston Pin (.005" O.S.)	1
29	499424	Connecting Rod (Standard)	1
32	94699	Screw (Connecting Rod)	1
33	262651	Exhaust Valve	1
34	262652	Intake Valve	1
35	262224	Valve Spring	1
40	93312	Retainer—Valve	1
43	493737	Governor/Oil Slinger	1
45	262204	Valve Tappet	1
46	498275	Camshaft	1
146	94388	Key—Timing	1
741	262598	Gear—Timing	1

★ Included in Gasket Set—See Ref. 358.
● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.
† Included in Valve Overhaul Gasket Set—See Ref. 1095.

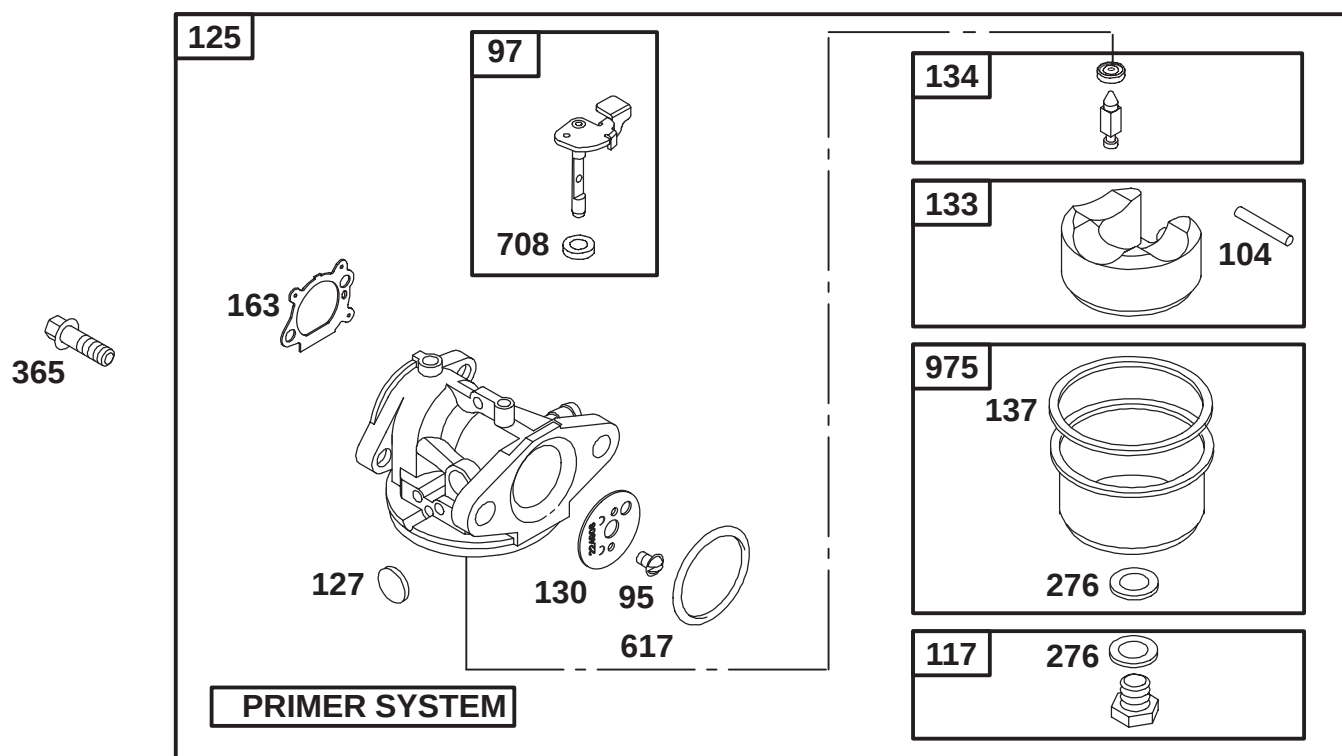

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1


Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
95	94098	Screw (Throttle Valve)	1	130	691203	Valve-Throttle	1
97	493267	Shaft-Throttle	1	133	398187	Float-Carburetor	1
●104	691242	Pin-Float Hinge	1	●134	398188	Needle/Seat Kit	1
117	494870	Main Jet (Standard)	1	◆137	693981	Gasket-Float Bowl	1
	497315	Main Jet (High Altitude)	1	★◆163	272653	Gasket-Air Cleaner	1
125	498170	Carburetor	1	◆276	271716	Sealing Washer	1
●127		Plug-Welch (Sold in Kit Only)	1	365	94525	Screw (Carburetor)	1
				◆617	270344	O-Ring Seal	1
				◆708	691321	Seal-Dust	1
				975	493640	Bowl-Float	

★ Included in Gasket Set-See Ref. 358.

● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

† Included in Valve Overhaul Gasket Set-See Ref. 1095.

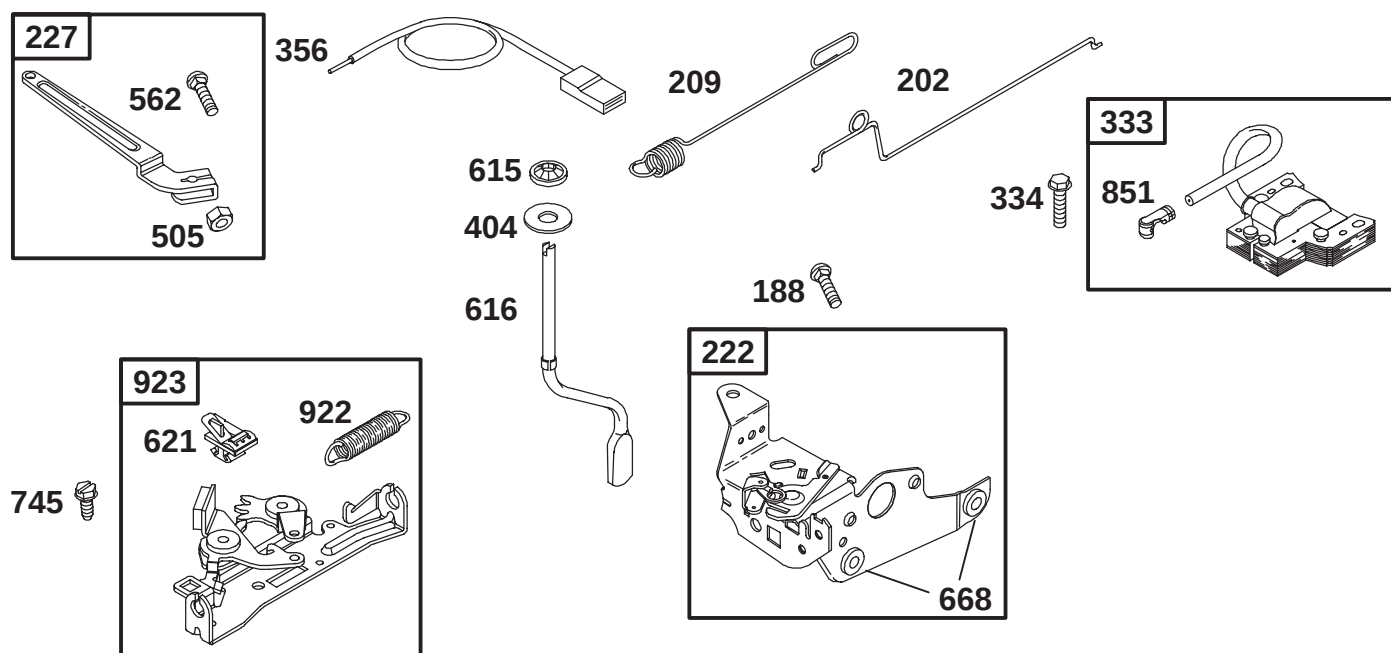

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

Ref. No.	Part No.	Description	No. Used
188	94644	Screw (Control Bracket)	1
202	262579	Link—Mechanical Governor	1
209	691292	Spring—Governor	1
222	499835	Bracket—Control	1
227	492349	Governor Control Lever	1
333	802574	Armature—Magneto	1
334	94731	Screw (Armature—Magneto)	1
356	497833	Wire—Stop	1
404	67072	Washer (Governor Crank)	1
505	231082	Nut (Governor Control Lever)	1


Ref. No.	Part No.	Description	No. Used
562	92613	Bolt (Governor Control Lever)	1
615	94474	Retainer—Governor Shaft	1
616	691306	Crank—Governor	1
621	396847	Switch—Stop	1
★668	493823	Spacer (Includes 2)	1
745	94512	Screw(Brake)	1
851	493880	Terminal—Cable	1
922	262640	Spring—Brake	1
923	493442	Brake	1

★ Included in Gasket Set—See Ref. 358.

● Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.

† Included in Valve Overhaul Gasket Set—See Ref. 1095.

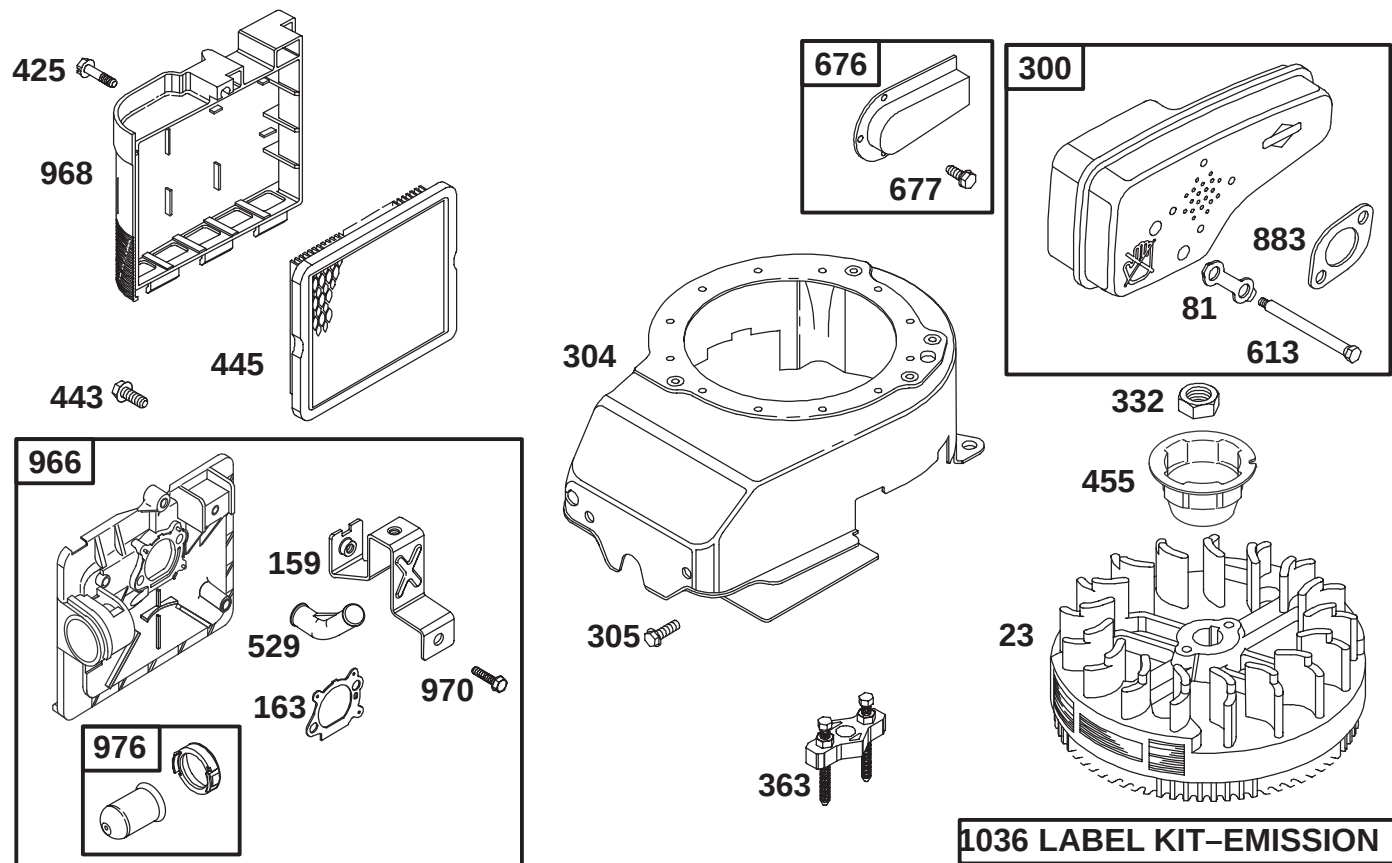

Assemblies include all parts shown in frames.


ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

Ref. No.	Part No.	Description	No. Used
23	693821	Flywheel	1
81	223664	Muffler Screw Lock	1
159	224815	Air Cleaner Primer Bracket	1
★◆163	272653	Gasket—Air Cleaner	1
300	497838	Muffler—Exhaust	1
304	493293	Housing—Blower	1
305	94744	Screw (Blower Housing)	1
332	92284	Nut(Flywheel)	1
363	19069	Flywheel—Puller	1
425	94872	Screw (Air Cleaner Cover)	1
443	94873	Screw (Air Cleaner Base)	1
445	491588	Filter—A/C Cartridge	1

Ref. No.	Part No.	Description	No. Used
455	691219	Cup—Flywheel	1
529	281299	Grommet	1
613	94231	Screw (Exhaust Muffler)	1
676	493871	Deflector—Muffler	1
677	94896	Screw(Deflector)	1
★†883	272253	Gasket—Exhaust	1
966	496116	Base—A/C Primer	1
968	281340	Cover—Air Cleaner	1
970	94749	Screw (A/C Primer Bracket)	1
976	496115	Primer—Carburetor	1
1036	499341	Label Kit—Emission	1

- ★ Included in Gasket Set—See Ref. 358.
- Included in Carburetor Kit—See Ref. 121.

◆ Included in Carburetor Gasket Set—See Ref. 977.
† Included in Valve Overhaul Gasket Set—See Ref. 1095.

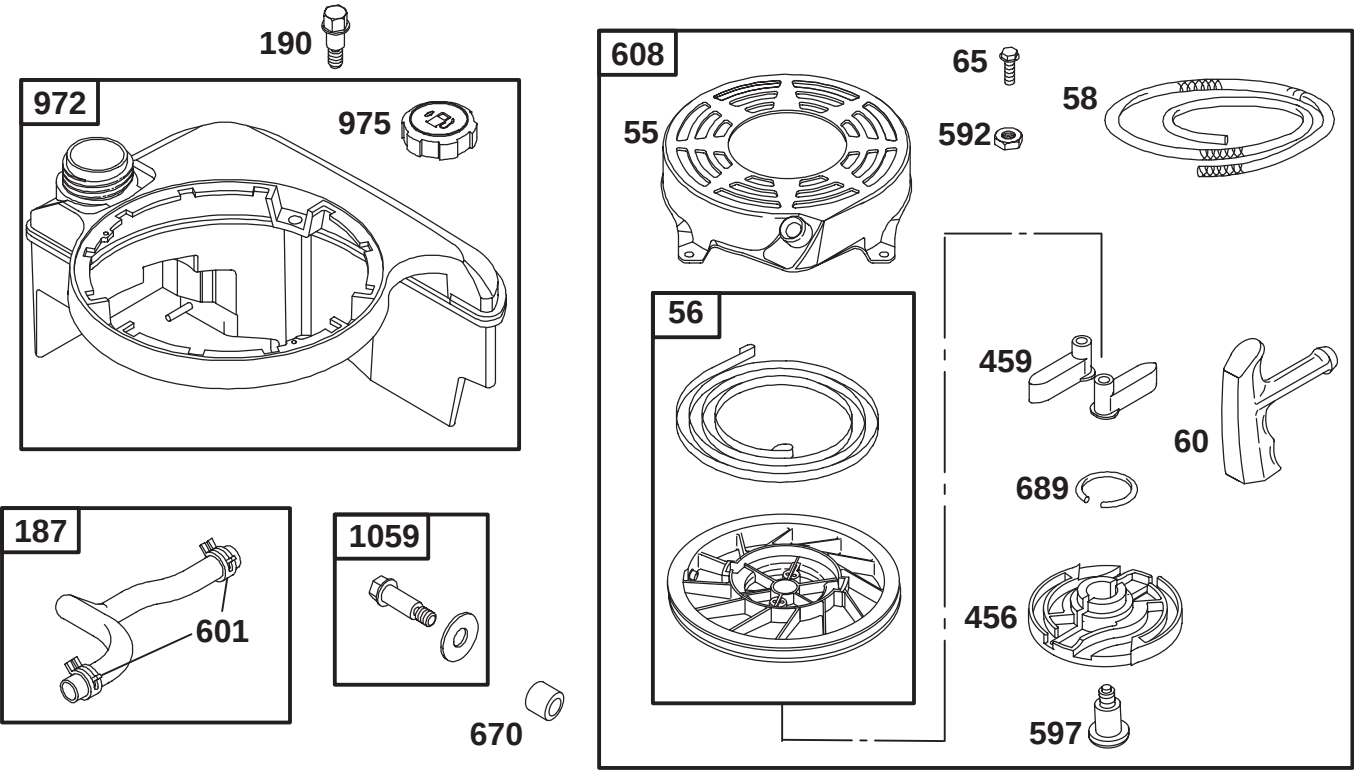

Assemblies include all parts shown in frames.





ENGINE BRIGGS & STRATTON MODEL12H802-1767-E1

Ref. No.	Part No.	Description	No. Used
55	497440	Rewind Starter Housing	1
56	498144	Assy-Pulley/Spring	1
58	280399	Starter Rope	1
60	281434	Starter Rope Grip	1
65	94686	Screw	1
		(Rewind Starter)	1
187	492792	Line-Fuel	1
190	94511	Screw-Shoulder	1
456	281503	Plate-Pawl Friction	1
459	281505	Pawl-Ratchet	1
592	92987	Nut	1
		(Rewind Starter)	1

Ref. No.	Part No.	Description	No. Used
597	94943	Screw	1
		(Pawl Friction Plate)	1
601	95162	Clamp-Fuel Line	1
608	497680	Starter-Rewind	1
670	280512	Spacer-Fuel Tank	1
689	263073	Spring-Friction	1
972	495224	Tank-Fuel	1
975	397974	Cap-Fuel Tank	1
1059	398540	Screw/Washer Kit	1

★ Included in Gasket Set-See Ref. 358.
● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.
† Included in Valve Overhaul Gasket Set-See Ref. 1095.

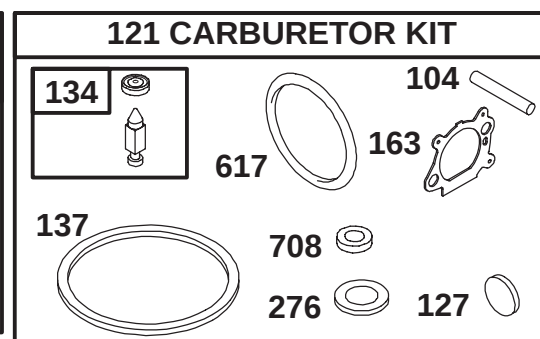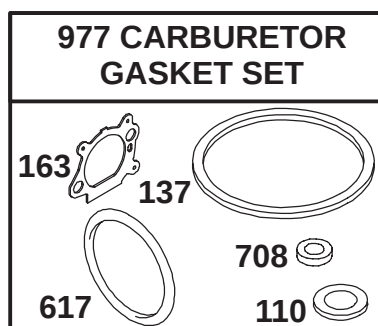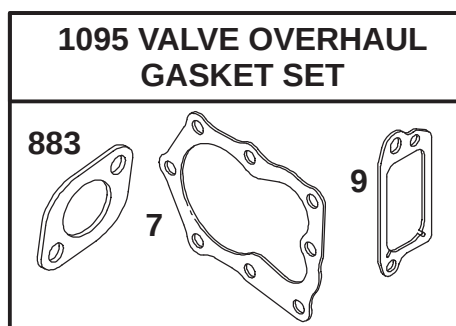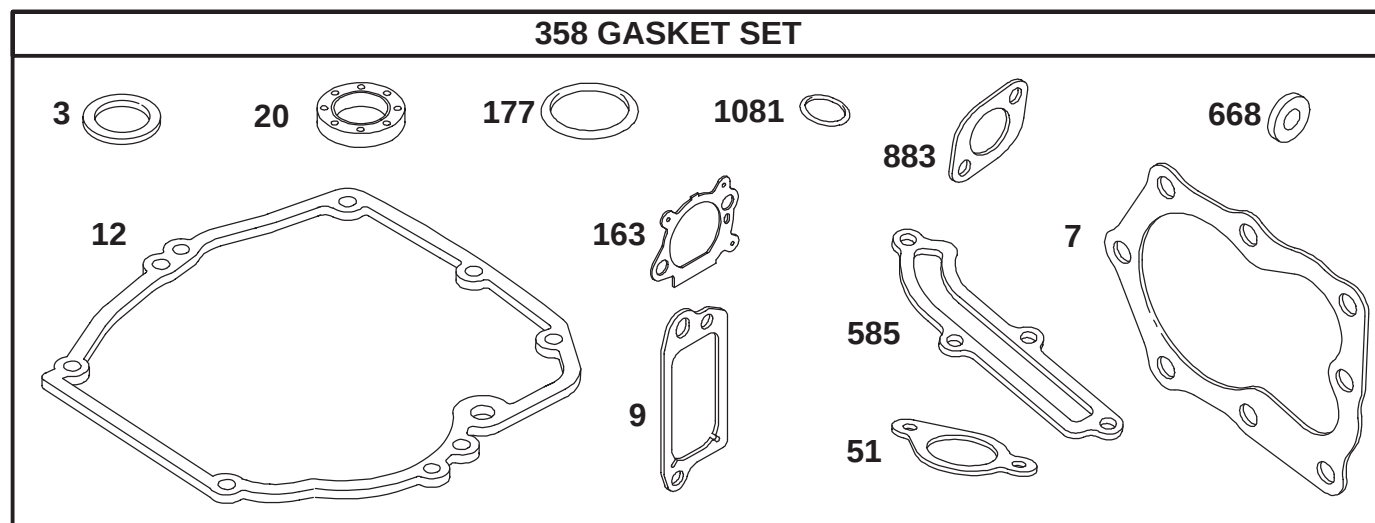

Assemblies include all parts shown in frames.

ENGINE BRIGGS & STRATTON MODEL 12H802-1767-E1

Ref. No.	Part No.	Description	No. Used
★3	299819	Oil Seal	1
★†7	272916	Cylinder Head Gasket	1
★†9	272481	Breather Gasket	1
★12	272198	Crankcase Gasket	1
★20	399781	Oil Seal	1
★51	272199	Intake Gasket	1
●104	231371	Pin-Float Hinge	1
●◆276	271716	Sealing Washer	1
★177	280393	O-Ring Seal	1
121	498260	Carburetor Kit	1
●127		Plug-Welch (Sold in Kit Only)	1
●134	398188	Needle/Seat Kit	1

Ref. No.	Part No.	Description	No. Used
◆◆137	693981	Gasket-Bowl	1
★◆◆163	272653	Gasket-Air Cleaner	1
358	497316	Gasket Set	1
★585	272238	Breather Passage Gasket	1
◆◆617	270344	O-Ring Seal	1
◆◆708	691321	Seal-Dust	1
★668	493823	Spacer (Includes 2)	1
★†883	272253	Gasket-Exhaust	1
977	498261	Gasket Set-Carburetor	1
★1081	280966	O-Ring Seal	1
1095	498528	Gasket Set-Valve Overhaul	1

★ Included in Gasket Set-See Ref. 358.

● Included in Carburetor Kit-See Ref. 121.

◆ Included in Carburetor Gasket Set-See Ref. 977.

† Included in Valve Overhaul Gasket Set-See Ref. 1095.

Toro Part Number Index

Part No.	Page No.	Ref. No.	Qty.	Description
603773	5	18	2	Nut-Lock (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-9900001-9907848)
603773	2	35	2	Nut-Lock (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-Serial No. 9900001-9907848)
613227	4	18	1	Screw - Set
614596	3	5	1	Gear -34t
614668	3	1	1	Gear Case Cover
614673	1	15	1	Bushing - Actuator Plt
614696	3	8	1	Shaft-Intermediate
3-3287	7	20	2	Spacer-Handle Latch
14-9989	2	31	2	Wheel/Tire/ASM (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-9907849 & Up)
16-0029	5	10	2	Fwd Whl,Tire/Gear ASM (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)
25-7740	1	26	2	Knob-Arm
25-7740	6	21	2	Knob-Arm
27-6232	1	30	2	Bolt-Wheel (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)
27-6232	5	11	2	Bolt-Wheel (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)
27-6250	2	31:1	2	Bushing
27-6250	5	10:3:1	2	Bushing
27-7210	7	19	2	Screw-Shoulder
27-7211	7	17	2	Shoulder Screw
33-3208	1	19	1	Rod-Shield
33-4820	9	7	1	Hinge-bag Door (Only On: 20043)
36-4780	3	6	2	Washer
36-4791	3	11	2	Thrust Washer
36-6910	9	4	2	Spring (Only On: 20043)
37-1393	9	2	1	Bag Door (Only On: 20043)
37-7260	1	22	2	Screw-HH
38-7820	3	13	1	Bearing-Ball
40-1940	2	32	4	Washer-Wheel Bolt
42-3520	5	2	2	End Cap
42-4020	9	3	1	Frame-Bag (Only On: 20043)
42-4030	9	5	1	Frame-Upper Bag (Only On: 20043)
43-8480	1	1:6	1	Decal-Danger
44-0522	9	6	1	Grass Bag (Only On: 20043)
44-0580	1	23	1	Shield - Trailing
46-6810	1	8	1	Screw & Washer ASM (Only On: 20042)
46-6810	8	9	1	Screw & Washer ASM (Only On: 20043)
46-6811	1	7	3	Screw & Washer ASM (Only On: 20042)
46-6811	8	8	3	Screw & Washer ASM (Only On: 20043)
46-8090	8	5	2	Screw-Plastite (Only On: 20043)
46-8091	7	4	1	Special-HWH
48-2060	5	4:2	1	Bearing-Roller
49-2040	1	11	1	Screw-Taptite
49-2040	3	9	4	Screw-Taptite
55-3760	3	10	1	Gear-15t Spur, 37t Bevel
60-8750	3	12	2	Bushing
60-8850	3	3	2	Bushing-Output
60-8890	3	15	1	Gear-Bevel, Pinion
62-6660	3	18	1	Spacer
63-8701	5	4	2	Pivot Arm Assembly
63-8721	6	19	2	Spring Arm ASM
65-2720	5	6	4	Klip Ring-Special
65-4710	5	7	2	Ring-Friction
65-4720	5	14	2	Spring-Compression
65-4730	5	17	2	Washer-Pivot Arm

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
65-4740	5	5	4	Washer-Keyed Thrust
65-4750	5	15	2	Pinion-Gear, 15t
65-4760	5	16	2	Washer
66-0541	1	27	2	Front Spring Arm ASM
66-0560	1	29	2	Screw-Shoulder
66-0580	1	28	2	Arm-Pivot, Front
66-6040	5	8	1	Key-Rocking
66-6050	5	9	1	Key-Rocking LH
70-9760	5	4:3	1	Bushing
71-9350	8	7	1	Bracket-Spring (Only On: 20043)
74-1660	5	13	2	Cover-Wheel
74-1671	5	12	2	Spacer-Cover, Wheel
76-4660	8	3	1	Spring-Door (Only On: 20043)
80-3770	8	6	1	Retainer-Door (Only On: 20043)
82-8550-03	4	8	1	Shield-Muffler
82-8612	1	6	1	Cover (Only On: 20042)
82-8620	1	5	1	Deflector (Only On: 20042)
82-9153	8	1	1	Discharge Tunnel (Only On: 20043)
83-4750	1	9	1	Cover Guard (Only On: 20042)
86-9671	7	25	1	Guide-Rope
92-1507	1	30	2	Bolt-Wheel (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-Serial No. 9900001-9907848)
92-1507	5	11	2	Bolt-Wheel (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-Serial No. 9900001-9907848)
92-1616	1	12	1	Screw-Thread Forming
92-1720	1	1:3	1	Kicker - Front
92-1730	1	1:4	1	Kicker-RH
92-1750	1	1:2	1	Kicker - Rear, Sp
92-2260	7	15	4	Screw-Handle
92-3131	3	7	1	Output Shaft
92-7727	3	2	1	Gearcase
93-0243	4	3	1	Shroud-Quantum Wedge
93-0248	1	1:7	1	Decal - Warning
93-3154	8	4	1	Latch-Plate (Only On: 20043)
93-4106	4	13	1	Blade-Recycler, Gen. Iii
93-7351	8	2	1	ASM - Discharge Door (Only On: 20043)
94-1608-03	4	16	1	Accelerator-Blade
94-4496	7	8	10	Screw-Pan Hd
95-1748	4	14	1	Screw-Blade
95-4453	7	10	1	Screw - Handle
98-1502	1	21	1	Cover-Belt
98-3206	4	2	1	Nameplate - Toro
98-7130	2	31	2	Wheel ASM (Model No. 20042-,Serial No. 9900001-,9909768) (Model No. 20043-,Serial No. 9900001-,9907848)
98-7134	7	14	4	Knob-Handle
98-7135	5	10	2	Wheel/Tire/Gear ASM (Model No. 20042-Serial No. 9900001-9909768) (Model No. 20043-Serial No. 9900001-9907848)
98-7148	1	1	1	Housing-21"rwd
99-1512-03	1	18	1	Bracket-Tradtion Cable
99-1513-03	1	13	1	Bracket-Trans Actuator
99-1525	1	16	1	ASM-Gearcase
99-1526-03	4	11	1	Guide-Belt
99-1582	7	2	1	Handle-Control
99-1584	7	29	1	Cable-Traction
99-1588	7	6	1	Bar-Traction Control
99-1589	7	5	1	Lever-Traction
99-1590	7	9	2	Guide-Control Handle
99-1592	7	31	1	Spring-Torsion,RH
99-1593-03	7	1	1	Bail-Brake

*Not Illustrated

Toro Part Number Index (cont.)

Part No.	Page No.	Ref. No.	Qty.	Description
99-1595	7	3	1	Retainer - Brake Cable
99-1596-05	7	24	1	Handle-Upper
99-1598	5	1	1	V-Belt (Cast)
99-5239	7	11	1	Anchor-Cable
99-5248-03	7	16	2	Latch-Handle
99-5249-05	7	22	1	Handle-Lower
99-6008	7	7	1	Retainer-Traction Control Rod
99-6009	7	32	1	Decal - Console
99-6010	1	2	1	Decal - Deck
99-6013	4	4	1	Decal - Recoil
99-6018	1	1:8	1	Decal - Warning
99-6019	7	23	2	Screw-CARR
99-6339	7	30	1	Cover-Handle
100-1100	4	17	1	Retainer - Blade
100-1102	4	7	1	Pulley-Assy
100-1176	3	17	2	Pulley Half
100-1186	7	28	1	Cable-Brake
2210-316	4	5	1	Stop-Rope
237-153	5	3	2	O-Ring
302-56	5	4:1	1	Fitting-Zerk
3253-22	4	15	1	Washer-Lock/Sp
3256-1	7	12	1	Washer-Flat
3256-24	3	14	1	Washer-Flat
3285-19	3	4	2	Pin-Groove
3290-378	7	27	1	Tie-Cable
3290-381	7	34	1	Strap-Tie
3290-422	9	1	2	Nut-Push (Only On: 20043)
3296-5	3	16	1	Nut-Lock Ni
3296-6	6	18	2	Nut-,Lock (Model No. 20042-,Serial No. 9909769 & Up) (Model No. 20043-,Serial No. 9907849 & Up)
3296-6	2	33	2	Nut-Lock
3296-6	2	35	2	Nut-Lock (Model No. 20042-Serial No. 9909769 & Up) (Model No. 20043-Serial No. 9907849 & Up)
3296-47	7	21	1	Nut-Lock Ni
3296-72	7	18	3	Nut-Lock Ni
3296-73	7	13	2	Nut-Lock Ni
32144-70	1	17	1	Screw-HH
32144-70	4	12	2	Screw-HH
32144-73	4	9	3	Screw-HWH
32144-85	2	34	2	Screw-HH
32144-85	6	20	2	Screw-HH
32144-102	4	10	3	Screw-HWH
32144-111	1	1:5	6	Screw-PPH
32144-111	1	10	5	Screw-PPH (Only On: 20042)
32144-121	4	6	2	Screw-PPH

[illegible]

[illegible]