



PART NO. 74-1710

INSTALLATION
INSTRUCTIONS

RIDER WHEEL BOLT KIT

Kit contains:

Wheel Bolts (2) Part No. 46-2511
Locknuts (2) Part No. 3296-29

1. Remove spark plug wire from spark plug to prevent accidental starting.
2. Block the (front) wheels to prevent the unit from rolling.
3. Using a half inch (1/2") wrench and/or socket, loosen and remove the locknut and wheelbolt securing the rear wheel to the axle.
4. Inspect the bore in the wheel hub/axle. If the bore appears normal, install the new black wheel bolts with locknuts and tighten securely with (1/2") wrench. Repeat procedure on opposite wheel.
5. Should the wheel hub/axle bore appear enlarged and/or oblong, consult your local Authorized Toro Service Dealer before using your rider.

©THE TORO COMPANY - 1989



PART NO. 74-1710

INSTALLATION
INSTRUCTIONS

RIDER WHEEL BOLT KIT

Kit contains:

Wheel Bolts (2) Part No. 46-2511
Locknuts (2) Part No. 3296-29

1. Remove spark plug wire from spark plug to prevent accidental starting.
2. Block the (front) wheels to prevent the unit from rolling.
3. Using a half inch (1/2") wrench and/or socket, loosen and remove the locknut and wheelbolt securing the rear wheel to the axle.
4. Inspect the bore in the wheel hub/axle. If the bore appears normal, install the new black wheel bolts with locknuts and tighten securely with (1/2") wrench. Repeat procedure on opposite wheel.
5. Should the wheel hub/axle bore appear enlarged and/or oblong, consult your local Authorized Toro Service Dealer before using your rider.

©THE TORO COMPANY - 1989



PART NO. 74-1710

INSTALLATION
INSTRUCTIONS

RIDER WHEEL BOLT KIT

Kit contains:

Wheel Bolts (2) Part No. 46-2511
Locknuts (2) Part No. 3296-29

1. Remove spark plug wire from spark plug to prevent accidental starting.
2. Block the (front) wheels to prevent the unit from rolling.
3. Using a half inch (1/2") wrench and/or socket, loosen and remove the locknut and wheelbolt securing the rear wheel to the axle.
4. Inspect the bore in the wheel hub/axle. If the bore appears normal, install the new black wheel bolts with locknuts and tighten securely with (1/2") wrench. Repeat procedure on opposite wheel.
5. Should the wheel hub/axle bore appear enlarged and/or oblong, consult your local Authorized Toro Service Dealer before using your rider.

©THE TORO COMPANY - 1989



PART NO. 74-1710

INSTALLATION
INSTRUCTIONS

RIDER WHEEL BOLT KIT

Kit contains:

Wheel Bolts (2) Part No. 46-2511
Locknuts (2) Part No. 3296-29

1. Remove spark plug wire from spark plug to prevent accidental starting.
2. Block the (front) wheels to prevent the unit from rolling.
3. Using a half inch (1/2") wrench and/or socket, loosen and remove the locknut and wheelbolt securing the rear wheel to the axle.
4. Inspect the bore in the wheel hub/axle. If the bore appears normal, install the new black wheel bolts with locknuts and tighten securely with (1/2") wrench. Repeat procedure on opposite wheel.
5. Should the wheel hub/axle bore appear enlarged and/or oblong, consult your local Authorized Toro Service Dealer before using your rider.

©THE TORO COMPANY - 1989