



Form No. 3443-306 Rev A

**Count on it.**

# Parts Catalog

## Hydraulic Power Pack

### ProPass 200 Top Dresser with Tow-Type Chassis

Model No. 44713—Serial No. 407600000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.


For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Hydraulic Power Pack Assembly . . . . . 4

Hydraulic Tank Assembly No. 119-6913. . . . . 6


Engine and Mounting Assembly. . . . . 7

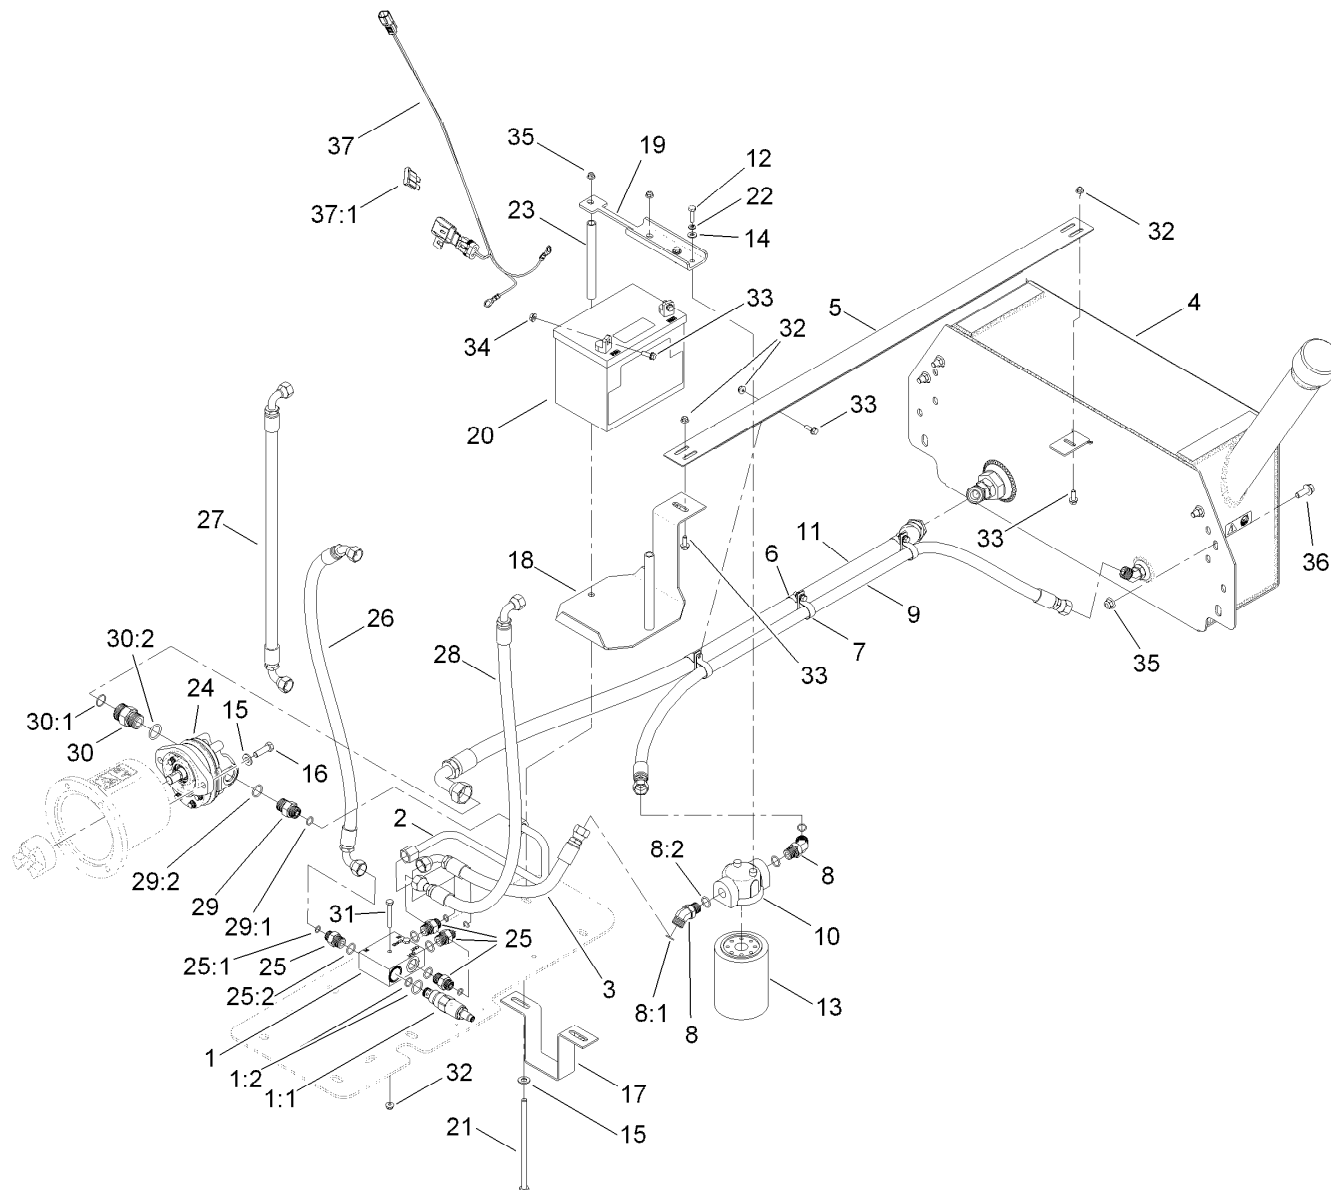

## Hydraulic Power Pack Assembly

| Ref. | Part Number   | Qty. | Description              |
|------|---------------|------|--------------------------|
| 1    | 120-0839      | 1    | Valve-Hydraulic, Relief  |
| 1:1  | 120-0840      | 1    | Valve-Cartridge          |
| 1:2  | 105-9159      | 1    | Seal Kit                 |
| 2    | 119-6916      | 1    | Tube-HYD                 |
| 3    | 107-1136      | 1    | Hose ASM                 |
| 4    | 119-6913      | 1    | HYD Tank ASM             |
| 5    | T0000-7678-01 | 1    | Bracket-Hose             |
| 6    | 2412-104      | 3    | Clamp-R                  |
| 7    | 2412-106      | 3    | Clamp-R                  |
| 8    | 340-101       | 2    | Fitting-HYD, 45 DEG      |
| 8:1  | 237-30        | 1    | O-Ring                   |
| 8:2  | 237-79        | 1    | O-Ring                   |
| 9    | 119-6918      | 1    | Hose-Hydraulic           |
| 10   | 87-8780       | 1    | Head-Filter              |
| 11   | 119-6917      | 1    | Hose-Hydraulic           |
| 12   | 321-6         | 2    | Screw-HH                 |
| 13   | 54-0110       | 1    | Filter-Oil, Transmission |
| 14   | 3256-22       | 2    | Washer-Flat              |
| 15   | 3256-24       | 4    | Washer-Flat              |
| 16   | 323-7         | 2    | Screw-HH                 |
| 17   | T0000-7679-01 | 1    | Strap-Mounting           |


| Ref. | Part Number   | Qty. | Description              |
|------|---------------|------|--------------------------|
| 18   | T0000-7684-01 | 1    | Tray-Battery             |
| 19   | T0000-7677-01 | 1    | Bracket-Battery / Filter |
| 20   | 99-7421       | 1    | Battery                  |
| 21   | 323-30        | 2    | Screw-HH                 |
| 22   | 3253-3        | 2    | Washer-Lock              |
| 23   | T0000-3220    | 2    | Tube-Bolt                |
| 24   | T56031070     | 1    | Pump                     |
| 25   | 340-4         | 4    | Fitting-Straight         |
| 25:1 | 237-30        | 1    | O-Ring                   |
| 25:2 | 237-79        | 1    | O-Ring                   |
| 26   | 119-6928      | 1    | Hose-Hydraulic           |
| 27   | 119-6929      | 1    | Hose-Hydraulic           |
| 28   | 95-3738       | 1    | HYD Hose ASM             |
| 29   | 340-6         | 1    | Fitting-Straight         |
| 29:1 | 237-30        | 1    | O-Ring                   |
| 29:2 | 237-80        | 1    | O-Ring                   |
| 30   | 340-9         | 1    | Fitting-STR              |
| 30:1 | 237-58        | 1    | O-Ring                   |
| 30:2 | 237-81        | 1    | O-Ring                   |
| 31   | 321-11        | 2    | Screw-HH                 |
| 32   | 104-7201      | 9    | Nut-HF                   |

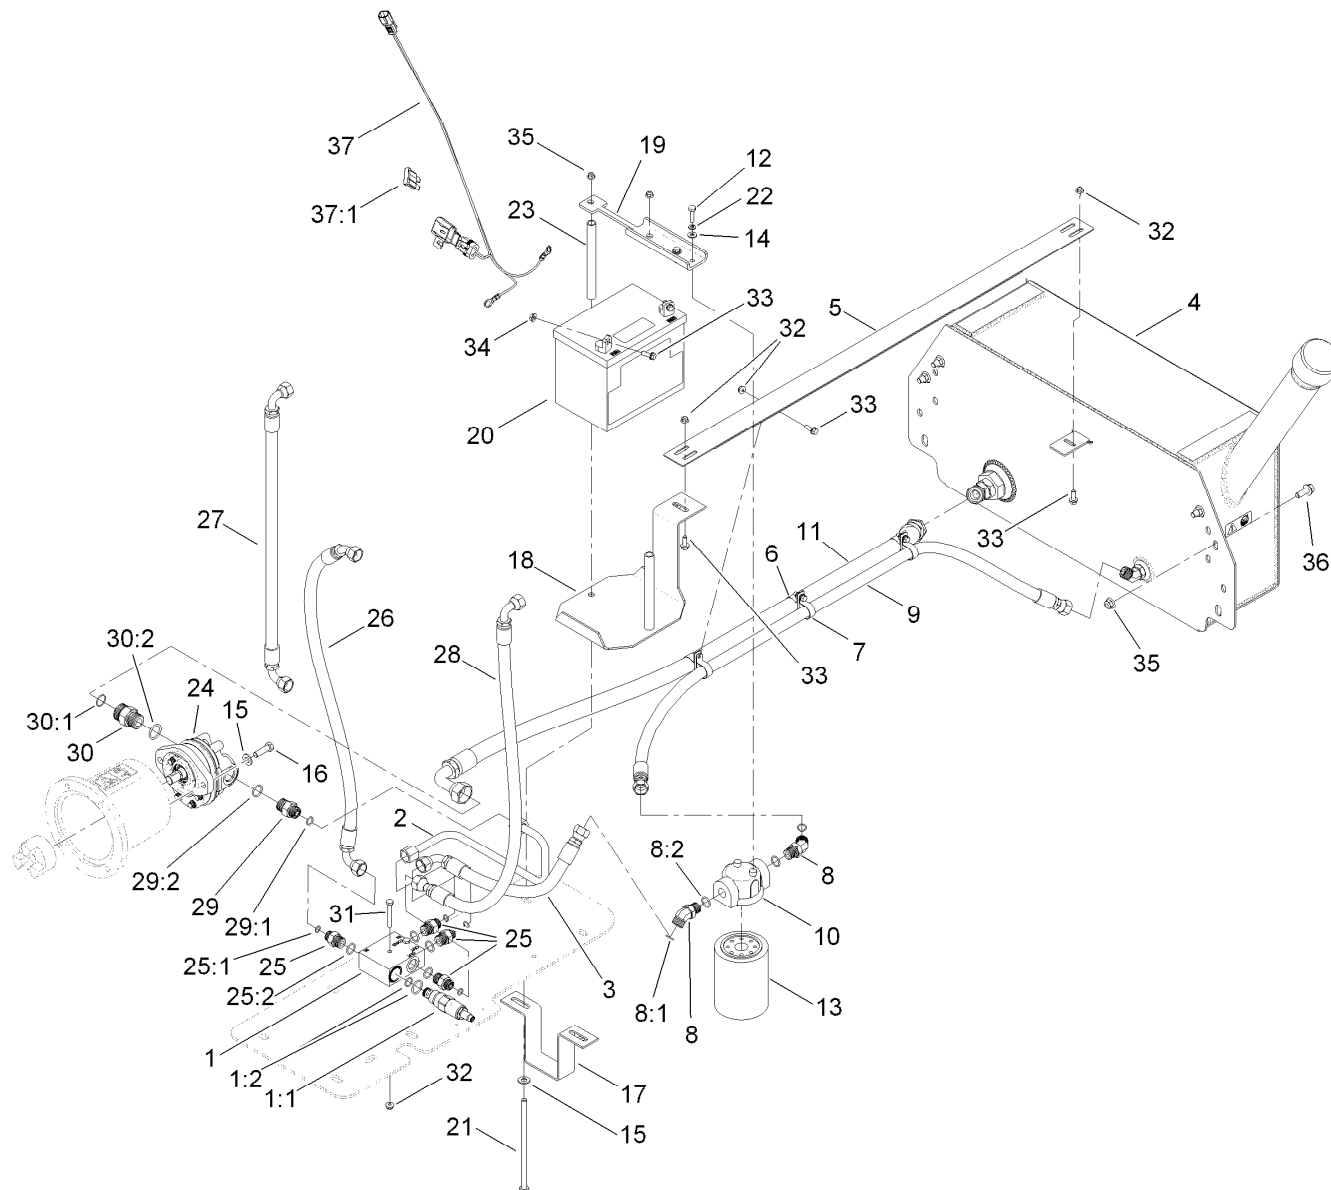

## Hydraulic Power Pack Assembly (continued)


| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 33   | 115-5103    | 9    | Screw-HHF   |
| 34   | 32128-14    | 2    | Nut-HF      |
| 35   | 104-8301    | 6    | Nut-HF, NI  |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 36   | 3234-42     | 4    | Screw-HHF                |
| 37   | 120-0877    | 1    | Harness-Wire, Power Pack |
| 37:1 | 109355      | 1    | Fuse-Blade, 15 Amp       |

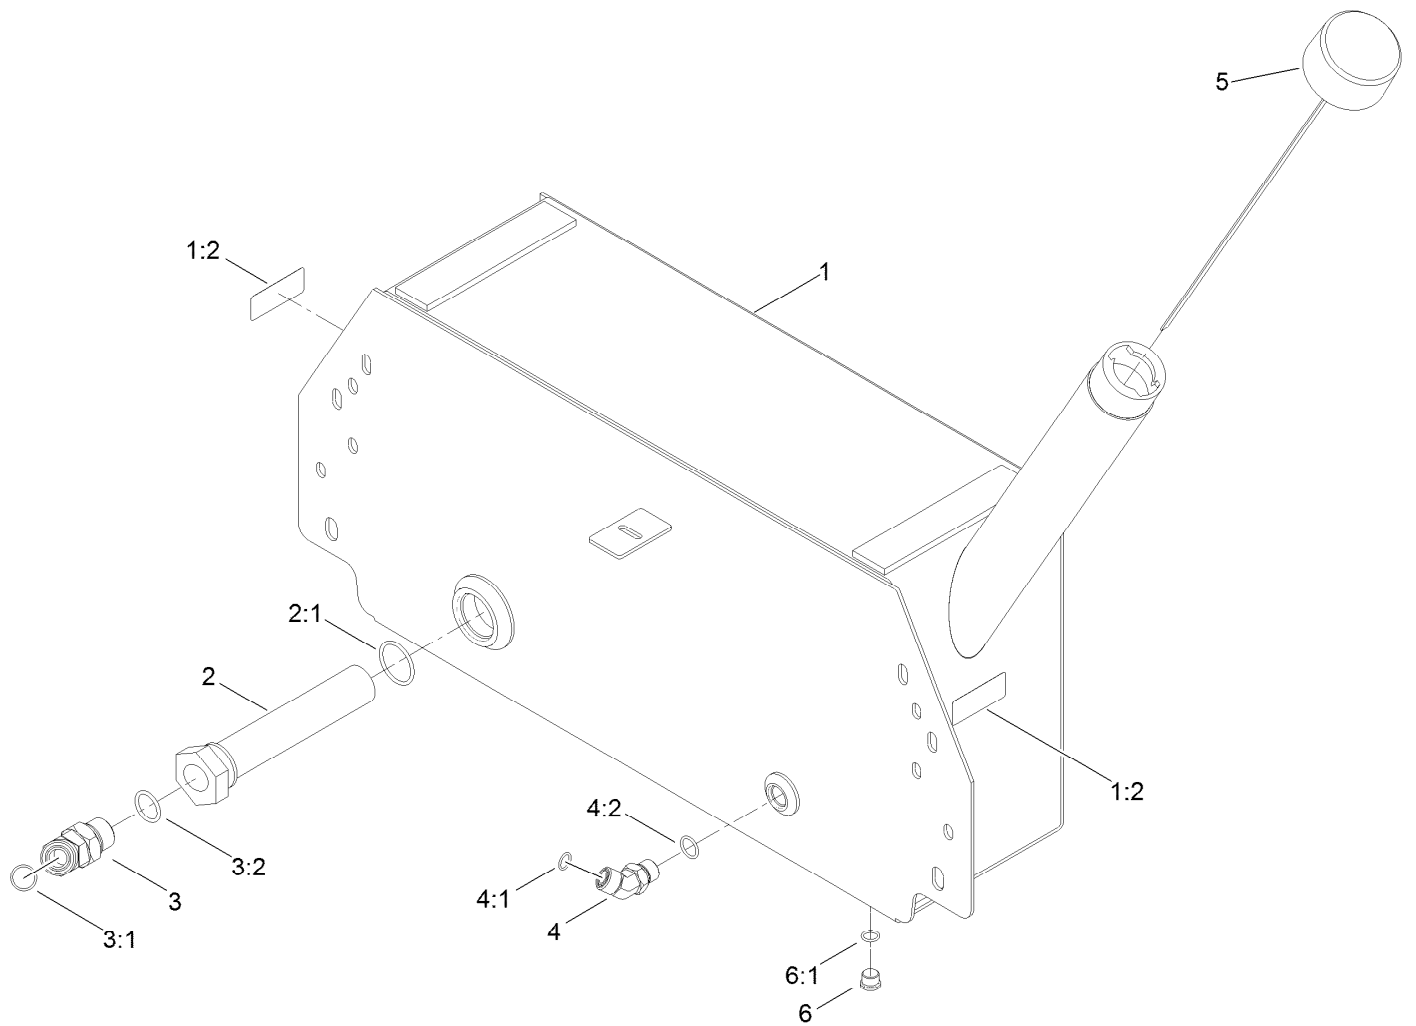

## Hydraulic Tank Assembly No. 119-6913

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 1    | 120-0833    | 1    | HYD Tank ASM            |
| 1:2  | 115-2047    | 2    | Decal-Surface, Hot      |
| 2    | 87-3990     | 1    | Strainer-Transaxle      |
| 2:1  | 237-101     | 1    | O-Ring                  |
| 3    | 100-5530    | 1    | Fitting-45 DEG          |
| 3:1  | 237-58      | 1    | O-Ring                  |
| 3:2  | 237-81      | 1    | O-Ring                  |
| 4    | 340-101     | 1    | Fitting-HYD, 45 DEG     |
| 4:1  | 237-30      | 1    | O-Ring                  |
| 4:2  | 237-79      | 1    | O-Ring                  |
| 5    | T0000-4560  | 1    | Dipstick Filler Cap ASM |
| 6    | 353-989     | 1    | Plug-Hex, Hollow        |
| 6:1  | 237-42      | 1    | O-Ring                  |

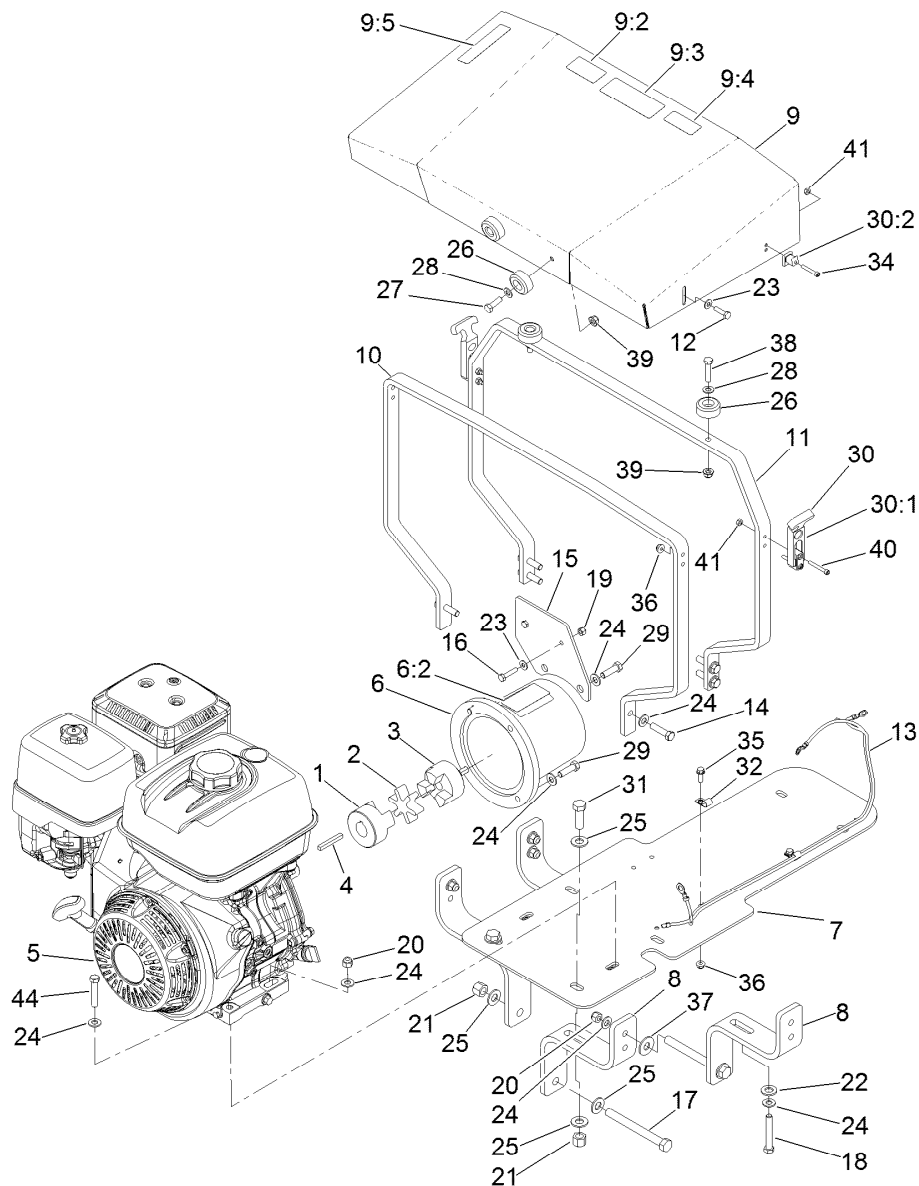


## Engine and Mounting Assembly

| Ref. | Part Number   | Qty. | Description                          |
|------|---------------|------|--------------------------------------|
| 1    | T59013015     | 1    | Coupling-Jaw                         |
| 2    | T59013022     | 1    | Spider-Coupling                      |
| 3    | T59013005     | 1    | Coupling-Jaw                         |
| 4    | T01-29633B    | 1    | Stock-Key                            |
| 5    | 120-9400      | 1    | Engine-Honda, Gx340Ut2<br>Qnr2 Gas ● |
| 6    | T0000-7665    | 1    | Flange Adaptor Decal ASM             |
| 6:2  | 119-6844      | 1    | Decal-Warning, Shear                 |
| 7    | T0000-1349-01 | 1    | Plate-Mount, Engine                  |
| 8    | T0000-7680-01 | 4    | Bracket-Mount, Engine                |
| 9    | T36057010     | 1    | Engine Cover ASM<br>W/Decals         |
| 9:2  | 119-6807      | 1    | Decal-Warning                        |
| 9:3  | 119-6829      | 1    | Decal-Weight                         |
| 9:4  | 115-2047      | 1    | Decal-Surface, Hot                   |
| 9:5  | 133-8062      | 1    | Decal-Arrestor, Spark                |
| 10   | T36057015-01  | 1    | Strut-Cover, Engine                  |
| 11   | T0000-7685-01 | 1    | Stop-Cover, Engine                   |

| Ref. | Part Number  | Qty. | Description               |
|------|--------------|------|---------------------------|
| 12   | 321-6        | 2    | Screw-HH                  |
| 13   | 119-6899     | 1    | Harness-Wire, Engine      |
| 14   | 323-8        | 6    | Screw-HH                  |
| 15   | T36057020-01 | 1    | Bracket-Generator, Engine |
| 16   | 321-8        | 2    | Screw-HH                  |
| 17   | 325-19       | 2    | Screw-HH                  |
| 18   | 323-12       | 2    | Screw-HH                  |
| 19   | 3296-42      | 2    | Nut-Lock, NI              |
| 20   | 3296-39      | 10   | Nut-Lock, NI              |
| 21   | 3296-23      | 4    | Nut-Lock, NI              |
| 22   | 106-9888     | 4    | Washer-Flat               |
| 23   | 3256-22      | 4    | Washer-Flat               |
| 24   | 3256-24      | 24   | Washer-Flat               |
| 25   | 3256-26      | 8    | Washer-Flat               |
| 26   | T0000-2430   | 4    | Bumper-Rubber             |
| 27   | 322-5        | 2    | Screw-HH                  |
| 28   | 3256-23      | 4    | Washer-Plain              |
| 29   | 323-7        | 4    | Screw-HH                  |

● Obtain parts from [www.honda-engines.com](http://www.honda-engines.com)

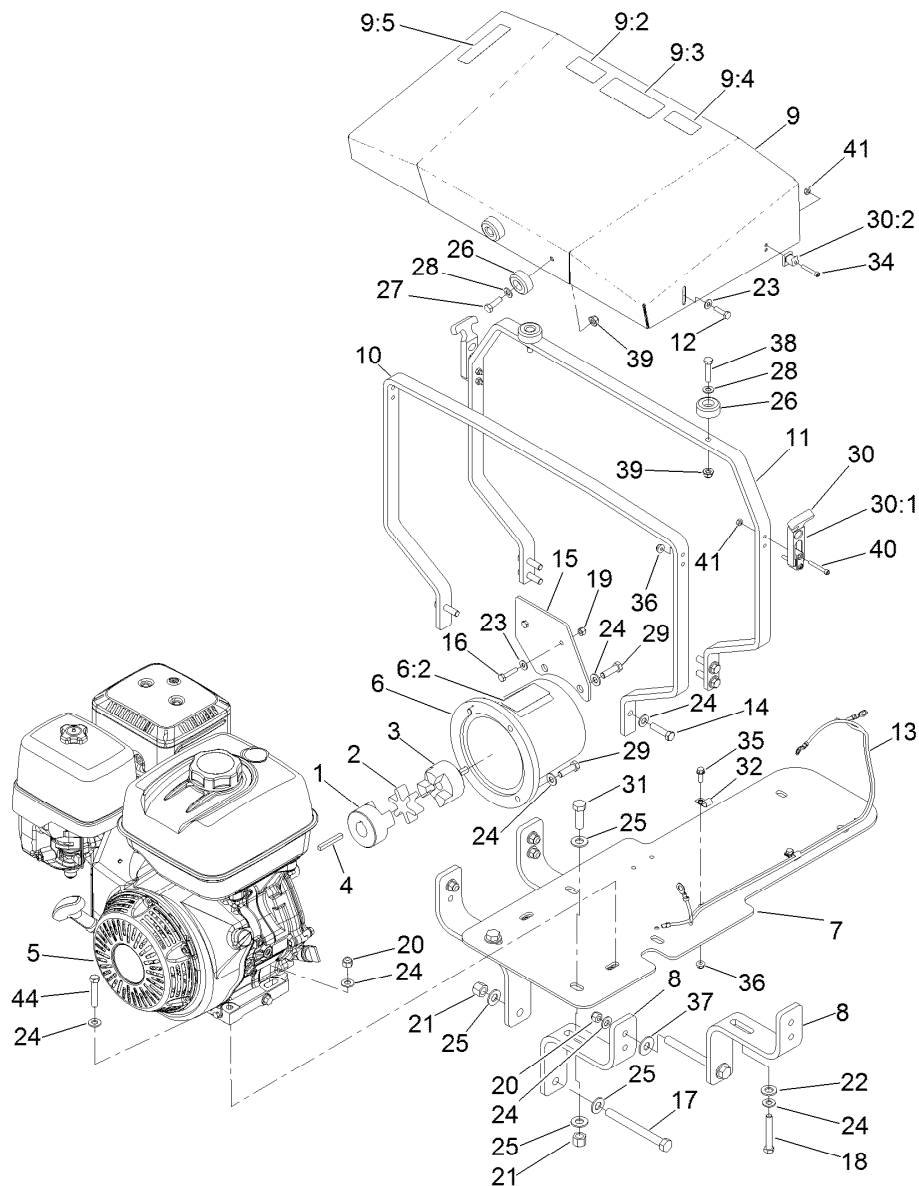

## Engine and Mounting Assembly (continued)

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 30   | 104-0010    | 2    | Latch-Draw, Flexible |
| 30:1 | 104-0011    | 1    | Handle-Latch         |
| 30:2 | 104-0012    | 1    | Keeper-Latch         |
| 31   | 325-6       | 2    | Screw-HH             |
| 32   | 2412-89     | 2    | Clamp-R              |
| 34   | 3274-13     | 2    | Screw-HSH            |
| 35   | 115-5103    | 2    | Screw-HHF            |

| Ref. | Part Number | Qty. | Description  |
|------|-------------|------|--------------|
| 36   | 104-7201    | 4    | Nut-HF       |
| 37   | T0000-2623  | 2    | Washer-Poly  |
| 38   | 322-7       | 2    | Screw-HH     |
| 39   | 104-8300    | 4    | Nut-HF, NI   |
| 40   | 3274-59     | 4    | Screw-HSH    |
| 41   | 3296-2      | 6    | Nut-Lock, NI |
| 44   | 323-10      | 2    | Screw-HH     |

● Obtain parts from [www.honda-engines.com](http://www.honda-engines.com)

**Notes:**

**Notes:**

**Notes:**



**Count on it.**