

# LAWN-BOY®

## Silver Series®

### Walk-Behind Mower

Model No. 10270-210000001 and Up

Model No. 10270C-210000001 and Up

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

## Contents

Description	Page	Description	Page
Housing & Handle Bracket Assembly .....	3	Engine-LEV115-350181E .....	9
Engine & Blade Assembly .....	5	Engine-LEV115-350181E .....	10
Handles & Controls Assembly .....	6	Recoil Starter No. 590737 .....	11
Carburetor No. 640273 .....	7	Recoil Starter No. 590694 (Optional) .....	12
Engine-LEV115-350181E .....	8		


## Accessories

Description	Model / Part No.	Description	Model / Part No.
Side bagging Kit .....	Model No. 89817	Leaf Shredder Kit .....	Model No. 89860
Rear Bagging Kit .....	Model No. 89800	Leaf Bag Kit w/Chute .....	Model No. 89811
Leaf Bag .....	Model No. 89804		

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR .....	as required	INC .....	incorporated
ASM .....	assembly	LH .....	left hand
CARR .....	carriage	NI .....	nylon insert
DEG .....	degrees	PPH .....	Phillips pan head
FH .....	flat head	PTH .....	Phillips truss head
GA .....	gauge	PTO .....	power take off
HF .....	hex flange	RH .....	right hand
HH .....	hex head	SFH .....	slotted fillister head
HHF .....	hex head flange	SHH .....	slotted hex head
HLH .....	hex lag head	SQH .....	square head
HJ .....	hex jam	SHWH .....	slotted hex washer head
HOC .....	height-of-cut	SPH .....	slotted pan head
HS .....	hex socket	SRH .....	slotted round head
HSBH .....	hex socket button head	STD .....	standard
HSFH .....	hex socket flat head	TAP .....	self tapping
HSH .....	hex socket head	TTH .....	Torx truss head
HWH .....	hex washer head	WH .....	wing head
HWHTF .....	hex washer head thread forming		

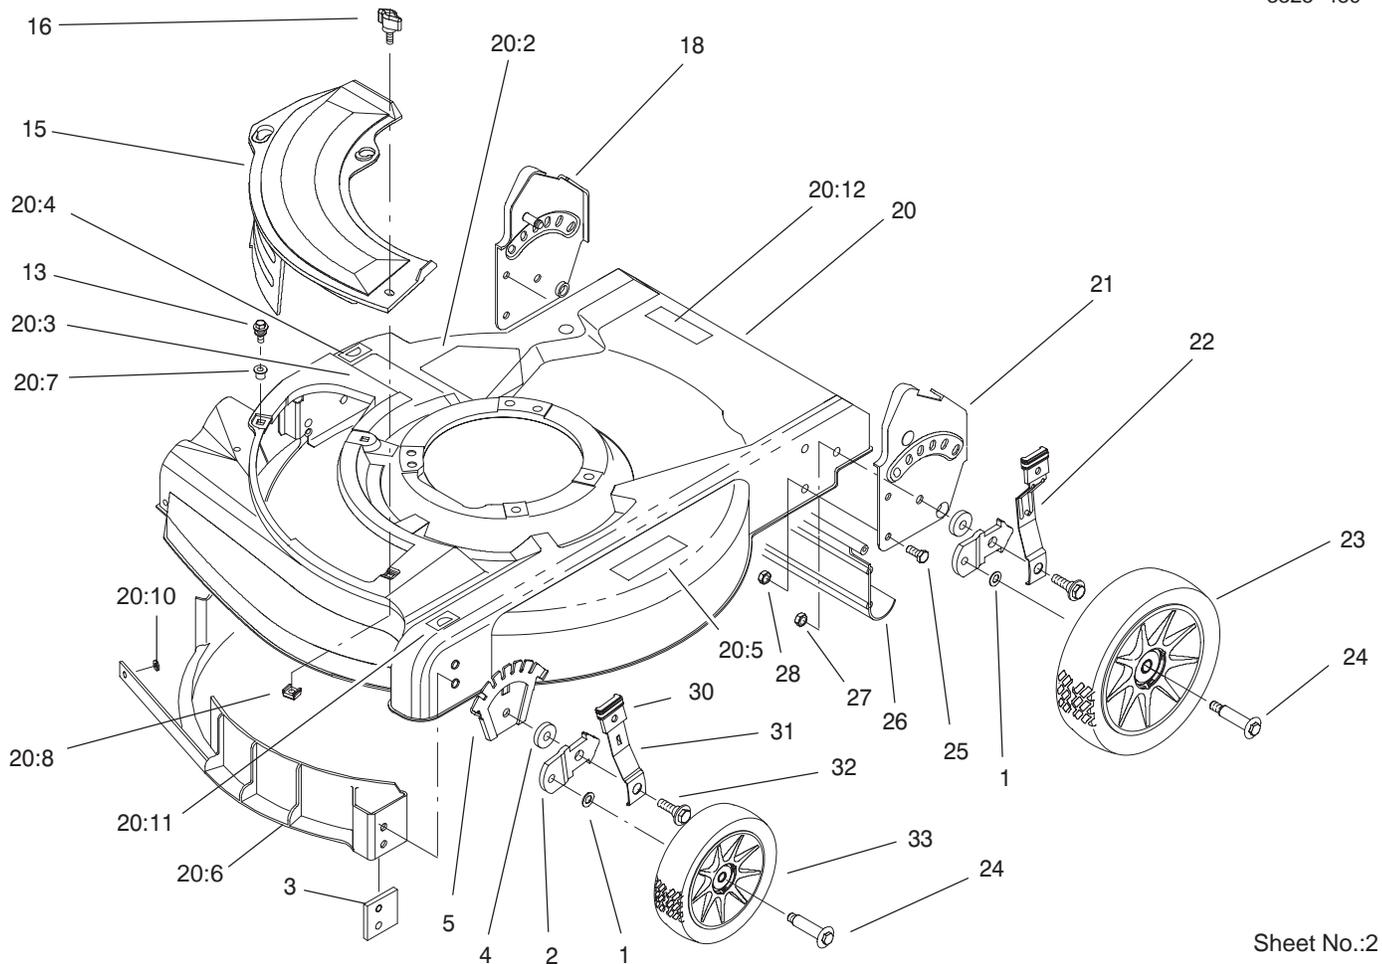

Sheet No.:2

## Housing & Handle Bracket Assembly


Ref. No.	Part No.	Qty.	Description
1	40-1940	4	Washer
2	95-7403-03	4	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate - Baffle
4	92-4890	4	Washer - Wheel
5	92-4881-03	2	Plate - Height Adjustment
13	614677	2	Screw-Sems
15	92-8630	1	Plate-Mulch
16	98-8332	1	Knob
18	92-7742	1	RH Handle Brkt ASM
20	98-4471	1	Housing ASM (only on: 10270)
20	105-1264	1	Housing-Service (only on: 10270c)
20:2	43-8480	1	Decal-Danger (only on: 10270)
20:2	56-6270	1	Danger Decal(Fr/E) (only on: 10270c)
20:3	99-6018	1	Decal - Warning (only on: 10270)
20:3	104-7629	1	Decal-Warning (only on: 10270c)
20:4	92-2914	1	Decal - HOC, RH (only on: 10270)

Ref. No.	Part No.	Qty.	Description
20:4	104-7616	1	Decal-HOC,RH (only on: 10270c)
20:5	93-7250	1	Decal-Warning (only on: 10270)
20:5	104-7627	1	Decal-Warning (only on: 10270c)
20:6	92-7719	1	Insert - Housing
20:7	94-1610	2	Grommet - Plastic
20:8	613765	1	Nut-Cage
20:10	3269-26	1	Washer-Flat
20:11	92-2915	1	Decal - HOC, LH (only on: 10270)
20:11	104-7617	1	Decal-HOC,LH (only on: 10270c)
20:12	104-7634	1	Decal-Manual,Lb (only on: 10270c)
21	92-7743	1	LH Handle Brkt ASM
22	92-1005	2	Spring Arm ASM - Rear
23	95-7437	2	Tire-8"
24	92-1099	4	Bolt-Shoulder
25	322-3	4	Screw-HH
26	92-8647	1	Shield - Trailing
27	3296-39	2	Nut-Lock, NI
28	3296-29	4	Nut-Lock







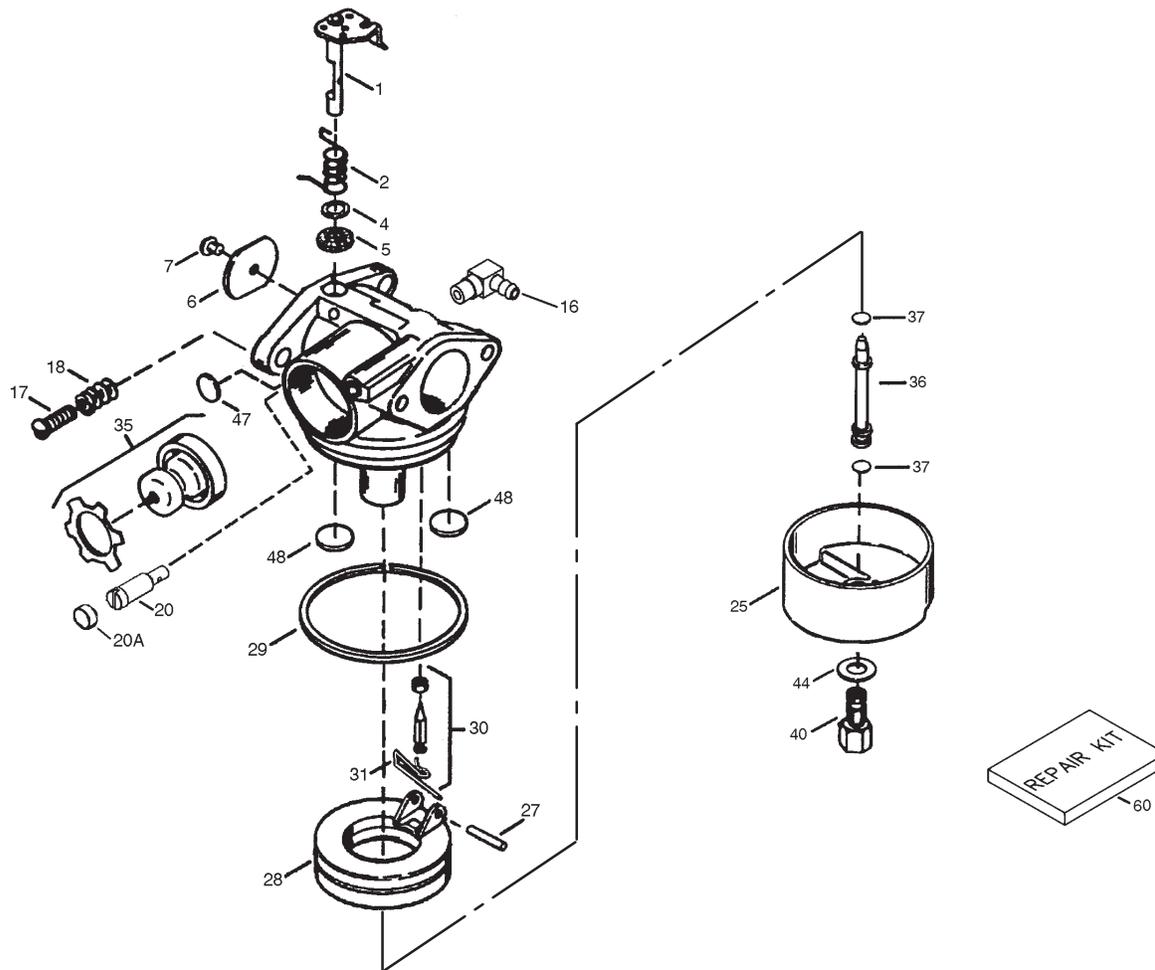



### Carburetor No. 640273

Ref. No.	Part No.	Qty.	Description
0	640273	1	Carburetor
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal (Throttle)
6	640070	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
17	651025	1	Throttle Crack Screw/Idle Speed Screw
18	630766	1	Tension Spring
20	640027	1	Idle Restrictor Screw
20A	640200	1	Idle Restrictor Screw Cap
25	631867	1	Float Bowl
27	631024	1	Float Shaft
28	632019	1	Float
29	631028	1	Float Bowl "O" Ring
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	640259	1	Primer Bulb/Retainer Ring
36	640080	1	Main Nozzle Tube

Ref. No.	Part No.	Qty.	Description
37	632547	2	O-Ring, Main Nozzle Tube
40	632746	1	High Speed Bowl Nut
44	27110A	1	Bowl Nut Washer
47	630748	1	Welch Plug, Idle Mixture Well
48	631027	1	Welch Plug, Atmospheric Vent
60	632760B	1	Repair Kit

Obtain parts from local Tecumseh dealer

# Engine-LEV115-350181E

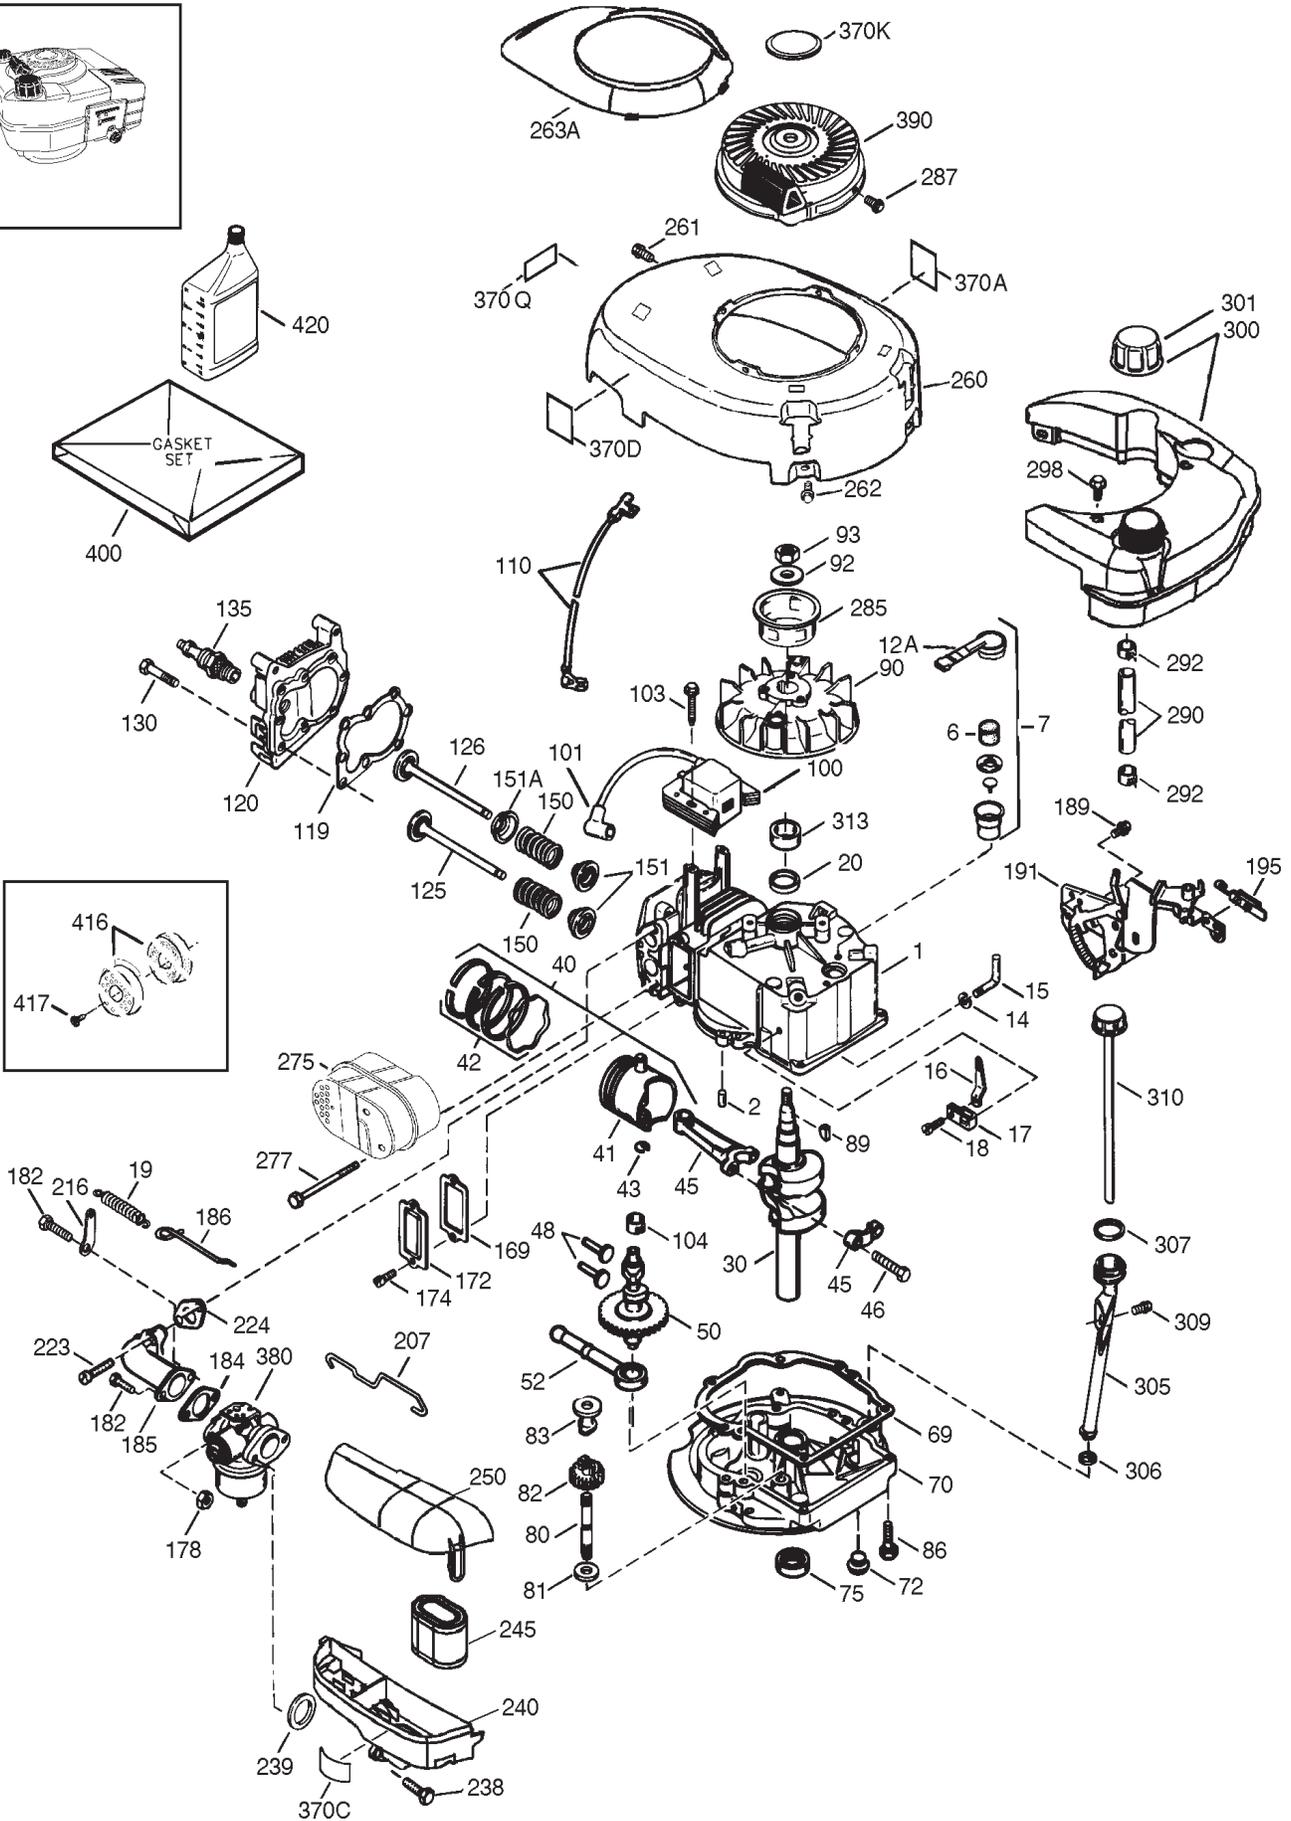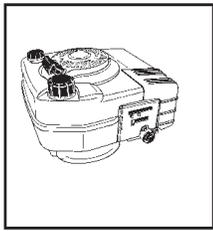

# Engine-LEV115-350181E

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	37266	1	Cylinder (Incl. 2,20 & 150)	126	37289	1	Intake Valve (Std.) (Incl. 151)
2	26727	2	Dowel Pin	130	6021A	6	Screw
6	33734	1	Breather Element	135	35395	1	Resistor Spark Plug (RJ19LM)
7	36557	1	Breather Body ASM (Incl. 6 & 12A)	150	31672	2	Valve Spring
12A	36558	1	Breather Cover & Tube	151	31673	2	Valve Spring Cap
14	28277	1	Washer	151A	40017	1	Intake Valve Seal
15	30589	1	Governor Rod (Incl. 14)	169	36783	1	Valve Cover Gasket
16	34839A	1	Governor Lever	172	36784	1	Valve Cover
17	31335	1	Governor Lever Clamp	174	30200	2	Screw
18	651018	1	Screw, Torx T-15	178	29752	2	Nut & Lock Washer
19	36281	1	Extension Spring	182	6201	2	Nut & Lock Washer
20	32600	1	Oil Seal	184	26756	1	Carburetor To Intake Pipe Gasket
30	37616	1	Crankshaft	185	36785	1	Intake Pipe
40	40004	1	Piston, Pin & Ring Set (Std.)	186	32653	1	Governor Link
40	40005	1	Piston, Pin & Ring Set (.010" OS)	189	650839	2	Screw
41	36070	1	Piston & Pin ASM (Std.) (Incl. 43)	191	36559A	1	S.E. Brake Bracket (Incl. 195)
41	36071	1	Piston & Pin ASM (.010" OS) (Incl. 43)	195	610973	1	Terminal
42	40006	1	Ring Set (Std.)	207	34336	1	Throttle Link
42	40007	1	Ring Set (.010" OS)	216	33086	1	R.P.M. Adjusting Lever
43	20381	2	Piston Pin Retaining Ring	223	650451	2	Screw
45	36777	1	Connecting Rod ASM (Incl. 46)	224	36786	1	Intake Pipe Gasket
46	32610A	2	Connecting Rod Bolt	238	650806	2	Screw
48	27241	2	Valve Lifter	239	34338	1	Air Cleaner Gasket
50	37460	1	Camshaft Exhaust (MCR) (Incl. 104)	240	36743	1	Air Cleaner Body
52	29914	1	Oil Pump ASM	245	36745	1	Air Cleaner Filter
69	37130	1	Mounting Flange Gasket	250	36744	1	Air Cleaner Cover
70	34311E	1	Mounting Flange (Incl. 72 thru 83, 306)	260	36800	1	Blower Housing
72	36083	1	Oil Drain Plug	261	30200	2	Screw
75	27897	1	Oil Seal	262	650831	2	Screw
80	30574A	1	Governor Shaft	263A	36758	1	Starter Grill
81	30590A	1	Washer	275	37462	1	Muffler
82	30591	1	Governor Gear ASM (Incl. 81)	277	650988	2	Screw
83	30588A	1	Governor Spool	285	35000A	1	Starter Cup
86	650488	6	Screw	287	650926	2	Screw
89	611004	1	Flywheel Key	290	34357	1	Fuel Line
90	611112	1	Flywheel	292	26460	2	Fuel Line Clamp
92	650815	1	Belleville Washer	298	28763	3	Screw
93	650816	1	Flywheel Nut	300	36757	1	Fuel Tank (Incl. 292 & 301)
100	34443C	1	Solid State Ignition	301	36246	1	Fuel Cap
101	610118	1	Spark Plug Cover	305	35577	1	Oil Fill Tube
103	651007	2	Screw, Torx T-15	306	36996	1	"O"-Ring
104	37480	1	Cam Bushing	307	35499	1	"O"-Ring
110	37047	1	Ground Wire	309	650562	1	Screw
119	36787	1	Cylinder Head Gasket	310	36801	1	Dipstick
120	36825	1	Cylinder Head	313	34080	1	Spacer
125	37288	1	Exhaust Valve (Std.) (Incl. 151)	370A	36261	1	Lubrication Decal
				370C	37318	1	Primer Decal (3X)
				370D	35977	1	Caution Decal
				370K	36695	1	Starter Decal
				370Q	37548	1	Emissions Decal
				380	640273	1	Carburetor (Incl. 184)
				390	590737	1	Rewind Starter
				400	36792B	1	Gasket Set
				416	36085	1	Spark Arrestor Kit

Obtain parts from local Tecumseh dealer

# Engine-LEV115-350181E

Ref. No.	Part No.	Qty.	Description
417	650821	1	Screw
420	730225A	1	SAE30 4-Cycle Engine Oil (Quart)
*99	750680	1	Shortblock

Ref. No.	Part No.	Qty.	Description
----------	----------	------	-------------

Obtain parts from local Tecumseh dealer

\* Not illustrated











**LAWN-BOY®**