

LAWN-BOY®

Gold Pro Series® Walk Power Lawn Mower Model No. 10551—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing and Wheel Assembly	3	Carburetor No. 640281	8
Gearcase Assembly No. 104–7676	4	Engine–OVRM105–21038F	9
Engine Installation Assembly	5	Recoil Starter No. 590737	12
Gearcase and Wheel Assembly	6	Recoil Starter No. 590694 (Optional)	13
Handle Assembly	7		


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	89817	Leaf Bag with Chute	89811
Read Bagging Kit	89906	Leaf Shredder Kit	89860
Leaf Bag	89804		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

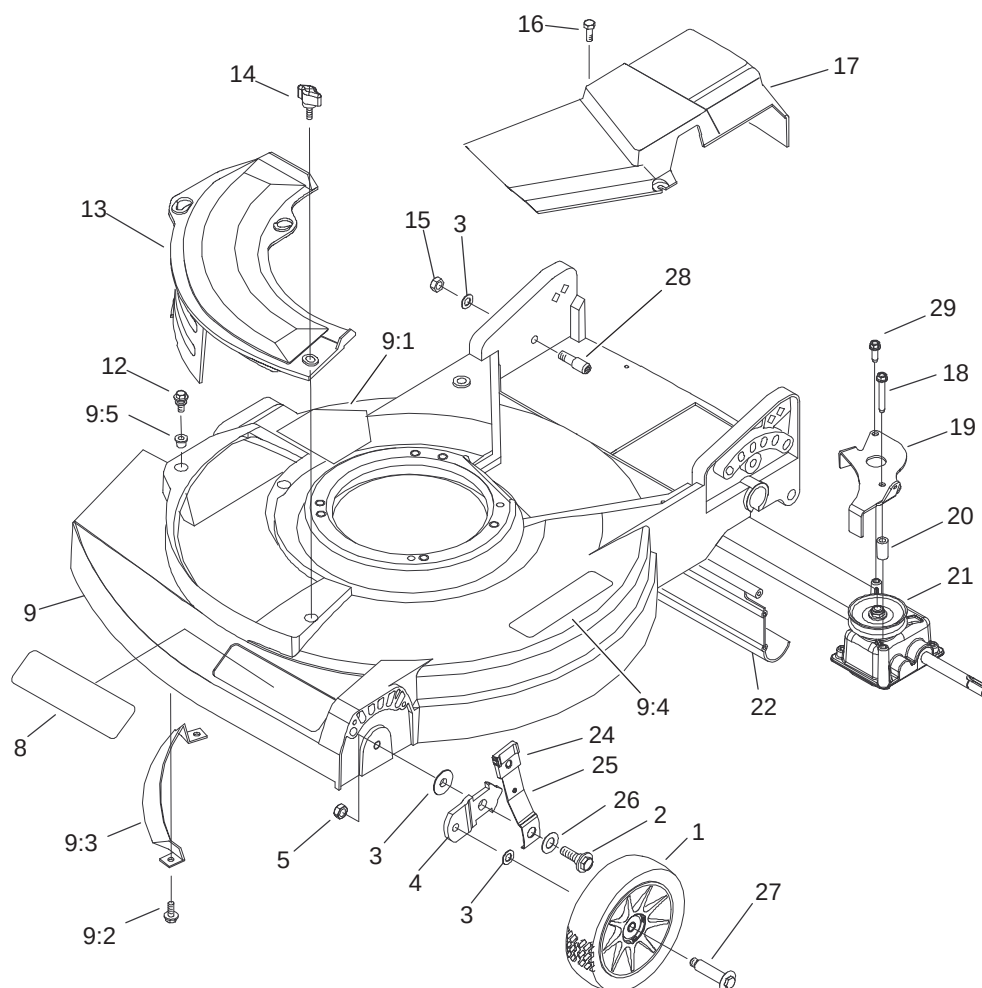


Sheet No.:2

Housing and Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	684776	2	Wheel & Tire ASM	24	92-1008	2	Knob-Lever, Height Adjustment
2	92-4856	2	Bolt-Shoulder	25	92-1006	2	Front Spring Arm ASM
3	40-1940	6	Washer	26	3290-413	2	Washer-Belleville
4	95-7403-03	2	Bracket-Height Adjustment, Wheel	27	92-1099	2	Bolt-Shoulder
5	3296-39	2	Nut-Lock, NI	28	92-9673	2	Screw-Torx
8	104-7956	1	Decal-Deck	29	49-2040	1	Screw-Tapping
9	104-7661	1	Housing	*99	95-7052	1	Plate-Opening, Chute
9:1	43-8480	1	Decal-Danger				
9:2	46-6811	2	Screw-HWH				
9:3	608175	1	Bar-Toe				
9:4	93-7250	1	Decal-Warning				
9:5	94-1610	3	Grommet - Plastic				
12	614677	2	Screw-Sems				
13	92-8630	1	Plate-Mulch				
14	98-8332	1	Knob				
15	603773	2	Nut				
16	12-5450	2	Screw				
17	104-7662	1	Cover-Drive				
18	92-1616	1	Screw-HWHTF				
19	104-7930-03	1	Bracket-Gearbox				
20	614673	1	Bushing-Plate, Actuator				
21	104-7676	1	Gear Case ASM				
22	92-7736	1	Shield - Trailing				


* Not illustrated

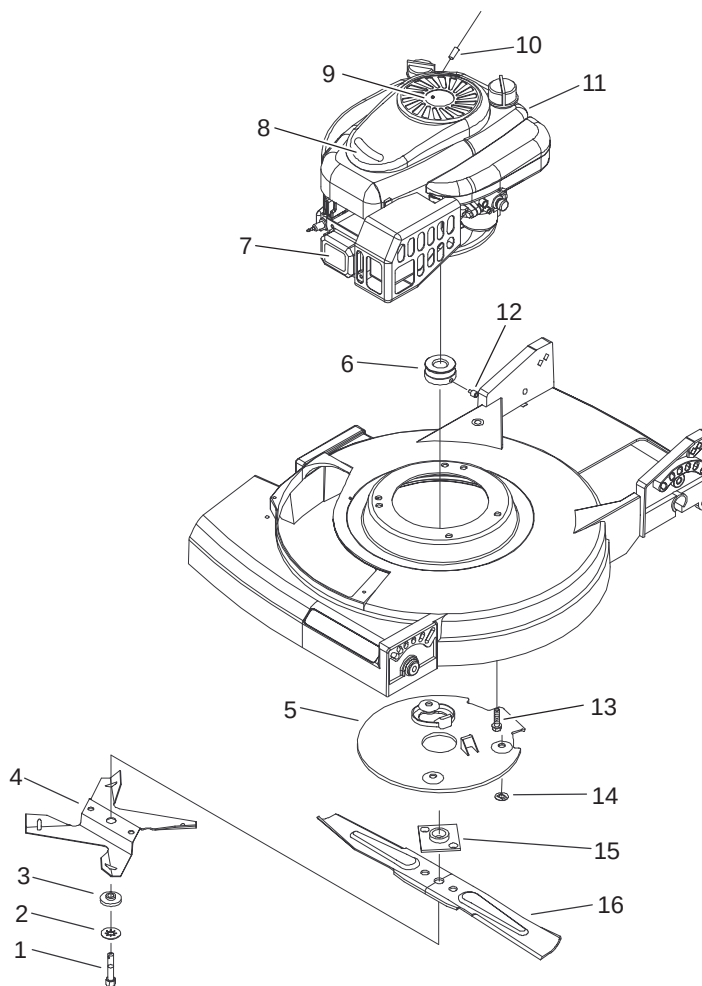

Sheet No.:4

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-5019	1	Bolt-Blade				
2	3253-22	1	Washer-Lock				
3	95-1712	1	Spacer - Blade				
4	99-6351-03	1	Fan-Mulching				
5	100-4382	1	Shield-Grass				
6	95-1878	1	Pulley				
7	65-2690	1	Decal-Surface, Hot				
8	98-1593	1	Applique				
9	100-8758	1	Decal-Recoil				
10	92-1701	1	Stop-Rope				
11	100-5999	1	Engine-Tecumseh OVRM105-21038F				
12	104-0214	1	Screw-Set, Cone Point				
13	95-1727	3	Screw-Taptite				
14	92-4877	3	Push Nut				
15	100-2899	1	Plate & Collar ASM				
16	612543-03	1	Blade				

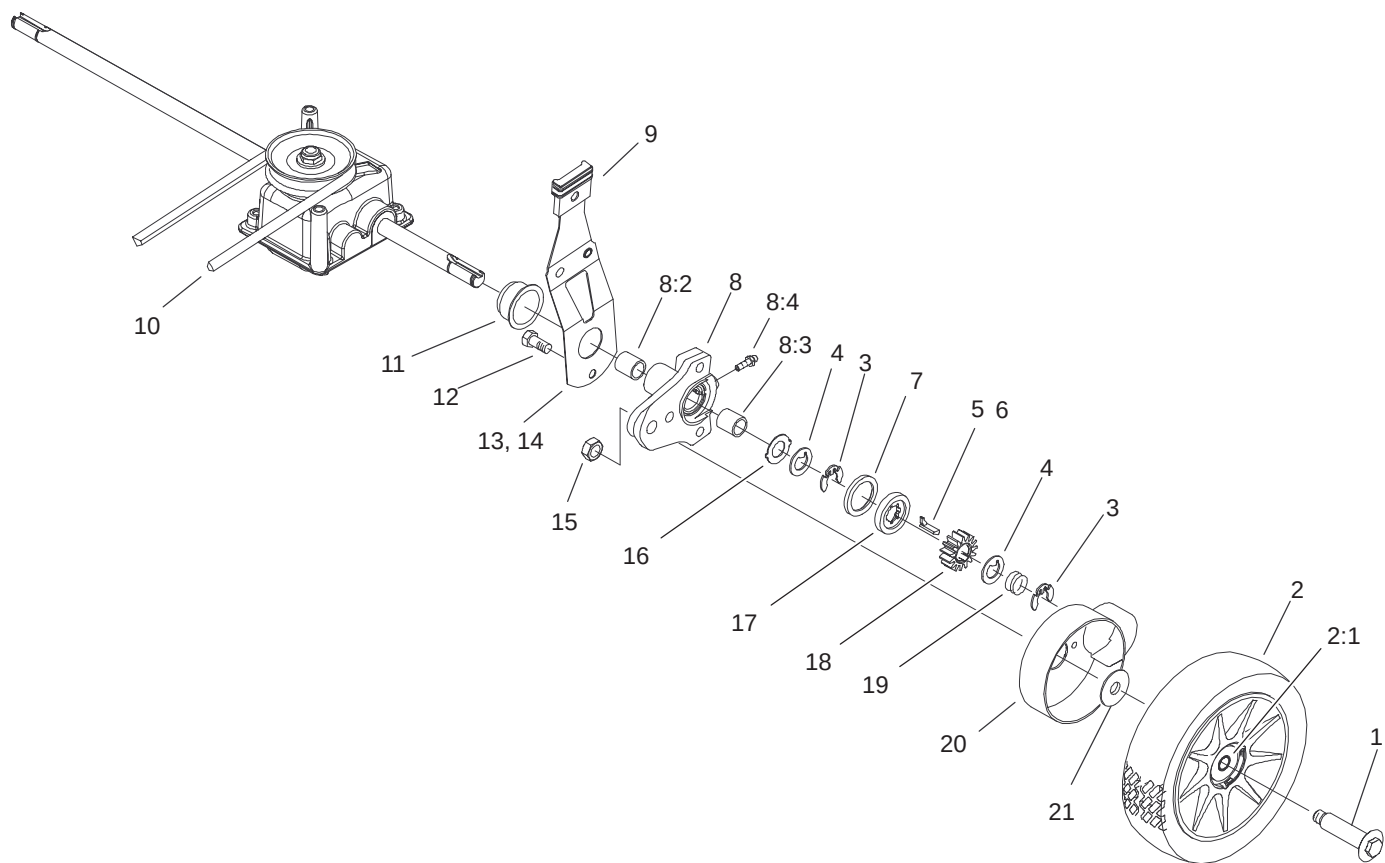


Sheet No.:5

Gearcase and Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	92-1057	2	Bolt-Shoulder
2	92-1042	2	Wheel & Tire ASM
2:1	27-6250	2	Bushing
3	65-2720	4	Ring-Klip
4	65-4740	4	Washer-Thrust, Keyed
5	66-6050	1	Key-Rocking, LH
6	66-6040	1	Key-Rocking, RH
7	65-4710	2	Ring-Friction
8	92-7746	2	Rear Height Adjustment Arm ASM
8:2	70-9760	1	Bushing
8:3	47-2900	1	Bushing
8:4	302-56	1	Fitting-Zerk
9	92-1008	2	Knob-Lever, Height Adjustment
10	62-3900	1	V-Belt
11	92-6535	2	Ring - Isolator
12	32144-85	2	Screw-HH
13	92-6540	1	LH Rear Spring Arm ASM
14	92-6539	1	RH Rear Spring Arm ASM
15	603773	2	Nut
16	65-4730	2	Washer-Arm, Pivot
17	65-4760	2	Washer-Clutch


Ref. No.	Part No.	Qty.	Description
18	65-4750	2	Gear-Pinion
19	65-4720	2	Spring-Compression
20	94-1609	2	Cover-Wheel
21	614426	2	Washer-Stepped

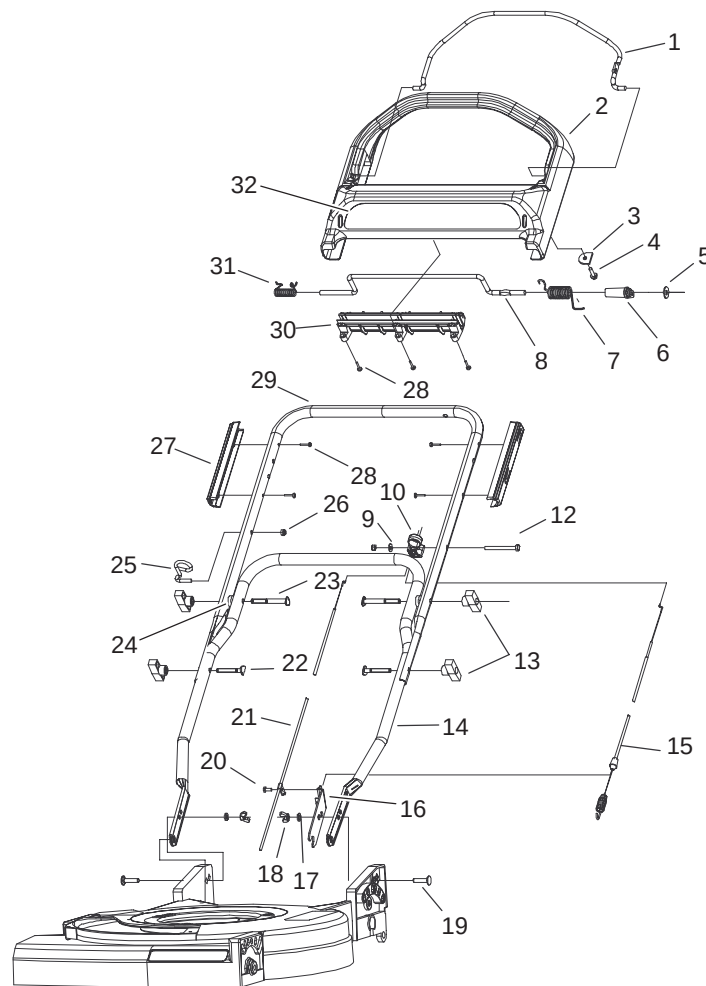

Sheet No.:6

Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1593-03	1	Bail-Brake	26	3296-73	2	Nut-Lock, NI
2	104-7680	1	Handle-Control	27	99-1590	2	Guide-Handle, Control
3	99-1595	1	Retainer-Cable, Brake	28	94-4496	10	Screw-PPH
4	46-8091	1	Screw-HWH	29	104-7692-05	1	Handle-Upper
5	3256-71	1	Washer-Flat	30	99-6008	1	Retainer-Control Rod, Traction
6	99-1589	1	Lever-Traction	31	99-1592	1	Spring-Torsion, RH
7	104-7690	1	Spring-Torsion	32	104-7960	1	Decal-Handle
8	99-1588	1	Bar-Control, Traction				
9	3256-1	1	Washer-Flat				
10	99-5239	1	Anchor-Cable				
12	95-4453	1	Screw-Handle				
13	98-7134	4	Knob-Handle				
14	104-7693-05	1	Handle-Lower				
15	99-1584	1	Cable-Traction				
16	104-7928-03	1	Bracket-Cable, Traction				
17	3253-33	2	Washer-Lock				
18	32103-29	2	Nut-Wing				
19	3230-29	2	Screw-CARR				
20	32144-1	1	Screw-Taptite				
21	104-7695	1	Cable-Brake, Flywheel				
22	614697	2	Screw				
23	104-7691	2	Screw-Handle				
24	104-7658	2	Spacer-Handle				
25	86-9671	1	Guide-Rope				

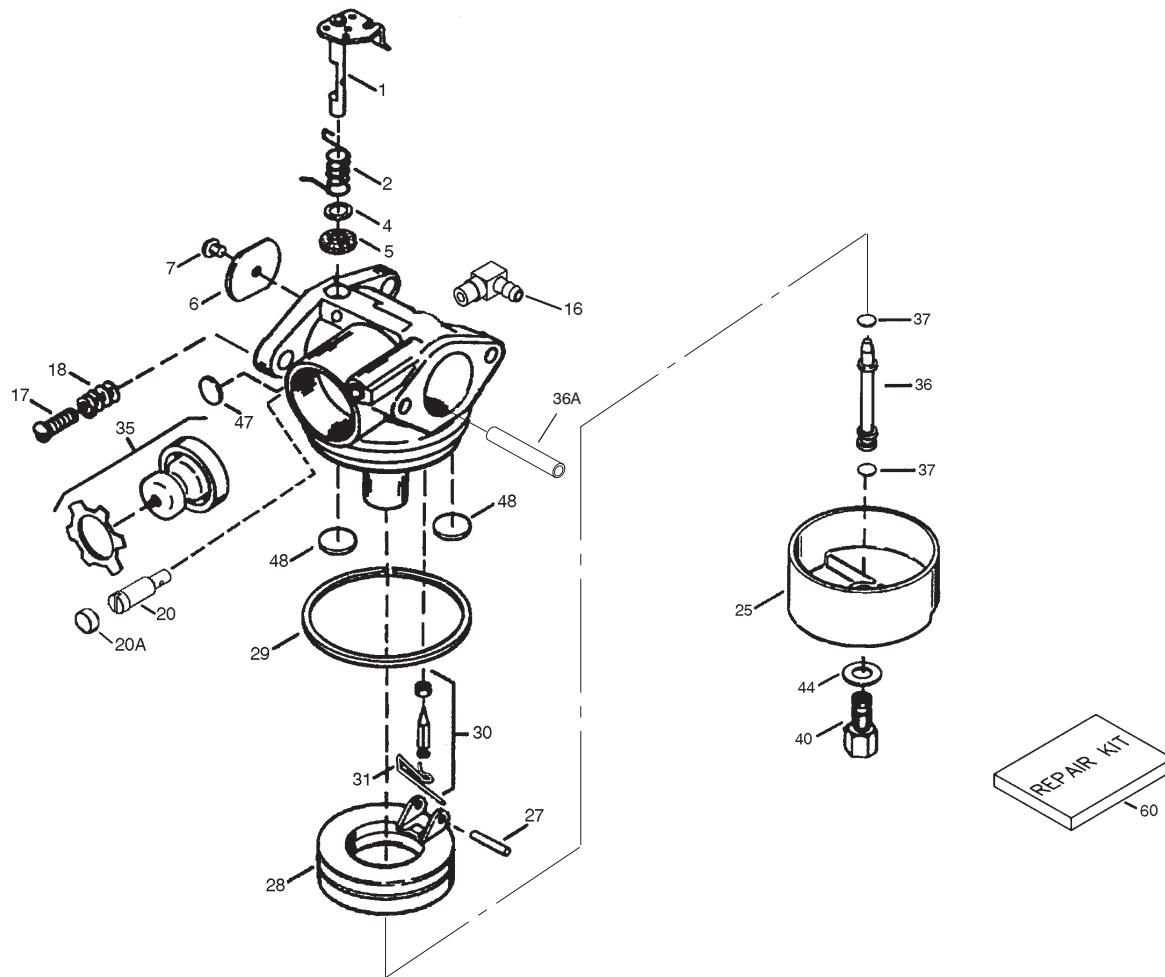


Carburetor No. 640281

Ref. No.	Part No.	Qty.	Description
0	640281	1	Carburetor (Incl. #184 of Engine Parts List)
1	631615	1	Throttle Shaft & Lever Assembly
2	631767	1	Throttle Return Spring
4	631184	1	Dust Seal Washer
5	631183	1	Dust Seal (Throttle)
6	640070	1	Throttle Shutter
7	650506	1	Shutter Screw
16	631807	1	Fuel Fitting
17	651025	1	Throttle Crack Screw/Idle Speed Screw
18	630766	1	Tension Spring
20	640027	1	Idle Restrictor Screw
20A	640200	1	Idle Restrictor Screw Cap
25	631867	1	Float Bowl
27	631024	1	Float Shaft
28	632019	1	Float
29	631028	1	Float Bowl "O" Ring
30	631021	1	Inlet Needle, Seat, & Clip (Incl. 31)
31	631022	1	Spring Clip
35	640259	1	Primer Bulb/Retainer Ring

Ref. No.	Part No.	Qty.	Description
36	640080	1	Main Nozzle Tube
36A	632766	1	Bowl Vent Tube Extension
37	632547	2	O-Ring, Main Nozzle Tube
40	640074	1	High Speed Bowl Nut
44	27110A	1	Bowl Nut Washer
47	630748	1	Welch Plug, Idle Mixture Well
48	631027	1	Welch Plug, Atmospheric Vent
60	632760B	1	Repair Kit

Obtain parts from local Tecumseh dealer

Engine-OVRM105-21038F

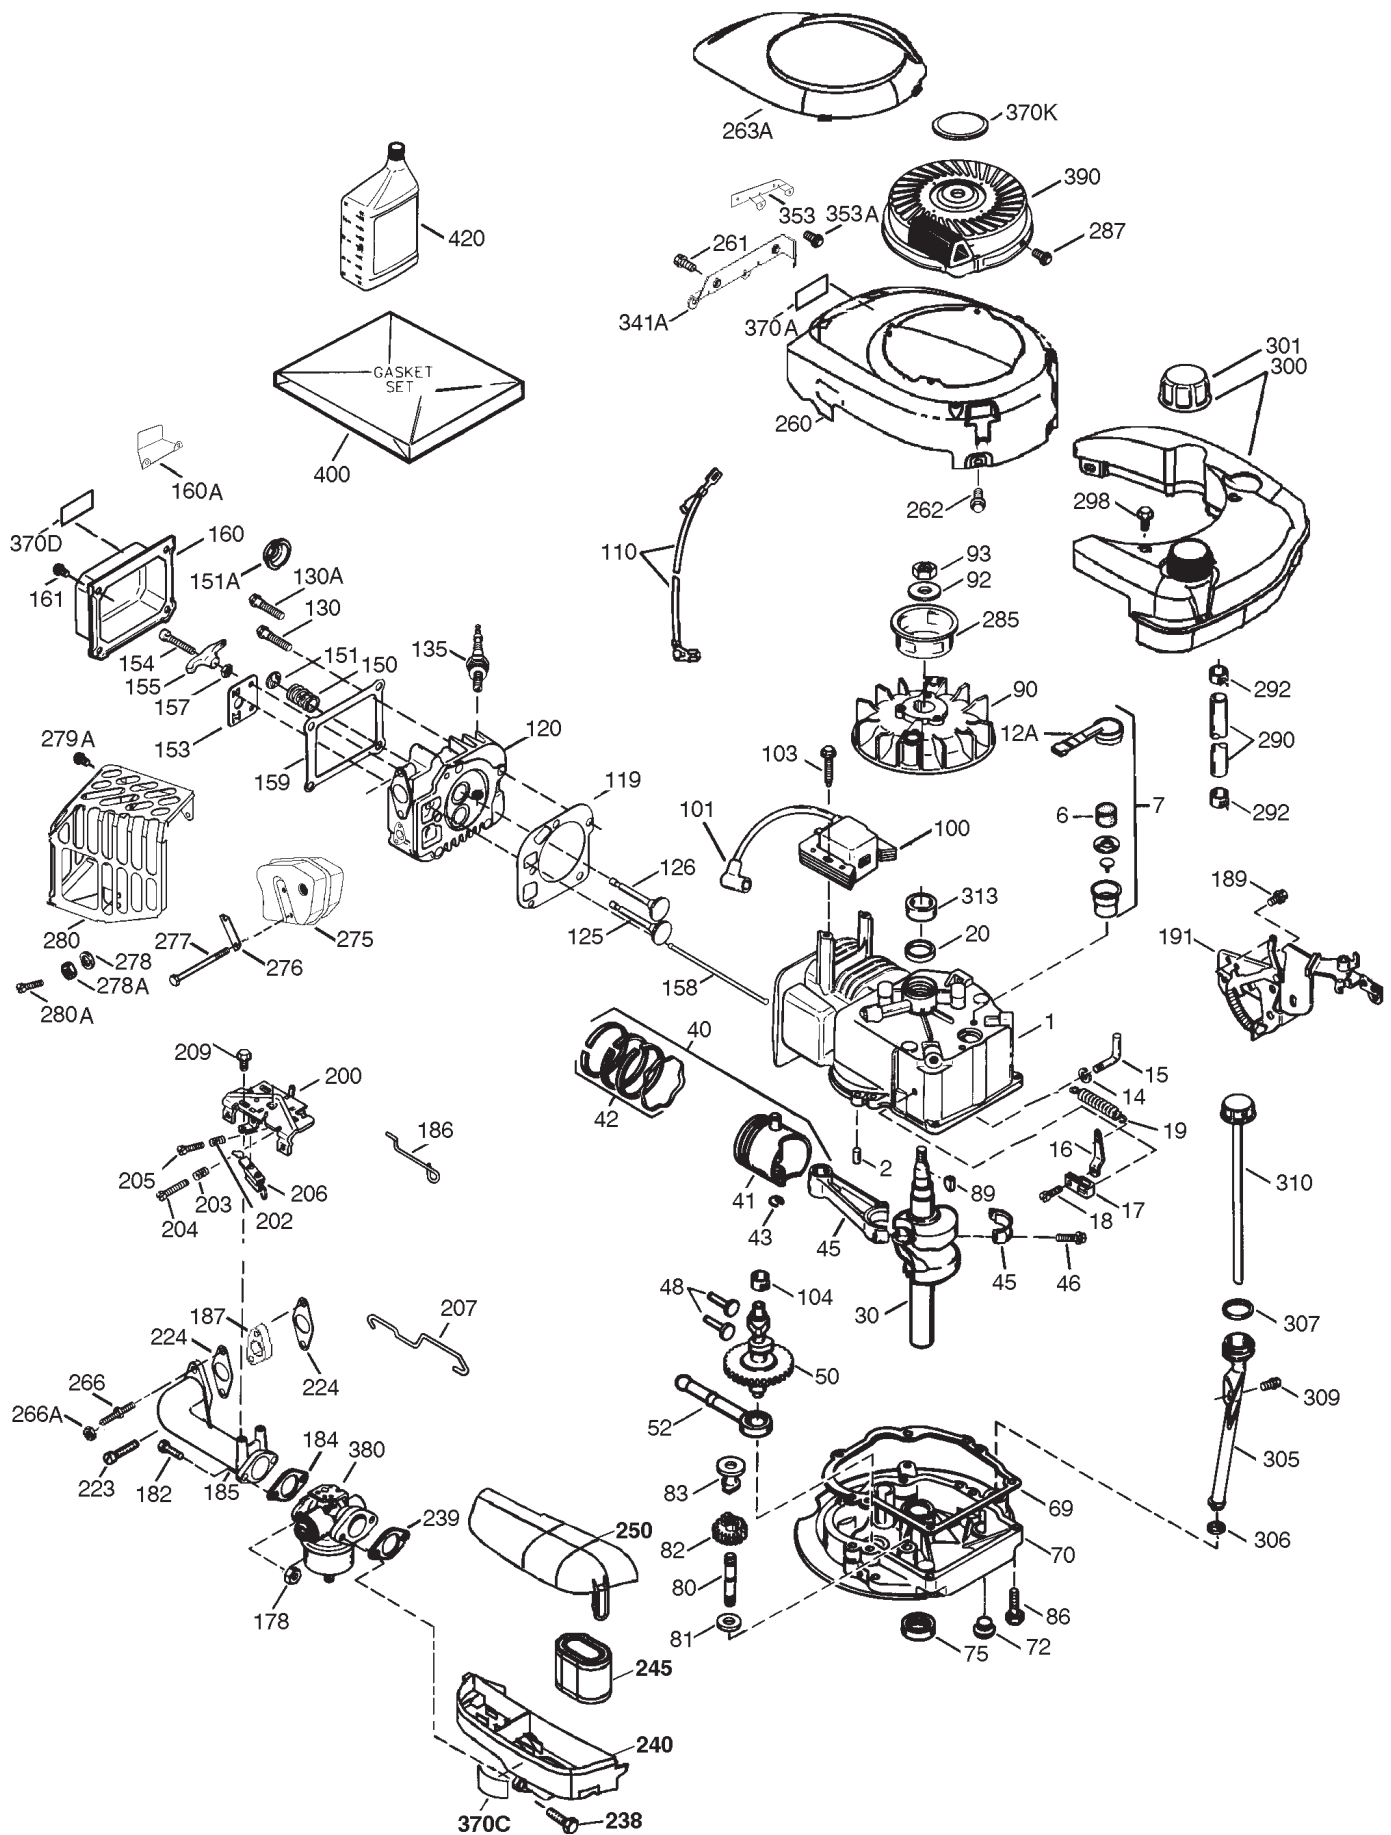

Engine-OVRM105-21038F (Continued)


Ref. No.	Part No.	Qty.	Description
1	36835A	1	Cylinder (Incl. 2 & 20)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	36557	1	Breather Body ASM (Incl. 6 & 12A)
12A	36558	1	Breather Cover & Tube
14	28277	1	Washer
15	30589	1	Governor Rod (Incl. 14)
16	34839A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	651018	1	Screw, Torx T-15
19	36796	1	Extension Spring
20	32600	1	Oil Seal
30	37510	1	Crankshaft
40	35544A	1	Piston, Pin & Ring Set (Std.)
40	35545A	1	Piston, Pin & Ring Set (.010" OS)
40	35546	1	Piston, Pin & Ring Set (.020" OS)
41	35541	1	Piston & Pin ASM (Std.)
41	35542	1	Piston & Pin ASM (.010" OS) (Incl. 43)
41	35543	1	Piston & Pin ASM (.020" OS) (Incl. 43)
42	35547A	1	Ring Set (Std.)
42	35548A	1	Ring Set (.010" OS)
42	35549	1	Ring Set (.020" OS)
43	20381	2	Piston Pin Retaining Ring
45	32875A	1	Connecting Rod ASM (Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	35616	2	Valve Lifter
50	37473	1	Camshaft Exhaust(MCR) (Incl. Ref #104)
52	29914	1	Oil Pump ASM
69	35261	1	Mounting Flange Gasket
70	34311E	1	Mounting Flange (Incl. 72 thru 83)
72	36083	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574A	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear ASM (Incl. 81)
83	30588A	1	Governor Spool
86	650488	6	Screw
89	611004	1	Flywheel Key
90	611112	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443B	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	651007	2	Screw, Torx T-15
104	37480	1	Cam Bushing

Ref. No.	Part No.	Qty.	Description
110	37047	1	Ground Wire
119	36738	1	Cylinder Head Gasket
120	37474	1	Cylinder Head
125	36471	1	Exhaust Valve (Std.) (Incl. 151)
125	36472	1	Exhaust Valve (1/32 OS)(Incl. 151)
126	29314C	1	Intake Valve (Std.) (Incl. 151)
130	650912	4	Screw
130A	650999	1	Screw
135	34645	1	Resistor Spark Plug (RN4C)
150	31672	2	Valve Spring
151	31673	2	Valve Spring Cap
151A	40016A	1	Intake Valve Seal
153	36649	1	Push Rod Guide
154	650913	1	Rocker Arm Stud
155	35624A	1	Rocker Arm
157	650914	1	Lock Nut
158	36629	2	Push Rod
159	35626	1	Rocker Arm Cover Gasket
160A	37512	1	Heat Shield
161	30063	4	Screw, Torx T-30
178	29752	2	Nut & Lock Washer
182	30088A	2	Screw
184	26756	1	Carburetor To Intake Pipe Gasket
185	36579	1	Intake Pipe
186	36255	1	Governor Link
187	37203	1	Spacer
189	650839	2	Screw
191	36559A	1	S.E. Brake Bracket
200	37134	1	Control Bracket (Incl. 202 Thru 206)
202	36482	1	Compression Spring
203	31342	1	Compression Spring
204	651029	1	Screw, Torx T-10
205	651019	1	Screw, Torx T-10
206	610973	1	Terminal
207	36200B	1	Throttle Link
209	30200	2	Screw
223	651044	1	Screw
224	36581	2	Intake Pipe Gasket
238	650806	2	Screw
239	34338	1	Air Cleaner Gasket
240	36743	1	Air Cleaner Body
245	36745	1	Air Cleaner Filter
250	36744	1	Air Cleaner Cover
260	37513	1	Blower Housing
261	650853	1	Screw, Torx T-30
262	650831	2	Screw
263A	36758	1	Starter Grill
266	651040	1	Screw
266A	650852	1	Lockwasher
275	37275A	1	Muffler(Incl. 276 & 277)
276	36949	1	Locking Plate
277	651039	2	Screw

Obtain parts from local Tecumseh dealer

Ref. No.	Part No.	Qty.	Description

* Not illustrated

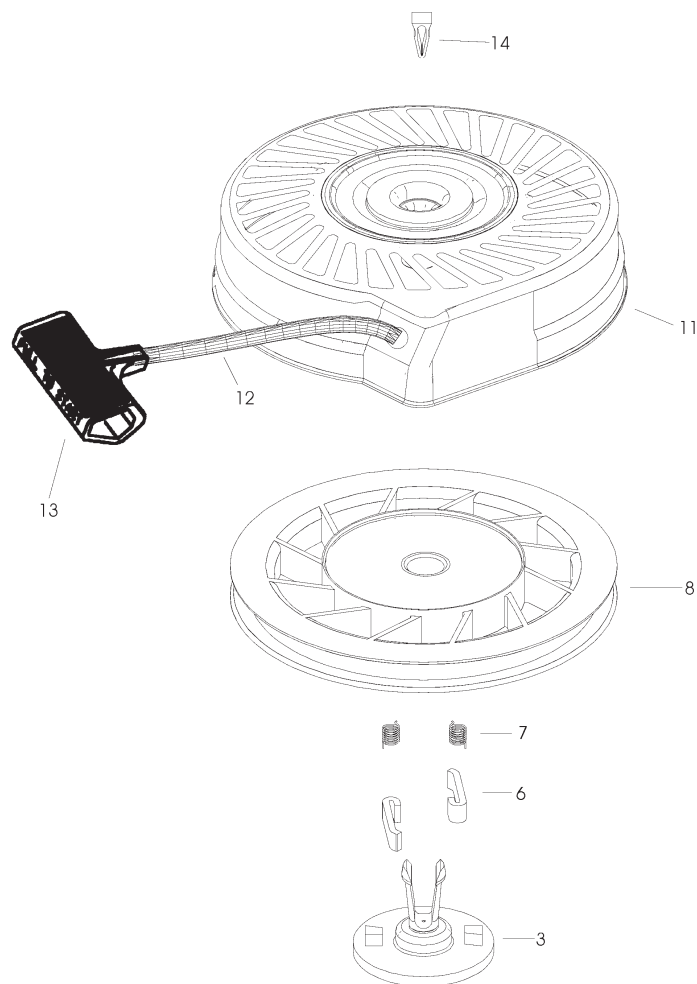


Recoil Starter No. 590737

Ref. No.	Part No.	Qty.	Description
0	590737	1	Rewind Starter
3	590740	1	Retainer
6	590616	2	Starter Dog
7	590617	2	Dog Spring
8	590618A		Pulley & Rewind
		1	Spring ASM
11	590687A		Starter Housing ASM
		1	(40 degree grommet)
12	590535		Starter Rope
		1	(Length 98" x 9/64"
			dia.)
13	590701	1	Starter Handle
14	590760	1	Spring Clip

Ref. No.	Part No.	Qty.	Description

Obtain parts from local Tecumseh dealer

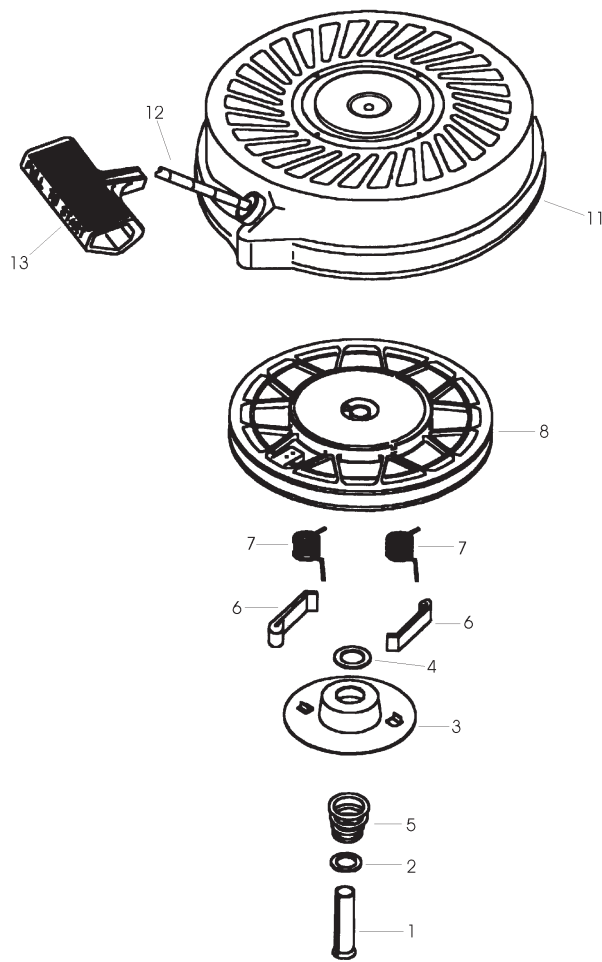

Recoil Starter No. 590694 (Optional)

Ref. No.	Part No.	Qty.	Description
0	590694	1	Recoil Starter
1	590599A	1	Spring Pin (Incl. 4)
2	590600	1	Washer
3	590696	1	Retainer
4	590601	2	Washer
5	590697	1	Brake Spring
6	590698	2	Starter Dog
7	590699	2	Dog Spring
8	590700		Pulley & Rewind Spring
		1	ASM
11	590695		Starter Housing ASM
		1	(40 degree grommet)
12	590535		Starter Rope
		1	(98" X 9/64" dia.)
13	590701	1	Starter Handle

Obtain parts from local Tecumseh dealer

Maintenance Record

[illegible]

Maintenance Record

[illegible]

LAWN-BOY®