



SR-21P Recycler^r Mower

Model No. 20030—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket, and wheel Assembly	3	Governor Assembly	9
Engine and Blade Assembly	4	Air Cleaner Assembly	10
Handle and Control Assembly	5	Muffler and Fuel Tank Assembly	11
Cylinder Assembly	6	Blower Housing Assembly	12
Crankshaft Assembly	7	Starter Assembly	13
Carburetor Assembly	8	Gasket Assembly	14

 
Accessories

Description	Model / Part No.	Description	Model / Part No.
Recycler Side Discharge Kit	59197	Recycler Bagging Kit	59192

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

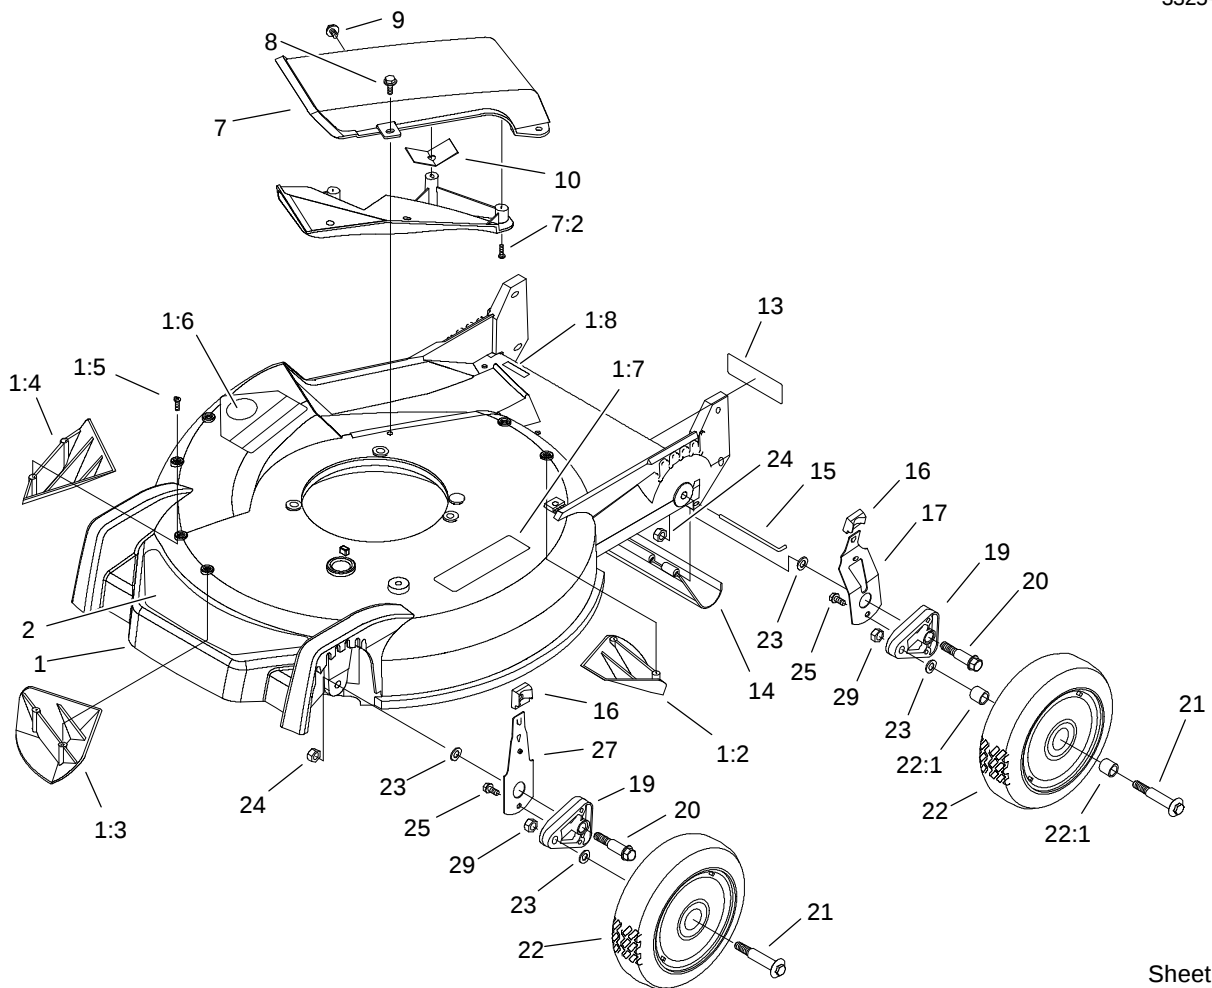


Sheet No.:2

Housing, Handle Bracket, and wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-1704	1	Housing ASM	25	32144-85	4	Screw-HH
1:2	92-1660	1	Kicker-Rear	27	66-0541	2	Front Spring Arm ASM
1:3	92-1720	1	Kicker-Front	29	603773	4	Nut
1:4	92-1730	1	Kicker-RH				
1:5	32144-111	6	Screw-PPH				
1:6	43-8480	1	Decal-Danger				
1:7	93-0248	1	Decal - Warning				
1:8	99-6018	1	Decal - Warning				
2	99-6010	1	Decal - Deck				
7	100-8775	1	Recycler Cover ASM				
7:2	32144-111	5	Screw-PPH				
8	46-6811	3	Screw-HWH				
9	46-6810	1	Screw & Washer ASM				
10	83-4750	1	Cover Guard				
14	44-0580	1	Shield-Trailing				
15	33-3208	1	Rod-Shield				
16	25-7740	4	Knob-Arm				
17	71-0571	1	LH Spring Arm ASM				
*18	71-0561	1	RH Spring Arm ASM				
19	66-0580	4	Arm-Pivot, Front				
20	66-0560	4	Bolt-Shoulder				
21	92-1057	4	Bolt-Shoulder				
22	98-7130	4	Wheel ASM				
22:1	27-6250	2	Bushing				
23	40-1940	8	Washer				
24	3296-6	4	Nut-Lock, NI				

 * Not illustrated

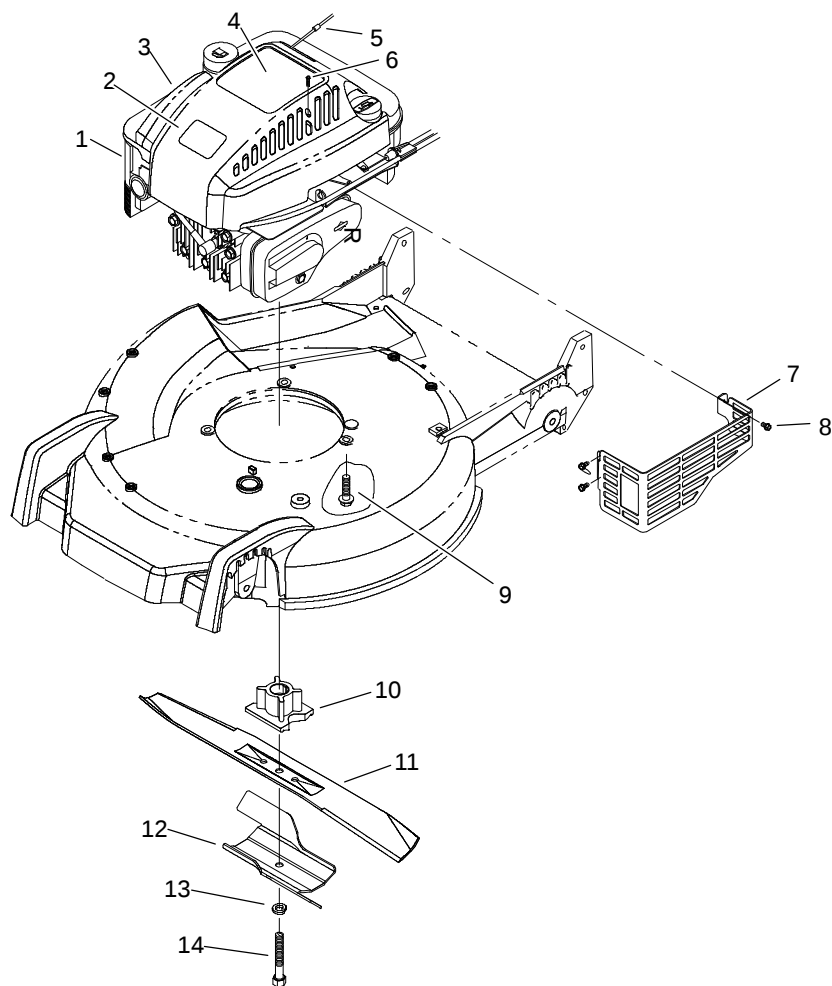


Sheet No.:3

Engine and Blade Assembly

Ref. No.	Part No.	Qty.	Description
I 1		1	Engine-Briggs and Stratton, 12H802-1776-B1
2	98-3206	1	Nameplate-Toro
3	93-0243	1	Shroud-Wedge, Quantum
4	99-6013	1	Decal - Recoil
5	2210-316	1	Stop-Rope
6	32144-121	2	Screw-PPH
7	104-7577-03	1	Shield-Muffler
8	32144-1	3	Screw-Taptite
9	32144-102	3	Screw-HWH
10	104-1007	1	Retainer-Blade
11	93-4106-03	1	Blade-Recycler
12	94-1608-03	1	Accelerator-Blade
13	3253-22	1	Washer-Lock
14	95-1748	1	Screw-Blade

Ref. No.	Part No.	Qty.	Description

 
I Not serviced

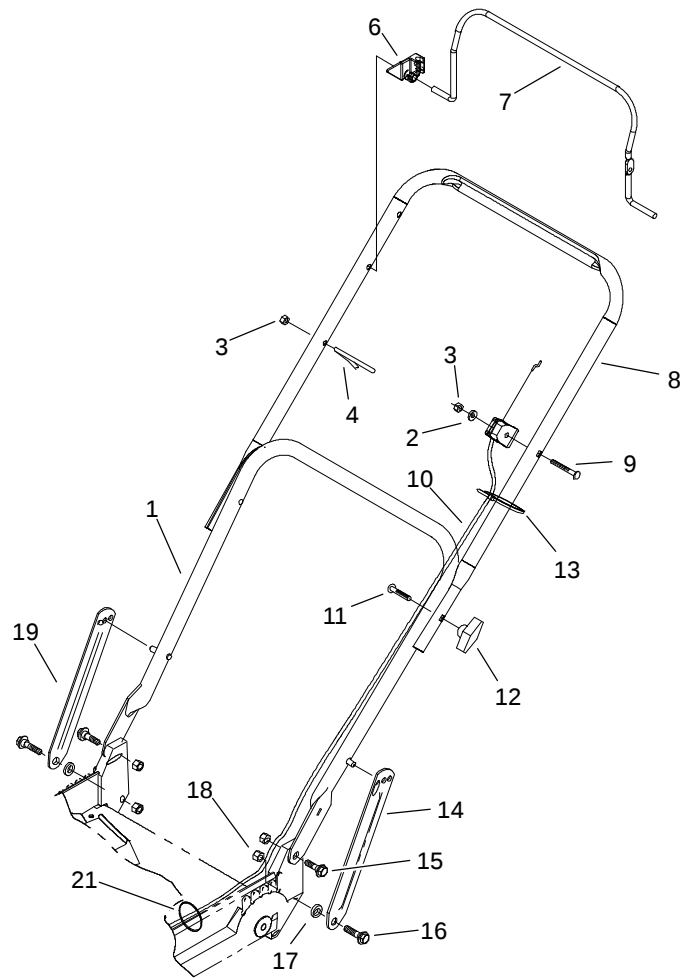

Sheet No.:4

Handle and Control Assembly

Ref. No.	Part No.	Qty.	Description
1	82-5531-05	1	Lower Handle ASM
2	3256-1	1	Washer-Flat
3	3296-73	2	Nut-Lock, NI
4	86-9671	1	Guide-Rope
6	94-6097	1	Stop
7	99-1570	1	Bail-Brake
8	99-6017-05	1	Handle-Upper
9	95-4453	1	Screw-Handle
10	99-5288	1	Cable-Brake
11	92-2260	2	Screw-Handle
12	98-7134	2	Knob-Handle
13	3290-378	1	Tie-Cable
14	84-8361-03	1	Latch-Handle, LH
15	27-7211	2	Screw-Shoulder
16	27-7210	2	Screw-Shoulder
17	3-3287	2	Spacer-Latch, Handle
18	3296-72	4	Nut-Lock, NI
19	84-8401-03	1	Latch-Handle, RH
21	100-2894	1	Tie-Cable

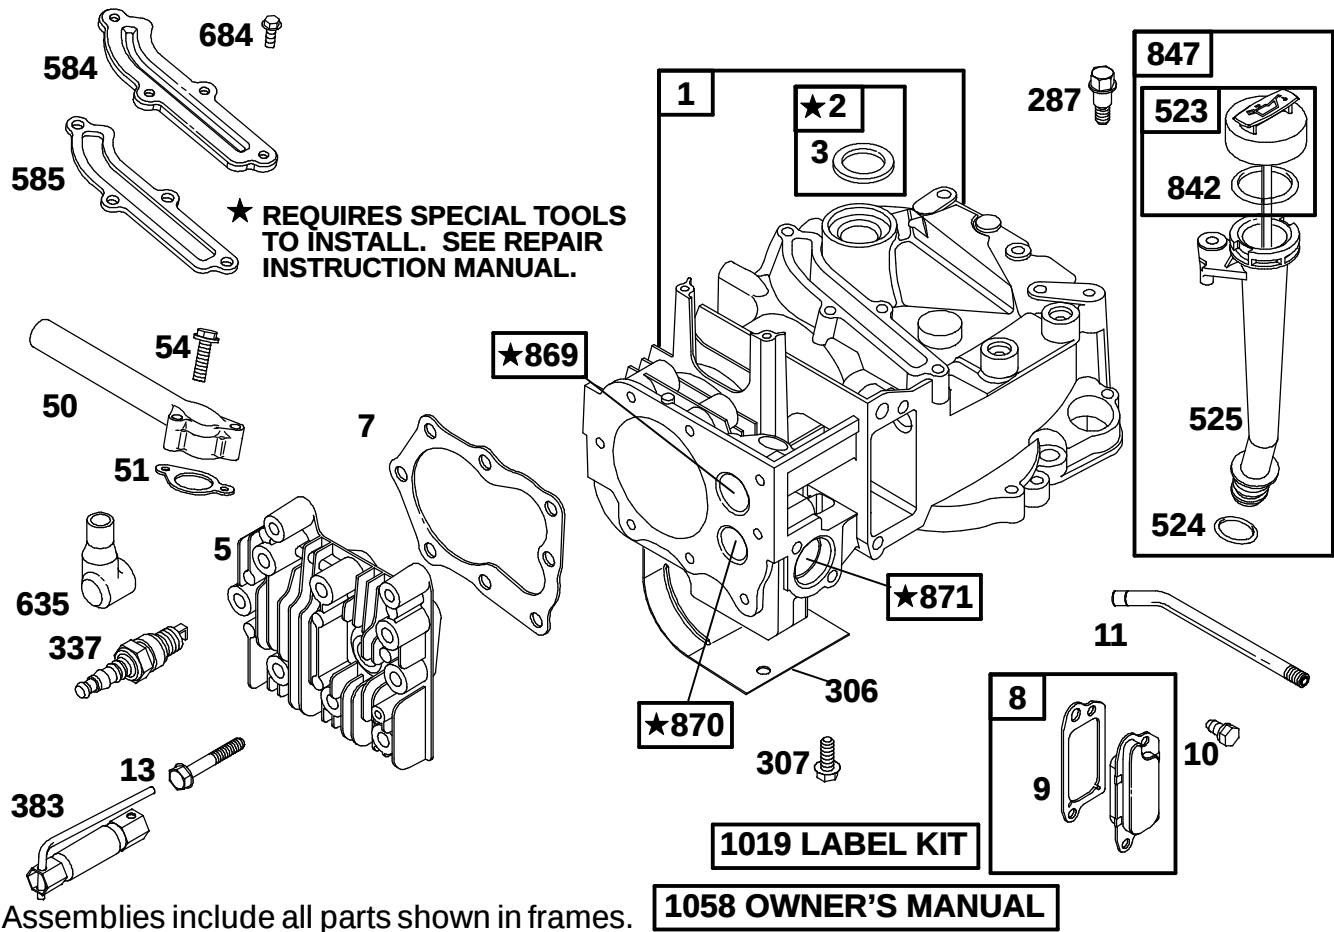 

Assemblies include all parts shown in frames.


Cylinder Assembly Briggs and Stratton Model 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
1	493260	1	Cylinder Assembly
2	399269	1	Bearing/Seal Kit (Magneto Side)
K3	299819	1	Oil Seal, MagnetoSide
5	691160	1	Cylinder Head
ΔK7	692249	1	Cylinder Head Gasket
8	695250	1	Breather Assembly
ΔK9	272481	1	Breather Gasket
10	691125	1	Screw (Breather Assembly)
11	691781	1	Breather Tube
13	690912	1	Screw (Cylinder Head)
50	497465	1	Intake Manifold
K51	272199	1	Intake Gasket
54	691650	1	Screw (Intake Manifold)
287	690940	1	Screw (Dipstick Tube)
306	690450	1	Cylinder Shield
307	690345	1	Screw (Cylinder Shield)
337	802592	1	Sparkplug
383	89838	1	Sparkplug Wrench
523	495264	1	Dipstick
K524	692296	1	Dipstick Tube Seal

Ref. No.	Part No.	Qty.	Description
525	495265	1	Dipstick Tube
584	692342	1	Breather Passage Cover
K585	691879	1	Breather Passage Gasket
635	66538	1	Sparkplug Boot
684	690345	1	Screw (Breather Passage Cover)
K842	691031	1	O Ring Seal (Dipstick Tube)
847	692017	1	Dipstick/Tube Assembly
869	691155	1	Valve Seat (Intake)
870	690380	1	Valve Seat (Exhaust)
871	262001	1	Guide Bushing (Exhaust)
	63709	1	Guide Bushing (Intake)
1019	494256	1	Label Kit
1058	274783	1	Owner's Manual

Δ Included in Valve Gasket Set-Ref. 1095.

 K Included in Engine Gasket Set-Ref. 358.

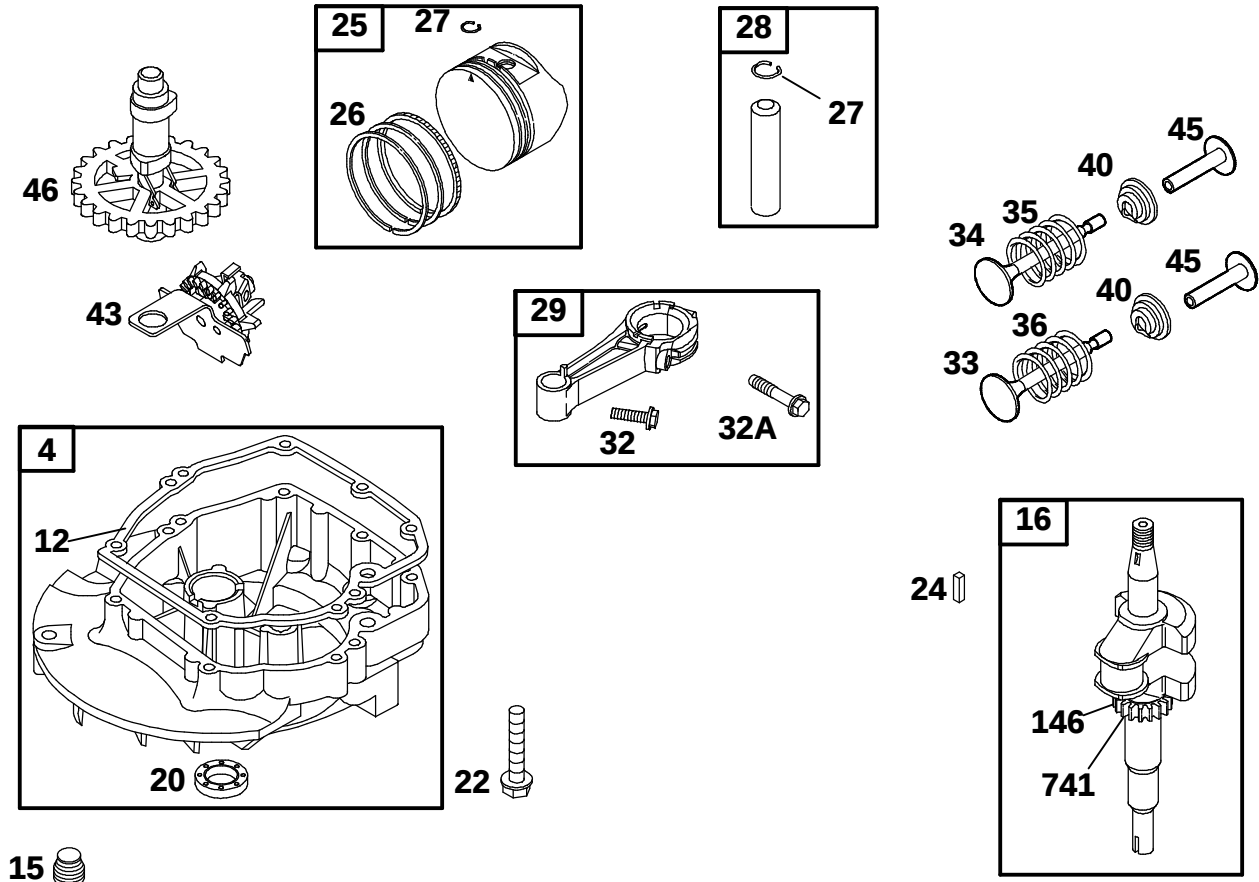


Assemblies include all parts shown in frames.

Crankshaft Assembly **Briggs and Stratton Model 12H802-1776-B1**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
4	493279	1	Engine Sump		499428	1	Ring Set (.030" Oversize)
K12	692232	1	Crankcase Gasket	27	691866	1	Piston Pin Lock
15	691680	1	Oil Drain Plug	28	499423	1	Piston Pin (Standard)
16	696009	1	Crankshaft		298908	1	Piston Pin (.005" O.S.)
K20	399781	1	Oil Seal (PTO Side)	29	499424	1	Connecting Rod (Standard)
22	691092	1	Screw (Engine Sump)	32	691664	1	Screw (Connecting Rod)
24	222698	1	Flywheel Key	32A	695759	1	Screw (Connecting Rod)
25	499429	1	Piston Assembly (Standard)	33	262651	1	Exhaust Valve
	499430	1	Piston Assembly (.010" Oversize)	34	262652	1	Intake Valve
	499431	1	Piston Assembly (.020" Oversize)	35	691270	1	Valve Spring (Intake)
	499432	1	Piston Assembly (.030" Oversize)	36	691270	1	Valve Spring (Exhaust)
26	499425	1	Ring Set (Standard)	40	692194	1	Valve Retainer
	499426	1	Ring Set (.010" Oversize)	43	691997	1	Governor/Oil Slinger
	499427	1	Ring Set (.020" Oversize)	45	690548	1	Valve Keeper
				46	691449	1	Camshaft
				146	690979	1	Timing Key
				741	691830	1	Timing Gear

 K Included in Engine Gasket Set-Ref. 358.

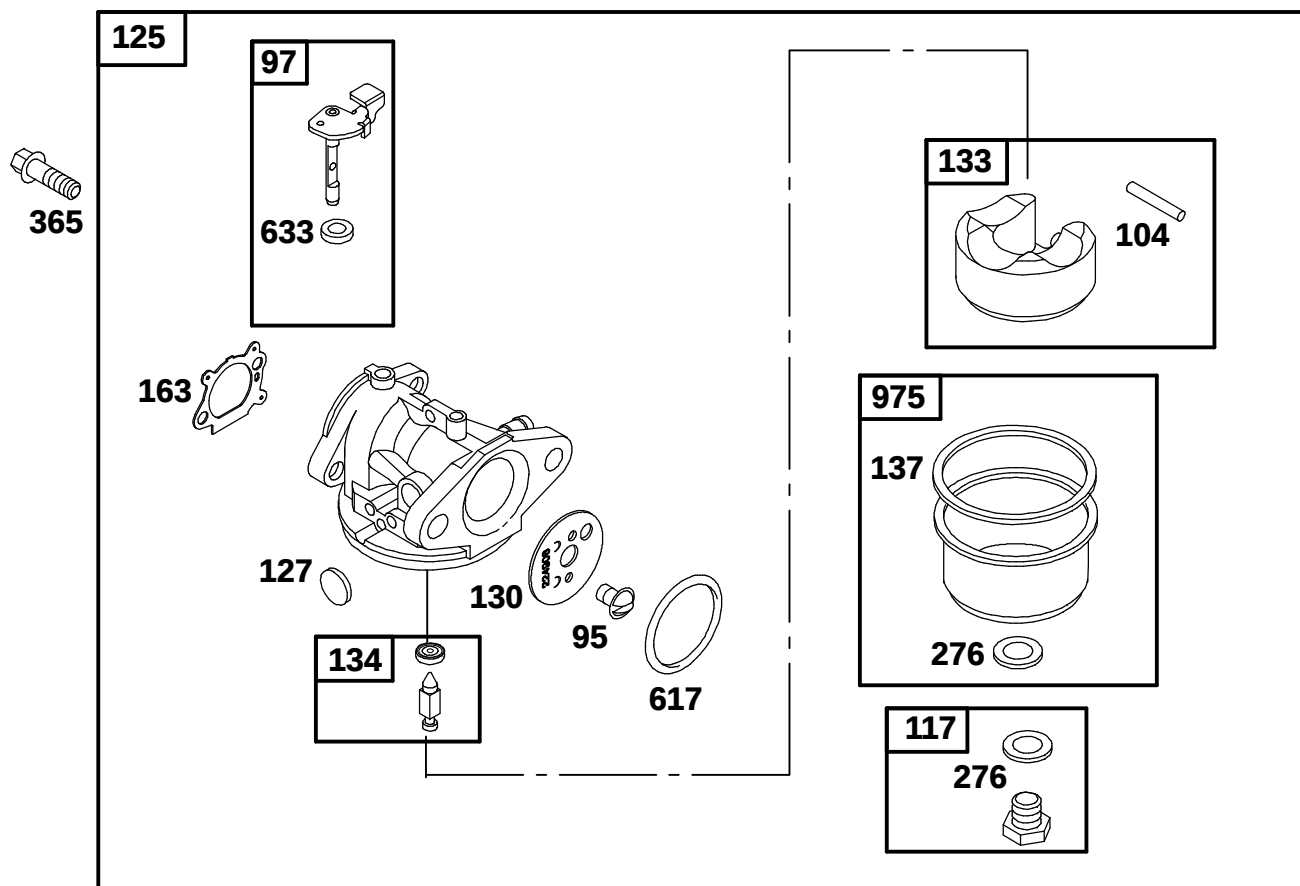

Assemblies include all parts shown in frames.

Carburetor Assembly Briggs and Stratton Model 12H802-1776-B1


Ref. No.	Part No.	Qty.	Description
95	691636	1	Screw (Throttle Valve)
97	493267	1	Throttle Shaft
D104	691242	1	Float Hinge Pin
117	494870	1	Main Jet (Standard)
	497315	1	Main Jet (High Altitude)
125	498170	1	Carburetor
D127	694468	1	Welch Plug
130	691203	1	Throttle Valve
133	398187	1	Carburetor Float
D134	398188	1	Needle/Seat Kit
D z 137	693981	1	Float Bowl Gasket
KD z 163	272653	1	Air Cleaner Gasket
D276	271716	1	Sealing Washer
365	692524	1	Screw (Carburetor)
D z 617	270344	1	O Ring Seal (Intake Manifold)
D z 633	691321	1	Choke/Throttle Shaft Seal
975	493640	1	Float Bowl

Ref. No.	Part No.	Qty.	Description

D Included in Carburetor Overhaul Kit-Ref. 121.

K Included in Engine Gasket Set-Ref. 358.

 z Included in Carburetor Gasket Set-Ref. 977.

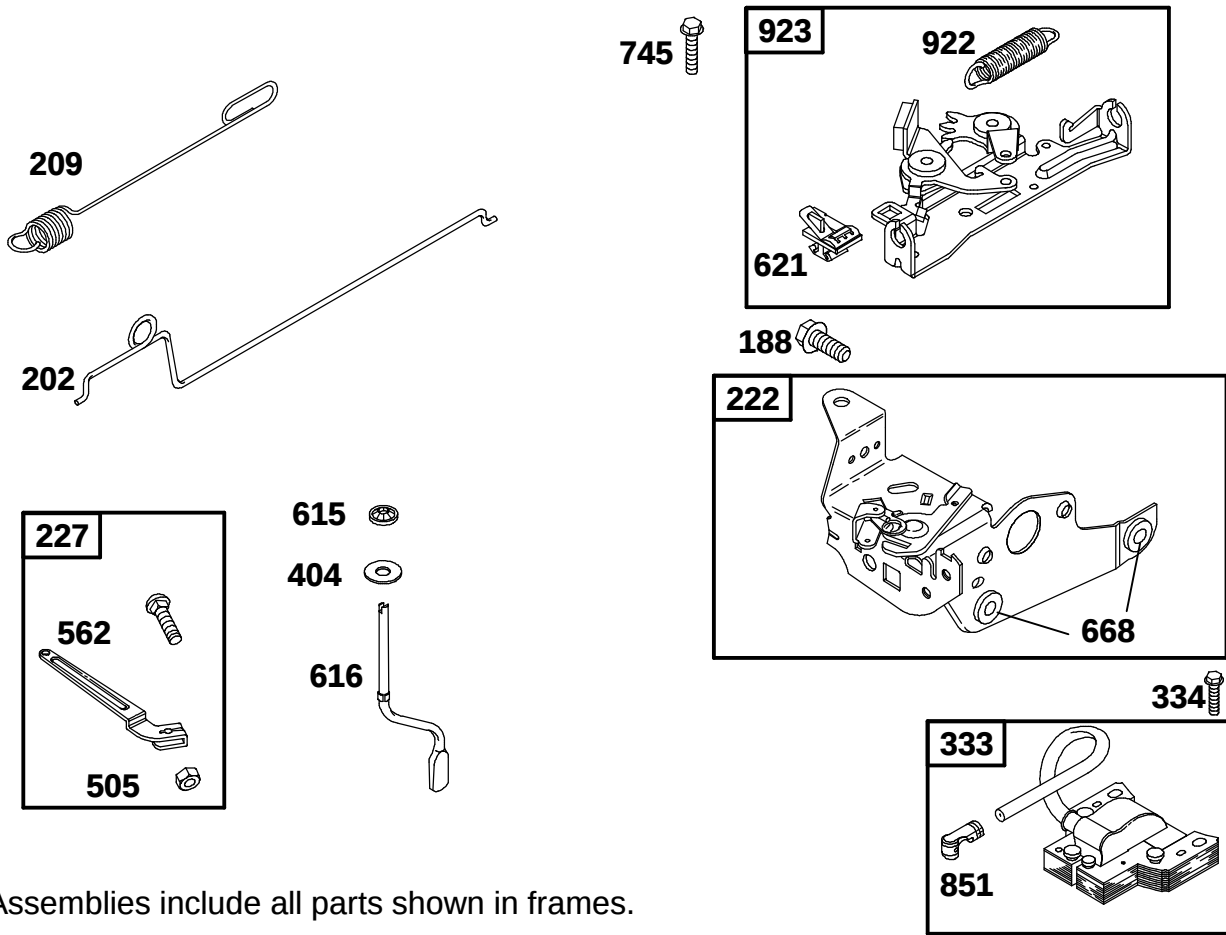


Governor Assembly

Briggs and Stratton Model 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
188	690877	1	Screw (Control Bracket)
202	691829	1	Mechanical Governor Link
209	691292	1	Governor Spring
222	692467	1	Control Bracket
227	690783	1	Governor Control Lever
333	802574	1	Magneto Armature
334	691061	1	Screw (Magneto Armature)
404	690272	1	Washer (Governor Crank)
505	231082	1	Nut (Governor Control Lever)
562	92613	1	Screw (Governor Control Lever)
615	690340	1	Governor Shaft Retainer
616	691306	1	Governor Crank Stop Switch
621	692310	1	Stop Switch

Ref. No.	Part No.	Qty.	Description
K668	493823	1	Spacer (Includes 2)
745	691648	1	Screw (Bracket)
851	493880	1	Sparkplug Terminal
922	691831	1	Brake Spring
923	691994	1	Brake

 K Included in Engine Gasket Set-Ref. 358.

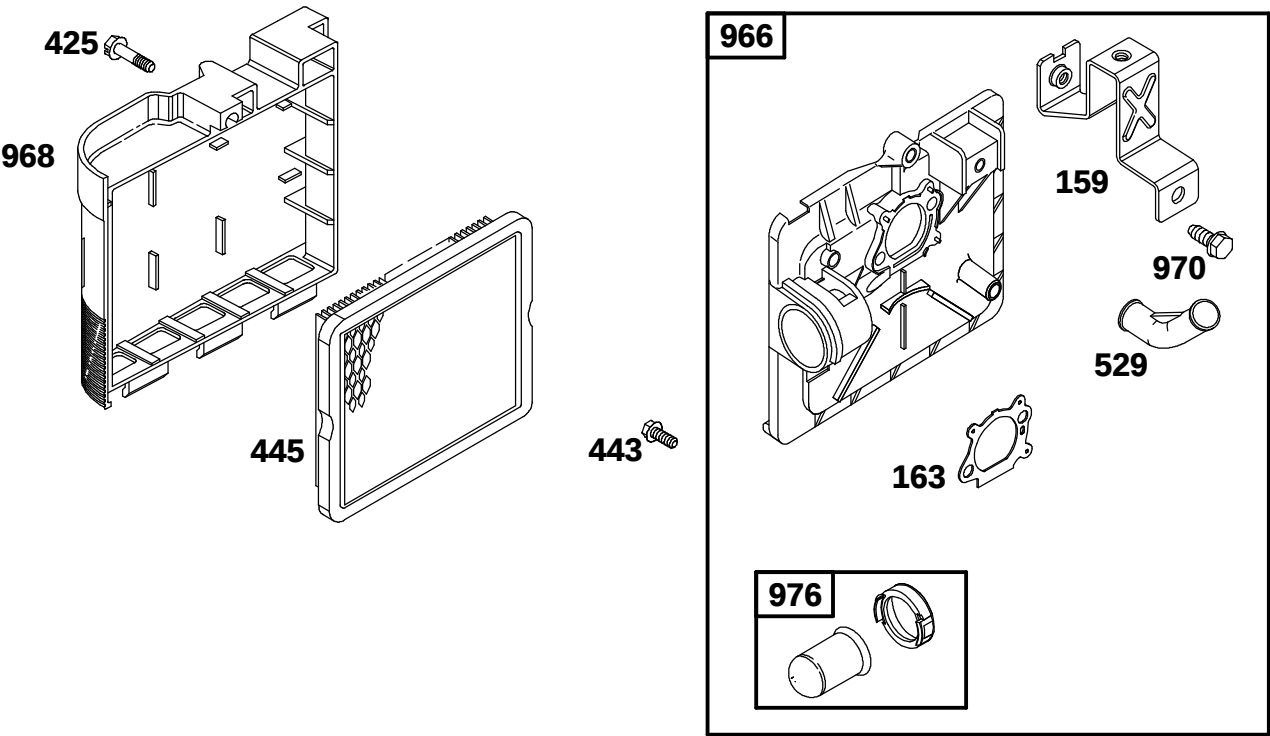






Assemblies include all parts shown in frames.

Air Cleaner Assembly
Briggs and Stratton Model 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
159	691753	1	Air Cleaner Primer Bracket
KD z 163	272653	1	Air Cleaner Gasket
425	690670	1	Screw (Air Cleaner Cover)
443	692523	1	Screw (Air Cleaner Primer Base)
445	491588	1	Air Cleaner Cartridge Filter
529	691923	1	Grommet
966	496116	1	Air Cleaner Primer Base
968	692298	1	Air Cleaner Cover
970	691669	1	Screw (Air Cleaner Primer Bracket)
976	694395	1	Carburetor Primer

Ref. No.	Part No.	Qty.	Description

     D Included in Carburetor Overhaul Kit-Ref. 121.
K Included in Engine Gasket Set-Ref. 358.
z Included in Carburetor Gasket Set-Ref. 977.

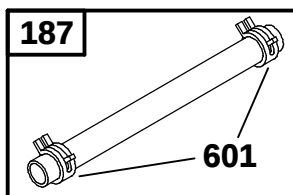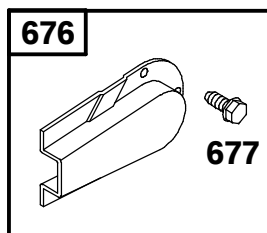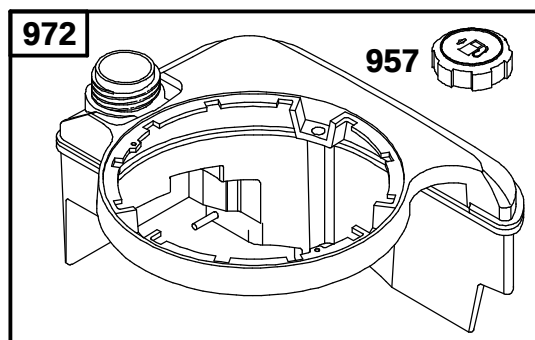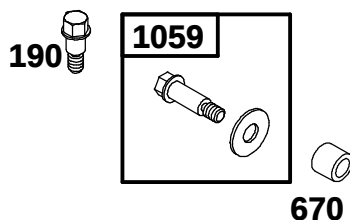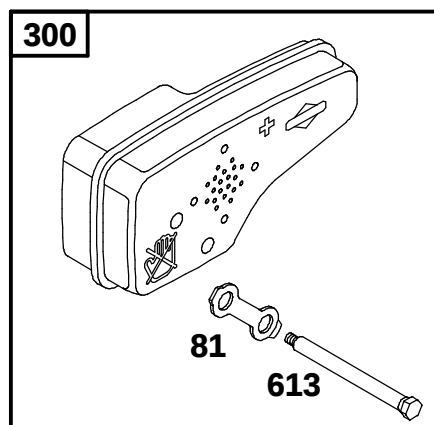


Assemblies include all parts shown in frames.

Muffler and Fuel Tank Assembly Briggs and Stratton Model 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
81	691740	1	Muffler Screw Lock
187	691050	1	Fuel Line (Cut to Required Length)
190	690940	1	Screw (Fuel Tank)
300	496106	1	Muffler
601	95162	1	Hose Clamp
613	691340	1	Screw (Muffler)
670	692294	1	Fuel Tank Spacer
676	493871	1	Muffler Deflector
677	690661	1	Screw (Muffler Deflector)
957	397974	1	Fuel Tank Cap
972	495224	1	Fuel Tank
1059	692311	1	Screw/Washer Kit

Ref. No.	Part No.	Qty.	Description

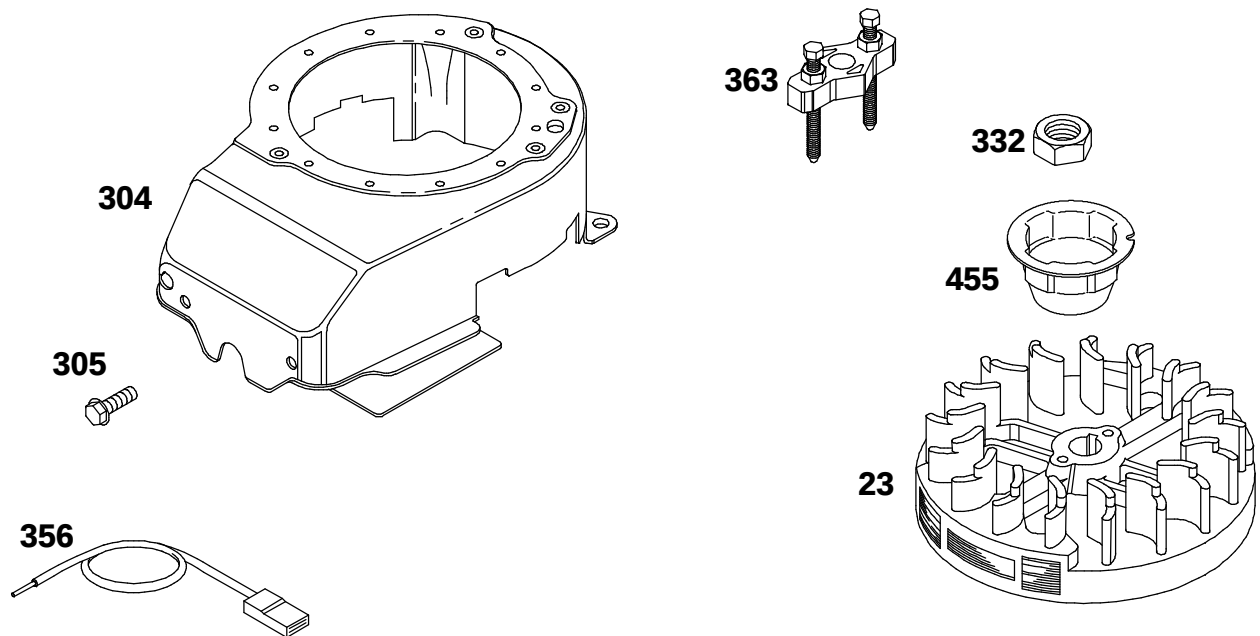 


1036 EMISSIONS LABEL

Assemblies include all parts shown in frames.

Blower Housing Assembly Briggs and Stratton Model 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
23	692315	1	Flywheel
304	493293	1	Blower Housing
305	691108	1	Screw (Blower Housing)
332	690877	1	Nut (Flywheel)
356	692390	1	Stop Wire
363	19069	1	Flywheel Puller
455	691219	1	Flywheel Cup
1036	695111	1	Emissions Label





Ref. No.	Part No.	Qty.	Description

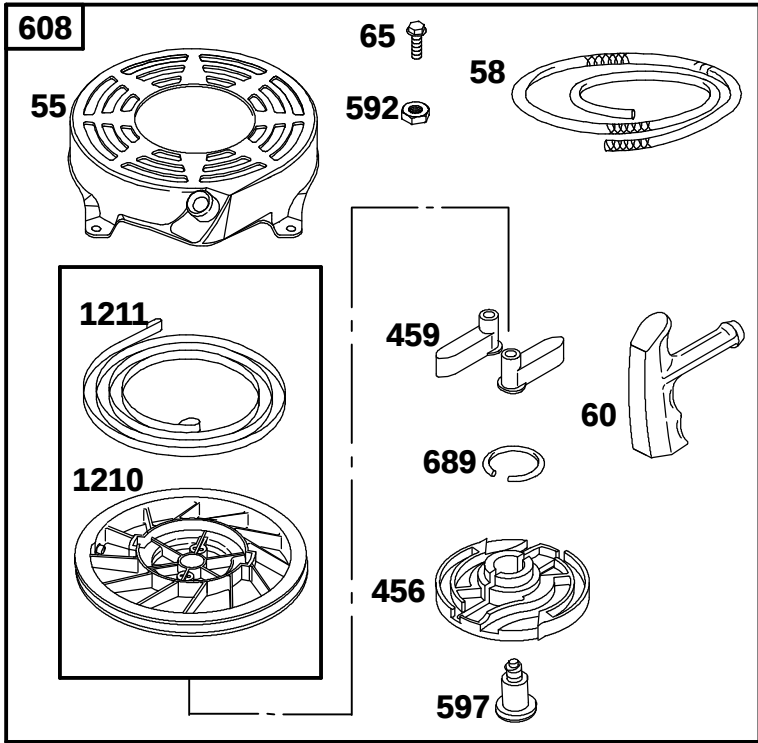 

Assemblies include all parts shown in frames.

Starter Assembly
Briggs and Stratton Model 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
55	691421	1	Rewind Starter Housing				
58	280399	1	Starter Rope				
60	281434	1	Starter Rope Grip				
65	690837	1	Screw (Rewind Starter)				
456	692299	1	Pawl Friction Plate				
459	281505	1	Pawl Ratchet				
592	690800	1	Nut (Rewind Starter)				
597	691696	1	Screw (Pawl Friction Plate)				
608	497680	1	Rewind Starter				
689	691855	1	Friction Spring				
1210	498144	1	Pulley/Spring Assembly (Pulley)				
1211	498144	1	Pulley/Spring Assembly (Spring)				

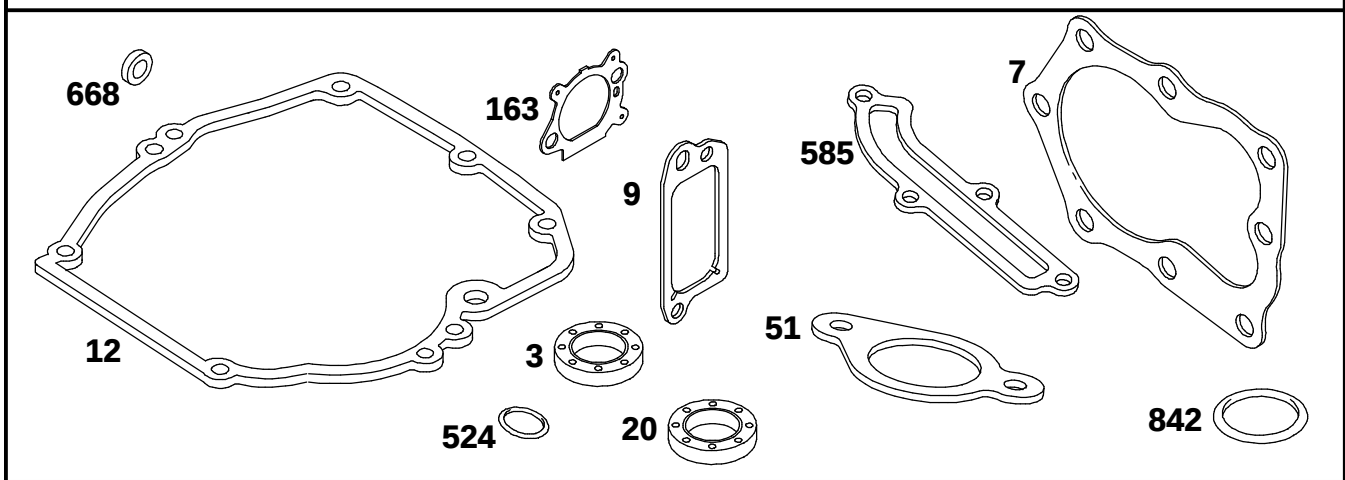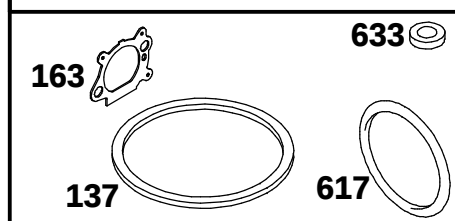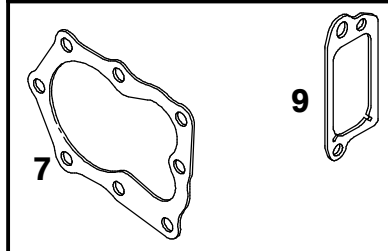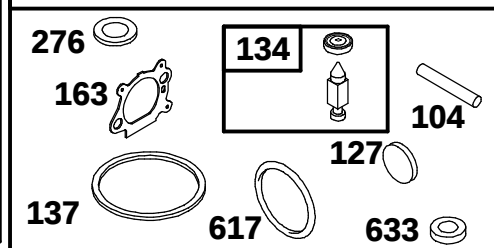    358 ENGINE GASKET SET**977 CARBURETOR
GASKET SET****1095 VALVE
GASKET SET****121 CARBURETOR
OVERHAUL KIT**

Assemblies include all parts shown in frames.

Gasket Assembly

Briggs and Stratton Model 12H802-1776-B1

Ref. No.	Part No.	Qty.	Description
K3	299819	1	Oil Seal (Magneto Side)
ΔK7	692249	1	Cylinder Head Gasket
ΔK9	272481	1	Breather Gasket
K12	692232	1	Crankcase Gasket
K20	399781	1	Oil Seal (PTO Side)
K51	272199	1	Intake Gasket
D104	691242	1	Float Hinge Pin
121	498260	1	Carburetor Overhaul Kit
D127	694468	1	Welch Plug
D134	398188	1	Needle/Seat Kit
D z 137	693981	1	Float Bowl Gasket
KD z 163	272653	1	Air Cleaner Gasket
D276	271716	1	Sealing Washer
358	497316	1	Engine Gasket Set
K524	692296	1	Dipstick Tube Seal
K585	691879	1	Breather Passage Gasket
D z 617	270344	1	O Ring Seal (Intake Manifold)
D z 633	691321	1	Choke Throttle Shaft Seal

Ref. No.	Part No.	Qty.	Description
K668	493823	1	Spacer (Includes 2)
K842	691031	1	O Ring Seal (Dipstick Tube)
977	498261	1	Carburetor Gasket Set
1095	498528	1	Valve Gasket Set

Δ Included in Valve Gasket Set-Ref. 1095.
K Included in Engine Gasket Set-Ref. 358.

D Included in Carburetor Overhaul Kit-Ref. 121.
z Included in Carburetor Gasket Set-Ref. 977.

Maintenance Record

[illegible]

