



Count on it.

Parts Catalog

GeoLink® Precision Spray System Finishing Kit

**Serial Number 315000001 and After Multi
Pro® 1750 Turf Sprayer**

Model No. 41674—Serial No. 407000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Monitor Mount and Display Cover Assembly 4

Receiver Mount and Antenna Bracket Assembly 5

Flowmeter Mount and Hose Assembly 6

Hose Assembly No. 136-0467 7

GPS Valve Mount and Hose Assembly 8

Section Valve Manifold Assembly 9

On/Off Manifold Valve Kit No. 127-9803 10


Bypass Valve Assembly No. 127-9805 11

Actuator On/Off Assembly No. 140-7377 12

Center Boom Assembly 13


Double Turret Body Assembly No. 108-3727 14

Electrical Assembly 15

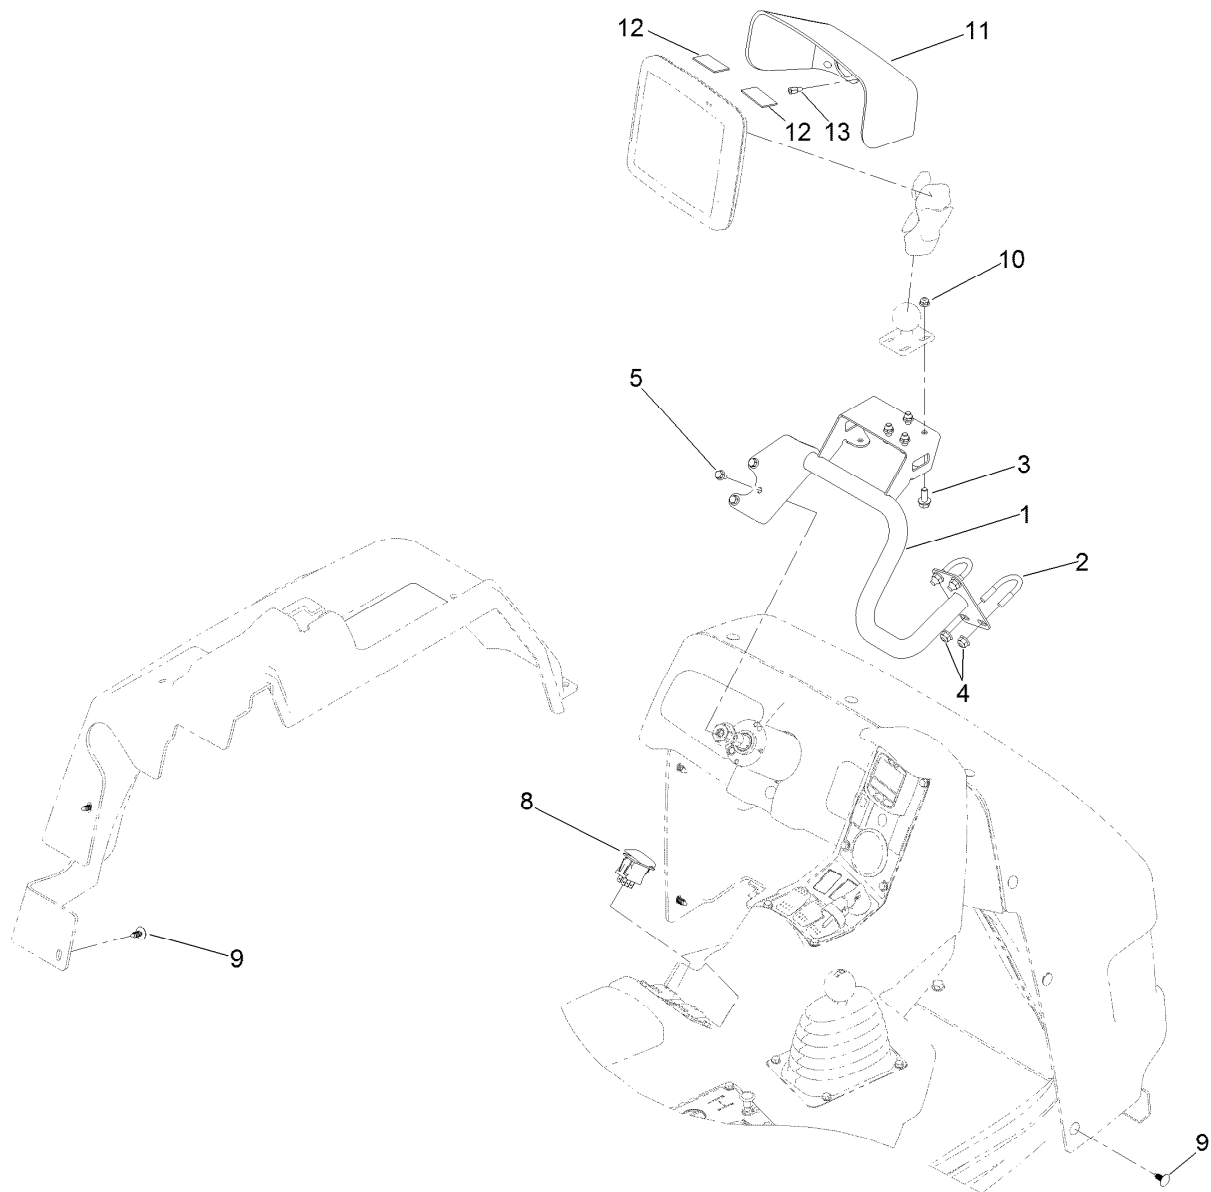


Monitor Mount and Display Cover Assembly

Ref.	Part Number	Qty.	Description
1	133-2844-03	1	Mount-Monitor
2	60-9350	2	U-Bolt
3	3234-5	4	Screw-HHF
4	104-8300	4	Nut-HF, NI
5	33103-012	3	Screw-HHF
8	99-7420	1	Plug-Hole
9	117-2382	14	Plug-Plastic
10	104-7201	4	Nut-Flange, NI
11	136-0453	1	Cover-Display
12	132-4328	2	Strip-Adhesive
13	131-3796	1	Nut-Standoff

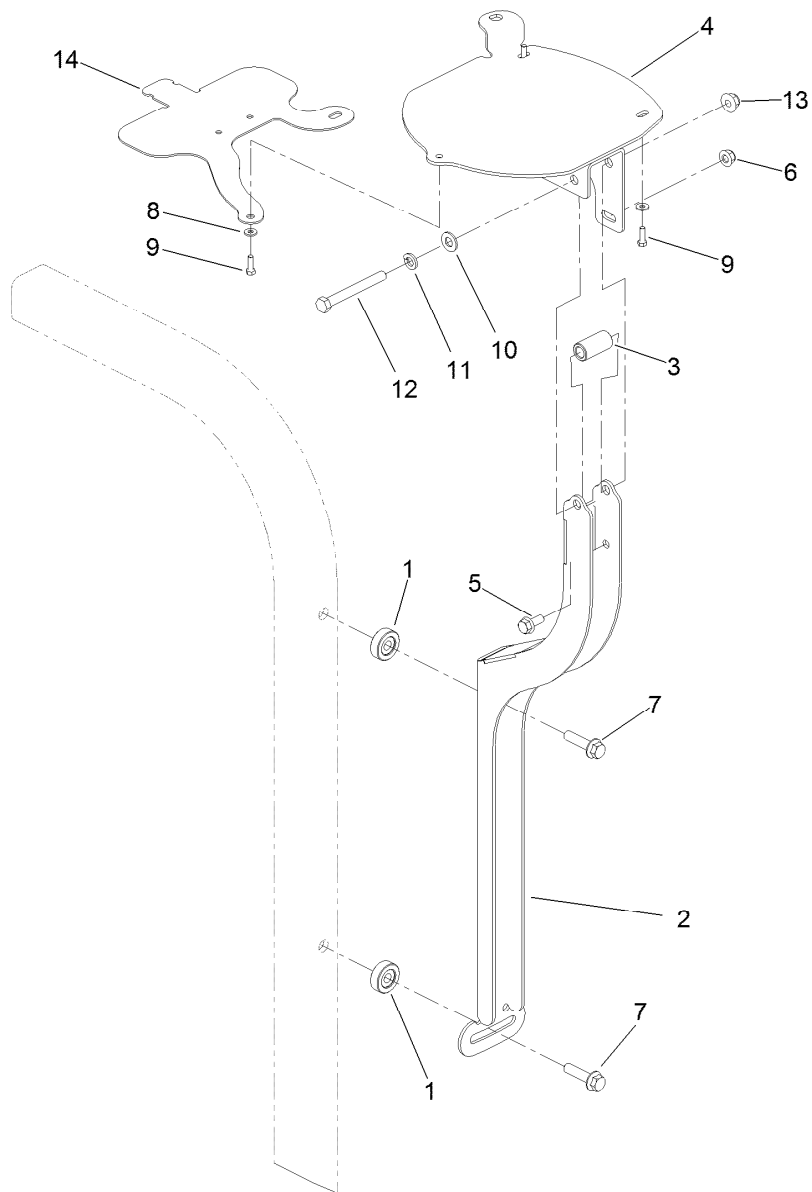

Receiver Mount and Antenna Bracket Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	133-2896	2	Spacer-Standoff
2	133-2891-03	1	Mount-Receiver
3	110-3726	1	Spacer
4	133-2895-03	1	Plate-Receiver
5	3234-47	1	Screw-HHF
6	104-8300	1	Nut-HF, NI
7	114-4681	2	Screw-HHF
8	3256-14	3	Washer-Flat
9	60-6910	3	Screw-HH
10	3256-24	1	Washer-Flat
11	3253-21	1	Washer-Lock
12	323-20	1	Screw-HH
13	104-8301	1	Nut-HF, NI
14	140-1388-03	1	Bracket-Mount, Antenna

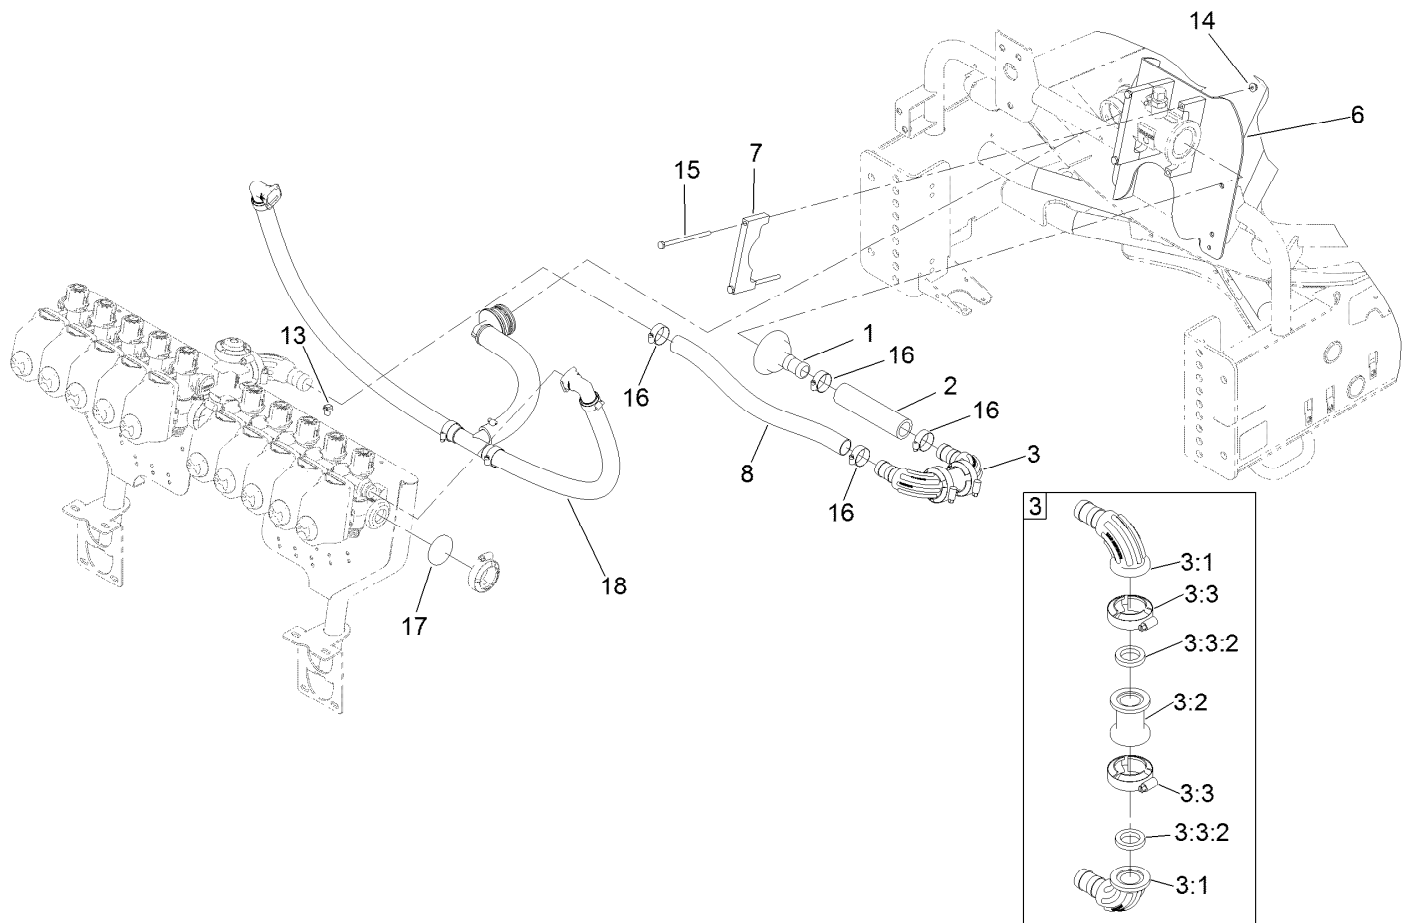


Flowmeter Mount and Hose Assembly

Ref.	Part Number	Qty.	Description
1	107-8704	1	Hosebarb
2	133-2774	1	Hose-Supply
3	138-0646	1	Manifold-Connection
3:1	131-0241	2	Fitting-Elbow, Sweep
3:2	127-9814	1	Fitting-Adapter
3:3	127-9829	2	Clamp/Gasket Kit
3:3:2	127-1145	1	Gasket-Flange
6	133-2818-03	1	Mount-Flowmeter
7	132-7605	4	Clamp-Flowmeter
8	132-4311	1	Hose-Agitation


Ref.	Part Number	Qty.	Description
13	32180-030	1	Clip-Tie
14	104-7201	4	Nut-Flange, NI
15	321-38	4	Screw-HH
16	2412-34	4	Clamp-Hose
17	127-9815	1	Fitting-Cap
18	136-0467	1	Hose Assembly
99	127-9811	1	Fitting-Cap, Female ●
99	131-5838	1	Shutoff Bypass Valve ASM ●
99:1	133-0398	1	Pin-Fork ●

● Not illustrated

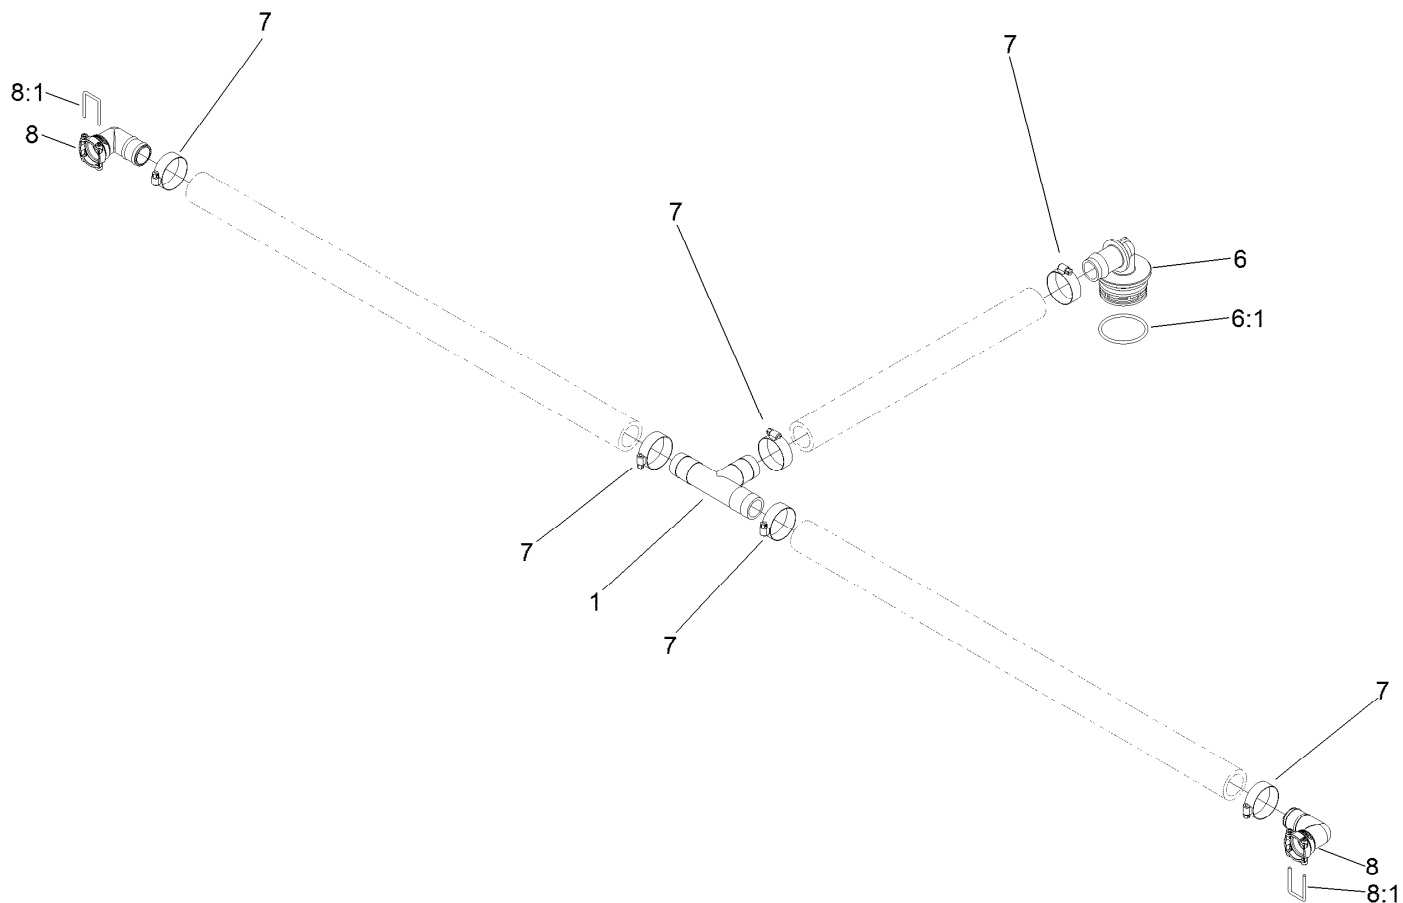

Hose Assembly No. 136-0467

Ref.	Part Number	Qty.	Description
1	117-7866	1	Tee-Hosebarb
6	106-4933	1	Hosebarb ASM
6:1	100-8637	1	O-Ring
7	2412-34	6	Clamp-Hose
8	131-0213	2	90 DEG Barb Fitting Kit
8:1	133-0398	1	Pin-Fork

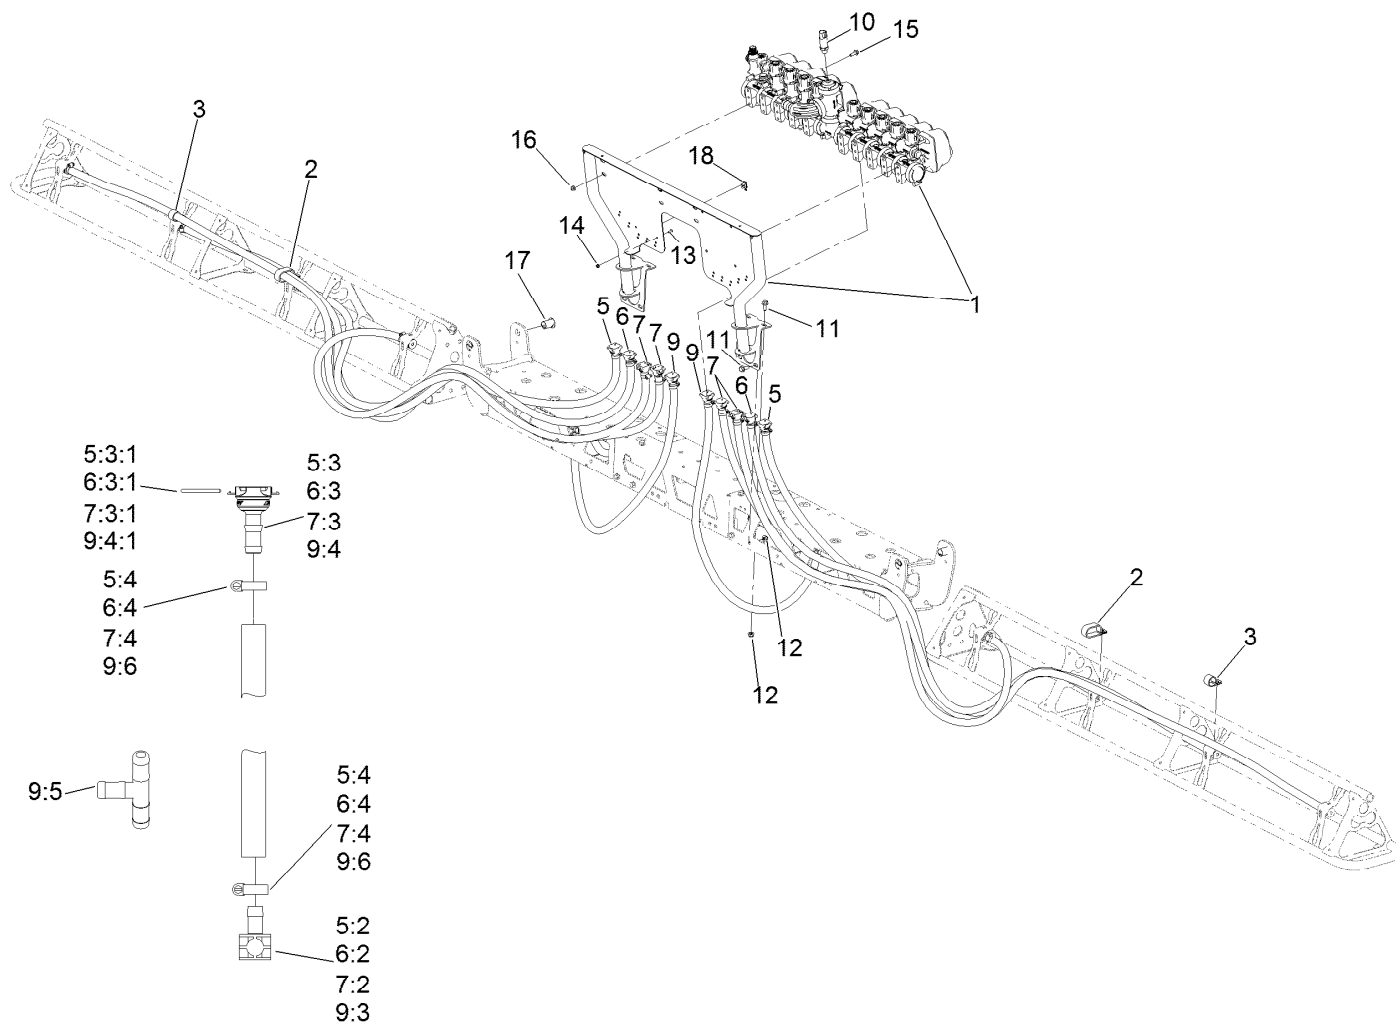


GPS Valve Mount and Hose Assembly

Ref.	Part Number	Qty.	Description
1		1	GPS Valve Mount ASM ●
2	2412-137	2	Clamp-R, Double
3	2412-39	2	Clamp-R
5	131-7288	2	Hose Nozzle ASM
5:2	130-7265	1	Shank-Nozzle, Single
5:3	139-3088	1	Kit-Fitting, Qc 1/2" STR Barb
5:3:1	133-0398	1	Pin-Fork
5:4	2412-36	2	Clamp-Hose
6	131-7289	2	Hose Nozzle ASM
6:2	130-7265	1	Shank-Nozzle, Single
6:3	139-3088	1	Kit-Fitting, Qc 1/2" STR Barb
6:3:1	133-0398	1	Pin-Fork
6:4	2412-36	2	Clamp-Hose
7	131-7290	4	Hose Nozzle ASM
7:2	130-7265	1	Shank-Nozzle, Single
7:3	139-3088	1	Kit-Fitting, Qc 1/2" STR Barb
7:3:1	133-0398	1	Pin-Fork


Ref.	Part Number	Qty.	Description
7:4	2412-36	2	Clamp-Hose
9	131-7292	2	Hose Nozzle ASM
9:3	130-7265	2	Shank-Nozzle, Single
9:4	139-3088	1	Kit-Fitting, Qc 1/2" STR Barb
9:4:1	133-0398	1	Pin-Fork
9:5	131-3736	1	Fitting-Tee, Barb
9:6	2412-36	6	Clamp-Hose
10	130-8202	1	Transducer-Pressure
11	3234-47	8	Screw-HHF
12	104-8300	8	Nut-HF, NI
13	60-6500	3	Screw-HH
14	140-3749	3	Nut-Lock Rohs
15	3234-4	2	Screw-HHF
16	104-7201	2	Nut-Flange, NI
17	100-8541	4	Bushing-A Arm
18	32180-161	3	Clip-Connector

● Not serviced separately

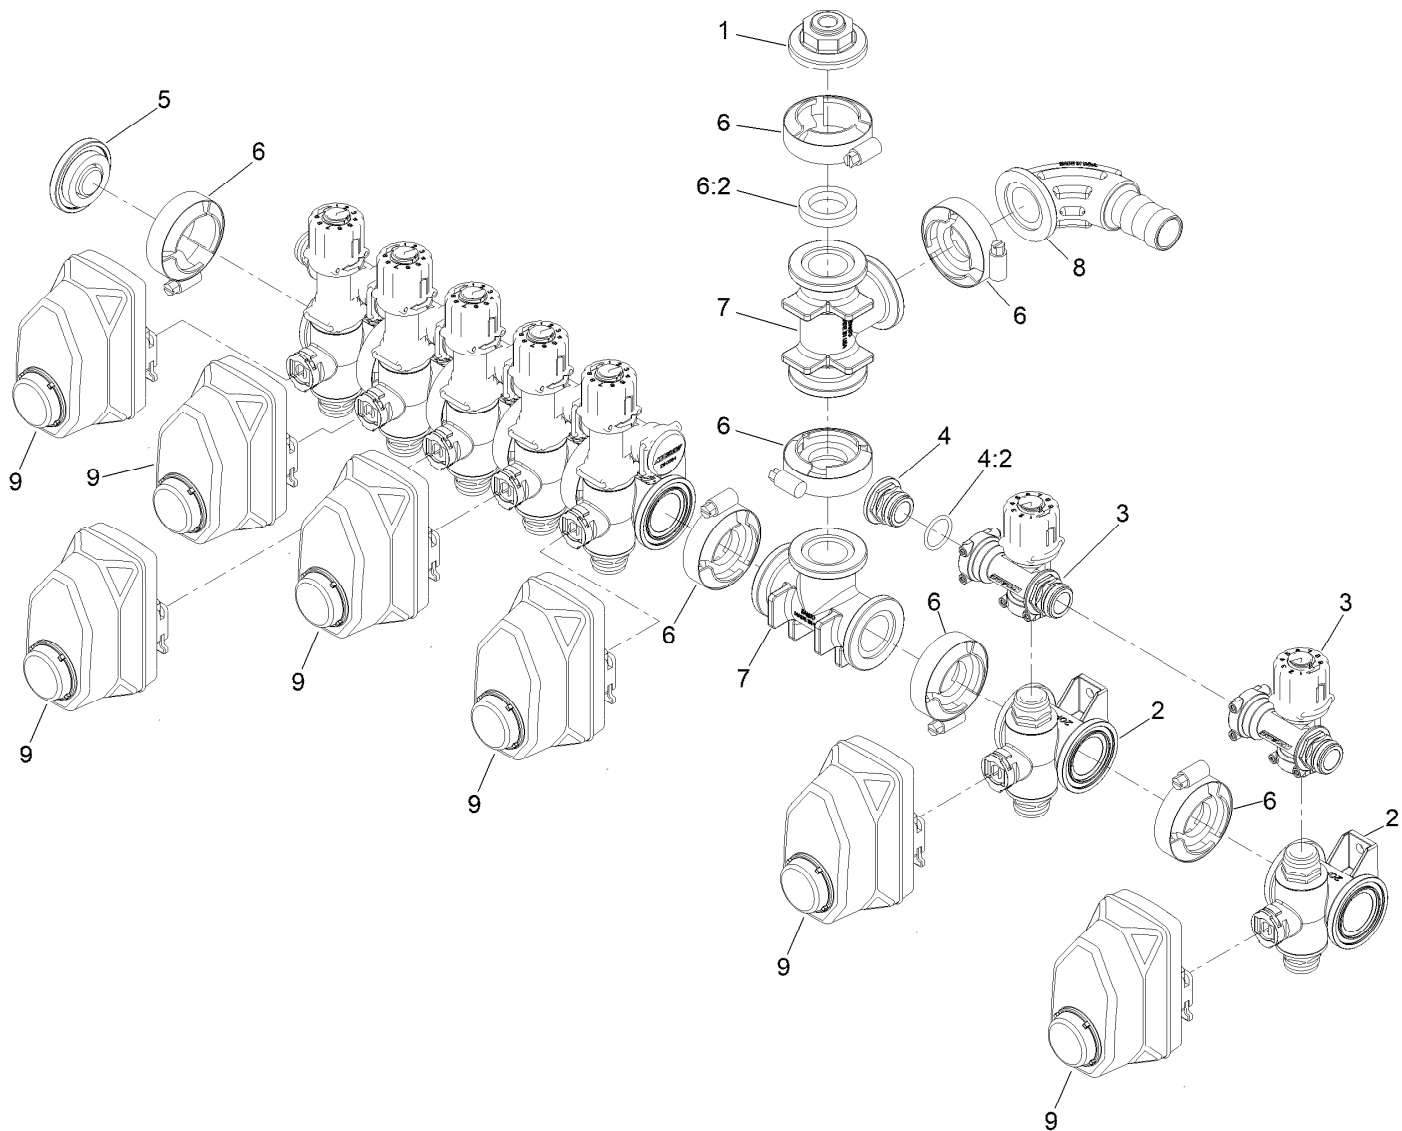

Section Valve Manifold Assembly

Ref.	Part Number	Qty.	Description
1	127-1185	1	Fitting-Cap, Port
2	127-9803	7	On/Off Manifold Valve Kit
3	127-9805	7	Bypass Valve ASM
4	127-9810	2	Male Cap Fitting Kit
4:2	127-1187	1	O-Ring, Endcap
5	127-9815	1	Fitting-Cap
6	127-9829	11	Clamp/Gasket Kit
6:2	127-1145	1	Gasket-Flange
7	127-9834	2	Fitting-Tee
8	131-0241	1	Fitting-Elbow, Sweep
9	140-7377	7	Kit-Actuator Pi, On/Off

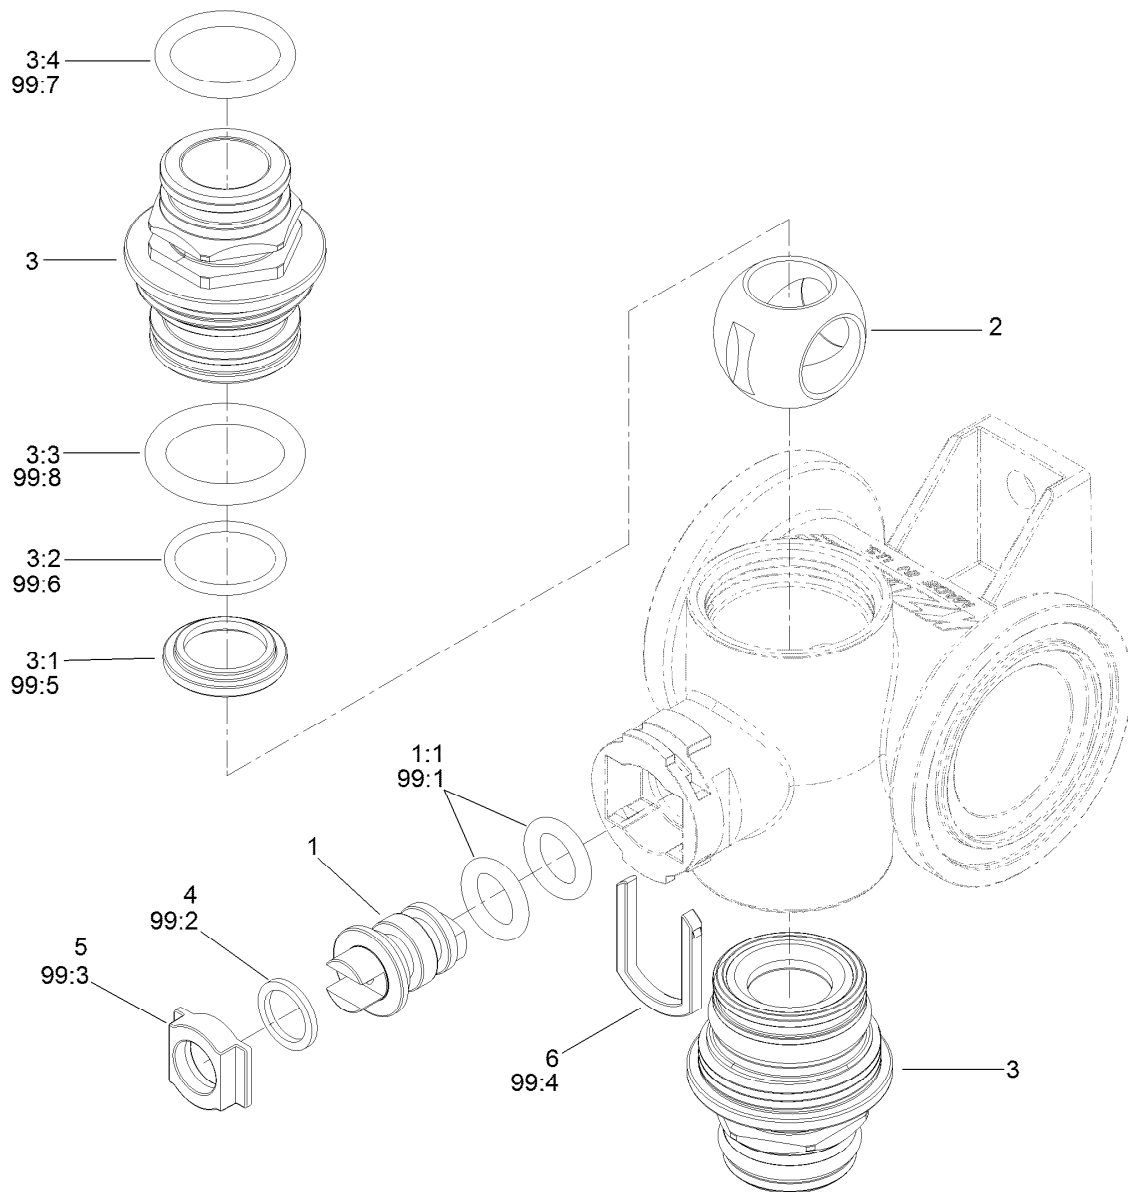


On/Off Manifold Valve Kit No. 127-9803

Ref.	Part Number	Qty.	Description
1	130-8248	1	Valve Stem Kit
1:1	127-1197	2	O-Ring-Stem
2	127-1194	1	Ball-Valve, 3Way
3	130-7317	2	Endcap Kit
3:1	127-1192	1	Seat-Ball
3:2	127-1188	1	O-Ring, Seat (Ball)
3:3	127-1189	1	O-Ring, Endcap
3:4	127-1187	1	O-Ring, Endcap
4	127-1196	1	Washer-Stem, Valve
5	127-1195	1	Seat-Stem, Valve


Ref.	Part Number	Qty.	Description
6	127-1190	1	Fork-Stem, Valve
99	130-7304	1	Valve Repair Kit ●
99:1	127-1197	2	O-Ring-Stem
99:2	127-1196	2	Washer-Stem, Valve
99:3	127-1195	1	Seat-Stem, Valve
99:4	127-1190	1	Fork-Stem, Valve
99:5	127-1192	2	Seat-Ball
99:6	127-1188	2	O-Ring, Seat (Ball)
99:7	127-1187	2	O-Ring, Endcap
99:8	127-1189	2	O-Ring, Endcap

● Not illustrated

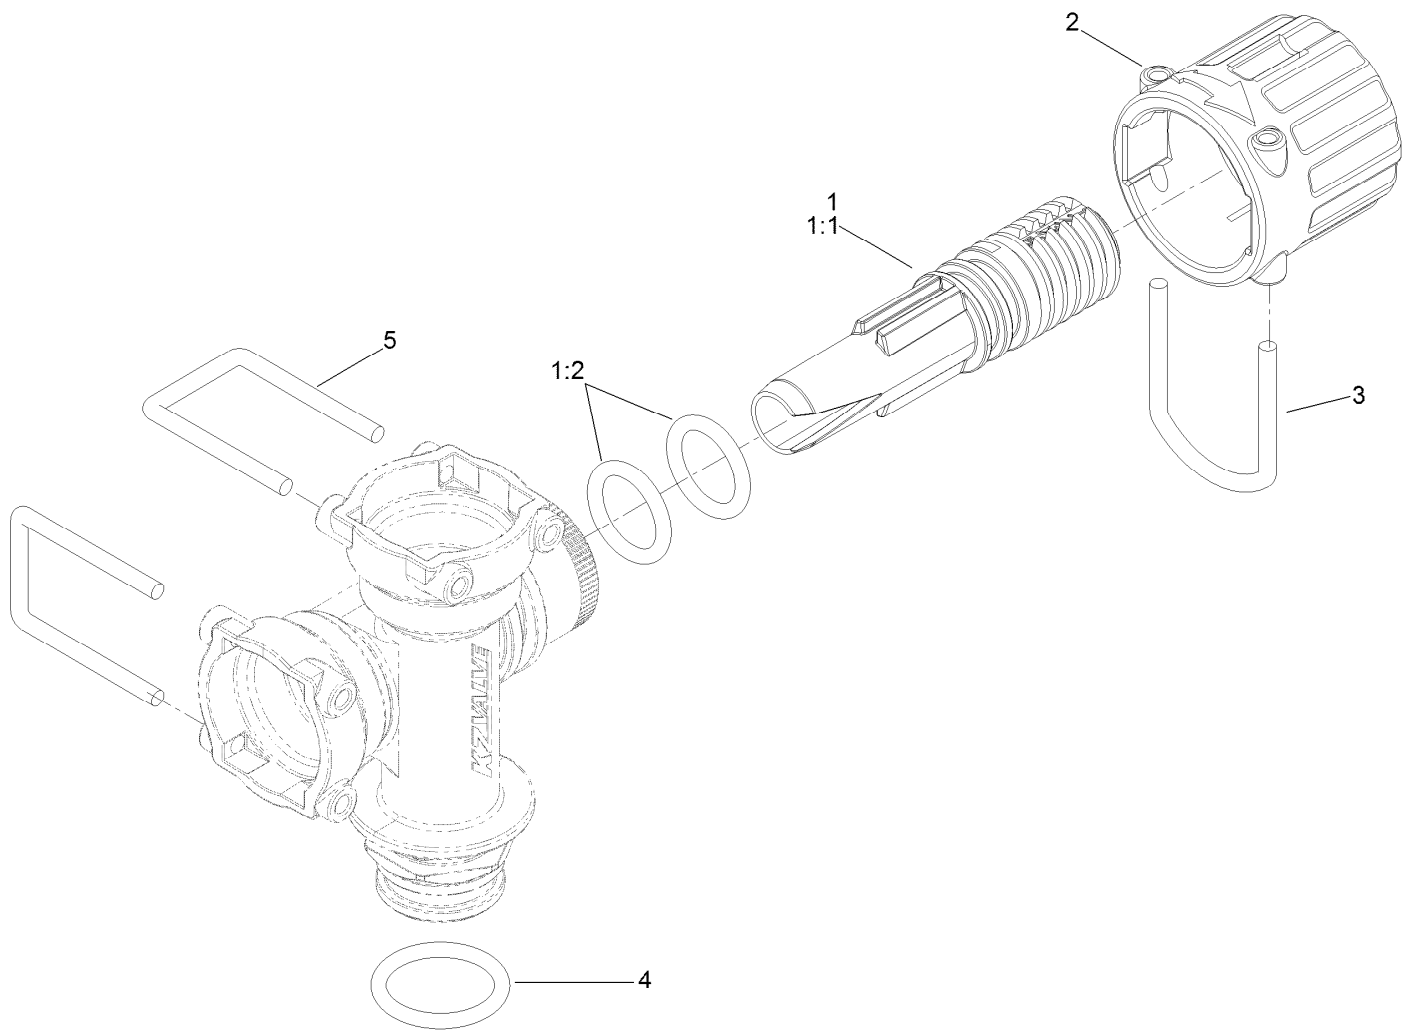


Bypass Valve Assembly No. 127-9805

Ref.	Part Number	Qty.	Description
1	131-0298	1	Bypass Needle Kit
1:1	127-1182	1	Needle-Bypass
1:2	127-1181	2	O-ring-Bypass Needle
2	127-1180	1	Knob-Bypass
3	127-1179	1	Fork-Bypass Knob
4	127-1187	1	O-Ring, Endcap
5	133-0398	2	Pin-Fork

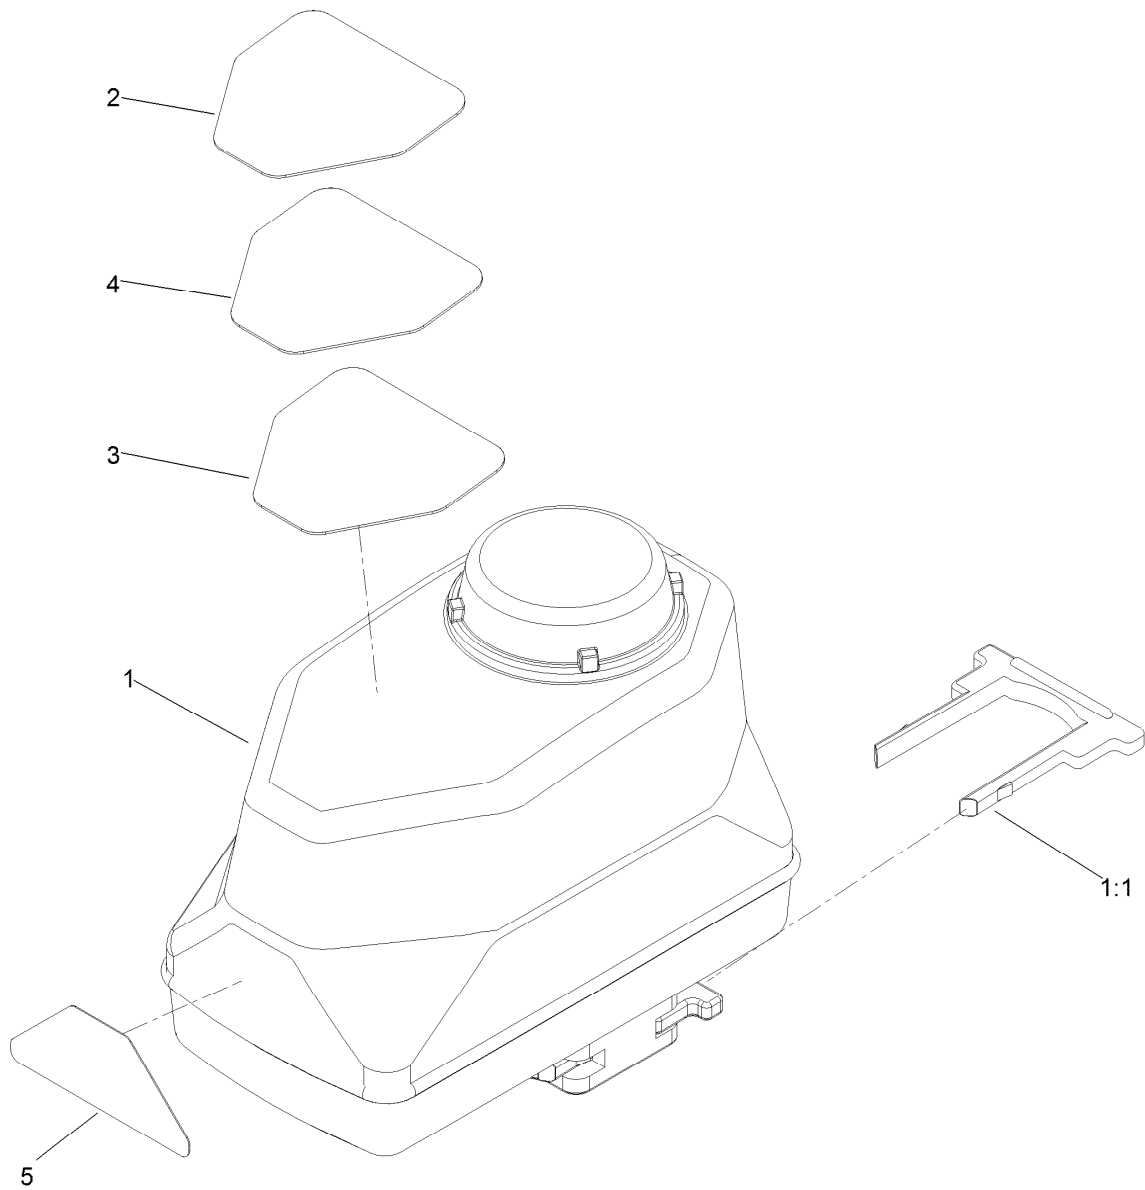


Actuator On/Off Assembly No. 140-7377

Ref.	Part Number	Qty.	Description
1	140-7315	1	Actuator - On/Off
1:1	130-7301	1	Hairpin-Actuator
2	127-6979	1	Decal-Valve, Agitation
3	127-6981	1	Decal-Valve, On/Off
4	127-6982	1	Decal-Valve, Master Boom
5	127-6976	1	Decal-Valve, Bypass Adjust

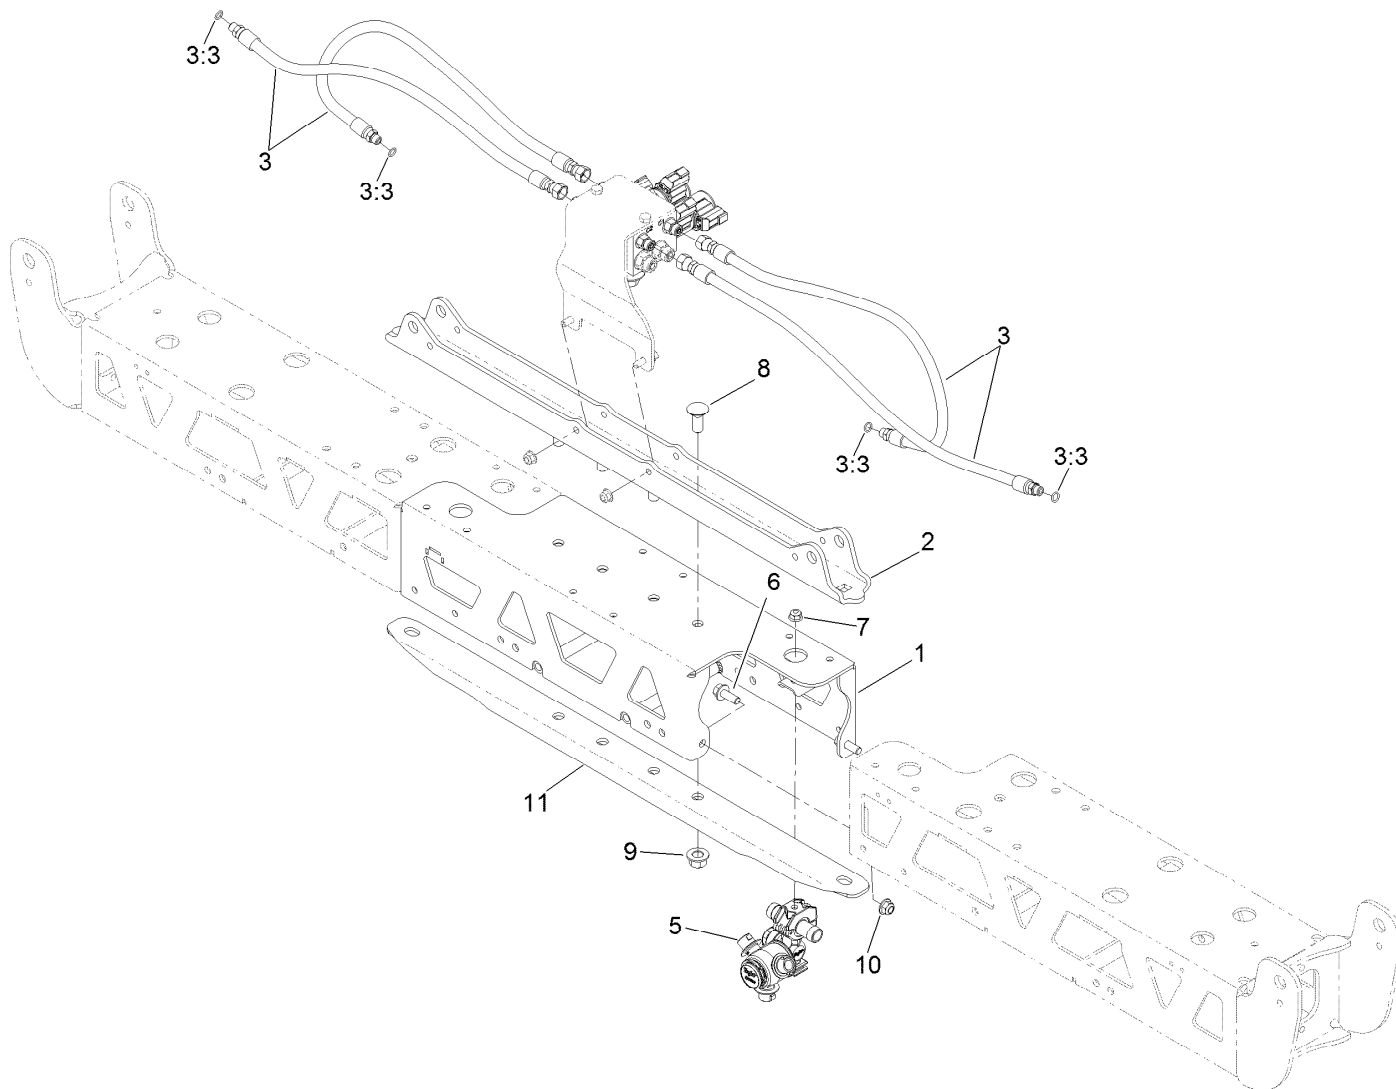

Center Boom Assembly


Ref.	Part Number	Qty.	Description
1	133-0412-03	1	Center-Center, Boom
2	131-0275-03	1	Plate-Mount
3	131-0276	4	Hose ASM
3:3	237-78	1	O-Ring
5	108-3727	1	Double Turret Body ASM
6	3234-42	4	Screw-HHF
7	104-8300	1	Nut-HF, NI
8	110-5067	4	Screw-CARR
9	99-5107	4	Nut-Lock
10	104-8301	4	Nut-HF, NI
11	131-0285-03	1	Stiffener-Channel

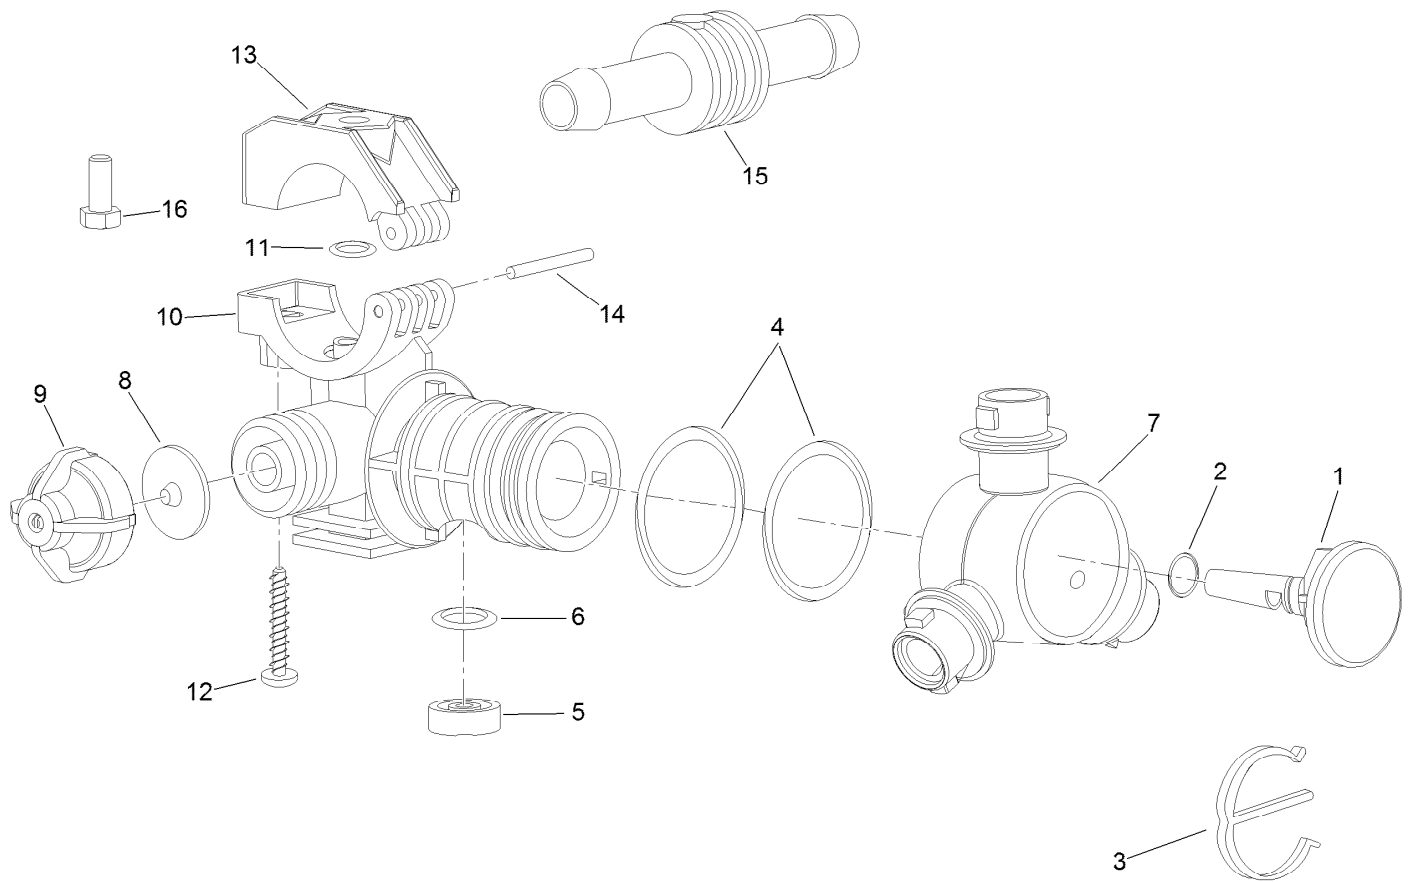

Double Turret Body Assembly No. 108-3727

Ref.	Part Number	Qty.	Description
1	95-9200	1	Plug
2	95-9198	1	O-Ring
3	95-9197	1	E-Clip
4	95-9199	2	O-Ring
5	108-3264	1	Seal-Viton
6	108-3265	1	O-Ring-Viton
7	95-9196	1	Turret
8	41003	1	Diaphragm

Ref.	Part Number	Qty.	Description
9	95-9193	1	Cap-Diaphragm
10	95-9192	1	Body-Split Eyelet
11	95-9191	1	O-Ring
12	99-0811	1	Screw-Clamp
13	99-0812	1	Clamp-Upper
14	99-0814	1	Pin-Pivot
15	95-9202	1	Shank-Hose
16	322-3	1	Screw-HH

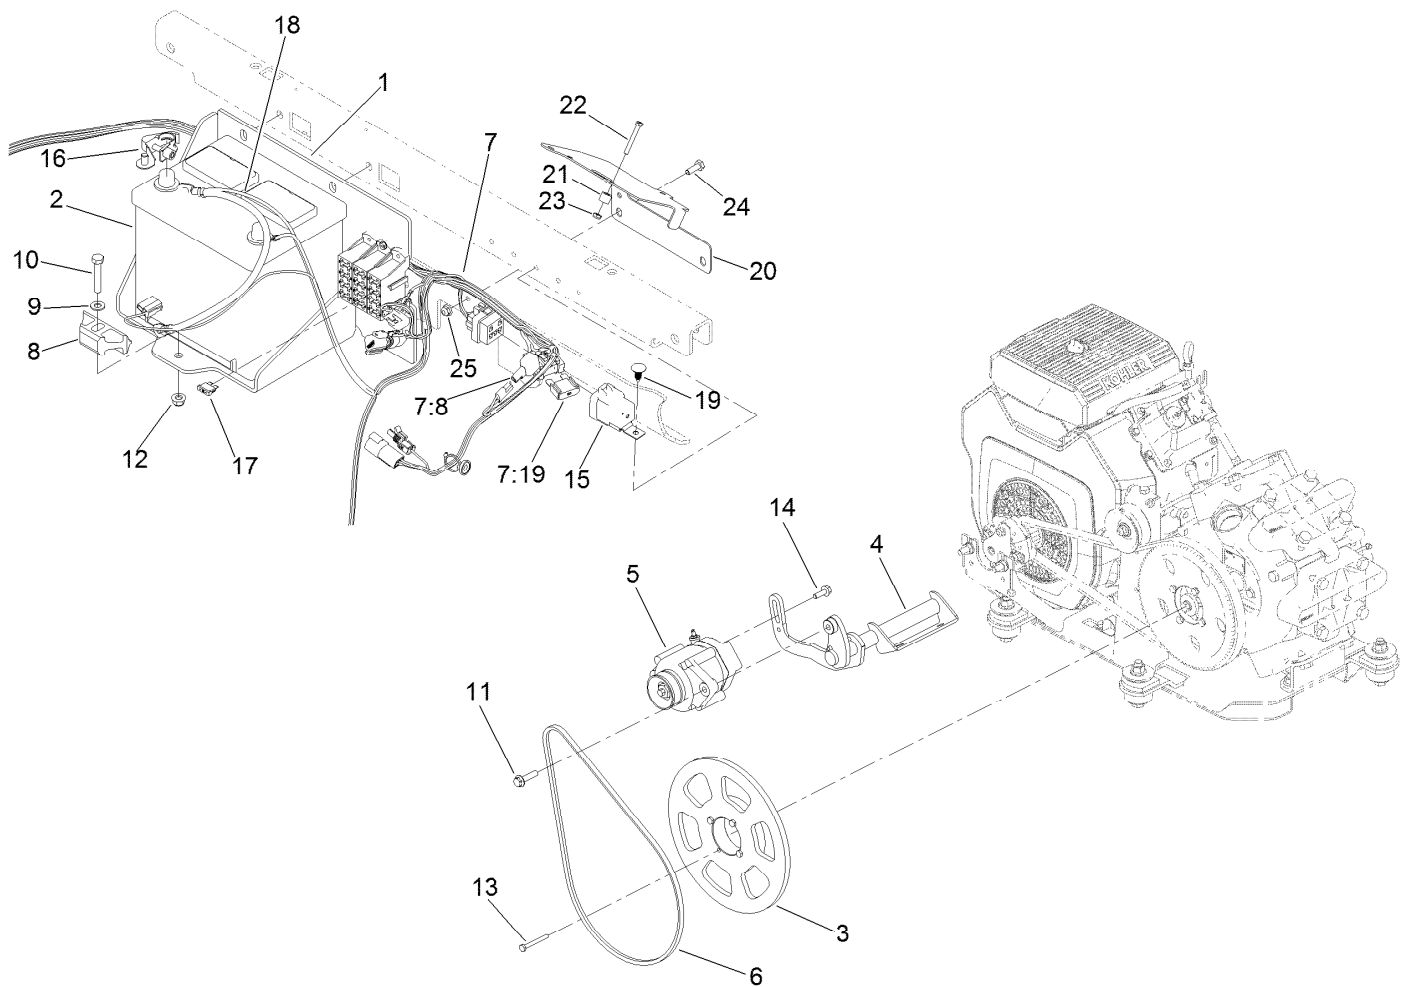

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	136-2264-03	1	Bracket-Battery
2	106-5187	1	Battery, 525 CCA W/O Electrolyte
3	133-2804	1	Pulley
4	136-0483-03	1	Mount-Alternator
5	133-2851	1	Alternator
6	610040	1	V-Belt
7	122-0794	1	Harness-Wire
7:8	100-4918	1	Diode
7:19	94-8002	1	Fuse-Blade, 50 Amp
8	138-6335	1	Retainer-Battery
9	3256-23	1	Washer-Plain
10	322-9	1	Screw-HH
11	3234-18	1	Screw-HHF

Ref.	Part Number	Qty.	Description
12	104-8300	1	Nut-HF, NI
13	100-5858	4	Screw-HH
14	33104-025	1	Screw-HHF
15	99-7430	1	Relay-Mini
16	119-9674	1	Terminal-Clamp, Quick
17	109355	1	Fuse-Blade, 15 Amp
18	122-0838	1	Cable-Battery, Positive
19	117-2382	1	Plug-Plastic
20	140-1394-03	1	Bracket-Modem
21	138-9250	2	Spacer
22	32105-5	2	Screw
23	138-0719	2	Nut-HF
24	321-4	1	Screw-HH
25	104-7201	1	Nut-Flange, NI



Count on it.