



Four Wheel Drive Kit

for Groundsmaster® 580D

Model No. 30598—200000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Axle Assembly	3	Control Block Assembly No. 100-3921	5
Hydraulics, Guard, and Panels Assembly	4		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

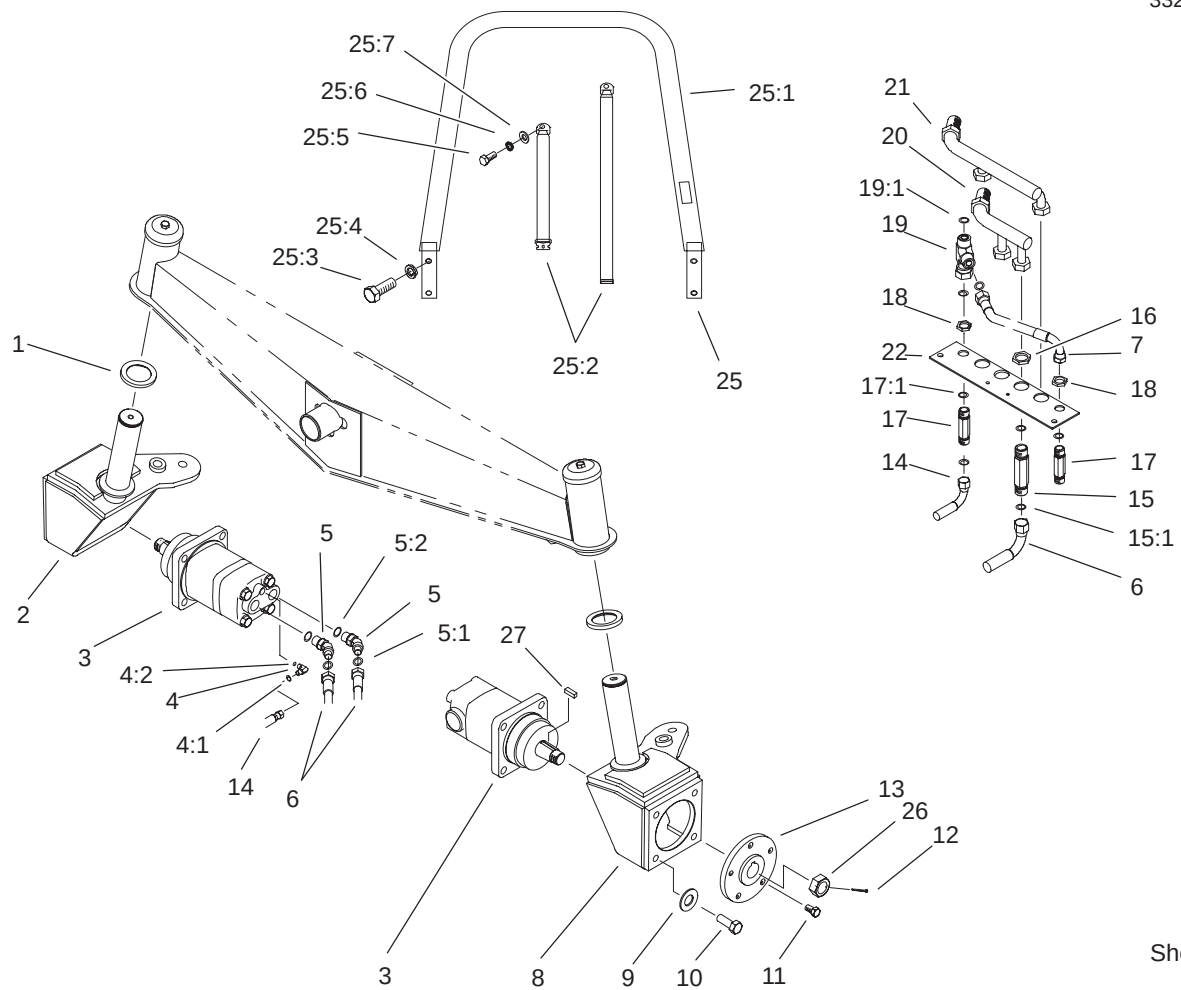


Sheet No.:2

T-3582

Axle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-2508	2	Washer-Thrust	18	340-70	2	Locknut-Bulkhead
2	99-8899-01	1	LH Motor	19	340-115	1	Fitting-Tee
			Housing ASM	19:1	237-22	2	O-Ring
3	100-3908	2	Motor-Hydraulic	20	100-2543	1	Inner Tube ASM
*3:1	100-6167	1	Kit-Seal	21	100-2544	1	Outer Tube ASM
4	340-97	2	Fitting-90°	22	100-3920-01	1	Bracket-Bulkhead
4:1	237-22	1	O-Ring	25	104-1265	1	Rops
4:2	237-78	1	O-Ring	25:1	104-1277	1	Rops
5	340-14	4	Fitting-Hyd., 45°	25:2	104-1276	1	Belt-Seat
5:1	237-65	1	O-Ring	25:3	328-24	4	Screw-HH
5:2	237-80	1	O-Ring	25:4	3253-9	4	Washer-Lock/Sp
6	100-3910	4	Hose	25:5	3212-4	2	Screw-HH
7	100-3911	1	Hose	25:6	3253-6	2	Washer-Lock/Sp
8	100-1531-01	1	RH Housing	25:7	3256-25	2	Washer-Flat
			ASM-Motor	26	11-5800	2	Nut-Slotted
9	3253-7	8	Washer-Lock/Sp	27	11-5790	2	Key
10	325-5	8	Screw-HH				
11	83-2720	10	Lug-Bolt				
12	3272-13	2	Pin-Cotter				
13	100-8008-03	2	Wheel Hub				
14	100-3912	2	Hose				
15	100-8001	4	Fitting-Bulkhead				
15:1	237-65	2	O-Ring				
16	340-74	4	Locknut-Bulkhead				
17	100-8000	2	Fitting-Bulkhead				
17:1	237-22	2	O-Ring				

* Not illustrated

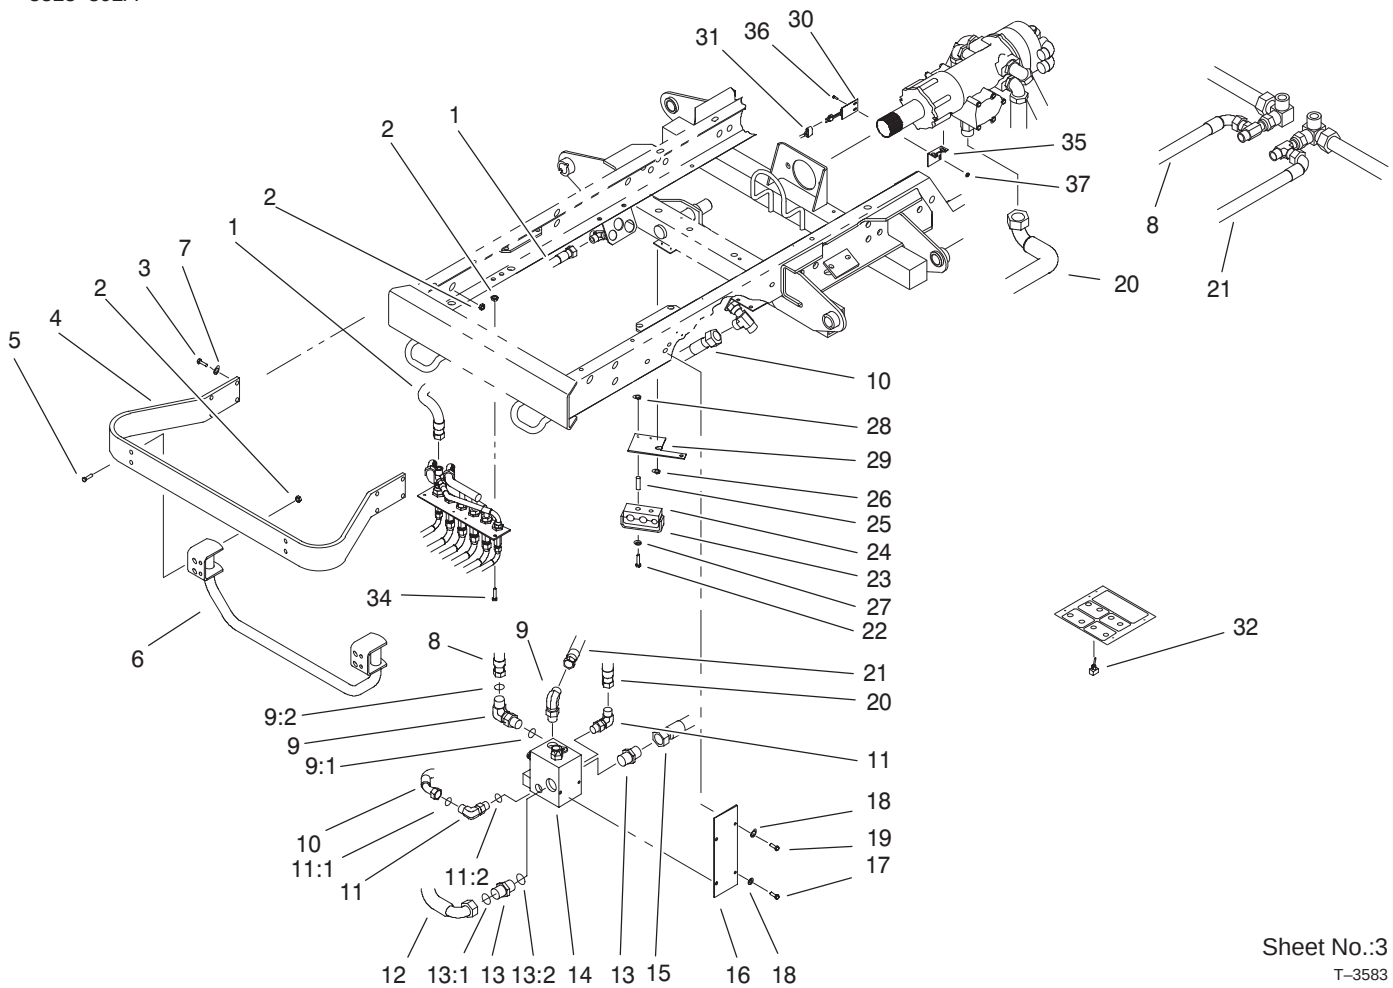


Sheet No.:3

T-3583

Hydraulics, Guard, and Panels Assembly

Ref. No.	Part No.	Qty.	Description
1	100-3915	1	Hose
2	3296-39	14	Nut-Lock, NI
3	323-7	8	Screw-HH
4	100-4166-03	1	Bracket-Bumper
5	3231-25	4	Screw-CARR
6	92-6050-03	1	Guard ASM
7	3256-24	8	Washer-Flat
8	100-3916	1	Hose
9	340-98	2	Fitting-Hyd, 90°
9:1	237-79	1	O-Ring
9:2	237-30	1	O-Ring
10	76-9570	1	Hose ASM
11	340-77	2	Fitting-Hyd., 90°
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
12	100-3914	1	Hose
13	340-9	2	Fitting-Straight
13:1	237-58	1	O-Ring
13:2	237-81	1	O-Ring
14	100-3921	1	Block-Control, 4wd
15	100-3913	1	Hose
16	100-2546-01	1	Bracket-Block
17	322-2	2	Screw-HH
18	3253-4	4	Washer
19	32104-32	2	Screw-HH
20	100-3919	1	Hose

Ref. No.	Part No.	Qty.	Description
21	100-3917	1	Hose
22	321-15	2	Screw-HH
23	94-6772-01	1	Retainer
24	74-2710	2	Clamp-Hose
25	74-2730	2	Tube
26	32128-21	2	Nut-HF
27	3256-22	2	Washer-Flat
28	32128-32	2	Nut-HHF
29	100-2545-01	1	Bracket - Hose
30	100-6175	1	Switch
31	100-8044	1	Harness-Wire
32	100-4198	1	Switch-Toggle
*33	3290-379	8	Tie-Cable
34	323-6	2	Screw-HH
35	100-6173-03	1	Bracket-Switch
36	32144-1	2	Screw-Tapite
37	32127-11	2	Nut-Lock

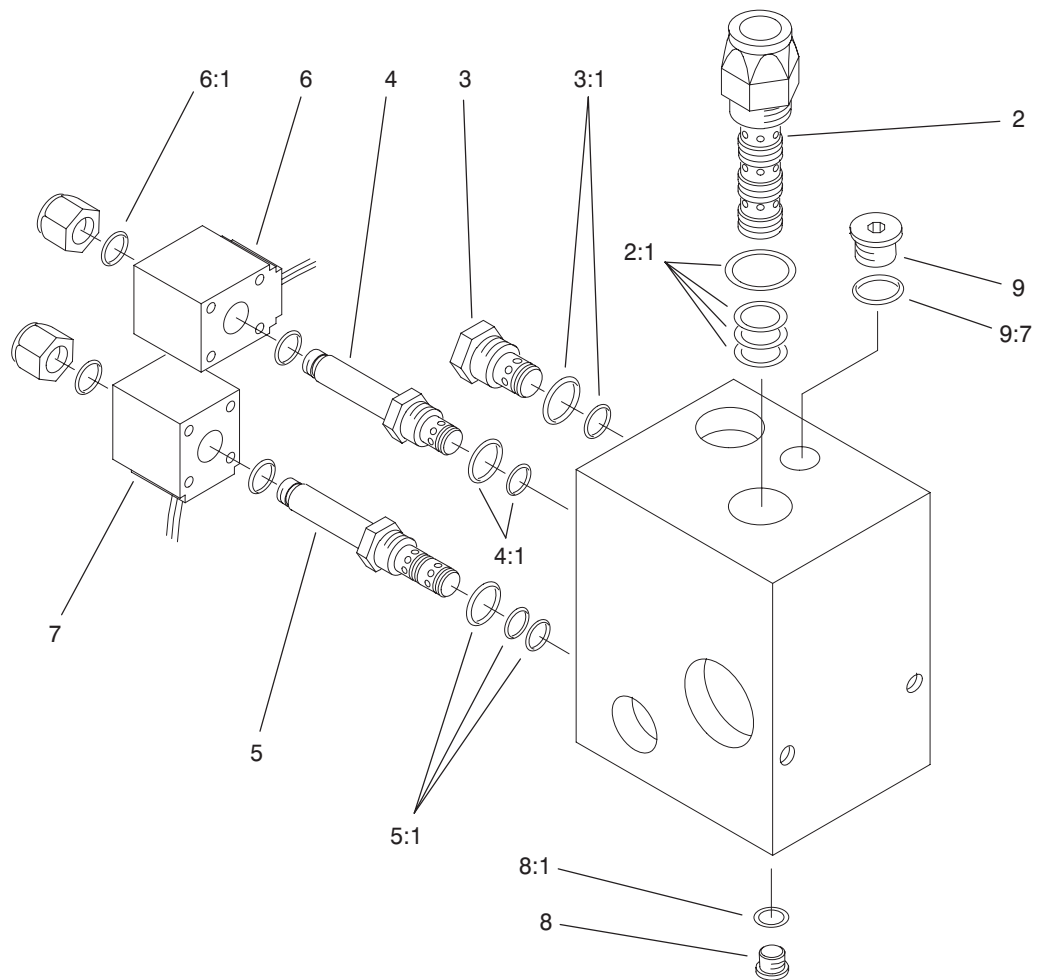

Sheet No.:A1

Control Block Assembly No. 100-3921

Ref. No.	Part No.	Qty.	Description
2	100-6169	1	Valve-Solenoid
2:1	100-6156	1	Kit-Seal
3	95-6014	1	Valve-Check, 5 Psi
3:1	75-2080	1	Kit-Seal
4	92-3071	1	Solenoid
4:1	69-4260	1	Kit-Seal
5	92-3047	1	Solenoid
5:1	92-3049	1	Kit-Seal
6	83-2010	1	Coil - Valve
6:1	94-5438	1	Seal-Solenoid
7	100-3389	1	Coil ASM
8	353-991	2	Plug-Hex, Hollow
8:1	237-156	1	O-Ring
9	353-988	1	Plug-Hex, Hollow
9:7	237-79	1	O-ring

Ref. No.	Part No.	Qty.	Description

* Not illustrated

Maintenance Record

[illegible]

