

LAWN-BOY®

48cm Lawnmower

Model No. 10924—210000001 and Up

Model No. 10929—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Deck, Door and Ramp Assembly	3	Gear Case Assembly	
Engine Installation and Blade Assembly	4	No. 104–7593 (Only on: 10929)	9
Height of Cut and Wheel Assembly	5	Shroud, Crankcase and	
Handle Assembly	6	Carburetor Installation Assembly	10
Rear Bagger Assembly	7	Short Block Assembly No. 93–4349	11
Clutch Assembly	8	Carburetor Assembly No. 100–9541	12
		Muffler and Brake Assembly	13

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

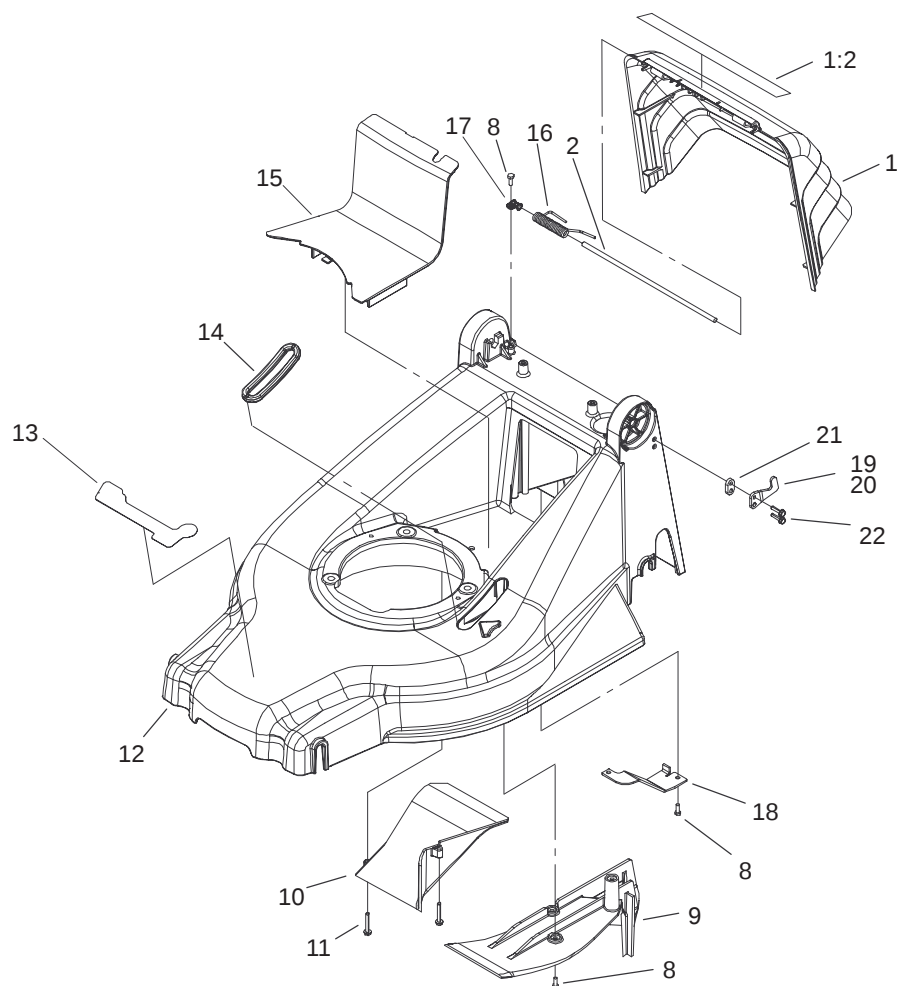

Sheet No.:2

Deck, Door and Ramp Assembly

Ref. No.	Part No.	Qty.	Description
1	100-9115	1	Door ASM
1:2	93-4105	1	Decal – Danger
2	100-1509	1	Rod-Pivot, Door
8	32144-1	7	Screw-Taptite
9	99-6486	1	Kicker-Cover, Rear
10	100-1506	1	Ramp-Discharge
11	100-4352	2	Screw-HWH
12	104-7580	1	Deck
13	100-4388	1	Decal-Deck
14	100-3932	1	Boot-HOC
15	99-6479	1	Belt Cover
16	104-7594	1	Spring-Torsion, Door
17	98-2256	2	Clamp
18	100-9123-03	1	Bracket – Deck
19	104-7557	1	Hook-Left
20	104-7558	1	Hook-Right
21	104-7556	2	Spacer
22	100-4351	4	Screw-HWH

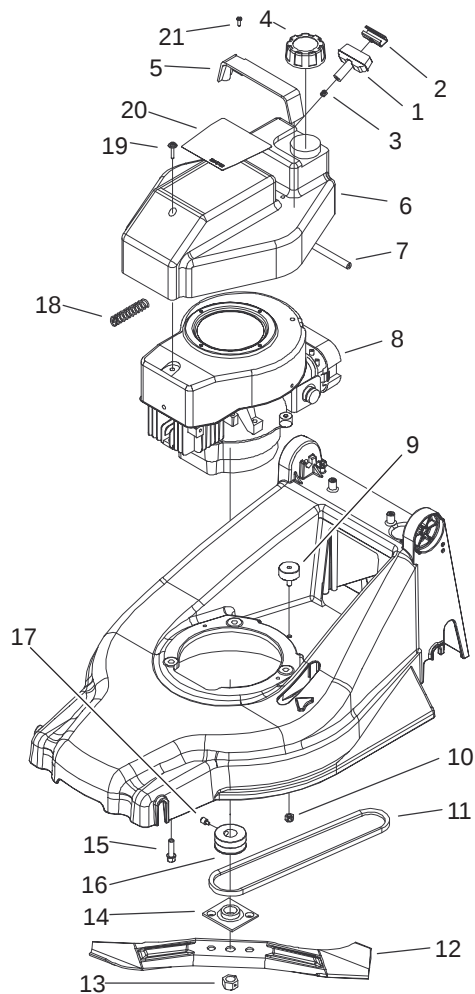


Sheet No.:3

Engine Installation and Blade Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	612825	1	Handle-Start				
2	612824	1	Clip-Starter				
3	92-1701	1	Stop-Rope				
4	55-3578	1	Gas Cap Assembly				
5	93-1200	1	Strap - Tank				
6	92-6396	1	Tank/Shroud				
7	68-3632	1	Fuel Line				
☆8		1	Engine ASM				
9	92-8808	1	Stud-Bearing, Ball (only on: 10929)				
10	3296-29	1	Nut-Lock (only on: 10929)				
11	100-9140	1	V-Belt (only on: 10929)				
12	612079	1	Blade				
13	603164	1	Nut-Blade				
14	677525	1	Plate & Collar ASM				
15	95-1727	3	Screw-Taptite				
16	92-6542	1	Pulley (only on: 10929)				
17	104-0214	1	Screw-Set (only on: 10929)				
18	93-4306	1	Spring-Compression				
19	93-4302	3	Screw				
20	100-8782	1	Decal-Recoil				
21	32104-118	2	Screw-PPH				


☆ Not serviced

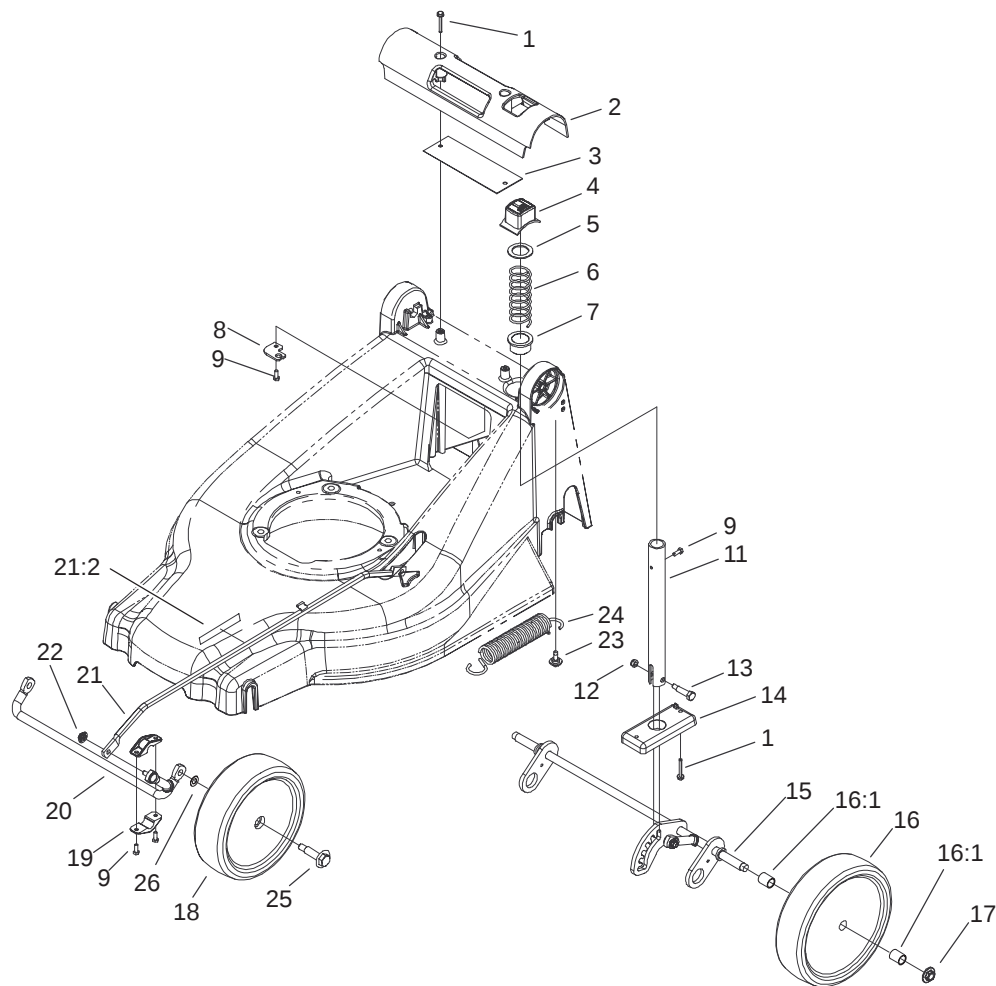

Sheet No.:4

Height of Cut and Wheel Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-4352	4	Screw-HWH	18	92-9591	2	Wheel ASM
2	99-6487	1	Handle-Deck	19	100-1500	4	Mount-Axle, Front
3	100-4383-03	1	Cover-Handle	20	104-7562	1	Front Axle ASM
4	100-9138	1	Button-HOC	21	100-9116	1	Rod ASM
5	88-7540	1	Washer - Backup	21:2	100-4355	1	Decal-HOC
6	99-6481	1	Spring-Compression, HOC	22	100-3939	2	Palnut
7	99-6483	1	Bushing-HOC	23	92-9698	1	Screw-Shoulder
8	100-1525	1	Bracket-Cable, Traction (only on: 10929)	24	100-4384	1	Spring-Extension, HOC
9	32144-1	6	Screw-Taptite (only on: 10929)	25	614650	2	Bolt-Shoulder
9	32144-1	5	Screw-Taptite (only on: 10924)	26	40-1940	2	Washer
11	99-6458	1	Pipe - HOC				
12	3296-73	1	Nut-Lock, NI				
13	99-6459	1	Bolt-Shoulder				
14	99-6460	1	Plate-Support, HOC				
15	99-6478	1	Rear Axle ASM				
16	92-9590	2	Wheel ASM (only on: 10929)				
16	92-9592	2	Wheel ASM (only on: 10924)				
16:1	27-6250	2	Bushing				
17	100-4370	2	Nut-Lock, Flanged				

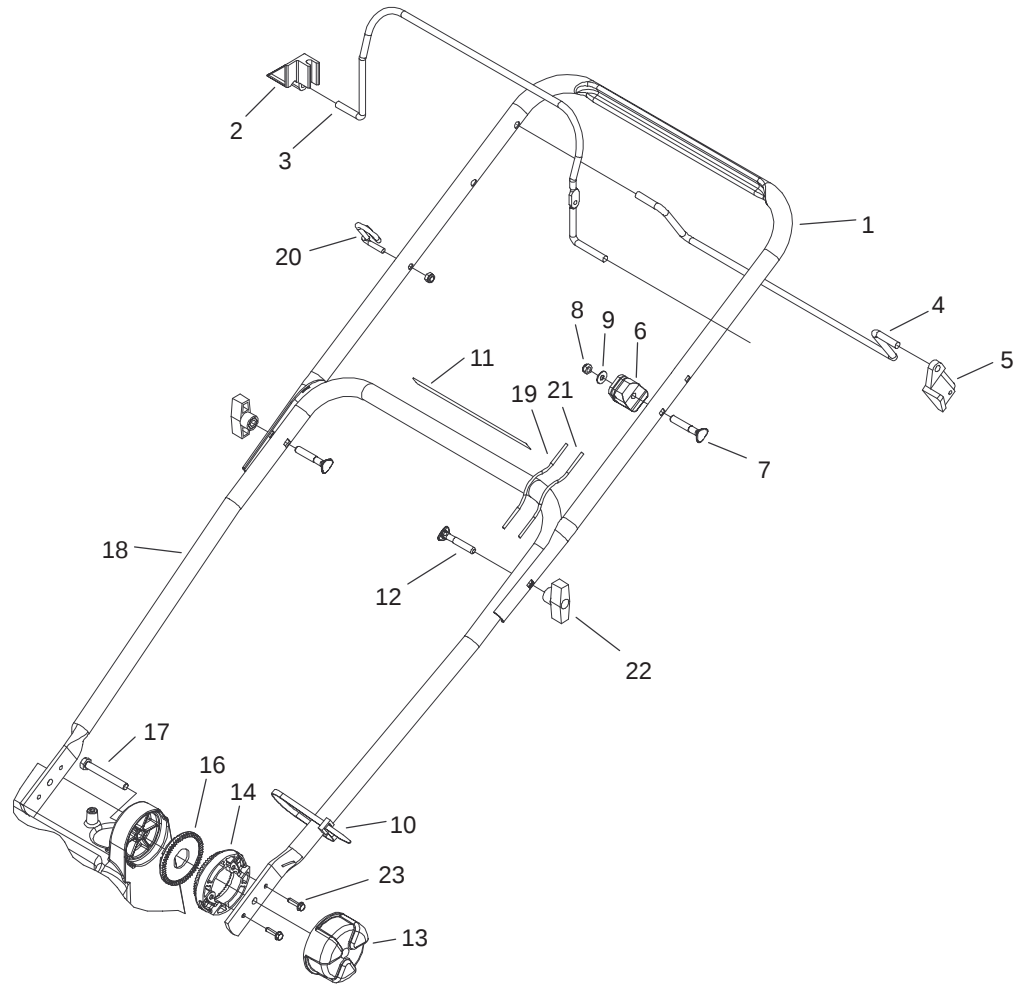


Sheet No.:5

Handle Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1569-05	1	Handle-Upper
2	94-6097	1	Stop
3	99-1570-03	1	Bail-Brake
4	99-1571-03	1	Bail-Traction
5	92-5412	1	Stop-Pivot
6	94-6096	1	Anchor - Cable
7	92-2269	1	Screw-Handle
8	3296-73	2	Nut-Lock, NI
9	3256-1	1	Washer-Flat
10	3290-378	1	Tie-Cable
11	98-3248	1	Decal - Operation
12	92-2260	2	Screw-Handle
13	100-4396	2	Knob-Adjusting, Handle
14	104-7553-03	2	Disk-Adjusting, Handle
16	100-1517	2	Disk-Holding, Handle
17	60-6690	2	Capscrew
18	100-9119-05	1	Handle-Lower
19	100-4393	1	Cable-Brake
20	95-4457	1	Guide - Rope
21	100-4394	1	Cable-Traction
			(only on: 10929)

Ref. No.	Part No.	Qty.	Description
22	98-7134	2	Knob-Handle
23	100-4351	4	Screw-HWH

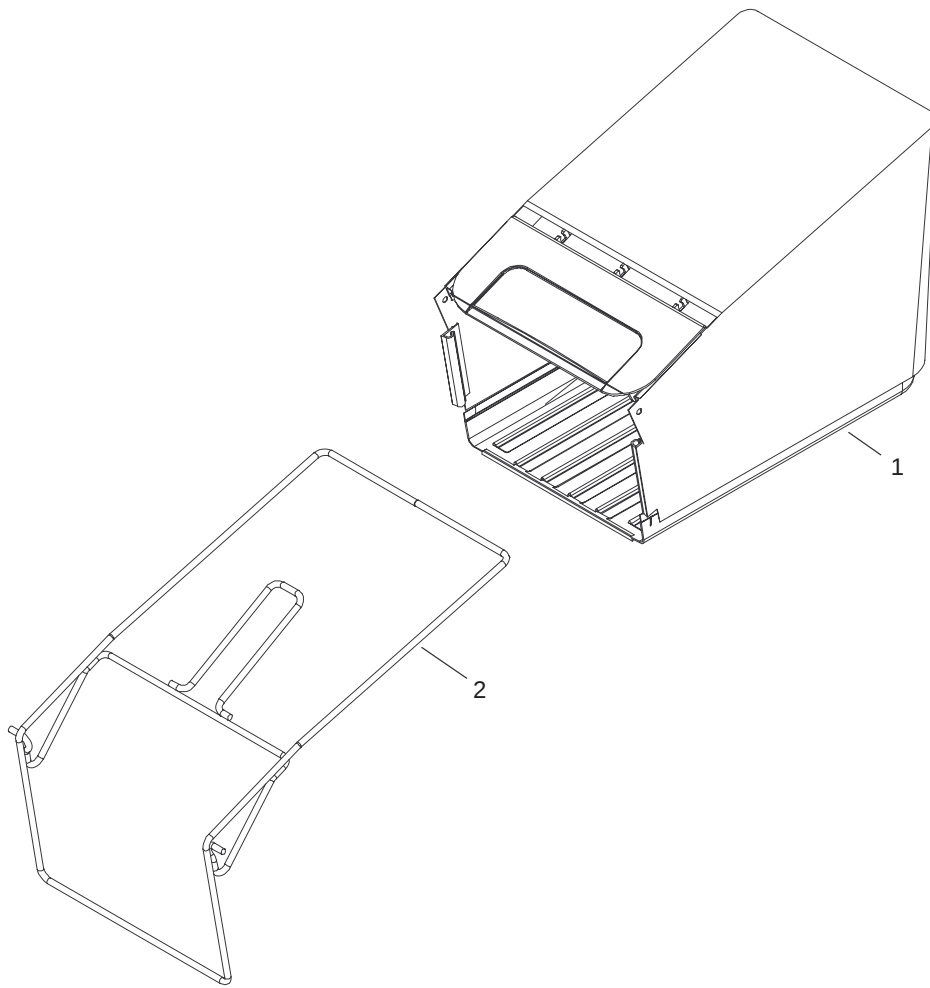


Sheet No.:6

Rear Bagger Assembly

Ref. No.	Part No.	Qty.	Description
1	104-7583	1	Grass Bag ASM
2	104-7560-03	1	Bag Frame ASM

Ref. No.	Part No.	Qty.	Description

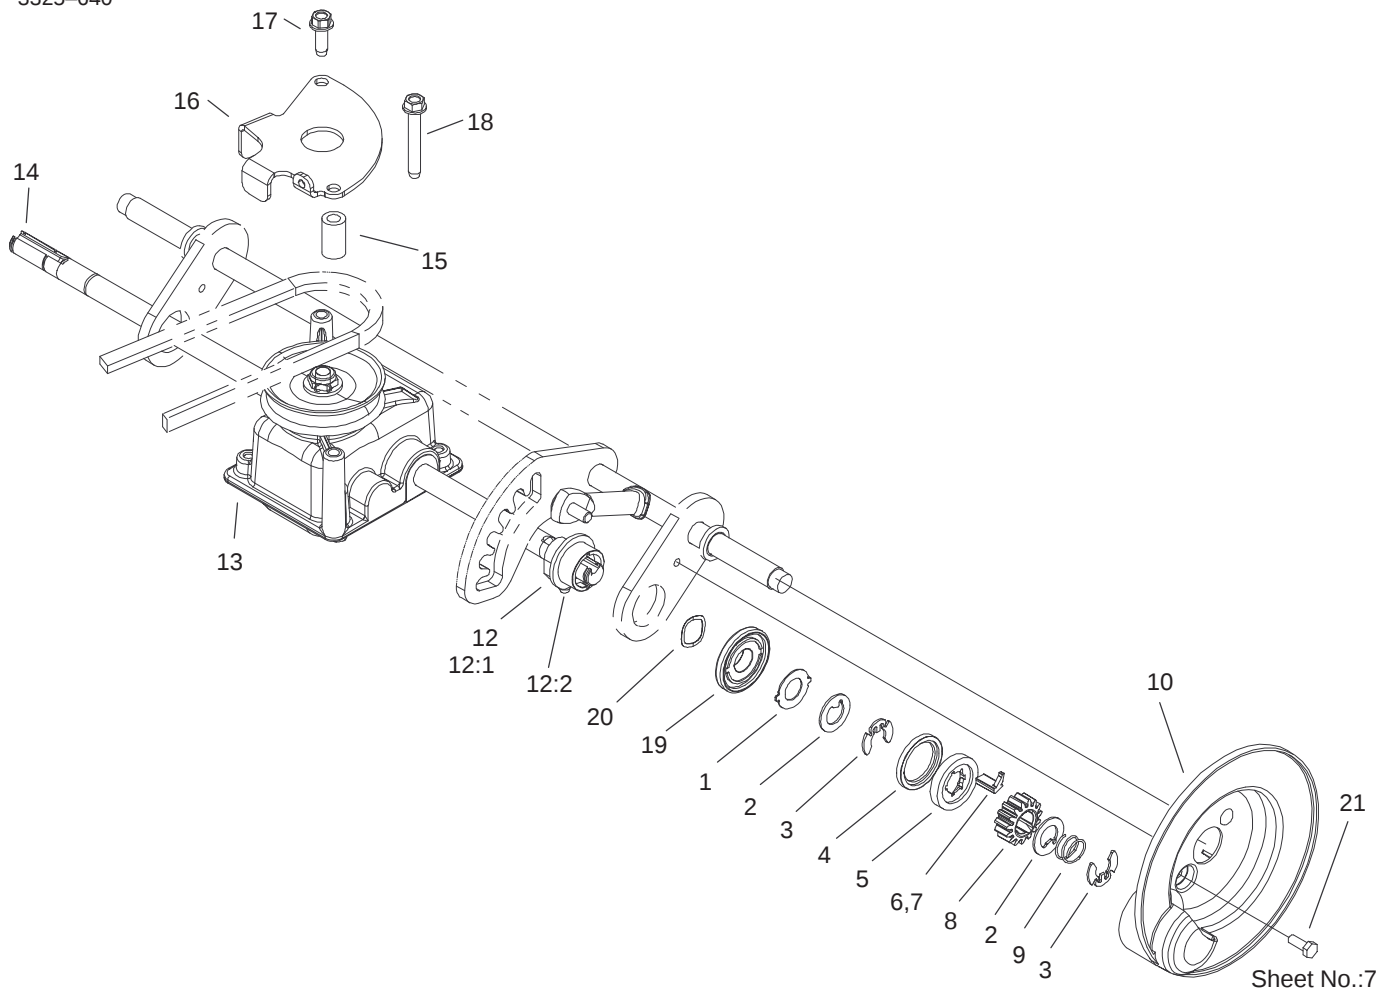


Sheet No.:7

Clutch Assembly

Ref. No.	Part No.	Qty.	Description
1	65-4730	2	Washer-Arm, Pivot (only on: 10929)
2	65-4740	4	Washer-Thrust, Keyed (only on: 10929)
3	65-2720	4	Ring-Klip (only on: 10929)
3	65-2720	2	Ring-Klip (only on: 10924)
4	65-4710	2	Ring-Friction (only on: 10929)
5	65-4760	2	Washer-Clutch (only on: 10929)
6	66-6040	1	Key-Rocking, RH (only on: 10929)
7	66-6050	1	Key-Rocking, LH (only on: 10929)
8	65-4750	2	Gear-Pinion (only on: 10929)
9	65-4720	2	Spring-Compression (only on: 10929)
10	100-1513	2	Cover-Gear
12	100-9118	2	Bushing ASM
12:1	99-6463	1	Bushing-Drive Shaft
12:2	302-56	1	Fitting-Zerk

Ref. No.	Part No.	Qty.	Description
13	104-7593	1	Gear Case ASM (only on: 10929)
14	100-1512	1	Shaft-Pivot (only on: 10924)
15	614673	1	Bushing-Plate, Actuator (only on: 10929)
16	100-1524-03	1	Guide-Transmission (only on: 10929)
17	49-2040	1	Screw-Tapping (only on: 10929)
18	92-1616	1	Screw-HWHTF (only on: 10929)
19	100-1511	2	Retainer-Ring (only on: 10929)
20	100-1515	2	Washer-Wave (only on: 10929)
21	32144-1	4	Screw-Taptite

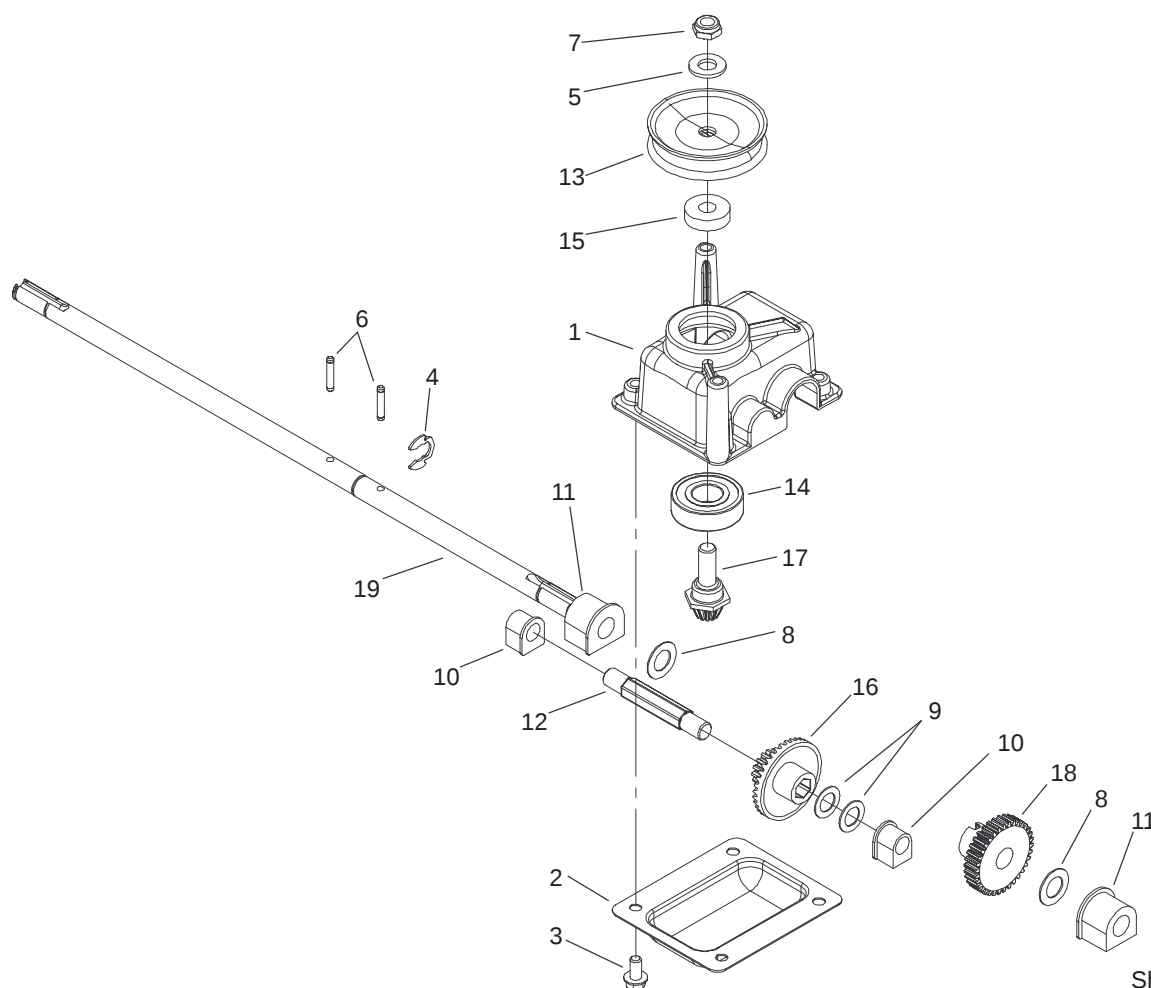


Sheet No.:A3

Gear Case Assembly No. 104-7593 (only on: 10929)

Ref. No.	Part No.	Qty.	Description
1	104-7619	1	Casting-Case, Gear
2	614668-03	1	Cover-Case, Gear
3	32144-4	4	Screw-HWH
4	32151-68	1	Ring-Retaining
5	3256-24	1	Washer-Flat
6	3285-19	2	Pin-Groove
7	3296-5	1	Nut-Lock NI
8	36-4780	2	Washer
9	36-4791	2	Washer-Thrust
10	60-8750	2	Bushing
11	60-8850	2	Bushing-Output
12	614696	1	Shaft-Intermediate
13	100-1176	2	Pulley-Half
14	38-7820	1	Bearing-Ball
15	62-6660	1	Spacer
16	104-7668	1	Gear-15t Spur, 37t Bevel
17	104-7667	1	Gear-Pinion, Bevel
18	614596	1	Gear
19	100-1514	1	Shaft-Output

Ref. No.	Part No.	Qty.	Description

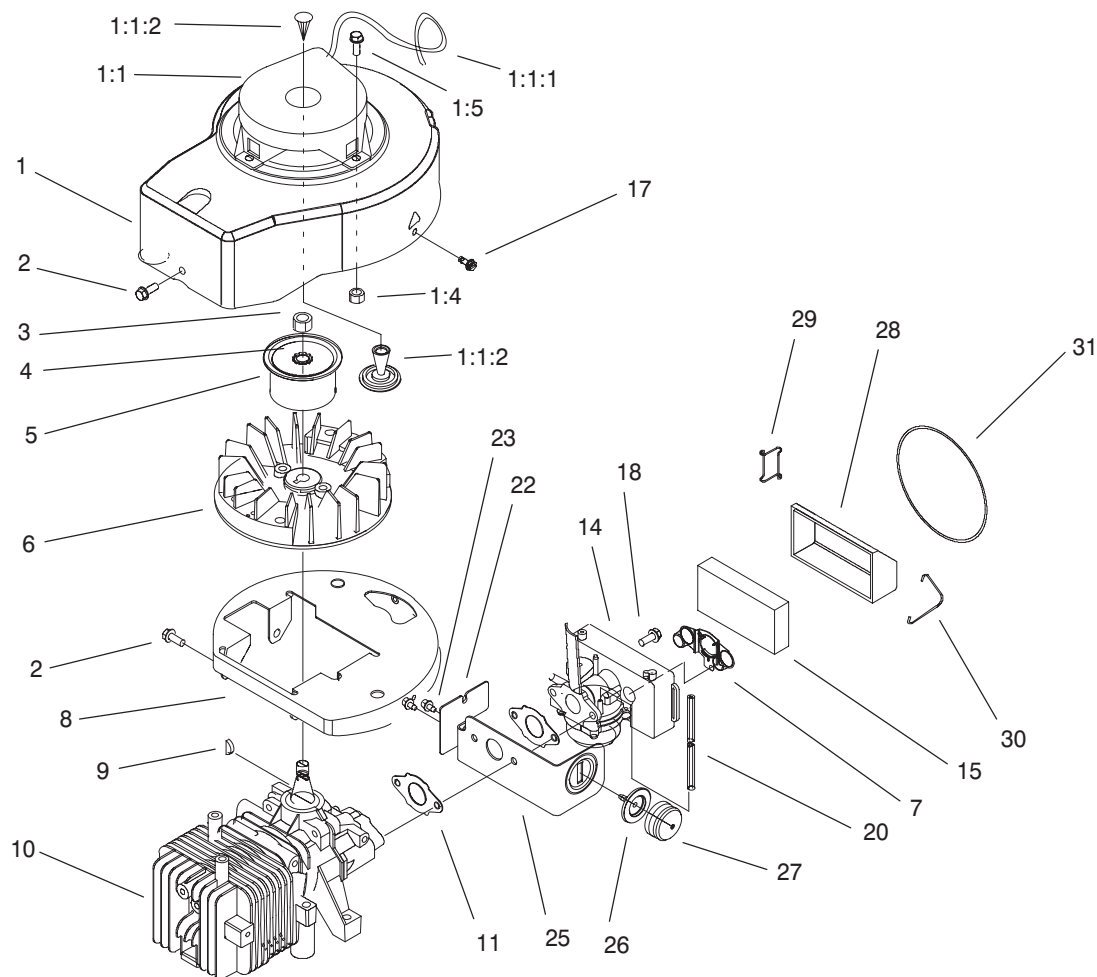


Sheet No.:2

Shroud, Crankcase and Carburetor Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	93-1248	1	Shroud/Start
1:1	95-1781	1	Recoil
1:1:1	613773	1	Rope
1:1:2	100-9540	1	Retainer And Clip
1:4	3296-2	4	Nut-Lock
1:5	3290-321	4	Screw-HWH
2	614702	5	Screw
3	130743	1	Nut
4	316959	1	Washer-Lock
5	614640	1	Hub-Starter
6	684743	1	Flywheel
7	93-4320	1	Shield-Fuel
8	93-1216-03	1	Base-Shroud
9	607199	1	Key
10	93-4349	1	Short Block ASM
11	92-4948	2	Gasket-Carburetor
14	100-9541	1	Carburetor ASM
15	609493	1	Element-Filter, Air
17	614699	3	Screw
18	609482	2	Screw
20	44-3172	1	Hose-Primer
22	93-4316	1	Shield
23	613269	2	Screw
25	100-9510	1	Shield
26	44-2750	1	Body-Primer
27	66-7460	1	Bulb-Primer

Ref. No.	Part No.	Qty.	Description
28	100-9127	1	Cover-Filter, Air
29	100-9111	1	Hook-Cover
30	100-9110	1	Retainer-Cover
31	100-9135	1	O-Ring

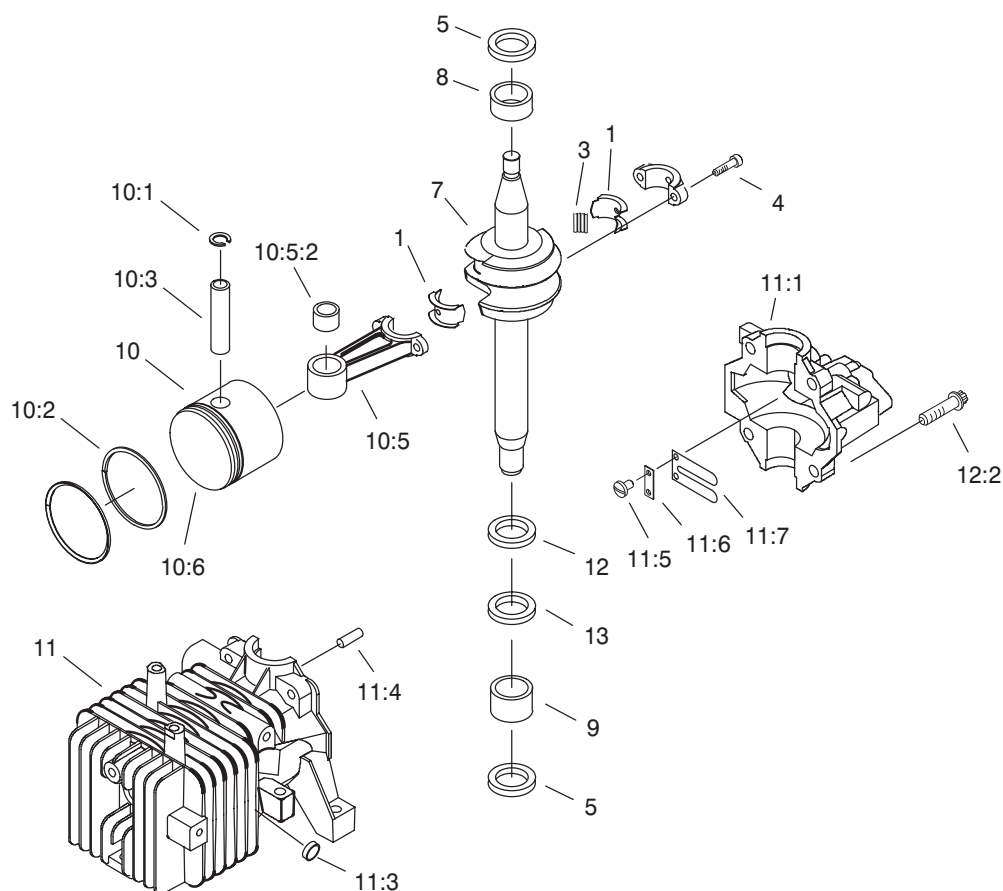


Sheet No.:A1

C-3017

Short Block Assembly No. 93-4349

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM				
3	683911	1	Bearing-Needle				
4	611393	2	Screw-HSH				
5	611396	2	Seal-Oil				
7	94-5713	1	Crankshaft				
8	681830	1	Bearing				
9	681831	1	Bearing				
☆10		1	Piston & Connecting Rod				
10:1	303712	2	Ring-Retaining				
10:2	681737	1	F-Ring Set				
10:3	606608	1	Pin-Wrist				
10:5	92-4921	1	Connecting Rod ASM				
10:5:2	92-4927	1	Bearing				
10:6	92-4923	1	Piston & Ring				
☆11		1	Cylinder & Crankcase ASM				
11:1	93-4347	1	Cyl & C/Case				
11:2	614636	1	Screw-HWH				
11:3	609123	4	Plug-Core				
11:4	609629	1	Dowel				
11:5	612872	2	Screw-HH				
11:6	602587	1	Plate-Backup, Reed				
11:7	602588	1	Reed-Carburetor				
12	252-76	1	Bearing-Thrust				
13	252-80	1	Washer-Thrust				

☆ Not serviced

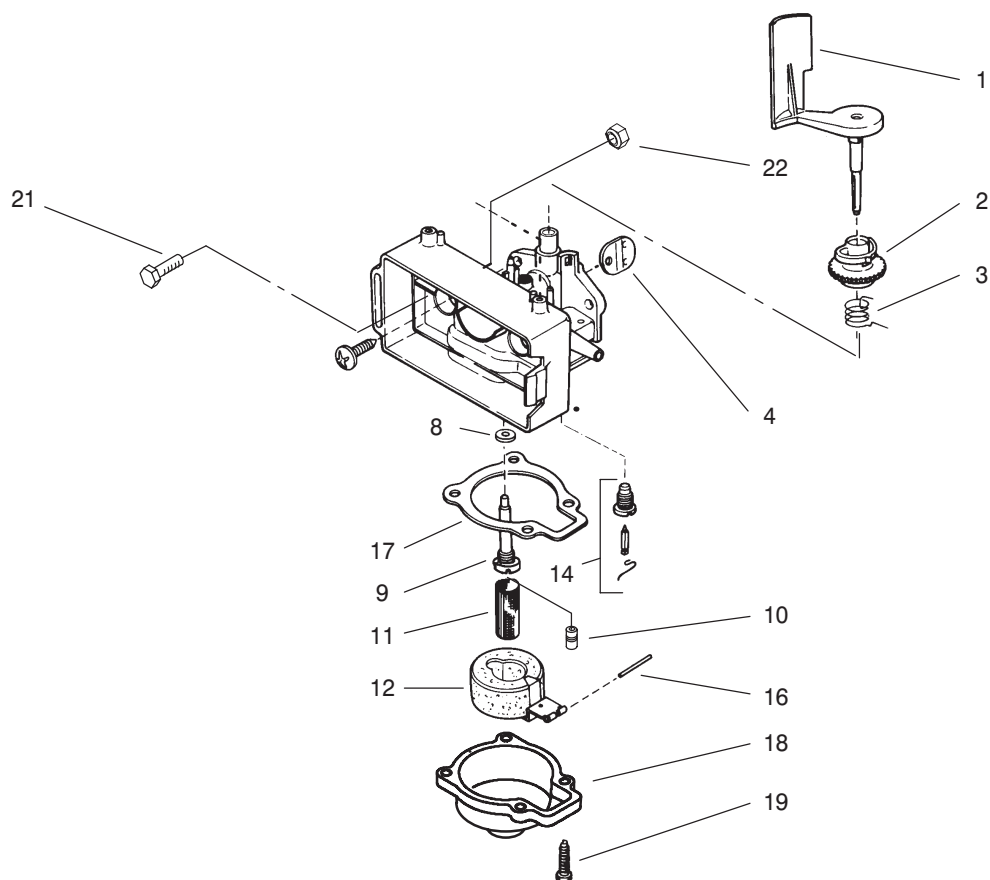


Sheet No.:A2

Carburetor Assembly No. 100-9541

Ref. No.	Part No.	Qty.	Description
1	104-4430	1	Airvane and Shaft
2	610834	1	Collar-Adjust, Airvane
3	610833	1	Spring-Throttle
4	92-6373	1	Disc-Throttle
8	612383	1	Washer
9	92-6371	1	Nozzle
10	92-6370	1	Jet-Main
11	611071	1	Filter-Fuel
12	678113	1	Float & Arm ASM
14	92-9697	1	Valve/Seat-Float
16	92-6389	1	Pin-Straight
17	98-1362	1	Gasket
18	92-9691	1	Chamber-Float
19	608850	4	Screw-HH
21	613269	2	Screw
22	306531	2	Nut-Hex

Ref. No.	Part No.	Qty.	Description

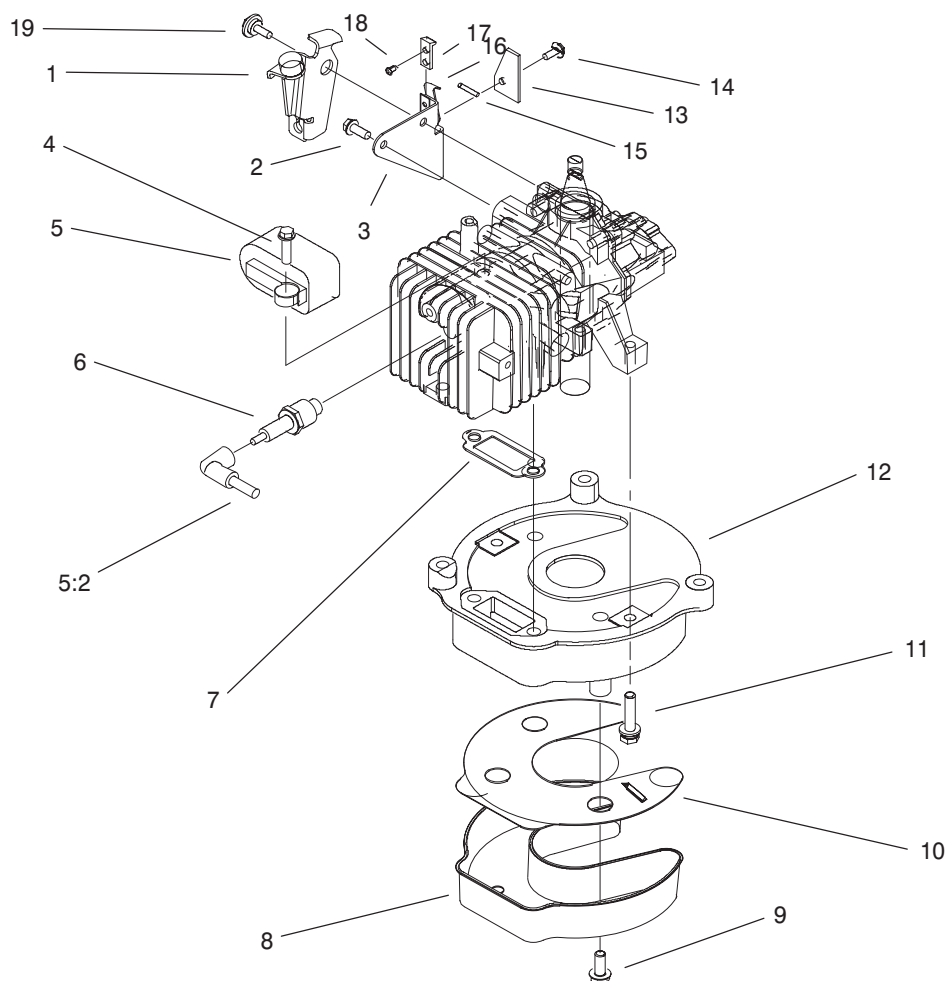

Sheet No.:3

Muffler and Brake Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-4312	1	Brake Plate ASM				
2	614702	1	Screw				
3	84-7820	1	Plate-Brake				
4	613208	2	Screw				
5	99-2911	1	Module-Ignition				
*5:1	99-6721	1	Clip-Lead, High Tension				
5:2	99-6719	1	Lead-Tension, High				
6	614009	1	Plug-Spark				
7	93-1233	1	Gasket-Exhaust				
8	93-1108-03	1	Cover-Muffler				
9	609471	3	Screw				
10	93-1217	1	Baffle-Muffler				
11	607601	4	Screw				
12	614654	1	Plate-Muffler				
13	100-2929	1	Stop-Strap, Ground				
14	12-5450	1	Screw				
15	92-1156	1	Electrical Lead ASM				
16	60-9010	1	Strap-Ground				
17	92-2925	1	Strap-Insulation				
18	3290-459	2	Rivet-Plastic				
19	92-9698	1	Screw-Shoulder				

* Not illustrated

Maintenance Record

[illegible]

Maintenance Record

[illegible]

LAWN-BOY®