


TORO®

**MODEL NO. 03104-40001 THRU
00001 & UP**

PARTS CATALOG

58" PROFESSIONAL®

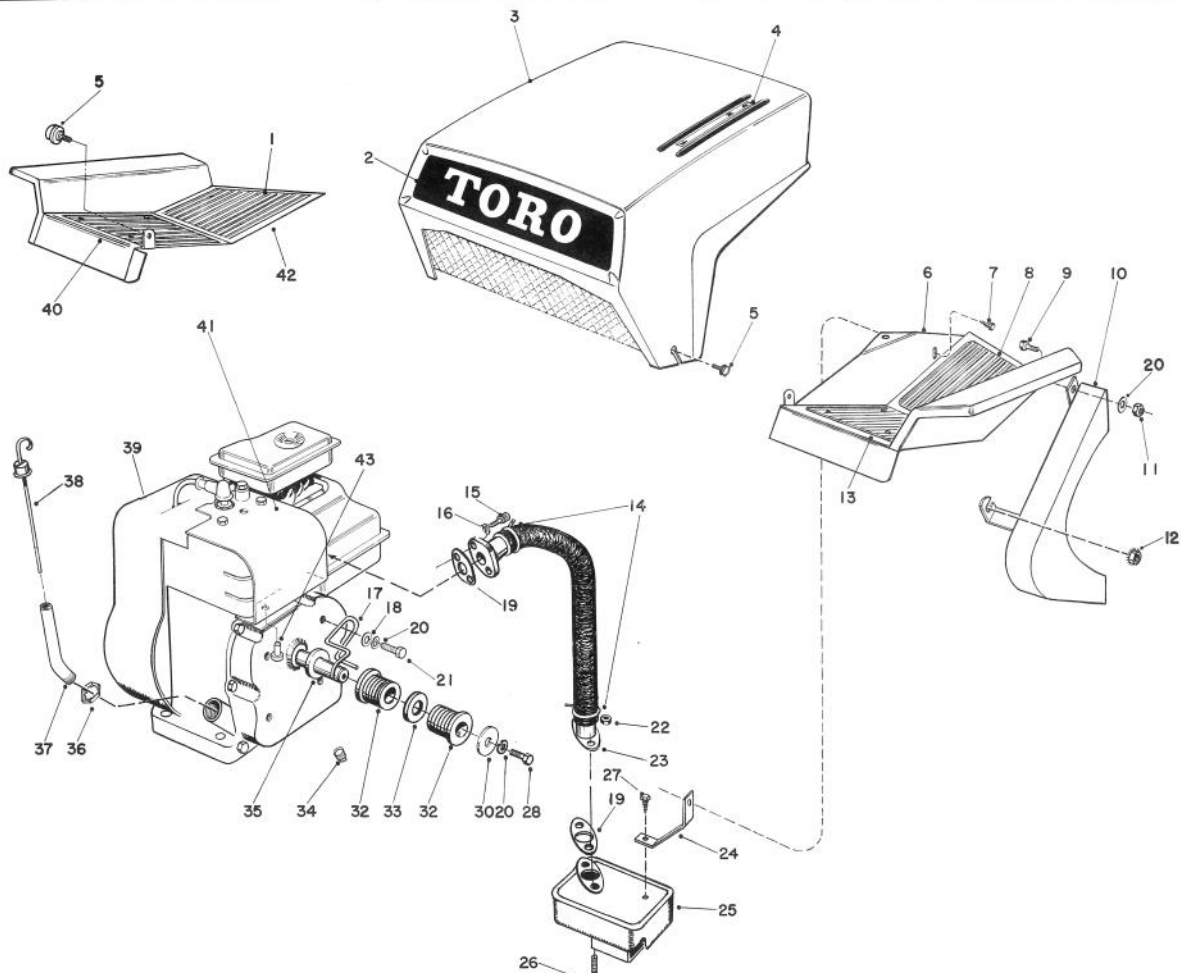

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-7258	Pad, Foot Rest	1
2	5-1021	Decal	1
3	5-1010	Shroud	1
4	5-1020	Decal	1
5	5-0680	Screw, Thumb	2
6	3-6039	Fender & Insulation (Incl. Ref. #3 & 13)	1
*	3-7226	Insulation	1
7	32104-77	Screw Self Tapping	9
8	3-7264	Pad, Foot Rest	1
9	32122-38	Screw Truss Head	1
10	3-7175	Guard Chain	1
11	3219-2	Nut	1
12	32149-5	Locknut	1
13	3-7223	Pad, Foot Rest	1


Ref. No.	Part No.	Description	No. Used
14	8-1830	Bale Tie	2
15	3274-15	Capscrew, Socket Head	2
16	3253-3	Lockwasher	2
17	20-9730	Guide	1
18	3256-23	Washer	1
19	3-7188	Gasket	2
20	3253-4	Lockwasher	3
21	3210-3	Capscrew	1
22	32149-2	Locknut	2
23	5-1000	Exhaust Pipe Assembly (Incl. Ref. #14)	1
24	5-1017	Bracket, Muffler Support	1
25	5-1527	Muffler	1
26	†	Capscrew	2
27	32104-76	Screw Self Tapping	1

*Not Illustrated

†Obtain from Briggs & Stratton Dealer

COPYRIGHT © ALL RIGHTS RESERVED
The Toro Company — 1976, Rev. 1979
MINNEAPOLIS, MN 55420 — U.S.A.


PRICE \$1.00

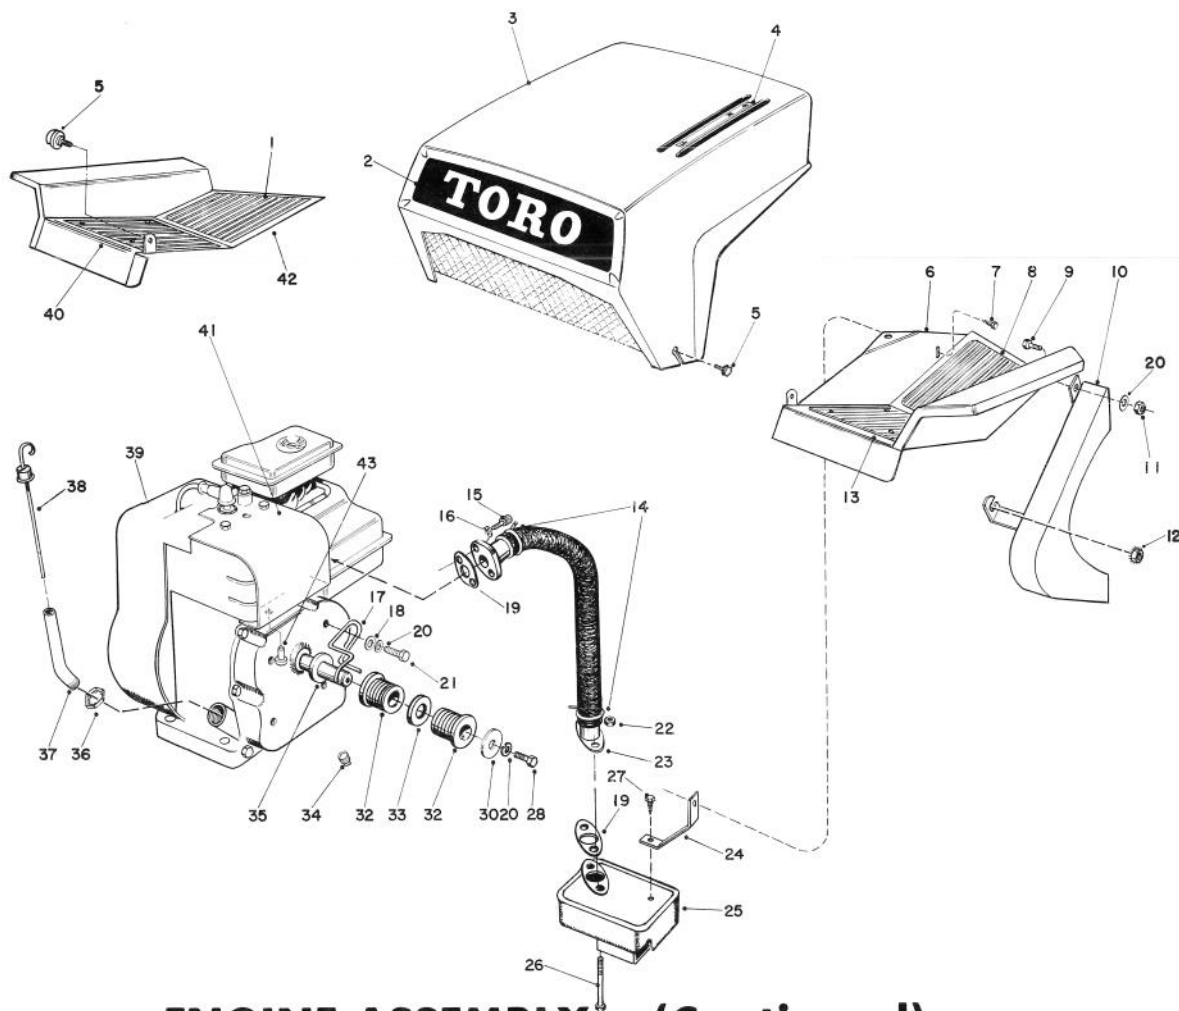

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
28	3210-5	Capscrew	1
30	5-0592	Washer	1
32	5-1004	Pulley, Engine Reel	2
33	3-8448	Thrust Washer	1
34	281-1	Plug, Pipe	1
35	20-9710	Washer	1
36	3290-246	Nut	1


Ref. No.	Part No.	Description	No. Used
37	3-7731	Pipe, Filler Assembly	1
38	3-7196	Dipstick Assembly	1
39	221-462	Engine	1
40	5-1186	Pad, Foot Rest	1
41	5-1005	Deflector W.A.	1
42	3-6369	Fender (Incl. Ref. #1 & 40)	1
43	237-37	Bumper	1

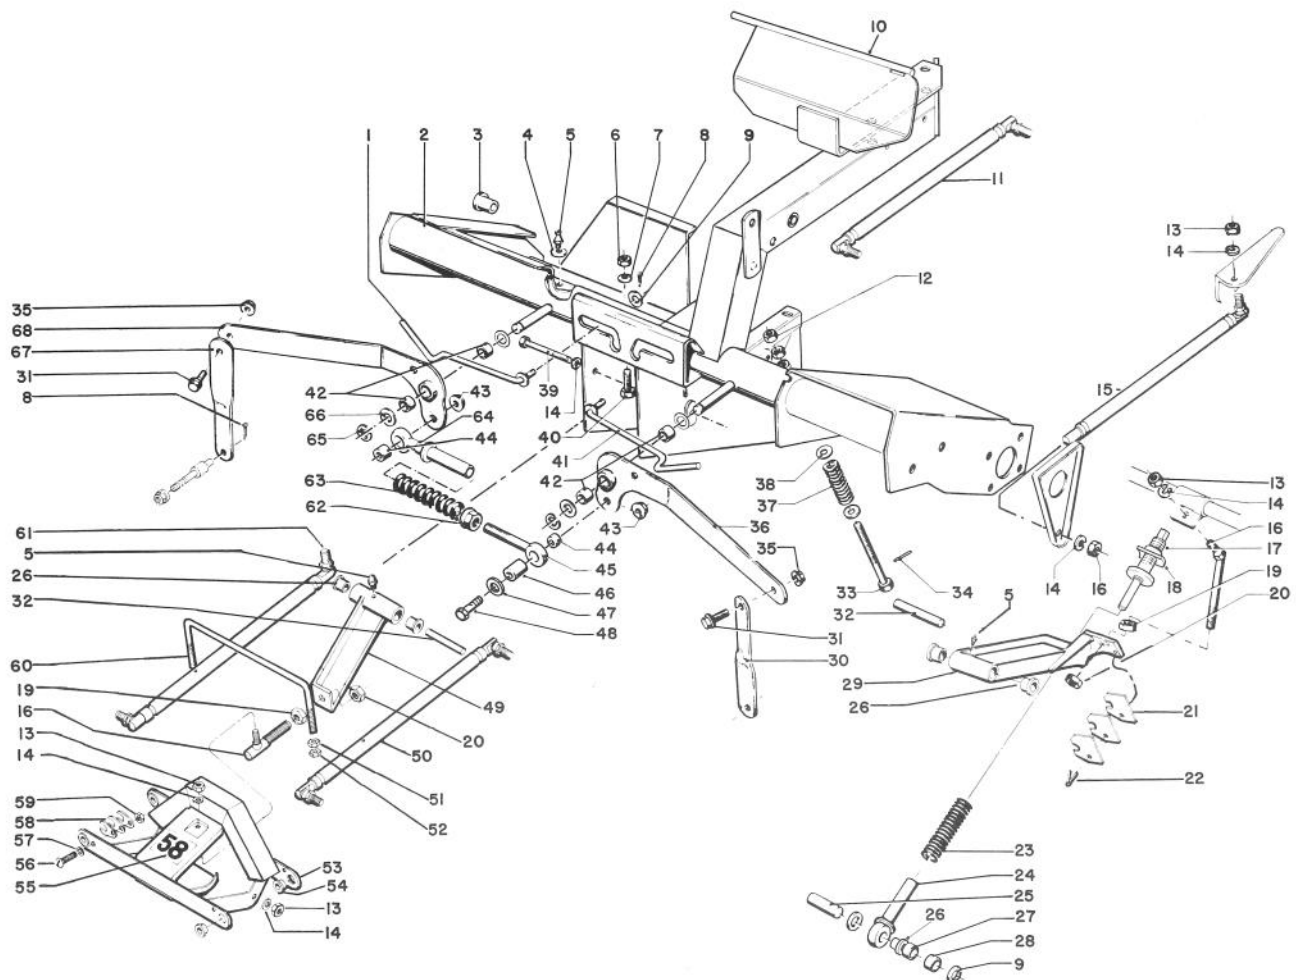

MAIN FRAME AND COUNTERBALANCE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-7321	Link — Transport R.H.	1
2	3-7111	Main Frame (Incl. Ref. #3)	1
3	256-136	Bushing	2
4	3254-8	Washer	1
5	302-5	Grease Fitting	3
6	3219-2	Nut	4
7	3253-4	Lockwasher	4
8	3272-10	Cotter Pin	4
9	3256-24	Washer	4
10	5-1013	Mounting Plate	1
11	5-4685	Ball Joint Assembly	1
12	3219-2	Jam Nut	2
13	3219-3	Nut	10
14	3253-21	Lockwasher	11
15	5-4682	Ball Joint Assembly	1
16	5-3776	Ball Joint	2
17	39-5200	Anchor, Counterbalance Spring	1
18	3-6708	Nut — Adjustment	1
19	3296-33	Nut	2
20	3220-6	Jam Nut	2
21	5-4675	Shim	3
22	3272-23	Cotter Pin	1
23	3-6692	Spring	1


Ref. No.	Part No.	Description	No. Used
24	3-7368	Guide — Counterbalance Spring	1
25	3-6704	Spacer	1
26	256-155	Bushing	5
27	3-6705	Spacer	1
28	3-6703	Spacer	1
29	4-5929	Mount — Counterbalance (Incl. Ref. #26)	1
30	3-7131	Link — L.H.	1
31	3-7157	Shoulder Bolt	2
32	3-6695	Spacer	2
33	3-7246	Screw	1
34	32121-7	Roll Pin	1
35	3296-4	Locknut	2
36	3-7132	Arm (Incl. Ref. #42)	1
37	3-6685	Spring	1
38	3256-23	Washer	2
39	3211-15	Screw	3
40	3210-8	Screw — Engine Mounting	4
41	3-7322	Link — Transport L.H.	1
42	256-1	Bushing	4
43	32149-5	Locknut	4
44	256-154	Bushing	2
45	3-1029	Yoke (Incl. Ref. #44)	1

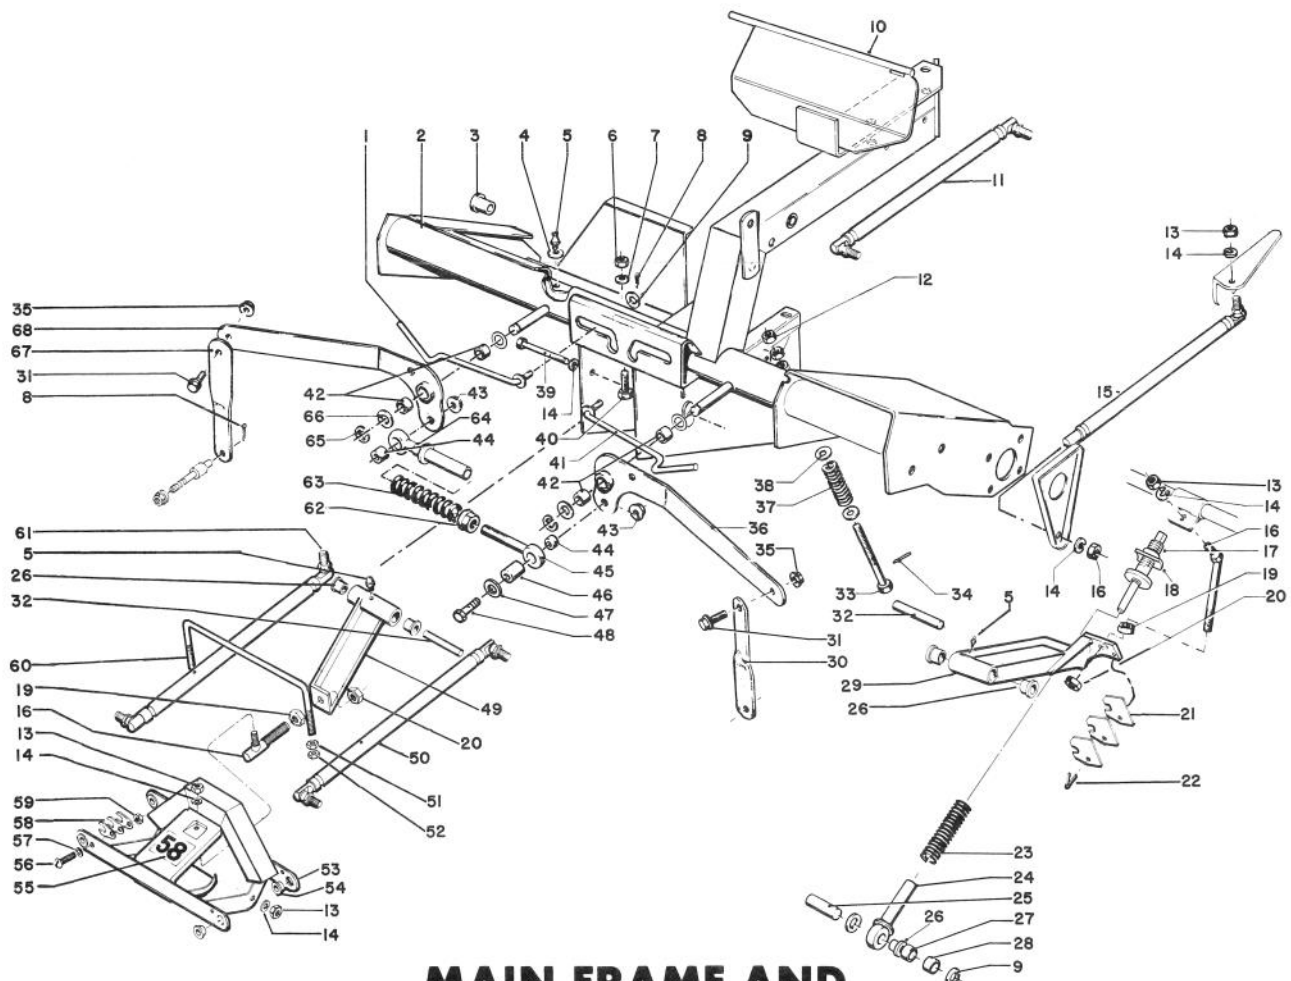

MAIN FRAME AND COUNTERBALANCE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	17-0860	Spacer	2
47	3256-3	Washer	2
48	3210-7	Capscrew	2
49	3-1009	Hitch — Yoke (Incl. Ref. #26)	1
50	5-4684	Ball Joint Assembly	1
51	3217-5	Nut	2
52	32146-17	Locknut	2
53	5-4691	Intermediate Frame (Incl. Ref. #54)	1
54	256-156	Bushing	4
55	3-7768	Decal	1
56	3251-5	Screw — Rd. Head Machine	4

Ref. No.	Part No.	Description	No. Used
57	5-3637	Washer	4
58	5-3631	Shim	12
59	3296-2	Nut	4
60	5-4687	Spring — Stabilizer	1
61	5-4672	Ball Joint Assembly	1
62	32128-15	Flange Nut	1
63	3-7152	Spring	1
64	3-7147	Yoke (Incl. Ref. #44)	1
65	32120-47	"E" Ring	2
66	3256-26	Washer	4
67	3-7155	Link R.H.	1
68	3-7153	Arm (Incl. Ref. #42)	4

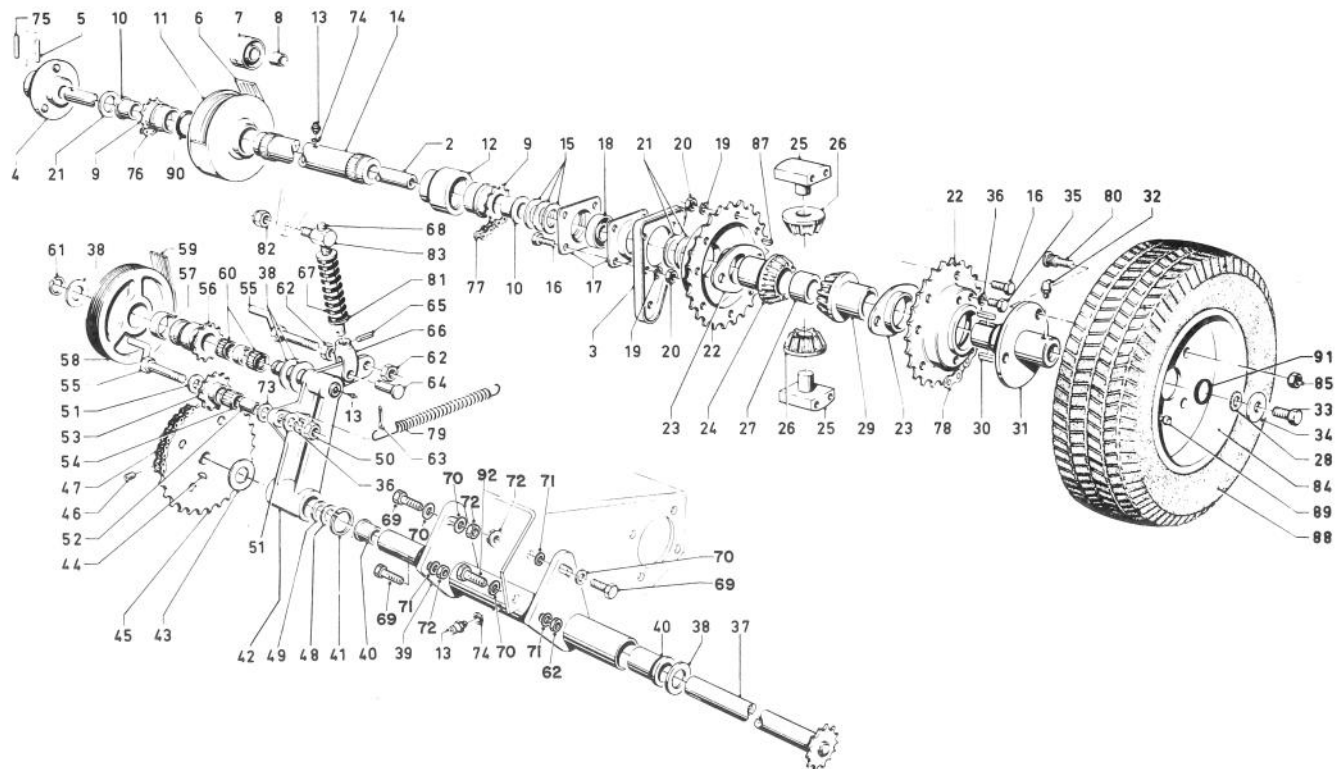


DIFFERENTIAL AND COUNTERSHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	3-6563	Axle	1
3	3-6572	Bracket	1
4	2-9739	Hub, Right Side (Incl. Ref. #80)	1
5	32121-9	Pin	1
6	3-6587	Belt	1
7	3-7167	Idler, Reel	1
8	3290-245	Ring, Tolerance	1
9	3-1429	Sprocket (Incl. Ref. # 10)	2
10	256-136	Bushing	2
11	3-8369	Pulley & Hub Assy. (Incl. # 90)	1
12	3-6528	Hub	1
13	302-5	Grease Fitting	3
14	3-6531	Tube, Reel Drive	1
15	3-6498	Washer, Thrust — Thin	6
16	329-3	Screw	12
17	3-5403	Retainer, Bearing	2
18	251-172	Bearing	1
19	3253-3	Washer, Lock	12
20	3219-1	Nut	12
21	3-6514	Washer, Thrust — Thick	6
22	2-0069	Sprocket Case, Diff. (Incl. Ref. # 23)	2
23	3-2290	Bushing	2
24	3-6571	Side Gear, Differential	1
25	3-2293	Carrier, Differential Pinion	2

Ref. No.	Part No.	Description	No. Used
26	3-2294	Pinion	2
27	3-6568	Spacer	1
28	3254-6	Washer, Lock — Internal	1
29	3-2296	Side Gear, Differential	1
30	32150-1	Key	2
31	3-8729	Hub, Left Side (Incl. Ref. #80)	1
32	302-11	Grease Fitting	1
33	3211-2	Screw	1
34	3256-4	Washer	1
35	322-1	Screw	8
36	3253-4	Washer, Lock	9
37	3-6555	Countershaft and Sprocket	1
38	3-6543	Washer, Thrust	4
39	3-6552	Countershaft Tube Assembly (Incl. Ref. # 40)	1
40	256-149	Bushing	2
41	32120-69	Ring, Snap	1
42	3-6049	Bell Crank Assembly (Incl. Ref. # 13)	1
43	3-6557	Washer, Thrust	1
44	3257-5	Key	1
45	5-1841	Sprocket	1
46	3294-11	Screw, Set	2
47	3-6535	Chain	1
*	2710-6	Link, Connecting	1

*Not Illustrated

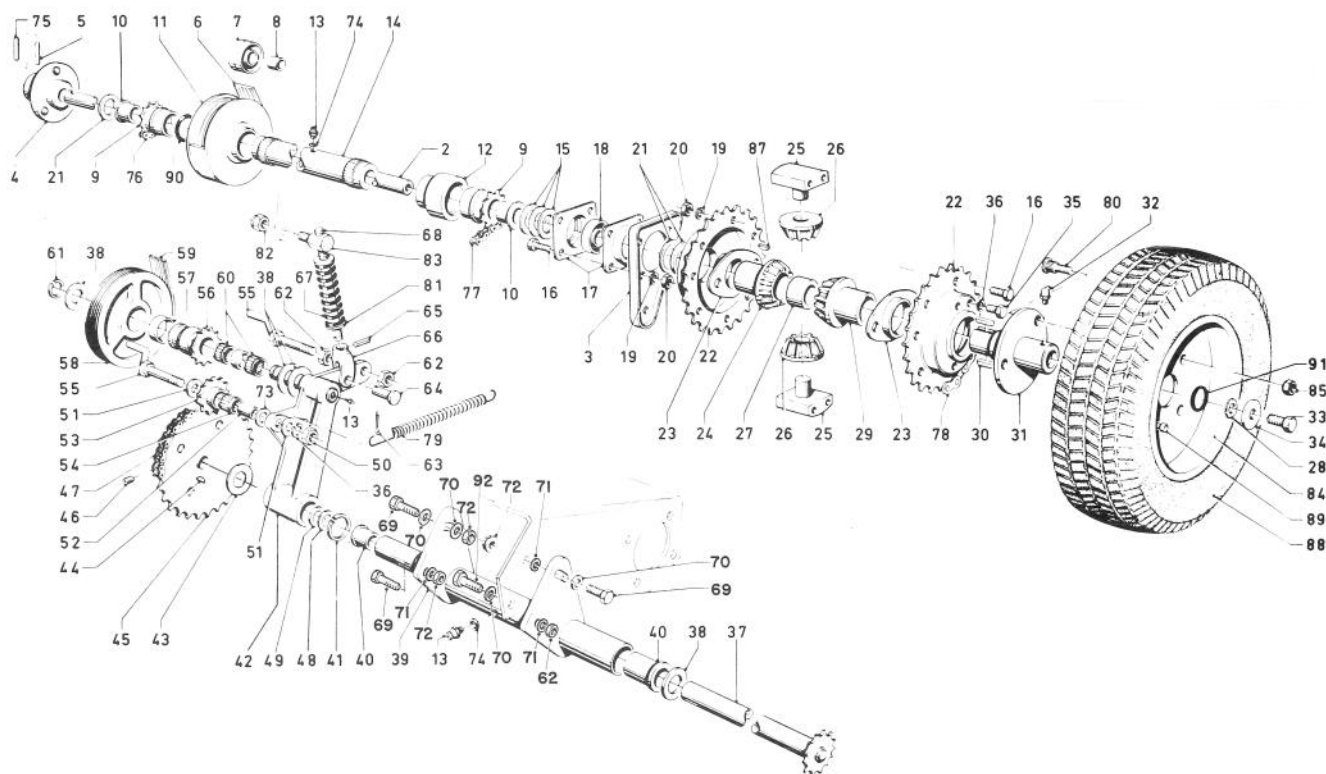


DIFFERENTIAL AND COUNTERSHAFT ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	3-6558	Washer, Thrust	1
49	3-6561	Washer, Thrust	5
50	3219-2	Nut	1
51	3256-23	Washer	2
52	3-7386	Spindle	1
53	3-6379	Sprocket, Idler (Incl. Ref.#54)	1
54	252-62	Bearing	1
55	3-6547	Guide, Belt	2
56	3-6544	Sprocket	1
57	3290-241	Ring, Tolerance	1
58	3-6534	Pulley	1
59	3-6702	Belt, Traction Drive	1
60	252-64	Bearing, Needle	2
61	32120-38	Ring, Snap	1
62	3220-2	Nut, Jam	3
63	3272-6	Pin, Cotter	1
64	283-1	Pin, Clevis	1
65	32121-7	Pin, Roll	1
66	3-8325	Clevis	1
67	3-8284	Spring	1
68	5-1444	Rod	1
69	3210-4	Screw	3
70	3256-3	Washer	4
71	3290-244	Washer, Lock	4

Ref. No.	Part No.	Description	No. Used
72	32149-5	Locknut	3
73	4-2390	Washer	1
74	3254-8	Washer	2
75	32121-51	Pin	1
76	5-4674	Chain, Reel Drive — Front	1
*	2710-6	Link, Connecting	1
77	5-4673	Chain, Reel Drive — Rear	1
*	2710-6	Link, Connecting	1
78	3-7786	Chain, Differential	1
*	2710-6	Link, Connecting	1
79	3-7243	Spring	1
80	242-33	Bolt, Wheel	6
81	3256-26	Washer	1
82	3296-29	Nut, Stop	1
83	5-1018	Rod, Pivot	1
84	242-38	Wheel Disc Assembly	2
85	242-32	Nut	6
87	3257-5	Key	1
88	231-49	Tire	2
89	232-27	Stem, Valve	2
90	32151-16	Ring, Retainer	1
91	237-54	"O" Ring	1
92	3210-7	Capscrew	1


*Not Illustrated

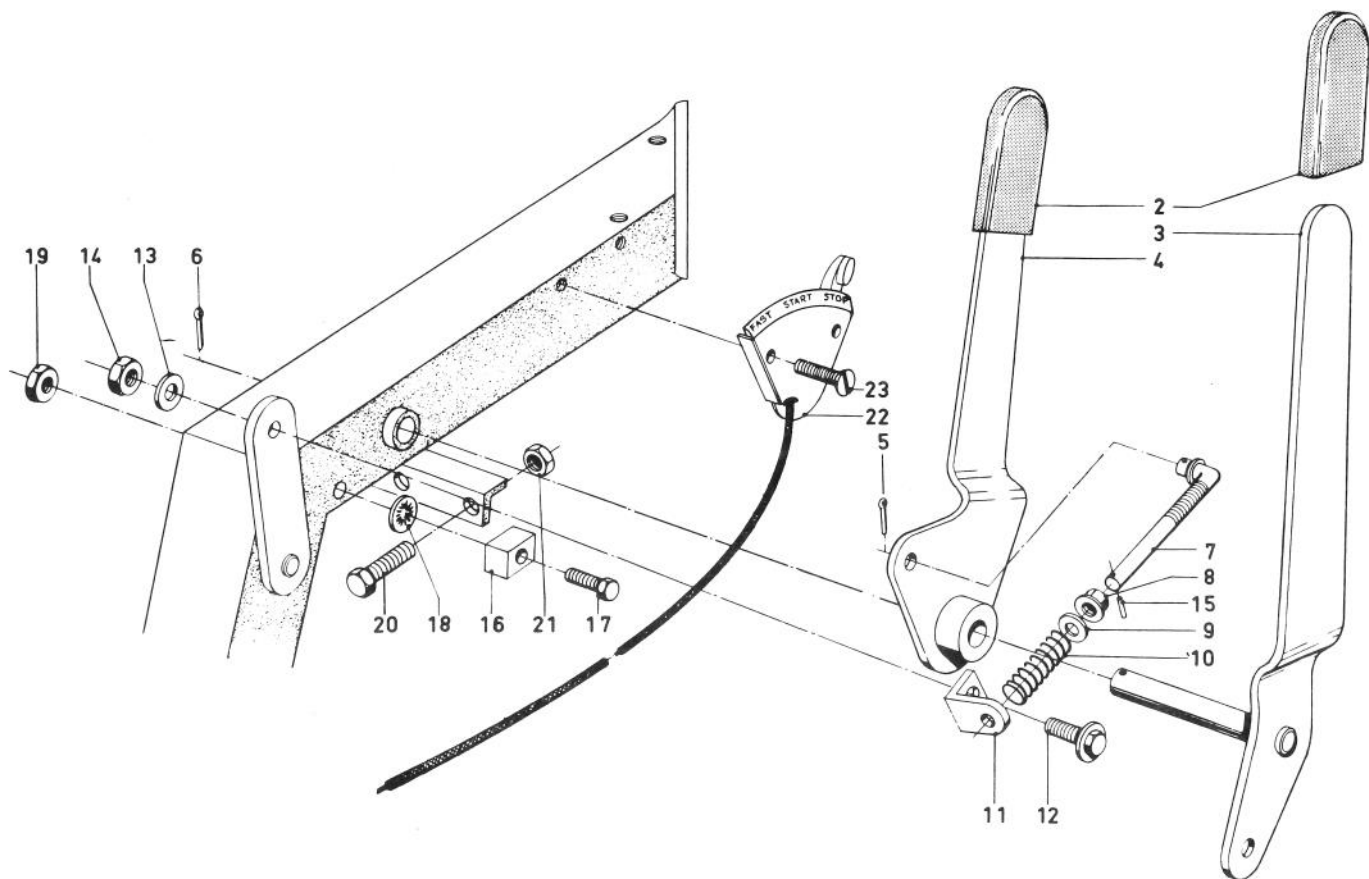

CONTROLS

Ref. No.	Part No.	Description	No. Used
2	5-1022	Handle, Grip	2
3	3-7164	Control, Traction	1
4	3-7162	Control, Reel	1
5	3272-6	Cotter Pin	1
6	3272-10	Cotter Pin	1
7	3-6718	Rod	1
8	32146-4	Nut, Flanged	1
9	3256-2	Washer	1
10	3-6685	Spring	1
11	3-6725	Bracket	1
12	3-7166	Shoulder, Bolt	1


Ref. No.	Part No.	Description	No. Used
13	3253-3	Washer, Lock	1
14	3220-1	Nut, Jam	1
15	32121-7	Pin, Roll	1
16	3-7168	Stop, Reel Control	1
17	322-14	Screw	1
18	3290-244	Washer, Lock — Int. Ext.	1
19	32127-45	Nut	1
20	329-6	Screw	1
21	3219-1	Nut	1
22	3-7257	Throttle Control Assembly	1
23	32104-72	Screw	2

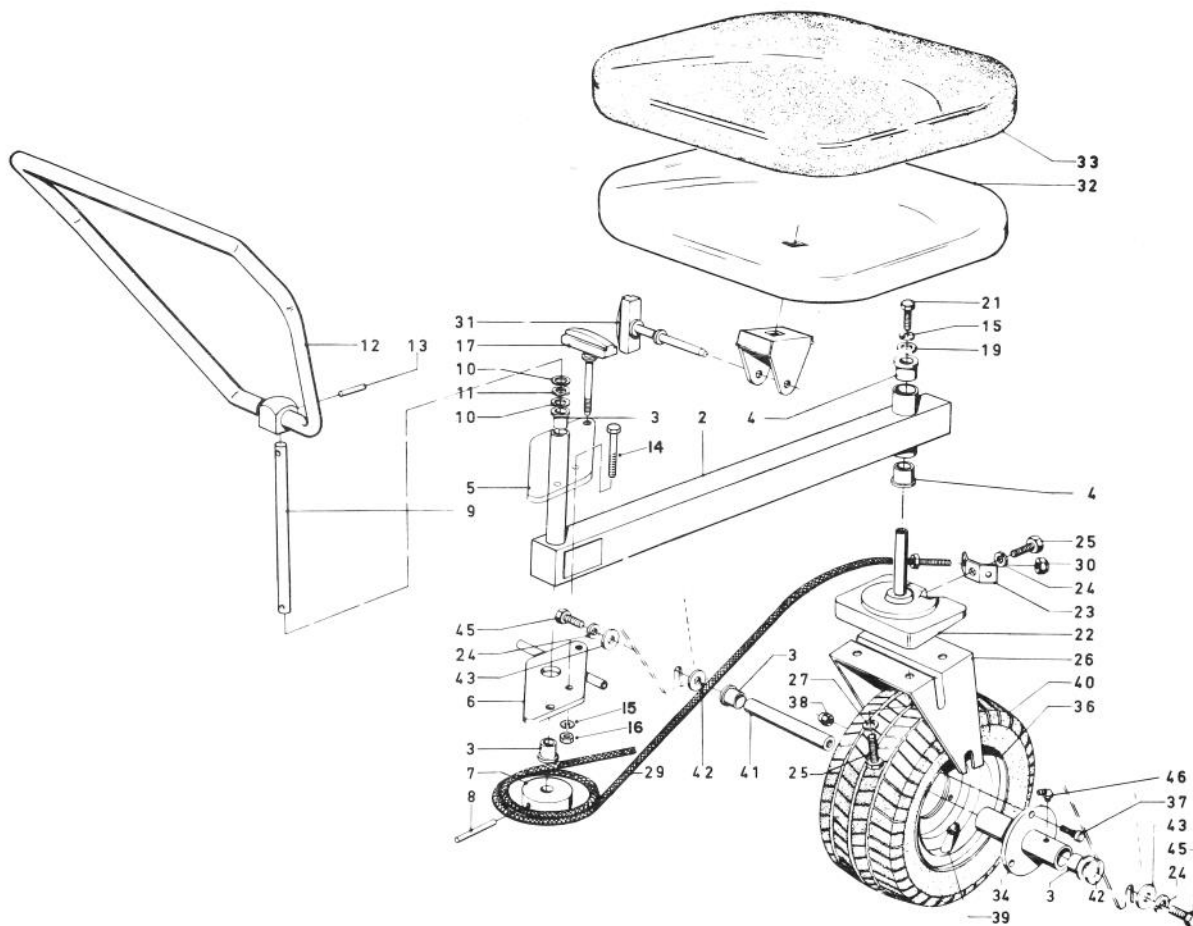

SULKY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
2	5-0480	Rear Frame (Incl. Ref. # 3 & 4)	1
3	256-136	Bushing	4
4	256-148	Bushing	2
5	3-6495	Plate, Upper Hinge	1
6	3-7093	Plate, Lower Hinge	1
7	3-6493	Pulley, Steering	1
8	32121-54	Pin	1
9	3-6501	Shaft, Steering	1
10	3-6498	Washer, Thrust	2
11	3290-239	Washer, Spring	1
12	3-8394	Handle, Steering	1
13	32121-6	Pin	1
14	322-14	Capscrew	2
15	3253-4	Washer, Lock	3
16	3217-6	Nut	2
17	3-7138	Clamp Assembly	1
19	4-2320	Washer	1
21	3210-3	Screw	1
22	5-2106	Pivot, Caster & Shaft W.A.	1
23	3-6506	Bracket	1


Ref. No.	Part No.	Description	No. Used
24	3253-21	Washer, Lock	3
25	323-6	Screw	5
26	3-6507	Fork, Wheel	1
27	3255-9	Washer, Lock	4
29	5-0460	Cable, Steering	1
30	3296-3	Nut, Lock	2
31	3-7142	Handle Assembly	1
32	3-6604	Seat Assembly	1
33	351-24	Pad, Seat	1
34	2-9939	Hub (Incl. Ref. # 3)	1
36	242-38	Wheel Disc Assembly	1
37	242-33	Bolt, Special	3
38	242-32	Nut	3
39	232-27	Stem, Valve	1
40	231-49	Tire	1
41	3-6515	Shaft	1
42	3-6514	Washer, Thrust	2
43	3256-4	Washer	2
45	3211-4	Screw	2
46	302-11	Grease Fitting	1

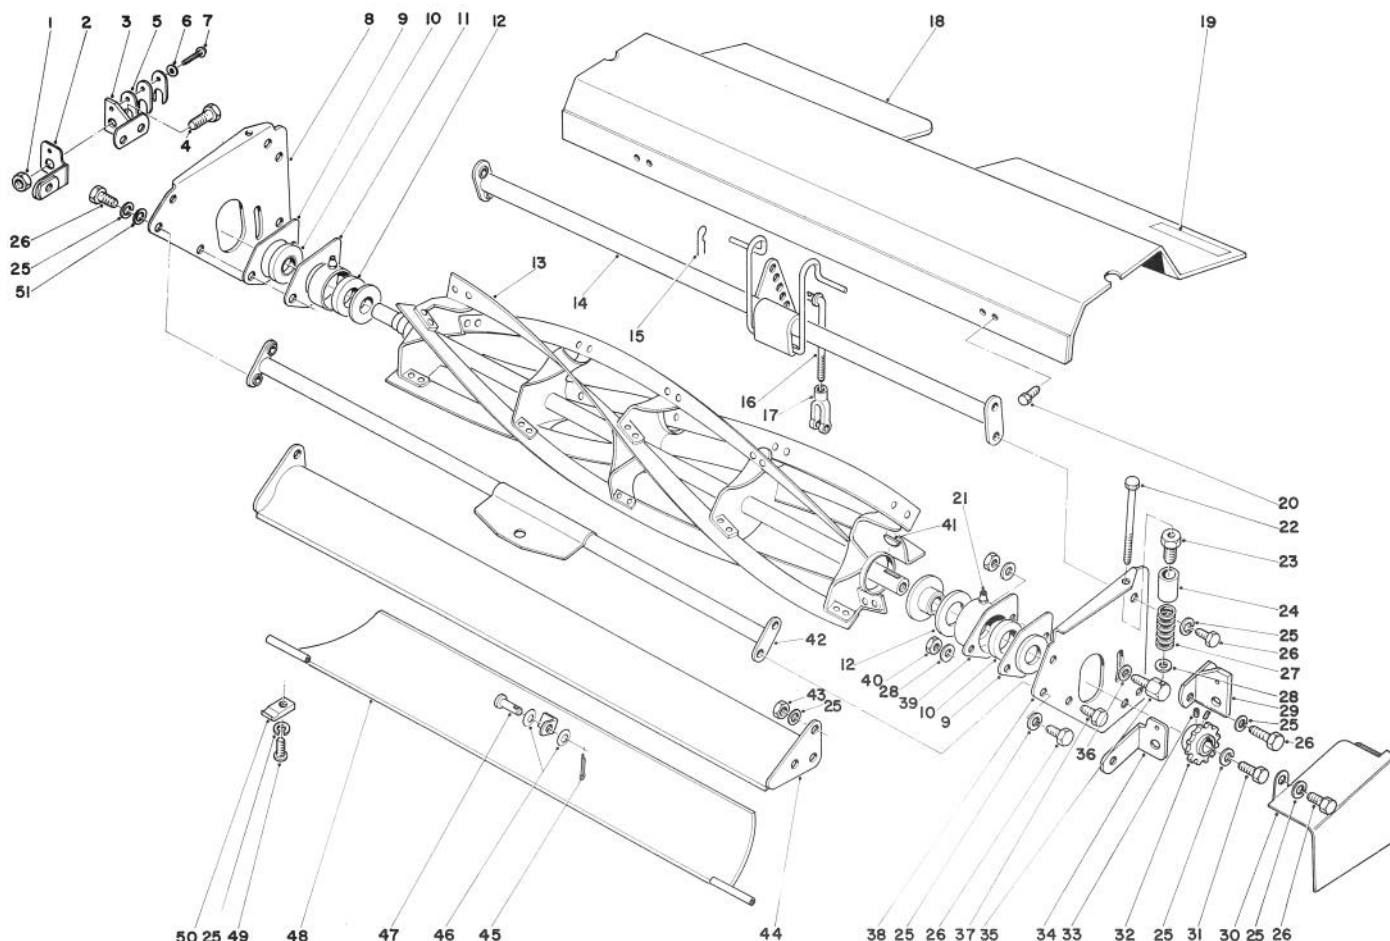

REAR MOWER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32146-13	Nut	1
2	5-4665	Ball Joint Bracket — Right	1
3	5-4668	Hanger — Right Hand	1
4	325-5	Capscrew	2
5	5-3631	Shim	6
6	3253-12	Lockwasher	2
7	3251-5	Screw — Rd. Head Machine	2
8	3-7795	Side Plate	1
9	3-6637	Cup — Bearing	2
10	251-123	Bearing	2
11	5-3811	Cup — Bearing	1
12	253-104	Grease Seal	2
13	4-4639	Reel Assembly	1
14	3-6628	Tube — Reel	1
15	3290-250	Hair Pin Cotter	1
16	3-6651	Rod — Adjusting	1
17	282-2	Yoke	1
18	5-3797	Shield — Grass	1
19	27-5560	Warning Decal	1
20	32104-77	Hex Head Capscrew	4
21	302-26	Grease Fitting	2
22	3-6627	Screw — Adjusting	2
23	3-6626	Bolt — Adjusting	2
24	3-6625	Block — Adjusting	2
25	3254-2	Lockwasher	17
26	3210-2	Hex Head Capscrew	11

Ref. No.	Part No.	Description	No. Used
27	3-6624	Spring	2
28	3256-23	Washer	6
29	5-4667	Hanger — Left Hand	1
30	3-7192	Guard — Chain	1
31	322-5	Capscrew	2
32	3-6635	Sprocket — Reel	1
33	3246-3	Set Screw	2
34	5-4666	Ball Joint Bracket — Left	1
35	3-6623	Screw — Reel Bearing	2
36	5-0744	Washer	2
37	3-6665	Bolt — Bearing Cup	2
38	3-7794	Side Plate	1
39	5-3812	Cup — Bearing	1
40	3296-4	Locknut	4
41	3257-5	Key	1
42	3-6617	Tube — Reel	1
43	3219-2	Nut	4
44	5-4578	Bed Knife	1
45	3272-6	Cotter Pin	1
46	3290-212	Washer — Spring	2
47	283-1	Pin — Clevis	1
48	3-6653	Skid	1
49	32122-38	Screw, Truss Head Machine	2
50	3-6657	Clip — Skid	2
51	3256-3	Washer	1

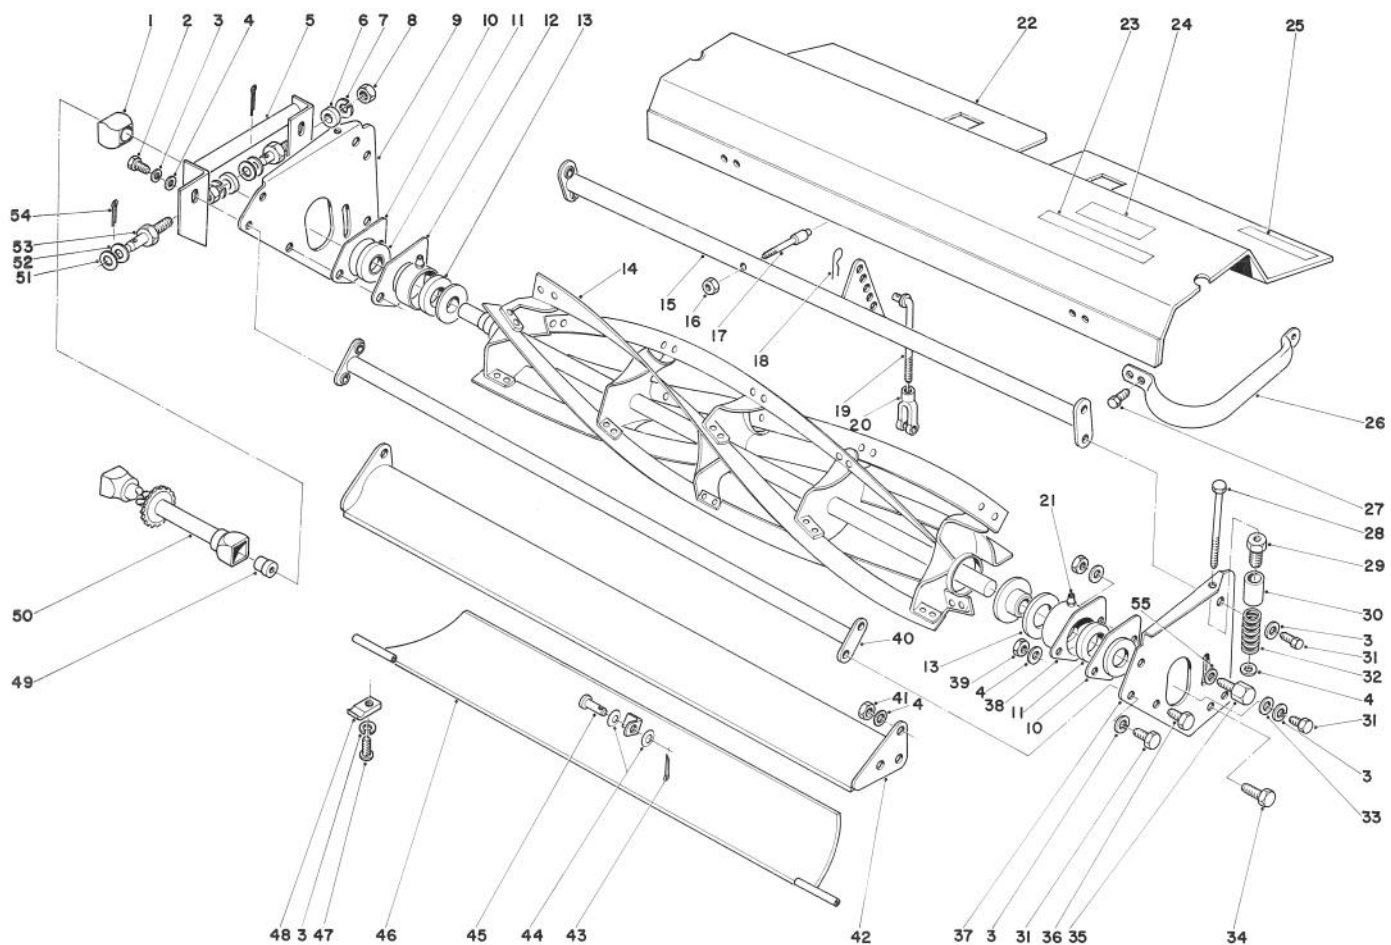


WING MOWER REEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-7173	Ball Drive	1
2	3210-4	Screw	3
3	3254-2	Lockwasher	17
4	3256-23	Washer	9
5	3-6671	Hitch Left Hand	1
*	3-6678	Hitch Right Hand	1
6	3-6677	Spacer	2
7	3253-7	Lockwasher	2
8	3219-5	Nut	2
9	3-7795	Side Plate	1
10	3-6637	Cup — Bearing	2
11	251-123	Bearing	2
12	5-3811	Cup — Bearing	1
13	253-104	Seal — Grease	2
14	4-4629	Reel Assy. — Left Wing	1
*	4-4619	Reel Assy. — Right Wing	1
15	3-6668	Tube, Reel	1
16	32149-5	Nut	1
17	5-0878	Pin — Link	1
18	3290-250	Hairpin Cotter	1
19	3-6651	Rod — Adjusting	1
20	282-2	Yoke	1
21	302-26	Grease Fitting	2

Ref. No.	Part No.	Description	No. Used
22	5-3796	Shield — Grass	1
23	3-7771	Decal	1
24	3-1058	Decal	1
25	27-5560	Decal — Warning	1
26	3-7174	Guard — Reel	1
27	32104-77	Screw	6
28	3-6627	Screw — Adjustment	2
29	3-6626	Bolt — Adjusting	2
30	3-6625	Block — Adjusting	2
31	3210-2	Screw	10
32	3-6624	Spring	2
33	3256-3	Washer	1
34	322-2	Capscrew	2
35	3-6623	Screw — Reel Bearing	2
36	3-6665	Bolt	2
37	3-7794	Side Plate	1
38	5-3812	Cup — Bearing	1
39	3296-4	Locknut	4
40	3-6675	Tube — Reel	1
41	3219-2	Nut	4
42	5-4578	Bedknife	1
43	3272-6	Cotter Pin	1
44	3290-212	Washer — Spring	2

*Not Illustrated

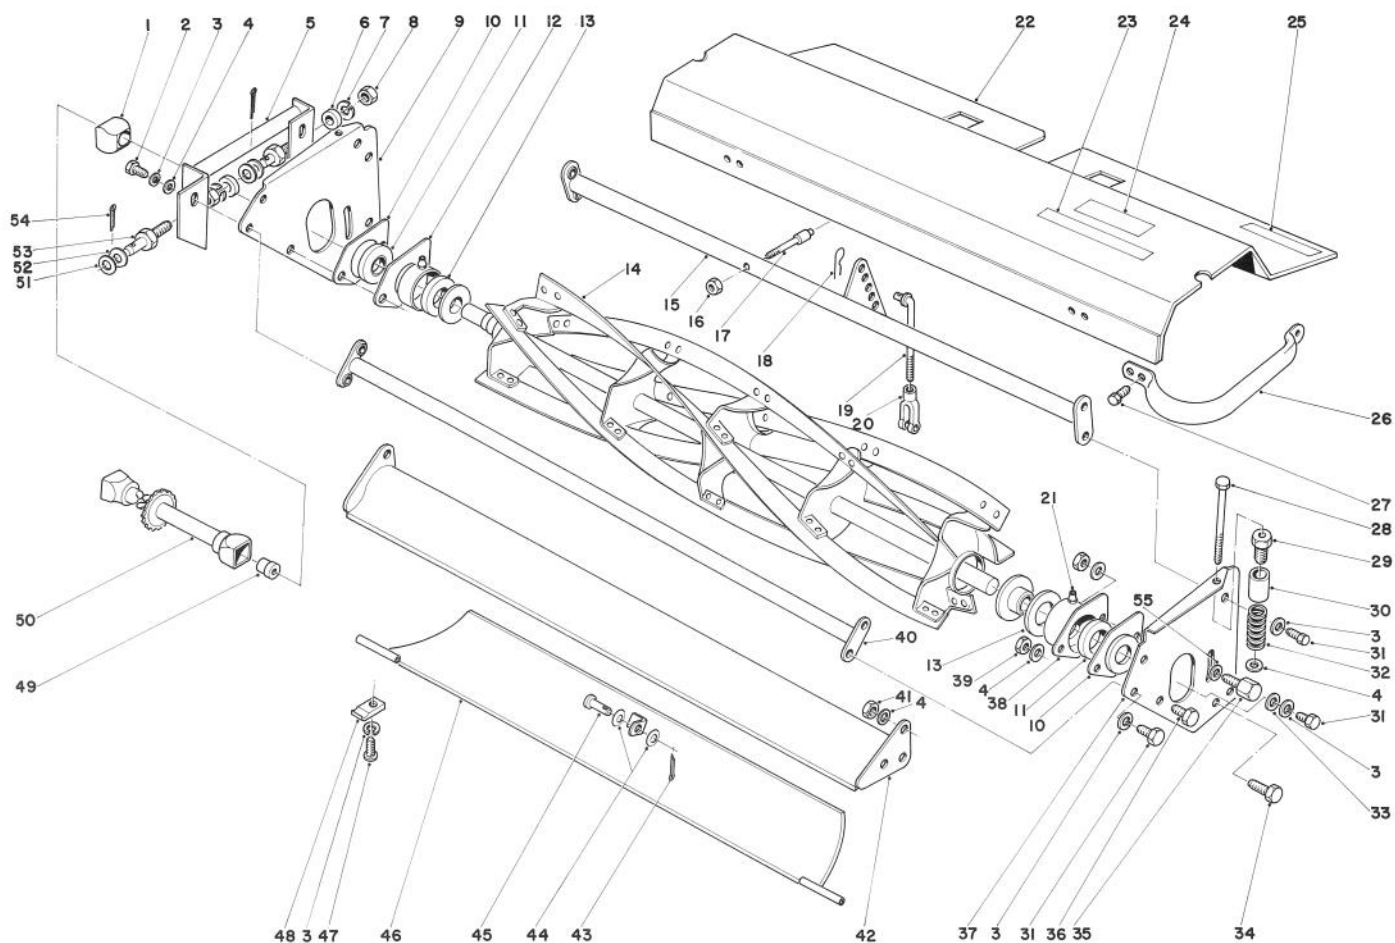


WING MOWER REEL ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
45	283-1	Pin	1
46	3-6653	Skid	1
47	32122-38	Screw	2
48	3-6657	Clip	2
49	3-7463	Pad — Reel Drive	2
50	3-6607	Shaft — Reel Drive	1

Ref. No.	Part No.	Description	No. Used
51	3-6688	Collar	2
52	3-1131	Washer	2
53	5-3645	Stud	2
54	3272-17	Cotter Pin	1
55	5-0744	Washer	2

ENGINE BRIGGS & STRATTON MODEL NO. 130232 TYPE NO. 0497-01

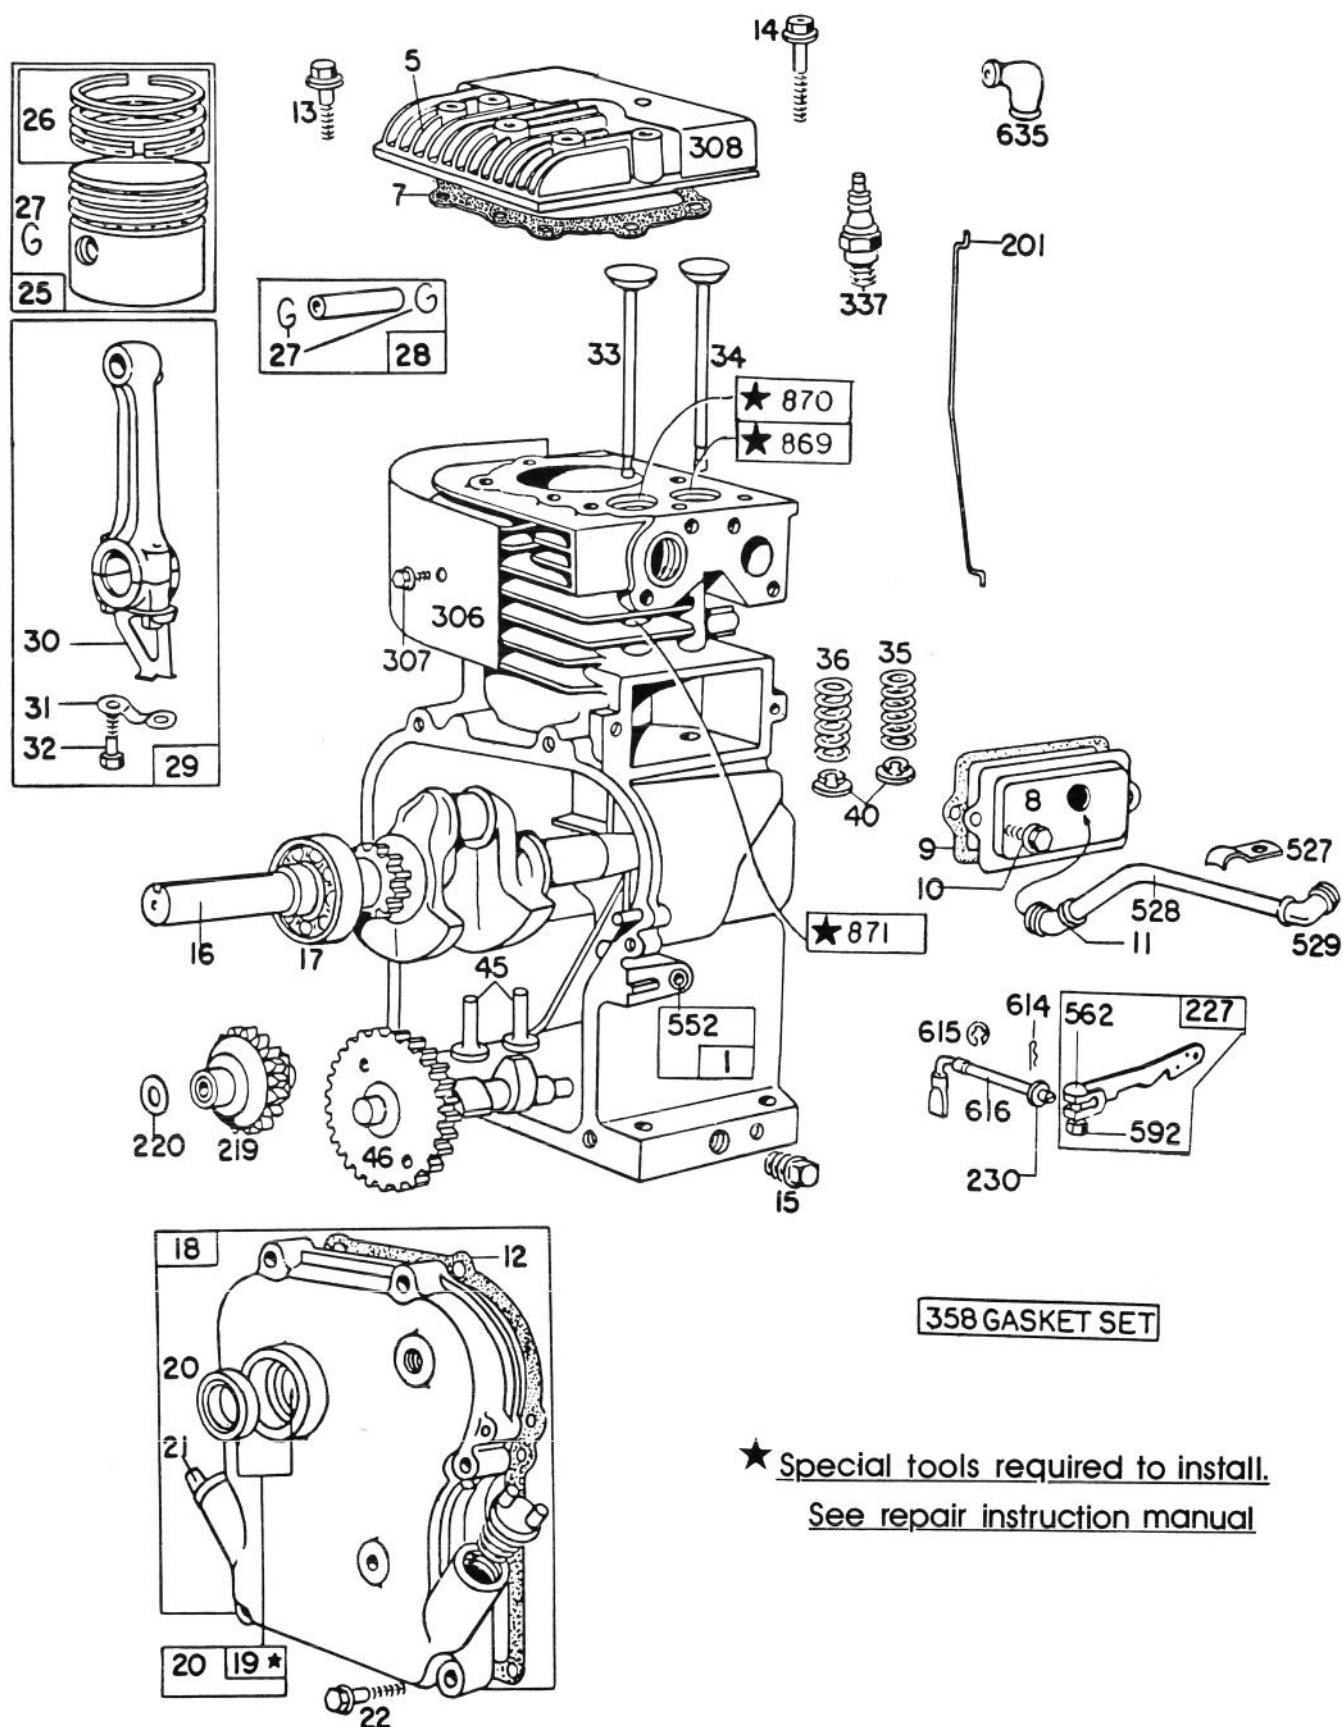

ENGINE BRIGGS & STRATTON MODEL NO. 130232 TYPE NO. 0497-01

Ref. No.	Part No.	Description	No. Used
1	391977	Cylinder Assembly	1
5	211542	Head — Cylinder	1
7	*270383	Gasket — Cylinder Head	1
8	294178	Breather — Valve Chamber	1
9	*27549	Gasket — Valve Cover	1
10	93394	Screw — Breather Mtg. Sem	1
11	66578	Grommet — Breather Tube	1
12	*270080	Gasket — Crankcase — .015" thick (Standard)	1
	*270125	Gasket — Crankcase — .005" thick	1
	*270126	Gasket — Crankcase — .009" thick	1
13	93368	Screw — Cylinder Head (2-3/32" Long)	1
14	93369	Screw — Cylinder Head (2-15/32" Long)	1
15	91249	Plug — Pipe, 1/4" Std., Square Head	1
16	260958	Crankshaft	1
17	99158	Bearing — Ball	1
18	298204	Cover Assy. — Crankcase	1
19	297603	Bushing — Crankcase Cover Note: Requires special tools for installation.	1
20	293740	Seal — Oil	1
21	66768	Plug — Oil Filler	1
22	93032	Screw — Crankcase Cover Mounting Sem	1
PISTON			
RING SETS:			
Note: For Chrome Piston Ring Set — Standard Size — order Part No. 299742.			
25	298904	Piston Assy. — Standard	1
	298905	Piston Assy. — .010" O.S.	1
	298906	Piston Assy. — .020" O.S.	1
	298907	Piston Assy. — .030" O.S.	1
26	298982	Ring Set — Standard Piston	1
	298983	Ring Set — .010" O.S. Piston	1
	298984	Ring Set — .020" O.S. Piston	1
	298985	Ring Set — .030" O.S. Piston	1
27	26026	Lock — Piston Pin	1
28	298909	Pin Assy. — Piston — Standard	1
	298908	Pin Assy. — Piston — .005" O.S.	1


Ref. No.	Part No.	Description	No. Used
29	299430	Rod Assy. — Connecting Note: For Connecting Rod with .020" undersize Crankpin Bore — order No. 390459.	1
30	221890	Dipper — Connecting Rod	1
31	221876	Lock — Conn. Rod Screw	1
32	92296	Screw — Connecting Rod	1
33	211119	Valve — Exhaust	1
34	261044	Valve — Intake	1
35	260552	Spring — Intake Valve	1
36	26478	Spring — Exhaust Valve	1
40	93312	Retainer — Valve Spring	1
45	260642	Tappet — Valve	1
46	211117	Gear — Cam	1
201	260661	Link — Governor	1
219	391737	Gear — Governor	1
220	221551	Washer — Thrust	1
227	393920	Lever and Bushing Assy. — Governor	1
230	222450	Washer — Governor Lever (1/4" I.D.)	1
306	221511	Shield — Cylinder	1
307	93042	Screw — Cylinder Shield Mounting Sem	1
308	221512	Cover — Cylinder Head	1
337	293918	Plug — Spark (with Gasket) 1-1/2" High — Resistor Type Note: For Ignition Cable Terminal order No. 221798.	1
358	297615	Gasket Set	1
527	221514	Clamp — Breather Tube	1
528	230722	Tube — Breather	1
529	67838	Grommet — Breather Tube	1
552	231079	Bushing — Governor Crank (1/4" I.D.)	1
562	92613	Bolt — Governor Lever	1
592	231082	Nut — Hex.	1
614	93306	Cotter — Hair Pin	1
615	93307	Retainer — E-Ring	1
616	231077	Crank — Governor (1/4" Dia.)	1
635	66538	Elbow — Spark Plug	1
869	211787	Seat — Intake Valve (Std.)	1
870	211172	Seat — Exhaust Valve (Std.)	1
871	63709	Guide — Exhaust Valve	1

* Included in Gasket Set — Part No. 297615

Model 130200 Series Piston Ring Sets;

Note: For Chrome Piston Ring Set — Standard Size Order Part No. 299742.

ENGINE BRIGGS & STRATTON MODEL NO. 130232 TYPE NO. 0497-01

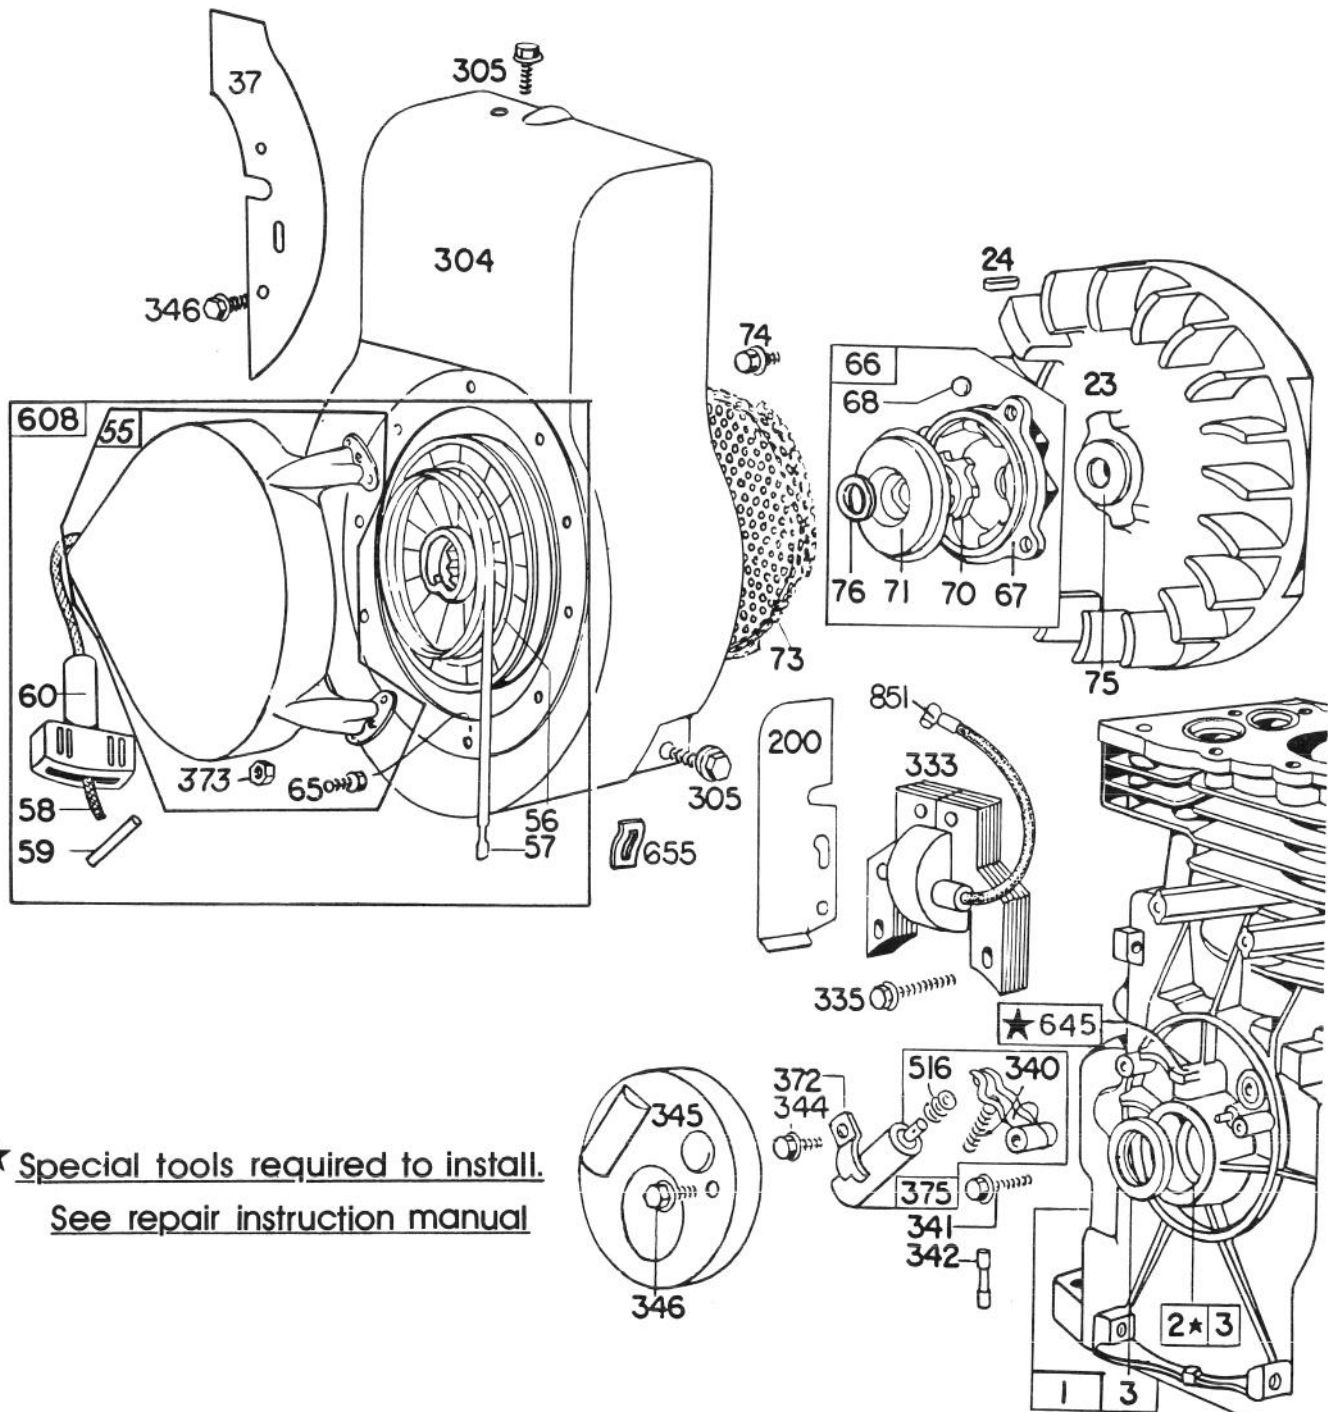


★ Special tools required to install.
See repair instruction manual

ENGINE BRIGGS & STRATTON MODEL NO. 130232 TYPE NO. 0497-01

Ref. No.	Part No.	Description	No. Used
1	391977	Cylinder Assembly	1
2	297565	Bushing — Cylinder	
		Note: Requires special tools for installation	1
3	299819	Seal — Oil	1
23	297229	Flywheel — Magneto	1
24	61760	Key — Flywheel	1
37	222443	Guard — Flywheel	1
55	299431	Housing — Rewind Starter	1
56	295871	Pulley — Rewind Starter (Includes 63" long rope) If longer rope is required, order rope No. 66894 and cut to length	1
57	294303	Spring — Rewind Starter	1
58	66884	Rope — Rewind Starter — 63" long (For use with Plastic Pulley) If longer rope is required, order rope No. 66894 and cut to length	1
59	230228	Pin — Starter Grip	1
60	66728	Grip — Starter Rope	1
65	93067	Screw — Stamped Steel Housing Mtg. Sem	1
66	298310	Clutch Assy. — Rewind Starter	1
67	212131	Housing — Starter Clutch	1
68	63770	Ball — Clutch	1
70	298436	Ratchet — Rewind Starter	1
71	221653	Washer — Clutch Retainer	1
73	221923	Screen — Starter Pulley	1
74	93490	Screw — Sem	1

Ref. No.	Part No.	Description	No. Used
75	220865	Washer — Spring	1
76	68238	Washer — Ratchet Sealing	1
200	221480	Guide — Air	1
304	299410	Housing — Blower	1
305	93158	Screw — Blower Housing Mtg.	1
333	298316	Armature — Magneto	1
335	93414	Screw — Armature Mtg. Sem	1
340	26018	Spring — Breaker Arm	1
341	93381	Screw — Breaker Arm Mounting Sem	1
342	65704	Plunger — Breaker Point	1
344	93042	Screw — Condenser Clamp Mounting Sem	1
345	220366	Cover — Breaker Point and Condenser	1
346	93705	Screw — Sem	1
372	220477	Clamp — Condenser	1
373	92987	Nut — Hex	1
375	294628	Breaker Points and Condenser Set Note: 299061 Ignition Kit Includes: 294628 Set	1
		65704 Plunger	1
		61760 Key — Flywheel	1
516	260374	Spring — Connector	1
608	390463	Starter Assy. — Rewind	1
645	23513	Bushing — Plunger	1
655	222598	Anchor — Spring	1
851	221798	Cable Terminal — Ignition	1

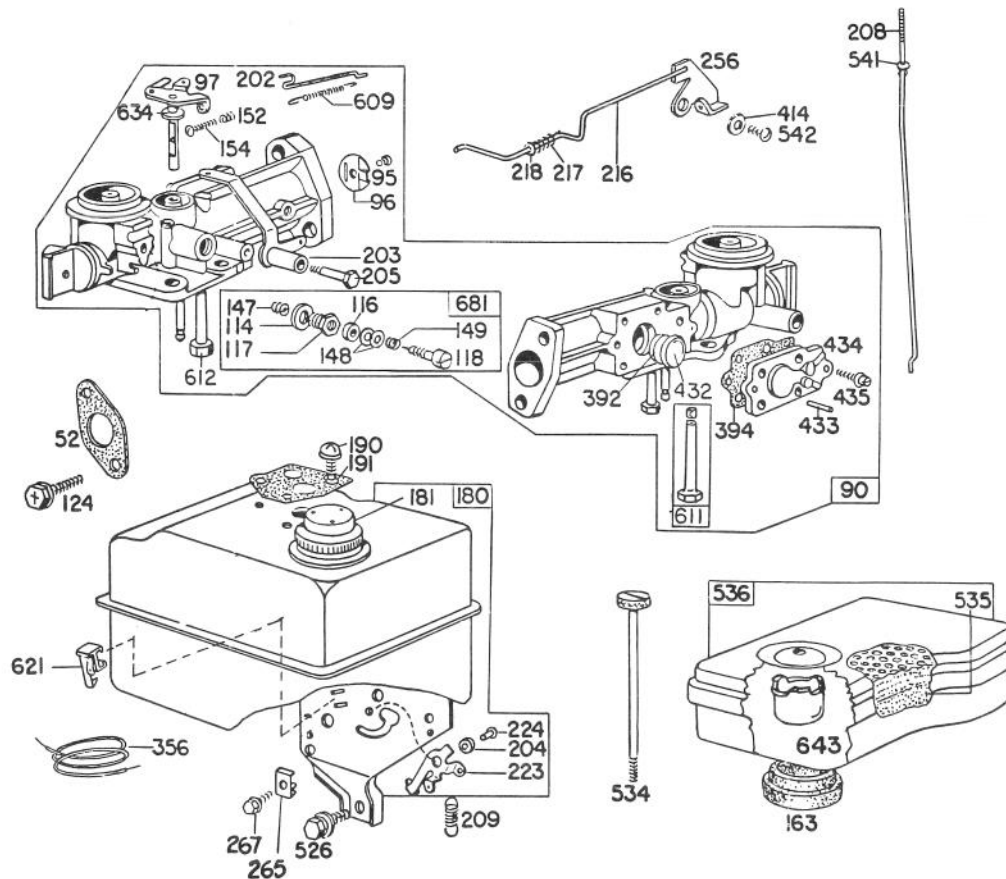

ENGINE BRIGGS & STRATTON MODEL NO. 130232 TYPE NO. 0497-01

Ref. No.	Part No.	Description	No. Used
52	*27355	Gasket - Carburetor Mounting	2
90	299576	Carburetor Assembly	1
95	93499	Screw - Throttle Valve to Shaft Sem	1
96	211203	Throttle - Carburetor	1
97	299212	Shaft and Lever - Throttle	1
114	66594	Gasket - Needle Valve Nut	1
116	65978	Packing - Needle Valve	1
117	230590	Nut - Needle Valve	1
118	23433	Valve - Needle	1
124	93357	Screw - Hex. Head	1
147	230591	Seat - Needle Valve	1
148	22235	Washer - Needle Valve	2
149	26336	Spring - Needle Valve	1
152	260575	Spring - Throttle Adjustment	1
154	93527	Screw - Machine, Rd. Hd.	1
163	27660	Gasket - Air Cleaner Mounting	1
180	297600	Tank Assembly - Fuel	1
181	392304	Cap - Fuel Tank	1
190	93341	Screw - Fuel Tank Mtg. Sem	1
191	*27911	Gasket - Fuel Tank Mounting	2
202	260678	Link - Throttle	1
203	393919	Crank and Bushing - Bell	1
204	230844	Bushing - Governor Lever (Flat)	1
205	93838	Screw - Shoulder	1
208	230737	Rod - Control	1
209	260695	Spring - Governor	1
216	299859	Link - Choke (Includes Bell Crank)	1
217	260189	Spring - Choke Link	1

Ref. No.	Part No.	Description	No. Used
218	221198	Washer - Choke Link	1
223	221517	Lever - Governor Control	1
224	93491	Rivet - Governor Control Lever Mounting	1
256	299859	Crank - Bell (Includes Choke Link)	1
265	221535	Clamp - Casing	1
267	93496	Screw - Sem	1
356	295413	Wire - Ground	1
392	260455	Spring - Fuel Pump Diaphragm	1
394	270026	Diaphragm	1
414	220982	Washer	1
432	221377	Cap - Spring	1
433	93265	Pin - Diaphragm Cover	1
434	210959	Cover - Diaphragm	1
435	93141	Screw - Diaphragm Cover	1
526	93343	Screw - Tank Bracket Mounting Sem	1
534	93322	Screw - Air Cleaner	1
535	27987	Element - Air Cleaner	1
536	297036	Cleaner Assembly - Air	1
541	22398	Washer	1
542	92265	Screw	1
609	260694	Spring - Throttle Link	1
611	391813	Fuel Pipe and Clip Assembly	1
612	296811	Pipe - Fuel	1
621	297472	Switch - Stop	1
634	270167	Washer, Throttle Shaft (Felt)	1
643	221321	Cup - Air Cleaner	1
681	299060	Needle Valve Kit	1

*Included in Gasket Set - Part No. 297615

The Toro Promise

A One Year Limited Warranty on Turf Products Other Than Walk Rotary Mowers

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Turf Products	1 Year
Hevi-Duty Walk Rotary Mowers	90 Days

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write: TORO Turf Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction or non-use.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

COUNTRIES OTHER THAN THE UNITED STATES OR CANADA

Customers who have purchased TORO products exported from the United States or Canada should contact their TORO Distributor (Dealer) to obtain guarantee policies for your country, province or state. If for any reason you are dissatisfied with your Distributor's service or have difficulty obtaining guarantee information, contact

the TORO importer. If all other remedies fail, you may contact us at The Toro Company.

International Group
Service Department
One Corporate Center
7401 Metro Boulevard
Minneapolis, Minnesota 55435 U.S.A.

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The 58" Professional has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on left side of main frame sulky mounting tube. In any correspondence concerning the 58" Professional, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the 58" Professional.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]

MAINTENANCE RECORD

[illegible]