



Reelmaster[®] 5500-D 4WD

Model No. 03551—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents


Description	Page
Frame and Body Assembly	4
Steering Tower Assembly	6
Steering Valve Assembly No. 99-8959	8
Traction and Brake Pedal Assembly	9
Seat Frame and Throttle Assembly	10
Seat and Suspension Assembly	11
Seat Suspension Assembly No. 75-3000	12
Control Console Assembly	13
Diagnostic-ACE Display Assembly	14
Hydraulic Filter and Reservoir Assembly	15
Fuel Tank Assembly	16
Fuel Tank Assembly No. 99-8351	17
Front Axle Assembly	18
Transmission Assembly	19
Transmission Assembly No. 75-0012	20
Traction Control Assembly	22
Gear Pump Installation Assembly	23
Engine Installation Assembly	24
Muffler and Pump Drive Assembly	25
Engine Components Assembly	26
Air Cleaner Assembly No. 98-4517	27
Water/Fuel Separator Assembly No. 98-9305	28
Fan Drive Assembly	29
Radiator Assembly	30
Oil Cooler / Radiator Assembly	31
Hood Assembly	32
Lift Block Assembly	33
Lift Block Assembly No. 99-6979	34
Mow Block Assembly	35
Mow Block Assembly No. 99-6978	36
Rear Hydraulic Manifold Assembly	37
Reel Motor and Hose Assembly	38
Reel Motor No. 98-9999	39
Front Lift Circuit Assembly	40
Hydraulic Cylinder Assembly No. 99-6987	41
Hydraulic Cylinder Assembly No. 99-6986	42
Front Lift Arm Assembly	43
Rear Lift Cylinder Assembly	44
Hydraulic Cylinder Assembly No. 98-3945	45
Rear Lift Arm Assembly	46
Rear Axle Support	47
4WD Rear Axle Assembly	48
Hydraulic Cylinder Assembly No. 98-8163	49
4 WD Shaft Assembly	50
Clutch Housing Assembly	51
Roll-Over-Protection-System and Stabilizer Assembly	52
Axle Assembly No. 99-6981-03	53
Brake Assembly	55

Description	Page
Rear Axle Assembly No. 98-3925	
Bevel Pinion Shaft Assembly	56
Rear Axle Assembly No. 98-3925 (Continued)	
Differential Assembly	57
Rear Axle Assembly No. 98-3925 (Continued)	
Axle Support Assembly	58
Rear Axle Assembly No. 98-3925 (Continued)	
Bevel Gear Case Assembly	59
Rear Axle Assembly No. 98-3925 (Continued)	
Bevel Gear Shaft Assembly	60
Rear Axle Assembly No. 98-3925 (Continued)	
Axle Case Assembly	61
Rear Axle Assembly No. 98-3925 (Continued)	
Axle Case Assembly	62
Hydraulic Schematic	63
Electrical Schematic	64
Electrical Schematic - Turfdefender	65
Crankcase Assembly	66
Oil Pan Assembly	67
Cylinder Assembly	68
Gear Case Assembly	69
Filter, Oil Cooler and Pipe Assembly	70
Head Cover Assembly	71
Dipstick Assembly	72
Main Bearing Case Assembly	73
Camshaft Assembly	74
Piston & Crankshaft Assembly	75
Flywheel Assembly	76
Fuel Camshaft Assembly	77
Engine Stop Lever Assembly	78
Stop Solenoid & Fuel Pump Assembly	79
Injection Pump Assembly	80
Injection Pump Assembly No. 98-9643	81
Governor Assembly	82
Speed Control Plate Assembly	83
Nozzle Holder & Glow Plug Assembly	84
Nozzle Holder Assembly No. 98-9468	85
Alternator and Pulley Assembly	86
Alternator Assembly NO. 98-9474	87
Starter Mount Assembly	88
Starter Assembly No. 98-9705	89
Water Flange and Thermostat Assembly	90
Water Pump Assembly	91
Valve and Rocker Arm Assembly	92
Exhaust Manifold and Gasket Assembly	93
Turbo Charger Assembly	94
Special Tools	95
Gauge Bar and Backlapping Brush Assembly	96

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

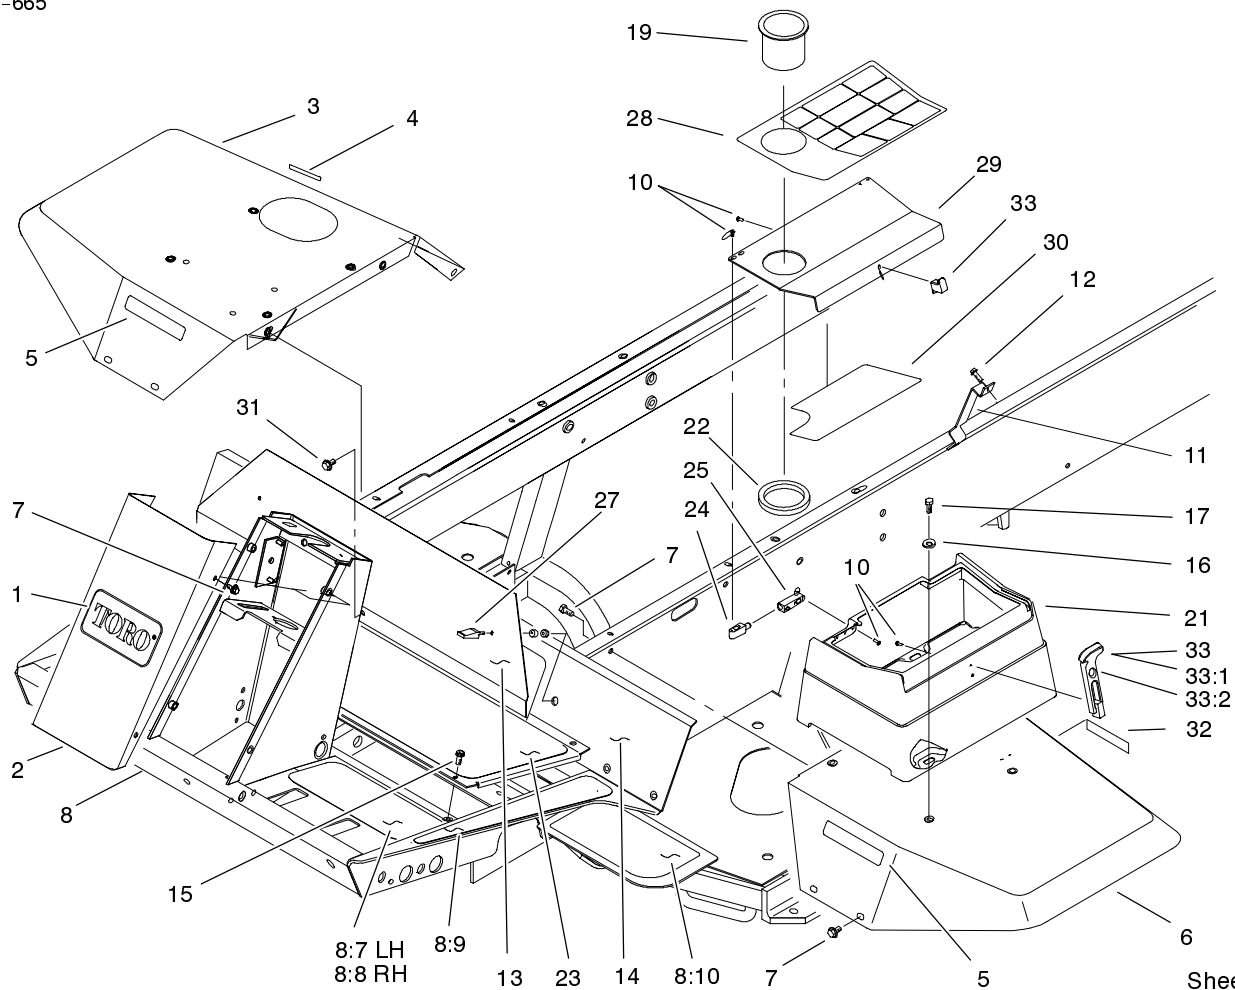


Sheet No.:2

Frame and Body Assembly

Ref. No.	Part No.	Qty.	Description
1	62-5550	1	Decal-Toro
2	93-7996-01	1	Cover - Tower
3	93-7579	1	Fender-RH
4	93-6686	1	Decal-Oil, Hydraulic
5	93-6689	2	Decal - No Riders
6	75-3860	1	Fender-LH
7	3234-14	14	Screw-HHF
8	104-1425	1	Frame ASM.
10	104-9316	11	Screw-TAP, PPH
11	98-4572	1	Bracket-Clamp, Hose
12	32144-14	2	Screw-HWH
13	75-1390-01	1	Cover-Access, Front
14	75-1410-01	1	Plate-Access, Floor
15	3234-7	1	Screw-HHF
15	75-6840	4	Knob - Knurled
16	3256-3	4	Washer-Flat
17	322-3	4	Screw-HH
19	94-1410	1	Holder-Can, Beverage
21	104-0026	1	Toolbox
22	104-1476	1	Ring-Rubber
23	75-0630	1	Tread-Foot, Center
24	104-1496	2	Hinge - Pin
25	104-1497	2	Hinge - Receiver
27	74-5950	2	Latch-Swell
28	104-9294	1	Decal-Warning, CE
28	104-9295	1	Decal-Warning

Ref. No.	Part No.	Qty.	Description
29	104-1489-03	1	Cover-Toolbox
30	104-1434	1	Decal-Service Blank
30	104-1410	1	Decal-Swedish
30	104-1409	1	Decal-Spanish
30	104-1406	1	Decal-Japanese
30	104-1407	1	Decal-Norwegian
30	104-1408	1	Decal-Portuguese
30	104-1401	1	Decal-Dutch
30	104-1403	1	Decal-French
30	104-1404	1	Decal-German
30	104-1405	1	Decal-Italian
30	104-1402	1	Decal-Finnish
30	104-0081	1	Decal-Service Instructions
30	104-1400	1	Decal-Danish
31	3234-5	1	Screw-HHF
32	93-6680	1	Decal - Diesel Only
33	94-5626	1	Latch - Draw, Flexible
33:1	100-5806	1	Handle - Latch
33:2	100-5807	1	Keeper - Latch

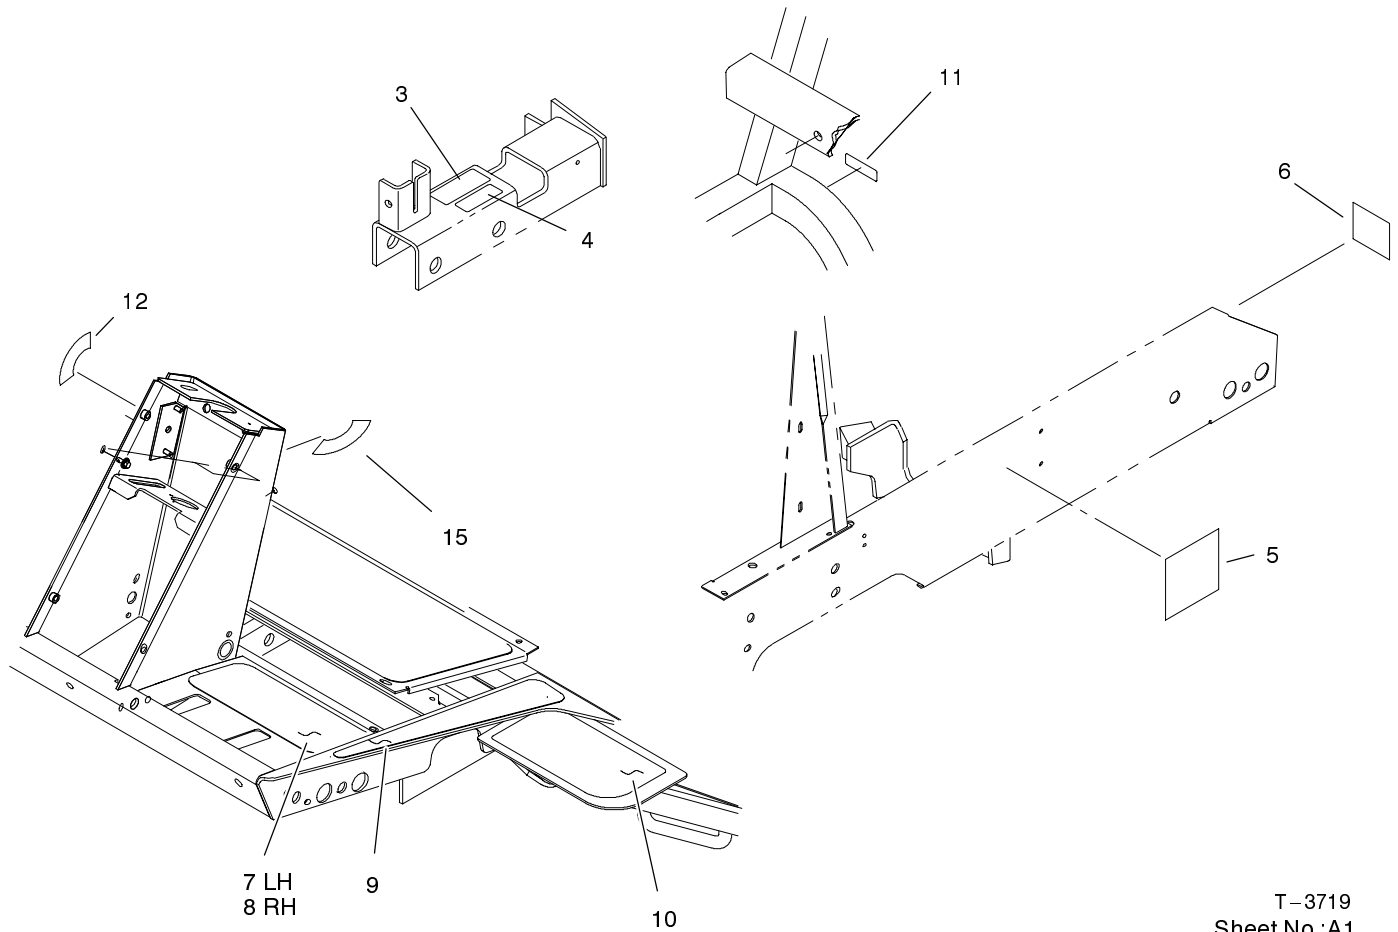


T-3719
Sheet No.:A1

Frame Assembly No. 104-1425

Ref. No.	Part No.	Qty.	Description
3	93-6693	1	Decal-Plate, Floor
4	93-6686	1	Decal-Oil, Hydraulic
5	104-0049	2	Cover - Side Rail
6	62-7400	1	Decal-Toro
7	75-0620	1	Tread-Foot, LH
8	75-0610	1	Tread-Foot, RH
9	93-7592	2	Tread Foot Rest - LH
10	104-0048	1	Tread-Step
11	93-6691	1	Decal-Bolt, Eccentric
12	93-6699	1	Decal - Fast/Slow
15	104-9299	1	Decal-Key Switch

Ref. No.	Part No.	Qty.	Description

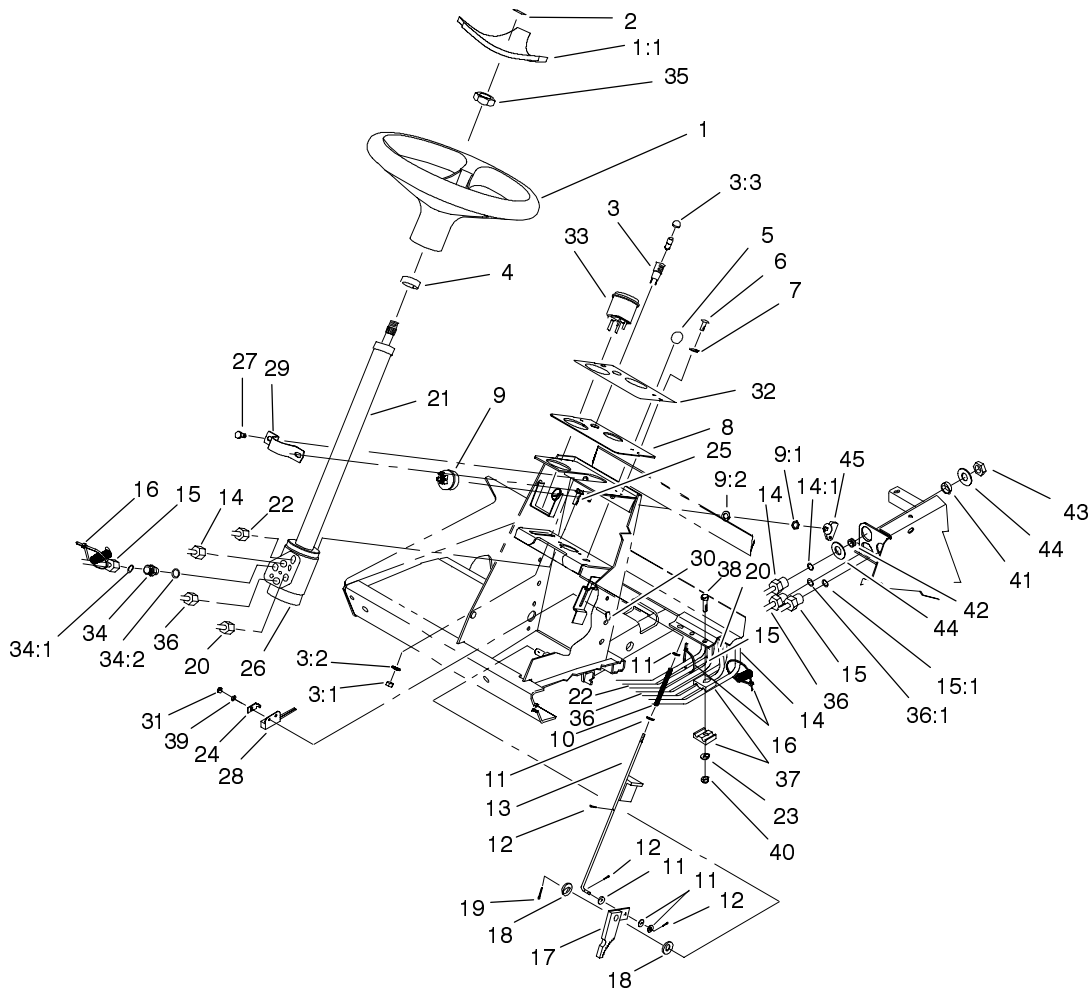


Sheet No.:3

Steering Tower Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1471	1	Wheel - Steering
1:1	98-1468	1	Cover-Wheel, Steering
2	98-1459	1	Decal-Toro
3	44-2210	1	Light-Indicator, Red
3:1	218-535	1	Nut-Hex
3:2	218-536	1	Washer-Lock
3:3	218-533	1	Lens
4	21-9260	1	Cover-Dust
5	233-17	1	Knob
6	87-6620	2	Screw-Special
7	3256-1	2	Washer-Flat
8	93-7998-03	1	Plate - Instrument
9	27-2360	1	Switch-Key
9:1	218-446	1	Nut-Hex
9:2	218-447	1	Washer-Lock
10	95-1821-03	1	Spring - Compression
11	3256-22	5	Washer-Flat
12	3272-5	3	Pin-Cotter
13	104-1492	1	Rod Assembly
14	98-3912	1	Tube ASM
14:1	237-22	1	O-Ring
15	98-3910	1	Tube ASM
15:1	237-22	1	O-Ring
16	3290-378	3	Tie-Cable
17	63-7900-03	1	Rack


Ref. No.	Part No.	Qty.	Description
18	3256-26	2	Washer-Flat
19	3272-10	1	Pin-Cotter
20	98-3908	1	Tube ASM
21	94-9951	1	Column - Steering
22	98-3909	1	Tube ASM
23	3256-23	3	Washer-Flat
24	100-4872	1	Plate-Switch, Neutral
25	33103-020	3	Screw-HHF
26	99-8959	1	Control - Steering
27	32144-11	2	Screw-TAP
28	100-1270	1	Switch-Proximity
29	75-2810	1	Bracket-Column, Steering
30	104-1450	1	Bolt-CARR
31	3296-2	1	Nut-Lock
32	93-1263	1	Decal-Tower
33	85-4420	1	Speedometer
34	340-2	5	Adapter
34:1	237-22	1	O-Ring
34:2	237-42	1	O-Ring
35	94-9952	1	Nut-Hex
36	98-3911	1	Tube ASM
36:1	237-22	1	O-Ring
37	56-7973	6	Clamp-Tube
38	322-7	3	Screw-HH
39	3256-14	1	Washer-Flat

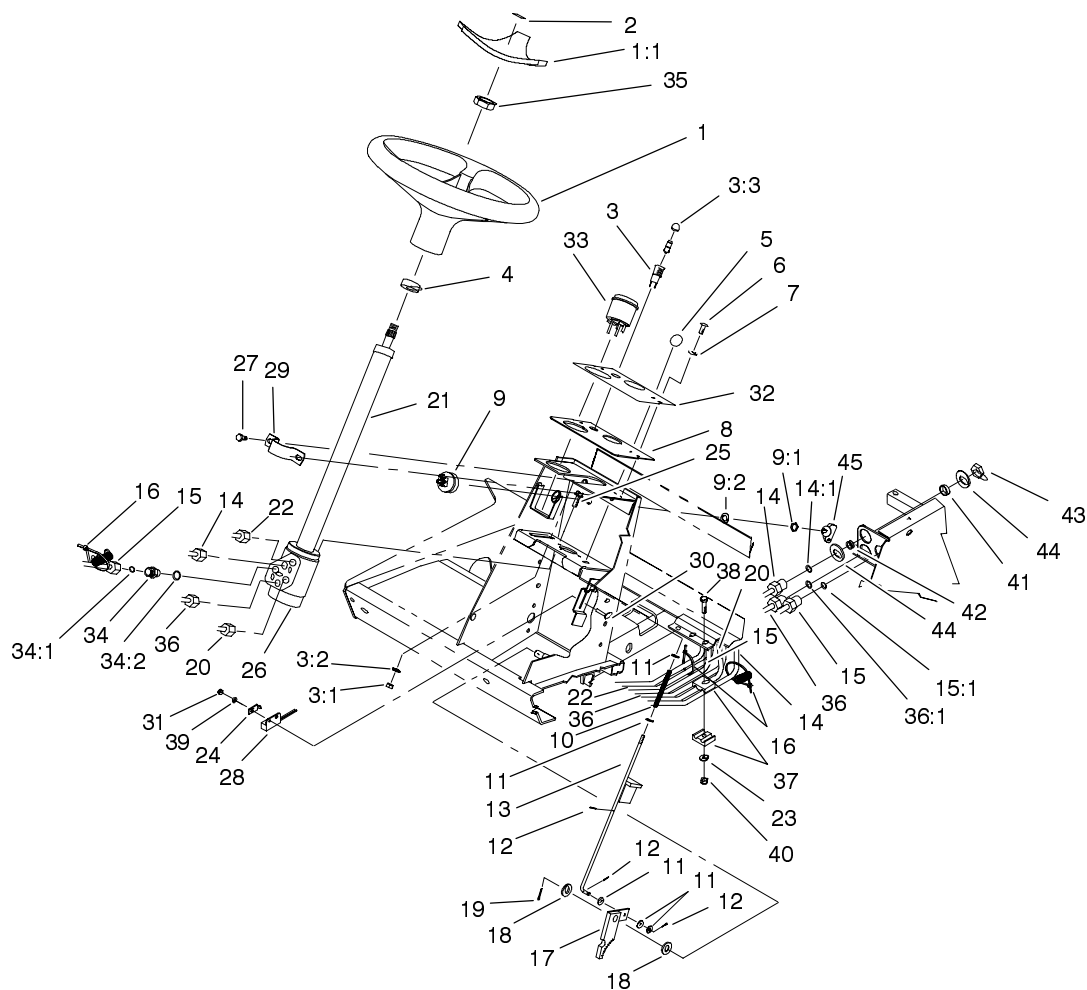

Sheet No.:3

Steering Tower Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
40	3296-29	3	Nut-Lock				
41	69-8970	3	Spacer				
42	240-4	3	Grommet-Rubber				
43	340-70	3	Locknut-Bulkhead				
44	69-8940	6	Washer				
45	63-8360	1	Key-Ignition				

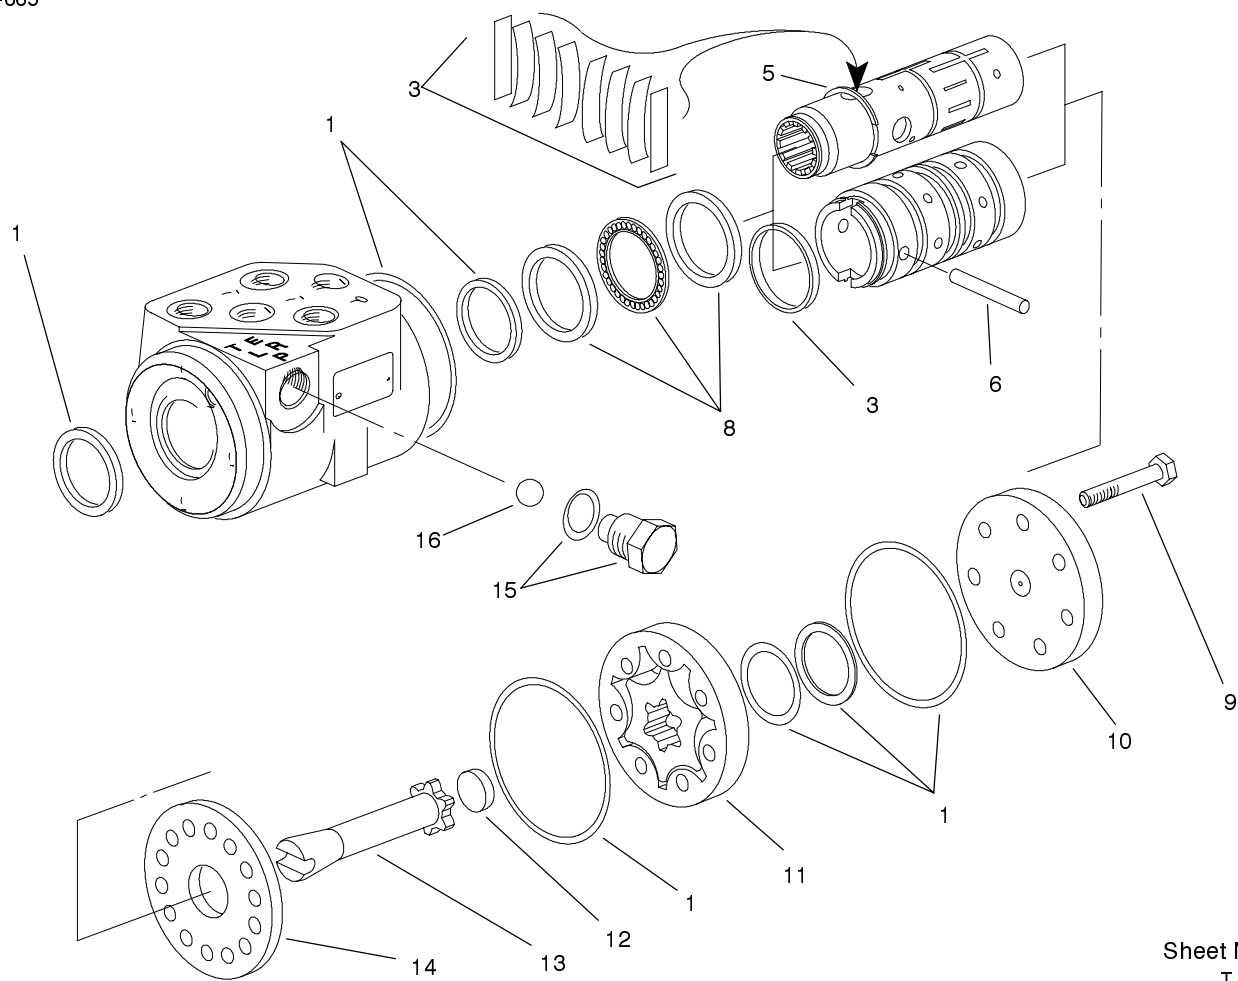


Sheet No.:A2
T-3216

Steering Valve Assembly No. 99-8959

Ref. No.	Part No.	Qty.	Description
1	94-4099	1	Kit - Seal
3	94-4095	1	Kit - Spring, Centering
5	94-4098	1	Ring - Retaining
6	94-4094	1	Pin
8	94-4096	1	Kit - Bearing
9	94-4088	7	Screw - Cap
10	94-4089	1	Cap - End
11	94-4090	1	Gerotor
12	94-4091	1	Spacer
13	94-4093	1	Drive
14	94-4092	1	Plate - Wear
15	94-4097	1	Plug ASM
16	94-4100	1	Ball

Ref. No.	Part No.	Qty.	Description

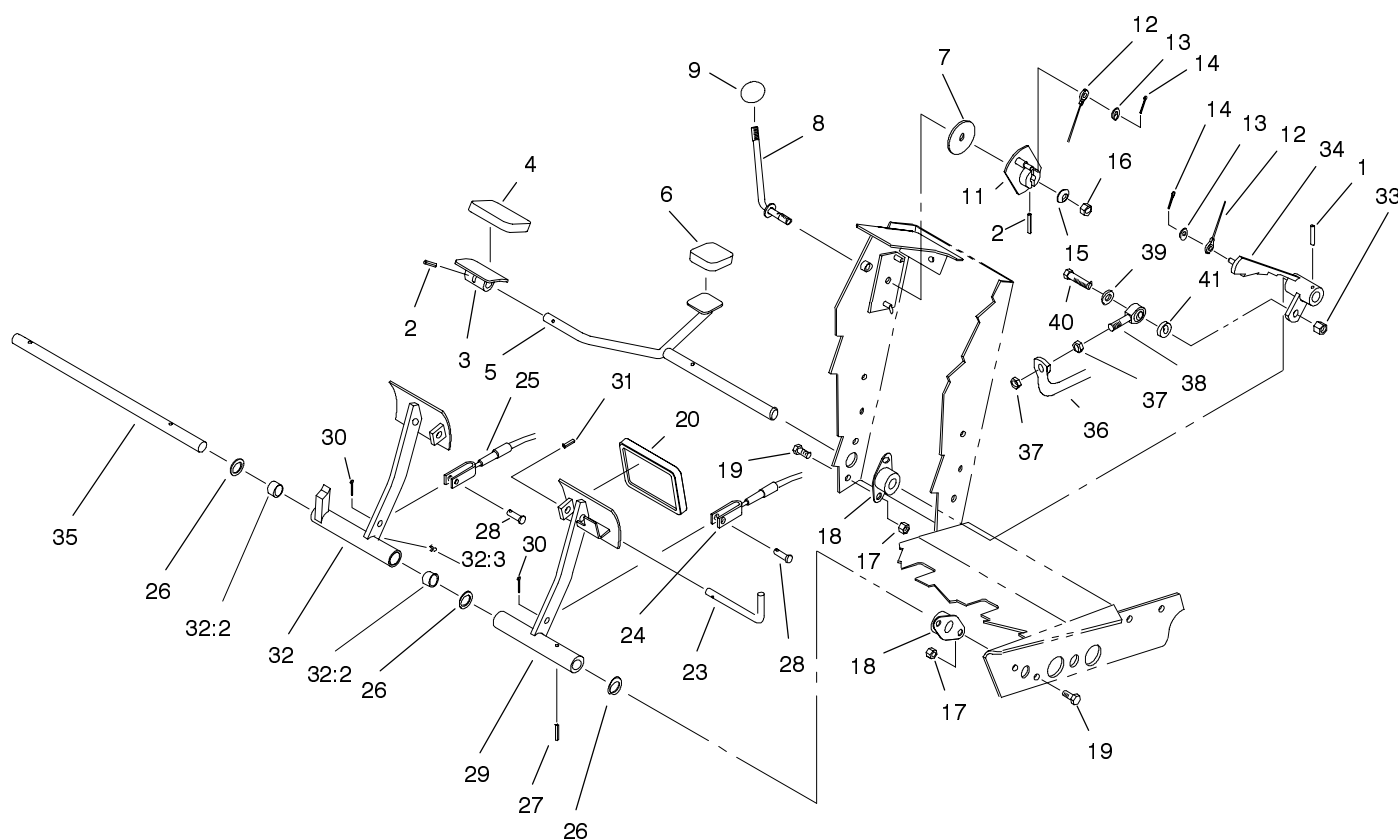


Sheet No.:4

Traction and Brake Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	32121-6	1	Pin-Roll
2	32121-45	2	Pin-Spring
3	49-6440-03	1	Pedal-Forward
4	74-9100	1	Pad-Pedal, Forward
5	75-2970	1	Pedal-Traction
6	74-9110	1	Pad-Pedal, Reverse
7	75-6550	1	Disc-Friction
8	75-6490	1	Lever
9	233-42	1	Knob
11	75-6510	1	Bracket-Lever
12	75-6580	1	Cable - Pedal
13	3256-22	2	Washer-Flat
14	3272-2	2	Pin-Cotter
15	3290-461	1	Washer-Spring
16	3296-59	1	Nut-Lock NI
17	3296-29	8	Nut-Lock
18	256-236	4	Bearing-Mount, Flange
19	322-3	8	Screw-HH
20	93-8742	2	Footpad - Brake
23	63-7880	1	Pin-Latch, Brake
24	63-7733	1	LH Brake Cable ASM
25	63-7732	1	RH Brake Cable ASM
26	3256-69	3	Washer-Flat
27	32121-16	1	Pin-Spring
28	283-58	2	Pin-Clevis

Ref. No.	Part No.	Qty.	Description
29	75-1440-03	1	Pedal-Brake, LH
30	3272-10	2	Pin-Cotter
31	32121-50	1	Pin-Spring
32	75-1430	1	Pedal-Brake, RH
32:2	256-42	2	Bushing
32:3	302-5	1	Fitting-Grease
33	3296-39	1	Nut-Lock, NI
34	75-3270-03	1	Hub-Pivot, Traction
35	75-1470	1	Pin-Pivot, Brake
36	75-2170-03	1	Tube-Control, Pump
37	3220-3	2	Nut-Jam
38	2411-36	1	Bearing-End, Rod
39	3256-24	1	Washer-Flat
40	323-9	1	Screw-HH
41	5-0652	1	Spacer

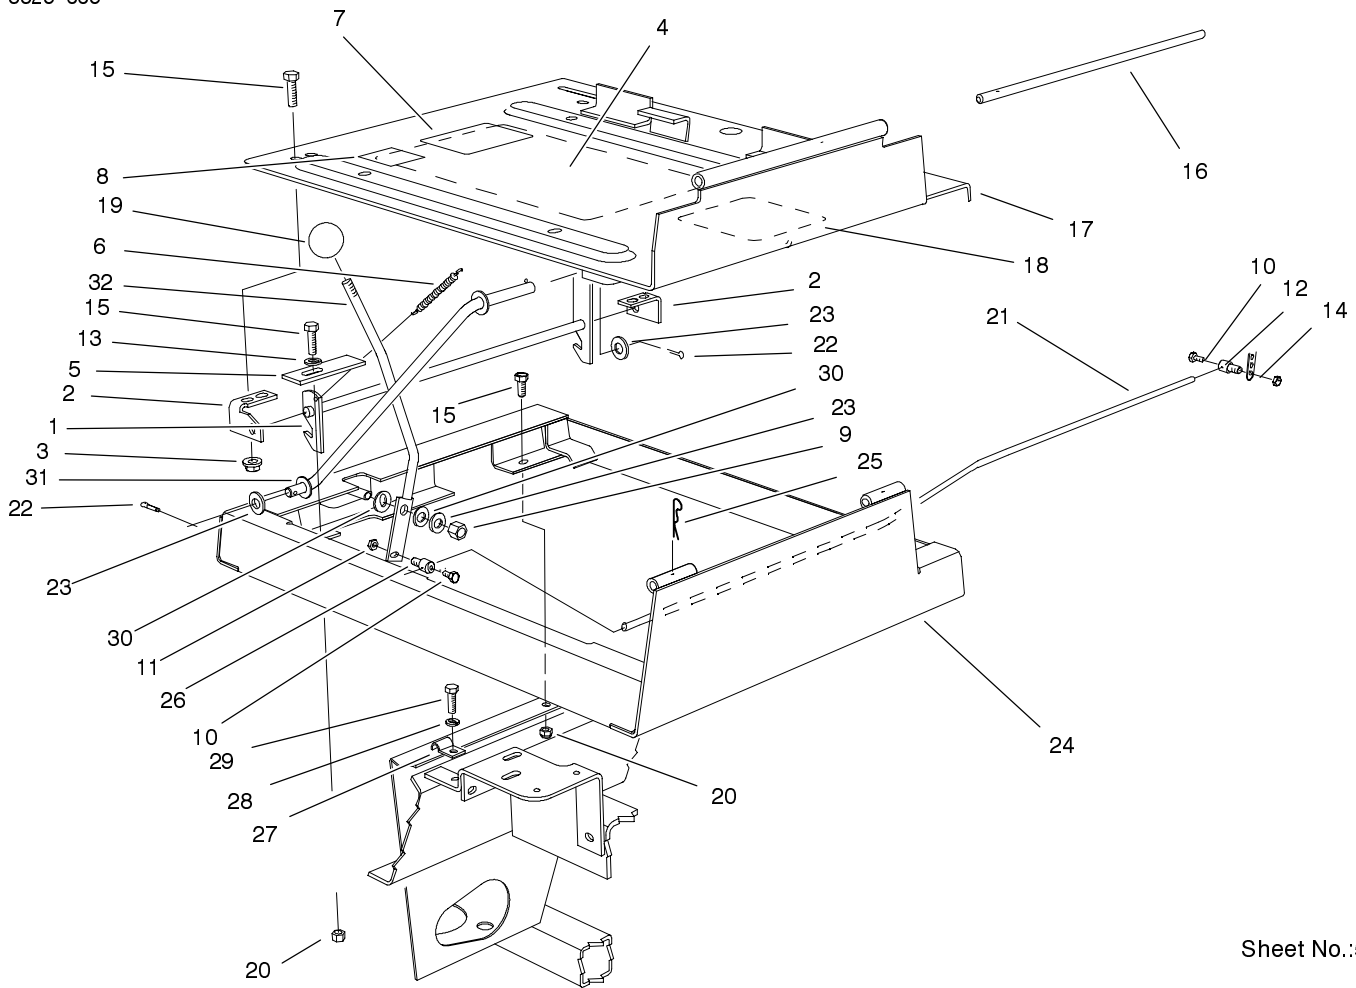


Sheet No.:5

Seat Frame and Throttle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-2354-03	1	Latch-Seat
2	98-2353	2	Bracket-Latch, Seat
3	32128-25	4	Nut-Flange
4	104-0082	1	Decal - Clip / Solenoid Instructions
5	98-9302	1	Plate-Stop, Idler
6	66-4190-03	1	Spring-Idler, Clutch
7	92-5524	1	Decal-Rating, Noise
8	63-9920	1	Decal-Level, Noise
9	3296-39	1	Nut-Lock, NI
10	25-8640	2	Screw-HH
11	3296-3	1	Nut-Lock NI
12	98-9311	1	Swivel - Throttle
13	3256-23	1	Washer-Flat
14	3296-20	1	Nut-Lock NI
15	322-3	8	Screw-HH
16	75-3400	1	Shaft-Pivot, Seat
17	98-2350-03	1	Plate-Seat
18	93-8060	1	Decal - Reels
19	233-42	1	Knob
20	3296-29	4	Nut-Lock
21	98-3926	1	Cable-Throttle
22	3272-10	2	Pin-Cotter
23	3256-24	3	Washer-Flat
24	98-2352-03	1	Frame-Seat
25	3290-467	1	Pin-Hair


Ref. No.	Part No.	Qty.	Description
26	93-0021	1	Swivel-Cable, Throttle
27	3-6657	1	Clip-Skid
28	3253-3	1	Washer-Lock
29	321-4	1	Screw-HH
30	66-2920	2	Washer-Friction
31	75-3680-03	1	Rod-Seat
32	75-3430-03	1	Lever-Throttle

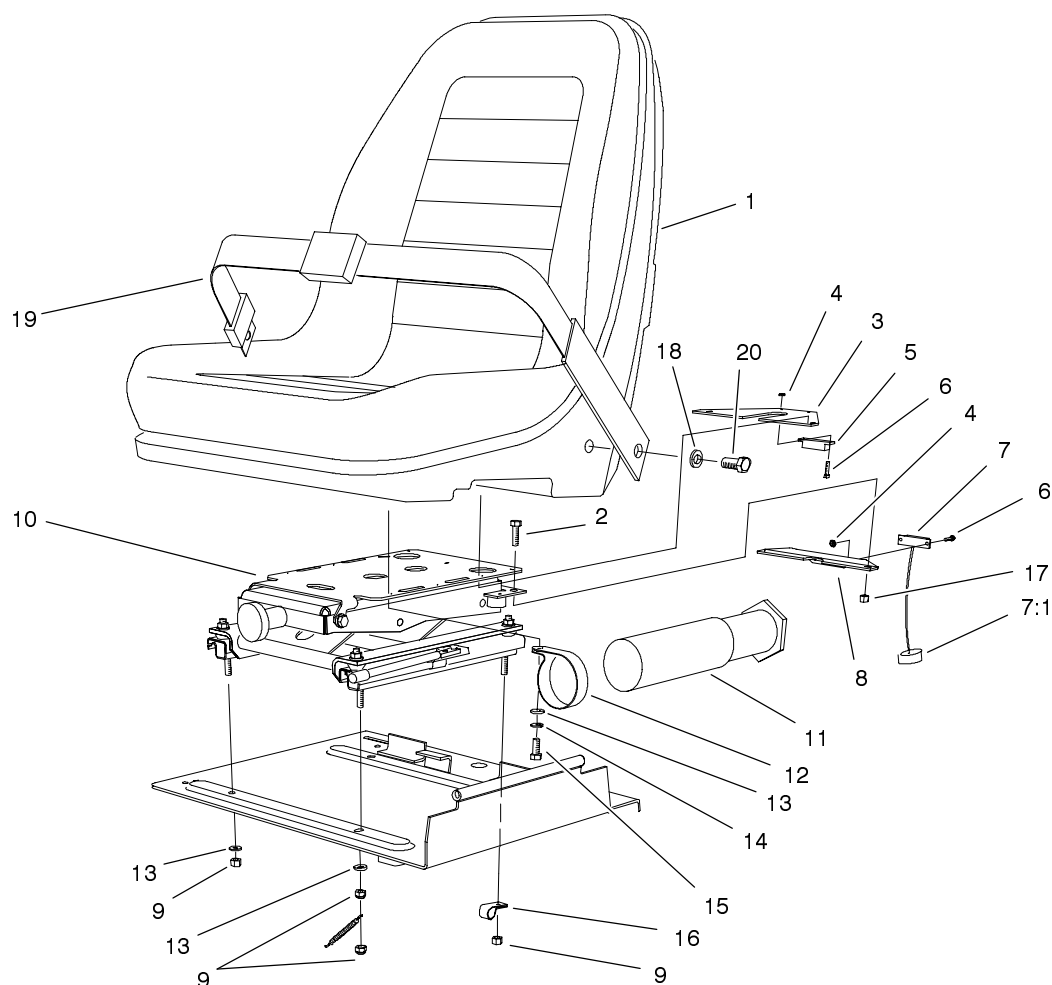

Sheet No.:6

Seat and Suspension Assembly

Ref. No.	Part No.	Qty.	Description
1	104-4620	1	Seat-Olympic, Toro
2	323-4	2	Screw-HH
3	75-4370-03	1	Bracket-Seat
4	3296-54	4	Nut-Lock NI
5	92-8753	1	Magnet-Switch, Reed
6	3250-29	4	Screw-PPH
7	92-8001	1	Sensor-Switch, Reed
7:1	93-0140	1	Grommet - Rubber
8	75-4360-03	1	Bracket-Suspension, Seat
9	3296-29	5	Nut-Lock
10	75-3000	1	Suspension-Seat
11	74-0720	1	Tube-Manual
12	2412-133	2	R-Clamp
13	3256-23	8	Washer-Flat
14	3253-4	4	Washer-Lock
15	322-3	4	Screw-HH
16	2412-93	1	R-Clamp
17	3296-39	2	Nut-Lock, NI
18	3253-6	2	Washer-Lock/Sp
19	21-4191	1	Seat Belt ASM
20	3212-4	2	Screw-HH

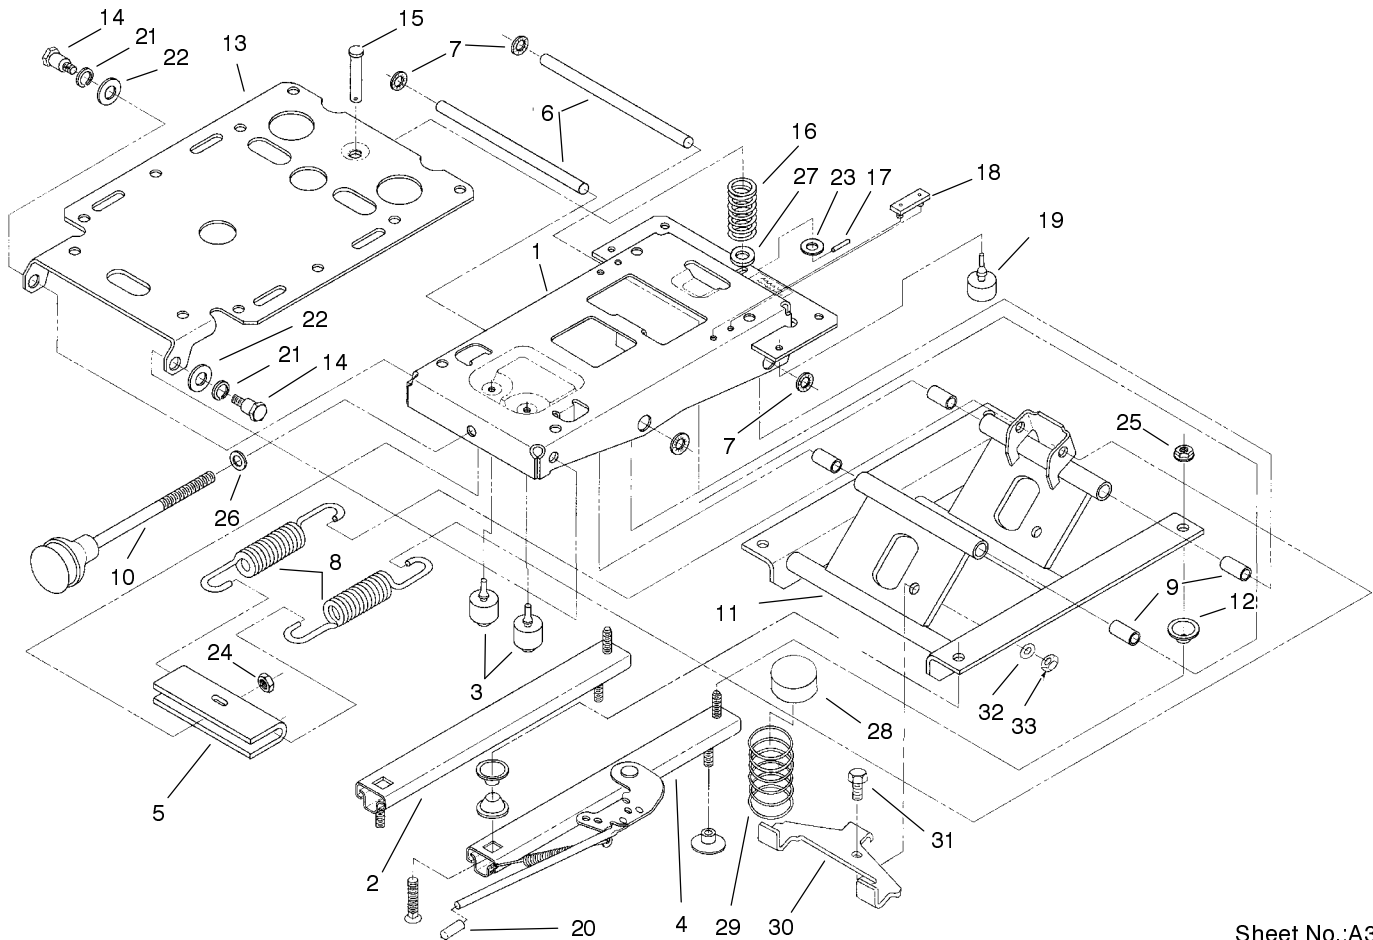


Sheet No.:A3

T-3437

Seat Suspension Assembly No. 75-3000

Ref. No.	Part No.	Qty.	Description
1	75-3480	1	Frame-Upper
2	66-8530	1	Adjuster
3	66-8520	2	Bumper-Downstop
4	82-9060	1	Adjuster W/Handle
5	77-2870	1	Hanger-Spring
6	76-1910	2	Shaft-Pivot
7	66-8560	4	Nut-Push
8	76-1940	2	Spring-Extension
9	76-1920	4	Bearing-Sleeve
10	76-1930	1	Knob-Adjuster, Tension
11	66-8610	1	Frame-Lower
12	66-9290	6	Spacer-Suspension
13	75-3580	1	Plate-Seat
14	75-3510	2	Bolt
15	80-4860	1	Pin - Clevis
16	75-3530	1	Spring
17	75-3540	1	Pin-Roll
18	75-3550	2	Bumper
19	76-2940	2	Bumper
20	75-3570	1	Tip
21	3253-6	2	Washer-Lock/Sp
22	3256-26	2	Washer-Flat
23	3256-24	1	Washer-Flat
24	3296-44	1	Nut-Lock NI
25	32128-26	4	Nut-Flange


Ref. No.	Part No.	Qty.	Description
26	3256-46	1	Washer-Flat
27	3256-5	1	Washer-Flat
28	93-3164	2	Cap
29	93-3163	2	Spring
30	93-3165	1	Bracket
31	322-6	1	Screw-HH
32	3253-33	1	Washer-Lock
33	3217-6	1	Nut-Hex

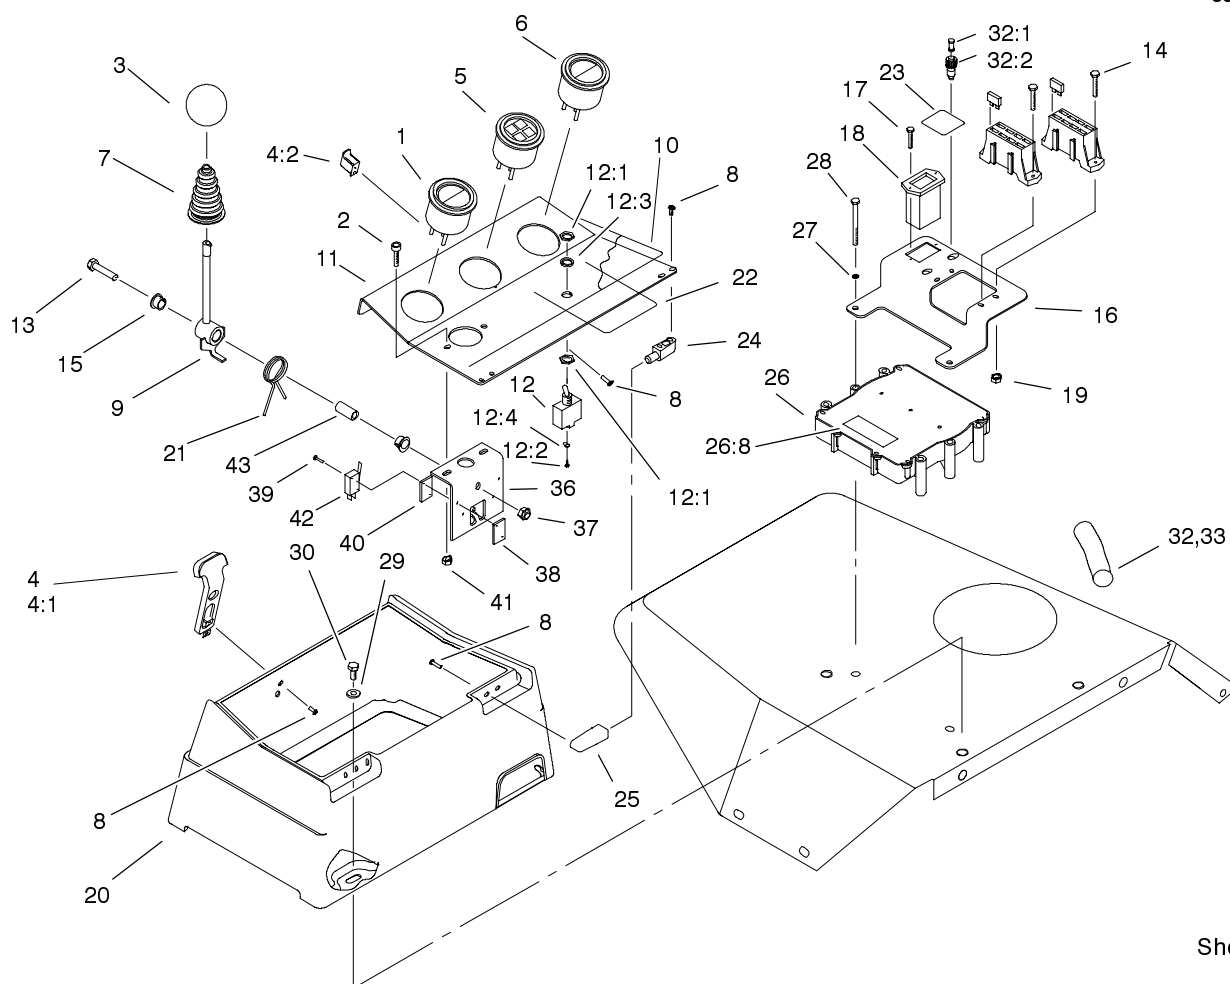

Sheet No.:7

Control Console Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9339	1	Gauge-Fuel	20	104-0027	1	Control Box
2	3258-166	2	Screw	21	93-5509	1	Spring - Tension
3	233-33	1	Knob	22	94-6767	1	Decal - Fuses
4	94-5626	1	Latch - Draw, Flexible	23	104-9298	1	Decal-Controller
4:1	100-5806	1	Handle - Latch	24	104-1496	2	Hinge - Pin
4:2	100-5807	1	Keeper - Latch	25	104-1497	2	Hinge - Receiver
5	98-9306	1	Light - Warning	26	92-5720	1	Controller-Electronic
6	98-9308	1	Gauge - Temperature	26:8	93-8053	1	Decal
7	93-5961	1	Boot - Lever	27	3253-3	2	Washer-Lock
8	104-9316	11	Screw-TAP, PPH	28	321-14	2	Screw-HH
9	104-9261	1	Lever Assembly	29	3256-3	3	Washer-Flat
10	104-9296	1	Decal-Control	30	322-3	3	Screw-HH
11	104-9251-03	1	Plate - Instrument	32	104-9313	1	Harness - Wire
12	99-8352	1	Switch-Backlap, Master	33	94-6343	1	Decal-I.d., Wire
12:1	218-498	2	Locknut-Hex	36	93-5991-03	1	Bracket - Lift Lever
12:2	218-588	3	Screw	37	3296-29	1	Nut-Lock
12:3	218-589	1	Washer	38	3290-354	2	Nut-Speed
12:4	3253-19	3	Washer-Lock/Sp	39	3290-329	4	Screw-PPH
13	322-8	1	Screw-HH	40	61-2990	2	Spacer
14	32105-13	4	Screw-Shh	41	32128-33	2	Nut-HF
15	93-5547	2	Bushing - Nylon	42	111332	2	Switch
16	104-1499-03	1	Bracket-Fuse Block	43	93-5512	1	Spacer
17	32144-18	2	Screw-HH				
18	75-6820	1	Hourmeter				
19	3296-2	4	Nut-Lock				

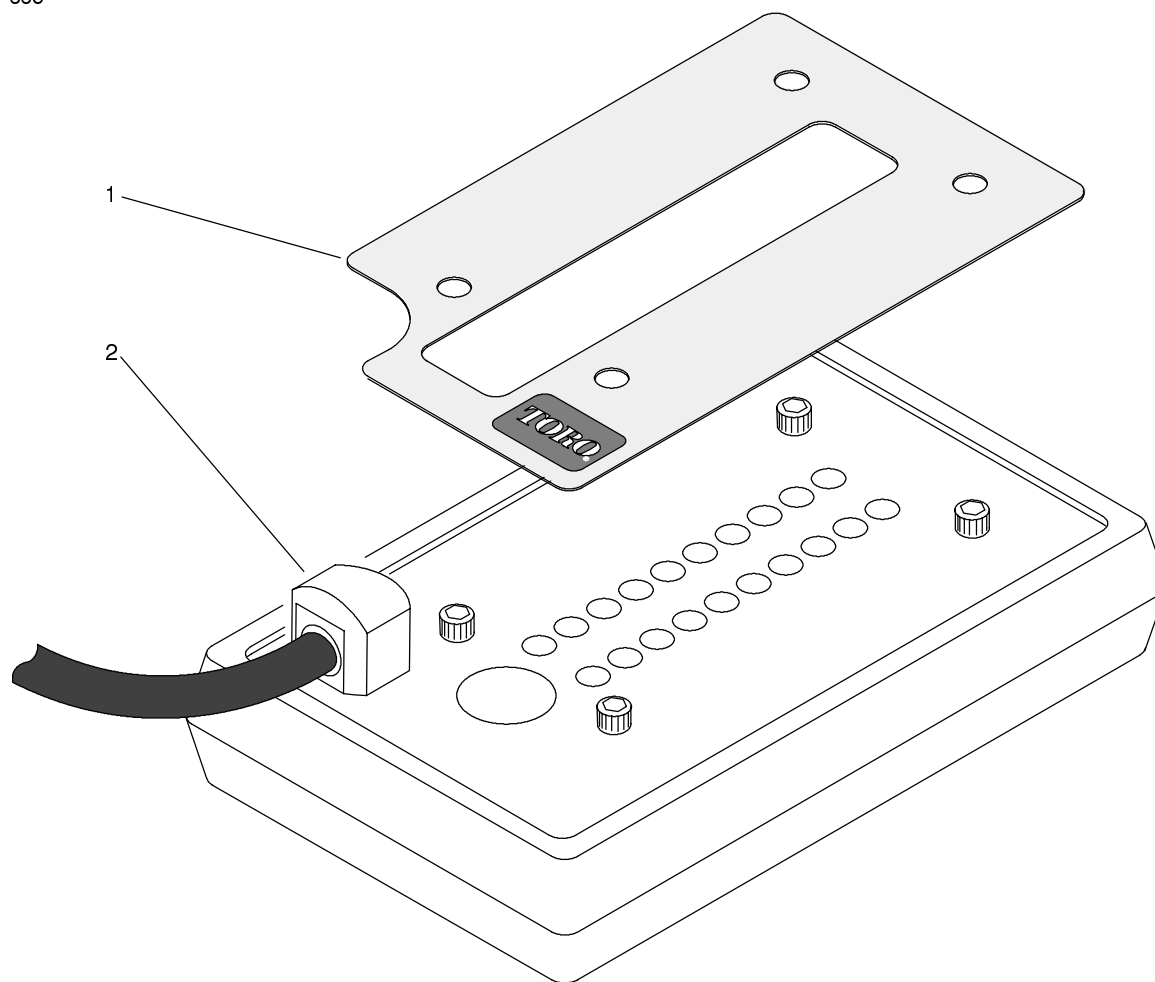


Sheet No.:A

T-1458

Diagnostic-ACE Display Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0029	1	Decal Diagnostics, Danish
1	104-0030	1	Decal Diagnostics, Dutch
1	104-0031	1	Decal Diagnostics, Finish
1	104-0034	1	Decal Diagnostics, Italian
1	104-0033	1	Decal Diagnostics, German
1	104-0032	1	Decal Diagnostics, French
1	104-0036	1	Decal Diagnostics, Nowegian
1	104-0037	1	Decal Diagnostics, Polish
1	104-0038	1	Decal Diagnostics, Spanish
1	104-0039	1	Decal Diagnostics, Swedish
1	104-0083	1	Decal-Diagnostics
1	104-0035	1	Decal Diagnostics, Japanese
2	85-4750	1	Diagnostic Display Box

Ref. No.	Part No.	Qty.	Description

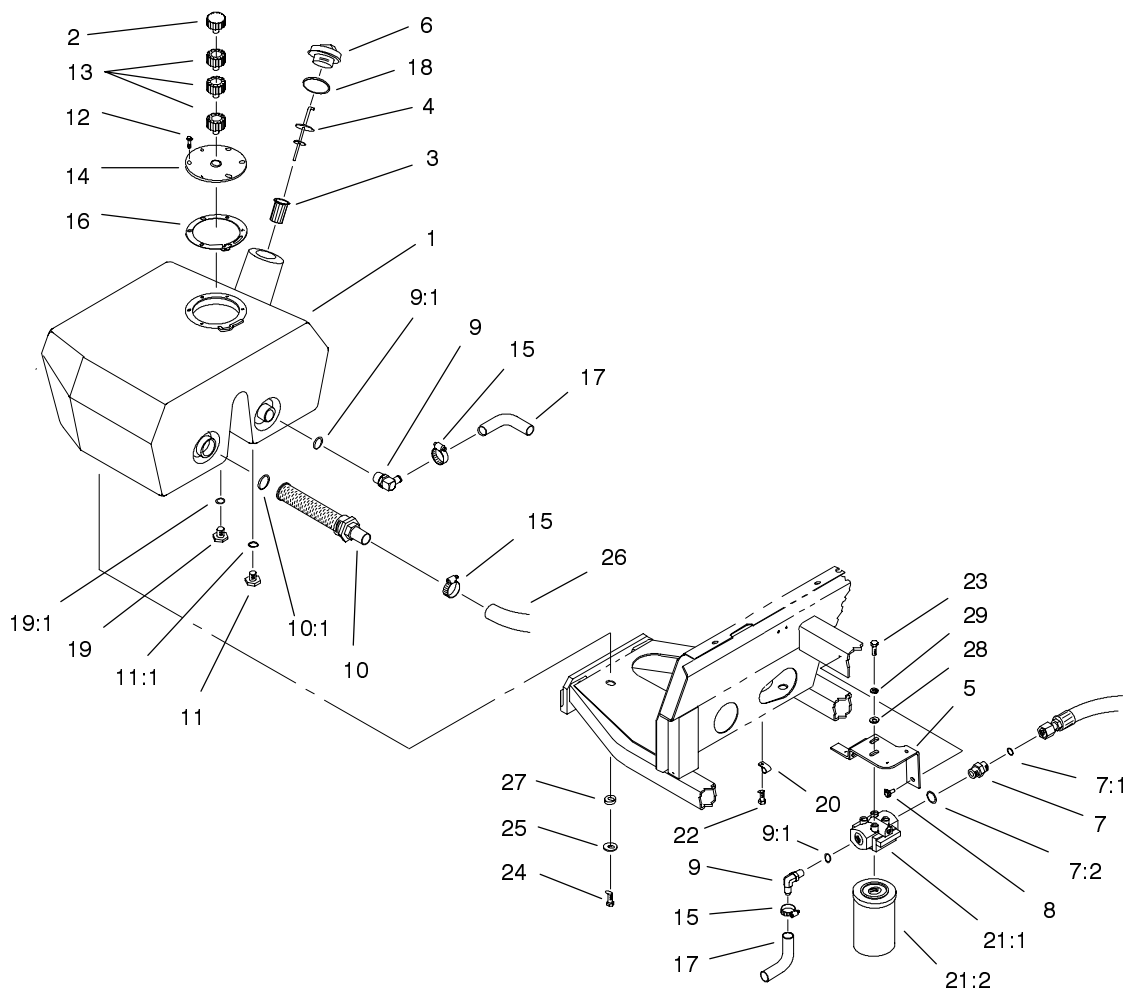


Sheet No.:8

Hydraulic Filter and Reservoir Assembly

Ref. No.	Part No.	Qty.	Description
1	104-9254	1	Tank-Oil
2	68-6150	1	Breather-Air
3	61-2790	1	Filter-Screen
4	94-9411	1	Dipstick
5	98-3917-01	1	Bracket-Filter
6	93-7498	1	Plug-Plastic
7	340-91	1	Adapter
7:1	237-58	1	O-Ring
7:2	237-146	1	O-Ring
8	32144-14	2	Screw-HWH
9	23-8910	2	Stem-Barb, 90 DEG
9:1	237-146	1	O-Ring
10	104-7546	1	Strainer-Tank
10:1	340-136	1	O-Ring
11	353-508	1	Plug-O-Ring
11:1	237-42	1	O-Ring
12	33104-020	6	Screw-HHF
13	92-8020	3	Adapter - Breather
14	93-7588	1	Cover - Tank
15	2412-34	3	Clamp-Hose
16	93-7499	1	Gasket
17	98-3931	2	Hose-Formed
18	237-101	1	O-Ring
19	353-550	1	Plug-Hyd
19:1	237-79	1	O-Ring
20	2412-93	2	R-Clamp

Ref. No.	Part No.	Qty.	Description
21	98-3923	1	Filter Assembly-Oil
21:1	104-0080	1	Filter Head ASM
21:2	94-2621	1	Filter Element
22	32144-10	2	Screw-HWH
23	323-4	2	Screw-HH
24	33105-025	3	Screw-HHF
25	63-8410	3	Washer
26	75-6870	1	Hose-Inlet, Pump
27	240-11	3	Grommet-Mount, Tank
28	3256-24	2	Washer-Flat
29	3253-21	2	Washer-Lock

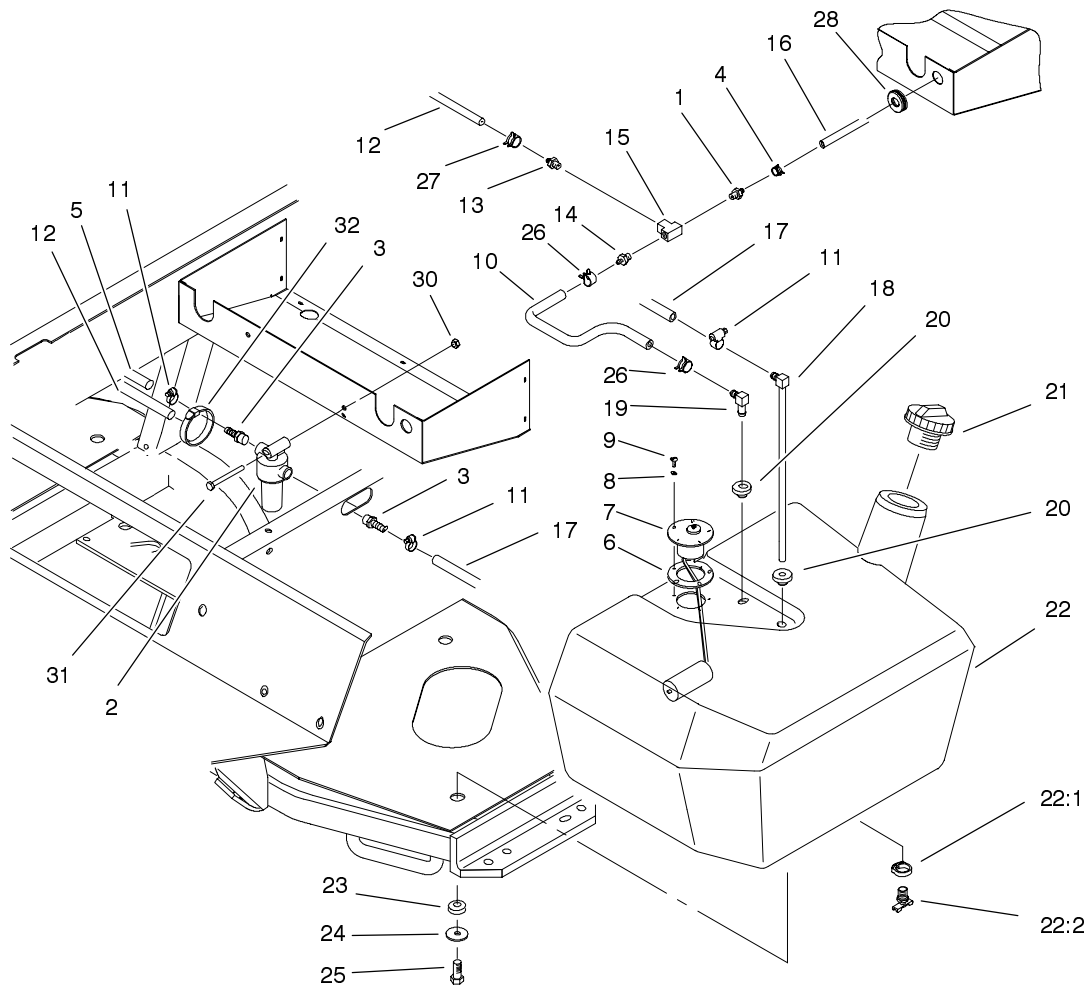


Sheet No.:9

Fuel Tank Assembly

Ref. No.	Part No.	Qty.	Description
1	304-73	1	Connector-Hose
2	99-8351	1	Filter - Fuel, Inline
3	353-783	2	Fitting-Pump
4	2412-98	1	Clamp
5	104-0078	1	Hose-Fuel
6	62-7650	1	Gasket
7	63-7640	1	Sender-Fuel
8	3253-15	5	Washer-Lock/Sp
9	32122-24	5	Screw-Pth
10	93-2042	1	Hose - Fuel
11	2412-108	4	Clamp-Worm
12	104-0077	1	Hose-Fuel
13	354-22	1	Fitting-Barb
14	354-21	1	Fitting-Barb
15	354-20	1	Fitting-Tee
16	98-9338	1	Hose - Fuel
17	104-0076	1	Hose-Fuel
18	66-8121	1	Standpipe
19	46-6550	1	Fitting-Hyd, 90
20	46-6560	2	Bushing
21	93-3102	1	Cap-Fuel
22	104-0084	1	Tank - Fuel
22:1	2412-36	1	Clamp-Hose
22:2	304-46	1	Draincock
23	240-11	3	Grommet-Mount, Tank

Ref. No.	Part No.	Qty.	Description
24	63-8410	3	Washer
25	33105-025	3	Screw-HHF
26	92-2379	2	Clamp-Hose
27	2412-146	2	Clamp-Hose
28	240-9	1	Grommet
30	3296-42	1	Nut-Lock NI
31	321-11	1	Screw-HH
32	3290-378	1	Tie-Cable

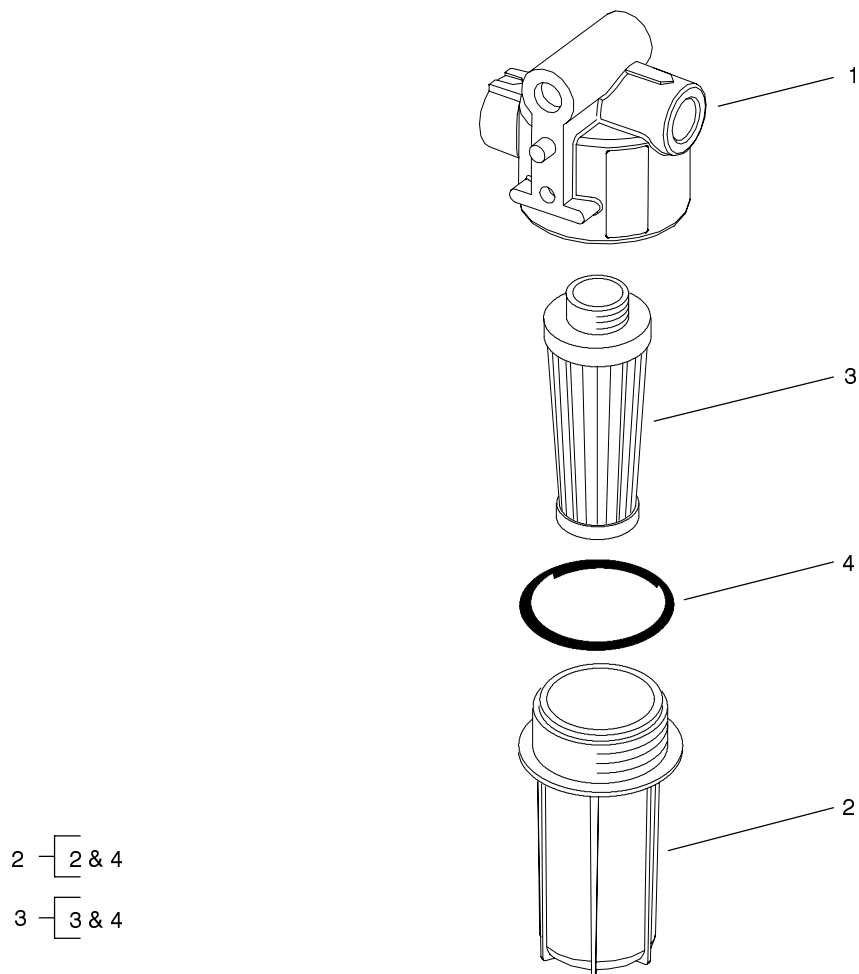


Sheet No.:A4

T-3100

Fuel Tank Assembly No. 99-8351

Ref. No.	Part No.	Qty.	Description
1	99-8356	1	Kit - Head W/Label
2	99-8357	1	Kit-Bowel, W/O-Ring
3	99-8358	1	Kit-Element, W/O-Ring
4	99-8359	1	O-Ring Replacement

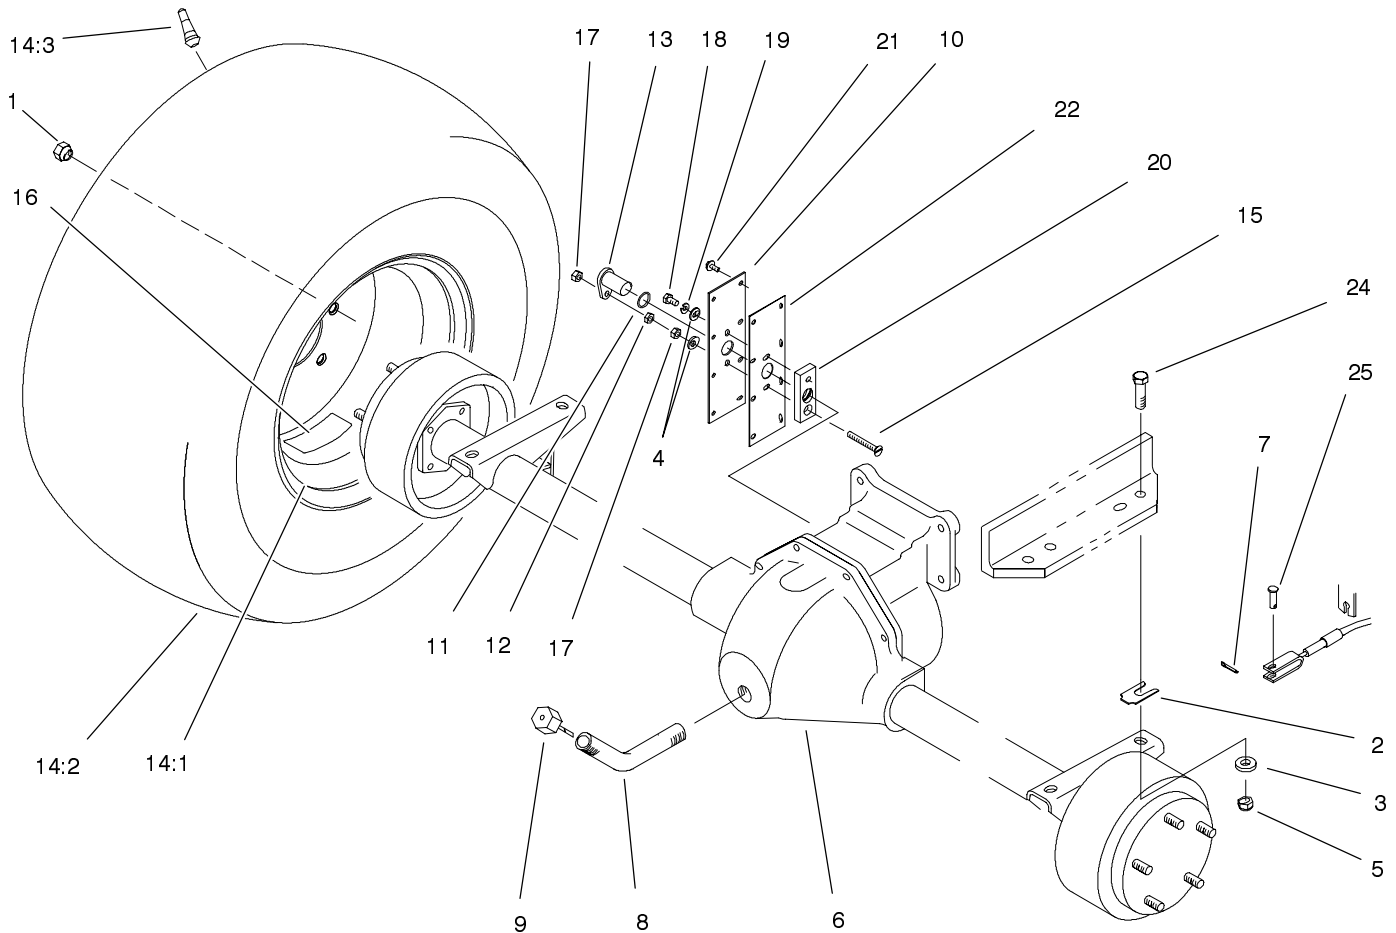


Sheet No.:10

Front Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	23-7270	10	Nut-Wheel
2	42-6080	5	Shim-Axle
3	66-6480	4	Washer
4	3256-22	2	Washer-Flat
5	3296-48	4	Nut-Lock NI
6	99-6981-03	1	Drive Axle
7	3272-10	2	Pin-Cotter
8	75-6850	1	Tube-Fill, Oil
9	27-3710	1	Dipstick
10	85-4330	1	Cover-Gear
11	237-181	1	O-Ring
12	3218-1	1	Nut-Jam
13	85-4350	1	Sensor - Geartooth
☆14		2	Wheel And Tire ASM
14:1	99-6984	1	Wheel ASM
14:2	98-2373	1	Tire
14:3	232-27	1	Stem-Valve
15	32108-9	1	Screw-FH
16	76-8730	2	Decal-Torque, Wheel
17	3296-56	2	Nut-Lock, NI
18	321-2	1	Screw-HH
19	3253-3	1	Washer-Lock
20	85-4340	1	Plate-Sensor Mounting
21	32144-112	8	Screw-HWHTF
22	92-5797	1	Gasket - Axle

Ref. No.	Part No.	Qty.	Description
24	324-7	4	Screw-HH
25	283-58	2	Pin-Clevis

☆ Not serviced

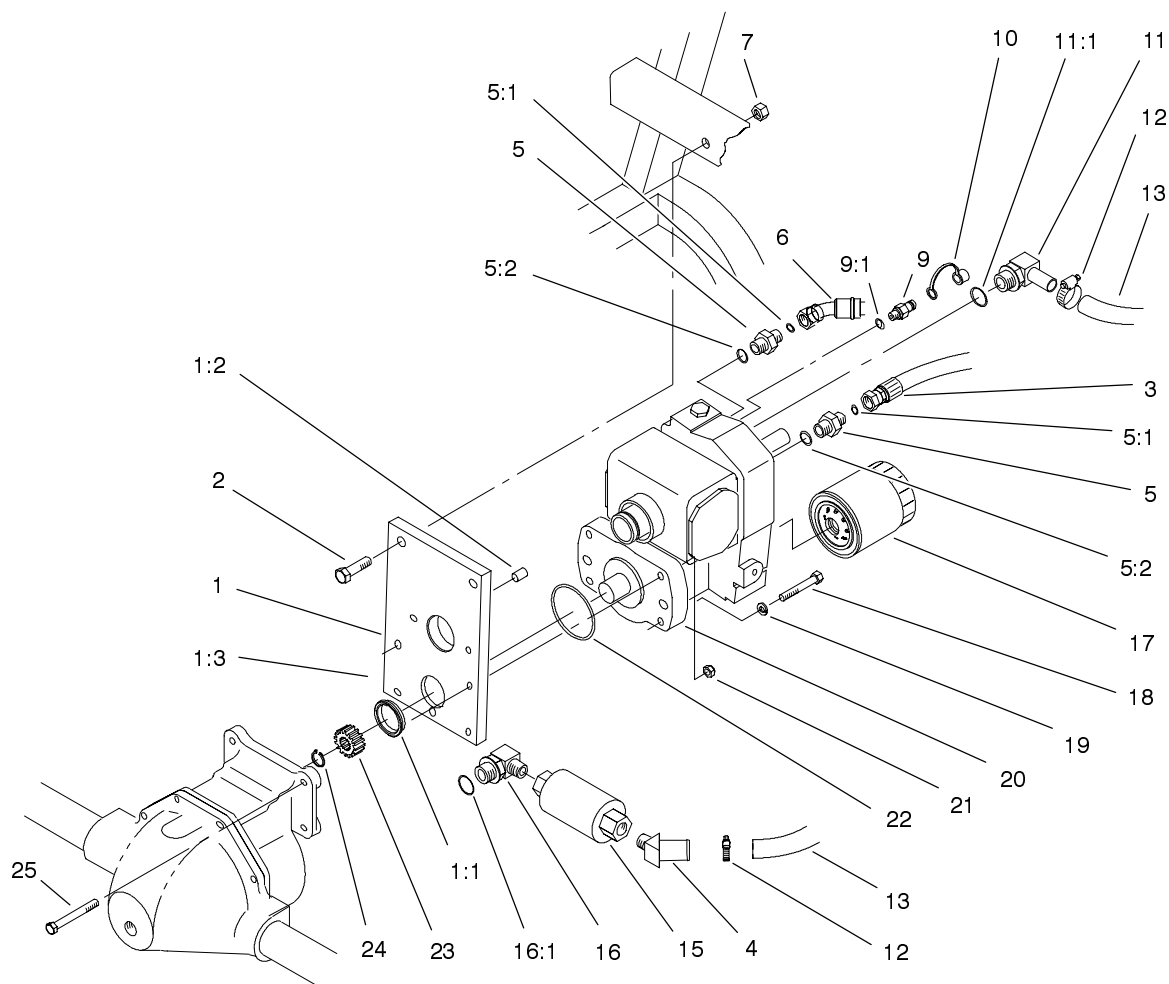


Sheet No.:11

Transmission Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-4846	1	Transmission Support ASM	20	75-0012	1	Transmission
1:1	75-3110	1	Transmission Collar	21	3296-39	2	Nut-Lock, NI
1:2	92-4808	1	Sleeve-Transmission	22	237-161	1	O-Ring
1:3	92-4809	1	Transmission Support	23	86-7220	1	Gear-Pinion
2	325-7	2	Screw-HH	24	32151-62	1	Ring-Retaining
3	104-0073	1	Hose ASM-Hydraulic	25	323-20	2	Screw-HH
4	354-72	1	Fitting				
5	340-3	2	Adapter				
5:1	237-22	1	O-Ring				
5:2	237-79	1	O-Ring				
6	104-0072	1	Hose ASM-Hydraulic				
7	3296-23	2	Nut-Lock, NI				
9	354-77	1	Fitting-Quick				
9:1	237-78	1	O-Ring				
10	354-79	1	Cap - Fitting, Yellow				
11	75-4720	1	Fitting-Line, Suction				
11:1	237-81	1	O-Ring				
12	2412-129	2	Clamp-Hose				
13	75-6350	1	Hose				
15	75-6340-03	1	Filter				
16	354-75	1	Fitting				
16:1	237-81	1	O-Ring				
17	75-1330	1	Element-Filter				
18	323-12	2	Screw-HH				
19	3253-21	2	Washer-Lock				

3325-665

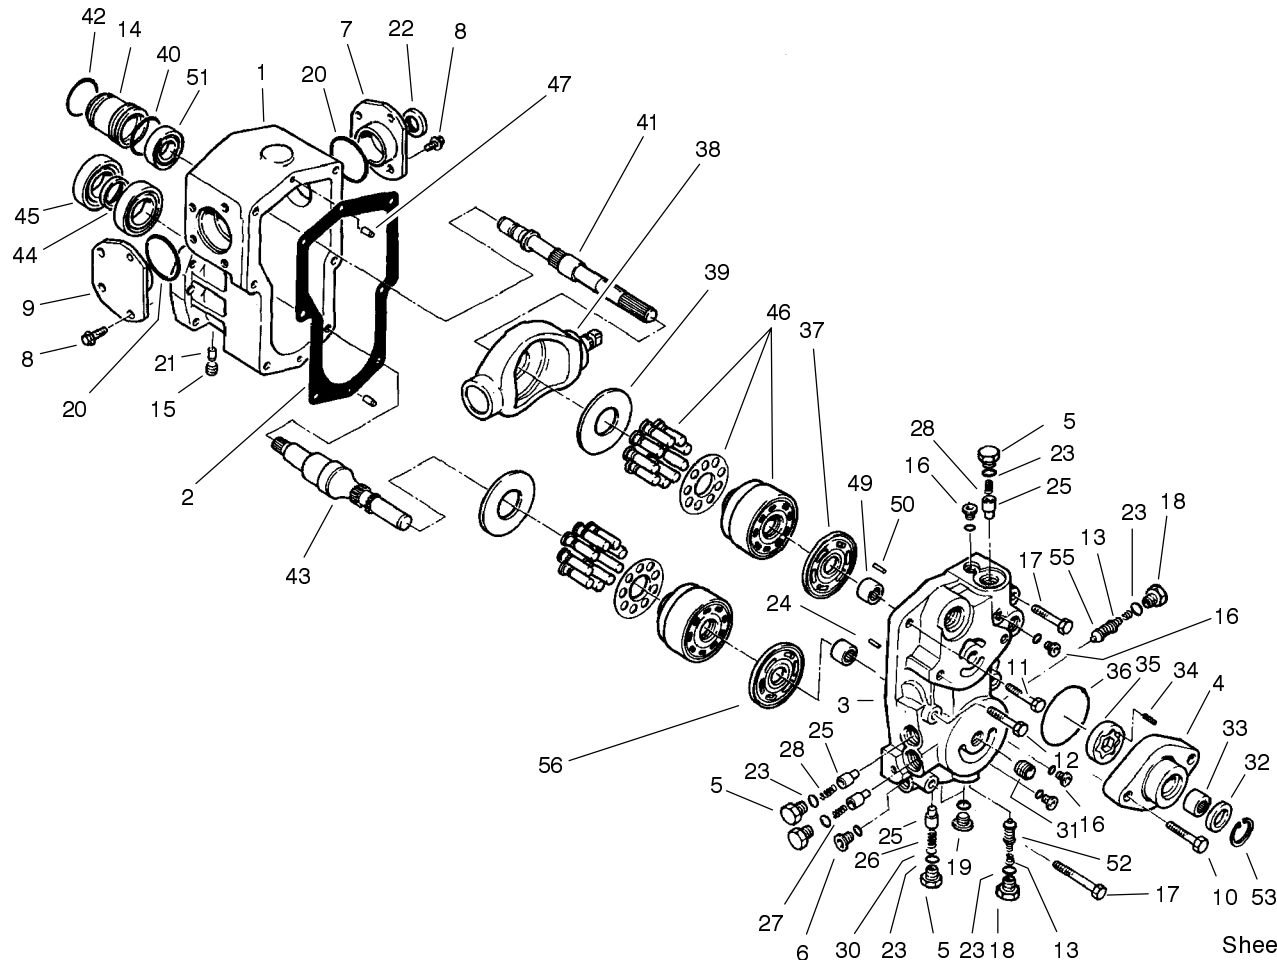


Sheet No.:A5

T-1006

Transmission Assembly No. 75-0012

Ref. No.	Part No.	Qty.	Description
1	75-0020	1	Housing
2	75-0030	1	Gasket-Housing
3	75-0040	1	Section-Center
4	83-4780	1	Housing-Pump, Charge
5	75-0060	4	Plug
6	75-0070	1	Plug
7	86-7520	1	RH Trunnion Cover ASM
8	75-0090	8	Capscrew-HH
9	86-7530	1	LH Trunnion Cover ASM
10	75-0110	2	Capscrew-HH
11	75-0120	1	Capscrew-HH
12	75-0130	3	Capscrew-HH
13	75-0140	1	Spring-Conical
14	75-0150	1	Guide-Seal
15	75-0160	1	Plug-Pipe
16	75-0170	4	Plug-Thread, Straight
17	75-0180	2	Capscrew-HH
18	75-0190	2	Plug-Special
19	75-0200	2	Plug-Thread, Straight
20	75-0210	2	O-Ring
21	75-0220	2	Pin
22	75-0230	1	Seal-Lip
23	75-0240	6	O-Ring

Ref. No.	Part No.	Qty.	Description
24	75-0250	1	Spring
25	75-0260	4	Valve - Relief
26	75-0270	1	Spring
27	75-0280	1	Spring
28	75-0290	2	Spring
30	75-0310	1	Shim
31	75-0320	1	Nipple
32	75-0330	1	Seal-Lip
33	75-0340	1	Bearing-Needle
34	75-0350	1	Pin
35	75-0360	1	Gerotor
36	75-0370	1	O-Ring
37	75-0380	1	Plate-Valve
38	75-0390	1	Plate-Swash
39	75-0400	2	Plate-Thrust
40	75-0410	1	O-Ring
41	86-7540	1	Shaft-Pump
42	75-0430	1	Ring-Retaining
43	75-0440	1	Shaft-Motor
44	75-0450	1	Collar
45	75-0460	2	Bearing-Ball
46	75-0470	2	Kit-Block, Cylinder
47	75-0480	2	Pin
49	75-0500	2	Bearing-Needle
50	75-0510	1	Pin
51	75-0520	1	Bearing-Ball

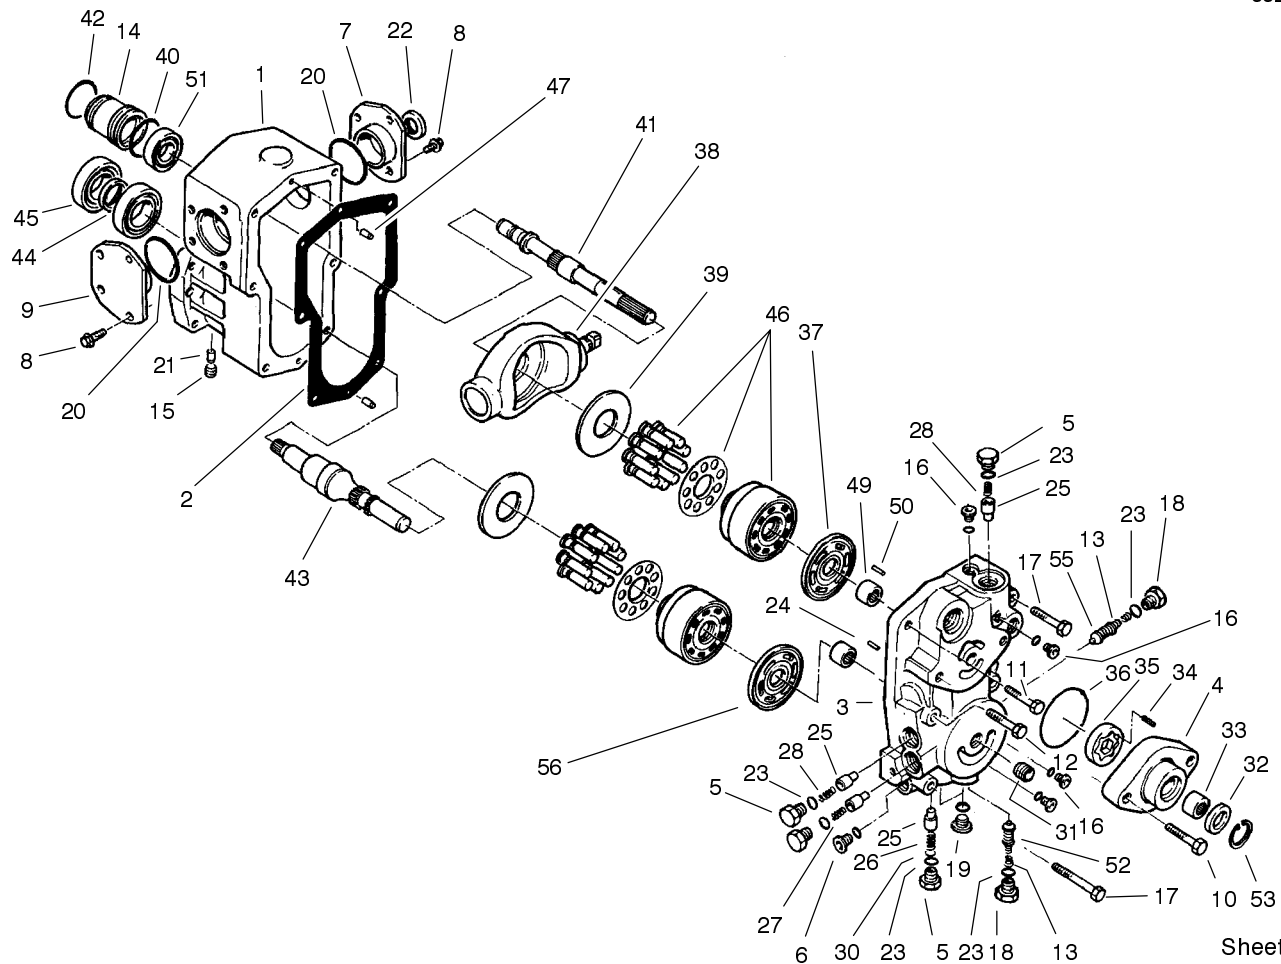


Sheet No.:A5

T-1006

Transmission Assembly No. 75-0012 (Continued)

Ref. No.	Part No.	Qty.	Description
52	75-6930	1	Valve-Screw
53	32120-74	1	Snap-Ring
55	93-0097	1	Valve-Screw
56	93-0083	1	Plate-Valve

Ref. No.	Part No.	Qty.	Description

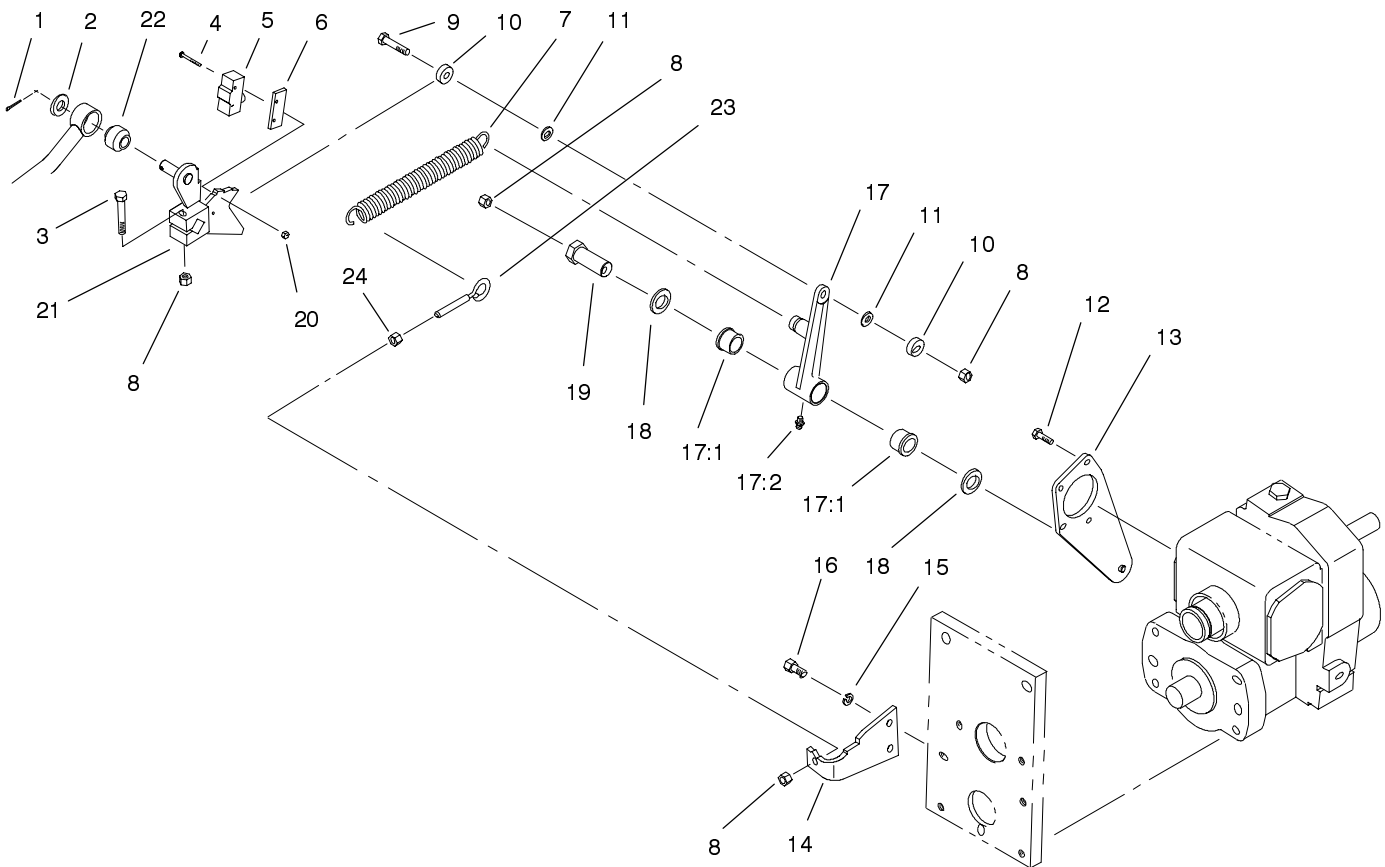


Sheet No.:12

Traction Control Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-10	1	Pin-Cotter
2	3256-26	1	Washer-Flat
3	322-10	1	Screw-HH
4	32105-21	2	Screw-HH
5	29-6162	1	Switch-Micro
6	75-4130	1	Plate-Switch
7	76-9430-03	1	Spring-Extention
8	3296-29	4	Nut-Lock
9	322-7	1	Screw-HH
10	251-307	2	Bearing-Ball
11	75-5470	2	Spacer-Bearing
12	32144-22	4	Screw
13	104-1480-03	1	Traction Plate ASM
14	85-9900-03	1	Plate-Anchor, Spring
15	3253-4	2	Washer-Lock
16	322-3	2	Screw-HH
17	92-2581	1	Neutral Switch Arm ASM
17:1	256-113	2	Bushing-Flange
17:2	302-5	1	Fitting-Grease
18	3-6498	2	Washer-Thrust
19	76-8640	1	Stud - Traction
20	3296-9	2	Nut-Lock NI
21	75-4100-03	1	Control-Pump
22	23-2270	1	Bushing-Rubber

Ref. No.	Part No.	Qty.	Description
23	85-9910	1	Eyebolt
24	3217-6	1	Nut-Hex

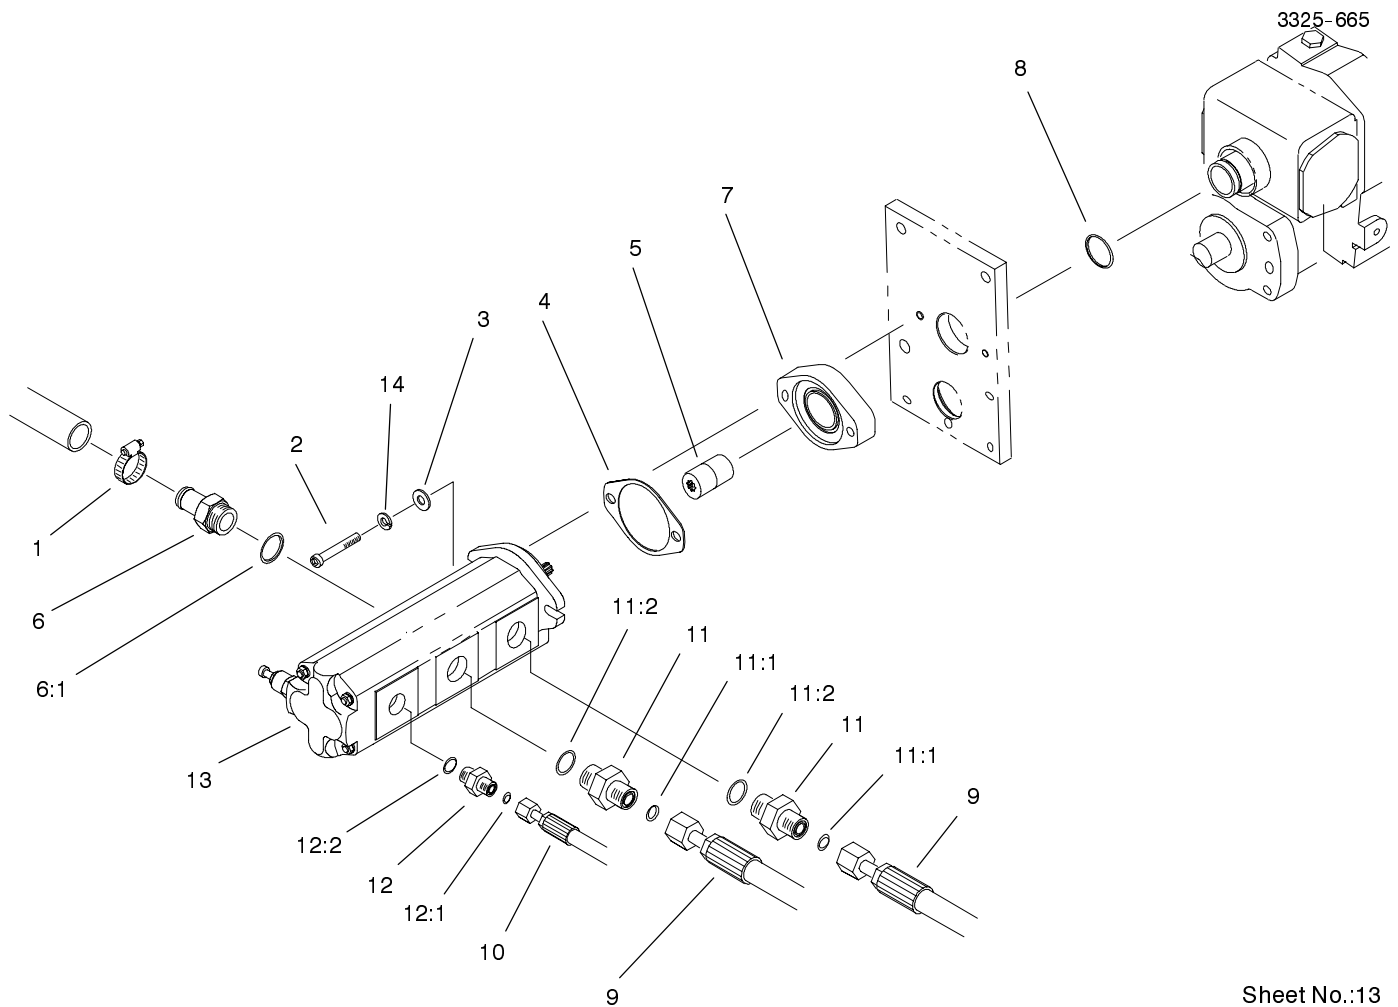


Sheet No.:13

Gear Pump Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	2412-34	1	Clamp-Hose
2	92-4037	2	Capscrew-HSH
3	3256-24	2	Washer-Flat
4	93-3604	1	Gasket
5	93-1396	1	Coupler
6	354-78	1	Connector-Hose
6:1	237-146	1	O-Ring
7	75-4400-03	1	Adaptor
8	237-163	1	O-Ring
9	104-0050	2	Hyd. Hose ASM
10	104-0051	1	Hyd. Hose ASM
11	340-7	2	Adapter
11:1	237-65	1	O-Ring
11:2	237-80	1	O-Ring
12	340-2	1	Adapter
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	99-6933	1	Gear Pump
14	3253-5	2	Washer-Lock

Ref. No.	Part No.	Qty.	Description

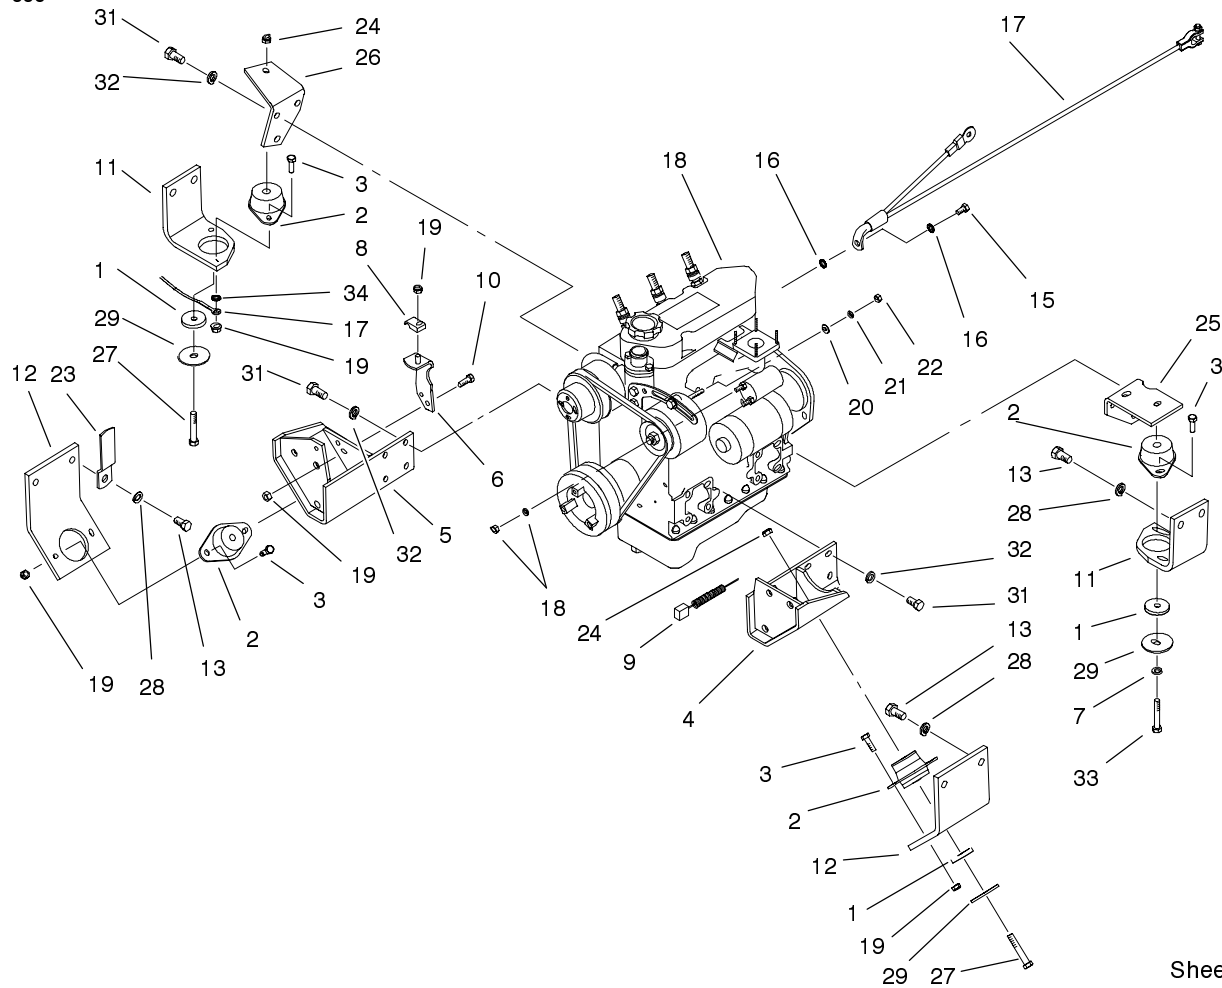


Sheet No.:14

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description
1	83-1050	4	Spacer
2	83-1030	4	Mount-Engine
3	322-5	8	Screw-HH
4	98-4539-03	1	Bracket-Engine Mount, LH
5	98-4543-03	1	Bracket-Engine Mount, RH
6	98-9749	1	Plate - Throttle
7	3253-21	1	Washer-Lock
8	3-6657	1	Clip-Skid
9	99-3441	1	Harness - Wire, Fusible Link
10	322-4	2	Screw-HH
11	98-4513-03	2	Bracket-Engine, Rear
12	104-1474-03	2	Bracket-Engine, Front
13	3213-2	8	Screw-HH
15	98-9322	1	Bolt-HH, Metric
16	3255-9	2	Washer-Lock/Ext
17	98-4598	1	Cable-Battery, Negative
18	104-0095	1	Engine-Kubota
18	42-9850	1	Washer-Lock, Spring
18	57-6390	1	Nut-Jam
19	3296-29	11	Nut-Lock
20	3256-78	1	Washer-Flat
21	43-5930	1	Washer-Spring


Ref. No.	Part No.	Qty.	Description
22	48-7890	1	Nut
23	98-4594	1	Clamp - Retainer
24	32128-36	3	Nut-HF
25	98-4515-03	1	Bracket-Rear Engine, LH
26	98-4514-03	1	Bracket-Rear Engine, RH
27	323-12	3	Screw-HH
28	3253-7	8	Washer-Lock
29	87-5100	4	Washer - Snubbing
31	43-0090	14	Screw-HH
32	42-9600	14	Lockwasher-Spring
33	323-10	1	Screw-HH
34	3255-8	1	Washer-Lock/Ext

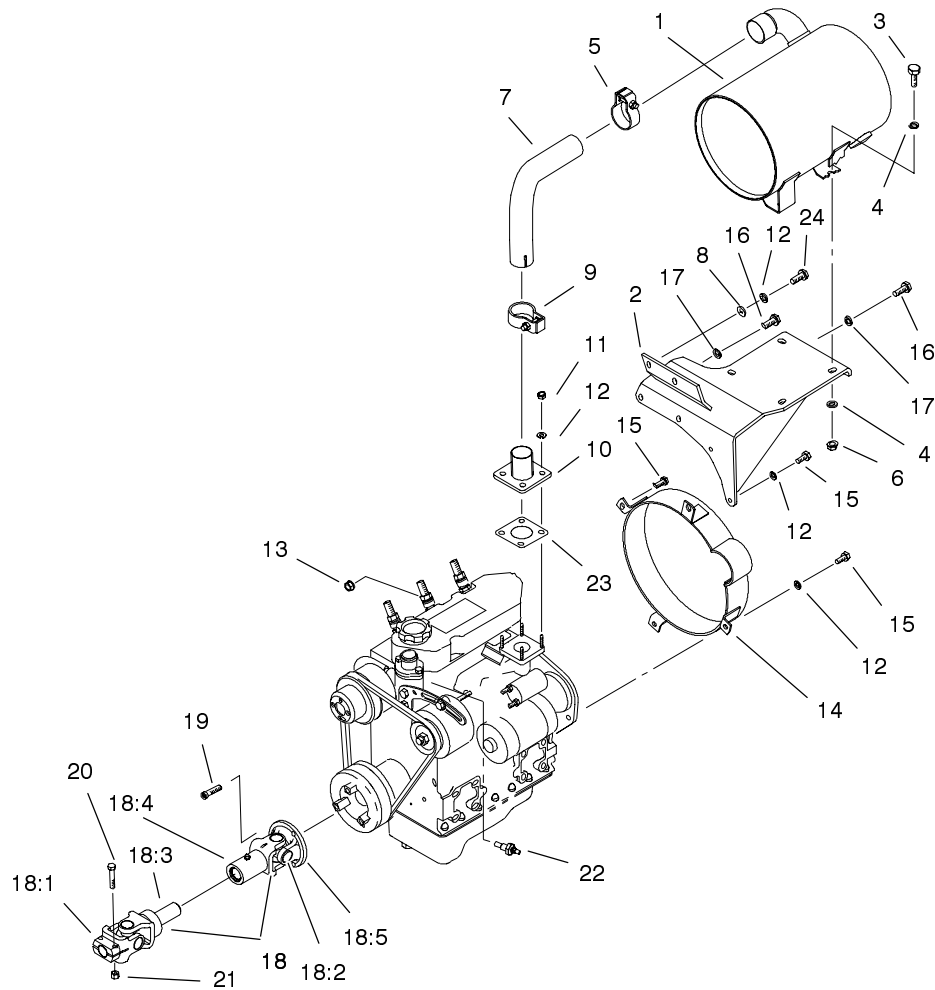

Sheet No.:15

Muffler and Pump Drive Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-1430	1	Muffler-Exhaust	22	98-9346	1	Sender - Temperature
2	98-4555-03	1	Bracket-Muffler	24	33114-020	2	Screw-HH
3	323-7	4	Screw-HH				
4	3256-4	8	Washer-Flat				
5	98-9310	1	Clamp - Muffler				
6	3296-39	4	Nut-Lock, NI				
7	98-4524	1	Tube-Exhaust				
8	3256-23	2	Washer-Flat				
9	98-9309	1	Clamp - Muffler				
10	98-4527	1	Pipe-Exhaust, Engine				
11	33014-00	4	Nut-Hex				
12	42-9850	10	Washer-Lock, Spring				
13	33024-00	1	Nut-Lock				
14	98-4564-03	1	Guard - Flywheel,				
15	33114-025	5	Screw-HH				
16	43-0090	2	Screw-HH				
17	42-9600	2	Lockwasher-Spring				
18	99-6977	1	Driveshaft ASM				
18:1	98-9768	1	Yoke				
18:2	98-9766	2	Kit - Universal Joint				
18:3	98-9765	1	Yoke & Shaft				
18:4	94-7379	1	Tube - Slip Yoke				
18:5	104-1230	1	Yoke				
19	98-9322	3	Bolt-HH, Metric				
20	322-9	2	Screw-HH				
21	3296-29	2	Nut-Lock				

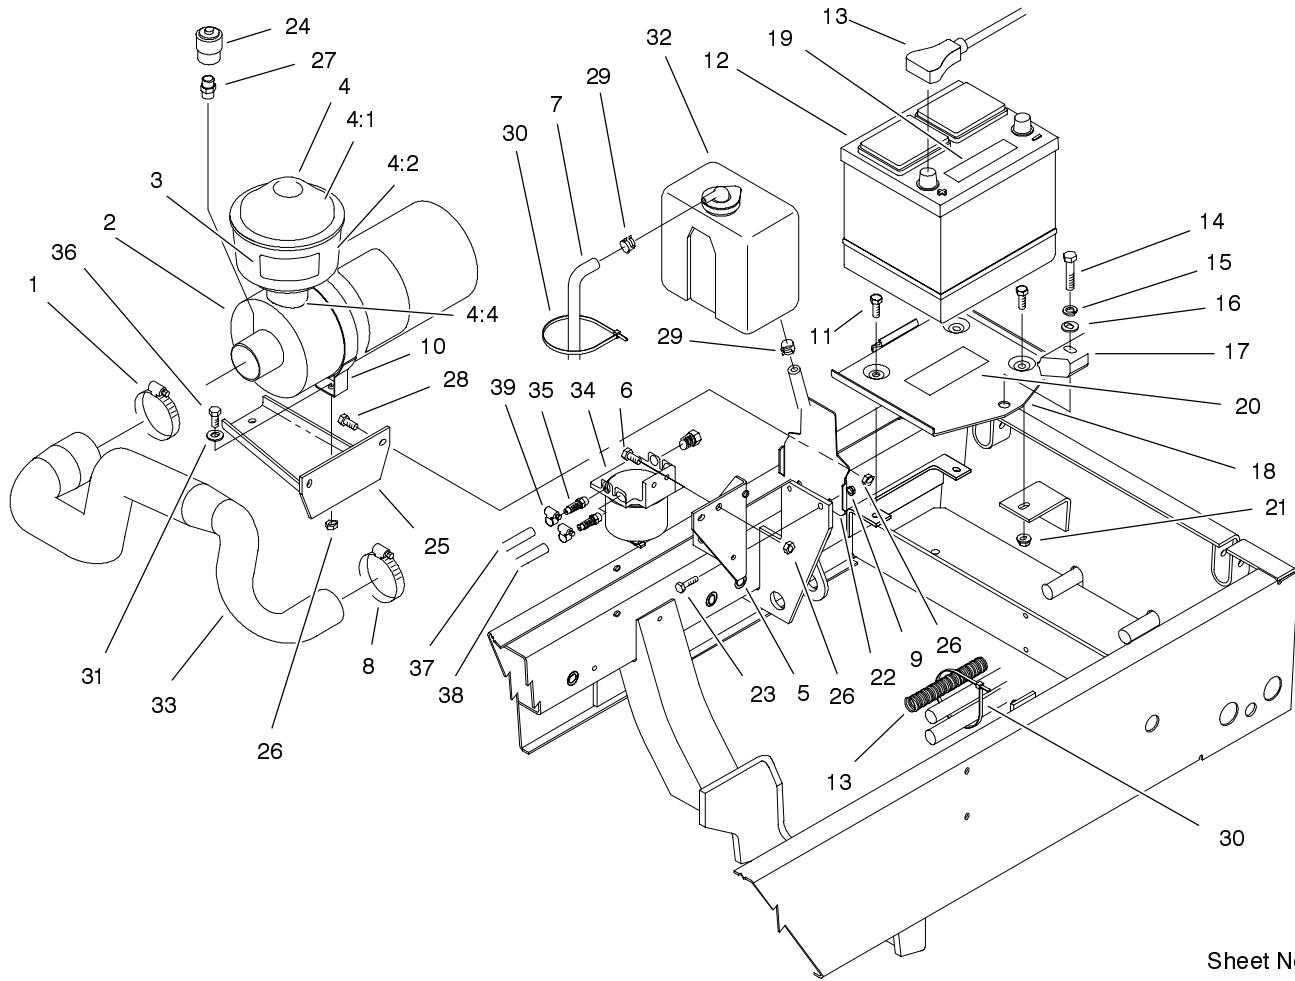


Sheet No.:16

Engine Components Assembly

Ref. No.	Part No.	Qty.	Description
1	2412-42	1	Clamp-Hose
2	98-4517	1	Air Cleaner ASM
3	93-6692	1	Decal-Fluid, Starting
4	48-7430	1	Precleaner
4:1	33-1260	1	Cover ASM
4:2	33-1270	1	Bowl-Clear
*4:3	62-6300	1	Sleeve ASM
4:4	94-6873	1	Clamp
5	98-4578-03	1	Bracket-Filter, Fuel
6	3234-29	2	Screw-HHF
7	63-7630	1	Hose
8	2412-92	1	Clamp-Hose
9	32128-33	2	Nut-HF
10	98-4525	1	Bracket-Cleaner, Air
11	322-4	3	Screw-HH
12	66-2750	1	Battery
13	104-0086	1	Cable-Battery, Positive
14	323-9	1	Screw-HH
15	3253-21	1	Washer-Lock
16	3256-24	1	Washer-Flat
17	66-2490	1	Retainer-Battery
18	94-7343	1	Battery Base ASM
19	93-6668	1	Decal - Battery
20	93-7276	1	Decal-Danger
21	32128-20	1	Nut-HF

Ref. No.	Part No.	Qty.	Description
22	98-4576-03	1	Bracket-Reservoir, Water
23	321-5	2	Screw-HH
24	93-9164	1	Indicator - Mini
25	98-4518-03	1	Bracket-Cleaner, Air
26	3296-29	6	Nut-Lock
27	94-1416	1	Adapter-Indicator ASM
28	322-5	2	Screw-HH
29	92-2379	2	Clamp-Hose
30	3290-378	2	Tie-Cable
31	3256-23	2	Washer-Flat
32	98-9323	1	Bottle-Overflow, Water
33	98-4509	1	Hose - Air Cleaner
34	98-9305	1	Filter-Water/Fuel
35	353-783	2	Fitting-Pump
36	322-6	2	Screw-HH
37	71-3381	1	Hose-Fuel
38	95-4275	1	Hose - Fuel
39	2412-108	4	Clamp-Worm

* Not illustrated

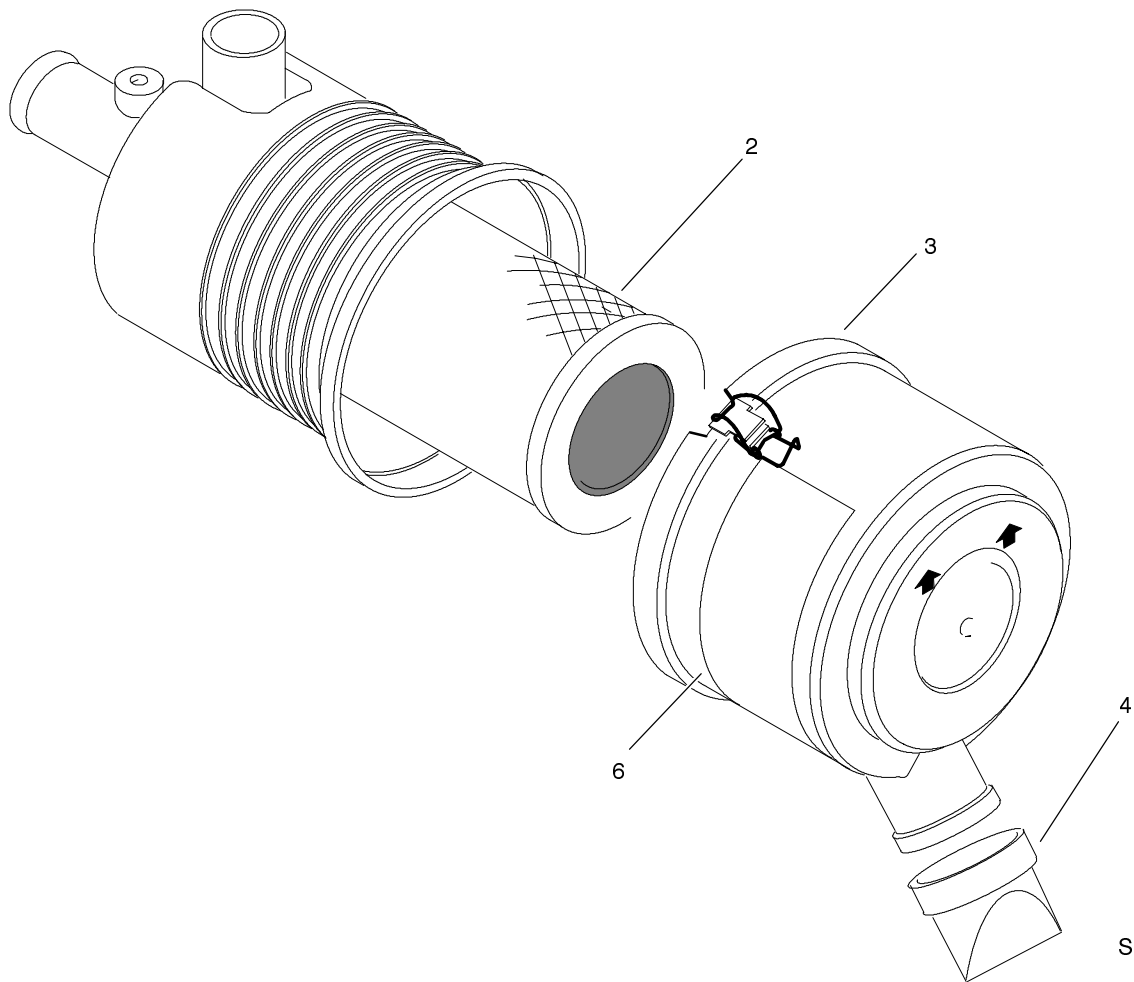


Sheet No.:B1
T-2903

Air Cleaner Assembly No. 98-4517

Ref. No.	Part No.	Qty.	Description
2	98-9763	1	Element ASM
3	98-9771	1	Cover ASM
4	94-1414	1	Valve-Vacuator
6	98-9788	1	Decal - Instruction

Ref. No.	Part No.	Qty.	Description

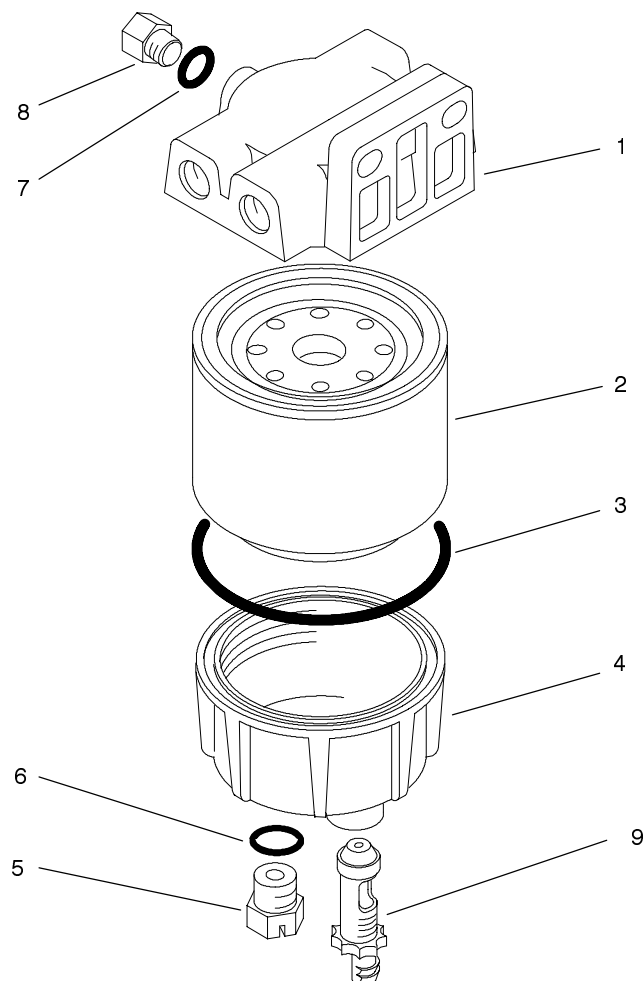


Sheet No.:B2
T-3330

Water/Fuel Separator Assembly No. 98-9305

Ref. No.	Part No.	Qty.	Description
1	98-9772	1	Head - Filter
2	98-9764	1	Element-On, Spin
3	98-9774	1	O-Ring-Base, Filter
4	98-9775	1	Base - Filter
5	98-9773	1	Plug - Base, Filter
6	237-42	1	O-Ring
7	237-78	1	O-Ring
8	98-9776	1	Plug-Filter, Head
9	98-9777	1	Drain Valve ASM

Ref. No.	Part No.	Qty.	Description

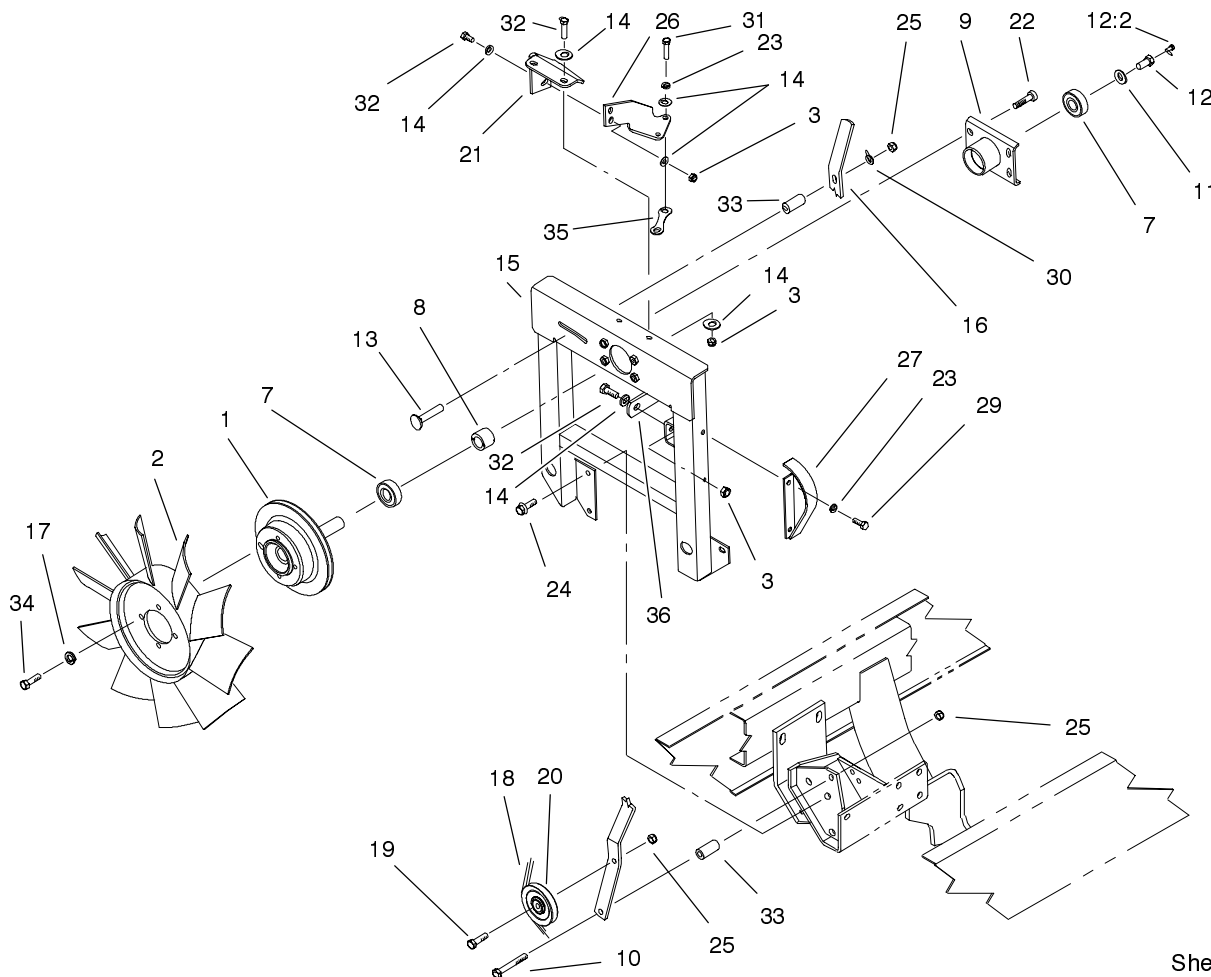


Sheet No.:17

Fan Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0000-03	1	Pulley
2	99-6937	1	Fan
3	3296-29	5	Nut-Lock
7	251-318	2	Bearing
8	104-0001	1	Spacer
9	104-0017-03	1	Hub ASM
10	323-12	1	Screw-HH
11	63-8410	1	Washer
12	11-0160	1	Roller Shaft Screw ASM
12:2	302-5	1	Fitting-Grease
13	104-1487	1	Bolt-CARR
14	3256-23	11	Washer-Flat
15	104-1440-03	1	Support-Fan
16	104-0006-03	1	Lever - Fan Idler
17	3253-4	4	Washer-Lock
18	98-3921	1	Belt
19	95-3857	1	Screw-Head, Button
20	63-8140	1	Pulley-Idler
21	104-1447-03	1	Bracket-Fan, Support
22	3274-12	4	Screw-HSH
23	42-9850	4	Washer-Lock, Spring
24	3234-29	6	Screw-HHF
25	3296-59	3	Nut-Lock NI
26	104-1481-03	1	Bracket-Mount, Fan
27	98-4561-03	1	Shield-Alternator

Ref. No.	Part No.	Qty.	Description
29	32144-14	2	Screw-HWH
30	3256-24	1	Washer-Flat
31	33114-020	2	Screw-HH
32	322-4	5	Screw-HH
33	104-0007	2	Spacer
34	322-3	4	Screw-HH
35	104-1482	1	Plate-Washer

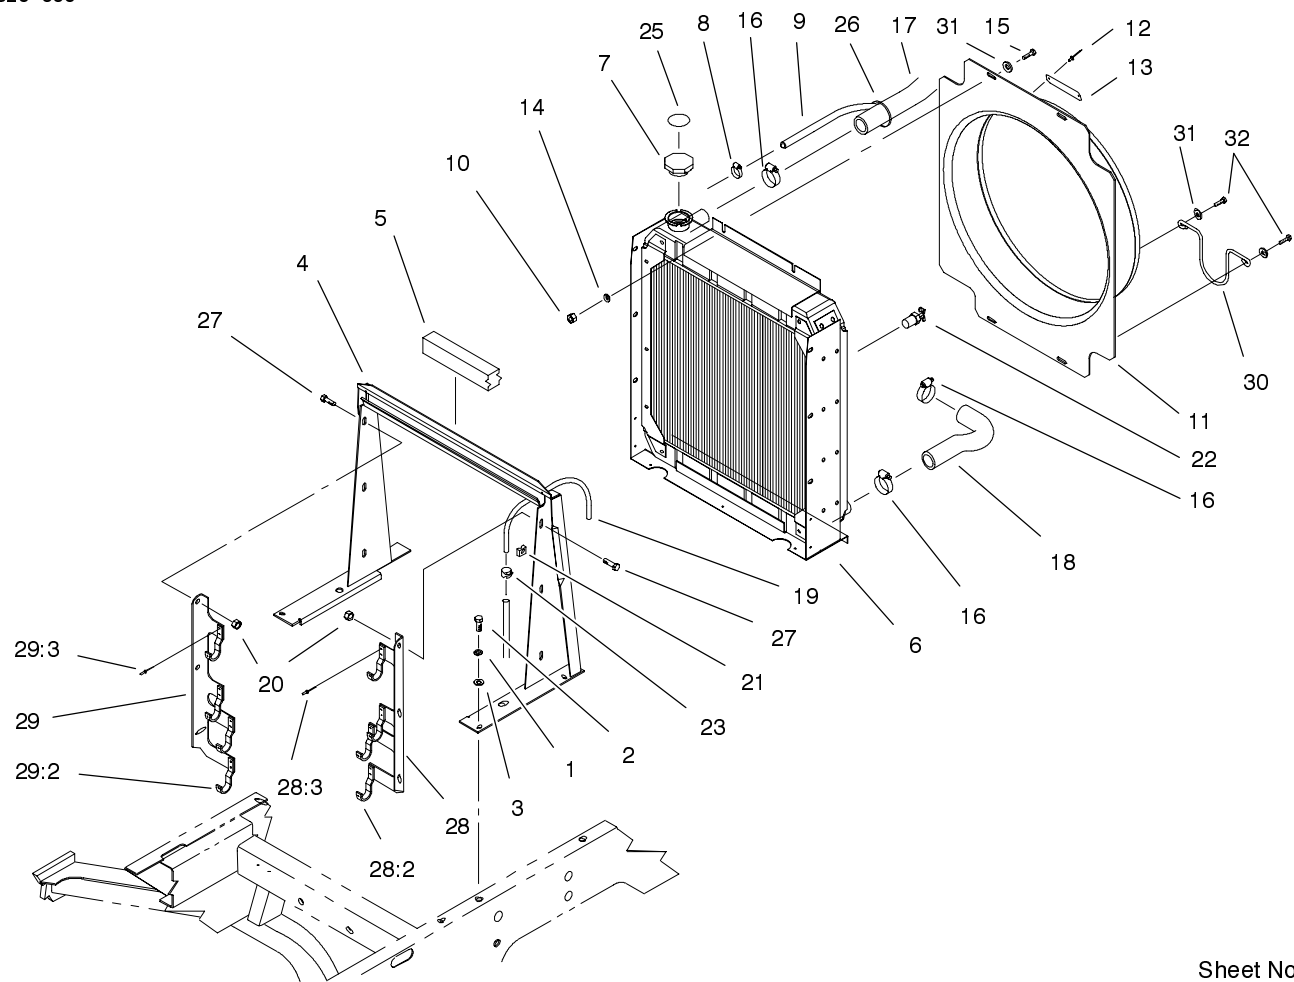


Sheet No.:18

Radiator Assembly

Ref. No.	Part No.	Qty.	Description
1	3253-4	4	Washer-Lock
2	322-5	4	Screw-HH
3	3256-23	4	Washer-Flat
4	99-6970-03	1	Support-Radiator
5	104-1418	1	Strip-Foam, Radiator
6	99-6936	1	Radiator
7	66-3240	1	Cap-Radiator
8	92-2379	1	Clamp-Hose
9	104-0079	1	Hose
10	3296-42	4	Nut-Lock NI
11	99-6939	1	Shroud-Fan
12	3290-271	2	Rivet-Pop
13	98-9335	1	Plate-Warning, Fan
14	3256-22	4	Washer-Flat
15	321-4	2	Screw-HH
16	2412-34	4	Clamp-Hose
17	104-0013	1	Hose-Radiator, Upper
18	104-0014	1	Hose-Radiator, Lower
19	66-3180	1	Tube-Vent
20	32128-20	6	Nut-HF
21	2412-103	1	Clamp
22	304-46	1	Draincock
23	2412-98	1	Clamp
25	93-7840	1	Decal-Cap, Radiator
26	3290-379	1	Tie-Cable
27	3234-5	6	Screw-HHF


Ref. No.	Part No.	Qty.	Description
28	99-6991	1	LH Cooler Mount ASM
28:2	75-0930	4	Hook - Cooler Mount
28:3	3269-15	8	Rivet
29	99-6994	1	RH Cooler Mount ASM
29:2	75-0930	4	Hook - Cooler Mount
29:3	3269-15	8	Rivet
30	104-1448	1	Hoop-Driveline
31	3256-55	4	Washer-Flat
32	321-6	2	Screw-HH

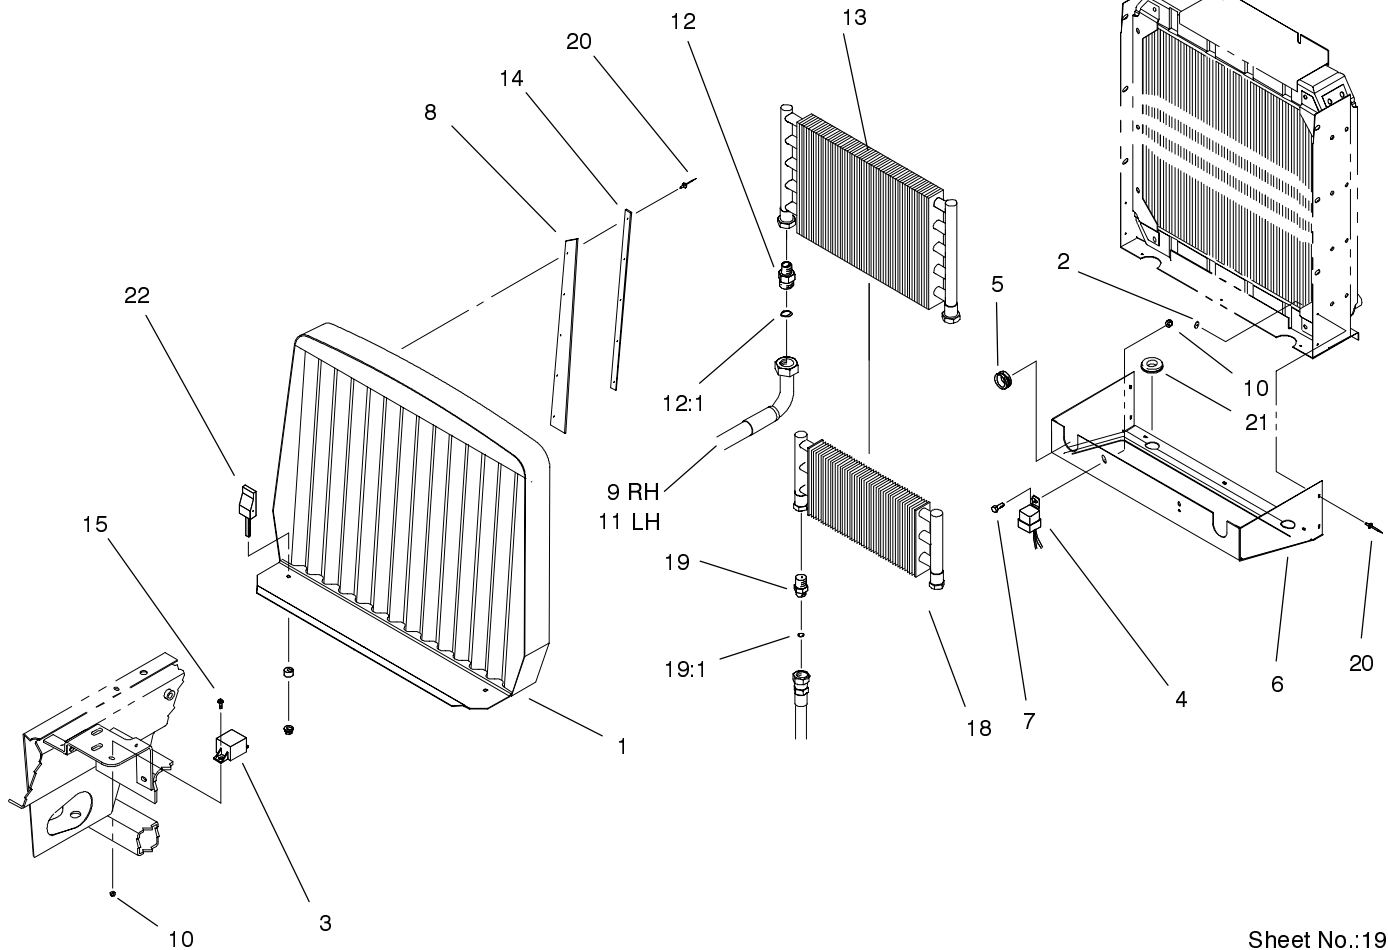

Sheet No.:19

Oil Cooler / Radiator Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6974-03	1	Screen-Front
2	3269-10	5	Washer-Back
3	66-8800	1	Relay
4	70-1480	1	Relay
5	240-3	2	Grommet-Rubber
6	99-6973-03	1	Radiator Shield
7	321-3	1	Screw-HH
8	93-3623	2	Strip-Sealing, Radiator
9	104-0075	1	Hyd. Hose ASM
10	3296-42	3	Nut-Lock NI
11	104-0074	1	Hyd. Hose ASM
12	99-6999	2	Fitting - Hyd
12:1	237-58	1	O-Ring
13	99-6997	1	Cooler - Oil
14	93-3624-03	2	Plate- Retaining
15	321-4	2	Screw-HH
18	24-0760	1	Cooler ASM
19	340-124	2	Adapter
19:1	237-22	1	O-Ring
20	3269-13	15	Rivet-Pop
21	100-3815	2	Grommet-Rubber
22	93-1374	2	Latch - Swell

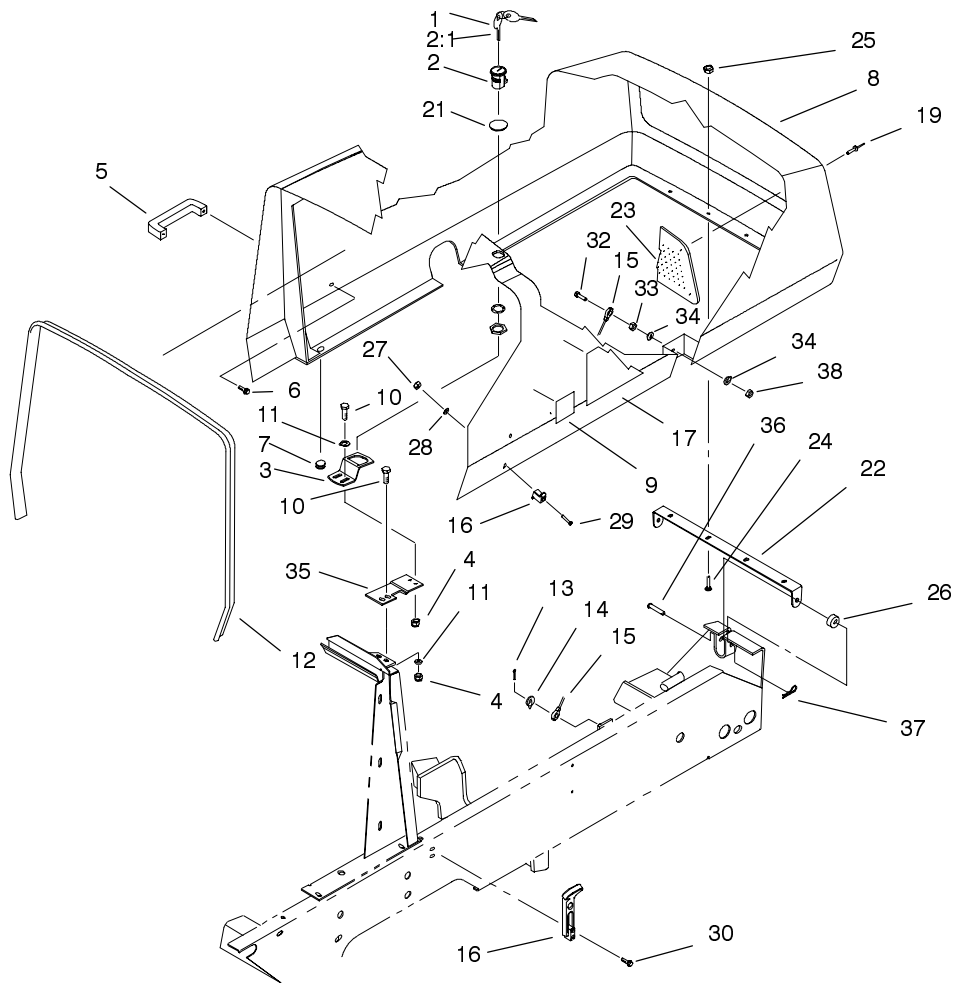


Sheet No.:20

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9321	1	Ring-Key
2	98-9315	1	Latch - Locking
2:1	99-8350	2	Key - Latch, Locking
3	98-9316	1	Latch - Hood
4	3296-16	4	Nut-Lock, NI
5	65-5100	2	Handle-Door
6	46-8091	4	Screw-HWH
7	104-1412	2	Grommet - Bumper
8	98-3940	1	Hood ASM
9	93-7252	1	Decal-International
10	321-4	4	Screw-HH
11	3256-1	4	Washer-Flat
12	104-1419	1	Strip-Bulb
13	3272-4	2	Pin-Cotter
14	3256-23	2	Washer-Flat
15	75-0570	2	Cable - Hood
16	104-0010	2	Latch - Draw, Flexible
17	99-6988	2	Decal
19	104-1417	10	Rivet-Plastic
21	104-1453	1	Grommet
22	104-0042-03	1	Strap - Hinge
23	104-0043-03	1	Screen - Rear
24	3229-3	4	Screw-CARR
25	32128-33	4	Nut-HF
26	104-1429	2	Spacer - Plastic
27	3296-12	2	Nut-Lock


Ref. No.	Part No.	Qty.	Description
28	3256-51	2	Washer-Flat
29	104-1452	2	Screw-PPH
30	104-1451	4	Screw-TAP, PPH
31	72-3560	1	Decal
32	321-8	2	Screw-HH
33	3218-1	2	Nut-Jam
34	3256-67	4	Washer-Flat
35	104-1439	1	Plate-Latch
36	94-3829	2	Pin-Clevis
37	3290-250	2	Pin-Hair Cotter
38	32128-33	2	Nut-HF

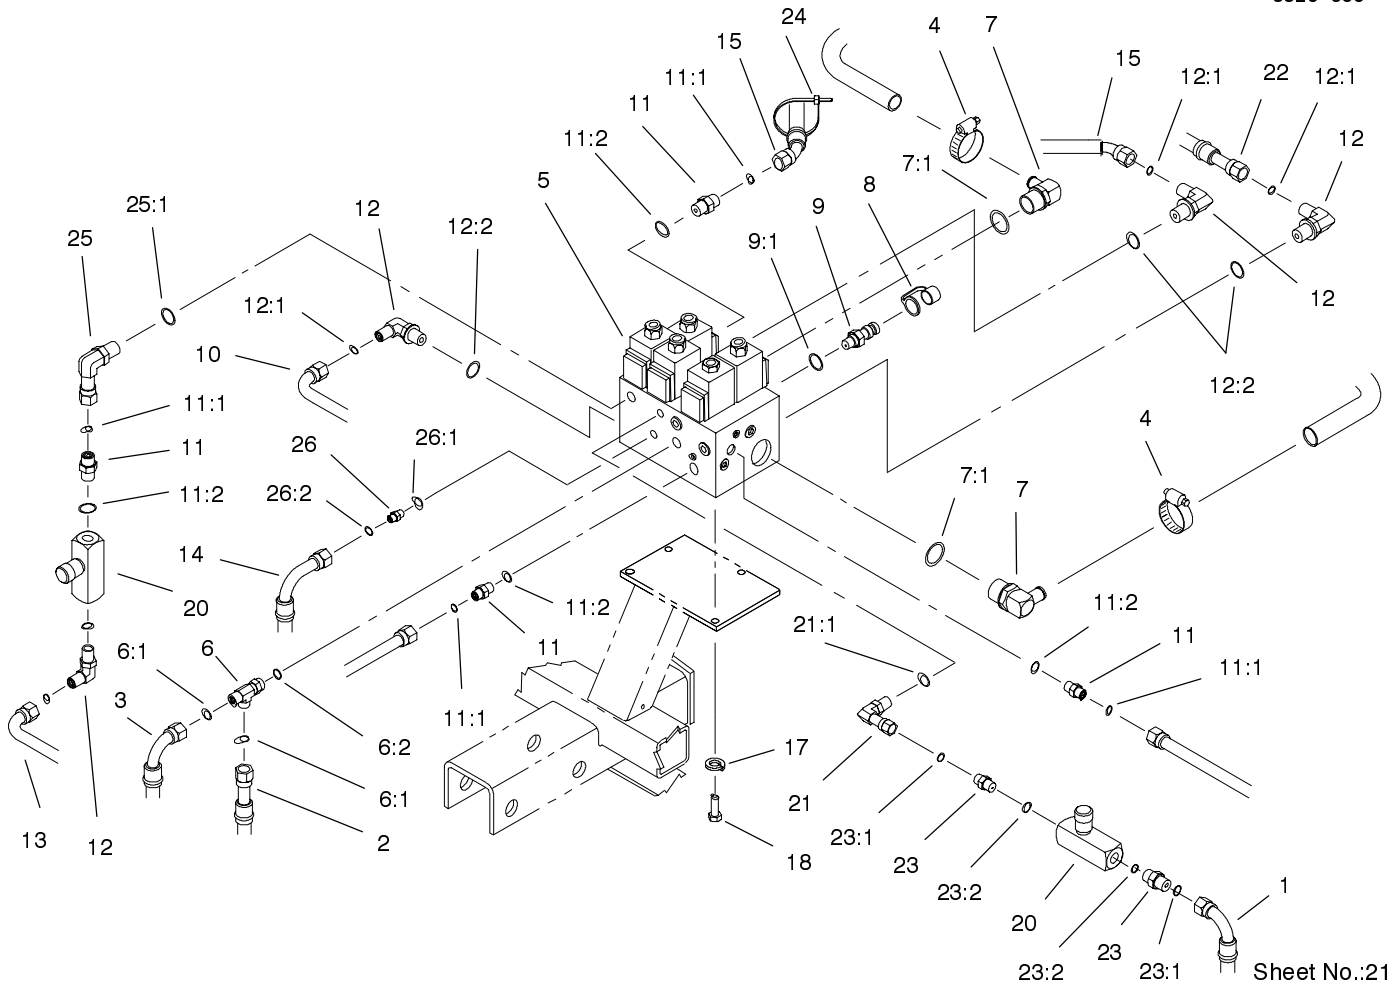

Lift Block Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0061	1	Hyd. Hose ASM
2	104-0060	1	Hyd. Hose ASM
3	104-0059	1	Hyd. Hose ASM
4	2412-34	2	Clamp-Hose
5	99-6979	1	Manifold Block - Lift
6	340-86	1	Fitting-Tee
6:1	237-22	2	O-Ring
6:2	237-42	1	O-Ring
7	23-8910	2	Stem-Barb, 90 DEG
7:1	237-146	1	O-Ring
8	354-79	1	Cap - Fitting, Yellow
9	59-7410	1	Tip-Nipple, Diag.
9:1	237-42	1	O-Ring
10	98-3907	1	Tube ASM
11	340-2	4	Adapter
11:1	237-22	1	O-Ring
11:2	237-42	1	O-Ring
12	340-77	4	Fitting-90 DEG
12:1	237-22	1	O-Ring
12:2	237-42	1	O-Ring
13	104-0093	1	Tube-ASM
14	104-0062	1	Hyd. Hose ASM
15	104-0055	2	Hyd. Hose ASM
17	3253-4	3	Washer-Lock
18	322-3	3	Screw-HH
20	98-9742	2	Valve-Control, Flow

Ref. No.	Part No.	Qty.	Description
21	340-143	1	Elbow - 90 DEG Swivel
21:1	237-78	1	O-Ring
22	104-0054	1	Hyd. Hose ASM
23	340-1	2	Adapter
23:1	237-35	1	O-Ring
23:2	237-42	1	O-Ring
24	3290-379	1	Tie-Cable
25	340-110	1	Elbow-Swivel, 90 DEG Straight
25:1	237-42	1	O-Ring
26	340-92	1	Fitting
26:1	237-78	1	O-Ring
26:2	237-21	1	O-Ring

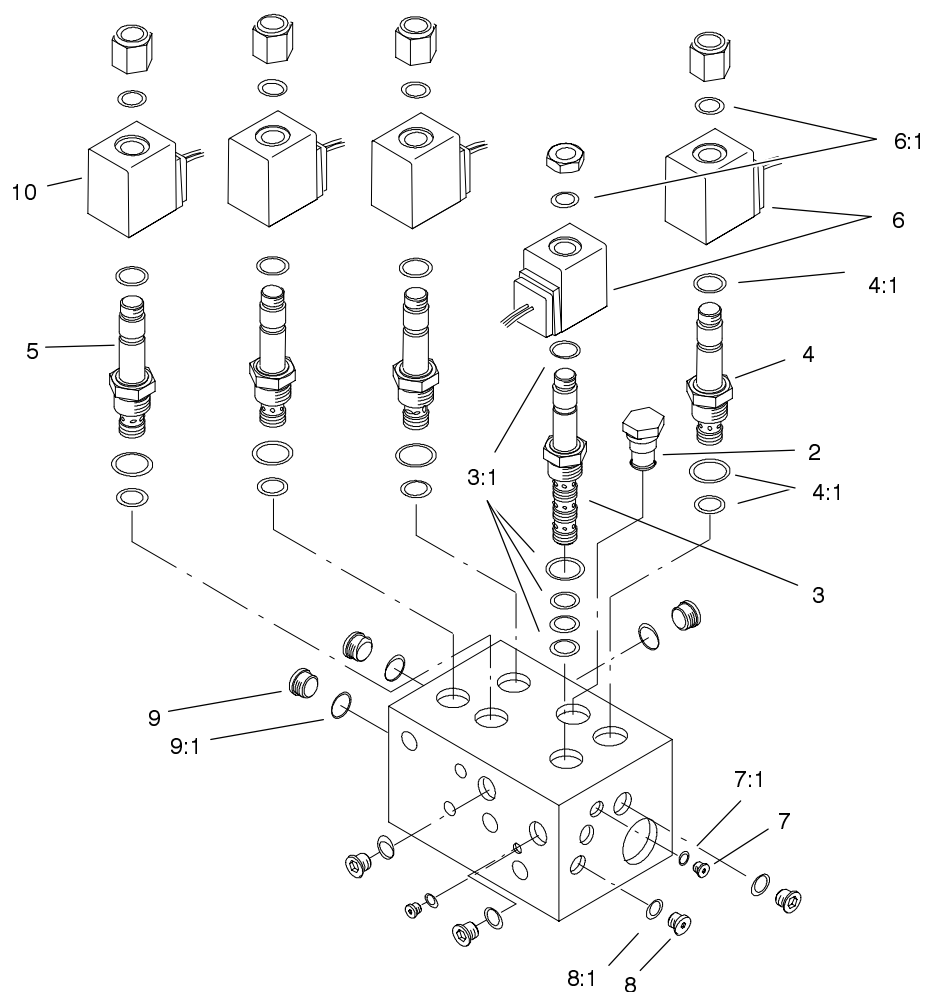


T-3574
Sheet No.:B3

Lift Block Assembly No. 99-6979

Ref. No.	Part No.	Qty.	Description
2	95-7480	1	Plug - Cavity
3	94-2627	1	Cartridge
3:1	75-2090	1	Kit-Seal
4	93-7494	1	Cartridge
4:1	75-2080	1	Kit-Seal
5	104-1208	3	Cartridge - Blocking
6	83-2010	2	Coil - Valve
6:1	94-5438	1	Seal-Solenoid
7	353-991	2	Plug-Hex, Hollow
7:1	237-156	1	O-Ring
8	353-990	1	Plug
8:1	237-78	1	O-Ring
9	353-989	7	Plug-Hex, Hollow
9:1	237-42	1	O-Ring
10	104-1209	3	Solenoid


Ref. No.	Part No.	Qty.	Description

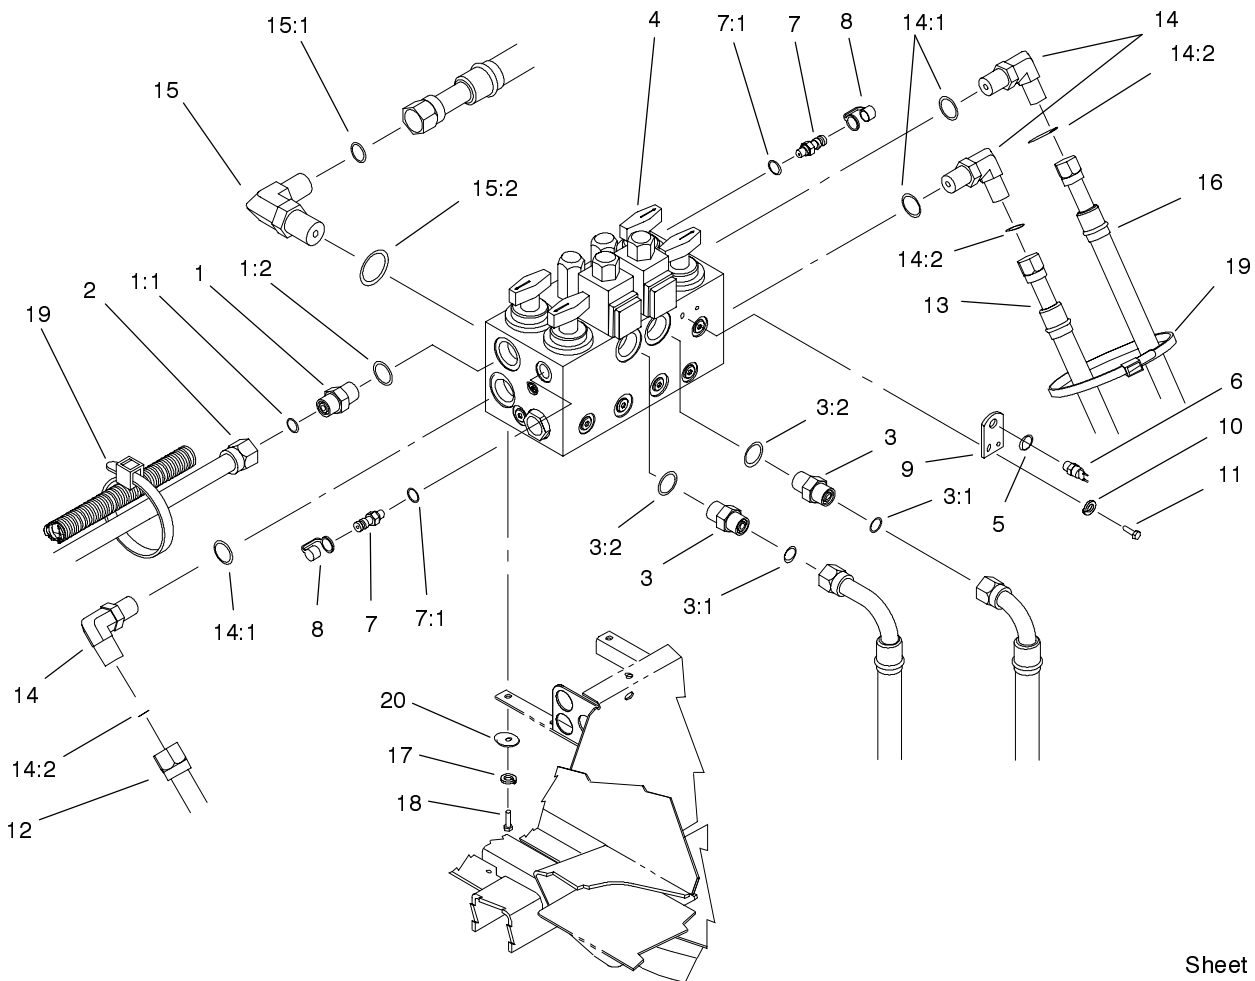

Sheet No.:22

Mow Block Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	340-6	1	Fitting-Hyd, Straight	18	322-3	4	Screw-HH
1:1	237-30	1	O-Ring	19	3290-378	2	Tie-Cable
1:2	237-80	1	O-Ring	20	3256-23	4	Washer-Flat
2	98-3905	1	Tube ASM				
3	340-7	2	Adapter				
3:1	237-65	1	O-Ring				
3:2	237-80	1	O-Ring				
4	99-6978	1	Manifold Block - Mow				
5	3256-76	2	Washer-Flat				
6	72-4320	2	Switch				
7	354-77	2	Fitting-Quick				
7:1	237-78	1	O-Ring				
8	354-79	2	Cap - Fitting, Yellow				
9	98-8199	2	Bracket - Switch				
10	3253-3	4	Washer-Lock				
11	329-3	4	Screw-HH				
12	98-3906	1	Tube ASM				
13	104-0065	1	Hyd. Hose ASM				
14	340-105	3	Fitting-90 DEG				
14:1	237-80	1	O-Ring				
14:2	237-30	1	O-Ring				
15	340-142	1	Elbow-90 DEG				
15:1	237-58	1	O-Ring				
15:2	237-81	1	O-Ring				
16	104-0066	1	Hyd. Hose ASM				
17	3253-4	4	Washer-Lock				

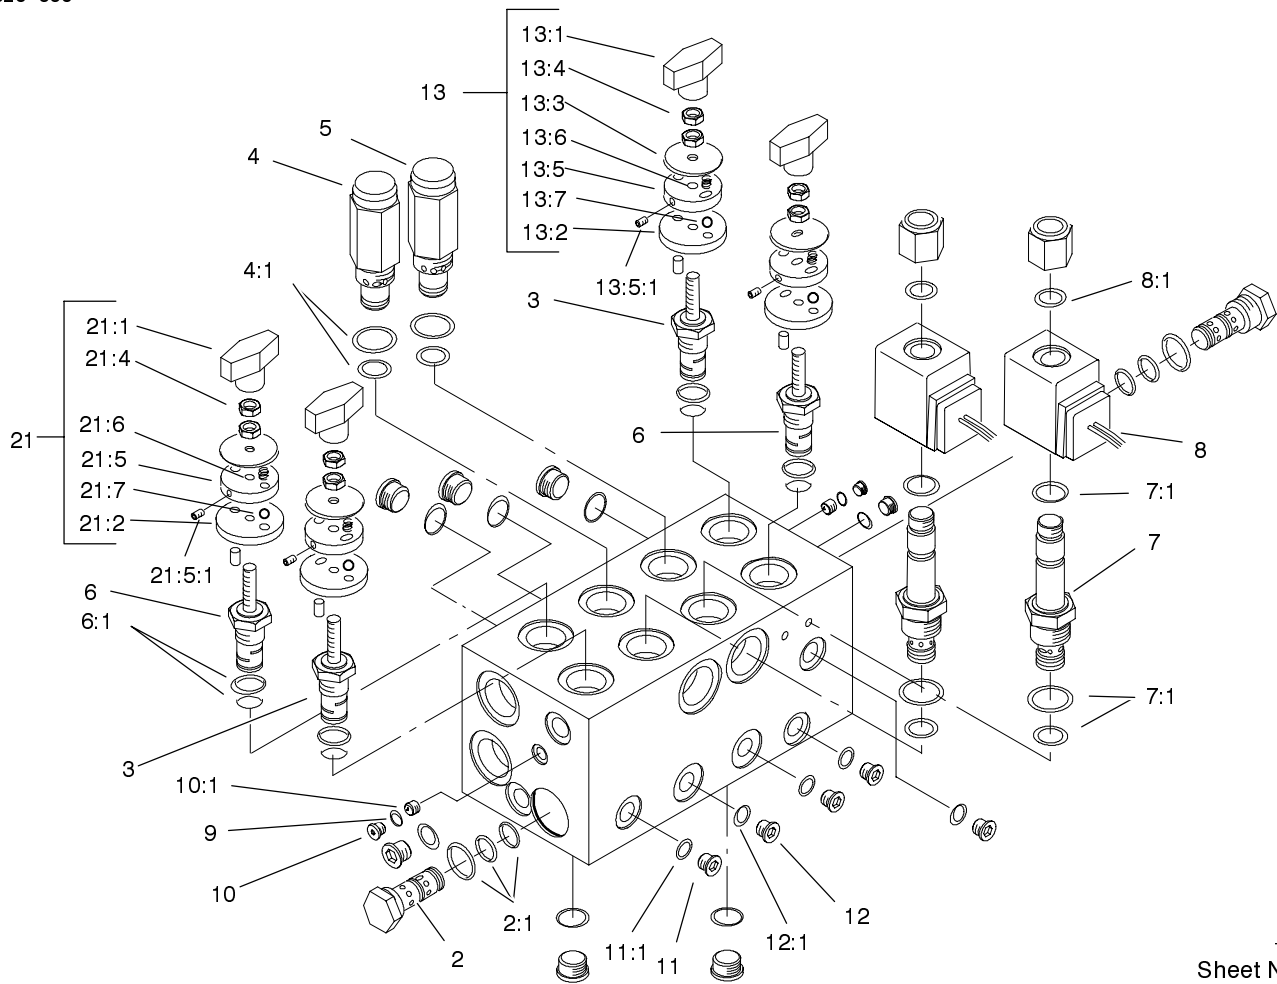


T-3575
Sheet No.:B4

Mow Block Assembly No. 99-6978

Ref. No.	Part No.	Qty.	Description
2	69-4120	2	Cartridge-Logic
2:1	69-4240	1	Kit-Seal
3	94-8175	2	Control-Flow, Rotary
4	94-3655	1	Valve-Relief
4:1	75-2080	1	Kit-Seal
5	104-1200	1	Valve-Relief, Cartridge
6	94-3657	2	Spool ASM
6:1	94-3661	1	Kit-Seal, 4-Way
7	93-7494	2	Cartridge
7:1	75-2080	1	Kit-Seal
8	83-2010	2	Coil - Valve
8:1	94-5438	1	Seal-Solenoid
9	95-5999	2	Plug-Orifice
10	353-991	4	Plug-Hex, Hollow
10:1	237-156	1	O-Ring
11	353-990	8	Plug
11:1	237-78	1	O-Ring
12	353-989	4	Plug-Hex, Hollow
12:1	237-42	1	O-Ring
13	94-3660	2	Kit-Detent
13:1	94-5020	1	Knob ASM
13:2	94-5025	1	Plate - Locating
13:3	94-5026	1	Plate-Indicator
13:4	3218-1	2	Nut-Jam
13:5	94-5023	1	Plate - Detent
13:5:1	3245-36	1	Screw - HSH

Ref. No.	Part No.	Qty.	Description
13:6	94-5027	2	Spring
13:7	255-13	2	Ball-Steel, Stainless
21	94-6378	2	Kit-Detent
21:1	94-5020	1	Knob ASM
21:2	94-5021	1	Plate - Locating
21:4	3218-1	2	Nut-Jam
21:5	94-5023	1	Plate - Detent
21:5:1	3245-36	1	Screw - HSH
21:6	94-5027	2	Spring
21:7	255-13	2	Ball-Steel, Stainless

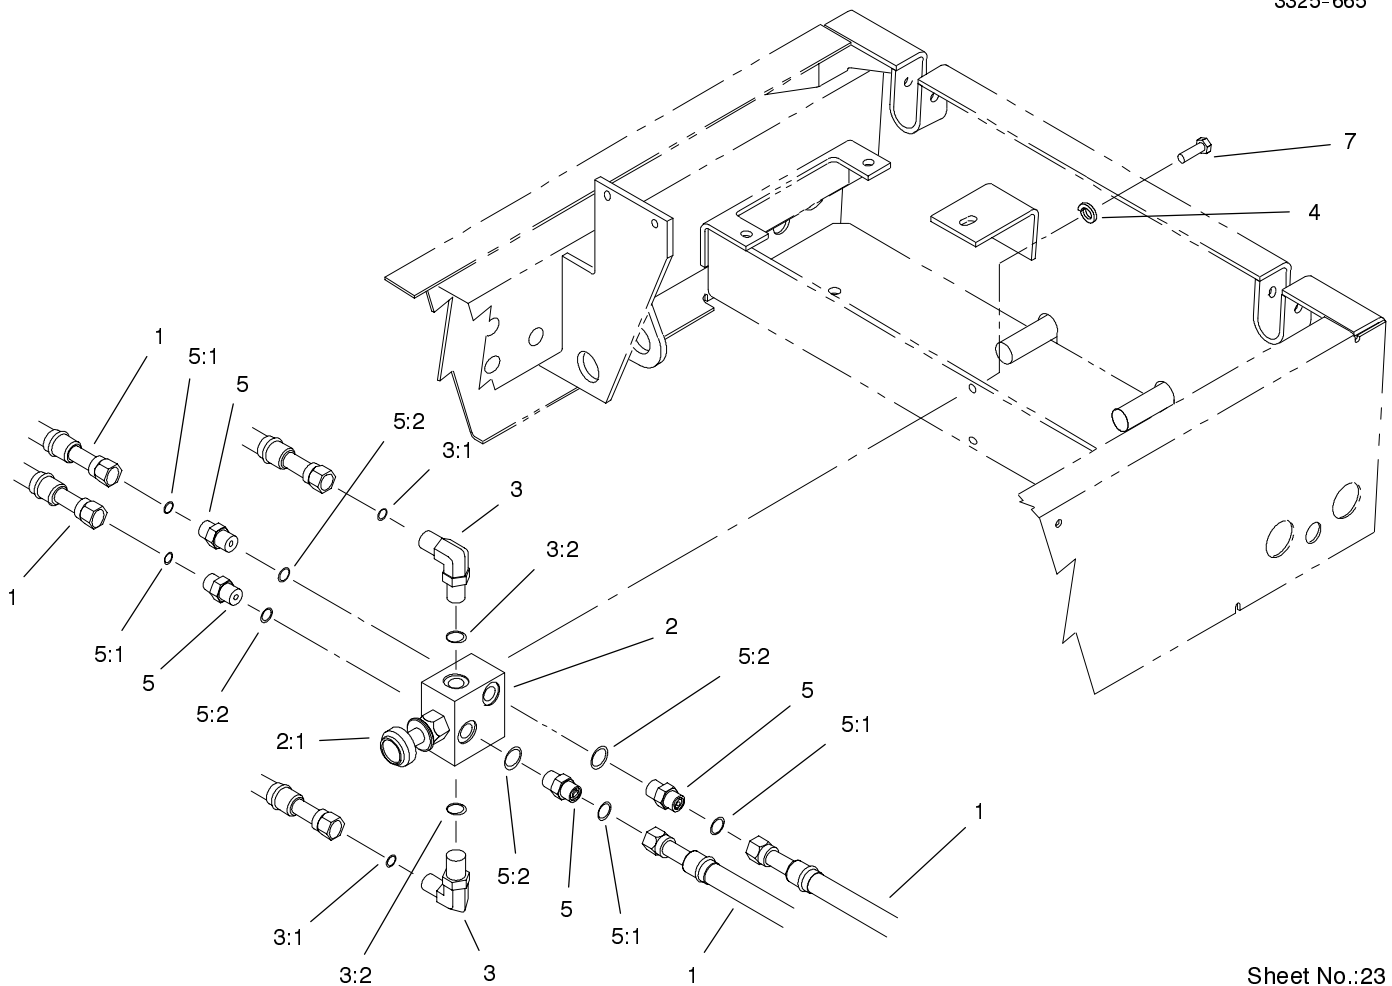


Sheet No.:23

Rear Hydraulic Manifold Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0052	4	Hyd. Hose ASM
2	104-9250	1	Control - Flow
2:1	104-0003	1	Cartridge Kit
*2:1:1	104-0004	1	Cartridge Seal Kit
*2:1:2	104-0005	1	Cartridge Knob Kit
3	340-77	2	Fitting-90 DEG
3:1	237-22	1	O-Ring
3:2	237-42	1	O-Ring
4	3253-3	2	Washer-Lock
5	340-2	4	Adapter
5:1	237-22	1	O-Ring
5:2	237-42	1	O-Ring
7	321-4	2	Screw-HH

Ref. No.	Part No.	Qty.	Description

* Not illustrated

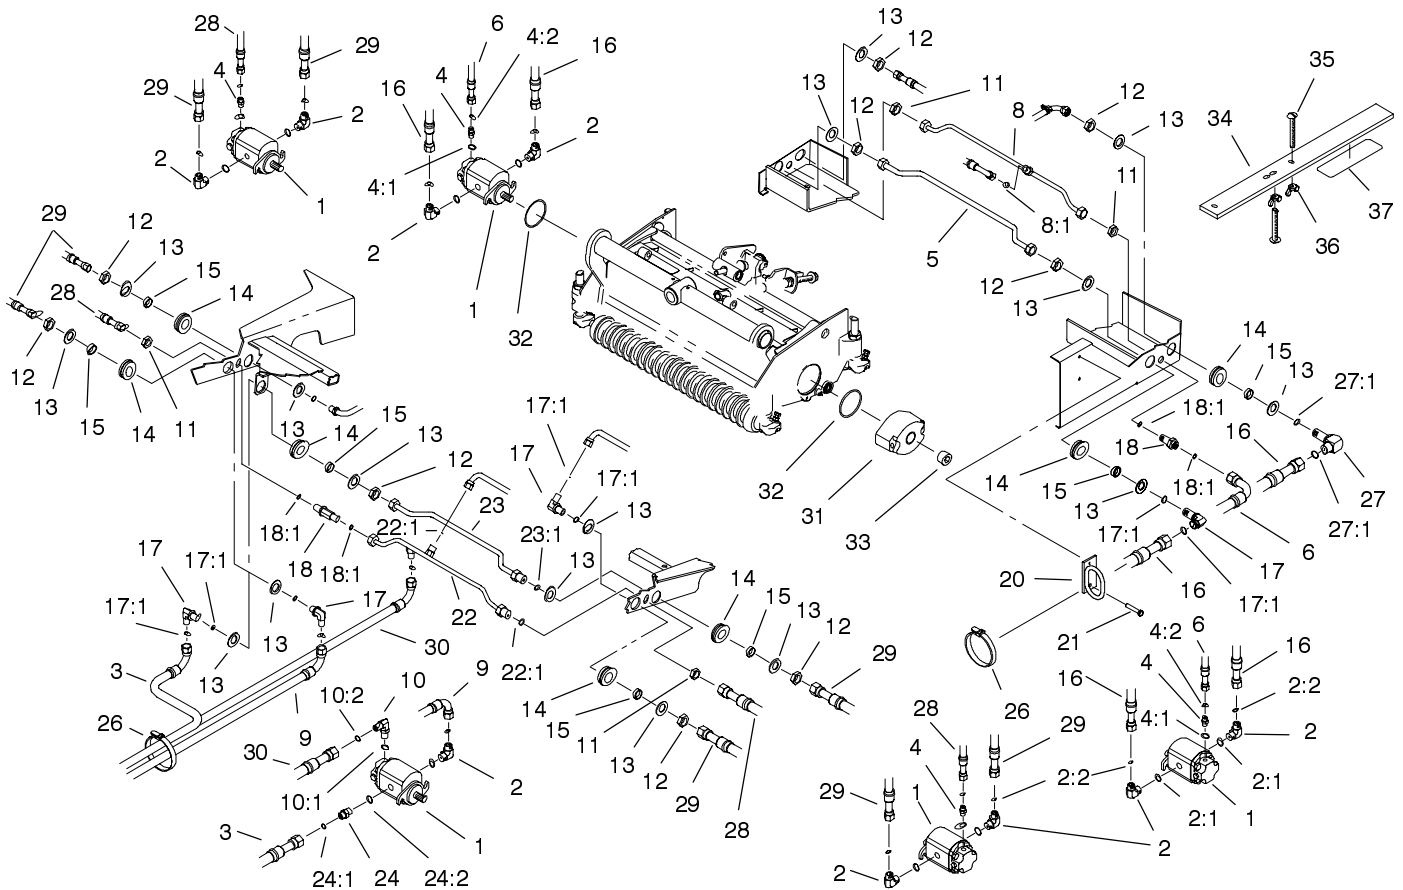


Sheet No.:24

Reel Motor and Hose Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9999	5	Motor-Hydraulic
2	340-98	9	Fitting-90 DEG
2:1	237-79	2	O-Ring
2:2	237-30	2	O-Ring
3	104-0067	1	Hyd. Hose ASM
4	340-92	4	Fitting
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	94-4918	1	Tube ASM
6	104-0058	2	Hyd. Hose ASM
8	100-3714	1	Drain Tube ASM
8:1	237-21	1	O-Ring
9	104-0068	1	Hyd. Hose ASM
10	340-132	1	Fitting-Hyd, 90 DEG
10:1	237-78	1	O-Ring
10:2	237-21	1	O-Ring
11	340-70	2	Locknut-Bulkhead
12	340-127	5	Nut-Bulkhead
13	69-8930	10	Washer
14	240-5	5	Grommet
15	69-8960	5	Spacer
16	104-0057	4	Hyd. Hose ASM
17	93-9151	5	Fitting-Hydraulic
17:1	237-30	4	O-Ring
18	340-71	3	Fitting-Straight, Bulkhead

Ref. No.	Part No.	Qty.	Description
18:1	237-22	4	O-Ring
20	104-0028	2	Hose Guide
21	32104-32	4	Screw-HH
22	104-0094	1	Tube-ASM
22:1	237-22	3	O-Ring
23	104-0092	1	Tube-ASM
23:1	237-30	1	O-Ring
24	340-4	1	Adapter
24:1	237-30	1	O-Ring
24:2	237-79	1	O-Ring
26	3290-379	6	Tie-Cable
27	100-3713	2	Fitting-Hyd., 90 Bulkhead
27:1	237-30	2	O-Ring
28	104-0063	2	Hyd. Hose ASM
29	104-0069	4	Hyd. Hose ASM
30	104-0064	1	Hyd. Hose ASM
31	94-4347-03	5	Weight-End
32	93-9783	10	O-Ring
33	93-8717	5	Plug-Pipe
34	98-1851	1	Bar-Gauge
35	32122-54	2	Screw-Head, Truss
36	32103-3	2	Nut-Wing
37	98-7976	1	Decal-Bar, Gauge

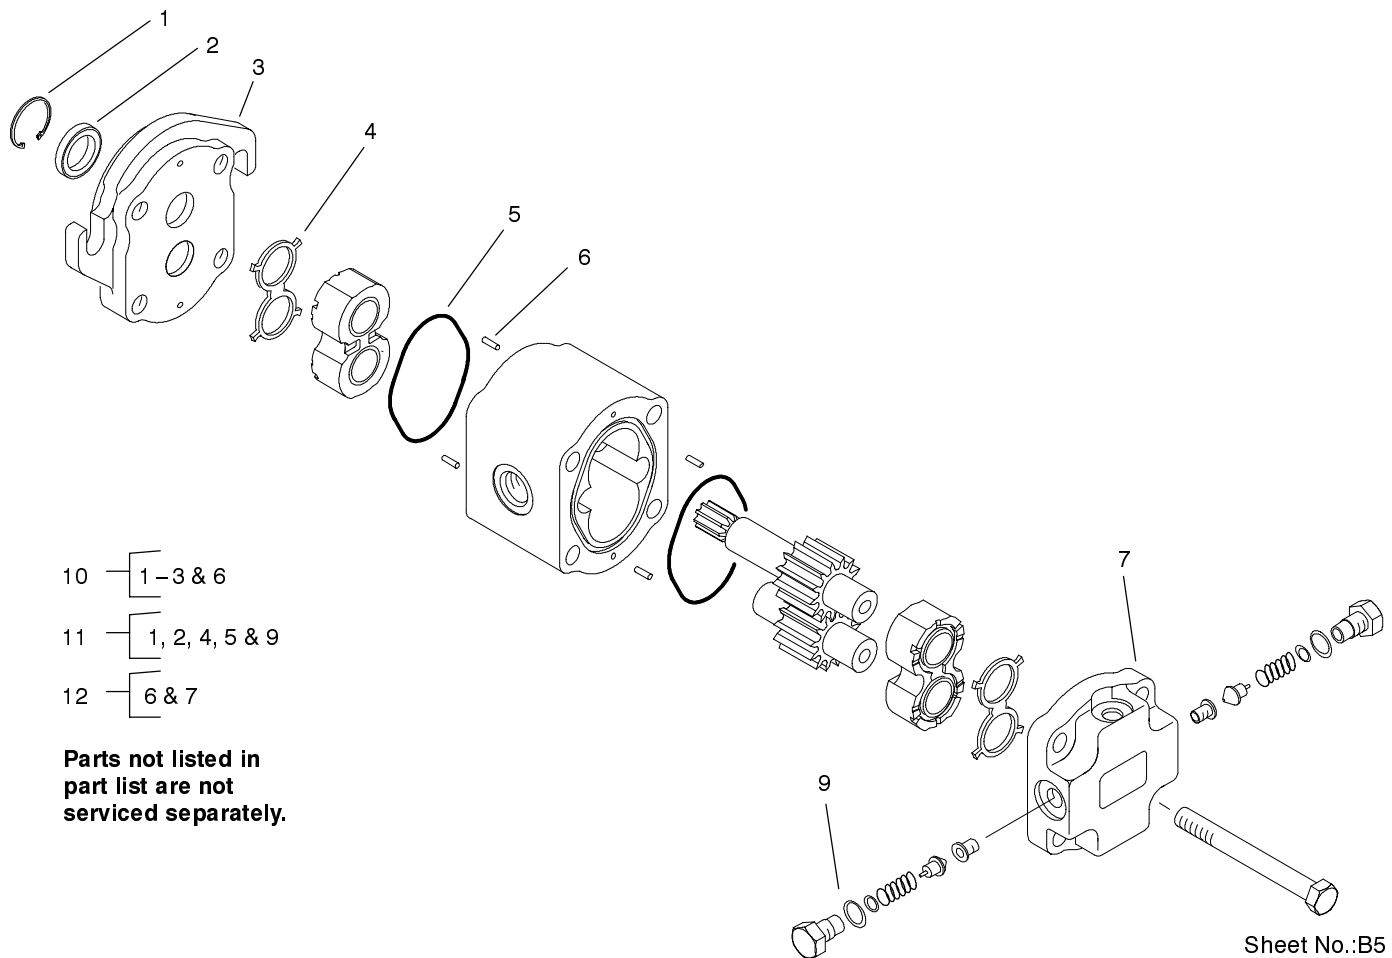


Sheet No.:B5
T-3502

Reel Motor No. 98-9999

Ref. No.	Part No.	Qty.	Description
10	93-9152	2	Flange Kit
11	98-9997	2	Seal Kit
12	93-9154	2	Valve Block Kit

Ref. No.	Part No.	Qty.	Description

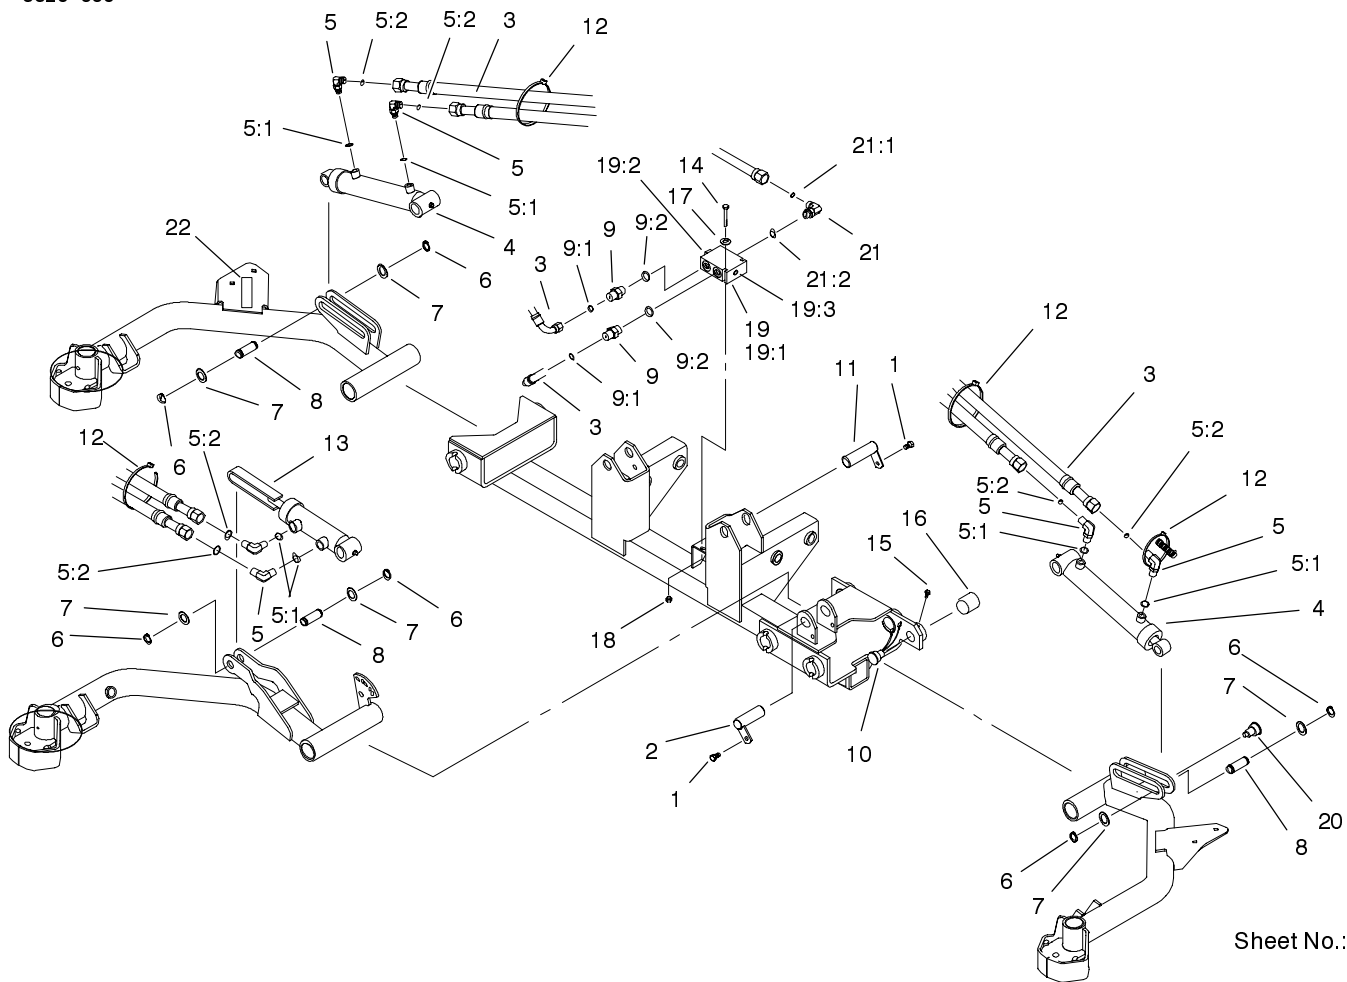


Sheet No.:25

Front Lift Circuit Assembly

Ref. No.	Part No.	Qty.	Description
1	32144-14	3	Screw-HWH
2	83-6790	1	Pin-Cylinder
3	104-0059	2	Hyd. Hose ASM
4	99-6986	2	Cylinder-Hydraulic
5	340-132	6	Fitting-Hyd, 90 DEG
5:1	237-78	2	O-Ring
5:2	237-21	2	O-Ring
6	32120-93	6	Ring-Retaining
7	3-6498	6	Washer-Thrust
8	104-0046	3	Pin - Cylinder Slide
9	340-2	2	Adapter
9:1	237-22	1	O-Ring
9:2	237-42	1	O-Ring
10	92-8002	1	Plug-Reed Switch, Magnet
11	83-6780	2	Cylinder Pin
12	3290-378	2	Tie-Cable
13	99-6987	1	Cylinder-Hyd
14	321-11	2	Screw-HH
15	32104-76	2	Screw
16	75-6370	1	Cap - Sensor
17	3256-1	2	Washer-Flat
18	3296-42	2	Nut-Lock NI
19	99-6998	1	Divider-Flow
19:1	99-5645	1	Body
19:2	99-5646	1	Cartridge

Ref. No.	Part No.	Qty.	Description
19:3	353-989	1	Plug-Hex, Hollow
19:3:1	237-42	1	O-Ring
*19:4	99-5647	1	Seal Kit
20	92-8754	1	Plug-Reed Switch, Magnet
21	340-77	1	Fitting-90 DEG
21:1	237-22	1	O-Ring
21:2	237-42	1	O-Ring
22	93-6687	1	Decal-Step, No

* Not illustrated

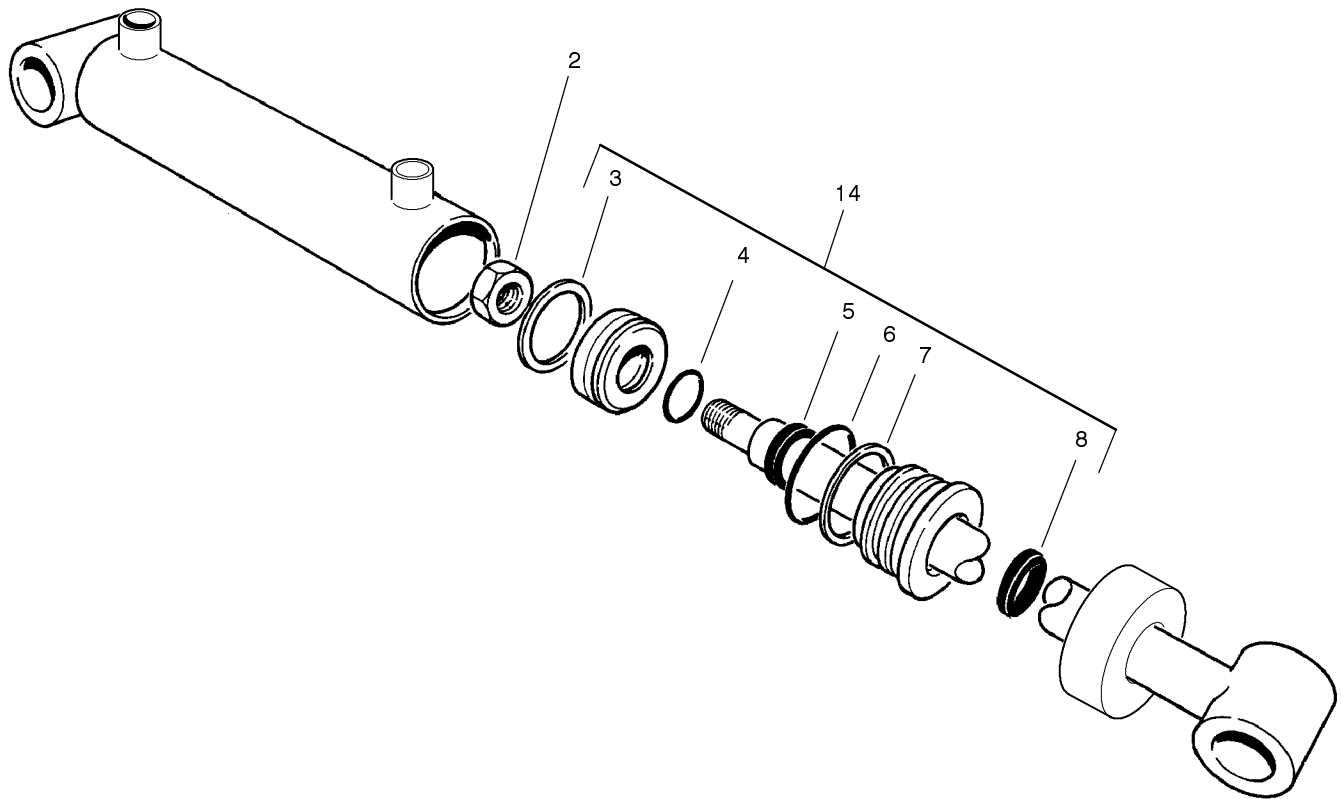


Sheet No.:B6

T-3383

Hydraulic Cylinder Assembly No. 99-6987

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description

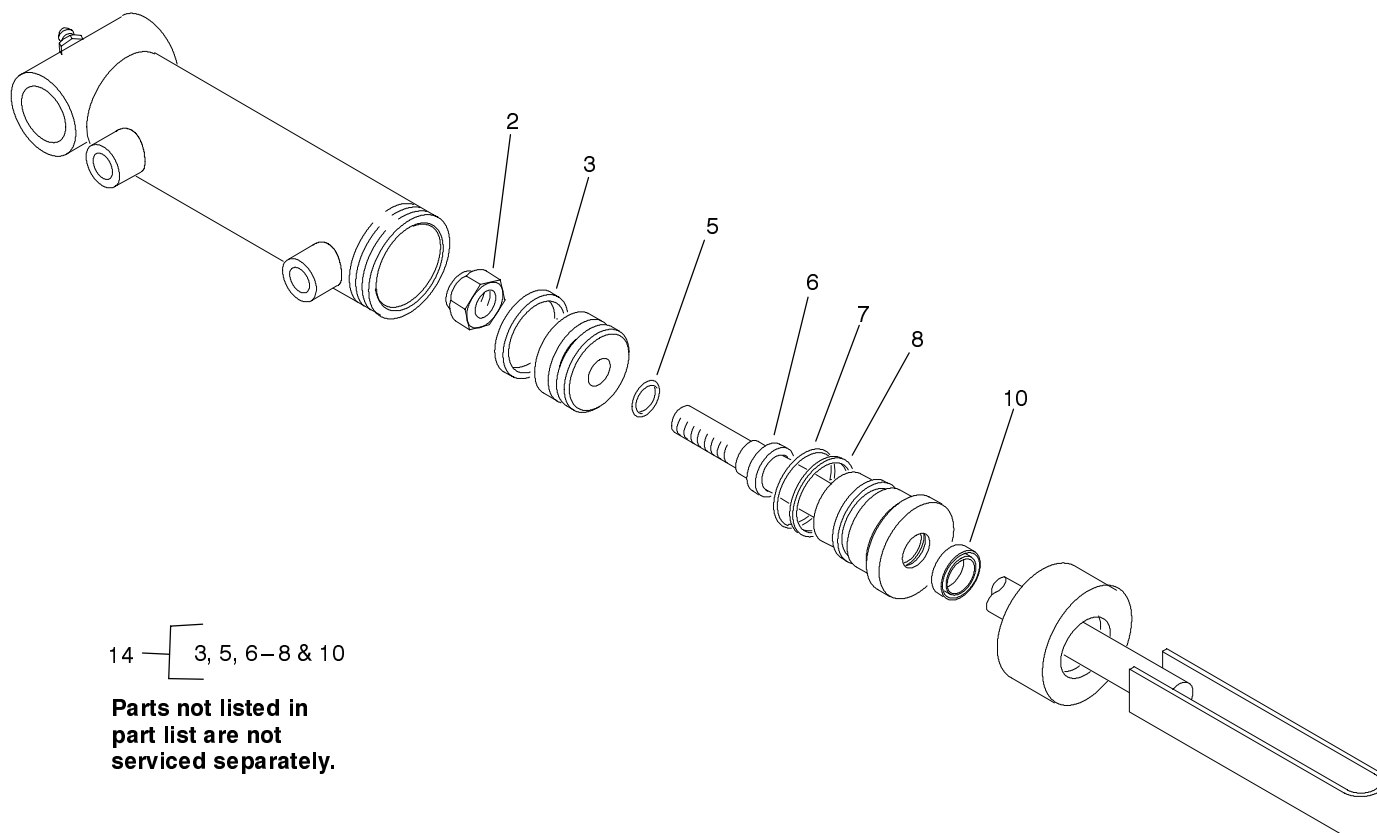

14	3, 5, 6-8 & 10
----	----------------


**Parts not listed in
part list are not
serviced separately.**

Sheet No.:B7
T-3501

Hydraulic Cylinder Assembly No. 99-6986

Ref. No.	Part No.	Qty.	Description
2 14	32152-10 100-8023	1 1	Locknut-Deform, Top Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description

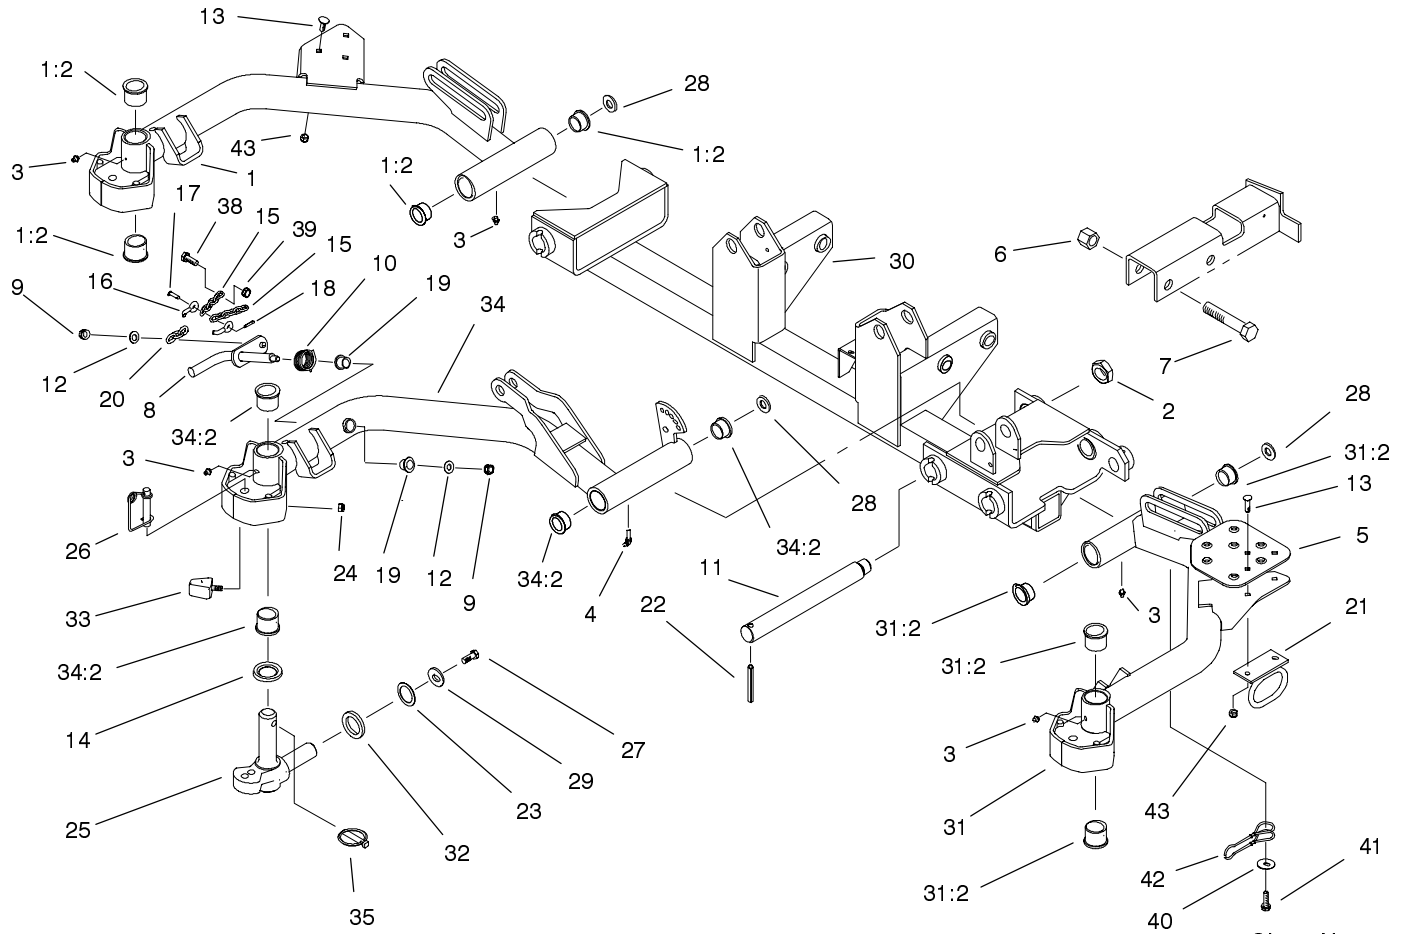


Sheet No.:26

Front Lift Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	99-6905-03	1	Arm ASM #5
1:2	104-0015	2	Bushing-Flange
2	3296-49	3	Nut-Lock NI
3	302-5	5	Fitting-Grease
4	302-60	1	Fitting-Lube
5	104-1438-03	1	Step-Perforated
6	3296-51	4	Nut-Lock, NI
7	328-7	4	Screw-HH
8	99-6941-03	1	Pivot Rod ASM
9	3296-39	2	Nut-Lock, NI
10	98-3929	1	Spring-Torsion
11	95-7158	3	Pin - Pivot
12	3256-24	2	Washer-Flat
13	3230-1	5	Screw-CARR
14	94-8946	3	Washer
15	5-1096	2	Chain-Lift
16	282-4	1	Shackle
17	283-6	1	Pin-Clevis
18	3272-10	1	Pin-Cotter
19	256-287	2	Bushing
20	104-1413	1	Chain - Straight Link
21	104-0028	2	Hose Guide
22	32121-110	3	Pin-Roll, Slotted
23	3-6781	3	Washer-Thrust
24	3296-29	6	Nut-Lock
25	98-1880-03	3	Knuckle - Pivot

Ref. No.	Part No.	Qty.	Description
26	99-5610	3	Pin
27	98-7993	3	Screw-HHF
28	76-2980	3	Washer-Thrust
29	3256-6	3	Washer-Flat
30	99-6913-03	1	Frame-Carrier
31	99-6904-03	1	Arm ASM #4
31:2	104-0015	2	Bushing-Flange
32	98-7974	3	Washer - Thrust
33	99-5605	6	Bumper ASM
34	99-6901-03	1	Arm ASM #1
34:2	104-0015	2	Bushing-Flange
35	283-71	3	Pin-Lynch
38	323-6	1	Screw-HH
39	32128-21	1	Nut-HF
40	3256-57	2	Washer-Flat
41	32144-26	2	Screw-Flow
42	98-3936	2	Lanyard
43	3296-47	5	Nut-Lock, NI

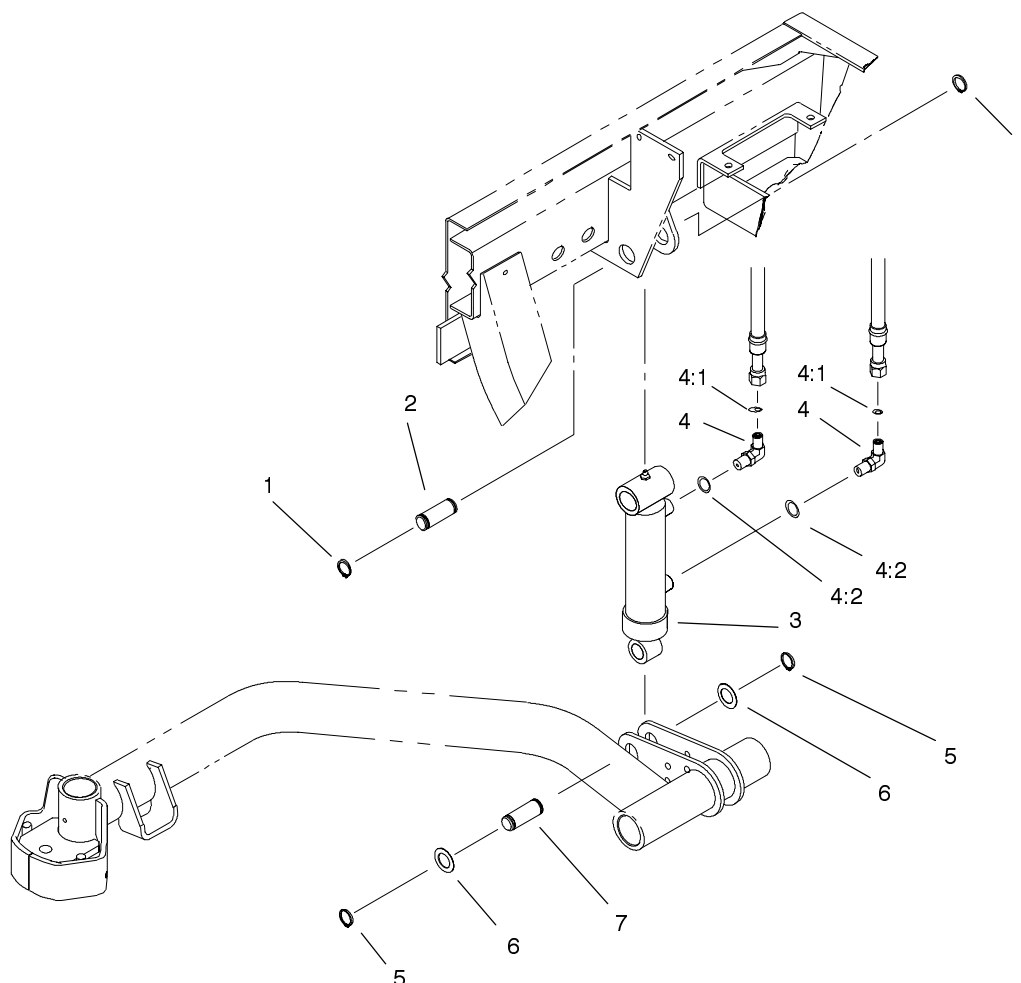


Sheet No.:27

Rear Lift Cylinder Assembly

Ref. No.	Part No.	Qty.	Description
1	32151-36	4	Ring-Retaining
2	75-5360	2	Pin-Cylinder
3	98-3945	2	Cylinder-Hyd.
4	340-132	4	Fitting-Hyd, 90 DEG
4:1	237-78	1	O-Ring
4:2	237-21	1	O-Ring
5	32120-93	4	Ring-Retaining
6	3-6498	4	Washer-Thrust
7	104-0046	2	Pin - Cylinder Slide

Ref. No.	Part No.	Qty.	Description

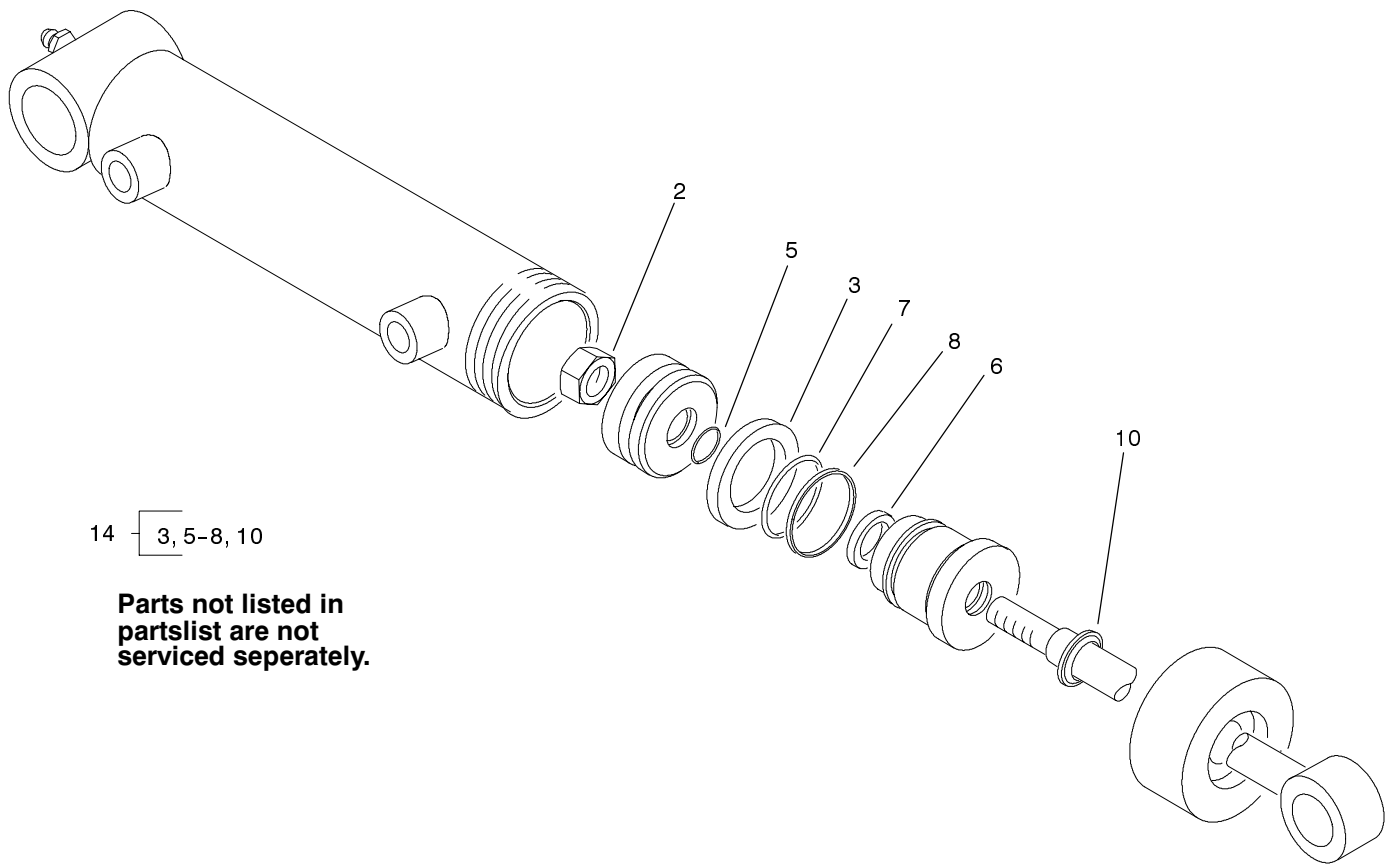

14	3, 5-8, 10
----	------------

**Parts not listed in
partslist are not
serviced seperately.**


T-3576

Sheet No.:B8

Hydraulic Cylinder Assembly No. 98-3945

Ref. No.	Part No.	Qty.	Description
2	32152-10	1	Locknut-Deform, Top
14	100-8023	1	Kit-Repair, Seal

Ref. No.	Part No.	Qty.	Description

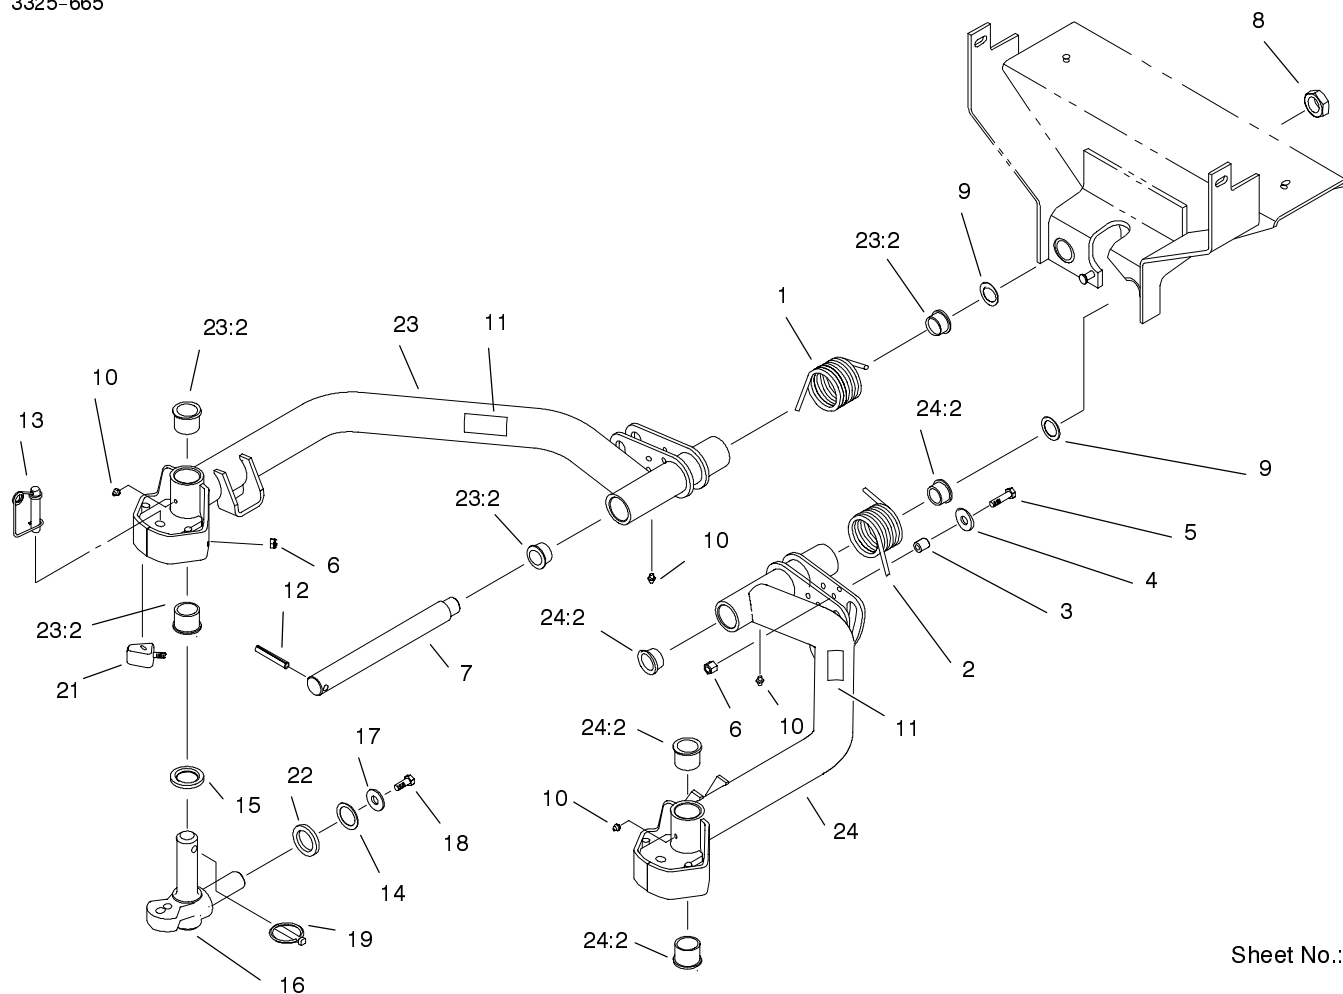


Sheet No.:28

Rear Lift Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	99-5608-03	1	Spring-Torsion, RH
2	99-5609-03	1	Spring-Torsion, LH
3	82-6840	2	Spacer
4	3256-35	2	Washer-Flat
5	322-7	2	Screw-HH
6	3296-29	6	Nut-Lock
7	95-7158	2	Pin - Pivot
8	3296-49	2	Nut-Lock NI
9	76-2980	2	Washer-Thrust
10	302-5	4	Fitting-Grease
11	93-6696	2	Decal-Loaded, Spring
12	32121-110	2	Pin-Roll, Slotted
13	99-5610	2	Pin
14	3-6781	2	Washer-Thrust
15	94-8946	2	Washer
16	98-1880-03	2	Knuckle - Pivot
17	3256-6	2	Washer-Flat
18	98-7993	2	Screw-HHF
19	283-71	2	Pin-Lynch
21	99-5605	4	Bumper ASM
22	98-7974	2	Washer - Thrust
23	99-6903-03	1	Arm ASM #3
23:2	104-0015	2	Bushing-Flange
24	99-6902-03	1	Arm ASM #2
24:2	104-0015	2	Bushing-Flange

Ref. No.	Part No.	Qty.	Description

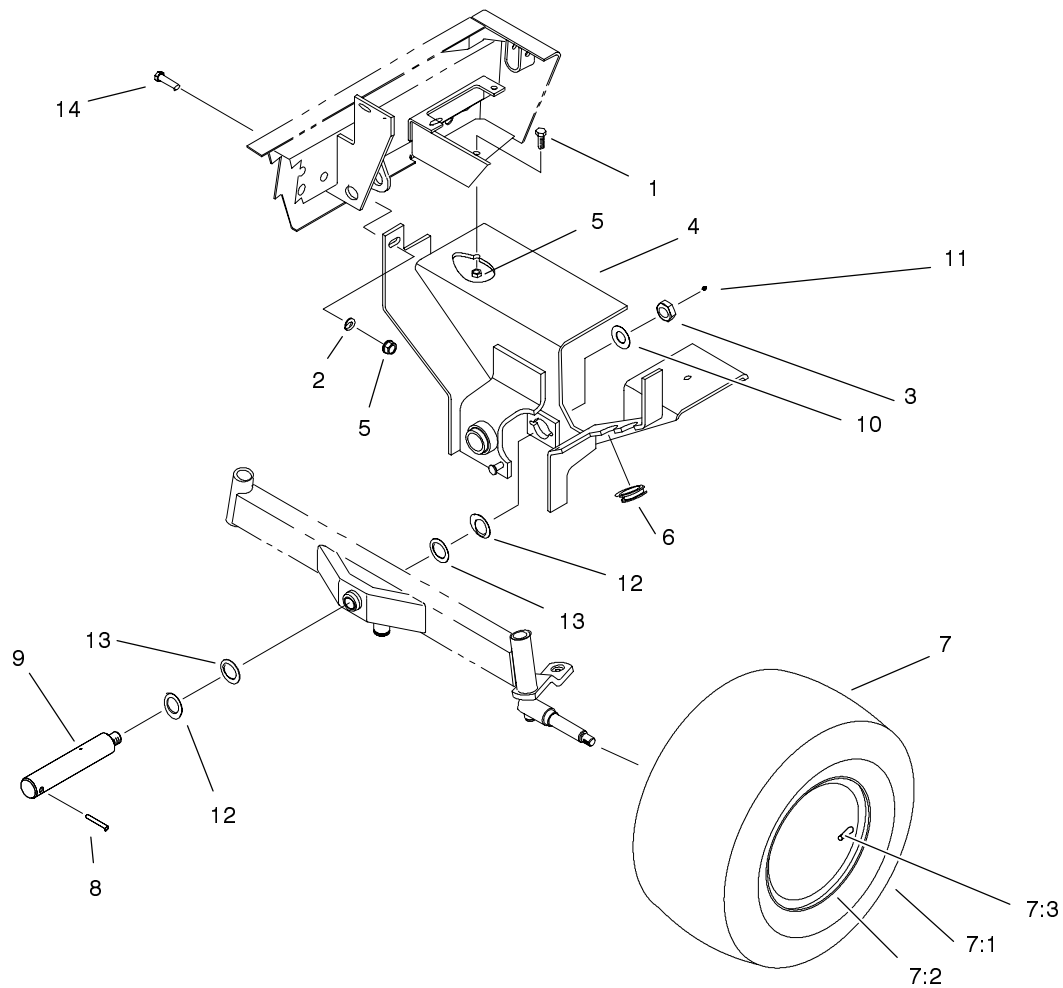


Sheet No.:30

Rear Axle Support

Ref. No.	Part No.	Qty.	Description
1	323-7	2	Screw-HH
2	3256-24	2	Washer-Flat
3	32146-20	1	Nut-Jam
4	99-6940-03	1	Axle Support ASM
5	3296-39	4	Nut-Lock, NI
6	237-165	2	Grommet
☆7		2	Tire & Wheel ASM
7:1	86-5910	1	Tire
7:2	100-2582	1	Rim
7:3	232-27	1	Stem-Valve
8	32121-32	1	Pin-Roll
9	98-8173-03	1	Pin-Pivot, Axle
10	71-4540	1	Washer-Thrust
11	302-2	1	Fitting-Grease
12	99-8431	2	Washer-Thrust
13	99-8432	2	Washer-Thrust
14	323-13	2	Screw-HH

☆ Not serviced

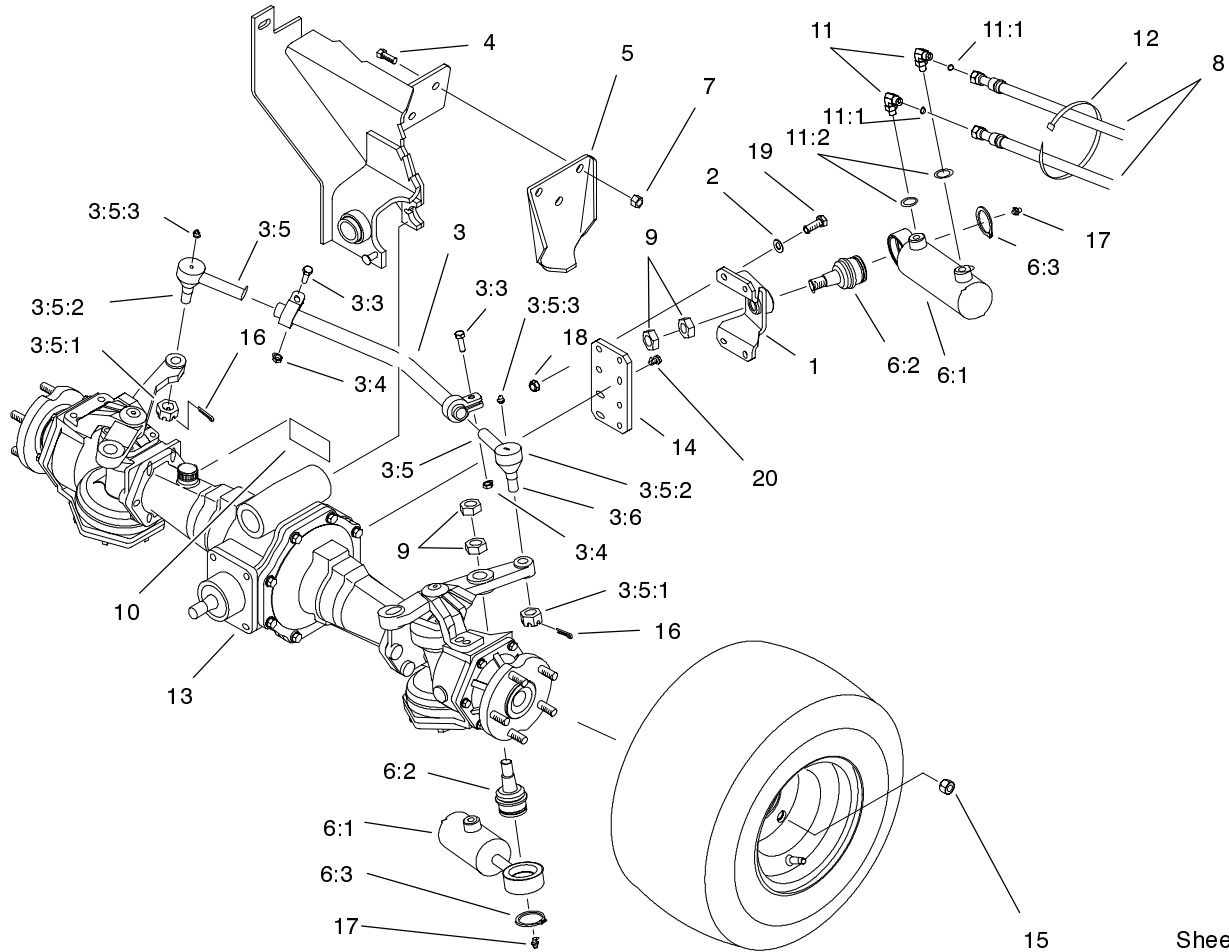


Sheet No.:32

4WD Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	98-3948-03	1	Mount-Cylinder
2	48-9220	4	Washer
3	98-3932	1	Tie Rod ASM
3:3	323-9	2	Screw-HH
3:4	3296-39	2	Nut-Lock, NI
3:5	71-4740	2	End-Tie Rod
3:5:1	32136-13	1	Nut-Hex, Slotted
3:5:2	71-4760	1	Seal
3:5:3	302-55	1	Zerk
3:7	99-8996	1	Tube And Clamp Assembly
4	325-5	6	Screw-HH
5	99-6966-03	2	Stop Axle
☆6		1	Balljoint ASM
6:1	98-8163	1	Cylinder-Steering
6:2	92-5838	2	Joint-Ball
6:3	32151-104	2	Ring-Retaining, External
7	3296-23	6	Nut-Lock, NI
8	104-1494	2	Hyd. Hose ASM
9	3220-6	4	Nut-Jam
10	93-6697	1	Decal - Lube
11	340-132	2	Fitting-Hyd, 90 DEG
11:1	237-78	1	O-Ring
11:2	237-21	1	O-Ring
12	3290-378	1	Tie-Cable

Ref. No.	Part No.	Qty.	Description
13	98-3925	1	Drive Axle ASM
14	98-8198-03	1	Plate-Cylinder Bracket
15	93-5268	10	Nut-Lug
16	3272-11	2	Pin-Cotter
17	302-5	2	Fitting-Grease
18	3296-39	4	Nut-Lock, NI
19	323-8	4	Screw-HH
20	95-8812	4	Screw-HH

☆ Not serviced

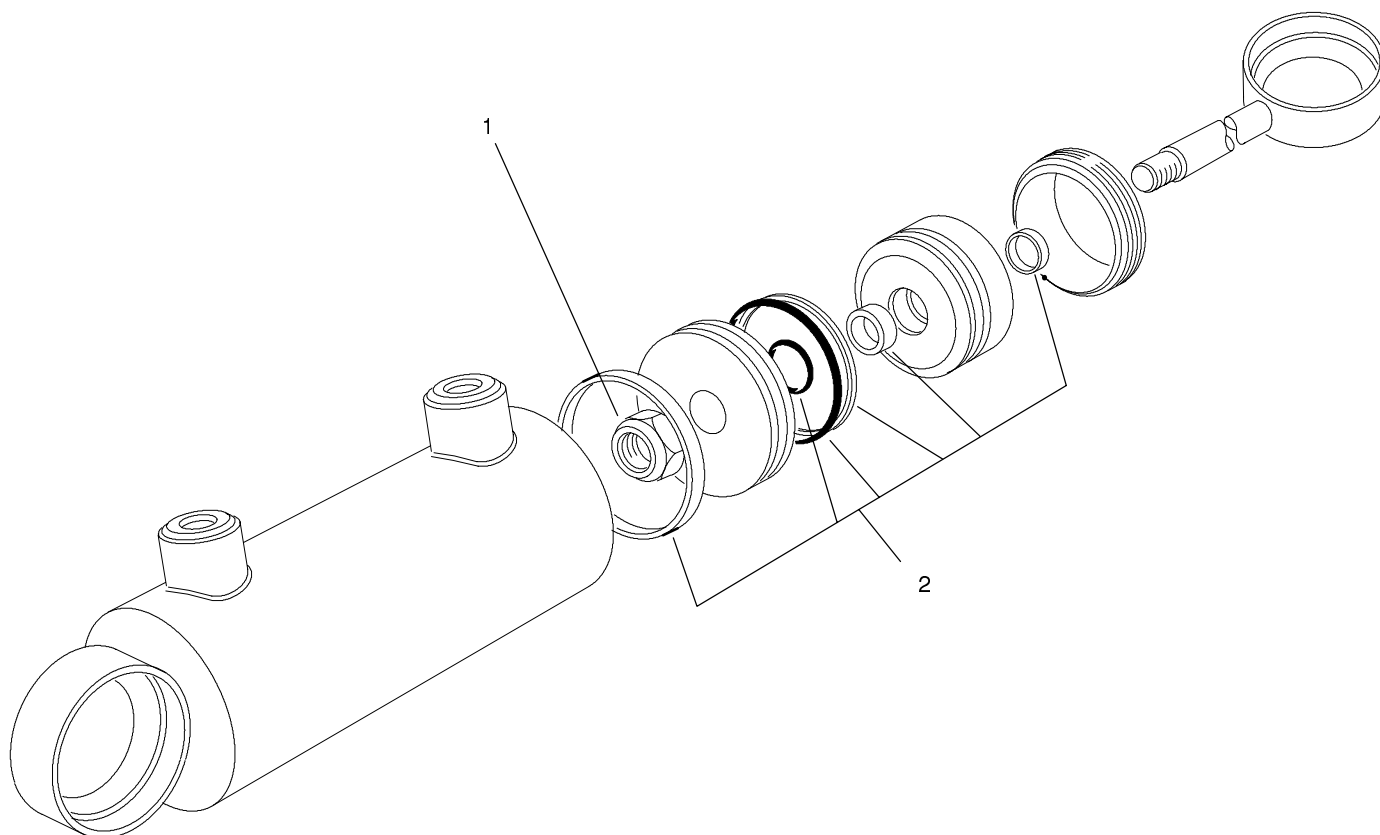


T-3513
Sheet No.:B9

Hydraulic Cylinder Assembly No. 98-8163

Ref. No.	Part No.	Qty.	Description
1	32152-10	1	Locknut-Deform, Top
2	100-8022	1	Seal Repair Kit

Ref. No.	Part No.	Qty.	Description

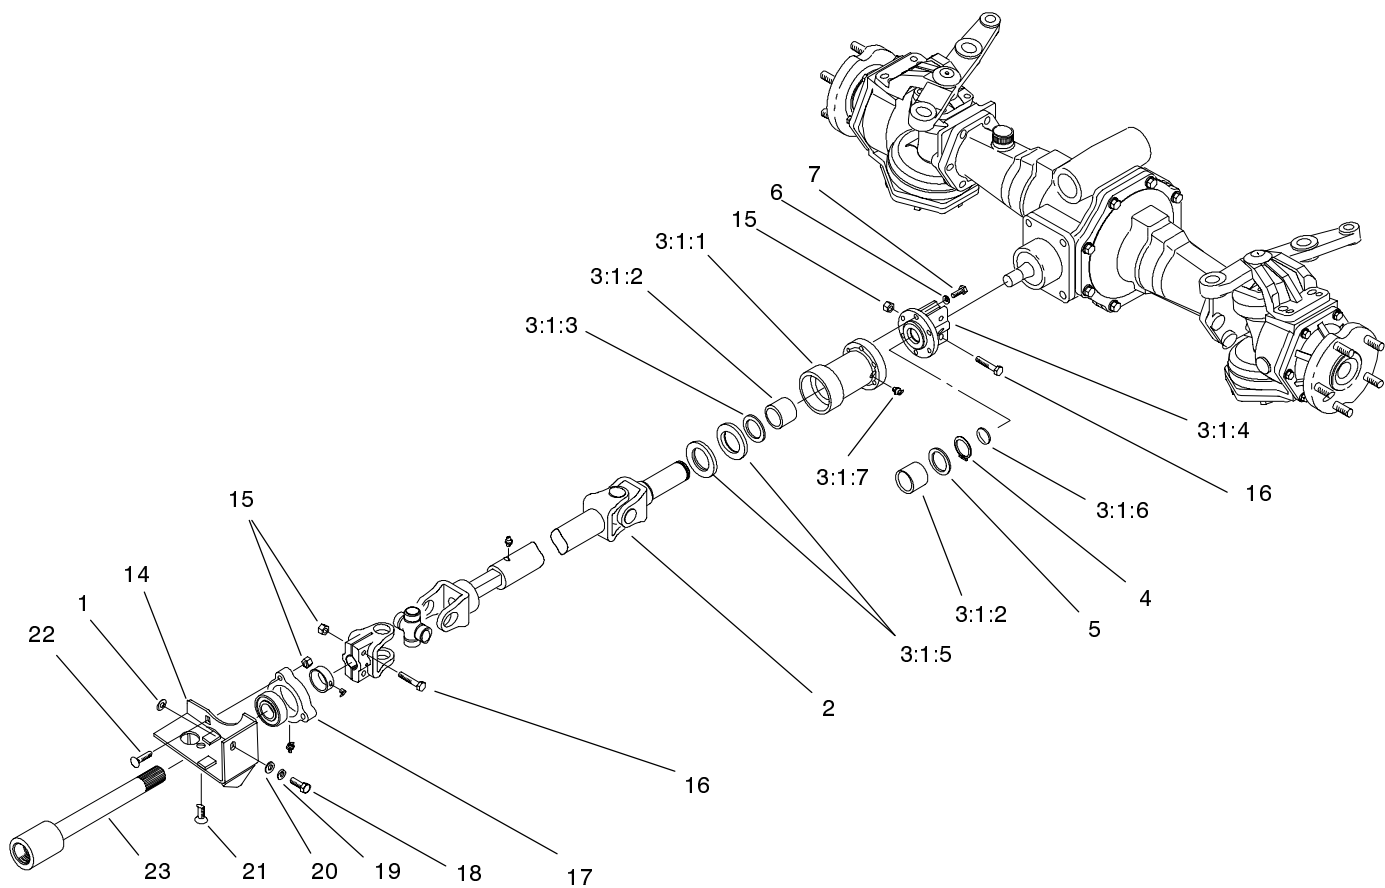


Sheet No.:33

4 WD Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	83-7470	2	Shim
2	99-6976	1	Driveshaft
2:1	54-9090	1	Yoke-End
2:2	54-9180	2	U-Joint Kit
2:2:1	62-3820	1	Fitting-Grease
2:3	104-1693	1	Yoke & Shaft
2:4	83-5260	1	Tube-Yoke, Slip
2:5	72-3440	1	Yoke - Shaft
☆3		1	Clutch Housing ASM
4	32151-87	1	Ring-Retaining
5	71-4590	2	Washer-Thrust
6	3253-3	6	Washer-Lock
7	3274-8	6	Screw-HSH
14	83-4970-03	1	Bracket-Bearing
15	3296-29	7	Nut-Lock
16	322-8	4	Screw-HH
17	76-2460	1	Bearing ASM
17:1	94-3405	1	Bearing-Ball
17:1:1	3245-35	1	Screw-HS
17:1:2	251-77	1	Bearing-Lockcollar
17:3	302-5	1	Fitting-Grease
18	48-9460	1	Capscrew-Hex
19	42-9850	1	Washer-Lock, Spring
20	48-8030	1	Washer
21	3274-34	1	Screw-HSFH

Ref. No.	Part No.	Qty.	Description
22	3230-3	3	Screw-CARR
23	83-4900-03	1	Shaft-Traction

☆ Not serviced

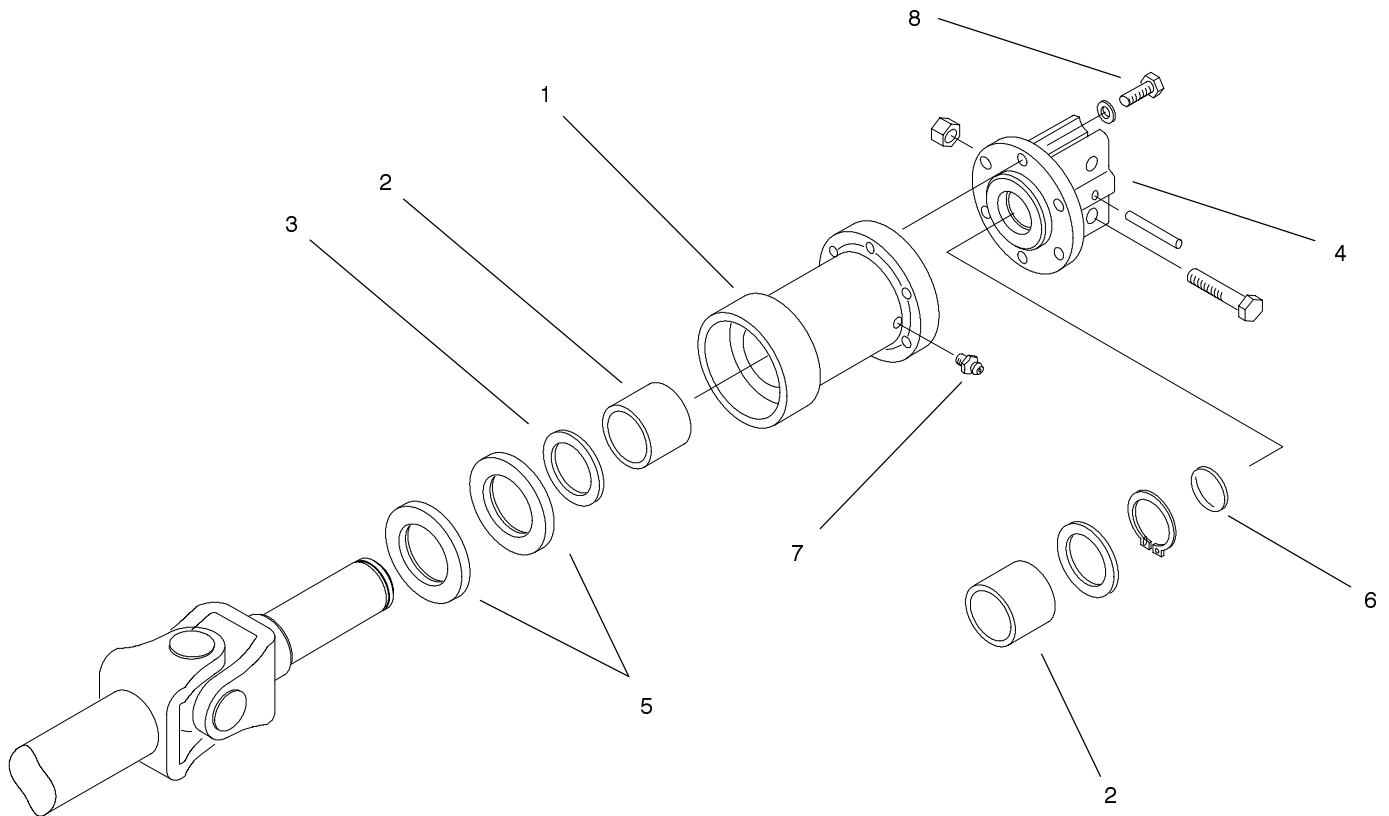


T-3608
Sheet No.:C1

Clutch Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	71-4570-03	1	Housing-Clutch, Roller
2	71-4580	2	Bearing
3	71-4590	1	Washer-Thrust
4	76-4690-03	1	Coupling - Axle
5	253-155	2	Seal-Oil
6	284-3	1	Plug
7	302-5	1	Fitting-Grease
8	3274-8	1	Screw-HSH

Ref. No.	Part No.	Qty.	Description

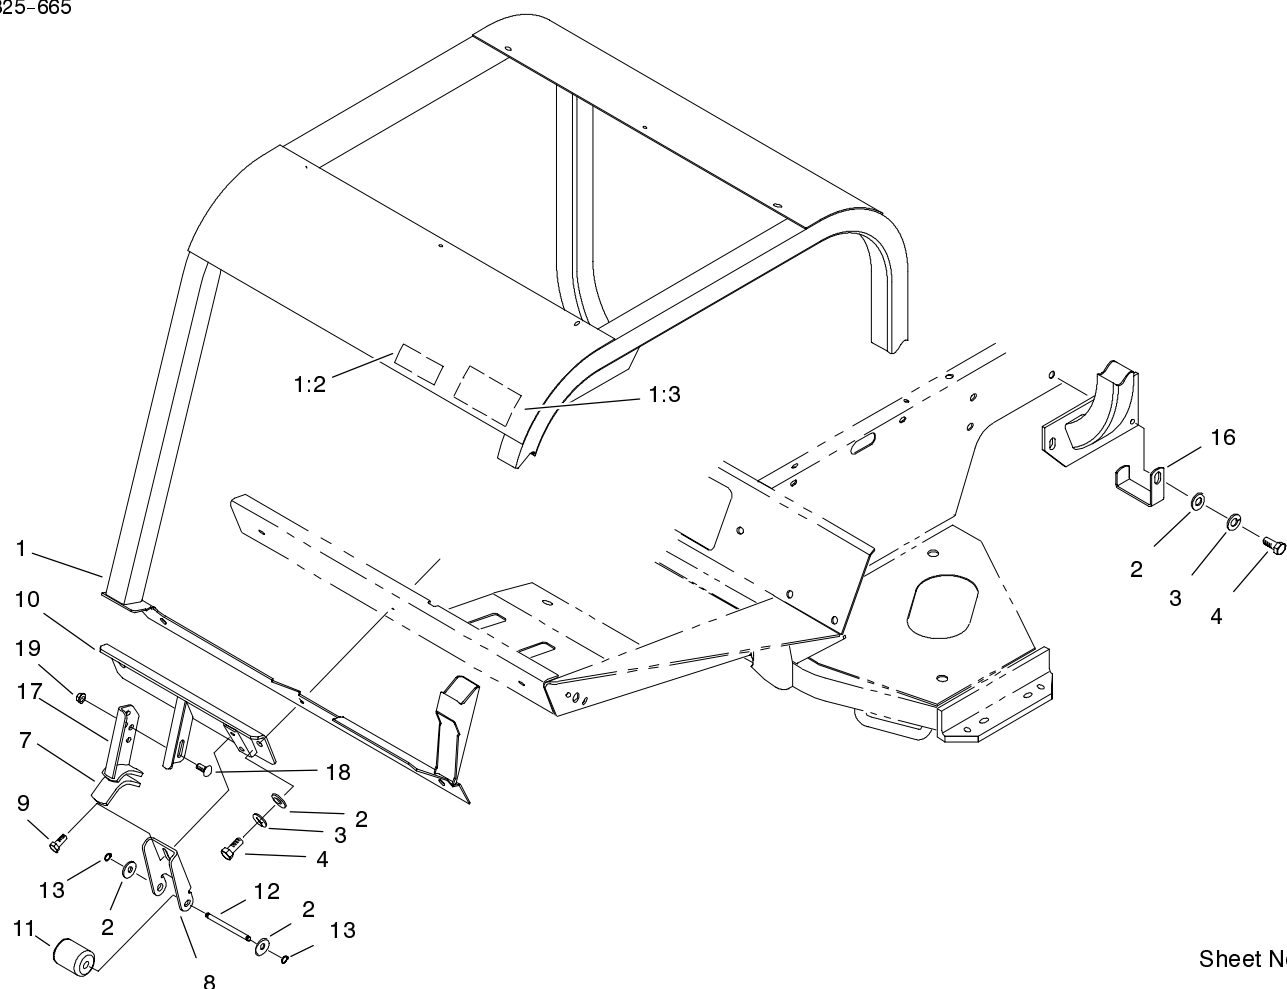


Sheet No.:35

Roll-Over-Protection-System and Stabilizer Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1248	1	Rops ASM
1:2	85-9980	1	Decal
1:3	93-8050	1	Decal-Roof, Rops
2	3256-26	11	Washer-Flat
3	3253-7	9	Washer-Lock
4	325-5	9	Screw-HH
7	104-1411	1	Guard-Stabilizer
8	99-6938-03	1	Bracket-Tipper
9	3234-1	2	Screw-HHF
10	98-3900-03	1	Stabilizer ASM
11	75-5390	1	Roller
12	75-5400	1	Pin-Roller
13	32151-61	2	Ring-Retaining
16	98-3928	2	Clamp-Hose
17	104-1471-03	1	Saddle ASM
18	3231-2	2	Screw-CARR
19	3296-39	2	Nut-Lock, NI


Ref. No.	Part No.	Qty.	Description

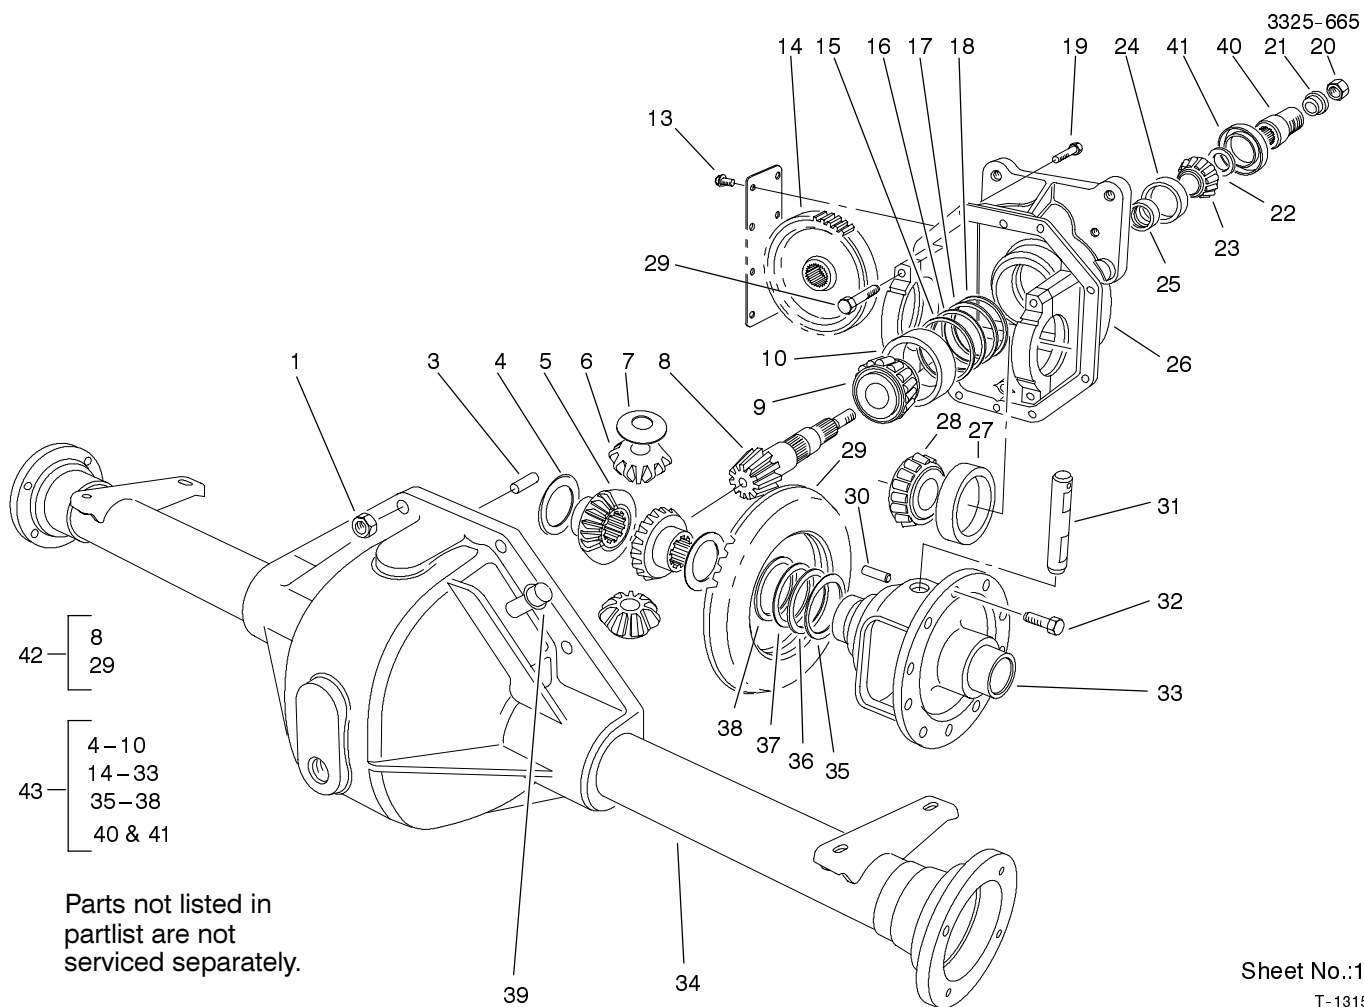

Axle Assembly No. 99-6981-03

Ref. No.	Part No.	Qty.	Description
1	32144-5	8	Screw
3	21-8270	2	Pin-Dowel
4	21-7720	2	Washer-Thrust
5	24-8790	2	Diff Gear
6	21-7690	2	Diff Pinion
7	21-7730	2	Pinion Thrust Washer
9	43-6760	1	Bearing-Roller, Cone Taper
10	43-6750	1	Bearing-Taper, Cup
13	32144-112	8	Screw-Forming, Thread
14	86-7230	1	Gear-Input Transmission
15	43-6710	1	Shim
16	43-6711	1	Shim
17	43-6712	1	Shim
18	43-6713	1	Shim
19	3210-8	8	Screw-HH
20	71-4350	1	Nut
21	83-5130	1	Spacer - Pinion
22	72-3570	1	Shim-Bearing, Front
22	72-3571	1	Shim-Bearing, Front
22	72-3572	1	Shim-Bearing, Front
22	72-3573	1	Shim-Bearing, Front
22	72-3574	1	Shim-Bearing, Front
22	72-3575	1	Shim-Bearing, Front

Ref. No.	Part No.	Qty.	Description
22	72-3576	1	Shim-Bearing, Front
22	72-3577	1	Shim-Bearing, Front
22	72-3578	1	Shim-Bearing, Front
22	72-3580	1	Shim-Bearing, Front
22	72-3581	1	Shim-Bearing, Front
22	72-3582	1	Shim-Bearing, Front
22	72-3583	1	Shim-Bearing, Front
22	72-3584	1	Shim-Bearing, Front
22	72-3585	1	Shim-Bearing, Front
22	72-3586	1	Shim-Bearing, Front
22	72-3587	1	Shim-Bearing, Front
22	72-3588	1	Shim-Bearing, Front
22	72-3590	1	Shim-Bearing, Front
22	72-3591	1	Shim-Bearing, Front
22	72-3592	1	Shim-Bearing, Front
22	72-3593	1	Shim-Bearing, Front
22	72-3594	1	Shim-Bearing, Front
22	72-3595	1	Shim-Bearing, Front
22	72-3596	1	Shim-Bearing, Front
22	72-3597	1	Shim-Bearing, Front
22	72-3598	1	Shim-Bearing, Front
22	72-3600	1	Shim-Bearing, Front
23	254-91	1	Cone-Bearing
24	21-8390	1	Cup-Bearing
25	21-8020	1	Spacer-Bearing
26	93-3619	1	Upper Housing ASM

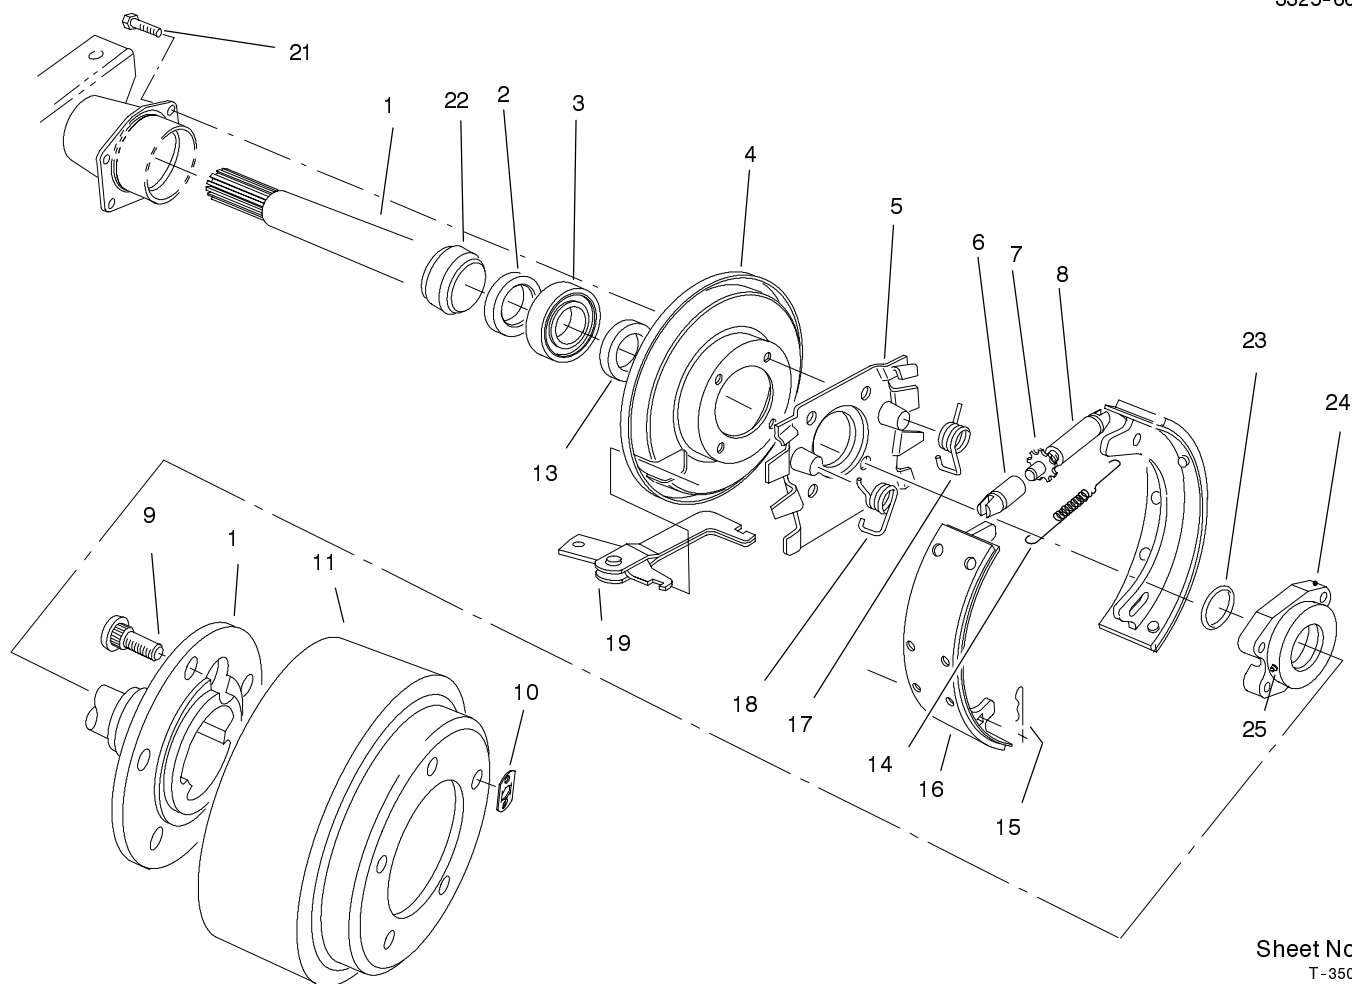


Sheet No.:2
T-3509

Brake Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	100-3840	1	Shaft-Axle, LH	*26	84-8600	1	Packing-Shoes Lined
1	100-3841	1	Shaft-Axle, RH	*27	92-8775	1	Liquid Gasket Kit
2	100-3842	2	Seal-Oil				
3	21-8180	2	Bearing ASM				
4	100-3843	2	Shield-Dust				
5	100-3844	2	Spider-Torque				
6	21-9390	2	Socket-Adj. Screw				
7	21-9370	2	Screw-Adj.				
8	21-9380	2	Nut-Pivot				
9	242-34	10	Stud-Drive				
10	21-8360	2	Locknut				
11	28-0680	2	Drum-Brake				
13	100-3845	2	Seal-Grease				
14	21-9440	2	Spring-Adj. Screw				
15	21-9460	4	Retainer-Lever, Brake				
16	84-8590	4	Shoe And Lining ASM				
17	21-9420	2	Spring-Return, Shoe				
18	21-9430	2	Spring-Shoe Return, RH				
19	24-9180	2	Strut & Lever ASM				
21	100-3846	8	Screw-Special				
22	100-3847	2	Retainer-Bearing				
23	100-3848	2	O-Ring				
24	100-3849	2	Cap-Bearing				
25	100-3850	2	Zerk-Special				

* Not illustrated

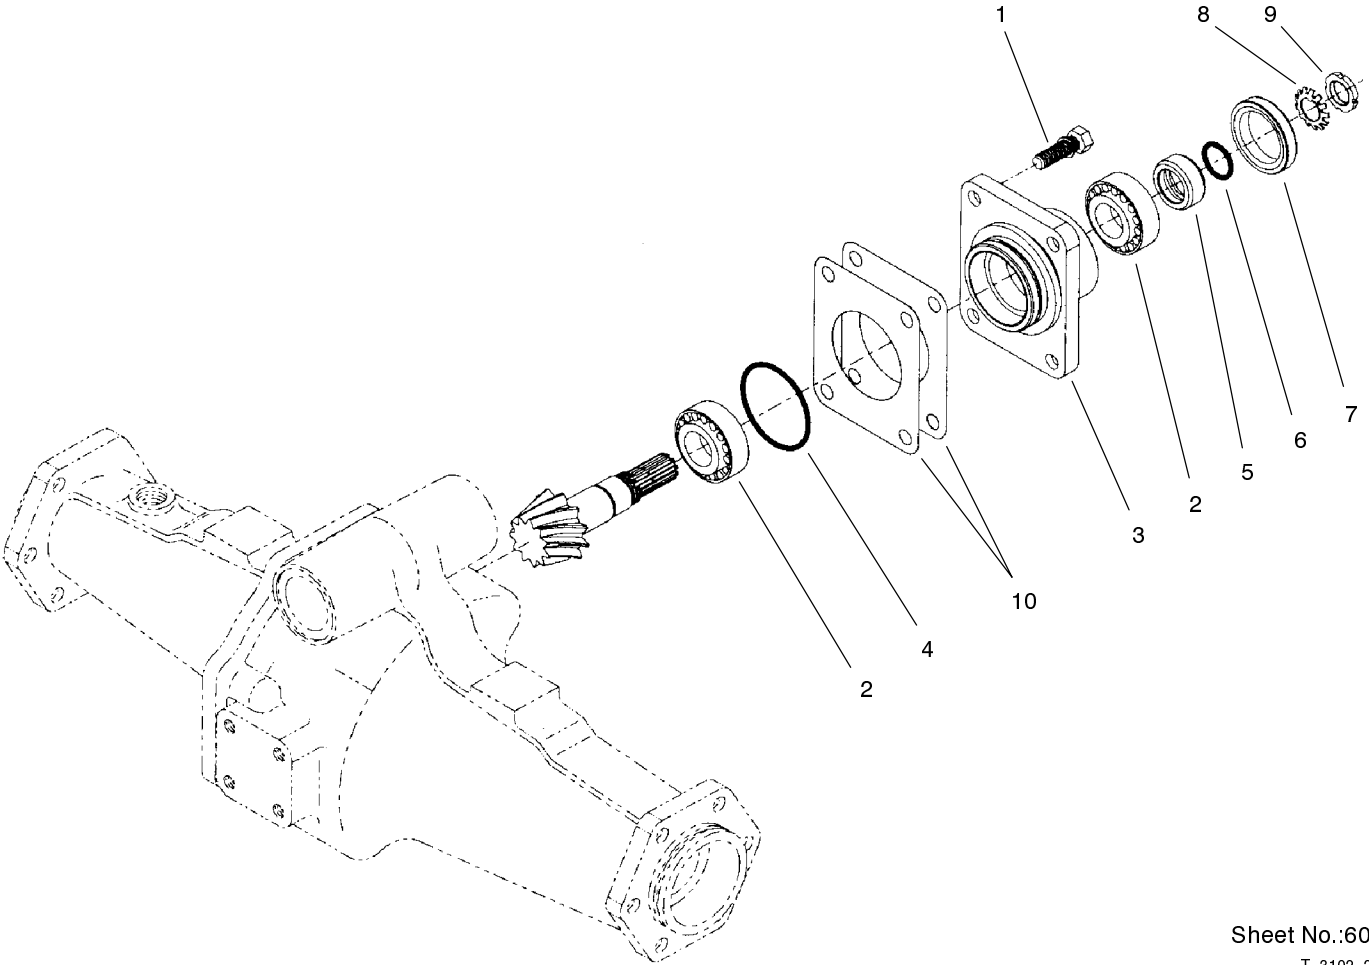


Sheet No.:60
T-3102-2

Rear Axle Assembly No. 98-3925
Bevel Pinion Shaft Assembly

Ref. No.	Part No.	Qty.	Description
1	99-7575	4	Bolt
2	99-7570	2	Bearing-Taper Roller
3	95-7535	1	Case-Bearing
4	99-7571	1	O-Ring
5	99-7572	1	Collar-Oil Seal
6	99-7573	1	O-Ring
7	99-7574	1	Seal-Oil
8	99-7559	1	Washer-Lock
9	99-7560	1	Nut-Lock
10	99-7550	2	Shim 0.1
10	99-7551	2	Shim 0.2

Ref. No.	Part No.	Qty.	Description

* Not Illustrated

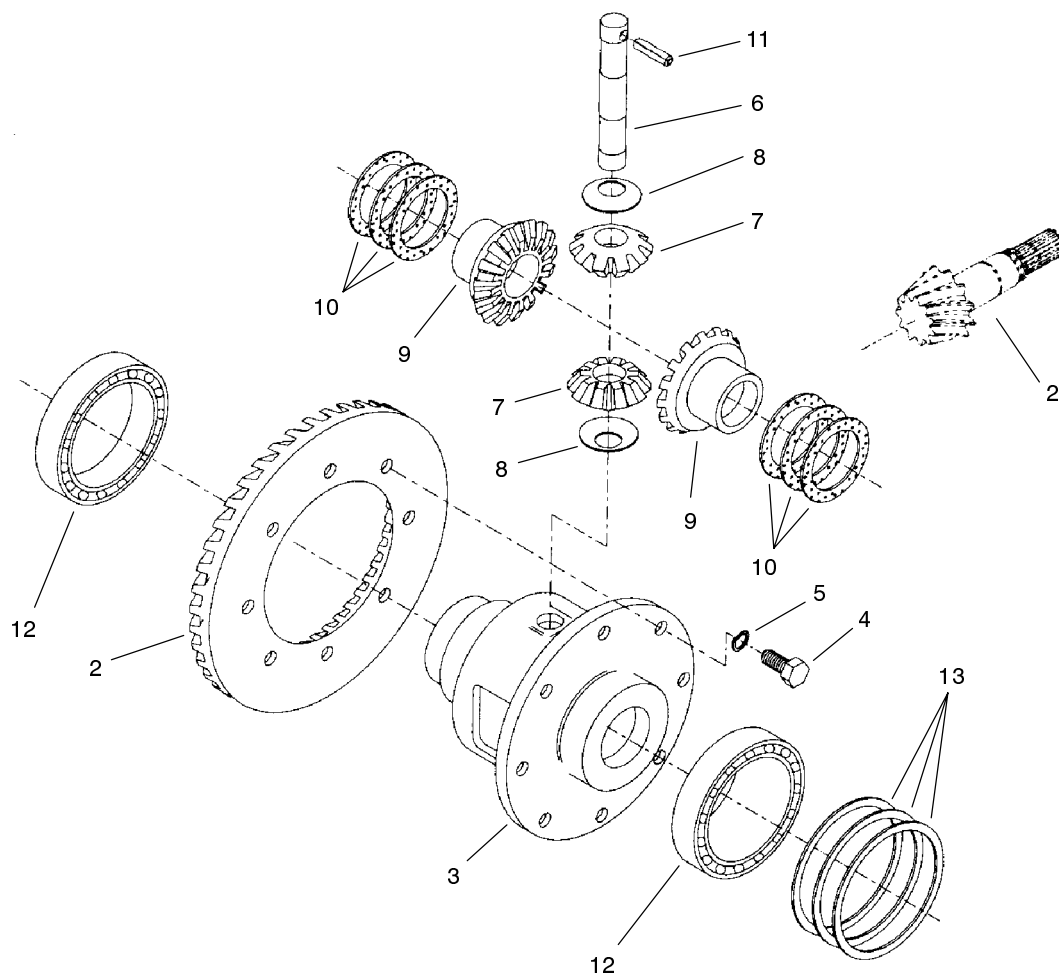


Sheet No.:61
T-3103-2

Rear Axle Assembly No. 98-3925 (Continued) Differential Assembly No. 95-7503

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
*1	95-7503	1	Differential ASM				
2	100-2555	1	Ring And Pinion Matched Set				
3	95-7502	1	Case-Differential				
4	99-7576	8	Bolt				
5	99-7577	8	Washer-Spring				
6	99-7578	1	Shaft-Differential				
7	99-7579	2	Pinion-Differential				
8	99-7580	2	Washer-Differential				
9	99-7581	2	Gear-Differential				
10	99-7582	2	Washer-Differential				
10	99-7583	2	Washer-Differential				
10	99-7584	2	Washer-Differential				
11	99-7588	1	Pin-Spring				
12	99-7562	2	Bearing-Ball				
13	99-7585	2	Shim 0.1				
13	99-7586	2	Shim 0.2				
13	99-7587	2	Shim 0.4				

* Not illustrated


3325-665

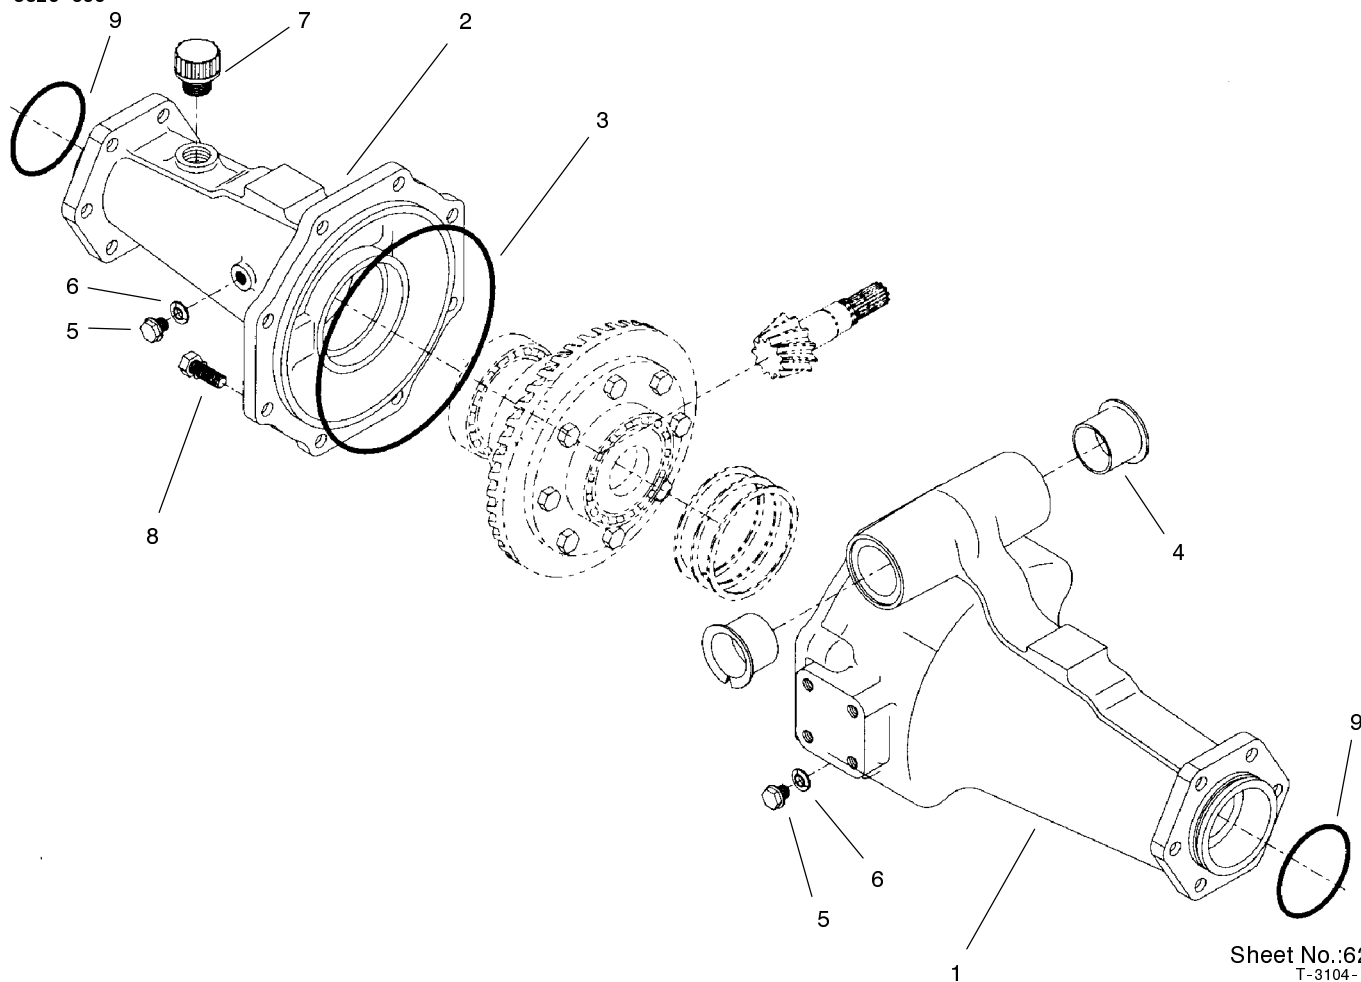Sheet No.:62
T-3104-1

Rear Axle Assembly No. 98-3925 (Continued) Axle Support Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7508	1	Support-Axle
2	95-7506	1	Support-Axle
3	95-7507	1	O-Ring
4	95-7537	2	Bushing-Flanged
5	99-7589	2	Plug
6	99-7590	2	Washer-Seal
7	99-7591	1	Oil Plug ASM
8	99-7592	8	Bolt
9	99-7593	2	O-Ring

Ref. No.	Part No.	Qty.	Description

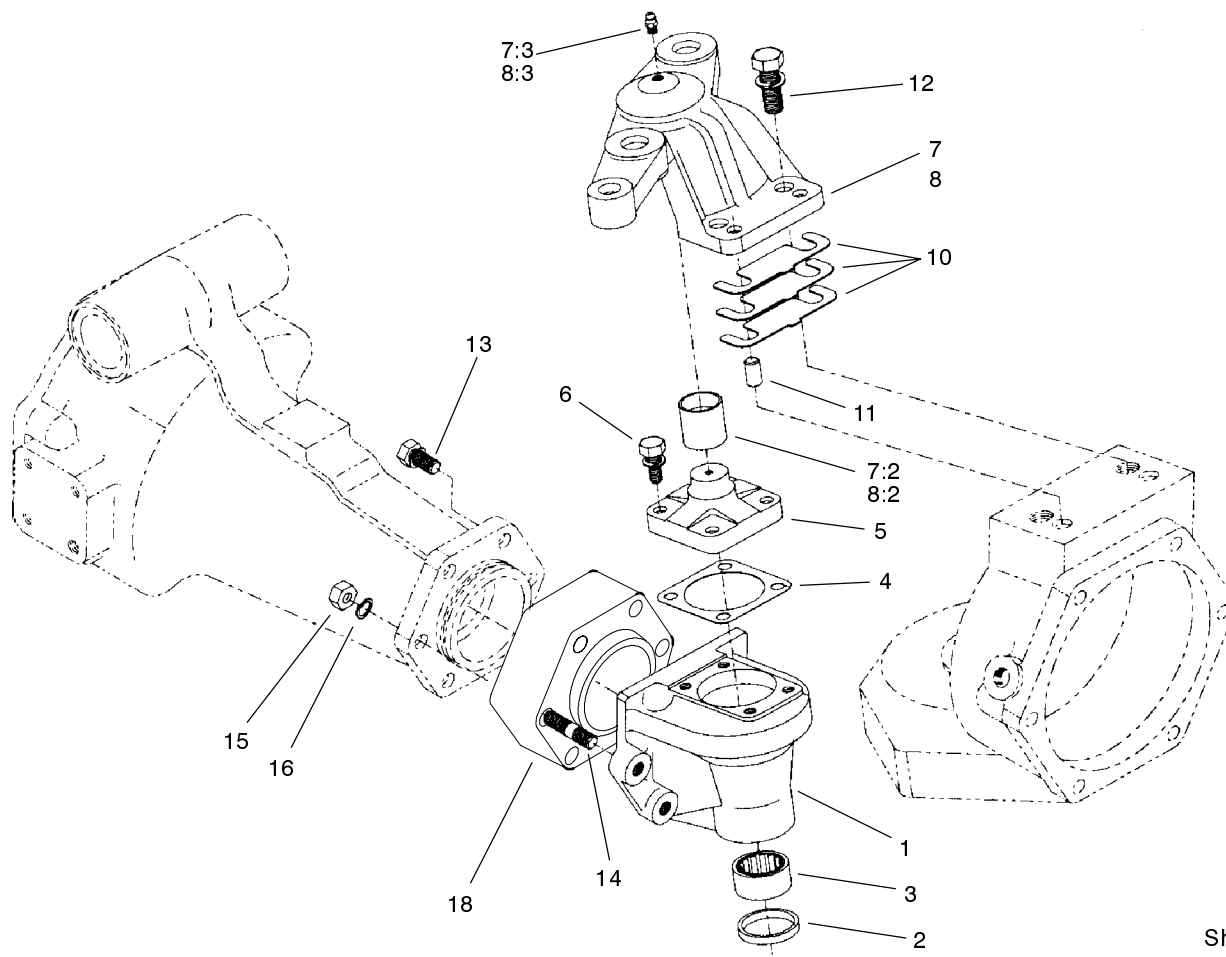

Sheet No.:63

T-3385

Rear Axle Assembly No. 98-3925 (Continued) Bevel Gear Case Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7539	2	Case-Bevel Gear				
2	99-7594	2	Seal-Oil				
3	99-7595	2	Bearing-Needle				
4	95-7511	2	Gasket				
5	95-7510	2	Pin-Knuckle				
6	99-7596	8	Bolt				
7	100-3746	1	RH Axle Case Support ASM				
7:2	99-7529	1	Bushing				
7:3	99-7528	1	Nipple-Grease				
8	100-3748	1	LH Axle Case Support ASM				
8:2	99-7529	1	Bushing				
8:3	99-7528	1	Nipple-Grease				
10	95-7547	2	Shim 0.1				
10	95-7548	2	Shim 0.2				
10	95-7549	2	Shim 0.4				
11	99-7597	4	Pin-Dowel				
12	99-7598	4	Bolt				
13	100-3736	8	Bolt				
14	100-3737	4	Stud				
15	99-7526	4	Nut				
16	99-7527	4	Washer-Spring				
18	99-7565	2	Spacer				

* Not Illustrated

Sheet No.:64
T-3106-1

Ref. No.	Part No.	Qty.	Description

60

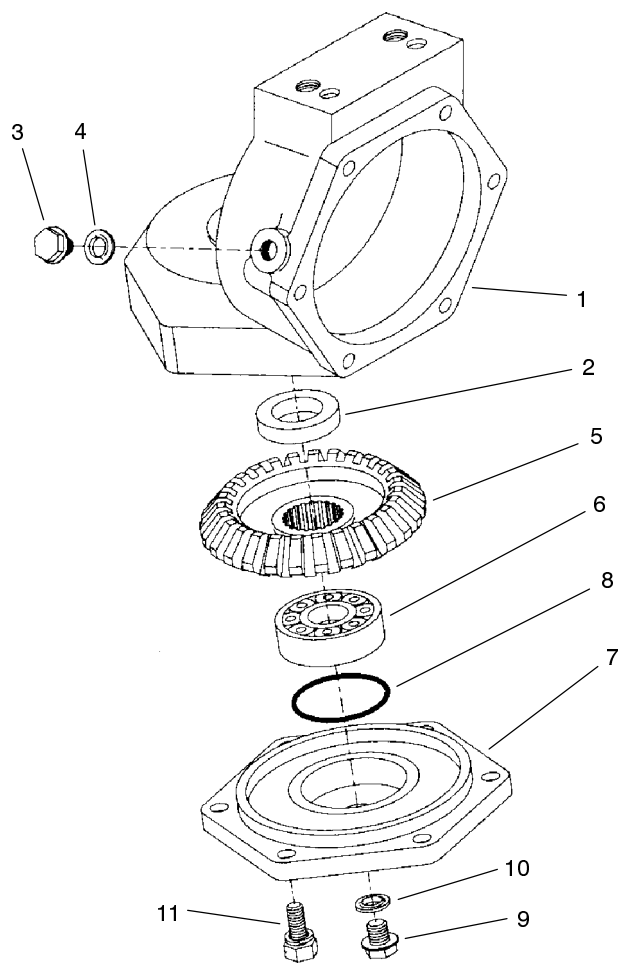

Sheet No.:65

T-3107-1

Rear Axle Assembly No. 98-3925 (Continued)

Axle Case Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-7532	2	Case-Axle				
2	99-7594	2	Seal-Oil				
3	99-7535	2	Plug				
4	99-7536	2	Washer-Seal				
5	95-7528	2	Gear-27 Bevel				
6	99-7532	2	Bearing-Taper Roller				
7	95-7526	2	Cover-Axle				
8	99-7537	2	O-Ring				
9	99-7589	2	Plug				
10	99-7590	2	Washer-Seal				
11	99-7596	12	Bolt				

Rear Axle Assembly No. 98-3925 (Continued)

Axle Case Assembly


Ref. No.	Part No.	Qty.	Description

62


Hydraulic Schematic

DISPLACEMENT, FLOW RATE AND PRESSURE CHART					
DISPLACEMENT		PRESSURE		*FLOW RATE	
COMPONENT	in ³ /rev	cm ³ /rev	lbs/in ²	BARS	GPM
P1	.66	10.8			8.4
P2	.66	10.8			31.8
P3	.37	6			17.8
P4	1.5	25			72.3
P5	.58	9.5			28
M1	1.16	19			
M2	1.16	19			
M3	1.16	19			
M4	1.16	19			
M5	1.16	19			
M6	1.51	25			
V1	6.1	100			
R1			3000	207	
R2			3000	138	
R3			1450	100	
R4			3625	250	
R5			150	10	
R6			70	5	
R7			70	5	
R8			3625	250	
R9			1500	103	
R10			50	3	


* Flow Rate Calculated At 3000 RPM And 98% Efficiency.

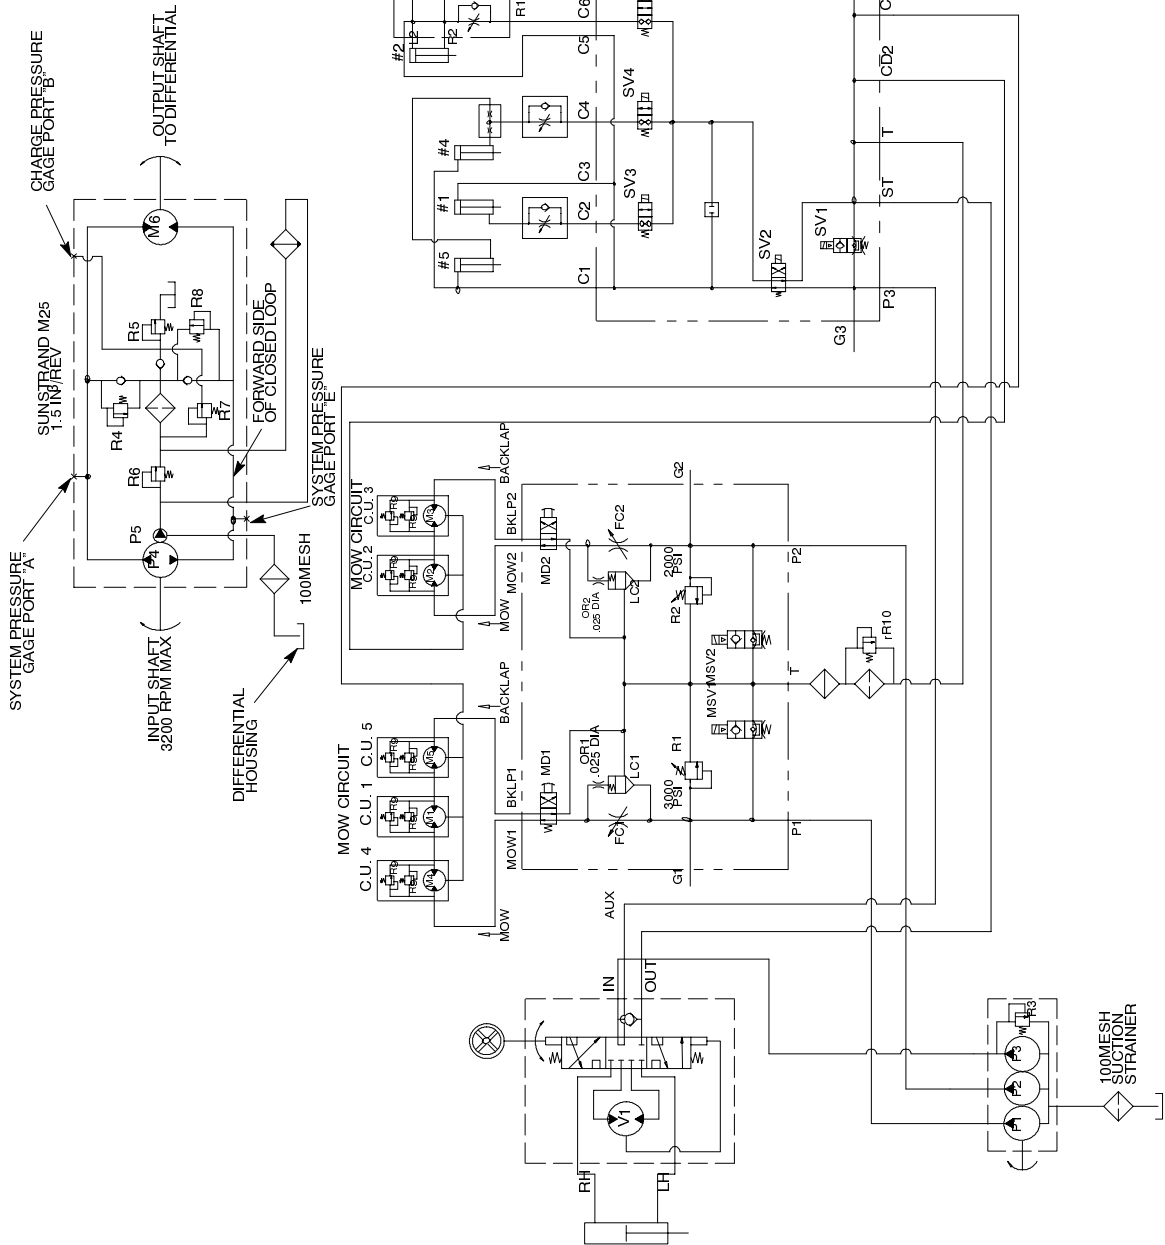


Electrical Schematic

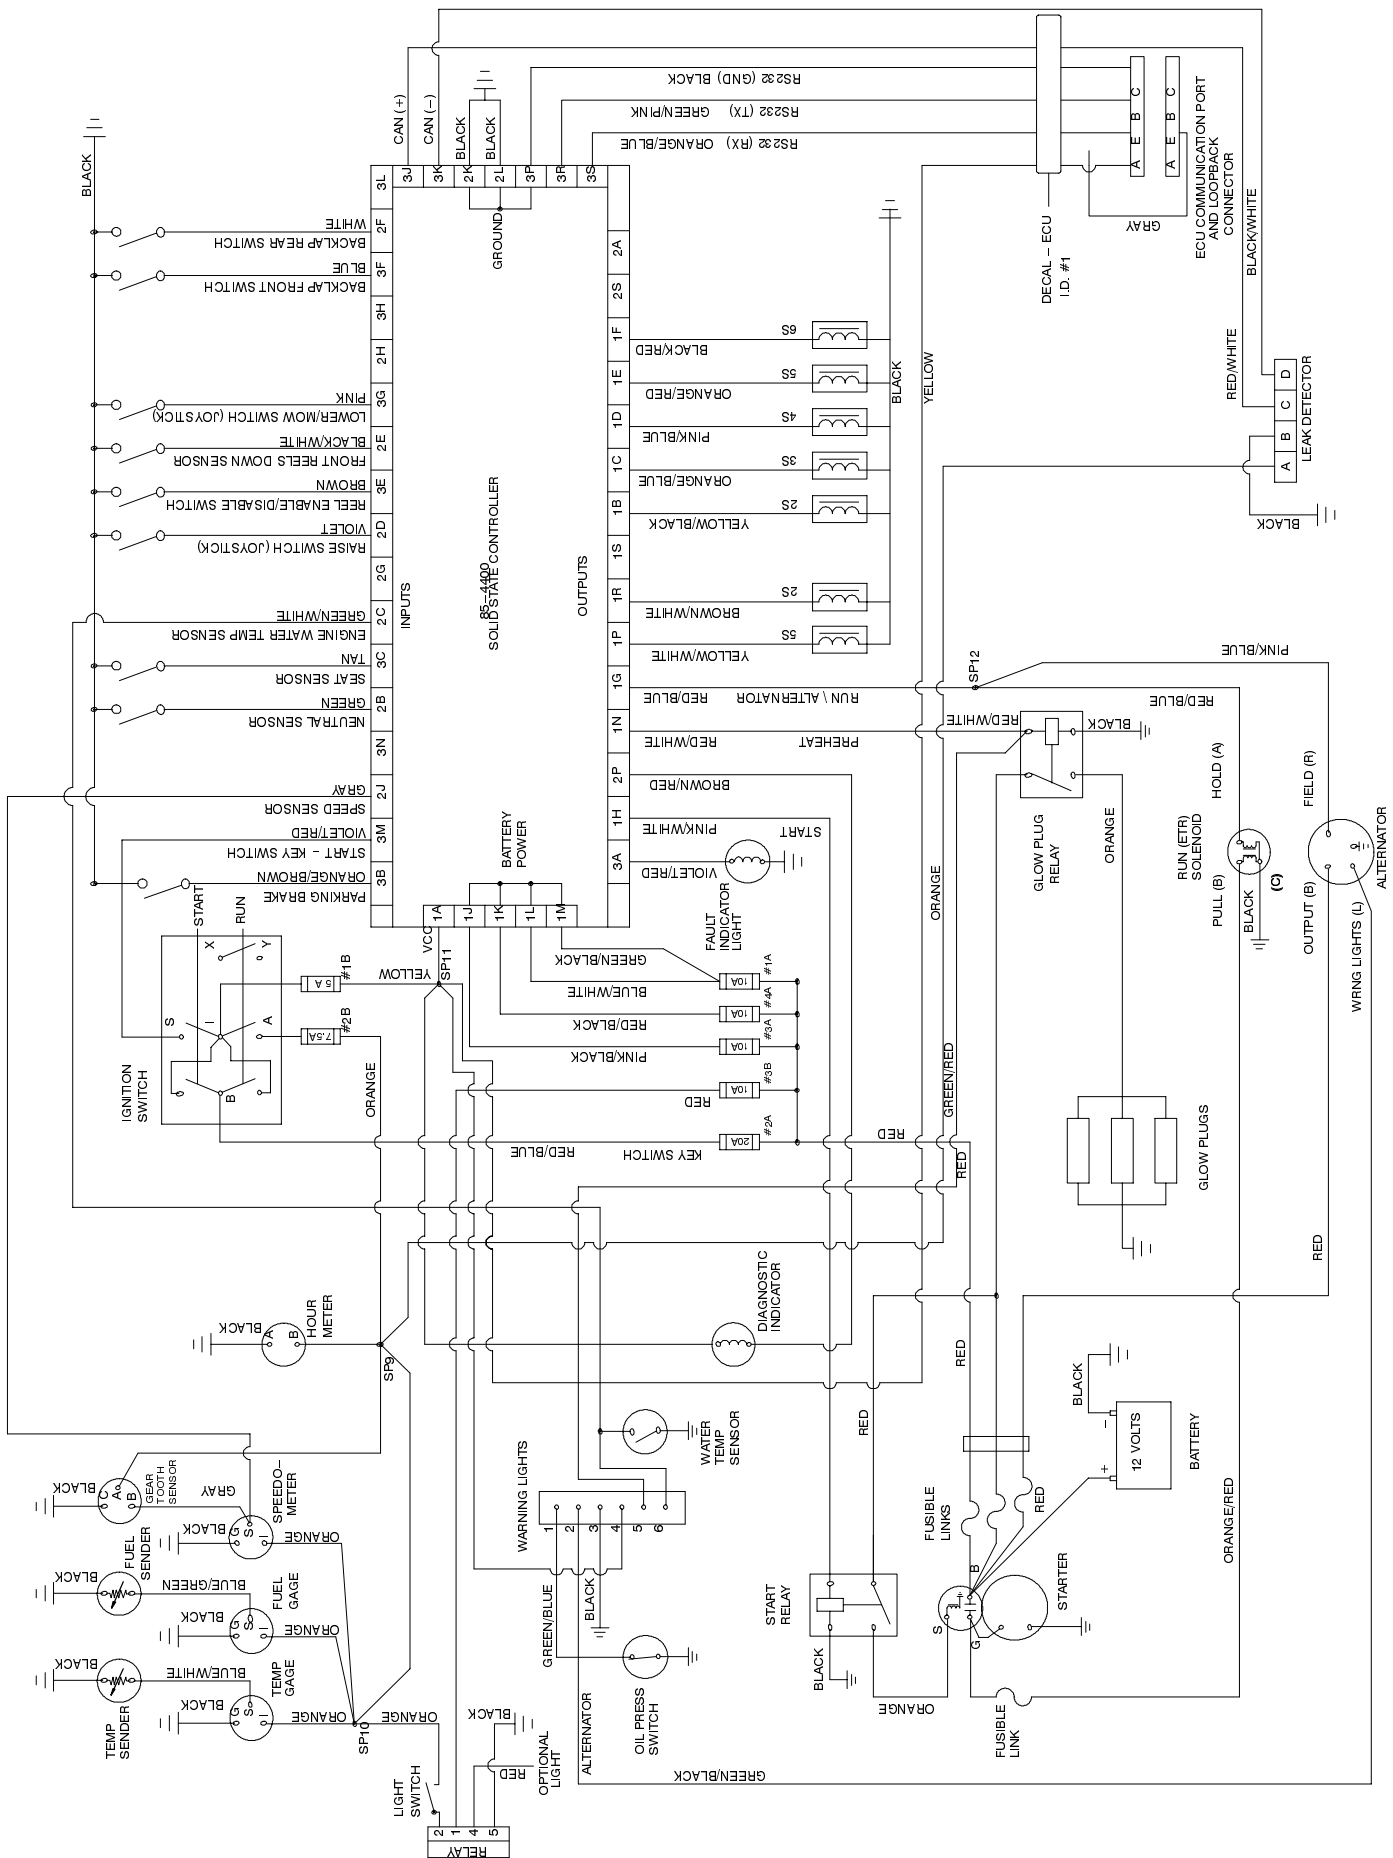

Electrical Schematic - Turfdefender

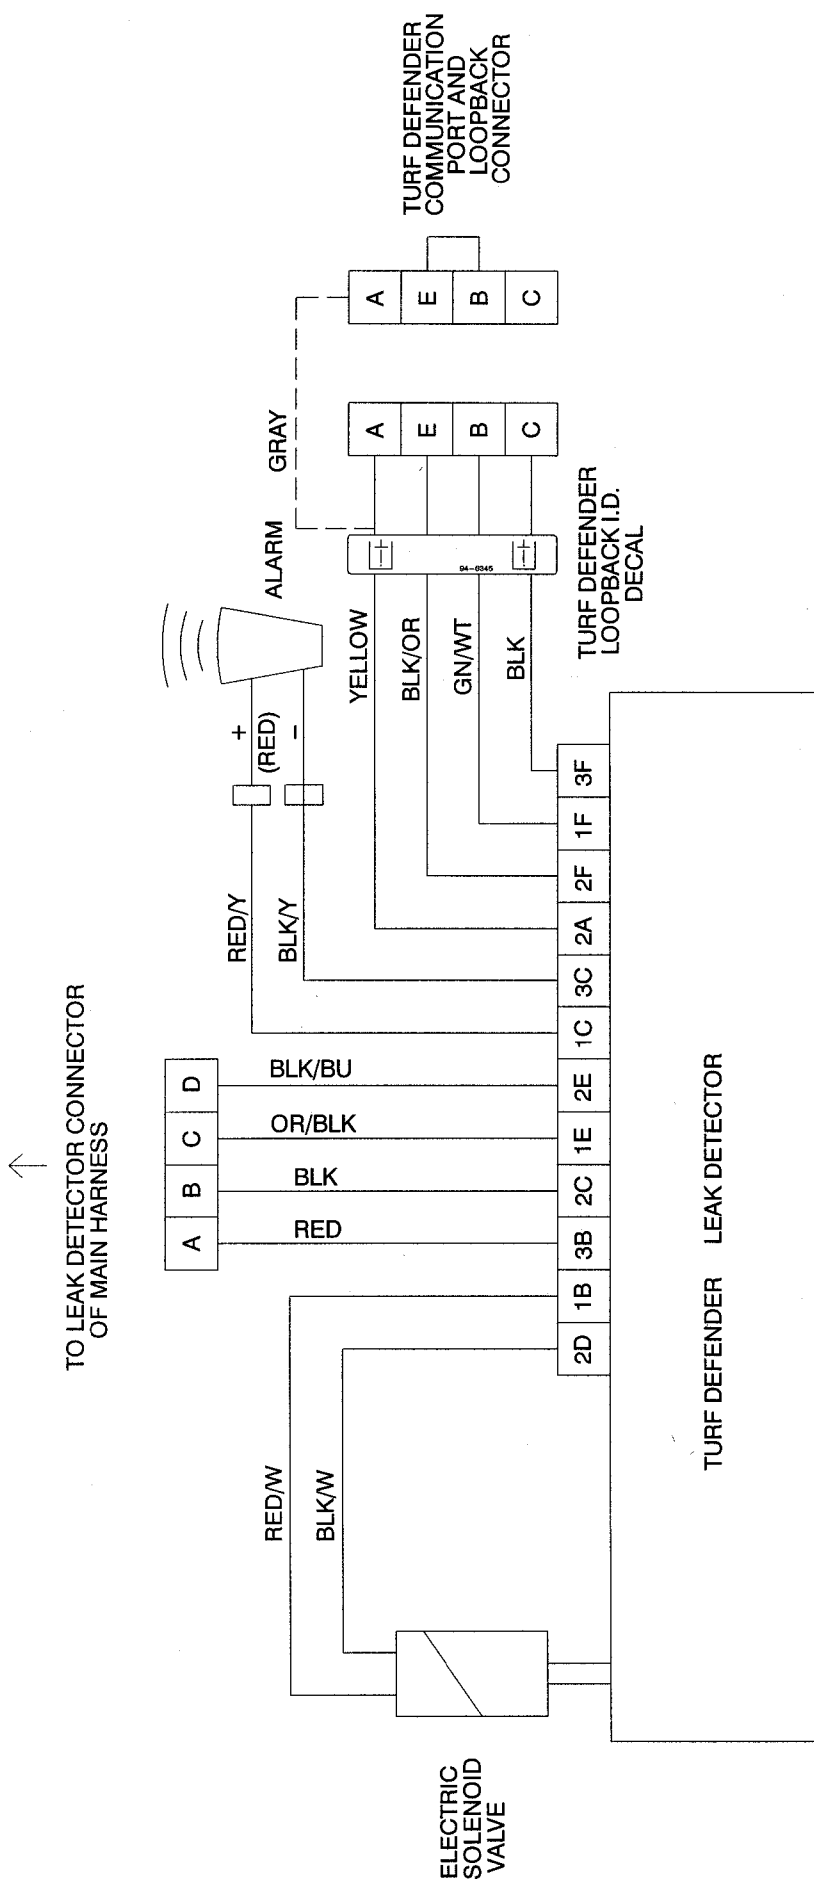


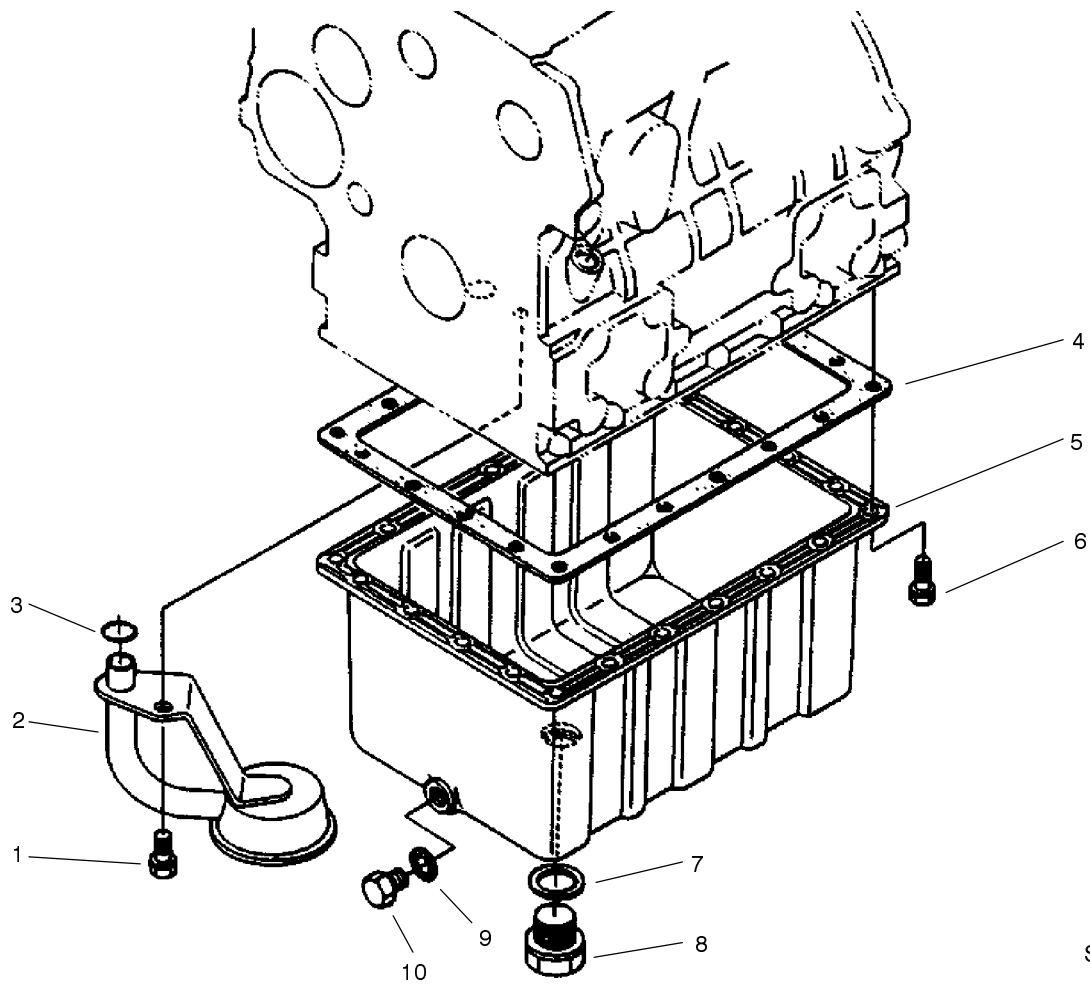

Sheet No.:64
T-2907

Oil Pan Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9358	1	Bolt
2	98-9538	1	Filter-Oil
3	98-7527	1	O-Ring
4	98-9646	1	Gasket-Pan, Oil
5	98-9685	1	Drain-Oil
6	98-9350	22	Bolt
7	98-9399	1	Gasket
8	98-7523	1	Plug-Drain
9	98-7524	1	Gasket
10	98-9386	1	Plug

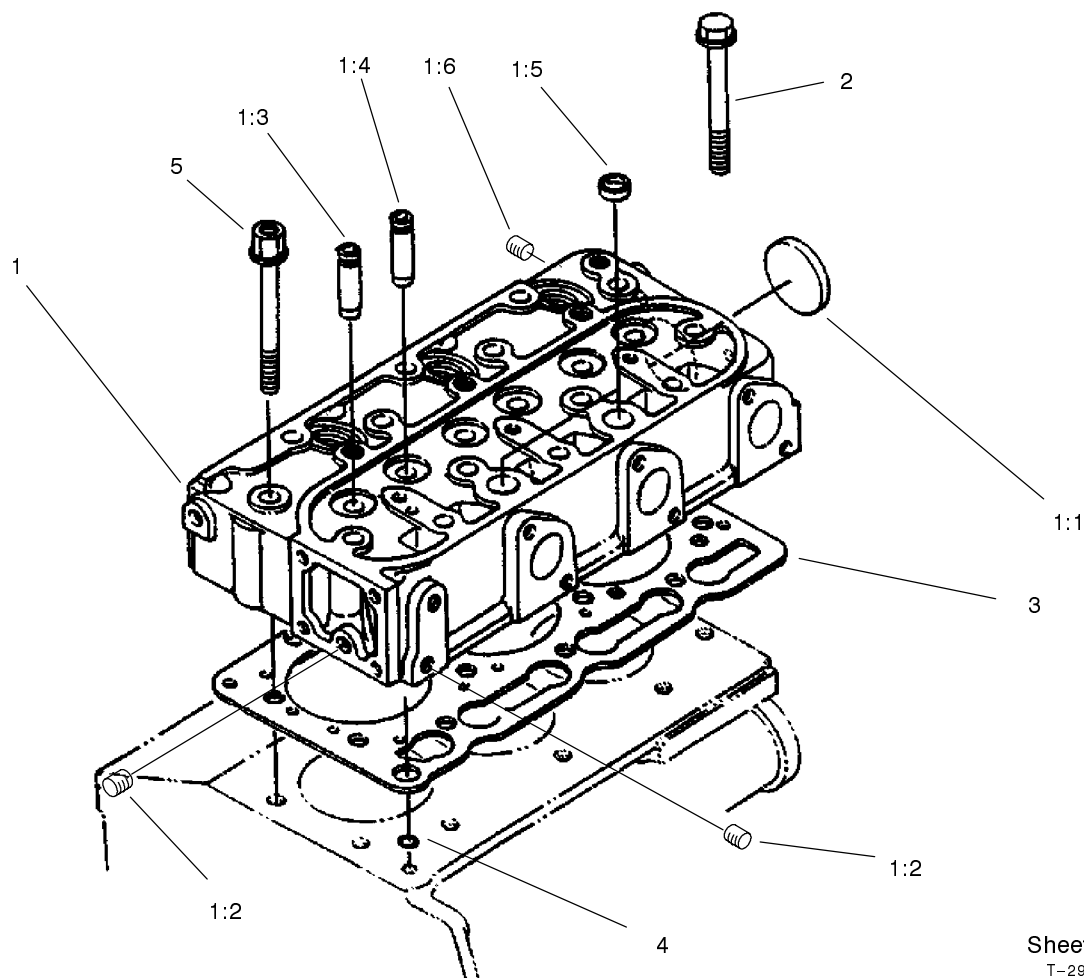


Sheet No.:65
T-2908-1

Cylinder Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8344	1	Cylinder Head ASM
1:1	98-9395	1	Cap-Sealing
1:2	98-7540	2	Cap-Sealing
1:3	98-9499	3	Guide-Valve, Inlet
1:4	98-9500	3	Guide-Valve, Exhaust
1:5	98-9389	2	Cap-Sealing
1:6	98-9444	1	Plug
2	98-9479	12	Bolt-Head, Cylinder
3	98-9613	1	Gasket-Head, Cylinder
4	98-7509	1	O-Ring
5	98-9647	2	Bolt-Head, Cylinder

Ref. No.	Part No.	Qty.	Description

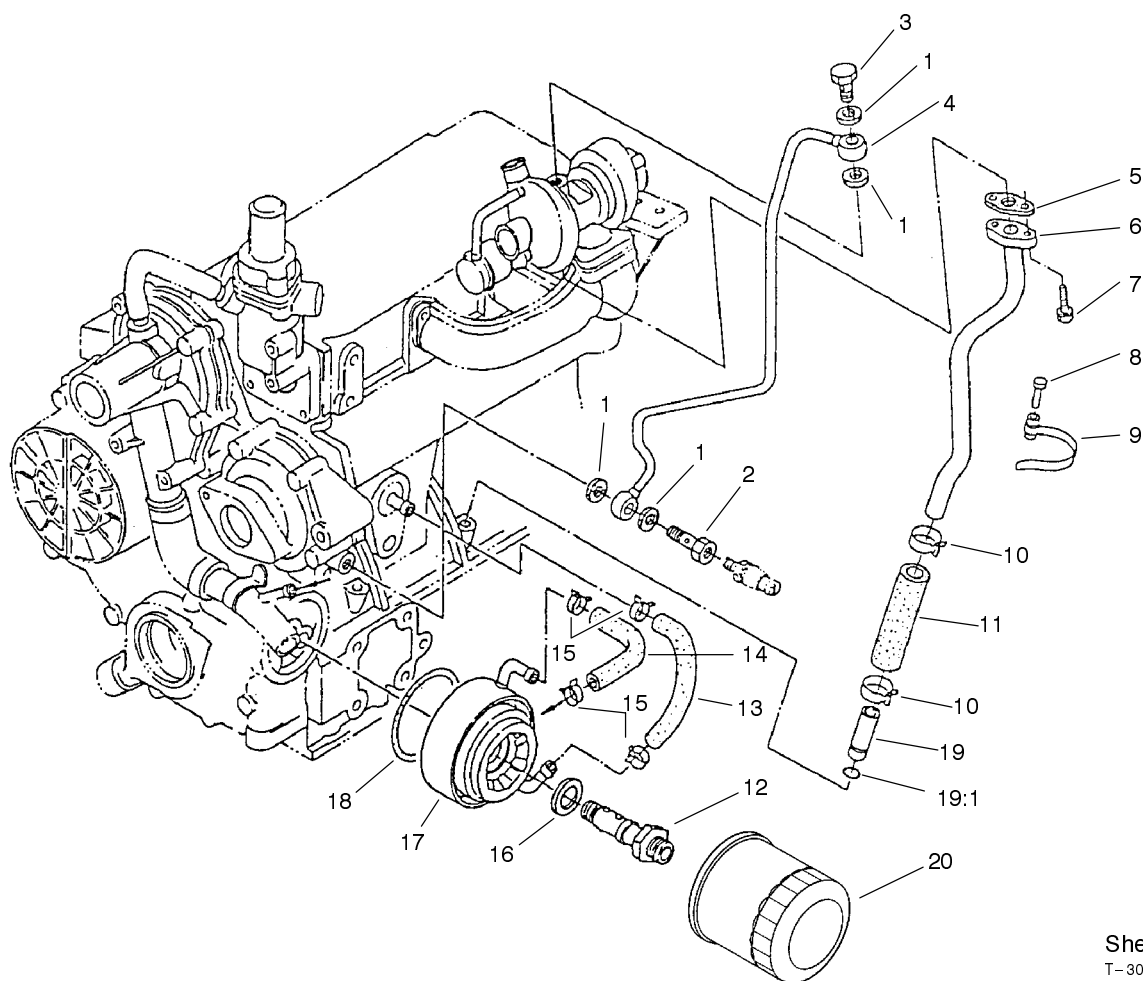


Sheet No.:67
T-3079-1

Filter, Oil Cooler and Pipe Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8346	4	Gasket
2	98-9417	1	Bolt-Joint, Eye
3	98-9418	1	Bolt-Joint, Eye
4	98-9419	1	Oil Pipe ASM
5	98-9435	1	Gasket-Oil Return, Turbo
6	98-9461	1	Pipe Line ASM
7	98-7568	2	Bolt
8	98-9591	1	Pin - Band
9	98-9601	1	Clamp - Pipe
10	98-9714	2	Clamp-Hose
11	98-9721	1	Pipe-Oil
12	98-9723	1	Holder ASM
13	98-9724	1	Pipe-Cooler, Oil
14	98-9578	1	Pipe-Return, Water
15	98-9579	4	Band-Pipe
16	98-9727	1	Collar
17	98-9728	1	Oil Cooler ASM
18	98-9729	1	O-Ring
19	99-8383	1	Oil Pipe ASM
19:1	98-9722	1	O-Ring
20	99-8384	1	Filter-Oil


Ref. No.	Part No.	Qty.	Description

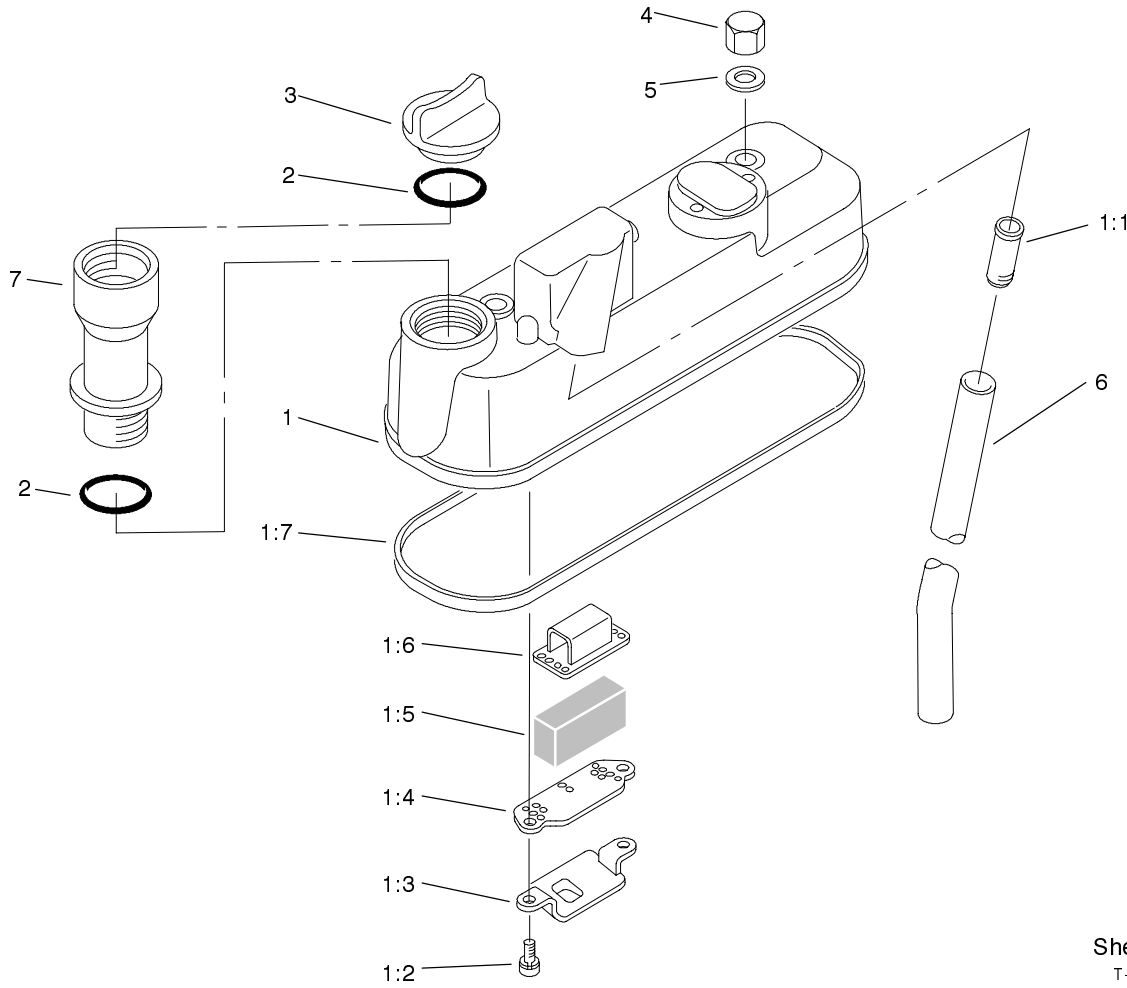

Sheet No.:68
T-2910-1

Head Cover Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9614	1	Cylinder Head Cover ASM				
1:1	98-9492	1	Joint-Pipe, Breather				
1:2	98-9364	2	Screw w/Washer				
1:3	98-9490	1	Shield-Oil, Breather				
1:4	98-9488	1	Plate-Element, Breather				
1:5	98-9493	1	Element-Breather				
1:6	98-9489	1	Plate-Element, Breather				
1:7	98-9615	1	Gasket-Cover, Head				
2	98-7430	1	O-Ring				
3	98-9449	1	Plug-Filler, Oil				
4	98-9455	3	Nut-Cap				
5	98-9454	3	Gasket				
6	98-9491	1	Pipe-Breather				
7	99-8349	1	Extension - Oil Fill				

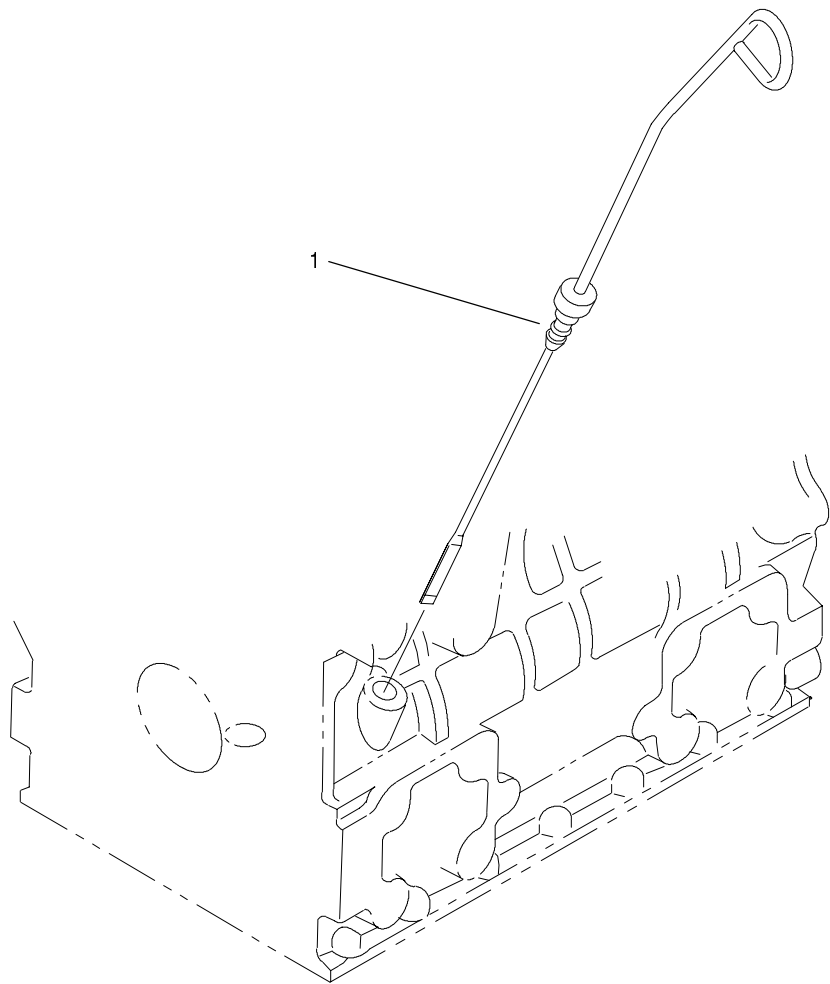


Sheet No.:69
T-3094

Dipstick Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9627	1	Gauge

Ref. No.	Part No.	Qty.	Description

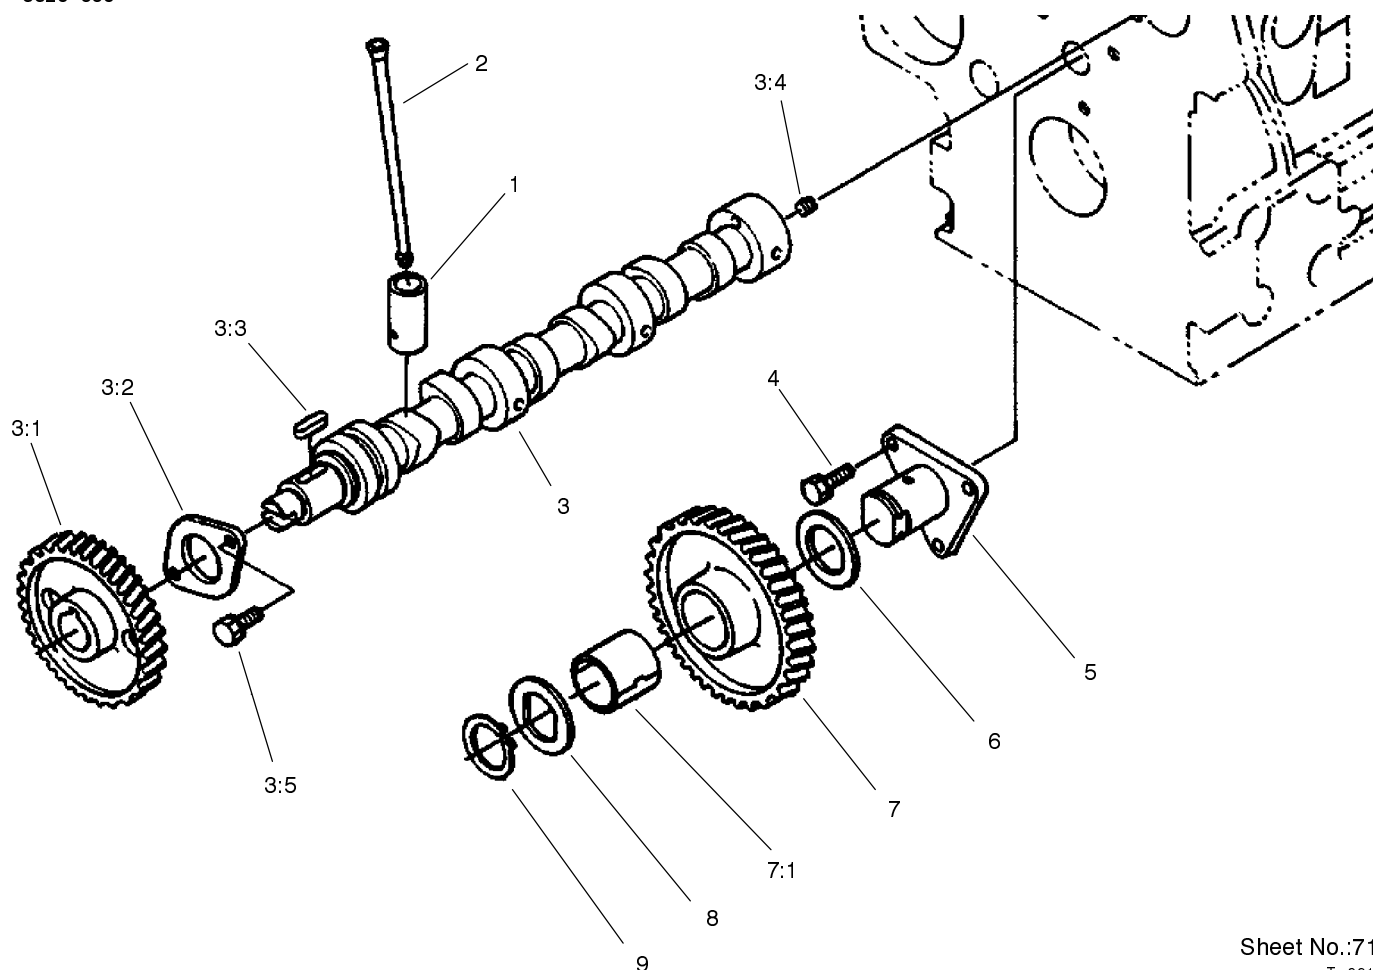


Sheet No.:71
T-2913

Camshaft Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9616	6	Tappet
2	98-9509	6	Rod-Push
3	99-8362	1	Camshaft ASM
3:1	98-9512	1	Gear-Cam
3:2	98-9510	1	Stopper-Camshaft
3:3	98-9378	1	Key-Feather
3:4	98-7449	1	Screw-Set
3:5	98-9351	2	Bolt
4	98-7692	3	Bolt
5	98-9533	1	Shaft-Gear, Idle
6	98-9535	1	Collar-Gear, Idle
7	98-9649	1	Idle Gear ASM
7:1	98-9650	1	Bushing-Gear, Idle
8	98-9536	1	Collar-Gear, Idle
9	98-9534	1	Clip-Circular, Idle Gear


Ref. No.	Part No.	Qty.	Description

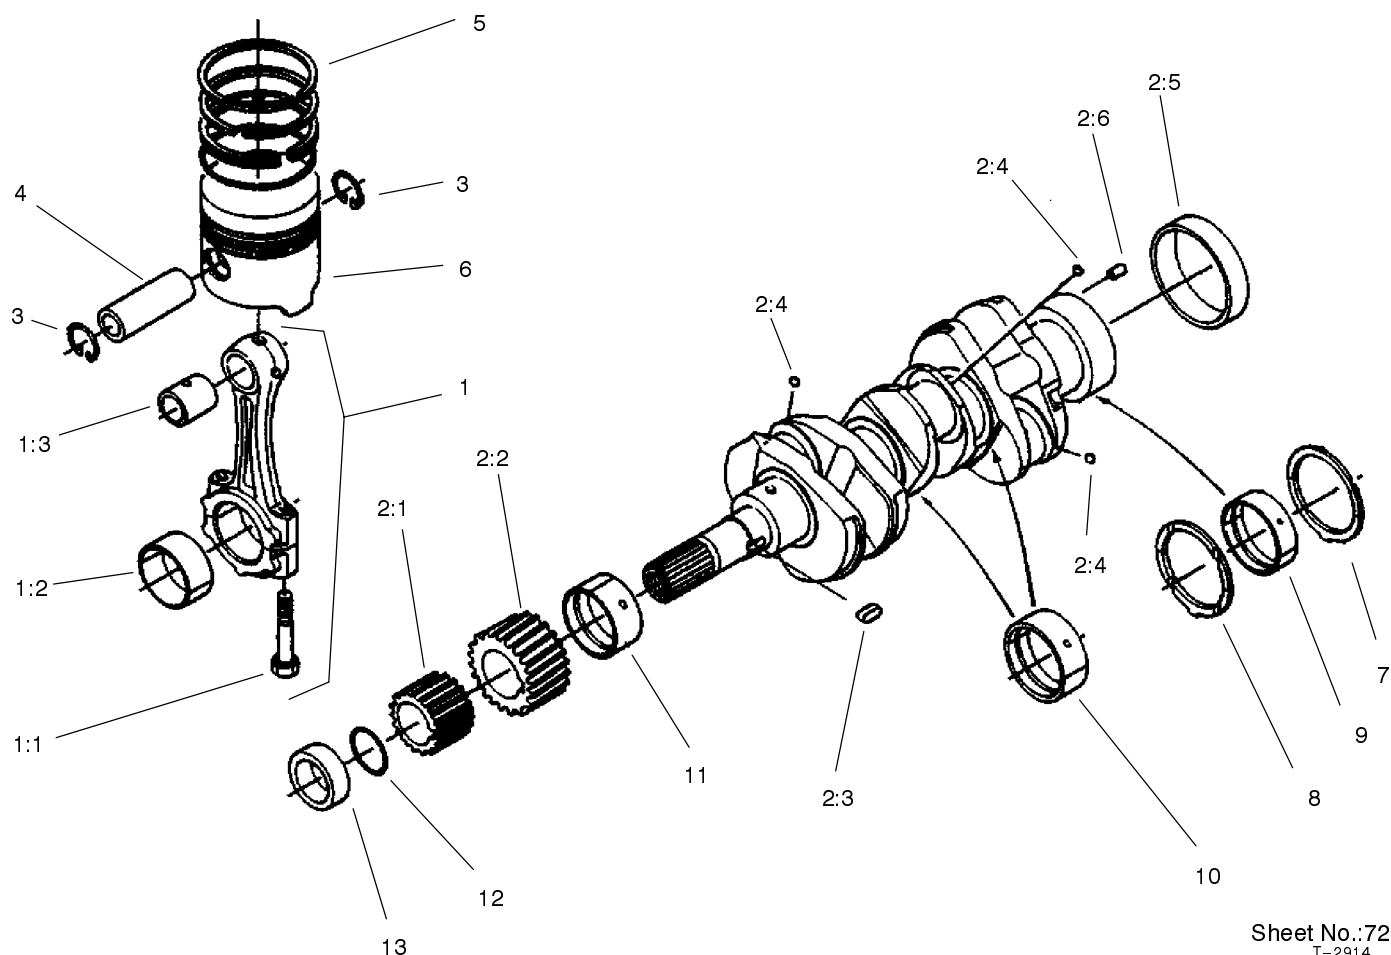
 Sheet No.:72
 T-2914

Piston & Crankshaft Assembly


Ref. No.	Part No.	Qty.	Description
1	98-9552	3	Connecting Rod ASM
1:1	98-9517	6	Bolt-Rod, Connecting
1:2	98-9519	3	Bearing-Rod (-0.2mm)
1:2	98-9520	3	Bearing-Rod (-0.4mm)
1:2	98-9553	3	Bearing-Rod (STD)
1:3	98-9515	3	Bushing-Pin, Piston
2	98-9642	1	Crankshaft ASM
2:1	98-9542	1	Gear-Drive, Oil Pump
2:2	98-9532	1	Gear-Crankshaft
2:3	98-9666	1	Key
2:4	98-7473	3	Ball
2:5	98-9522	1	Sleeve-Crankshaft
2:6	98-9375	1	Pin-Straight
3	98-9514	6	Clip-Circular, Piston Pin
4	98-9513	3	Pin-Piston
5	98-9619	3	Piston Ring ASM (+0.5mm)
5	98-9551	3	Piston Ring ASM (STD)
6	98-9550	3	Piston - STD
6	98-9470	3	Piston (+0.5mm)
7	98-9413	2	Bearing-Thrust (STD)

Ref. No.	Part No.	Qty.	Description
7	98-9414	2	Bearing-Thrust (+0.2mm)
7	98-9415	2	Bearing-Thrust (+0.4mm)
8	98-9688	2	Bearing-Thrust (STD)
8	98-9689	2	Bearing-Thrust (+0.2mm)
8	98-9690	2	Bearing-Thrust (+0.4mm)
9	98-9526	1	Bearing-Main (-0.2mm)
9	98-9527	1	Bearing-Main (-0.4mm)
9	98-9556	1	Bearing-Main (STD)
10	98-9530	2	Bearing-Main (-0.2mm)
10	98-9531	2	Bearing-Main (-0.4mm)
10	98-9555	2	Bearing-Main (STD)
11	98-9528	1	Bearing-Main (-0.2mm)
11	98-9529	1	Bearing-Main (-0.4mm)
11	98-9554	1	Bearing-Main (STD)
12	98-9373	1	O-Ring
13	98-9521	1	Collar-Crankshaft

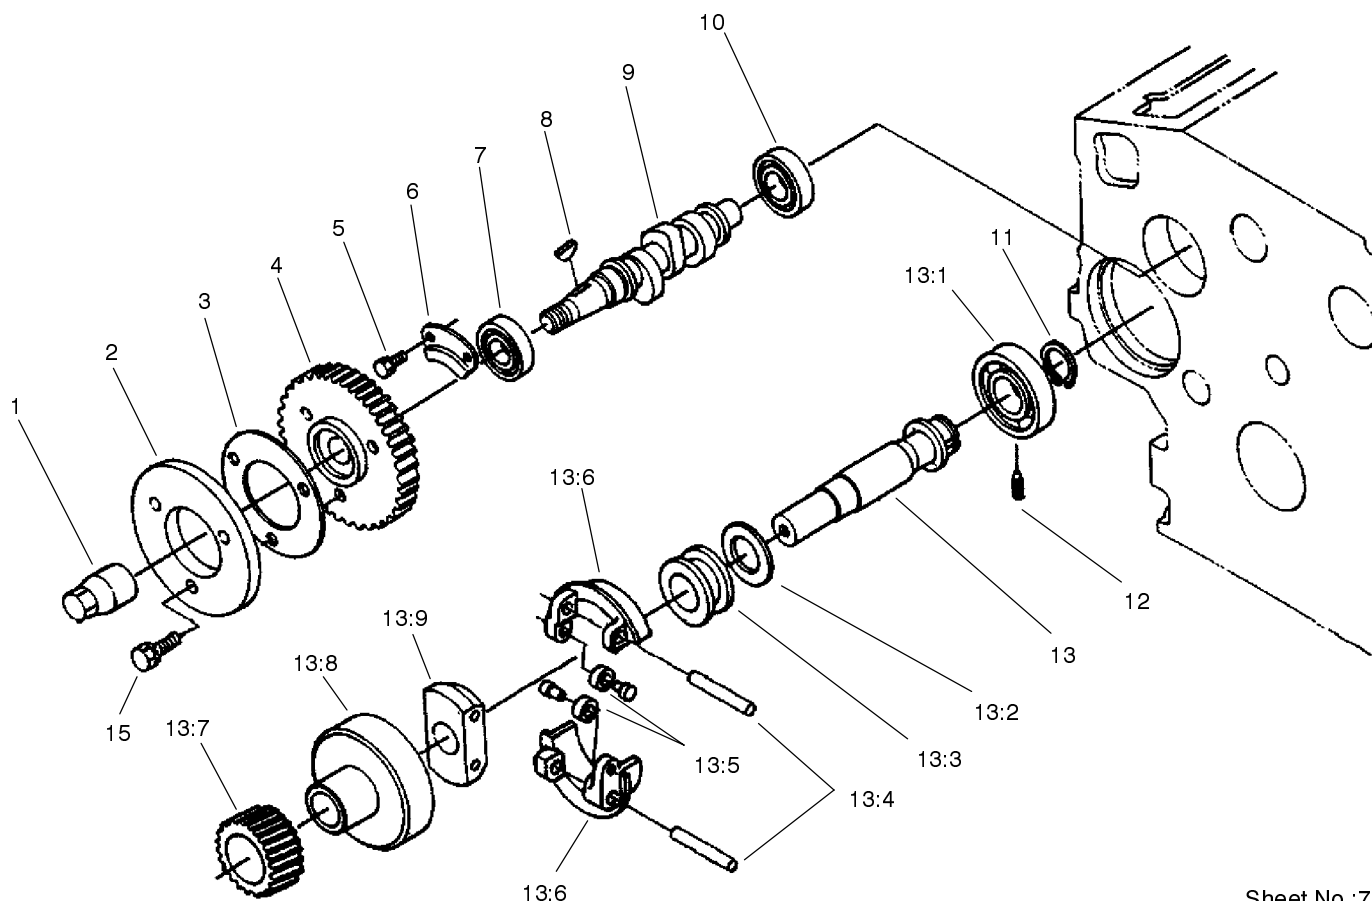
 Sheet No.:74
 T-2916

Fuel Camshaft Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9590	1	Nut-Cap	13:9	98-9561	1	Holder-Weight, Governor
2	98-9547	1	Cam-Fuel	15	98-7605	3	Bolt
3	98-9548	1	Washer				
4	98-9669	1	Gear-Pump, Injection				
5	98-9350	2	Bolt				
6	98-9511	1	Stopper-Fuel, Camshaft				
7	98-9383	1	Bearing-Ball				
8	98-9595	1	Key-Woodruff				
9	98-9459	1	Camshaft-Fuel				
10	98-9382	1	Bearing-Ball				
11	98-9657	1	Clip-Circular, Governor Shaft				
12	98-9565	1	Screw-Set				
13	98-9644	1	Governor Shaft ASM				
13:1	98-9381	1	Bearing-Ball				
13:2	98-9564	1	Washer-Thrust				
13:3	98-9563	1	Sleeve-Governor				
13:4	98-9560	2	Shaft-Weight, Governor				
13:5	98-9692	2	Roller				
13:6	98-9559	2	Governor Weight ASM				
13:7	98-9673	1	Gear-Governor				
13:8	98-9562	1	Holder-Gear, Governor				

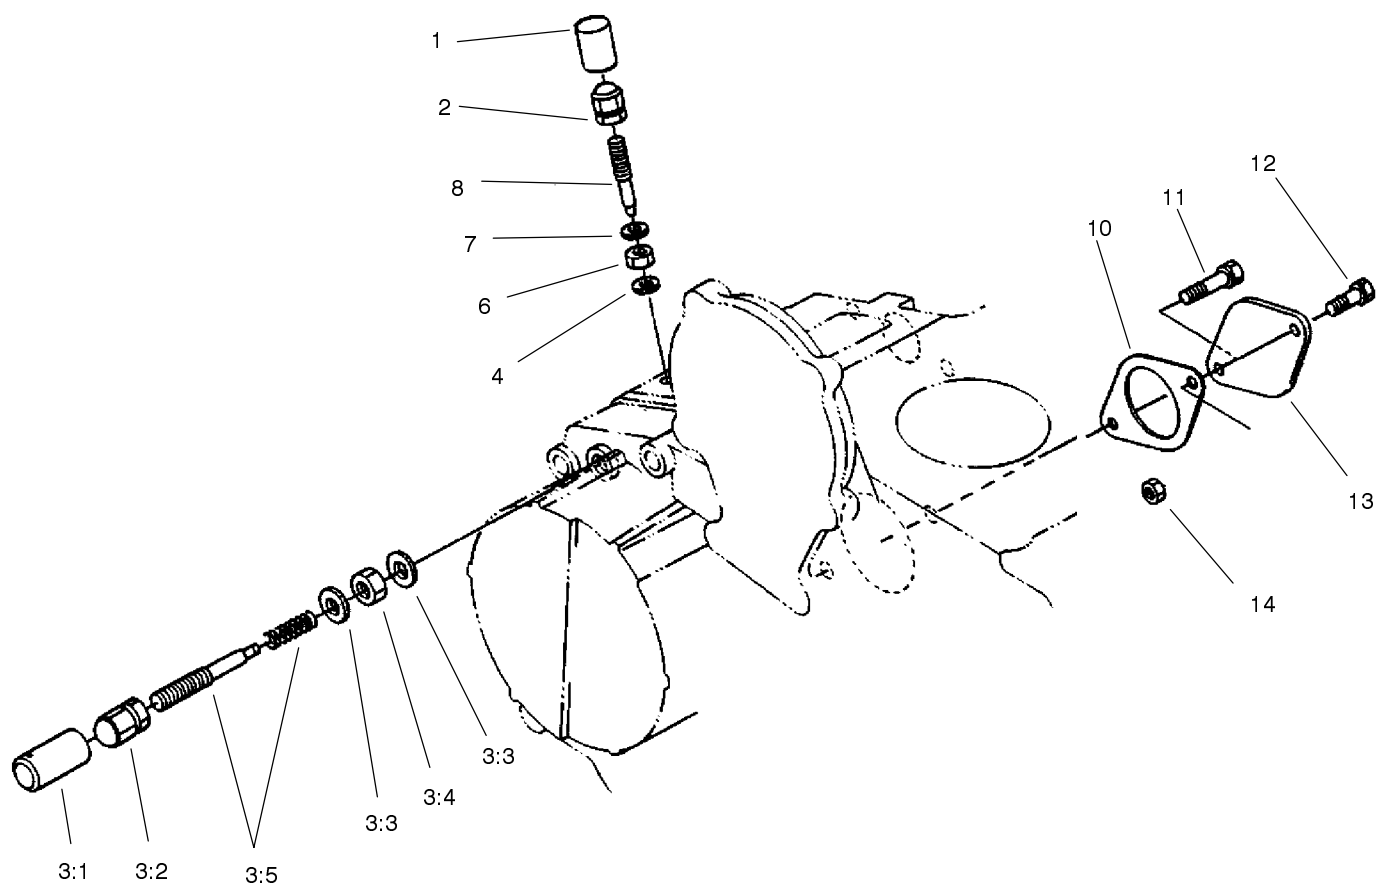


Sheet No.:75

T-2917-1

Engine Stop Lever Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8390	1	Pipe - Lock, Fuel Adj
2	99-8387	1	Nut - Cap
3	98-9678	1	Idle Apparatus ASM
3:1	98-9558	1	Cap
3:2	98-9441	2	Nut-Cap
3:3	98-7654	2	Gasket
3:4	98-9439	2	Nut
3:5	98-9679	1	Adjusting Bolt ASM
4	99-8389	1	Gasket
6	99-8386	2	Nut
7	99-8388	1	Gasket
8	98-9557	1	Bolt-Adjusting
10	98-9674	1	Packing
11	98-7645	1	Bolt
12	98-9359	1	Bolt
13	98-9640	1	Cover-Pump
14	98-7534	1	Nut

Ref. No.	Part No.	Qty.	Description

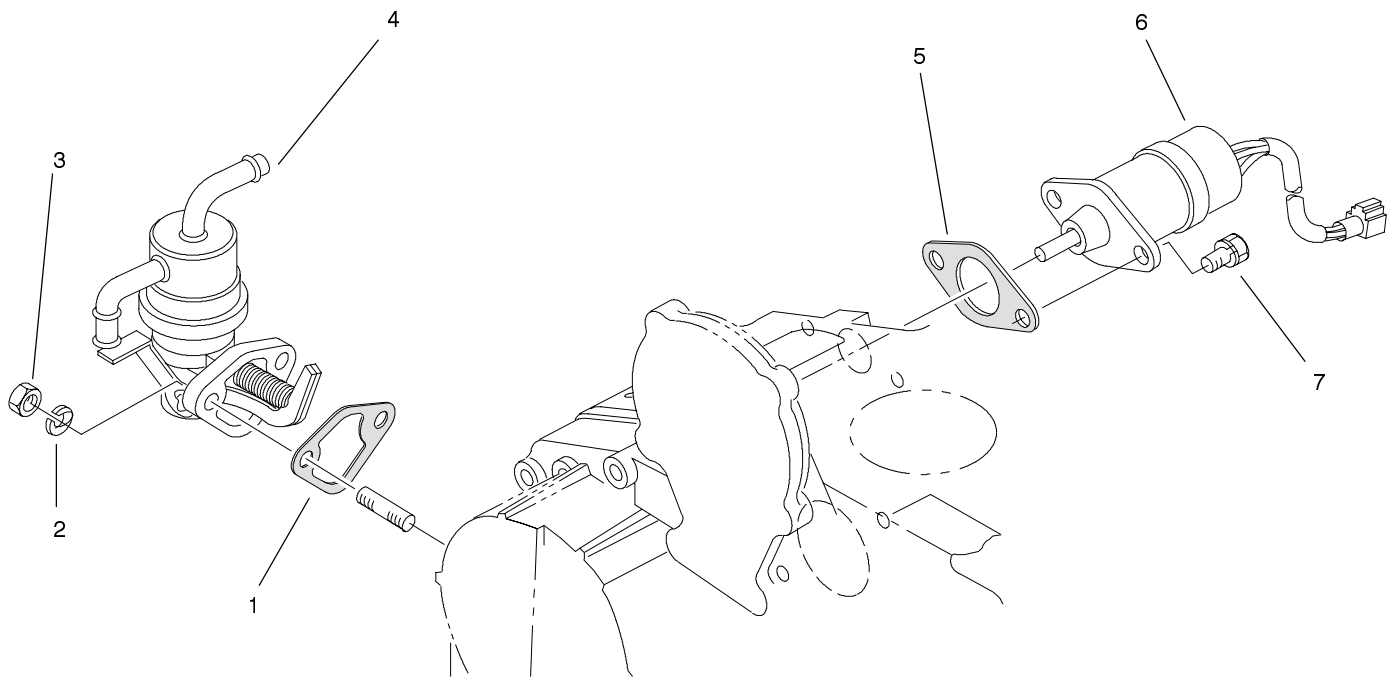


T-2918
Sheet No.:76

Stop Solenoid & Fuel Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9636	1	Gasket-Pump, Fuel
2	98-9367	2	Washer-Spring
3	98-7572	2	Nut
4	98-9677	1	Fuel Pump ASM
5	98-9683	1	Gasket-Cover, Solenoid
6	98-9693	1	Solenoid-Stop
7	98-9351	2	Bolt


Ref. No.	Part No.	Qty.	Description

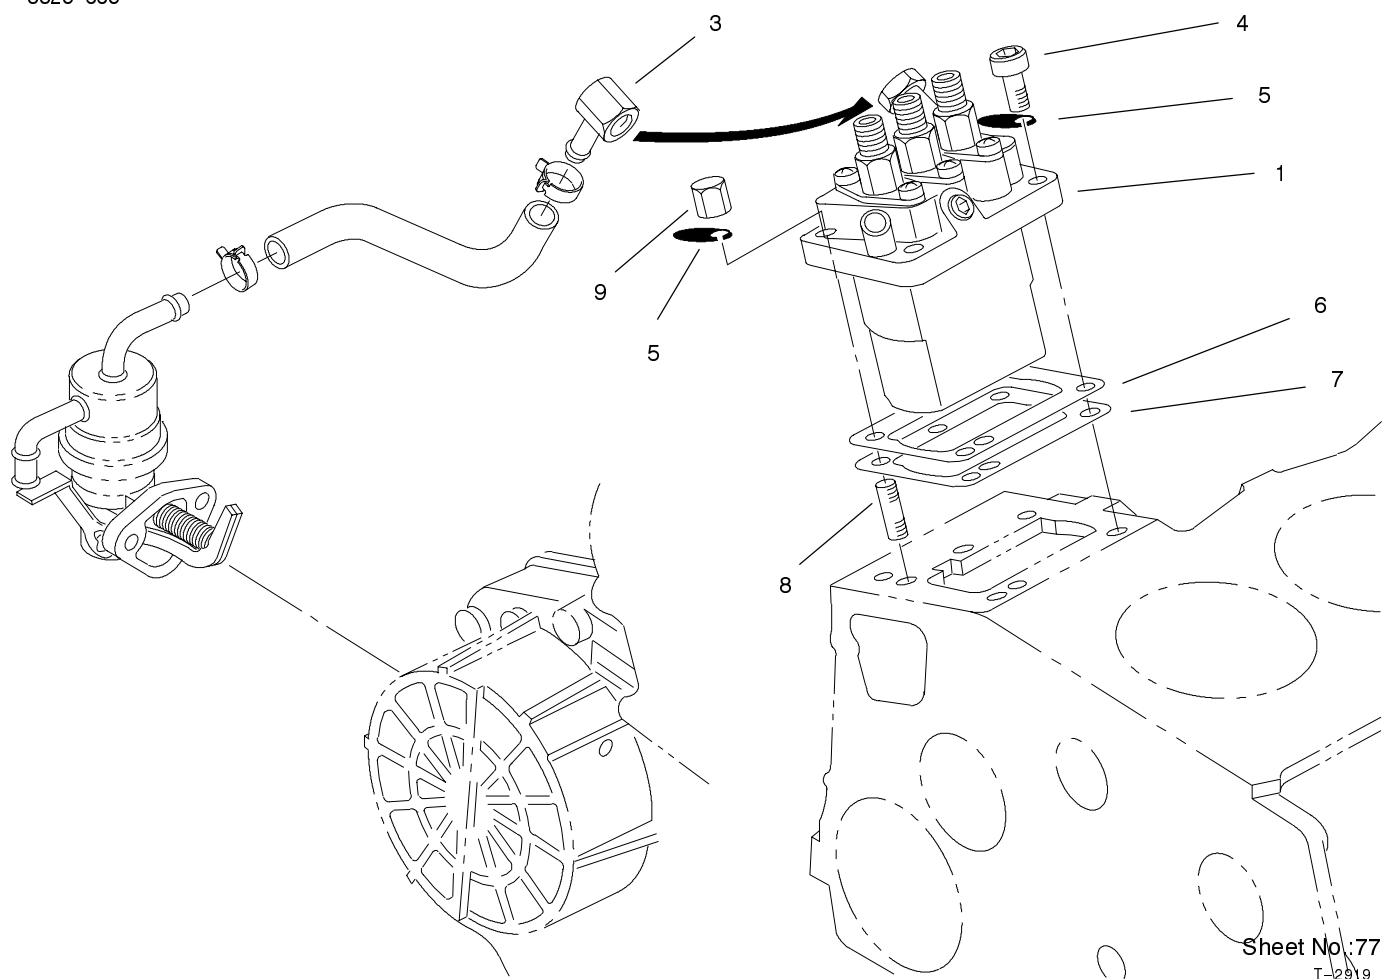

Injection Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9643	1	Injection Pump ASM
3	98-9596	1	Joint-Eye
4	98-9361	2	Bolt-HSH
5	98-9367	4	Washer-Spring
6	98-9457	1	Shim-Injection (0.25mm)
6	98-9456	1	Shim (0.2mm)
7	98-9458	1	Shim-Injection (0.30mm)
8	98-9438	2	Stud
9	98-9440	2	Nut-Cap


Ref. No.	Part No.	Qty.	Description

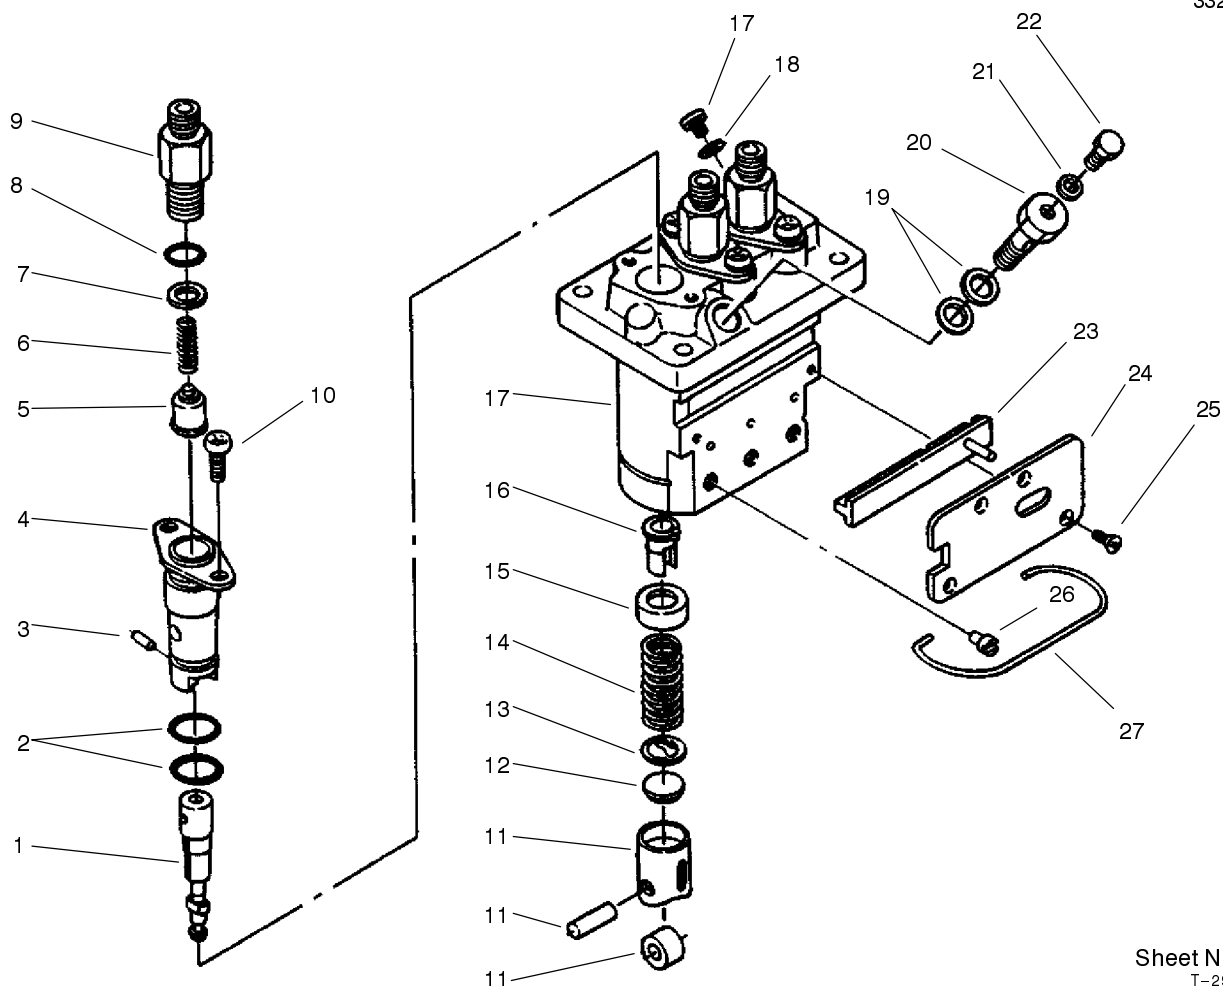

Sheet No.:A1
T-2920

Injection Pump Assembly No. 98-9643

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-9462	3	Element-Pump	26	98-9426	3	Pin-Guide, Tappet
2	98-9423	6	O-Ring	27	98-9450	1	Pin-Clamp
3	98-9443	3	Pin-Joint				
4	98-9434	3	Flange-Sleeve				
5	98-9421	3	Valve-Delivery				
6	98-9424	3	Spring-Valve, Delivery				
7	98-9425	3	Gasket-Valve, Delivery				
8	98-9447	3	O-Ring				
9	98-9652	3	Holder-Valve, Delivery				
10	98-9452	6	Screw				
11	98-9422	3	Tappet ASM				
12	98-9433	3	Shim				
13	98-9429	3	Seat-Spring, Lower				
14	98-9428	3	Spring-Plunger				
15	98-9427	3	Seat-Spring, Upper				
16	98-9432	3	Sleeve-Control				
17	98-9466	1	Plug				
18	98-9451	1	Gasket				
19	98-9445	1	Gasket				
20	98-9464	1	Bolt-Joint				
21	98-9446	1	Gasket				
22	98-9430	1	Screw				
23	98-9463	1	Control-Rack				
24	98-9465	1	Plate				
25	98-9442	4	Screw				

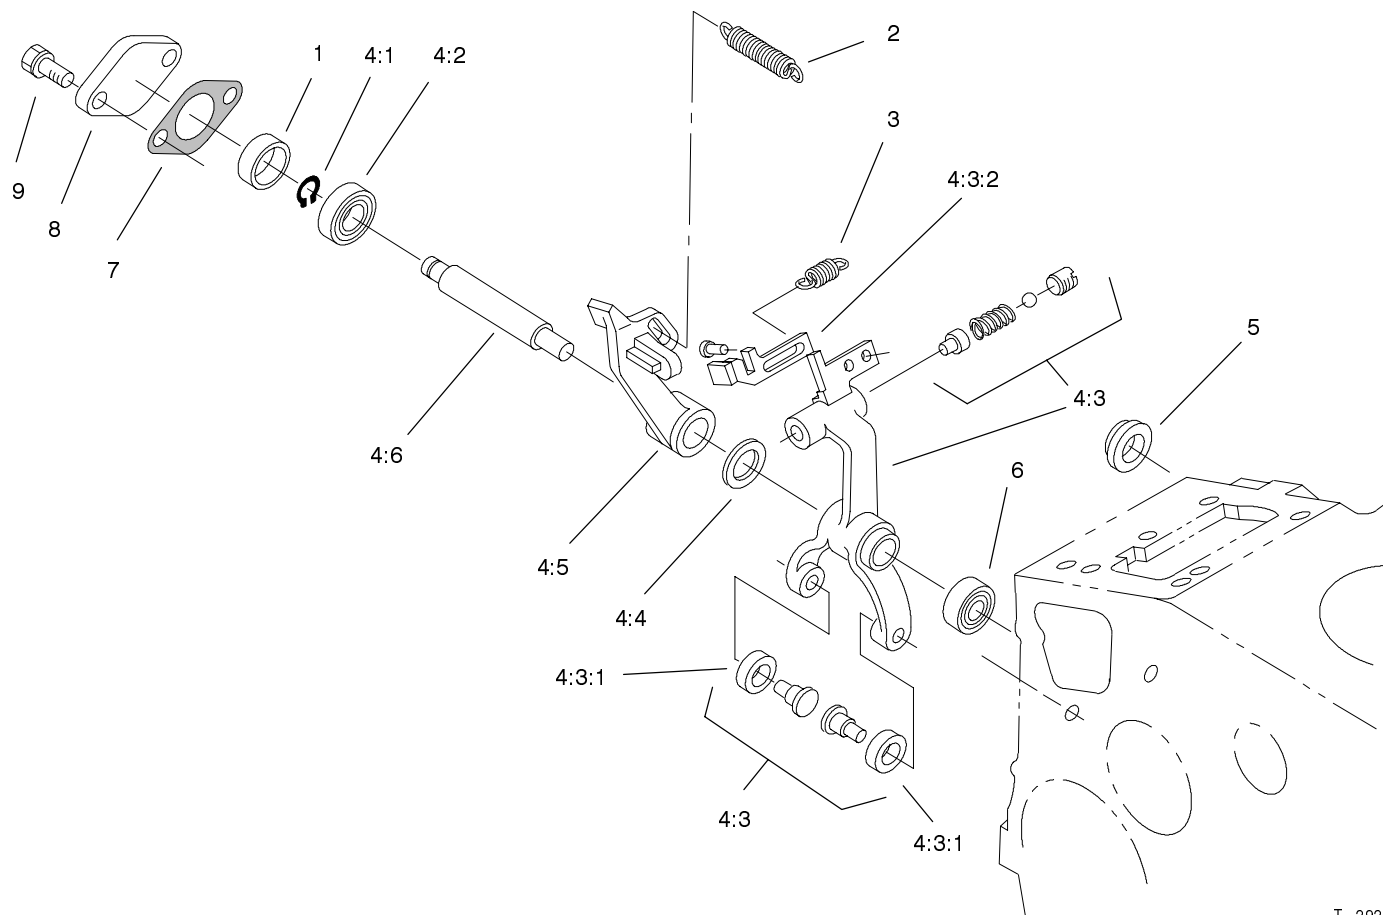


T-2921
Sheet No.:78

Governor Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9567	1	Collar
2	98-9681	1	Spring-Governor
3	98-9645	1	Spring-Start
4	98-9680	1	Fork Lever ASM
4:1	98-9369	1	Clip-Circular, External
4:2	98-9570	1	Bearing-Miniaturize
4:3	99-8380	1	Fork Lever ASM
4:3:1	98-9692	2	Roller
4:3:2	98-9660	1	Lever-Thrust
4:4	98-9593	1	Washer-Plain
4:5	98-9659	1	Lever-Fork
4:6	98-9566	1	Shaft-Lever, Fork
5	98-9568	1	Collar
6	98-9571	1	Bearing-Miniaturize
7	98-9682	1	Gasket
8	98-9569	1	Cover-Shaft, Fork Lever
9	98-9351	2	Bolt

Ref. No.	Part No.	Qty.	Description

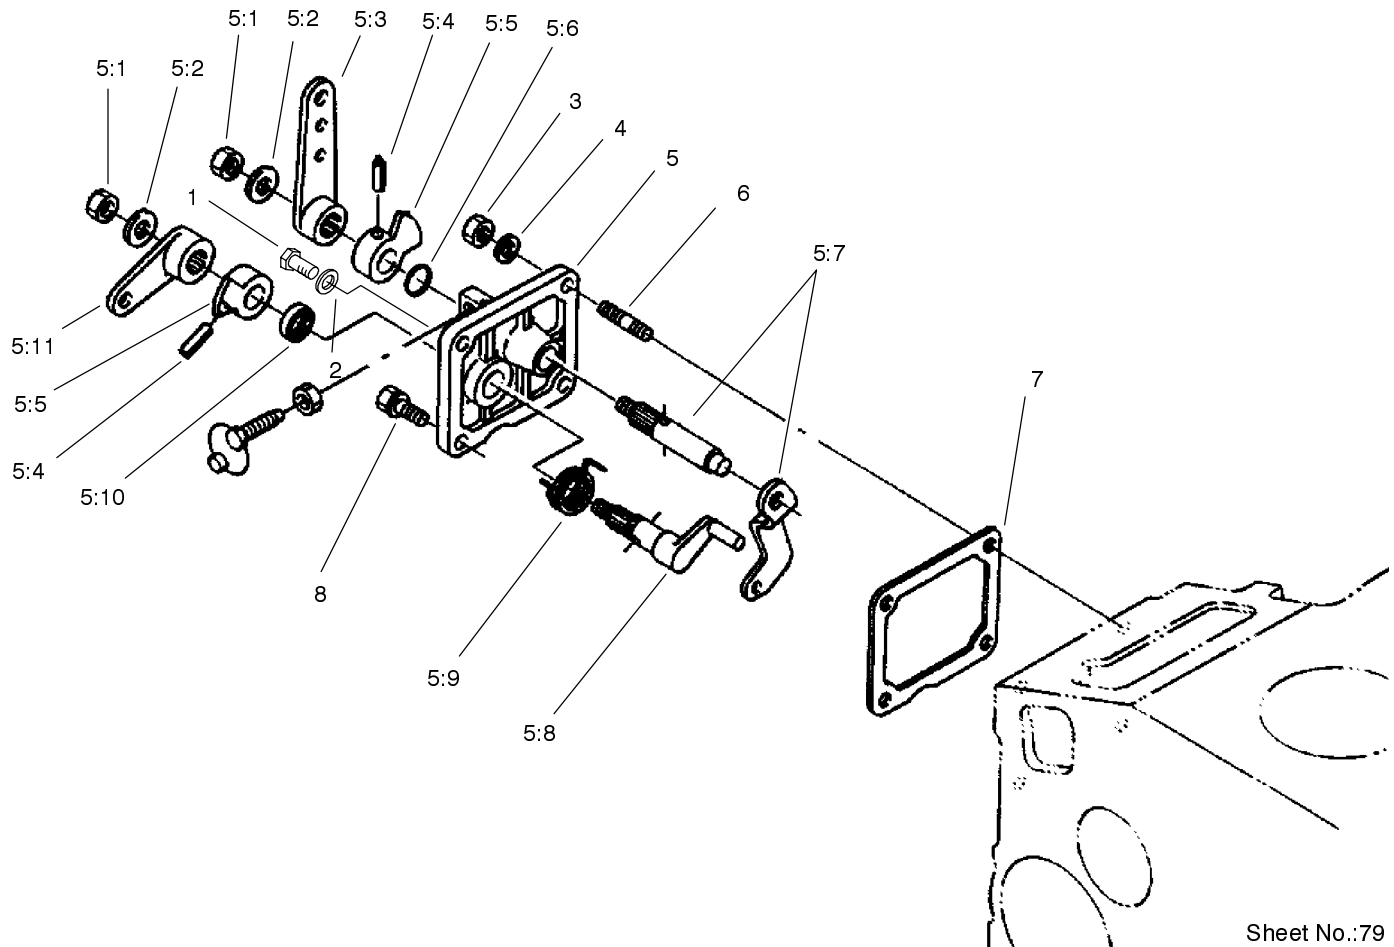


Sheet No.:79
T-2922

Speed Control Plate Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8348	1	Bolt
2	98-7654	1	Gasket
3	98-7572	2	Nut
4	98-9367	2	Washer-Spring
5	98-9661	1	Control Plate ASM
5:1	98-9589	2	Nut
5:2	98-9594	2	Washer-Plain
5:3	98-9662	1	Lever-Control, Speed
5:4	98-7602	2	Pin-Spring
5:5	98-9572	2	Lever-Control, Speed
5:6	98-9371	1	O-Ring
5:7	98-9658	1	Governor Lever ASM
5:8	98-9664	1	Shaft-Lever, Stop
5:9	98-9472	1	Spring-Return
5:10	98-7601	1	Seal-Oil
5:11	98-9663	1	Lever-Stop, Engine
6	98-9362	2	Stud
7	98-9637	1	Gasket
8	98-7692	1	Bolt

Ref. No.	Part No.	Qty.	Description

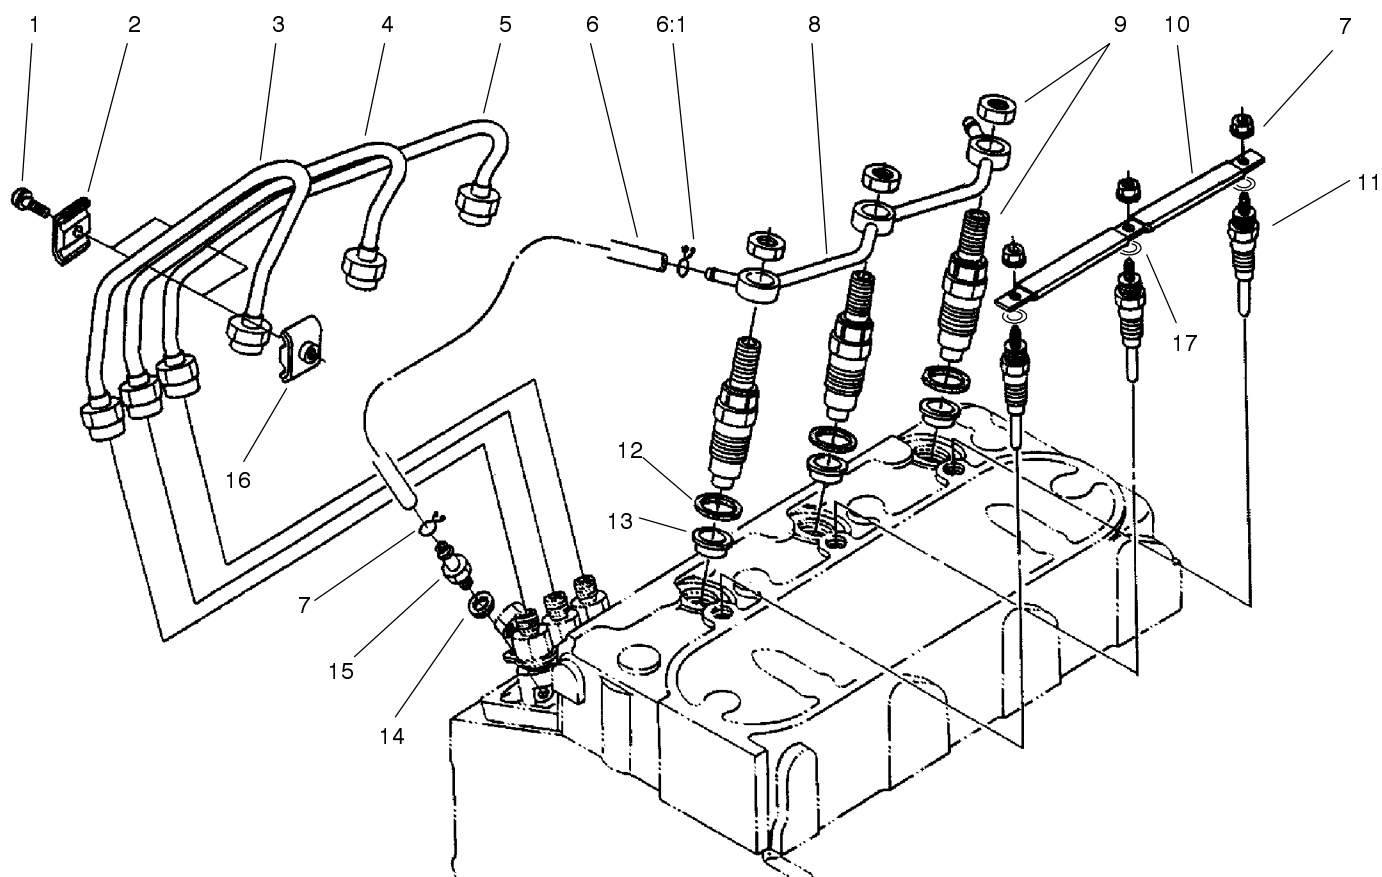


T-2923
Sheet No.:80

Nozzle Holder & Glow Plug Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7684	2	Screw w/Washer
2	98-7683	2	Clamp-Pipe
3	98-9622	1	Pipe Injection
4	98-9654	1	Pipe-Injection
5	98-9655	1	Pipe-Injection
6	98-9624	1	Overflow Pipe ASM
6:1	98-7671	2	Clip-Pipe
7	99-8377	3	Nut - Flange
8	98-9621	1	Overflow Pipe ASM
9	98-9468	3	Nozzle Holder ASM
10	98-9631	1	Cord-Plug, Glow
11	98-9623	3	Plug-Glow
12	98-7676	3	Gasket
13	98-7677	3	Seal
14	98-7654	1	Gasket
15	98-9431	1	Screw-Bleeder
16	98-7682	2	Clamp-Pipe
17	99-8378	3	Washer - Plain


Ref. No.	Part No.	Qty.	Description

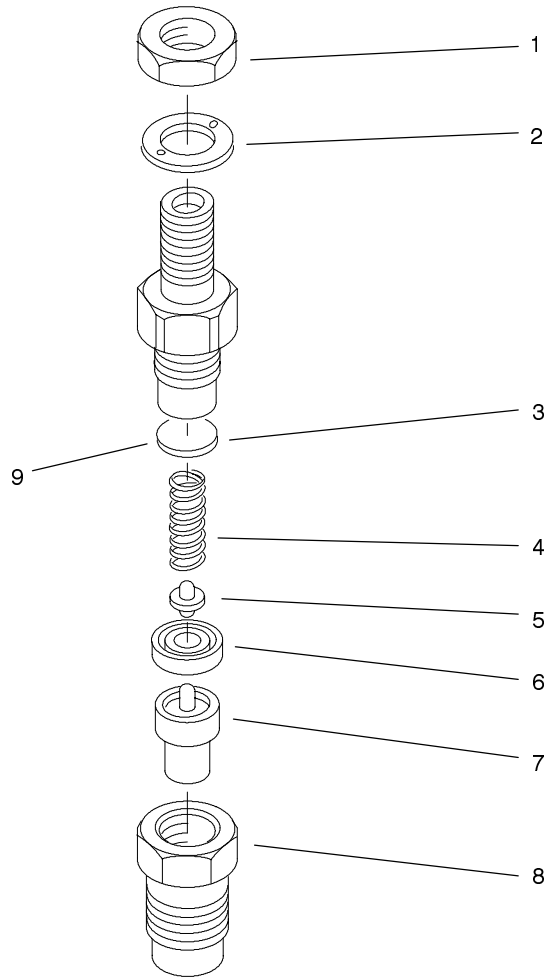

Sheet No.:A2
T-2924

Nozzle Holder Assembly No. 98-9468

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-8301	3	Nut	9	99-8313	3	Washer-Adjust (0.40mm)
2	99-8307	3	Washer-Plain	9	99-8312	3	Washer-Adjust (0.30mm)
3	99-8302	3	Washer-Adjusting				
4	99-8303	3	Spring - Nozzle				
5	99-8305	3	Rod-Push				
6	99-8304	3	Spacer - Distance				
7	99-8308	3	Piece - Nozzle				
8	99-8306	3	Nut - Nozzle				
9	99-8317	3	Washer-Adjust (0.56mm)				
9	99-8318	3	Washer-Adjust (0.58mm)				
9	99-8319	3	Washer-Adjust (0.80mm)				
9	99-8311	3	Washer-Adjust (0.20mm)				
9	99-8310	3	Washer-Adjust (0.10mm)				
9	99-8316	3	Washer-Adjust (0.54mm)				
9	99-8309	3	Adjusting Washer ASM				
9	99-8315	3	Washer-Adjust (0.52mm)				
9	99-8314	3	Washer-Adjust (0.50mm)				

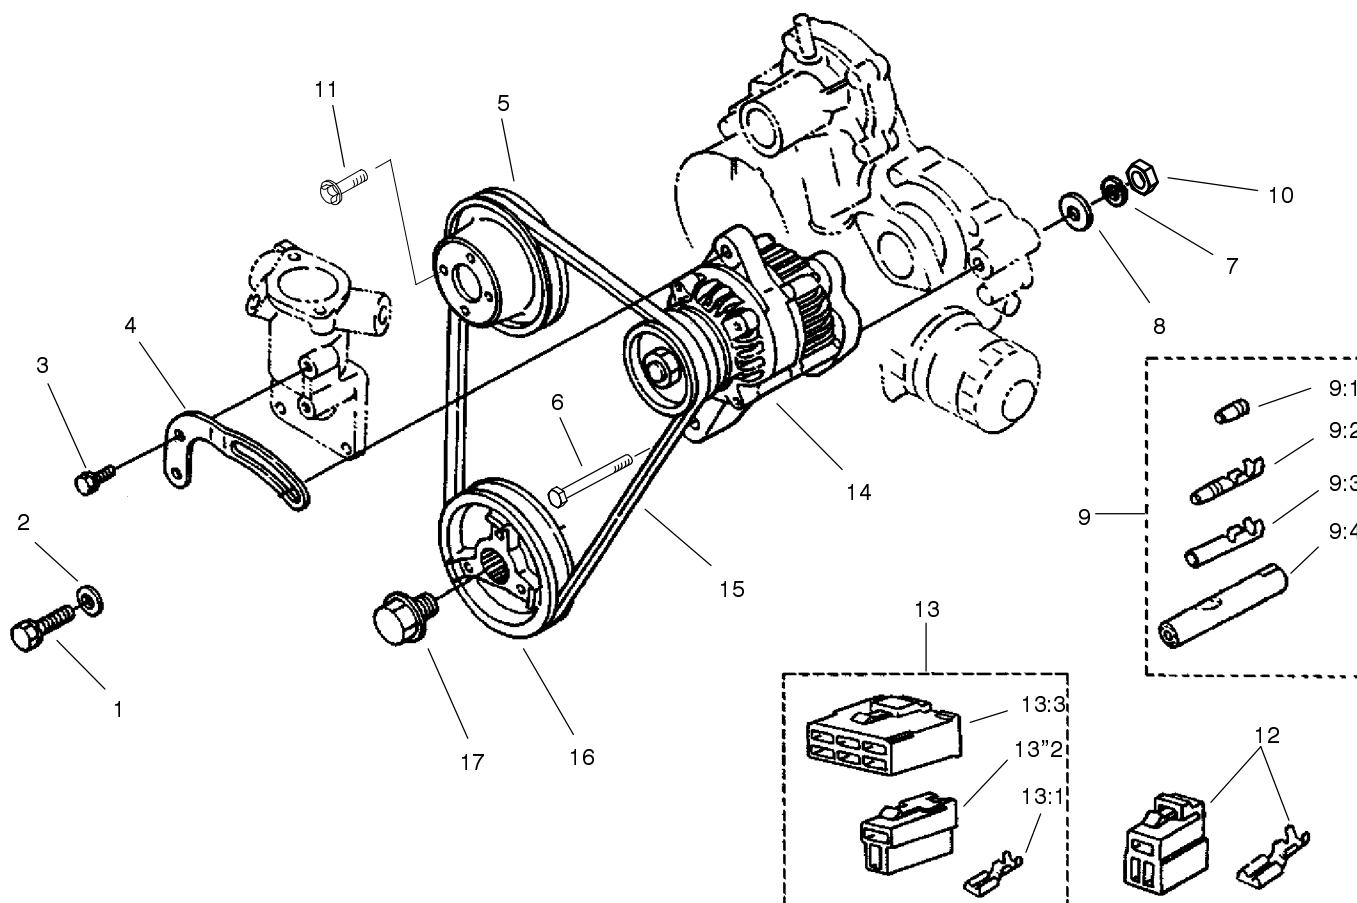


T-2926-1
Sheet No.:81

Alternator and Pulley Assembly

Ref. No.	Part No.	Qty.	Description
1	98-7697	1	Bolt
2	98-7698	1	Washer-Plain
3	98-7692	1	Bolt
4	98-9573	1	Stay-Dynamo
5	98-9584	1	Pulley-Fan
6	98-9360	1	Bolt
7	98-9368	1	Washer-Spring
8	98-9366	1	Washer-Plain
9	98-9700	1	Terminal ASM
9:1	98-9701	1	Terminal
9:2	98-9702	1	Sleeve
9:3	98-9703	1	Terminal
9:4	98-9704	1	Sleeve
10	98-7737	1	Nut
11	99-8363	4	Bolt - Flange
12	98-9602	1	Lock Coupler ASM
13	98-9696	1	Coupler ASM
13:1	98-9699	7	Terminal
13:2	98-9698	1	Connector
13:3	98-9697	1	Connector
14	98-9474	1	Alternator ASM
15	98-9676	1	V-Belt
16	104-1247	1	Pulley-Fan Drive
17	98-9585	1	Bolt


Ref. No.	Part No.	Qty.	Description

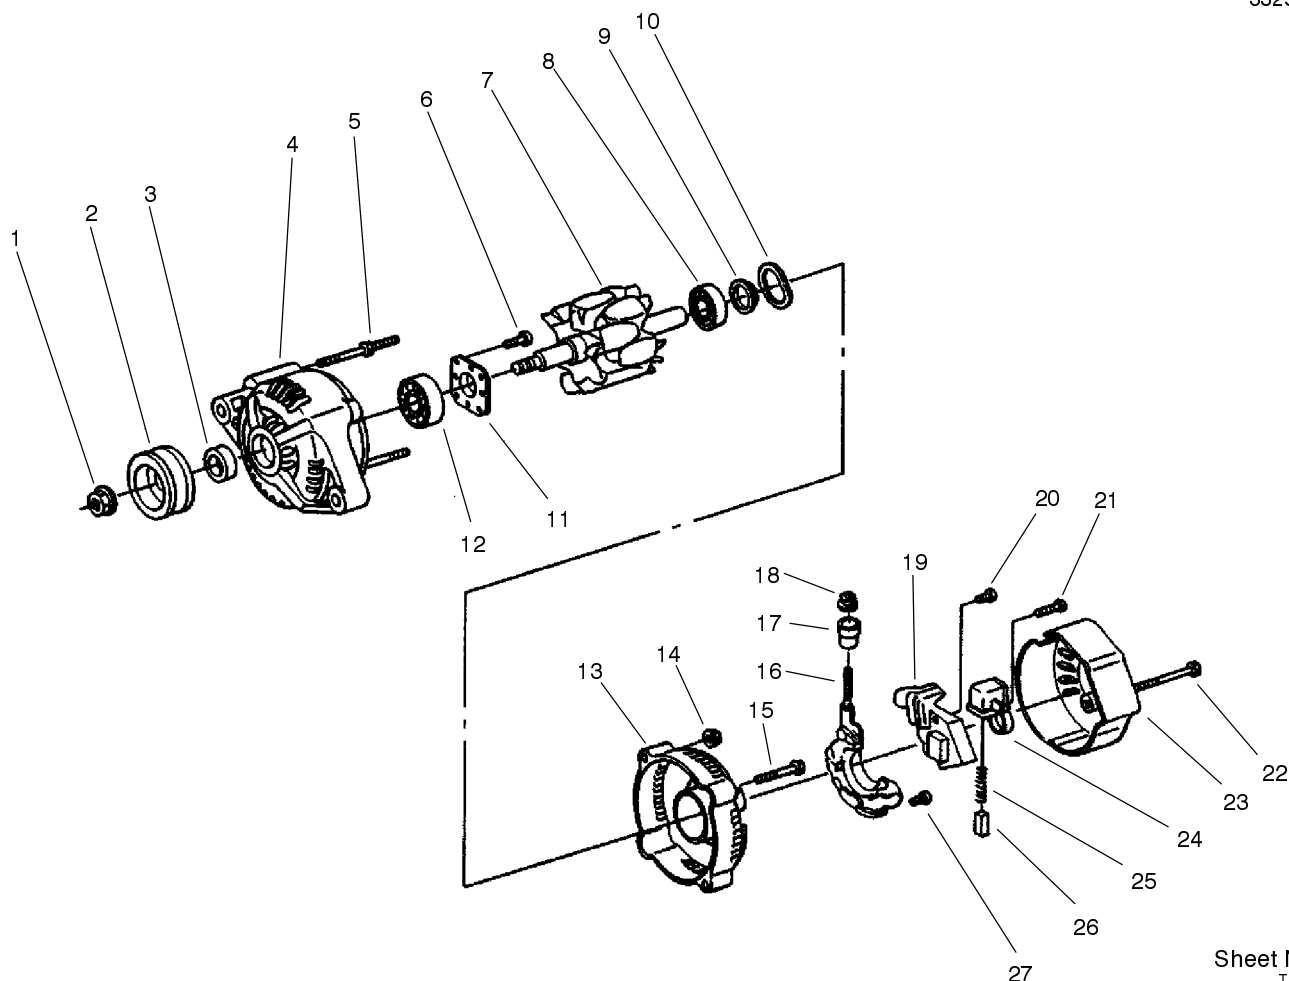

Sheet No.:A3
T-2927

Alternator Assembly NO. 98-9474


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	98-7708	1	Nut	26	98-7724	2	Brush
2	98-9453	1	Pulley-Dynamo	27	98-7727	6	Screw-Head, Round
3	98-7709	1	Collar				
4	98-7714	1	Frame-End, Drive				
5	98-7717	2	Bolt-Through				
6	98-7716	4	Screw-Head, Round				
7	98-7710	1	Rotor				
8	98-7712	1	Bearing-Ball				
9	98-7711	1	Cover-Bearing				
10	98-7713	1	Washer-Thrust				
11	98-7715	1	Plate-Retainer				
12	98-7718	1	Bearing-Ball				
13	98-7719	1	Frame-End				
14	98-7730	2	Nut				
15	98-7731	2	Bolt				
16	98-7721	1	Rectifier ASM				
17	98-7722	1	Bushing-Insulation				
18	98-7732	1	Nut				
19	98-7733	1	Regulator ASM				
20	98-7726	2	Screw-Head, Round				
21	98-7728	1	Screw-Head, Round				
22	98-7729	3	Bolt				
23	98-7720	1	Cover-End				
24	98-7723	1	Holder-Brush				
25	98-7725	2	Spring-Brush				

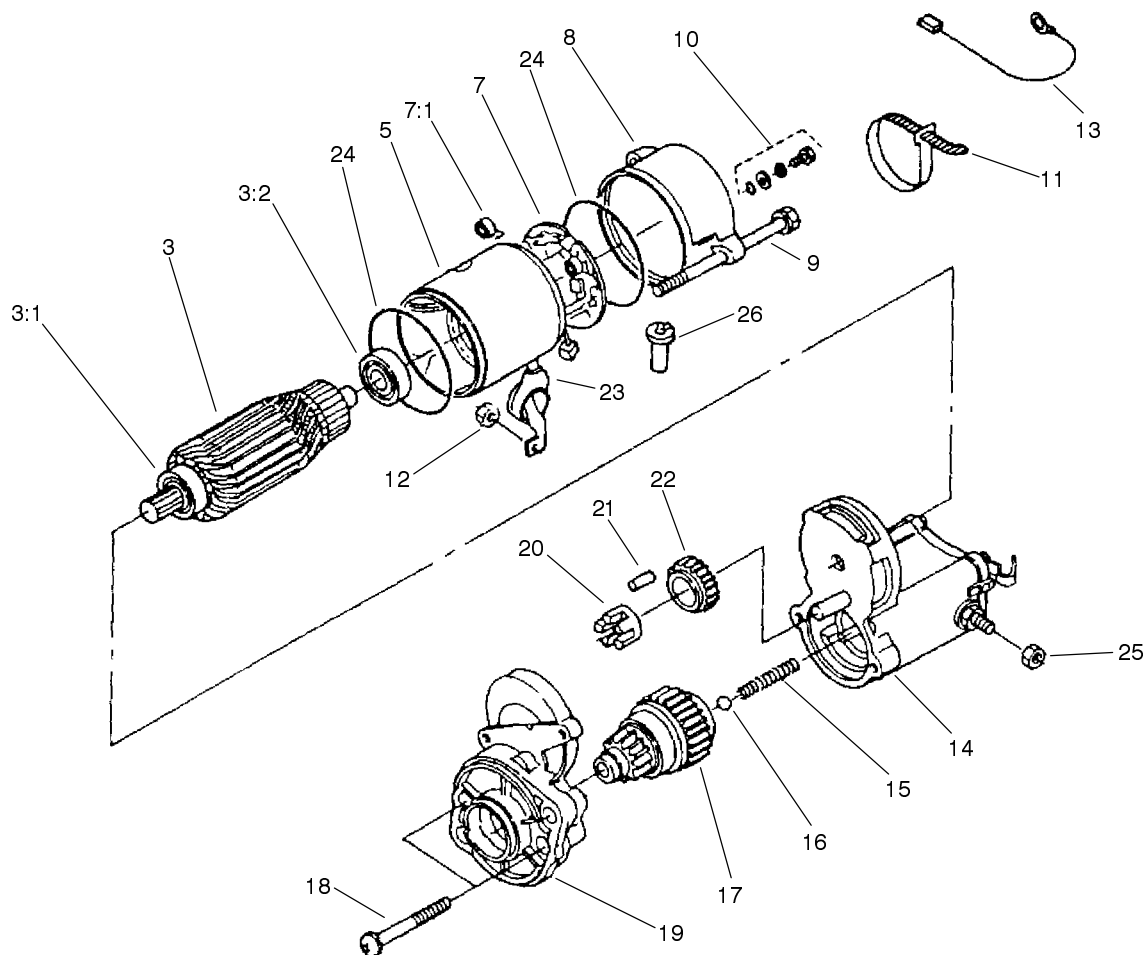

Sheet No.:A4
T-3081

Starter Assembly No. 98-9705

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
3	98-7742	1	Armature ASM				
3:1	98-7743	1	Bearing				
3:2	98-7744	1	Bearing				
5	98-7741	1	Yoke ASM				
7	98-7749	1	Brush Holder ASM				
7:1	98-7750	4	Spring-Brush				
8	99-8370	1	Frame - End				
9	98-9549	2	Bolt				
10	98-7758	2	Bolt ASM				
11	98-9712	1	Band-Cover				
12	99-8371	1	Nut-Hex				
13	98-9711	1	Cord-Solenoid, Stop				
14	99-8372	1	Magnetic Switch ASM				
15	98-7754	1	Spring				
16	98-7755	1	Ball				
17	99-8373	1	Clutch-Running, Over				
18	98-7756	2	Bolt				
19	99-8374	1	Frame-End, Drive				
20	98-7752	1	Retainer				
21	98-7753	5	Roller				
22	98-7751	1	Gear				
23	99-8375	1	Cover				
24	98-7757	2	O-Ring				
25	99-8376	1	Nut - Hex				
26	98-7759	1	Pipe-Drain				

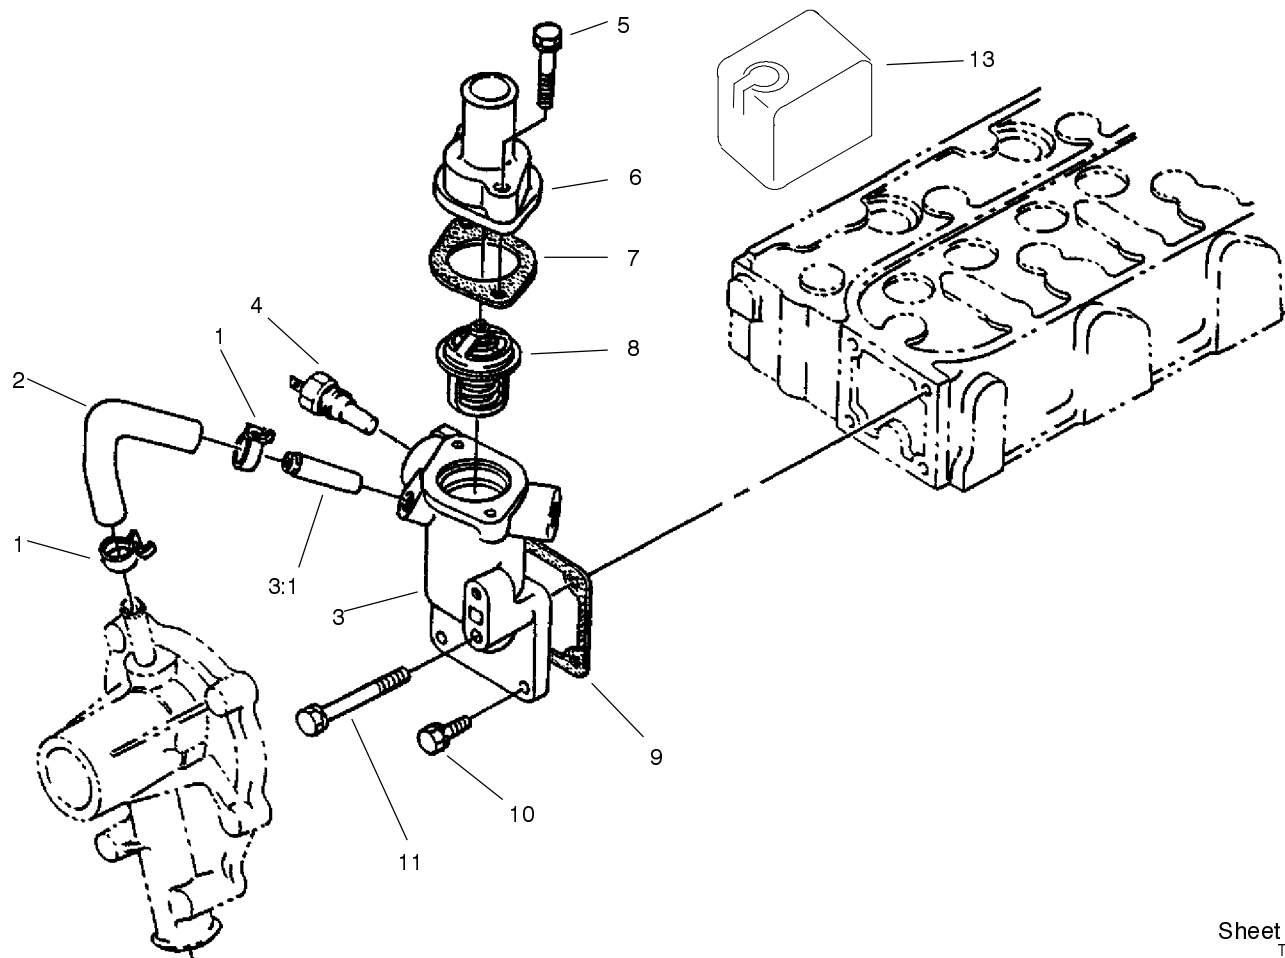


Sheet No.:83
T-2930

Water Flange and Thermostat Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9579	2	Band-Pipe
2	98-9578	1	Pipe-Return, Water
3	98-9713	1	Water Flange ASM
3:1	98-9580	1	Pipe-Return, Water
4	98-9719	1	Thermoswitch
5	98-7777	2	Bolt
6	98-9471	1	Cover-Thermostat
7	98-7776	1	Gasket
8	98-7778	1	Thermostat ASM
9	98-9638	1	Gasket-Flange, Water
10	98-7692	3	Bolt
11	98-9356	1	Bolt
13	98-9323	1	Bottle-Overflow, Water


Ref. No.	Part No.	Qty.	Description

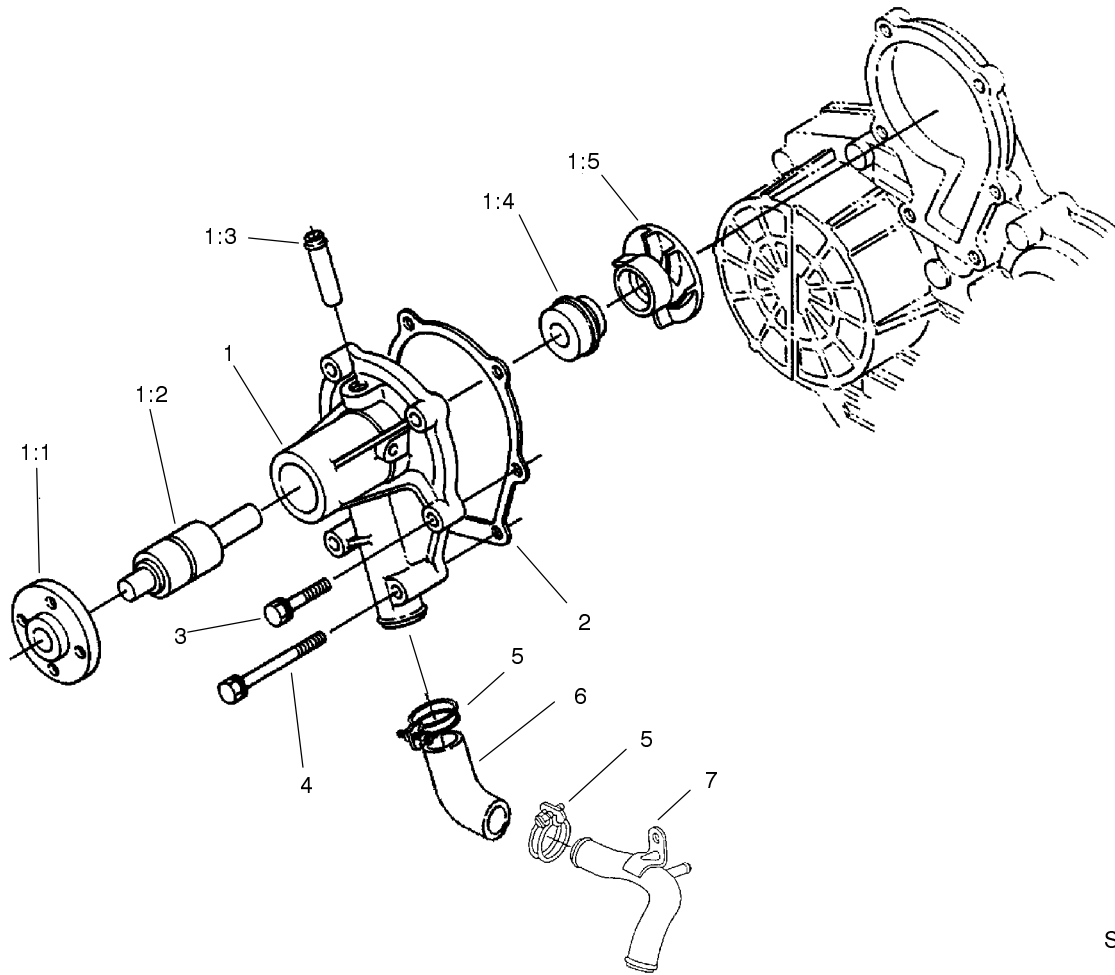

Sheet No.:84
T-2931

Water Pump Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9575	1	Water Pump ASM
1:1	98-9582	1	Flange-Pump, Water
1:2	98-9583	1	Bearing
1:3	98-9577	1	Pipe-Return, Water
1:4	98-9576	1	Mechanical Seal ASM
1:5	98-9581	1	Impeller-Pump, Water
2	98-9632	1	Gasket, Water Pump
3	98-9353	1	Bolt
4	98-9357	4	Bolt
5	98-9717	2	Clamp
6	98-9574	1	Pipe-Water
7	99-8379	1	Pipe-Water

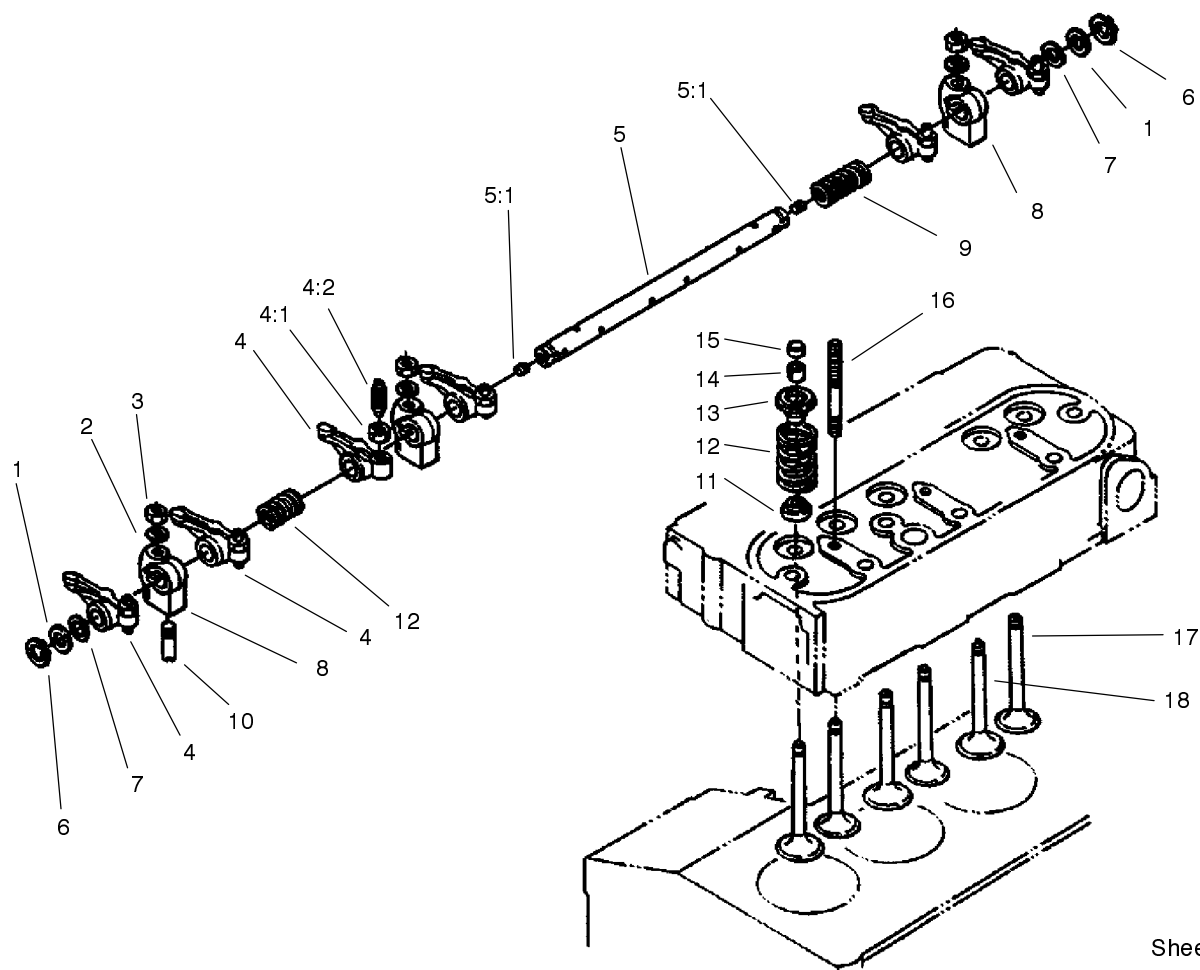


Sheet No.:85
T-2932

Valve and Rocker Arm Assembly

Ref. No.	Part No.	Qty.	Description
1	98-9508	2	Washer-Shaft, R-Arm
2	98-9385	3	Washer - Flat
3	98-9393	3	Nut
4	98-9501	6	Rocker Arm ASM
4:1	98-9503	6	Screw - Adjusting
4:2	98-9502	6	Rocker Arm ASM
5	98-9612	1	R-Arm Shaft ASM
5:1	98-9365	2	Screw-Set
6	98-9370	2	Clip-Circular, Ext.
7	98-9507	2	Washer-Shaft, R-Arm
8	98-9505	3	Bracket-Arm, Rocker
9	98-9504	2	Spring-Arm, Rocker
10	98-9391	1	Screw-Set, Rocker Arm
11	98-9496	6	Seal-Stem, Valve
12	98-9626	6	Spring-Valve
13	98-9498	6	Retainer-Valve
14	98-9390	6	Collet-Set, Valve Spring
15	98-9497	6	Cap-Valve
16	98-9506	3	Stud
17	98-9625	3	Valve-Exhaust
18	98-9494	3	Valve-Inlet

Ref. No.	Part No.	Qty.	Description

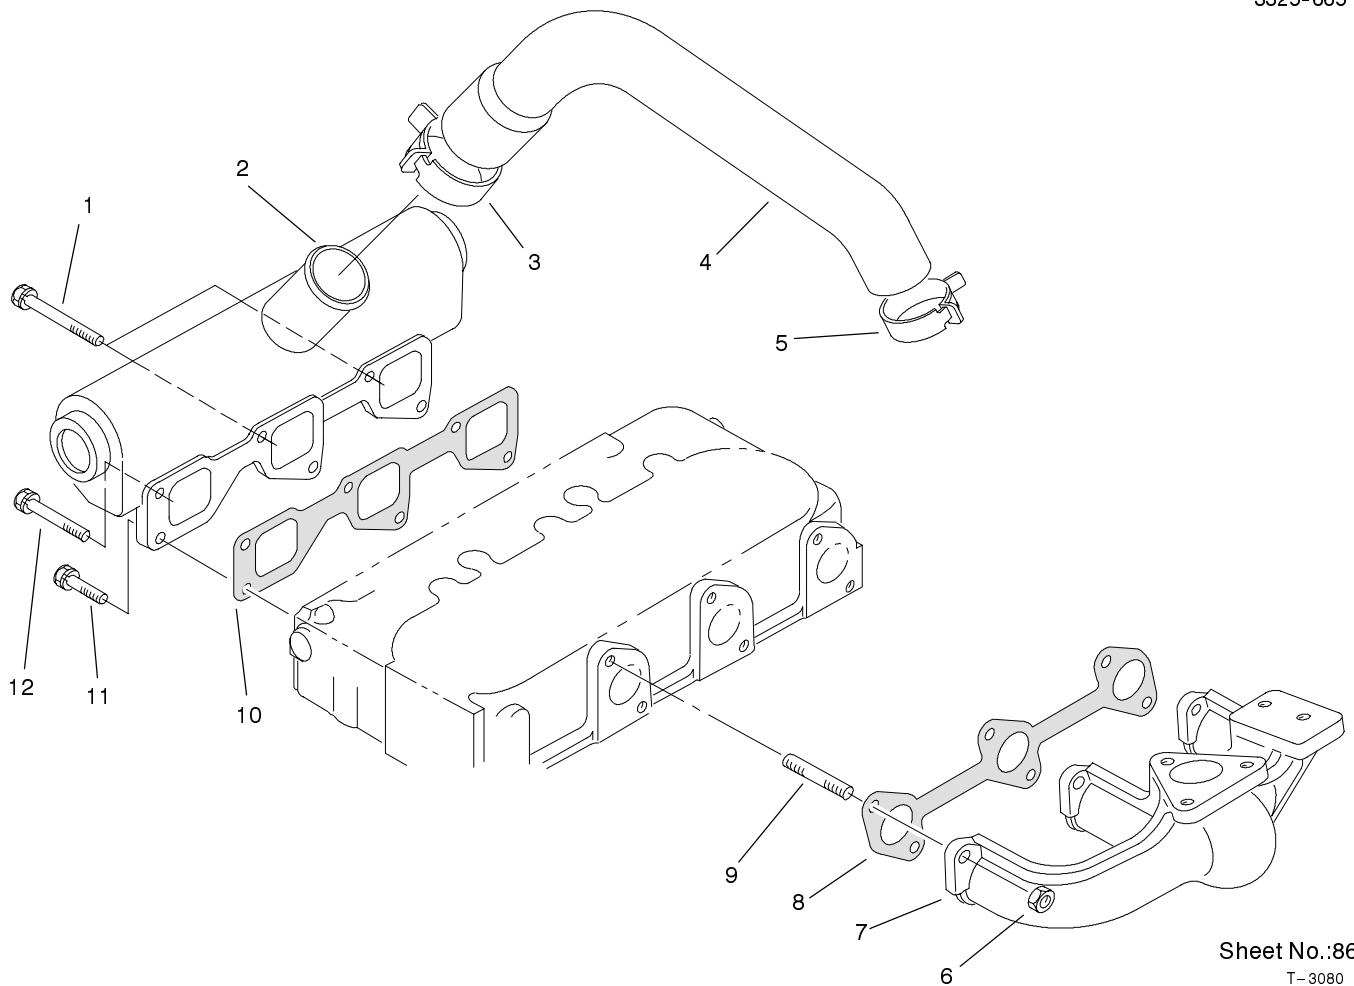


Sheet No.:86

T-3080

Exhaust Manifold and Gasket Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8320	2	Bolt
2	99-8321	1	Manifold - Inlet
3	99-8322	1	Band - Pipe
4	99-8323	1	Hose - Inlet
5	99-8324	1	Band - Pipe
6	98-9665	6	Nut
7	99-8326	1	Manifold - Exhaust
8	99-8327	1	Gasket-Manifold, Exhaust
9	98-9588	6	Stud
10	99-8329	1	Gasket-Manifold, Intake
11	98-7568	3	Bolt
12	98-7496	1	Bolt

Ref. No.	Part No.	Qty.	Description

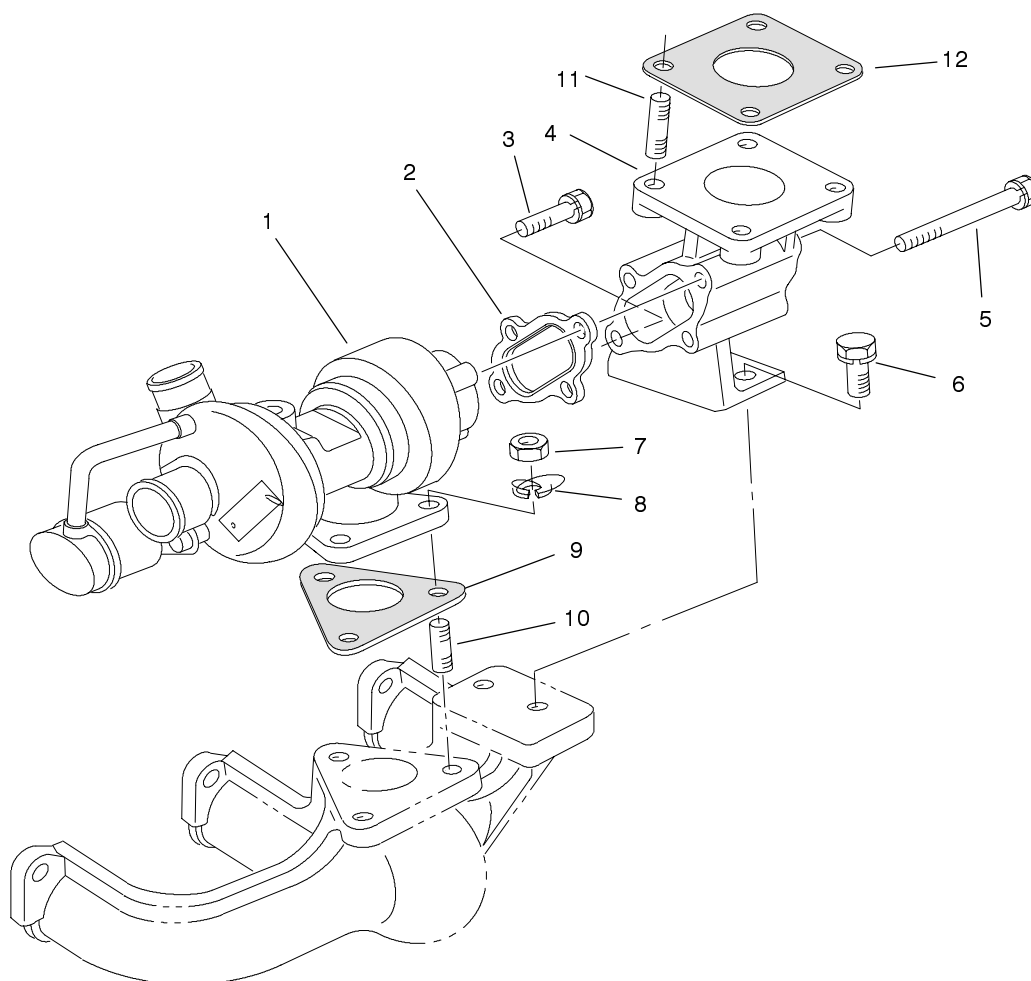

Sheet No.:87
T-3078


Turbo Charger Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8332	1	Turbo Charger ASM
2	99-8333	1	Gasket
3	99-8334	1	Bolt
4	99-8335	1	Flange - Muffler
5	99-8336	3	Bolt
6	98-7610	2	Bolt
7	98-7534	3	Nut
8	99-8339	3	Washer - Spring
9	99-8340	1	Gasket
10	99-8341	3	Stud
11	99-8342	4	Stud
12	99-8343	1	Gasket - Muffler

Ref. No.	Part No.	Qty.	Description

Special Tools

Axle Tool No. *TOR859920

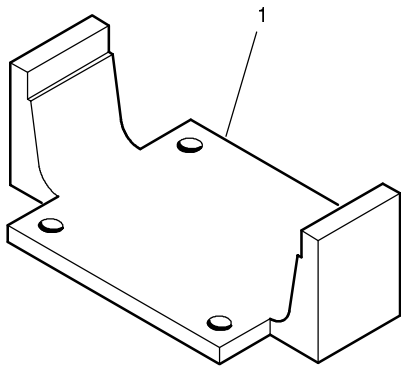

T-1325-1

Ref. No.	Part No.	Description	No. Used
1		Tool—Axle	1

*Obtain these items directly from OTC 2013 4th St. Owatonna, MN. 55060 1-800-533-0492
(in Minnesota and Canada 1-507-455-7050) Fax. 507-455-7011.

Gauge Bar and Backlapping Brush Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1852	1	Gauge Bar ASM
1:1	32122-54	2	Screw
1:2	98-7976	1	Decal
1:3	32103-3	2	Nut-Wing
2	29-9100	1	Backlapping Brush ASM
2:1	12-9140	1	Decal
2:2	36-4310	1	Brush
2:3	29-9090	1	Hose-Handle
2:4	29-9080	1	Handle
2:5	2410-18	1	Plug

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

