



Vibratory Plow

Dingo[®] Attachment

Model No. 22910—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Vibratory Plow Assembly	3	Optional Chuted Blade ASM No. 104-0640 ...	7
Hydraulic Assembly	4	Puller Assembly No. 100-6285	8
Indicating Lever Assembly	5	Puller Assembly No. 100-6290	9
Optional Pullers and Blades	6	Puller Assembly No. 100-6294	10


Accessories

Description	Model / Part No.	Description	Model / Part No.
Listed on Page 7			

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

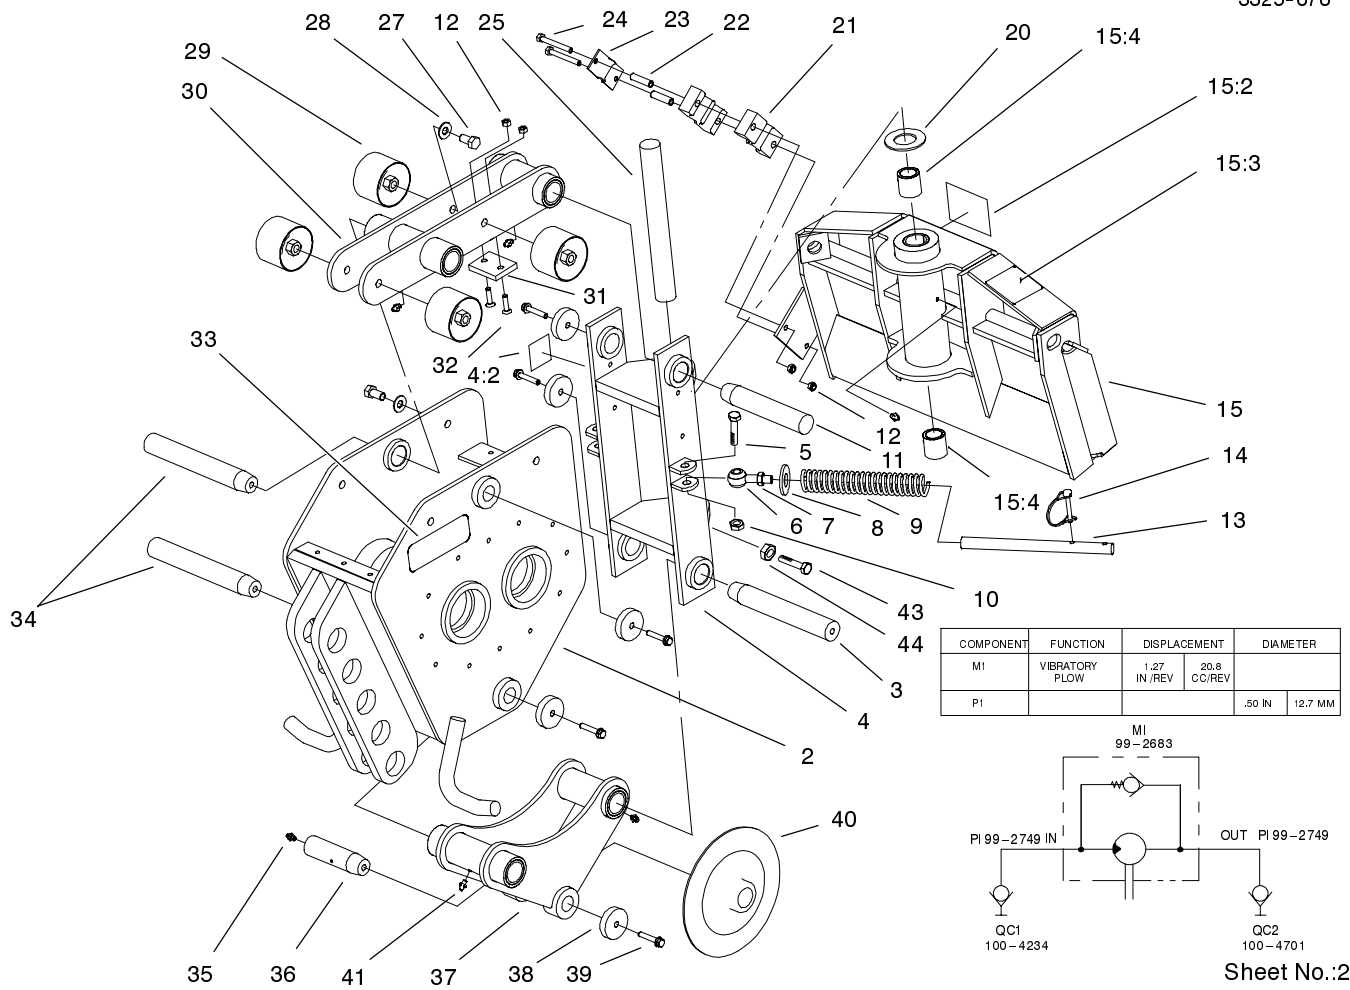


Sheet No.:2

Vibratory Plow Assembly

Ref. No.	Part No.	Qty.	Description
2	99-2703-03	1	Frame ASM
3	99-8646	1	Pin-Tapered
4	104-1985	1	Clevis ASM
4:2	100-4650	1	Decal-Warning
5	325-8	2	Screw-HH
6	99-2695	2	Rod End
7	3220-5	2	Nut-HJ
8	99-2659	2	Washer
9	99-2686	2	Spring-Compression
10	32146-13	2	Nut-Eslok
11	99-2720	1	Pin-Tapered
12	3296-29	5	Nut-Lock
13	99-2725	2	Rod-Threaded
14	100-1663	2	Pin-Snapper
15	99-8633	1	Q-Tach ASM
15:2	98-3269	1	Decal-Made In USA
15:3	100-4649	1	Decal-Danger
15:4	99-2713	2	Bushing-Tension
20	99-2707	1	Washer
21	82-8170	2	Clamp
22	93-7960	2	Spacer
23	93-7961	1	Clamp-Drain, Case
24	322-13	2	Screw-HH
25	104-2684	1	Pin-Pivot
27	3213-1	8	Screw-HH
28	3256-40	8	Washer-Flat

Ref. No.	Part No.	Qty.	Description
29	99-2693	4	Mount-Sandwich
30	99-2715-03	1	Link ASM
31	99-2653	1	Pad-Stop
32	100-6284	2	Screw
33	99-6893	2	Decal-Siteworks
34	99-2719	2	Pin-Tapered
35	302-5	5	Fitting-Grease
36	99-2722	1	Pin-Tapered
37	99-2735-03	1	Link ASM
38	84-1580	6	Washer-Clutch
39	3234-19	6	Screw-Hfh
40	99-2726-03	1	Coulter
41	302-40	3	Fitting-Grease
43	323-13	1	Screw-HH
44	3296-39	1	Nut-Lock, NI

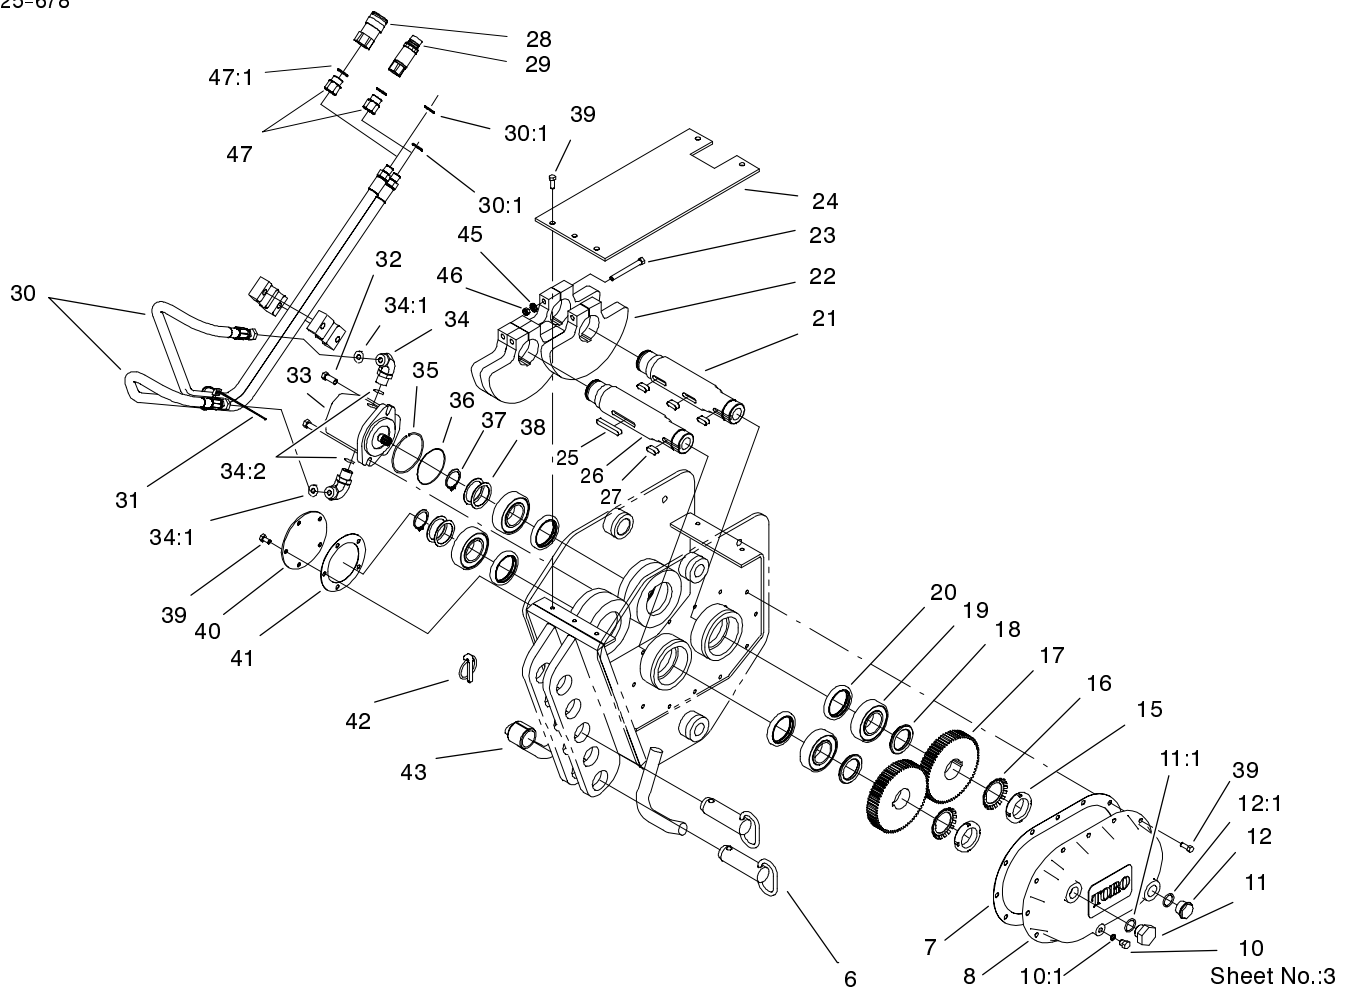


Sheet No.:3

Hydraulic Assembly

Ref. No.	Part No.	Qty.	Description
6	99-2710	2	Blade Pin ASM
7	99-2744	1	Gasket
8	99-2723-03	1	Cover-Aluminum
10	353-512	1	Plug
10:1	237-78	1	O-Ring
11	354-74	1	Fitting
11:1	237-81	1	O-Ring
12	69-1170	1	Glass-Sight
12:1	237-81	1	O-Ring
15	99-2706	2	Nut
16	99-2708	2	Retainer-Nut
17	99-2676	2	Gear
18	99-2677	2	Spacer
19	99-2670	4	Spherical-Roll Bearing
20	99-2714	4	Seal-Oil
21	99-2672	1	Shaft-Splined
22	99-2673	4	Weight-Counter
23	323-15	4	Screw-HH
24	99-2699-03	1	Plate-Top
25	99-2675	1	Key-Long
26	99-2671	1	Shaft
27	99-2674	4	Key-Short
28	100-4234	1	Coupler-Face, Flush
*28:1	100-6119	1	Kit-Seal
29	100-4701	1	Nipple-Connect, Pressure

Ref. No.	Part No.	Qty.	Description
*29:1	100-6120	1	Kit-Seal
30	99-2749	2	Hose-Hydraulic
30:1	237-79	1	O-Ring
31	3290-379	1	Tie-Cable
32	323-6	2	Screw-HH
33	99-2683	1	Motor-Hydraulic
*33:1	99-8608	1	Seal Kit
34	340-105	2	Fitting-90 DEG
34:1	237-80	1	O-Ring
34:2	237-30	1	O-Ring
35	99-2746	1	Ring-Pilot
36	237-167	1	O-Ring
37	32151-95	2	Ring-Retaining
38	99-2654	4	Washer-Thrust
39	100-1668	24	Screw-Flange
40	99-2724-03	1	Plate-Cover
41	99-2745	1	Gasket
42	283-71	2	Pin-Lynch
43	99-2740	10	Bushing-Tension
45	3256-47	4	Washer-Flat
46	3296-39	4	Nut-Lock, NI
47	100-4617	2	Adapter-Hydraulic
47:1	237-80	1	O-Ring

* Not illustrated

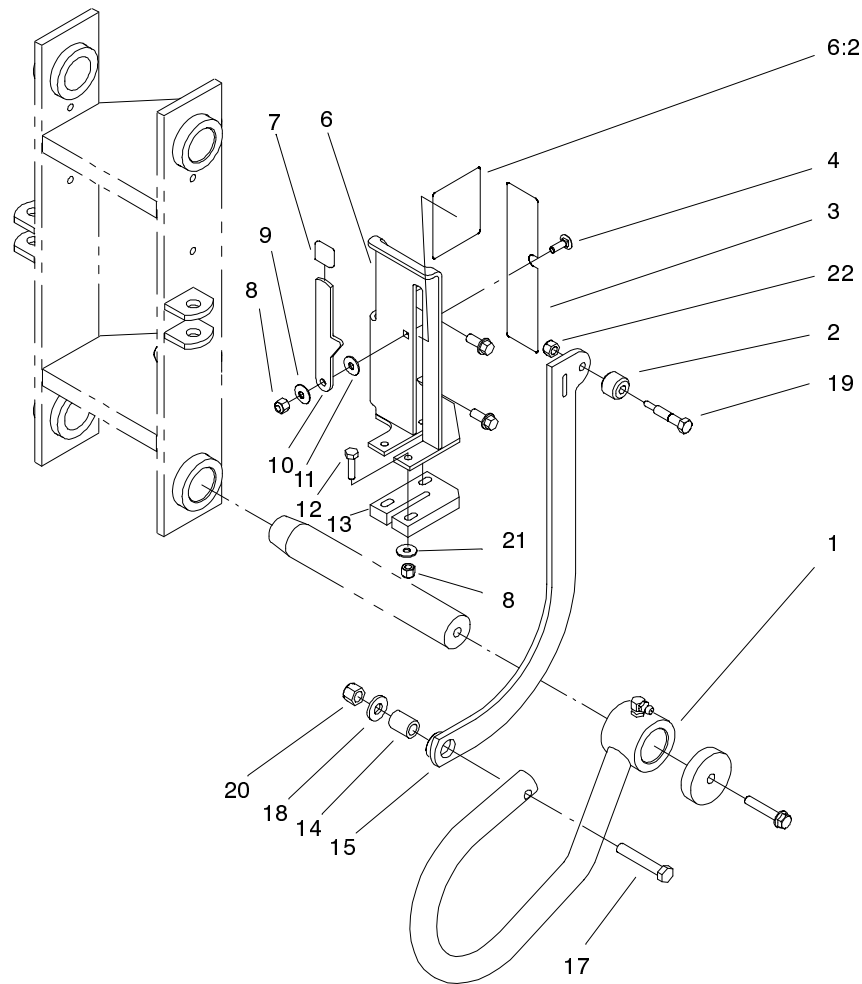


Sheet No.: 4

Indicating Lever Assembly

Ref. No.	Part No.	Qty.	Description
1	99-8644-03	1	Rod ASM
2	100-1657	1	Nylon-Stop
3	99-8609	1	Decal-Indicator
4	3229-28	1	Screw-CARR
6	100-1665	1	Plate-Indicator
6:2	100-4650	1	Decal-Warning
7	100-1655	1	Grip-Handle
8	3296-16	4	Nut-Lock, NI
9	3290-436	1	Washer-Belleville
10	100-1653-03	1	Lever-Indicator
11	3290-388	1	Washer
12	321-8	3	Screw-HH
13	100-1652	1	Block-Bearing
14	100-1654	1	Spacer
15	100-1667-03	1	Indicator Bar ASM
17	323-47	1	Screw-HH
18	3256-3	1	Washer-Flat
19	100-1656	1	Screw-Special
20	3296-39	1	Nut-Lock, NI
21	3256-2	3	Washer-Flat
22	3296-47	1	Nut-Lock, NI
*99	3290-468	2	Pin-Cotter

* Not illustrated

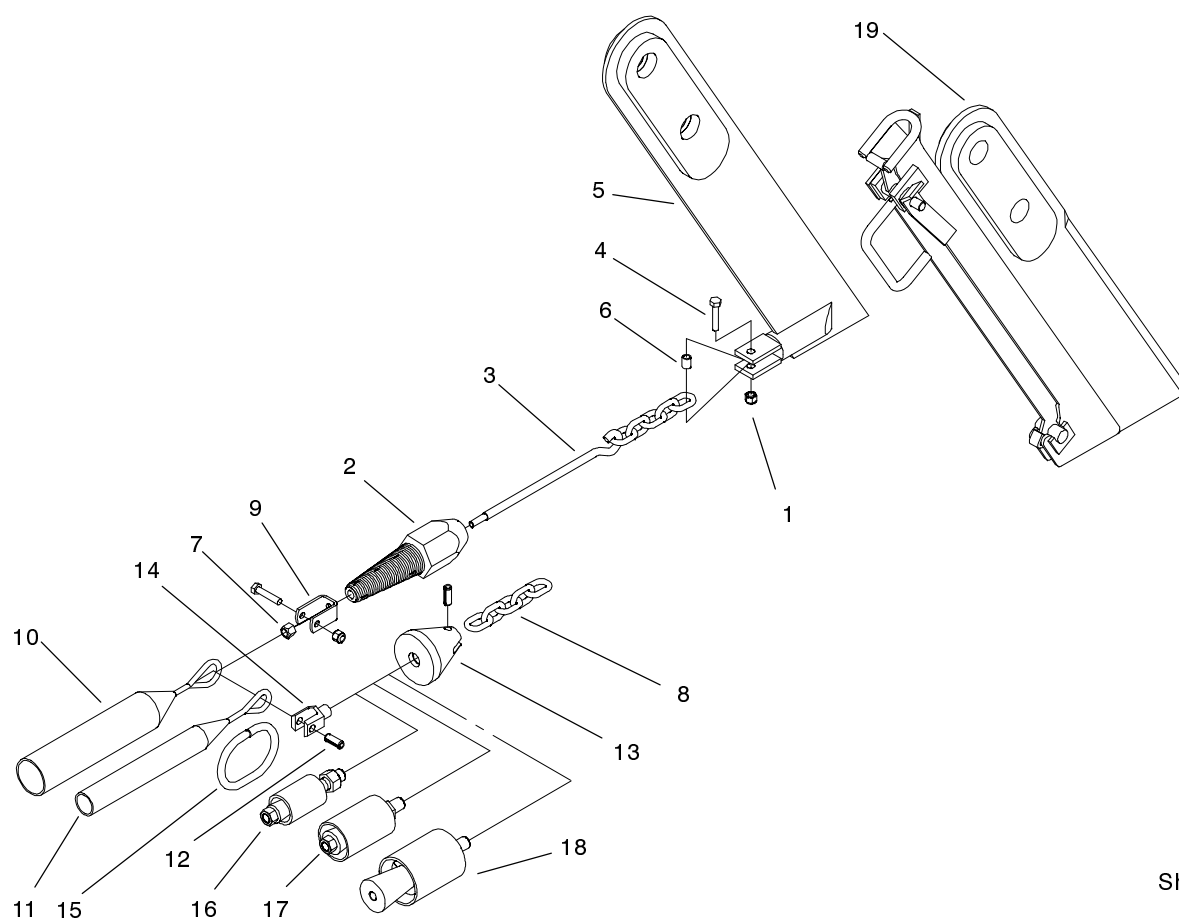


Sheet No.: 5

Optional Pullers and Blades

Ref. No.	Part No.	Qty.	Description
1	3296-69	1	Nut-Lock NI
2	104-0646	1	Puller-Pipe
3	100-0608	1	Chain ASM
4	322-7	1	Screw-HH
5	99-2682-03	1	Blade ASM 1/4"x 12"
5	99-8600-03	1	Blade ASM 1/2" X18"
5	99-8647-03	1	Blade ASM 3/8"x18"
6	99-8611	1	Spacer
7	3296-39	1	Nut-Lock, NI
8	99-8631	1	Chain
9	100-1664	1	Clevis
10	100-1662	1	Basket-Grip
11	100-1661	1	Basket-Grip
12	32121-41	2	Pin-Roll
13	100-6337	1	Bullet-Puller
14	100-6338	1	Adapter-Chain
15	100-0609	1	Link-Wire
16	100-6285	1	Puller ASM 1 Inch
17	100-6290	1	Puller ASM 1.5 Inch
18	100-6294	1	Puller ASM 2 Inch
19	104-0640	1	Chuted Blade ASM

Ref. No.	Part No.	Qty.	Description

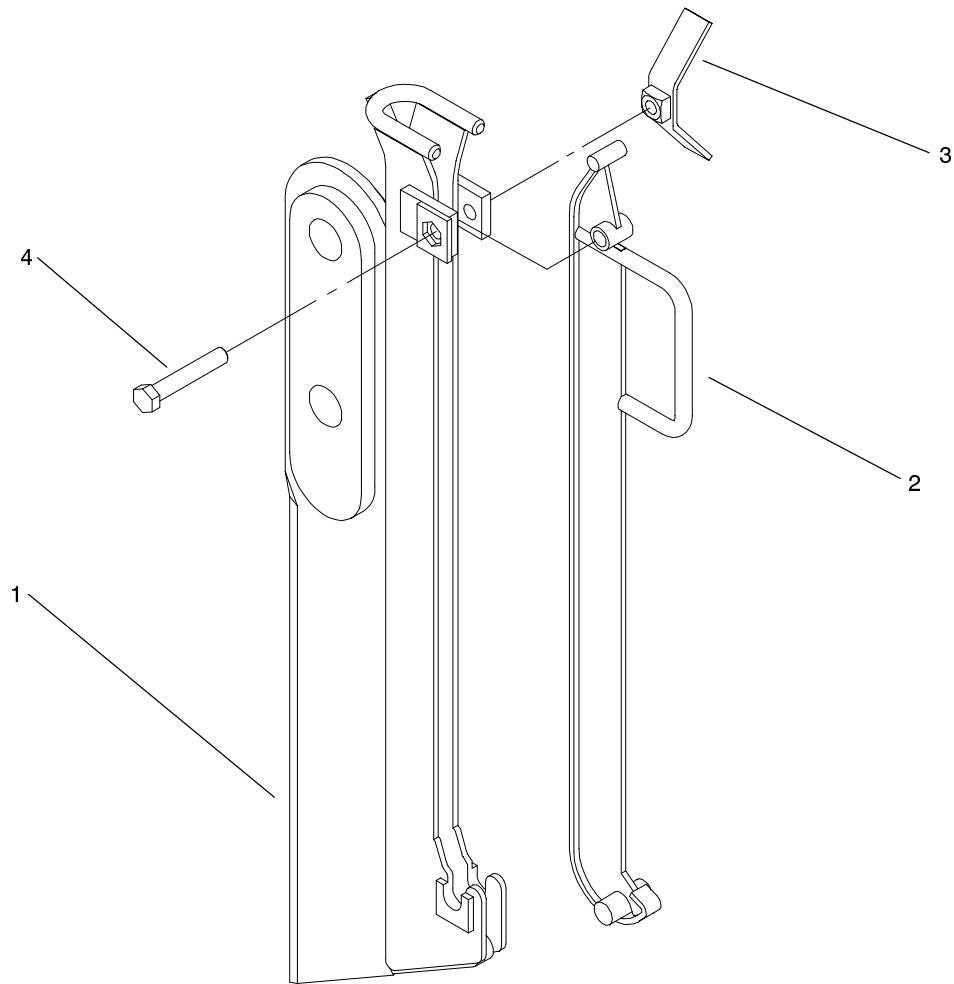


Sheet No.: A4

Optional Chuted Blade Assembly No. 104-0640

Ref. No.	Part No.	Qty.	Description
☆1		1	Chuted Blade ASM
1	104-2664	1	Blade-Chuted
2	104-2665	1	Guide-Blade
3	104-2666	1	Nut-Blade
4	325-12	1	Screw-HH

☆ Not serviced

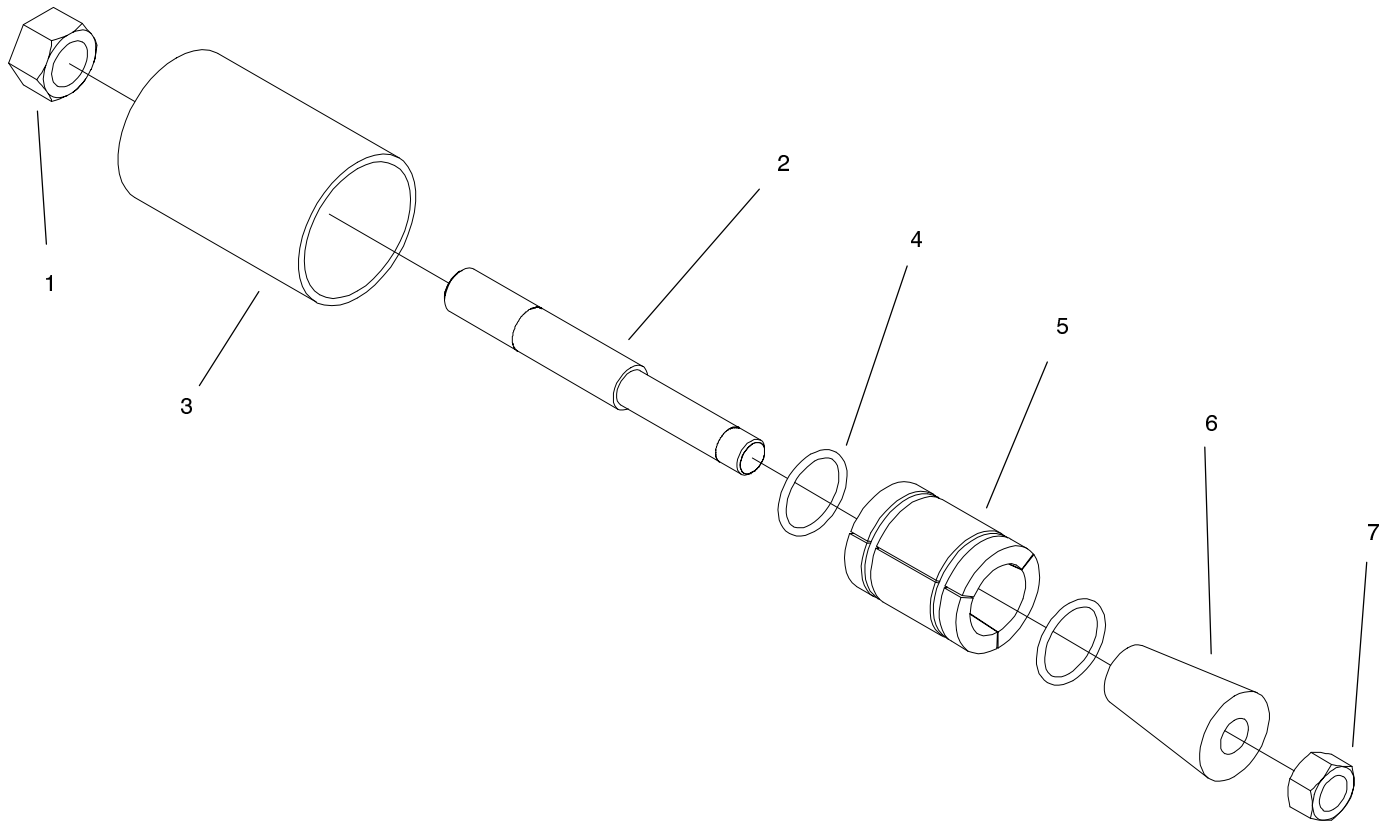

Sheet No.: A2

Puller Assembly No. 100-6290

Ref. No.	Part No.	Qty.	Description
1	3219-6	1	Nut-Hex
2	100-6286	1	Rod-Puller
3	100-6293	1	Grip-Outer
4	237-179	2	O Ring
5	100-6292	3	Grip-Inner
6	100-6291	1	Cone-Puller
7	3219-5	1	Nut-Hex

Ref. No.	Part No.	Qty.	Description

