



Form No. 3411-468 Rev E

Count on it.

Parts Catalog

GrandStand® Multi Force® Mower With 60in TURBO FORCE® Cutting Unit

Model No. 74523—Serial No. 400000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

60 Inch Deck Assembly 4

Deck Decal Assembly No. 127-1941 6

Spindle Assembly No. 127-0560 8

Deflector Assembly No. 120-2451 10

Ground Drive Assembly 12

LH Transaxle Assembly No. 136-4103 14

RH Transaxle Assembly No. 136-4102 16

Motion Control Assembly 18

Control Handle Assembly No. 132-5157 20

Control Handle Assembly No. 132-5158 22

Parking Brake Assembly 24

Deck Lift Assembly 26

HOC Lever Assembly No. 130-1755 28

Frame Assembly 30

Wheel, Tire and Bearing Assembly No. 130-4558 32

Platform Assembly 34


Engine Assembly 36

Fuel Tank Assembly 38

Wire Harness Assembly 40

Attachments and Accessories 42


60 Inch Deck Assembly

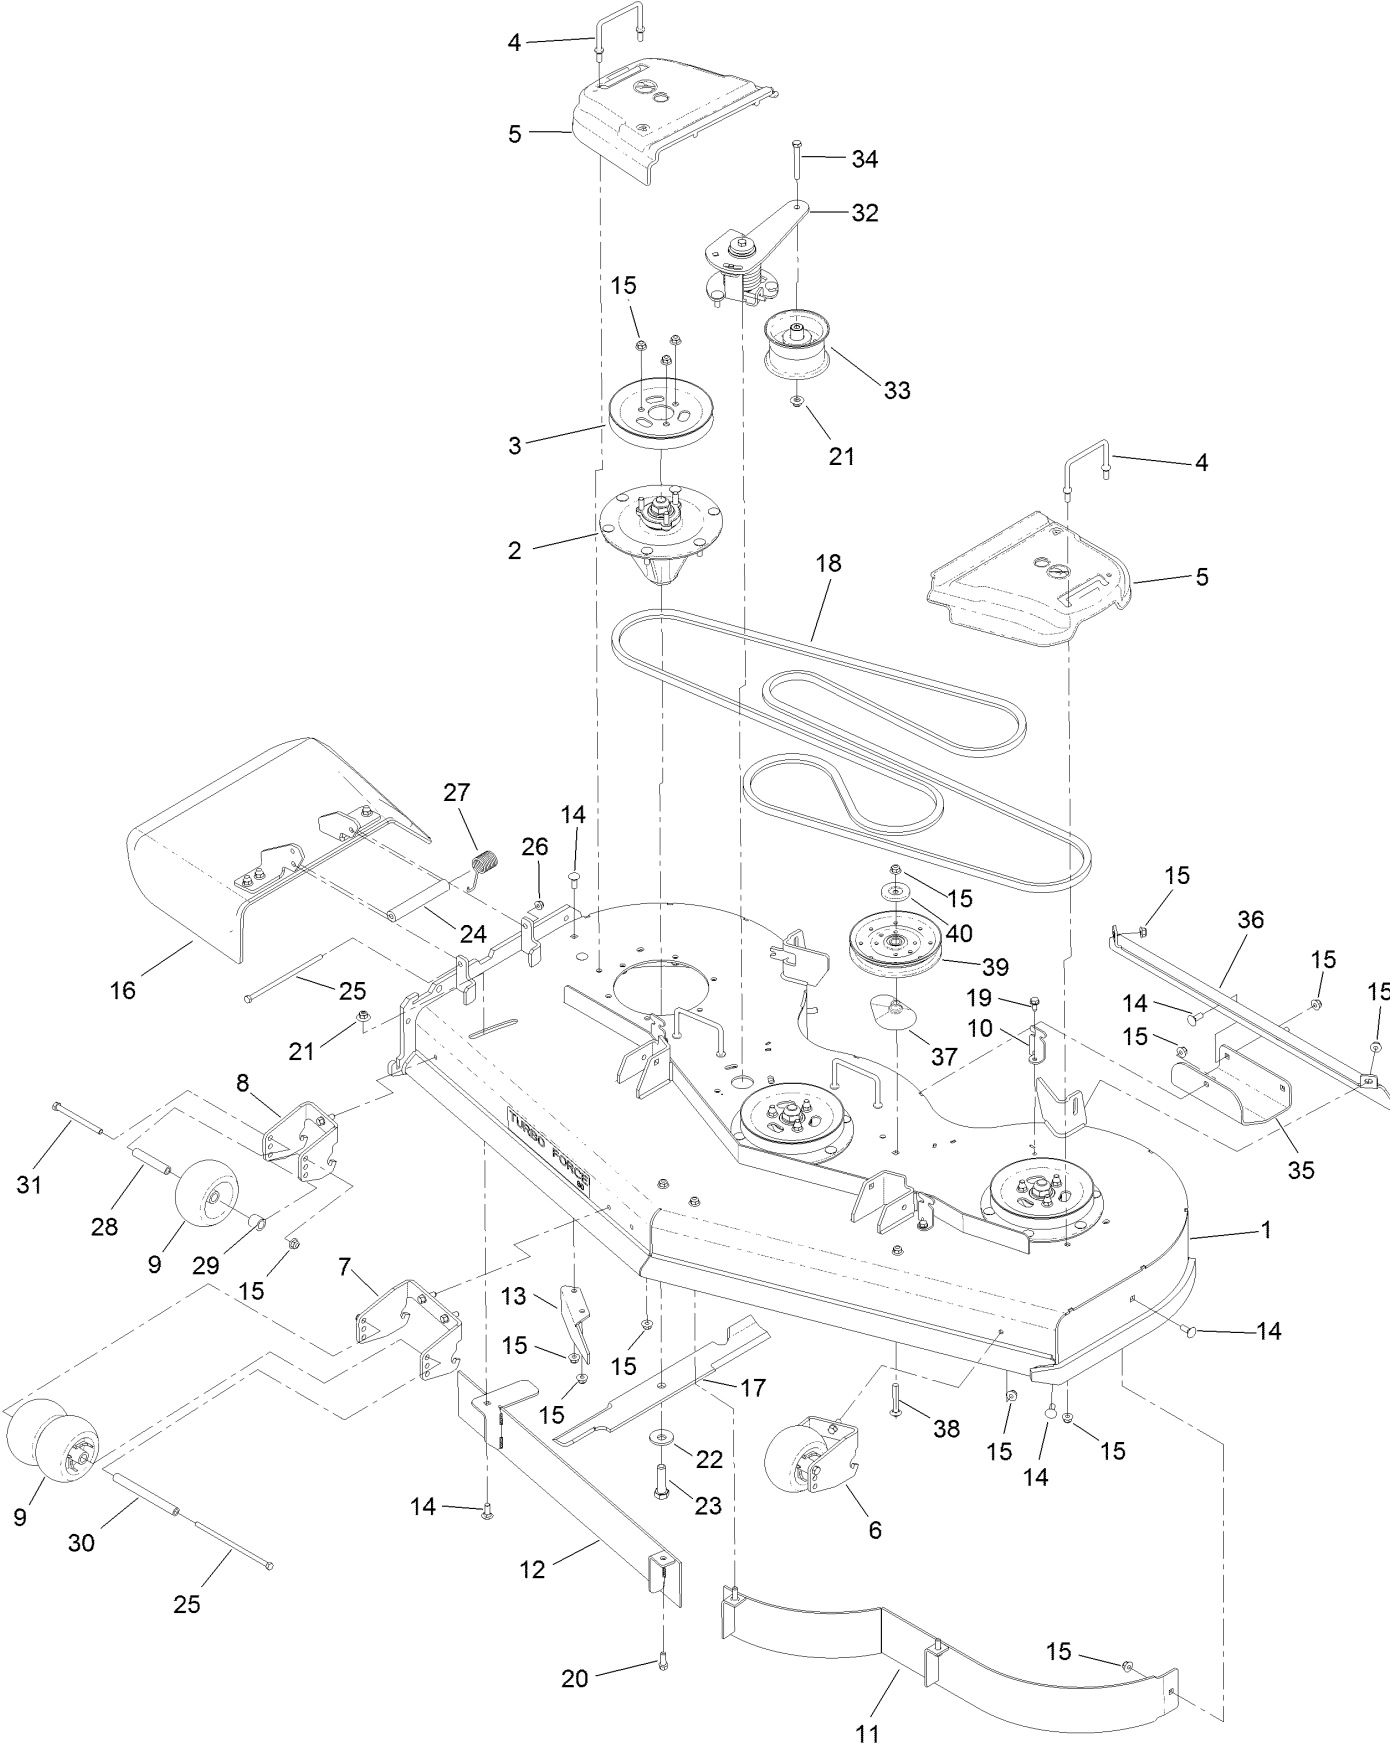

60 Inch Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	127-1941	1	Deck ASM	21	109-6658	2	Nut-Flange, NI
2	127-0560	3	Spindle ASM	22	103-0865	3	Washer-Blade Bolt, Heavy
3	120-6434	3	Pulley	23	51-4060	3	Screw-Blade
4	109-6982	4	Wireform-Cover	24	105-4622	1	Spacer
5	109-6936	2	Cover-Belt, LH	25	322-50	2	Screw-HH
6	114-5204-01	1	Bracket-Wheel, LH	26	104-8300	2	Nut-HF, NI
7	114-5208-01	1	Bracket-Wheel, Center	27	108-4052	1	Spring-Torsion
8	114-5213-01	1	Bracket-Wheel, RH	28	98-7912	2	Tube-Spanner
9	1-603299	4	Roller-Scalp, Anti	29	104-0892	2	Spacer-Axle, Rear
10	117-5758-03	3	Bracket-Cover	30	98-5967	1	Spacer-Wheel
11	117-9701-01	1	Baffle ASM	31	323-23	2	Screw-HH
12	121-1788-01	1	Baffle ASM	32	130-1812	1	Torsion Idler ASM
13	130-6594-01	1	Baffle-Discharge	33	127-1971	1	Pulley-Idler
14	3231-2	9	Bolt-CARR	34	323-14	1	Screw-HH
15	104-8301	56	Nut-HF, NI	35	114-1908-01	1	Skid
16	120-2451	1	Deflector ASM	36	130-6647-01	1	Bracket-Skid
17	105-7718-03	3	Blade-Hi Flow	37	109-2872	1	Spacer-Pulley
18	131-1123	1	Belt-V	38	3231-44	1	Screw-CARR
19	32144-70	3	Screw-HWHTF	39	132-5155	1	Idler-Pulley, Flat
20	92-1624	7	Screw-HWH	40	132-5153	1	Shield-Dust


Deck Decal Assembly No. 127-1941

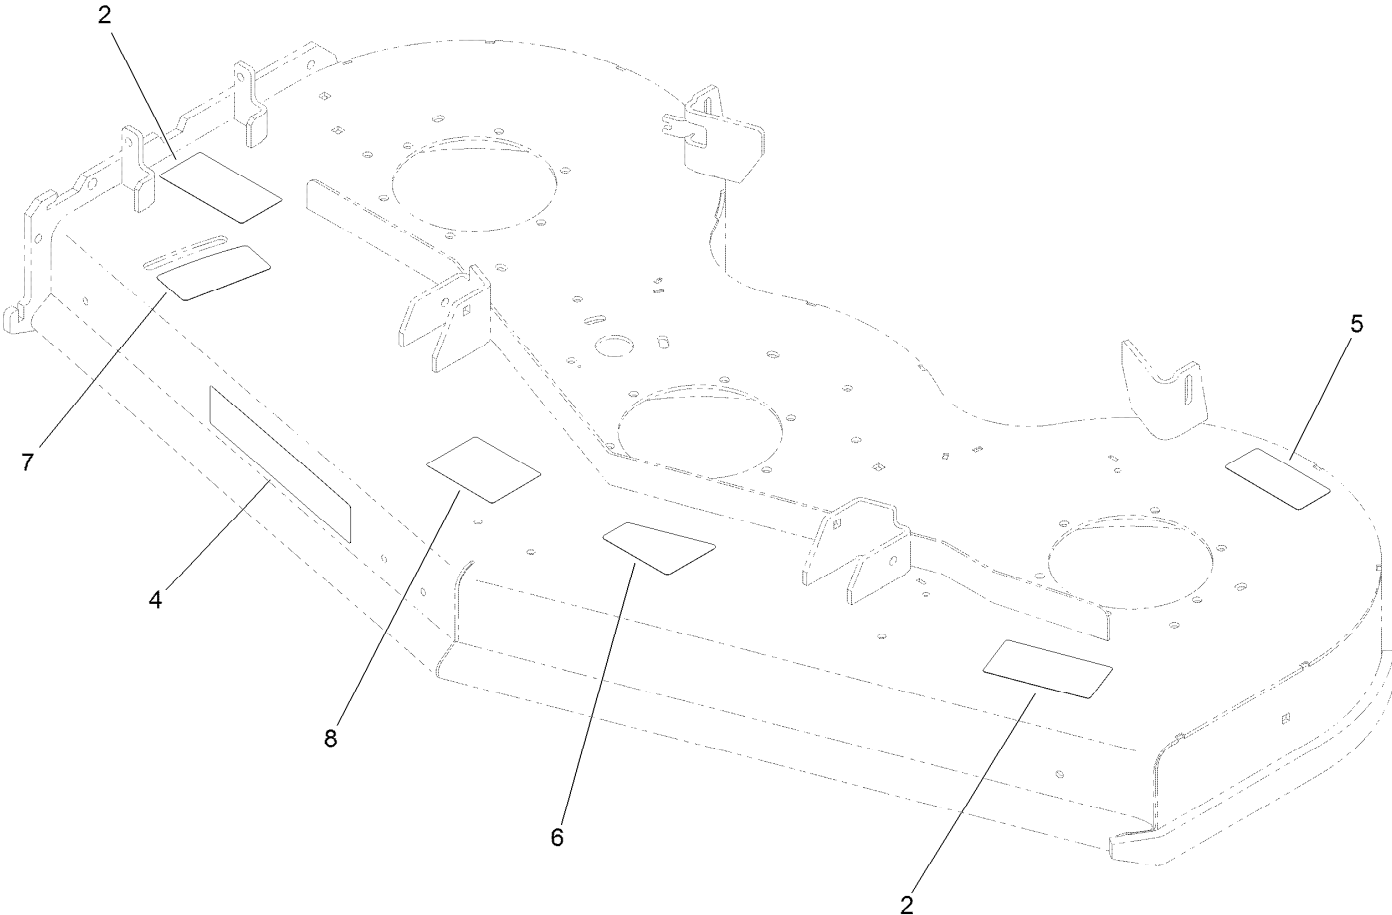

Deck Decal Assembly No. 127-1941 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	133-4604	2	Decal-Danger	6	131-3507	1	Decal-Belt, Tension (CE)
4	107-1619	1	Decal	7	131-1180	1	Decal-Adjustment, Baffle
5	93-7818	1	Decal-Torque, Blade Bolt	8	112-3858	1	Decal-Scalp, Anti

Spindle Assembly No. 127-0560

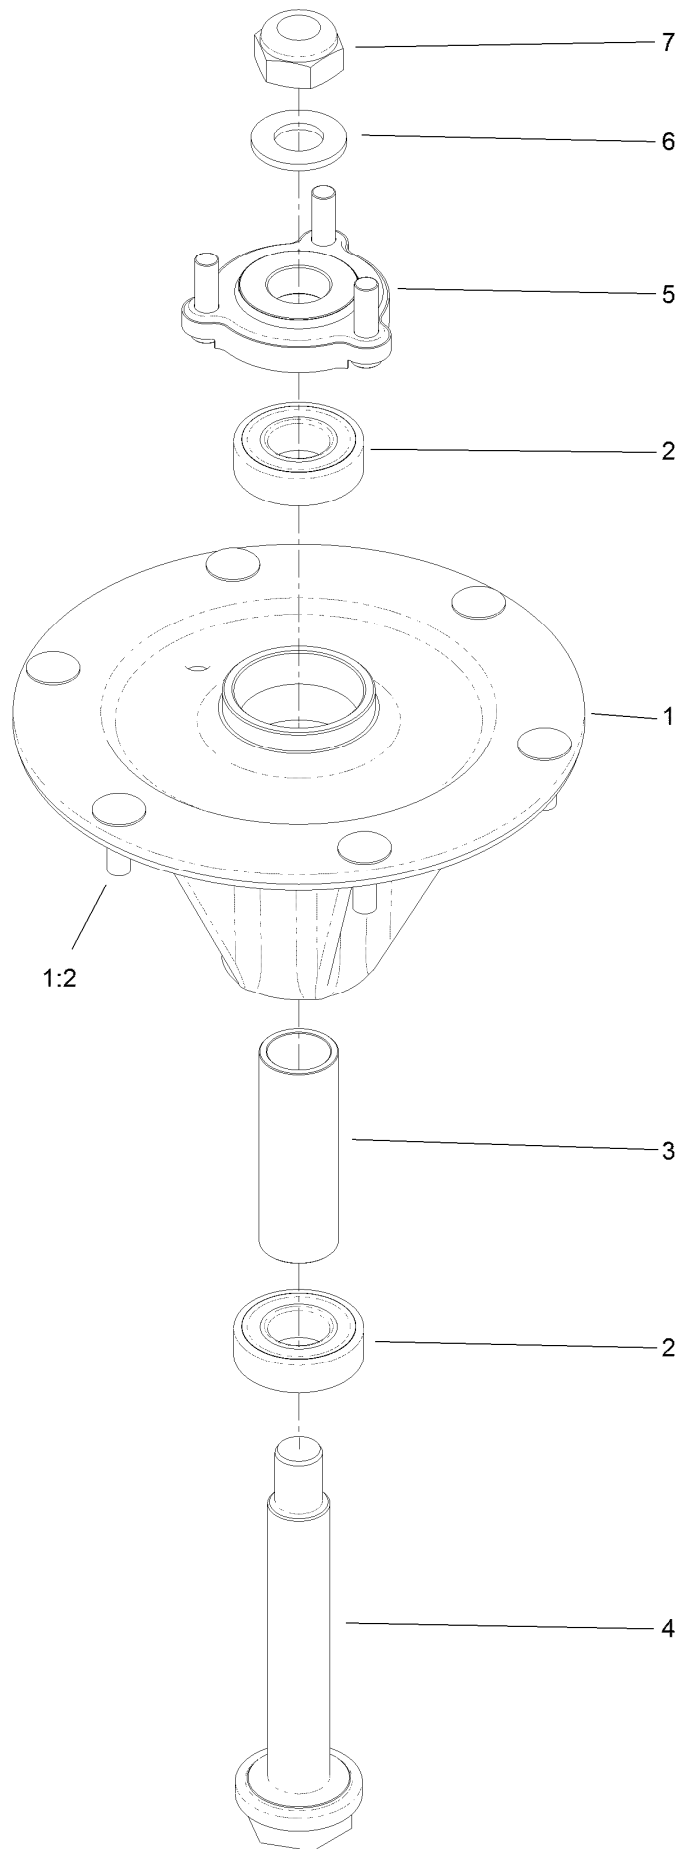


Spindle Assembly No. 127-0560 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Spindle Housing ASM W/Studs ●
1:2	114-8195	6	Bolt-Neck, Ribbed
2	116-0720	2	Bearing-Ball
3	127-0554	1	Spacer-Bearing

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	127-0556	1	Shaft-Spindle, Ball Bearing
5	127-0557	1	Hub-Spindle (W/Studs)
6	92-5836	1	Washer
7	3296-67	1	Nut-Lock, NI

● Not serviced separately

Deflector Assembly No. 120-2451

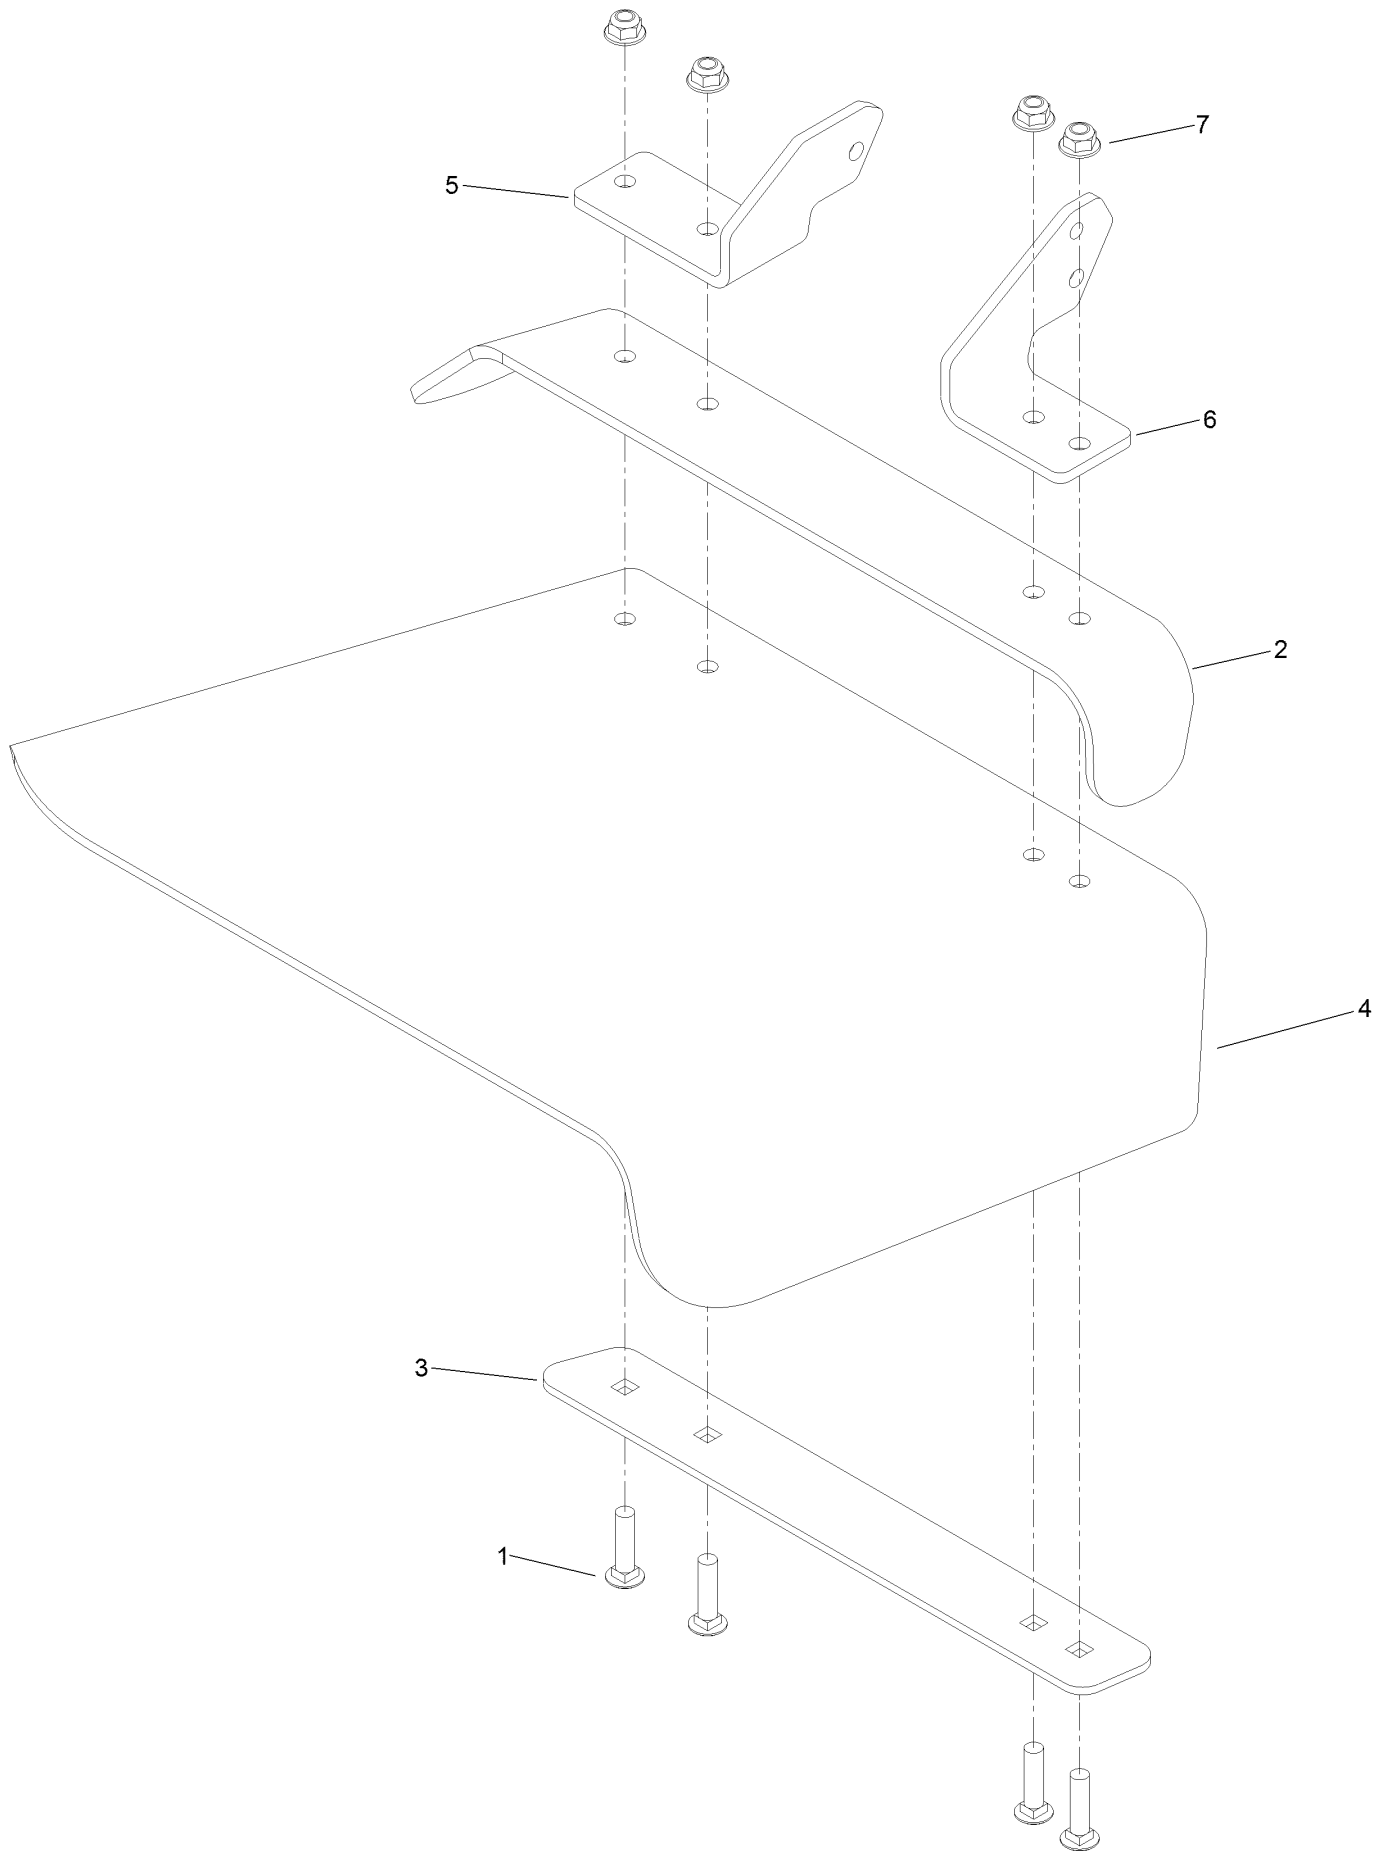


Deflector Assembly No. 120-2451 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	3231-4	4	Screw-CARR
2	106-3246-01	1	Deflector
3	106-3248-03	1	Strap-Discharge
4	110-0759	1	Deflector-Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	108-4059-01	1	Plate-Hinge, Rear
6	106-3253-01	1	Plate-Hinge, Front
7	104-8301	4	Nut-HF, NI


Ground Drive Assembly

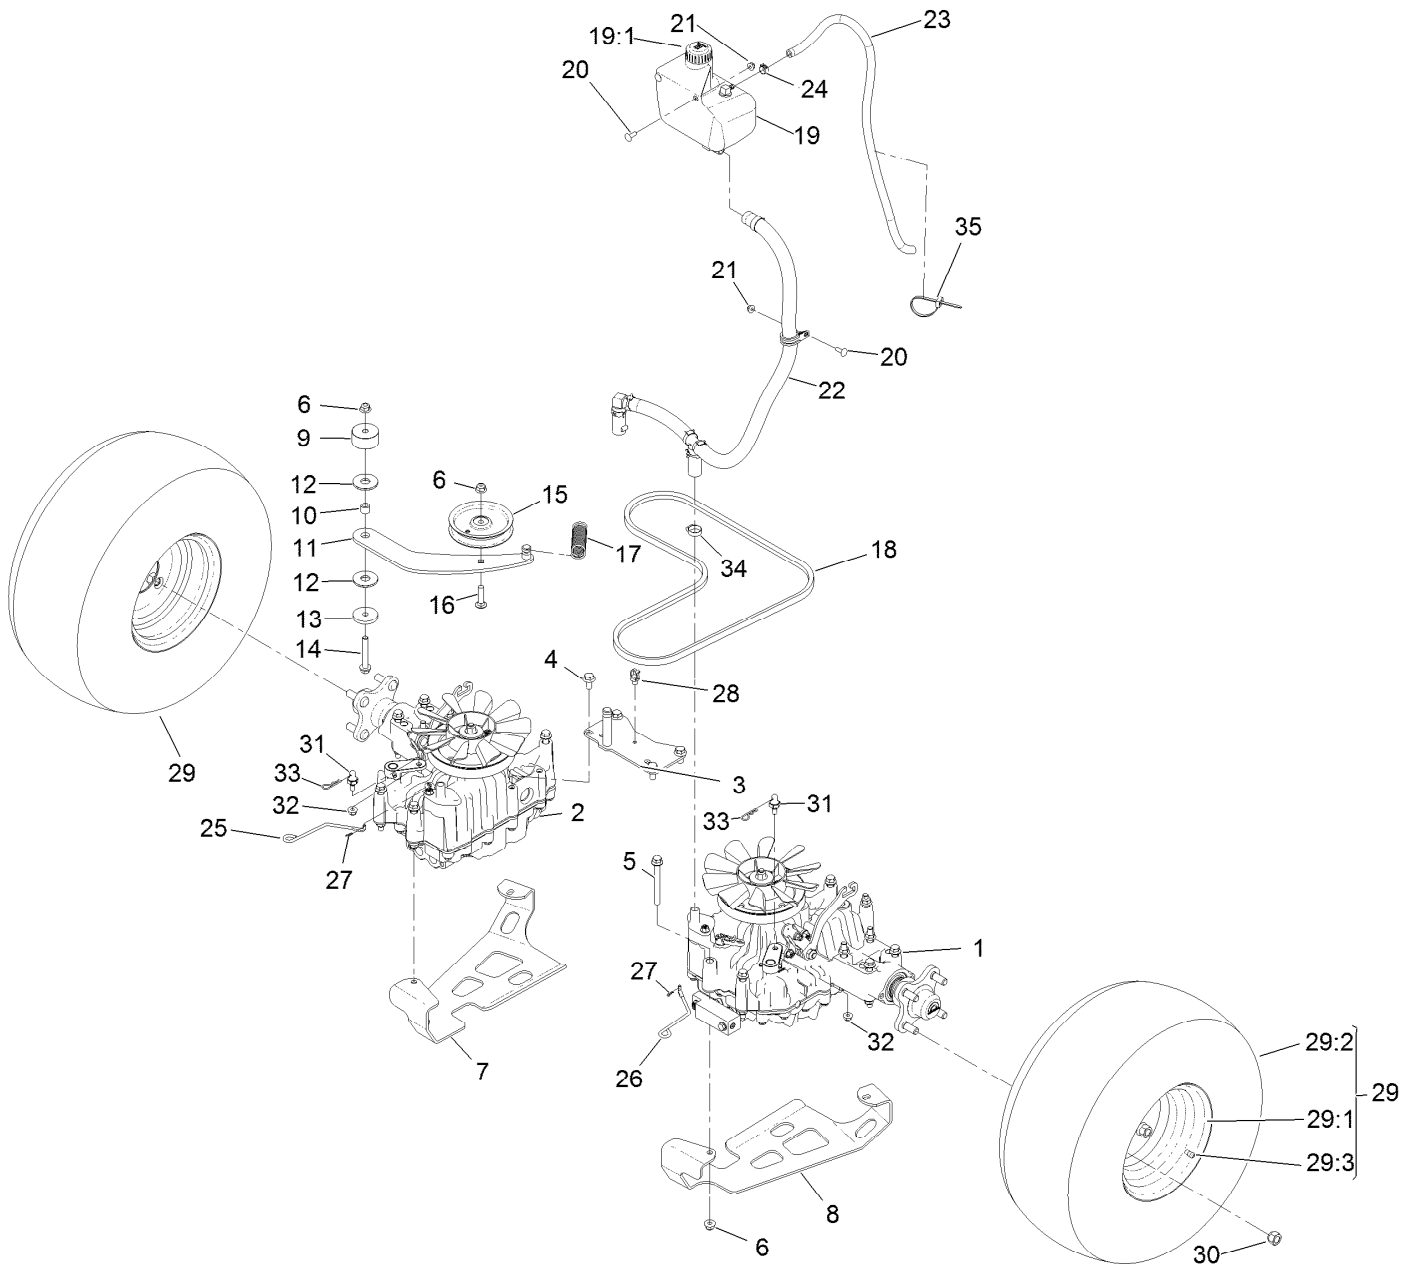

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-4103	1	LH Transmission ASM	19:1	133-8677	1	Cap-Vented
2	136-4102	1	RH Transmission ASM	20	3229-25	3	Screw-CARR
3	131-1131-03	1	Support-Transaxle	21	104-7201	3	Nut-HF
4	93-2569	4	Screw-HHF	22	131-7427	1	HYD Hose ASM
5	116-4701	16	Screw-HHF	23	109-0309	1	Hose-Fuel
6	104-8301	18	Nut-HF, NI	24	92-2379	1	Clamp-Hose
7	131-7405-03	1	Plate-Skid, Transmission (RH)	25	131-7469	1	Rod-Bypass, RH
8	131-7404-03	1	Plate-Skid, Transmission (LH)	26	131-7470	1	Rod-Bypass, LH
9	117-5351	1	Spacer	27	108-2992	2	Pin-Hair
10	1-413088	1	Bushing-Lever, Lift	28	32180-030	1	Clip-Tie
11	131-1175	1	Arm-Idler	29	130-4561	2	Wheel And Tire ASM
12	114-0463	2	Washer-Friction, Composite	29:1	130-4564	1	Rim-8 Inch, Gray
13	110-9981	1	Washer-Plain	29:2	120-6466	1	Tire
14	3234-39	1	Screw-HHF	29:3	232-27	1	Stem-Valve
15	93-1622	1	Pulley-Idler	30	242-50	8	Nut-Lug
16	3231-4	1	Screw-CARR	31	132-7584	2	Spacer-Hex
17	132-1184	1	Spring-Extension	32	104-8300	2	Nut-HF, NI
18	131-1124	1	Belt-V	33	3290-250	2	Pin-Cotter
19	132-1135	1	Tank-HYD	34	2412-141	2	Clamp-Drive, Worm
				35	3290-378	1	Tie-Cable

LH Transaxle Assembly No. 136-4103

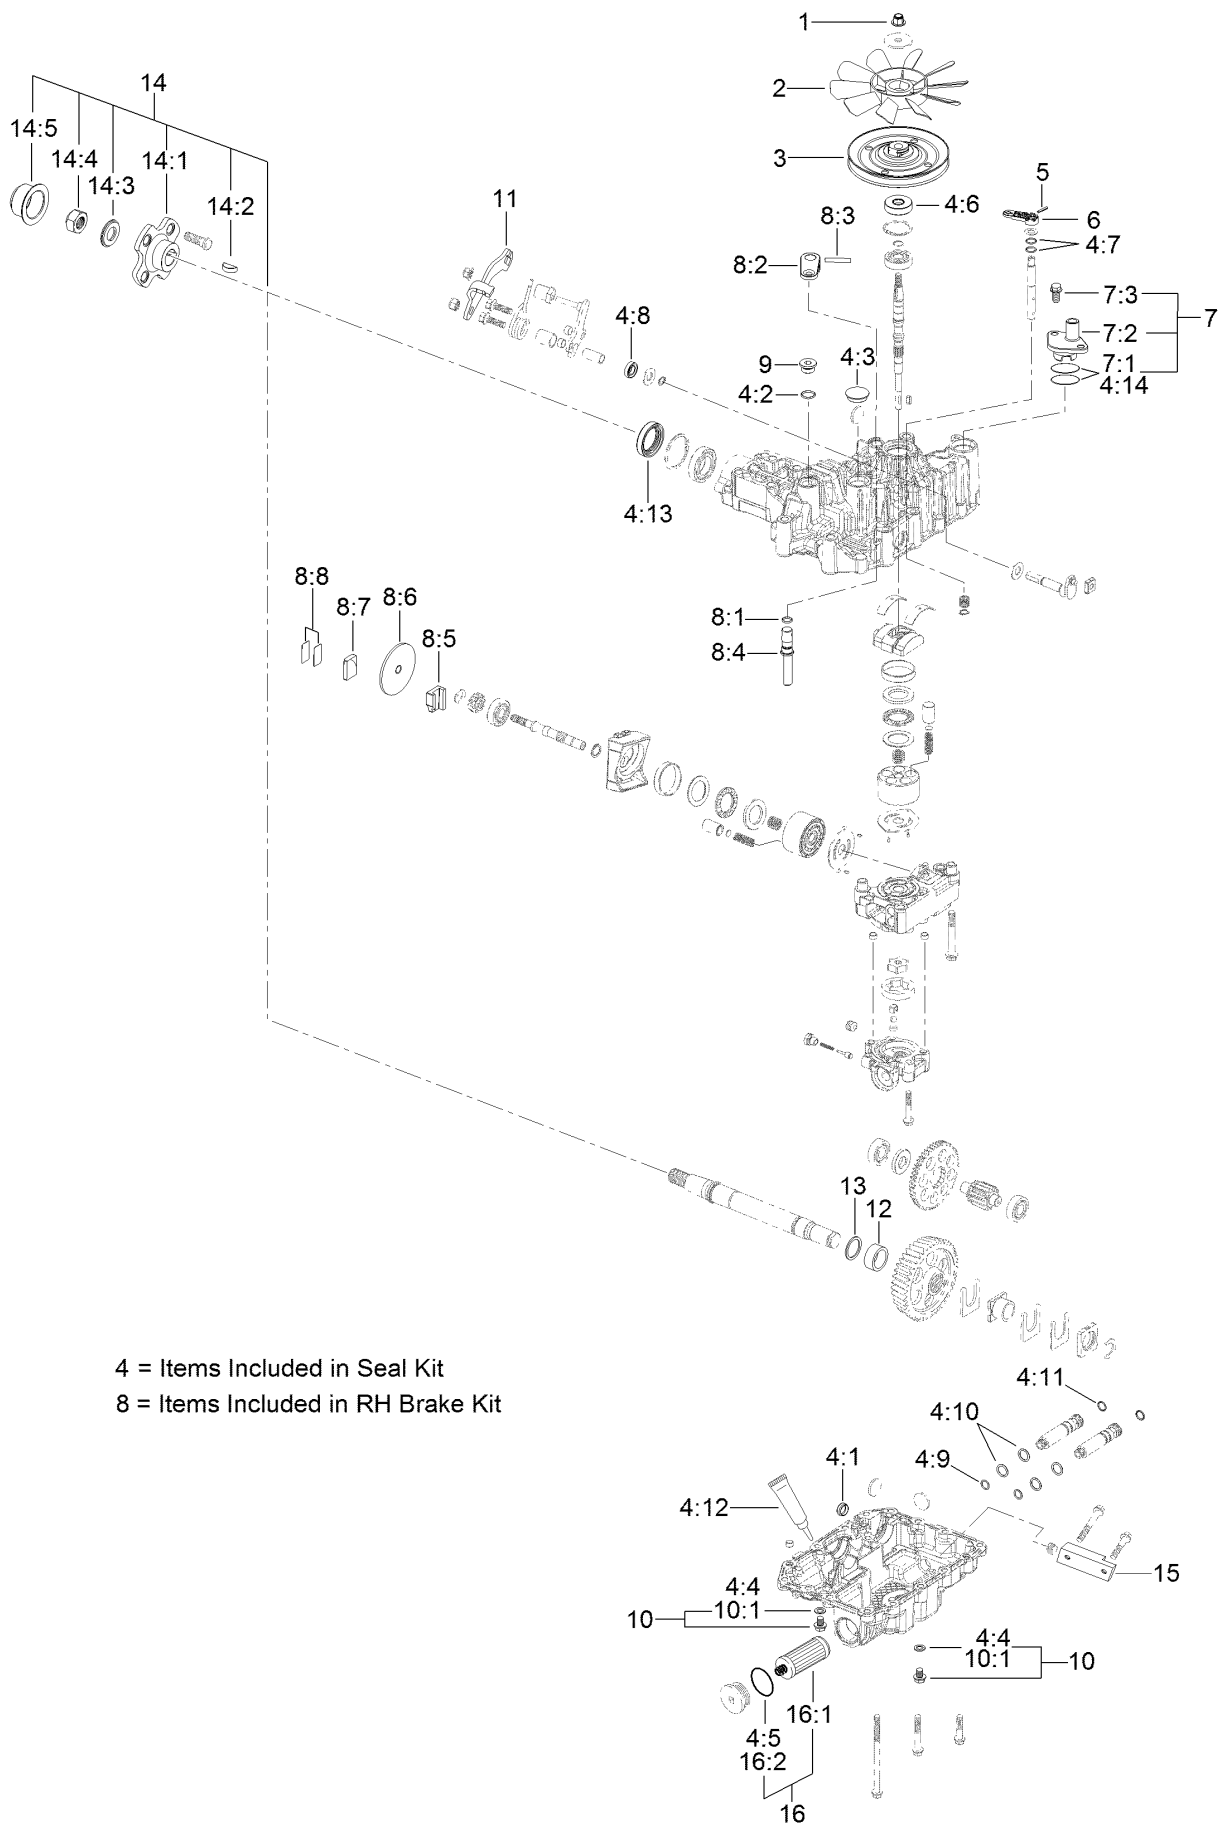


LH Transaxle Assembly No. 136-4103 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-4737	1	Nut-Lock	8:1		1	O-Ring ●
2	132-4738	1	Fan	8:2		1	Arm-Brake ●
3	132-4739	1	Pulley	8:3		1	Pin-Roll ●
4	136-5407	1	Seal Kit	8:4		1	Shaft-Brake ●
4:1	100-6926	1	Cap-Sealing	8:5		1	Actuator-Brake ●
4:2	132-4736	1	O-Ring	8:6		1	Disc-Brake ●
4:3		1	Cap-Seal ●	8:7		1	Shoe-Brake ●
4:4		2	Seal-Washer ●	8:8		1	Shim Kit ●
4:5		1	Packing ●	9	132-4735	1	Cap-Oil
4:6	132-4744	1	Seal-Shaft	10	132-4746	1	Drain Bolt Kit
4:7		2	O-Ring ●	10:1		1	Seal-Washer ●
4:8		1	Seal-Oil ●	11	136-5401	1	Lever-Control, RH
4:9		2	O-Ring ●	12	132-4747	1	Sleeve
4:10		4	O-Ring ●	13	132-4748	1	Washer
4:11		2	O-Ring ●	14	136-5406	1	Axle Flange Kit
4:12	121-0959	1	Sealant	14:1		1	Flange ●
4:13	132-4745	1	Seal-Axle	14:2		1	Key-Woodruff ●
4:14		1	Packing ●	14:3		1	Washer ●
5	104-3265	1	Pin	14:4		1	Nut-Lock ●
6	132-4700	1	Lever-Bypass	14:5		1	Nut-Cap ●
7	133-1461	1	Expansion Fitting Kit	15	136-5408	1	Manifold
7:1	136-4051	2	Seal-Fitting, Expansion	16	132-4743	1	Hydro Filter Kit
7:2		1	Fitting ●	16:1	136-5409	2	Filter
7:3		1	Bolt-Flange ●	16:2	136-5410	2	O-Ring
8	133-1468	1	Brake Kit,Left				

● Not serviced separately

RH Transaxle Assembly No. 136-4102


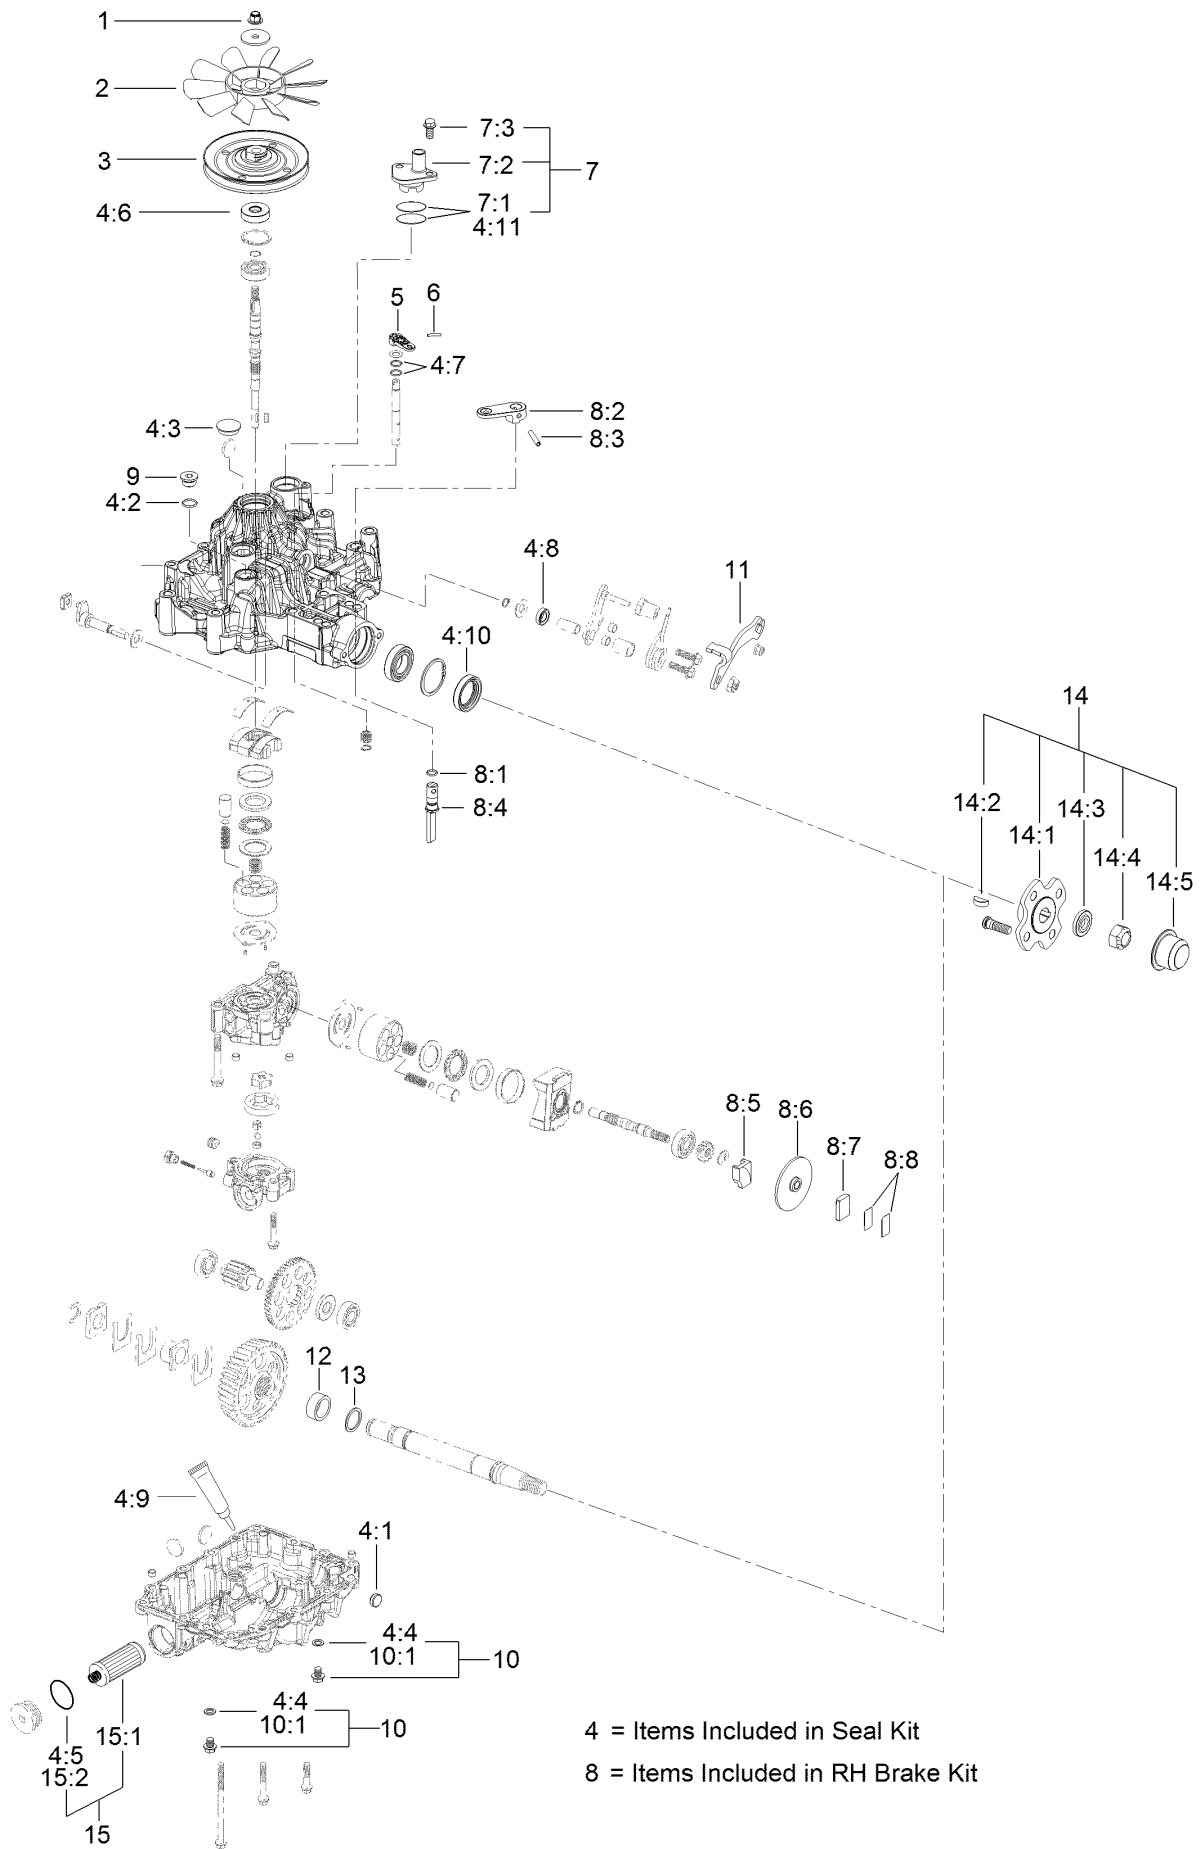


RH Transaxle Assembly No. 136-4102 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-4737	1	Nut-Lock	8:2		1	Arm-Brake ●
2	132-4738	1	Fan	8:3		1	Pin-Roll ●
3	132-4739	1	Pulley	8:4		1	Shaft-Brake ●
4	136-5402	1	Seal Kit	8:5		1	Actuator-Brake ●
4:1	100-6926	1	Cap-Sealing	8:6		1	Disc-Brake ●
4:2	132-4736	1	O-Ring	8:7		1	Shoe-Brake ●
4:3		1	Cap-Seal ●	8:8		1	Shim Kit ●
4:4		2	Seal-Washer ●	9	132-4735	1	Cap-Oil
4:5		1	Packing ●	10	132-4746	1	Drain Bolt Kit
4:6	132-4744	1	Seal-Shaft	10:1		1	Seal-Washer ●
4:7		2	O-Ring ●	11	136-5401	1	Lever-Control, RH
4:8		1	Seal-Oil ●	12	132-4747	1	Sleeve
4:9	121-0959	1	Sealant	13	132-4748	1	Washer
4:10	132-4745	1	Seal-Axle	14	136-5406	1	Axle Flange Kit
4:11		1	Packing ●	14:1		1	Flange ●
5	104-3265	1	Pin	14:2		1	Key-Woodruff ●
6	132-4700	1	Lever-Bypass	14:3		1	Washer ●
7	133-1461	1	Expansion Fitting Kit	14:4		1	Nut-Lock ●
7:1	136-4051	2	Seal-Fitting, Expansion	14:5		1	Nut-Cap ●
7:2		1	Fitting ●	15	132-4743	1	Hydro Filter Kit
7:3		1	Bolt-Flange ●	15:1	136-5409	2	Filter
8	133-1462	1	RH Brake Kit	15:2	136-5410	2	O-Ring
8:1		1	O-Ring ●				

● Not serviced separately


Motion Control Assembly

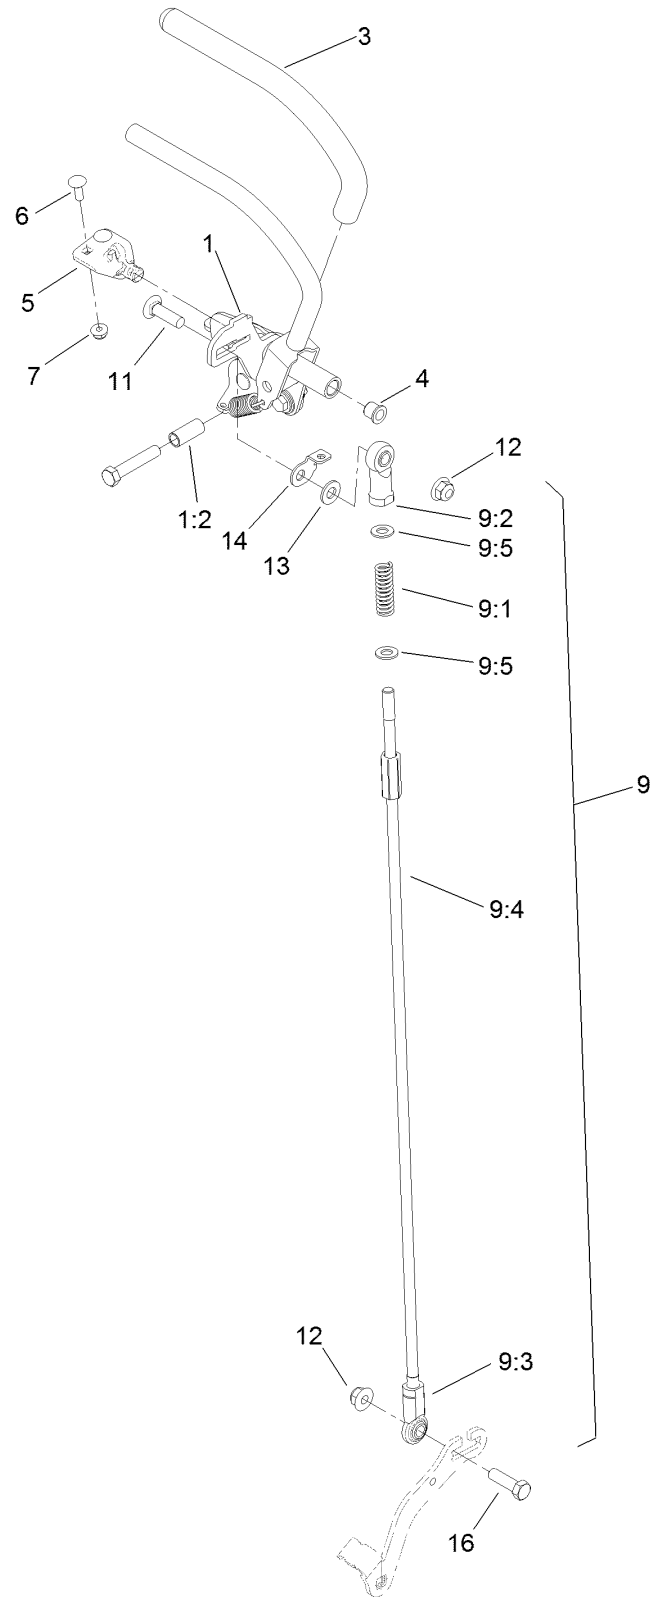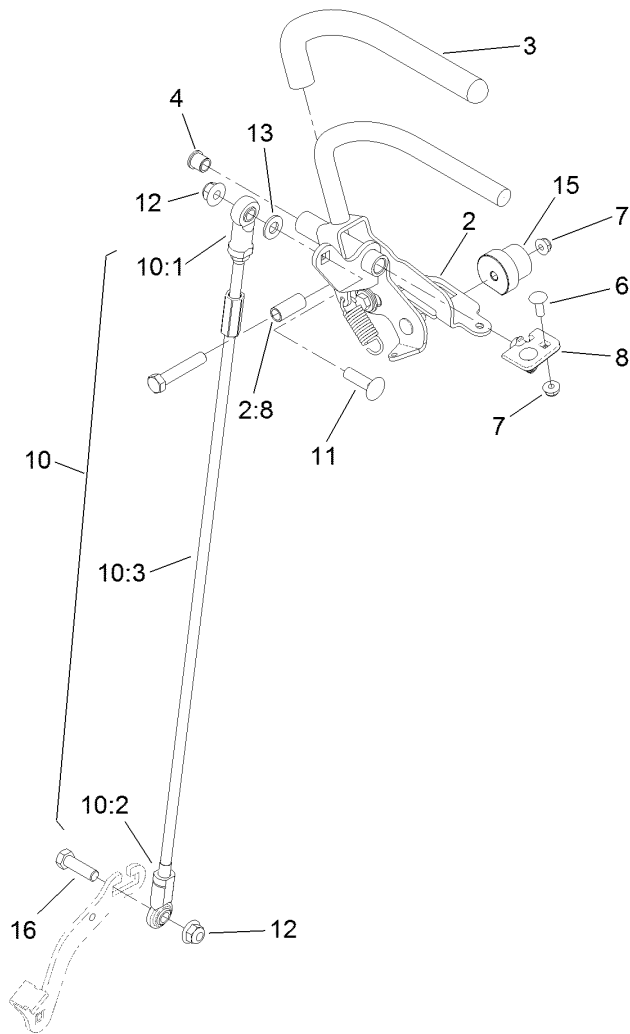

Motion Control Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5157	1	LH Control Handle ASM	9:3	103-1167	1	Joint-Ball End, LH
1:2	131-3562	1	Bearing-Sleeve	9:4	132-7515	1	Rod-Control
2	132-5158	1	RH Control Handle ASM	9:5	3256-45	2	Washer-Flat
2:8	131-3562	1	Bearing-Sleeve	10	130-1807	1	RH Control Rod ASM
3	119-0222	2	Grip	10:1	92-7008	1	End-Rod, Female
4	103-9928	2	Bearing	10:2	103-1167	1	Joint-Ball End, LH
5	120-3288	1	Tab-Pivot, LH	10:3	132-7515	1	Rod-Control
6	3229-1	4	Screw-CARR	11	3231-28	2	Screw-CARR
7	104-7201	6	Nut-HF	12	104-8301	4	Nut-HF, NI
8	120-3287	1	Tab-Pivot, RH	13	3256-24	2	Washer-Flat
9	130-1803	1	LH Control Rod ASM	14	132-7538	1	Bracket-Adjustment, Speed
9:1	1-603807	1	Spring-Return, Neutral	15	126-1499	2	Cam
9:2	92-7008	1	End-Rod, Female	16	323-7	2	Screw-HH

Control Handle Assembly No. 132-5157


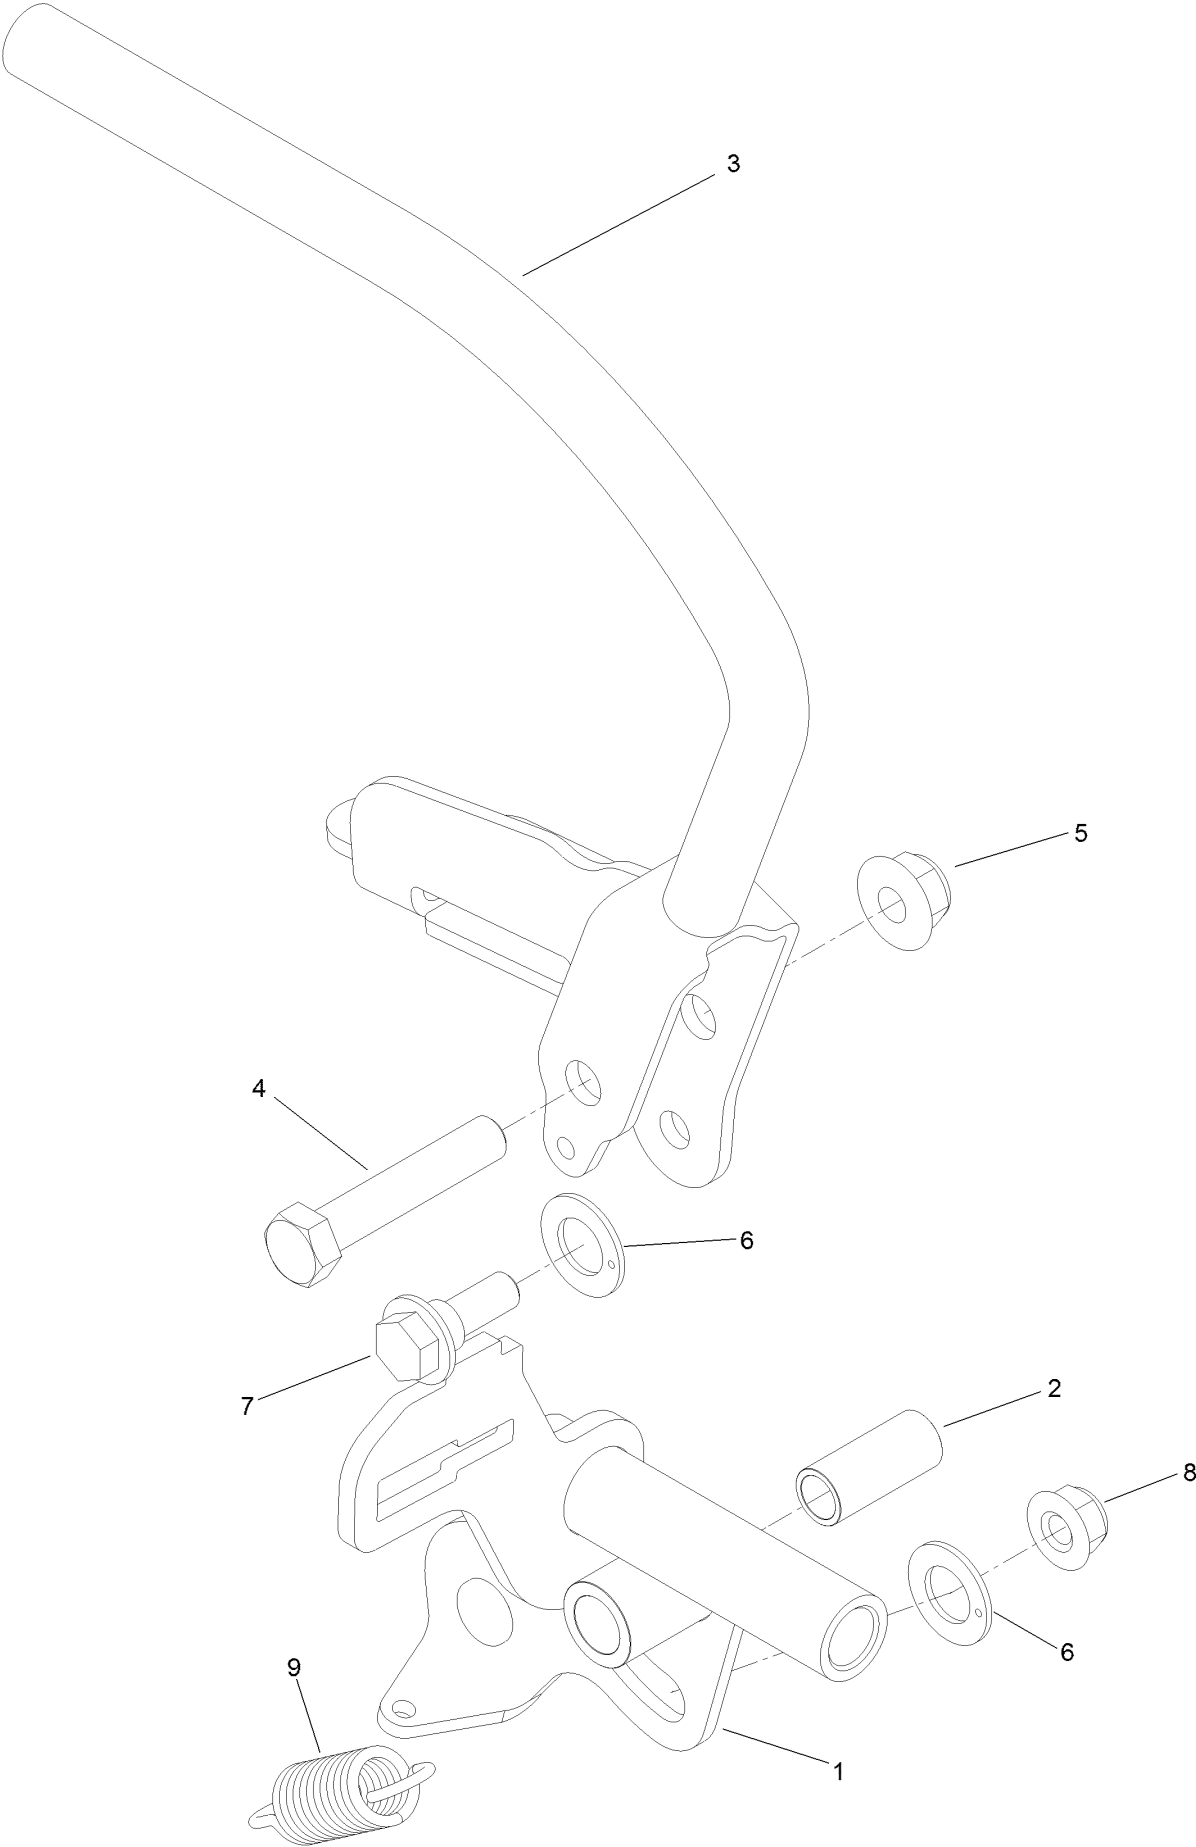


Control Handle Assembly No. 132-5157 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5115	1	Pivot-Control, Motion (LH)
2	131-3562	1	Bearing-Sleeve
3	132-5114-03	1	Lever-LH
4	323-10	1	Screw-HH
5	104-8301	1	Nut-HF, NI

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	110-7191	2	Washer-Thrust
7	116-2670	1	Screw-Shoulder
8	104-8300	1	Nut-HF, NI
9	132-5146	1	Spring-Extension

Control Handle Assembly No. 132-5158

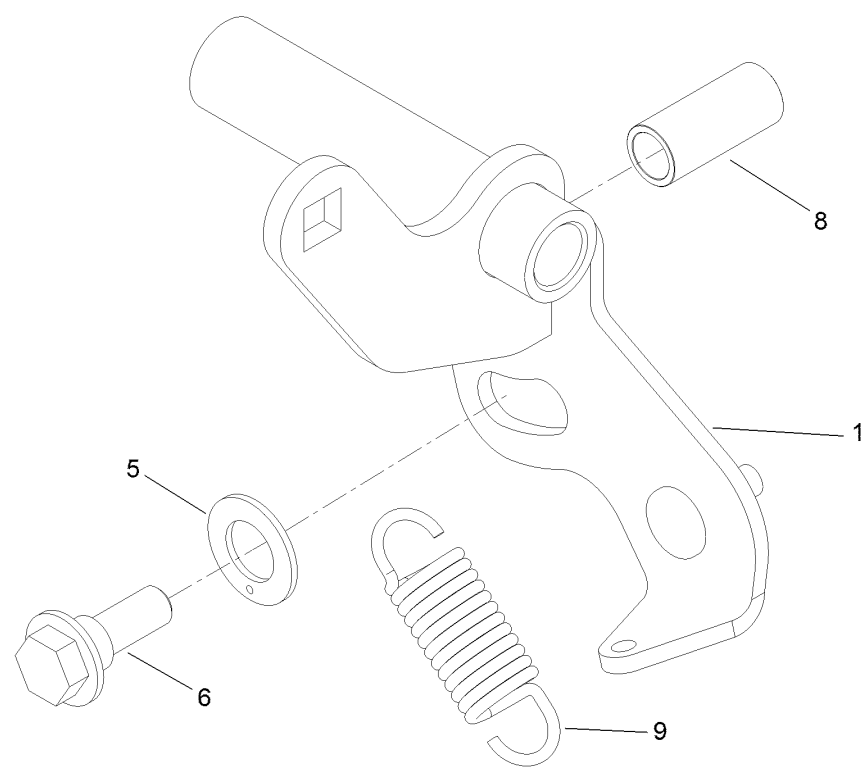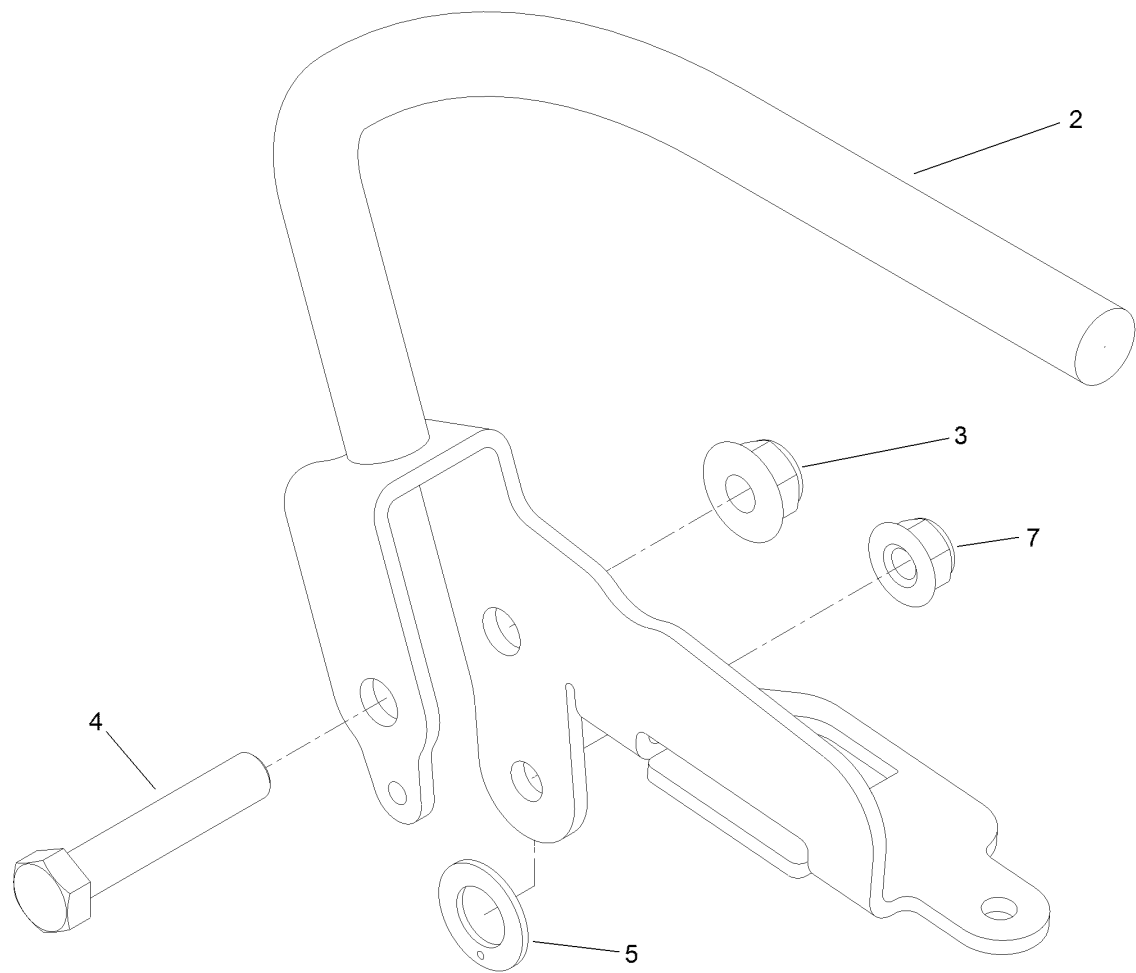


Control Handle Assembly No. 132-5158 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8490	1	Pivot-Control, Motion (RH)
2	130-1825-03	1	Lever-RH
3	104-8301	1	Nut-HF, NI
4	323-10	1	Screw-HH
5	110-7191	2	Washer-Thrust

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	116-2670	1	Screw-Shoulder
7	104-8300	1	Nut-HF, NI
8	131-3562	1	Bearing-Sleeve
9	132-5146	1	Spring-Extension


Parking Brake Assembly

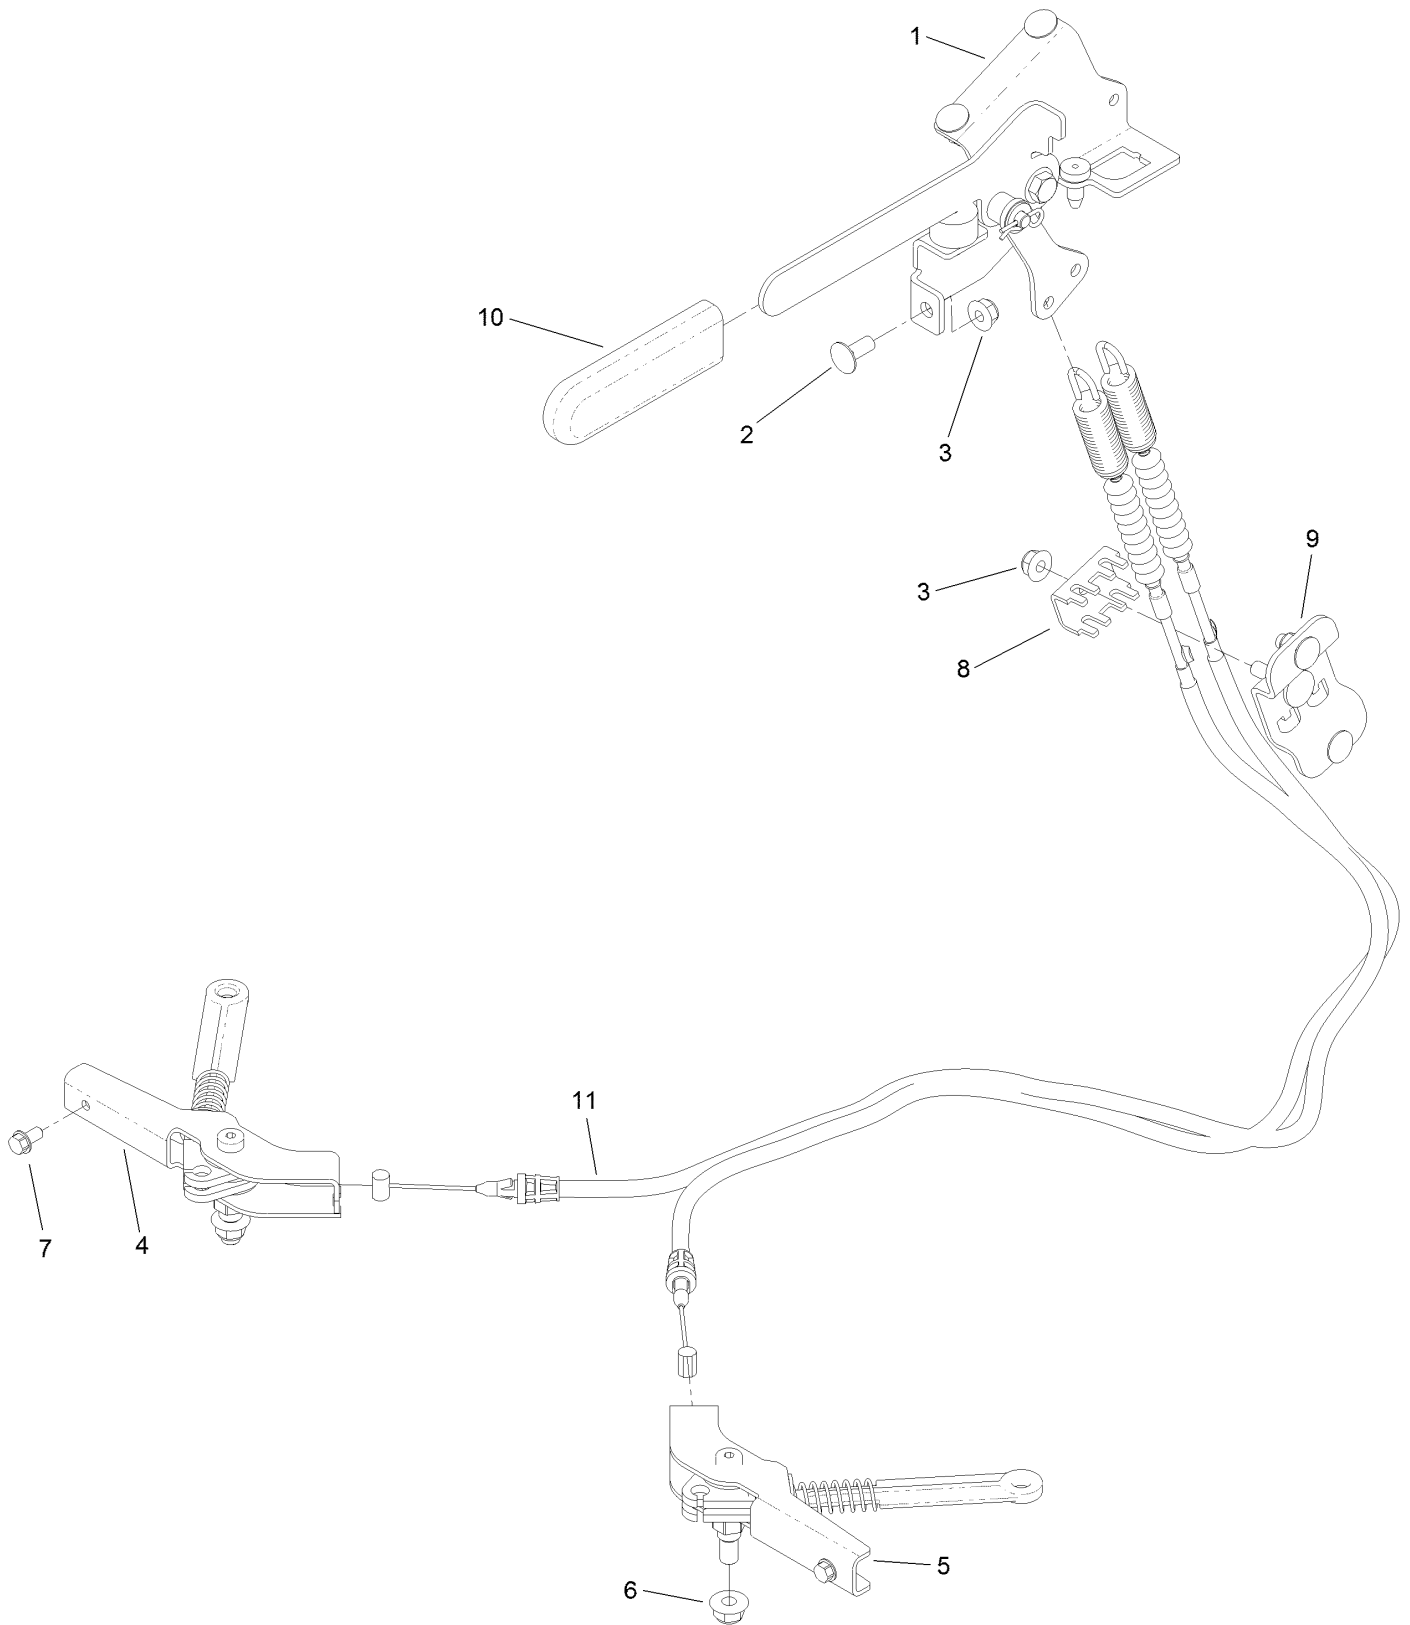

Parking Brake Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-5170	1	Brake Handle ASM	7	32144-4	2	Screw-HWH
2	3230-23	5	Bolt-CARR	8	132-1187	1	Clamp-Cable
3	104-8300	6	Nut-HF, NI	9	132-7582	1	Mount-Cable, Brake
4	132-5168	1	RH Brake Caliper ASM	10	1-633268	1	Grip-Lever
5	132-5169	1	LH Brake Caliper ASM	11	131-1195	2	Cable-Brake
6	104-8301	2	Nut-HF, NI				


Deck Lift Assembly

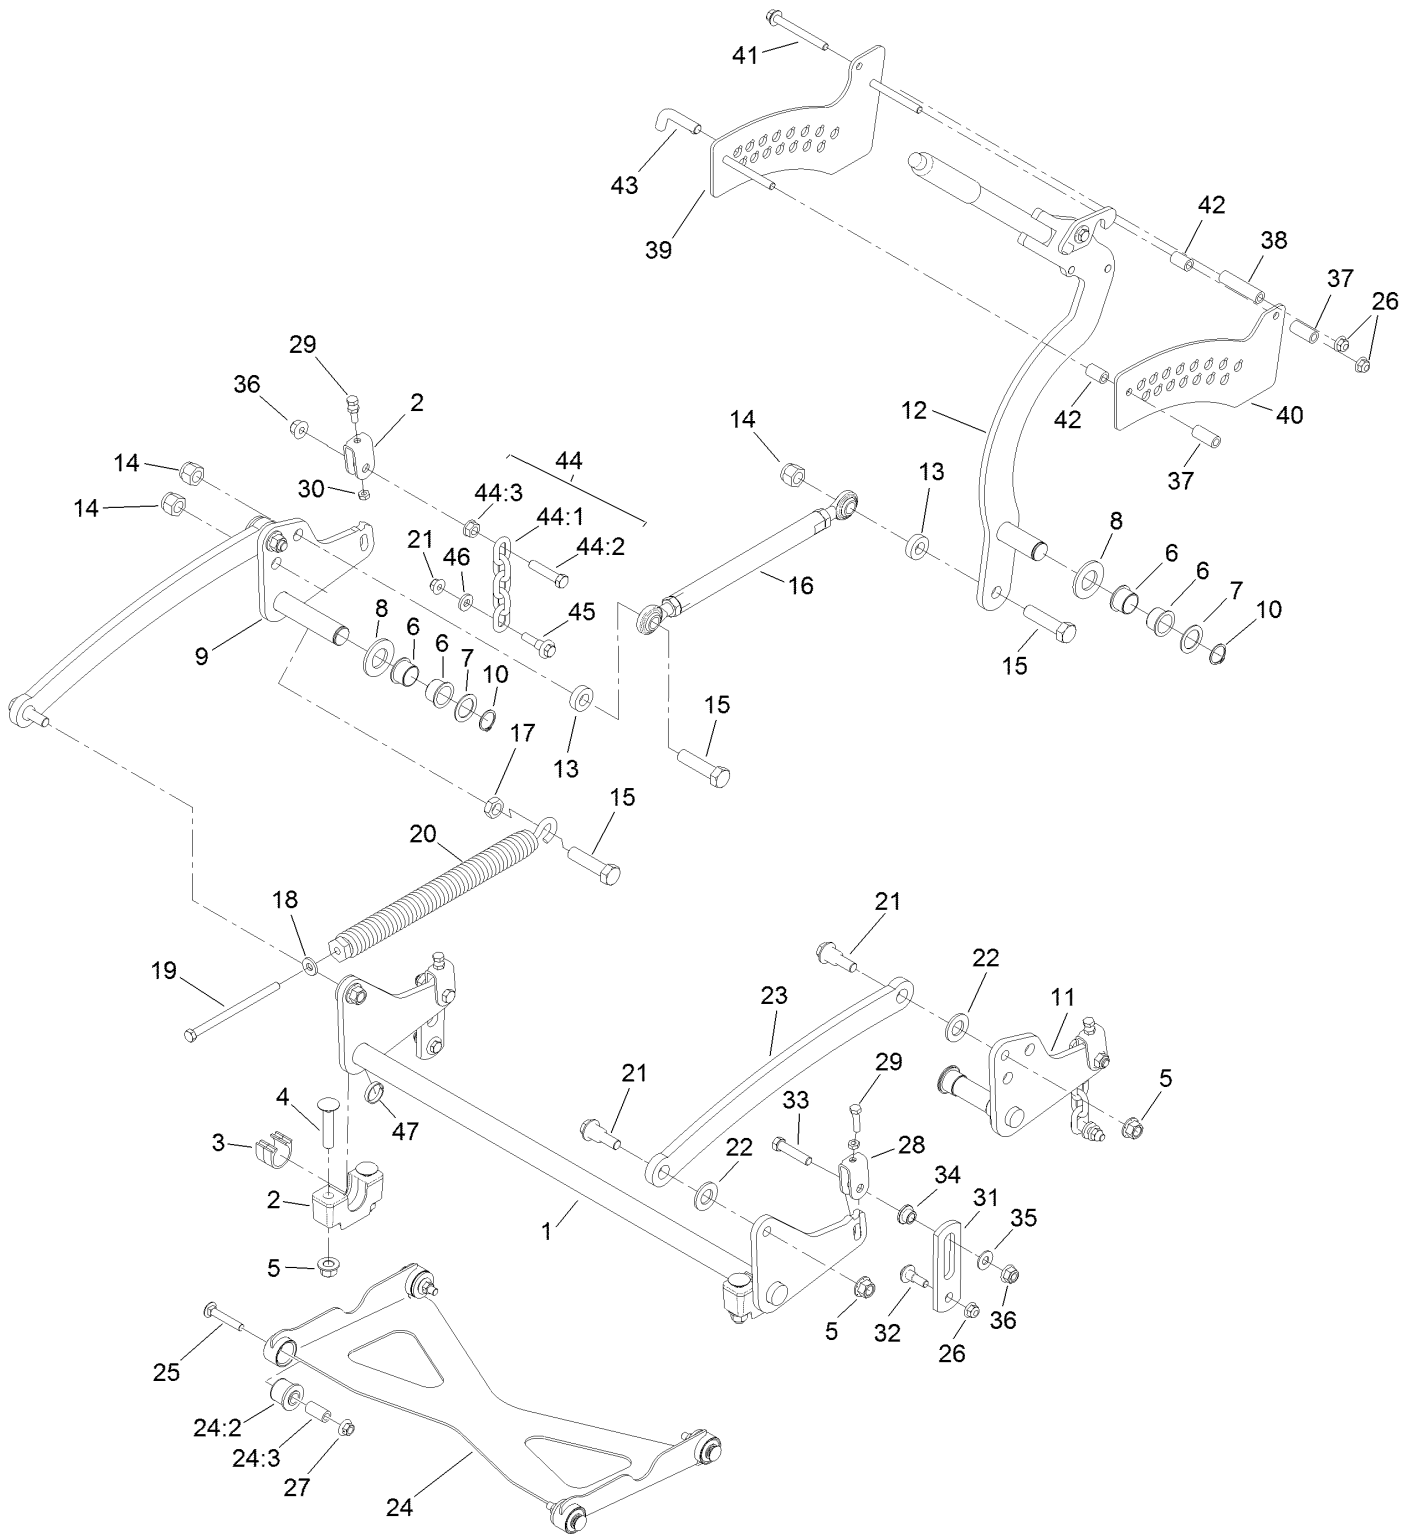

Deck Lift Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8405-01	1	Shaft-Cross, Front	24:3	108-6544	4	Spacer
2	109-9409	2	Support-Bearing, Cross Shaft (Front)	25	3231-7	4	Screw-CARR
3	109-9410	2	Bearing-Cross Shaft, Front	26	104-8301	7	Nut-HF, NI
4	116-1700	4	Bolt-CARR	27	32128-19	4	Nut-HF Lock, Large Flg
5	99-5107	8	Nut-Lock	28	109-9066	4	Yoke-Adjust, Deck
6	127-0369	6	Bushing	29	322-47	4	Screw-HH
7	10-8110	3	Washer-Thrust	30	3218-2	8	Nut-Jam
8	3256-62	3	Washer-Flat	31	130-6589	2	Link-Lift
9	127-0616-01	1	Arm-Lift, Rear (RH)	32	109-9840	2	Screw-Shoulder, HHF
10	32151-29	3	Ring-Retaining	33	109-9065	2	Screw-HH
11	127-0615-01	1	Arm-Lift, Rear (LH)	34	116-2428	2	Bushing-Flanged
12	130-1755	1	HOC Lever ASM	35	3256-4	2	Washer-Flat
13	119-6223	2	Washer	36	114-8417	4	Nut-HF, NI
14	AU230-42110	3	Nut-Hex, Center Lock	37	104-0151	2	Spacer
15	327-7	3	Screw-HH	38	84-2350	1	Spacer-Long
16	130-6615	1	HOC Link ASM	39	132-7581	1	HOC Plate And Decal ASM
17	3218-6	1	Nut-Jam	40	131-1103-01	1	Plate-HOC, Inner
18	98-5975	1	Washer-Belleville	41	116-4701	3	Screw-HHF
19	323-58	1	Bolt-TAP, HH	42	80-7590	2	Spacer
20	116-0886	1	Spring-Extension	43	116-5584	1	Pin-HOC
21	116-0780	4	Screw-Shoulder, HHF	44	116-0756	2	Deck Lift Chain ASM
22	3256-28	4	Washer-Flat	44:1	1-633447	1	Chain-Lift, Deck
23	127-1948-03	2	Link-Lift	44:2	109-9065	1	Screw-HH
24	136-5675	1	Deck Strut ASM	44:3	32128-37	1	Nut-HF
24:2	126-8360	4	Bushing-Rubber, Suspension	45	130-0742	2	Bolt-Shoulder
				46	43-0940	2	Spacer
				47	133-1431	1	Spacer-Split


HOC Lever Assembly No. 130-1755

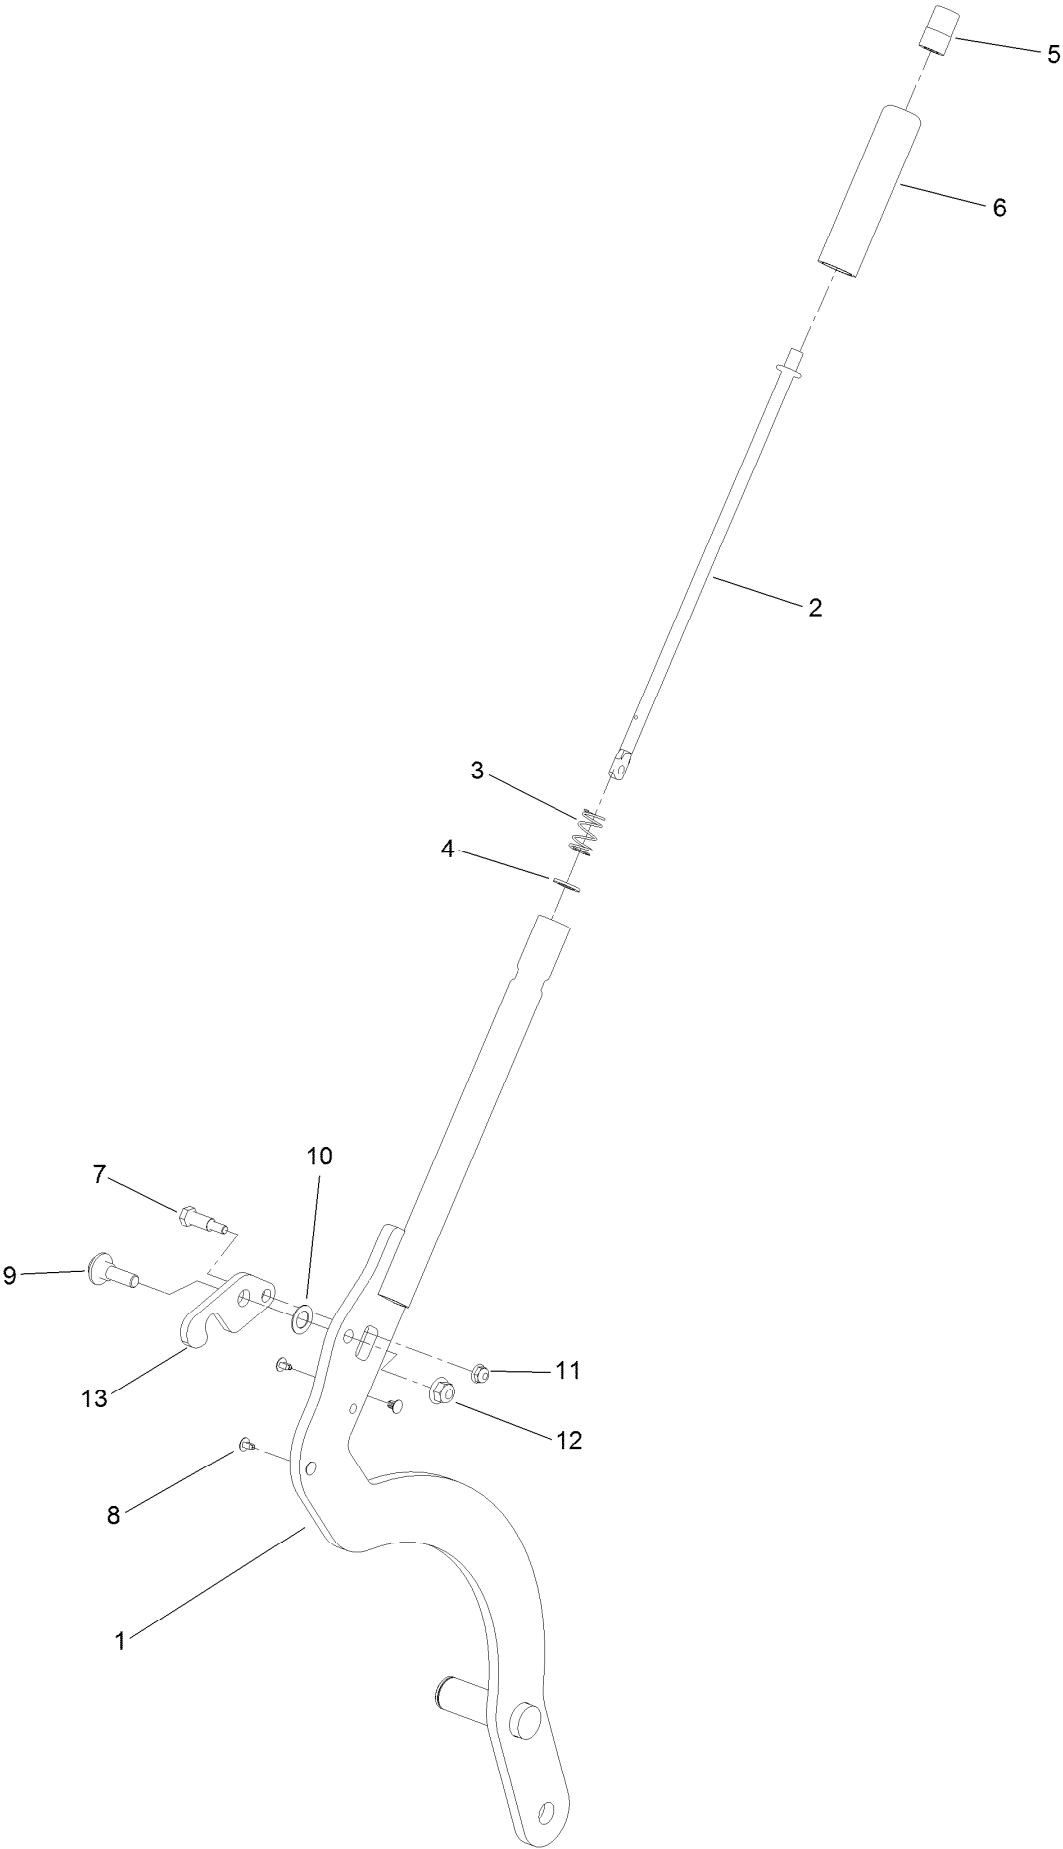

HOC Lever Assembly No. 130-1755 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	130-1775-01	1	Lever-Lift	8	103-1363	4	Rivet
2	136-0530	1	Rod-Latch, Release	9	614672	1	Screw-Shoulder, HWH
3	114-8187	1	Spring-Compression	10	98-1629	1	Washer
4	114-1207	1	Washer-Special	11	104-7201	1	Nut-HF
5	115-2750	1	Knob	12	104-8301	1	Nut-HF, NI
6	115-3592	1	Grip	13	131-7452	1	Latch-HOC
7	119-2309	1	Bolt-Shoulder				


Frame Assembly

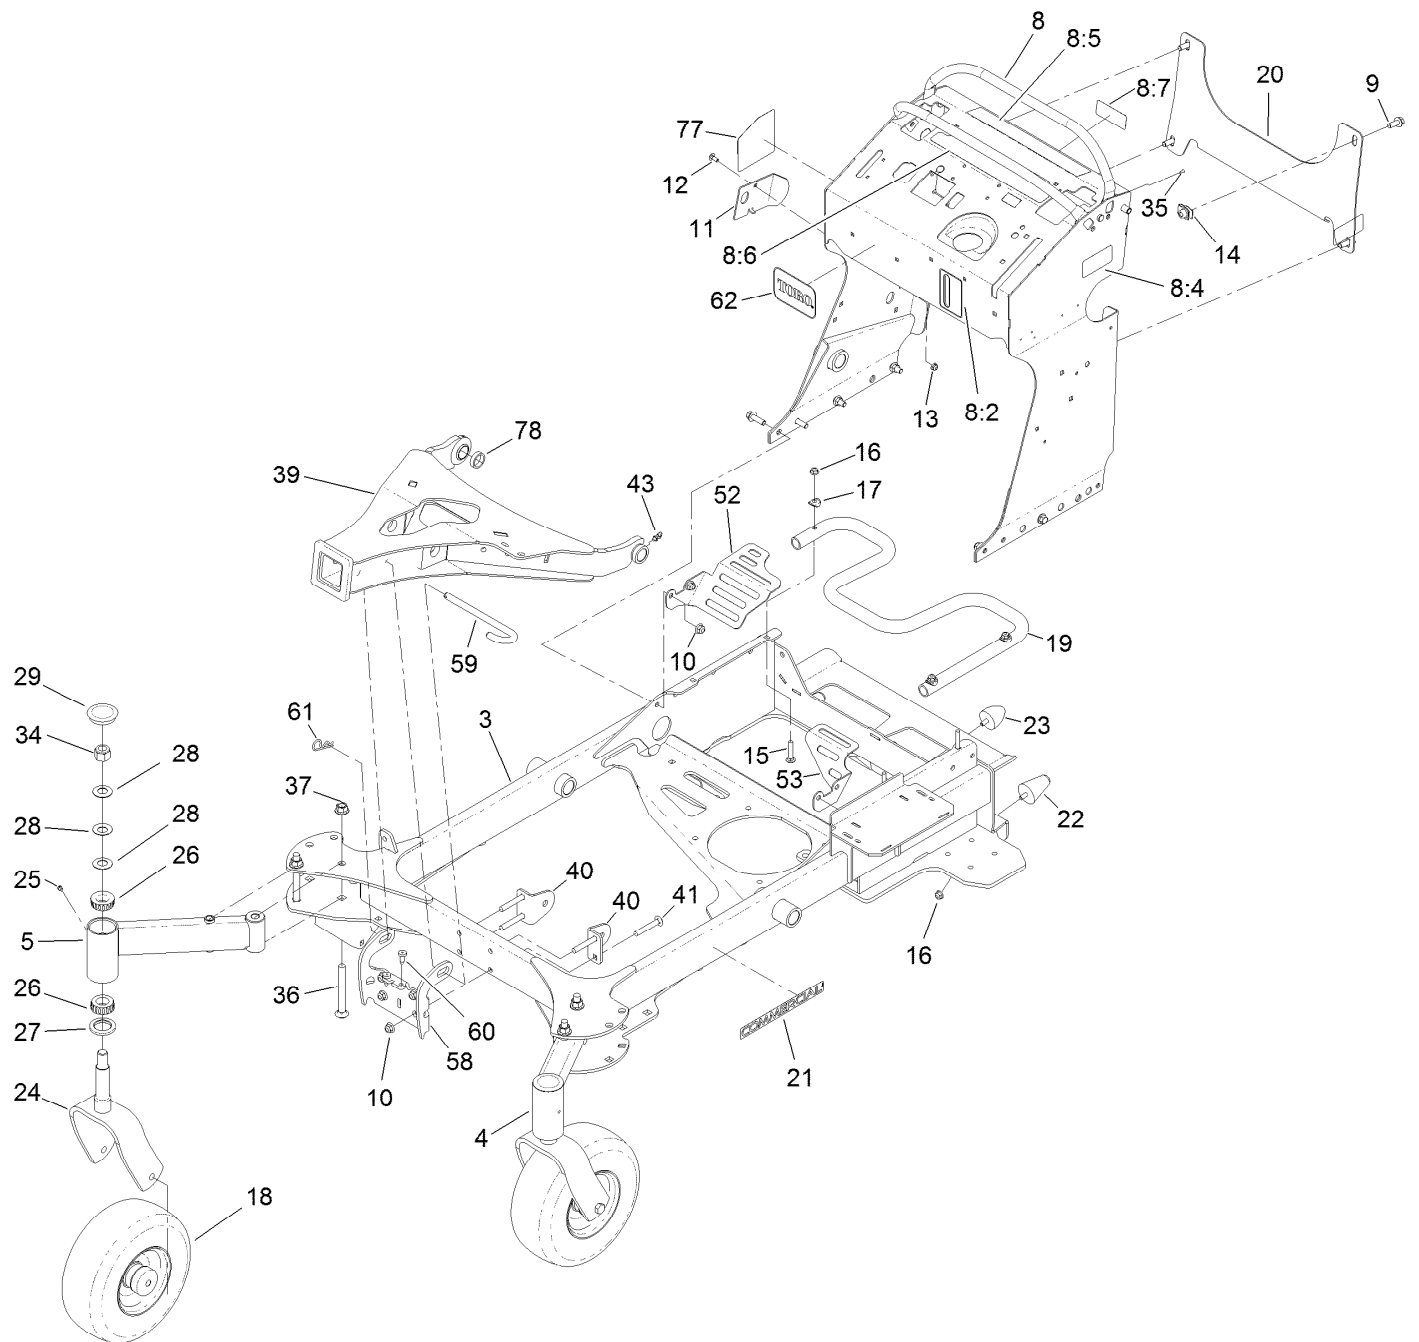

Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	131-1510-01	1	Frame	23	114-1926	2	Bumper-Rubber
4	131-1521-01	1	Tube-Castor, Short	24	121-7988-01	2	Fork-Caster
5	131-1522-01	1	Tube-Castor, Long	25	1-811010	2	Plug
8	132-7537	1	Tower Decal ASM	26	1-543509	4	Bearing-Roller, Tapered
8:2	131-3524	1	Decal-Level, Oil	27	116-5647	2	Seal-Grease
8:4	116-8775	1	Decal-Fill, Fuel	28	1-633508	6	Washer-Bellville
8:5	131-3527	1	Decal-Caution	29	103-4882	2	Cap-Grease
8:6	131-3526	1	Decal-Controls	34	3296-51	2	Nut-Lock, NI
8:7	131-3528	1	Decal-Fuse	35	3290-271	2	Rivet-Pop
9	3234-42	4	Screw-HHF	36	3233-7	4	Screw-CARR
10	104-8301	12	Nut-HF, NI	37	99-5107	4	Nut-Lock
11	131-7455	1	Plate-Striker	39	133-4662-03	1	A-Frame
12	3229-11	1	Screw-CARR	40	127-0649-01	2	Bracket-Cylinder
13	104-7201	1	Nut-HF	41	3231-44	4	Screw-CARR
14	105-4886	4	Nut-Tinnerman	43	302-40	1	Fitting-Grease, 90 DEG
15	3230-5	3	Bolt-CARR	52	132-7578-01	1	Guard-Fan, RH
16	104-8300	7	Nut-HF, NI	53	132-7598-01	1	Guard-Fan, LH
17	107-3844	3	Washer	58	133-5320-01	1	Bracket-Lock
18	130-4558	2	Wheel/Tire And Bearing ASM	59	133-2021	1	Pin-Hitch
19	132-5161-01	1	Tube-Mount, Fuel Tank	60	87-8460	2	Bumper-Rubber
20	132-1145-03	1	Bracket-Cross	61	92-2762	1	Pin-Hair
21	117-3591	2	Decal-Commercial	62	126-5060	1	Decal-Logo, Toro
22	114-1925	2	Bumper-Rubber	77	133-4648	1	Decal Service-Multiforce
				78	116-6758	1	Spacer

Wheel, Tire and Bearing Assembly No. 130-4558

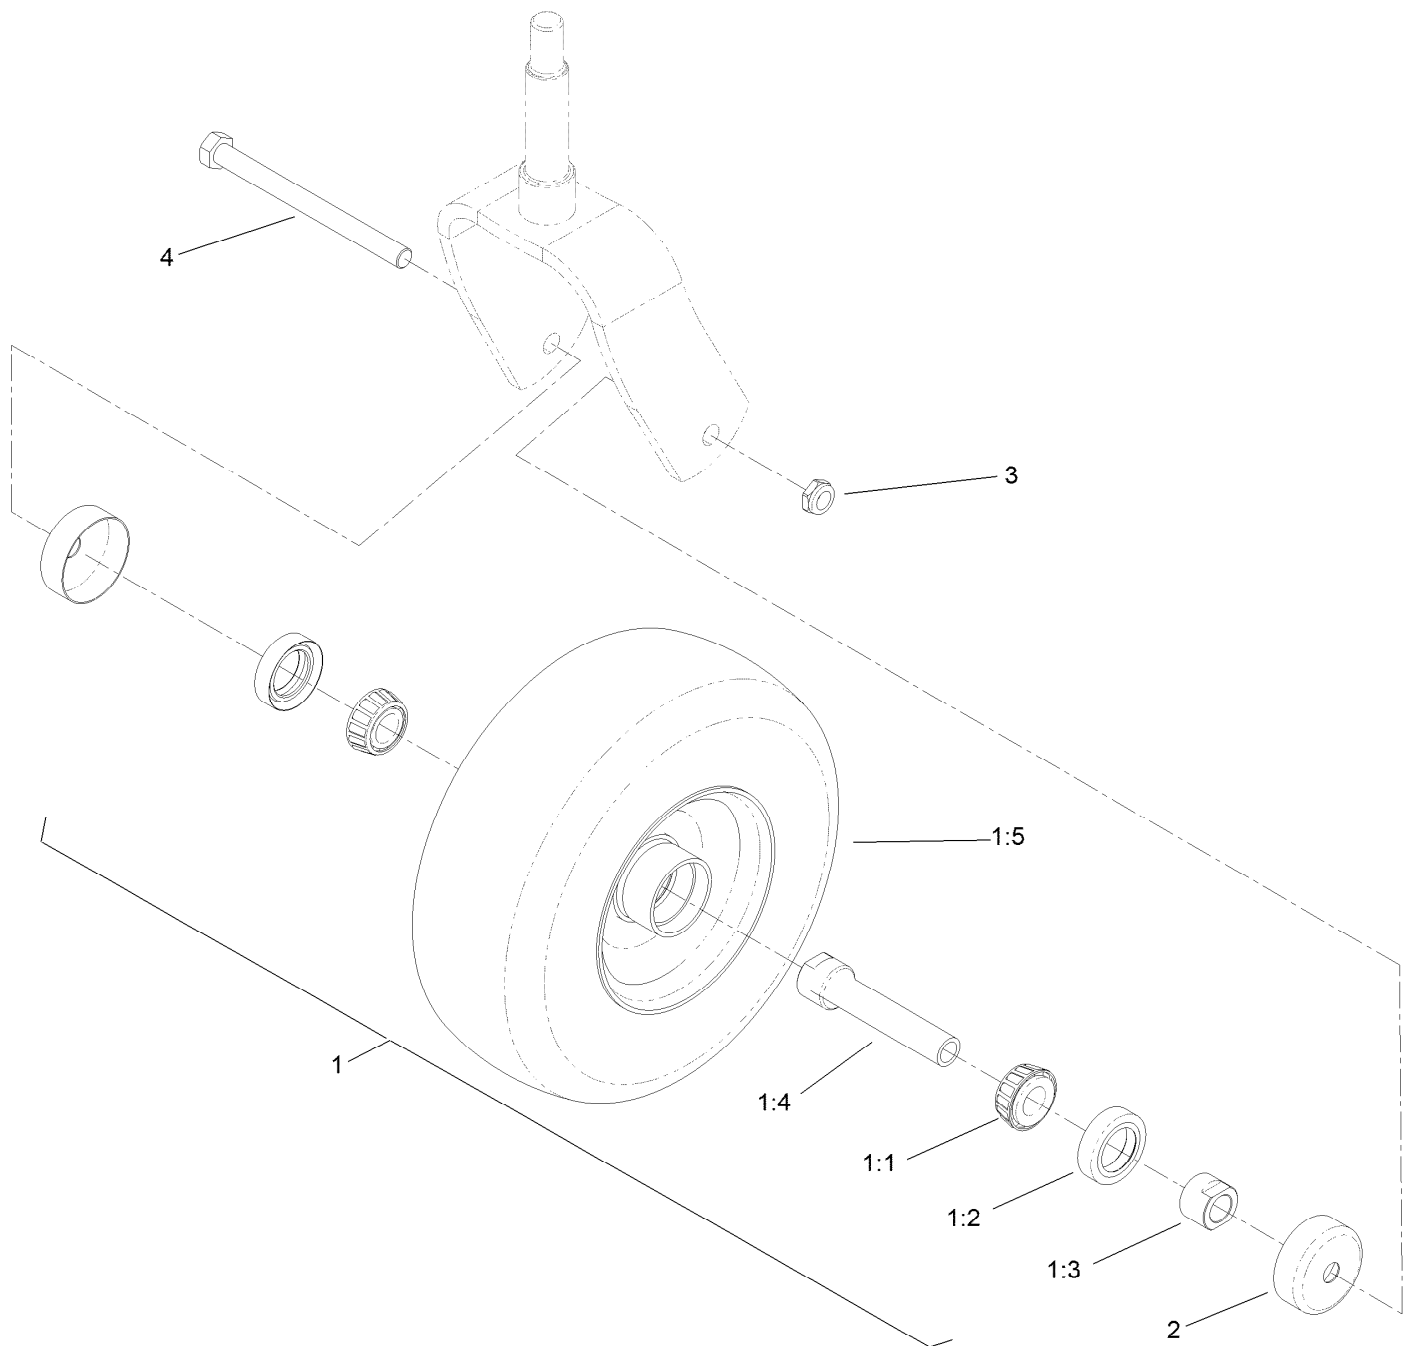


Wheel, Tire and Bearing Assembly No. 130-4558 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Wheel And Bearing ASM ●	1:5	130-4563	1	Wheel And Tire ASM
1:1	1-633585	2	Bearing-Cone, Taper	2	103-2768	2	Guard-Seal
1:2	103-0063	2	Seal-Caster	3	3296-45	1	Nut-Hex
1:3	103-3051	1	Spacer-Nut ■	4	325-20	1	Screw-HH
1:4	126-5359	1	Caster Axle ASM				

● Not serviced separately

■ Use Pro-Lock, Nut Type (P/N 1-840022, .5ml tube) on spacer nut


Platform Assembly

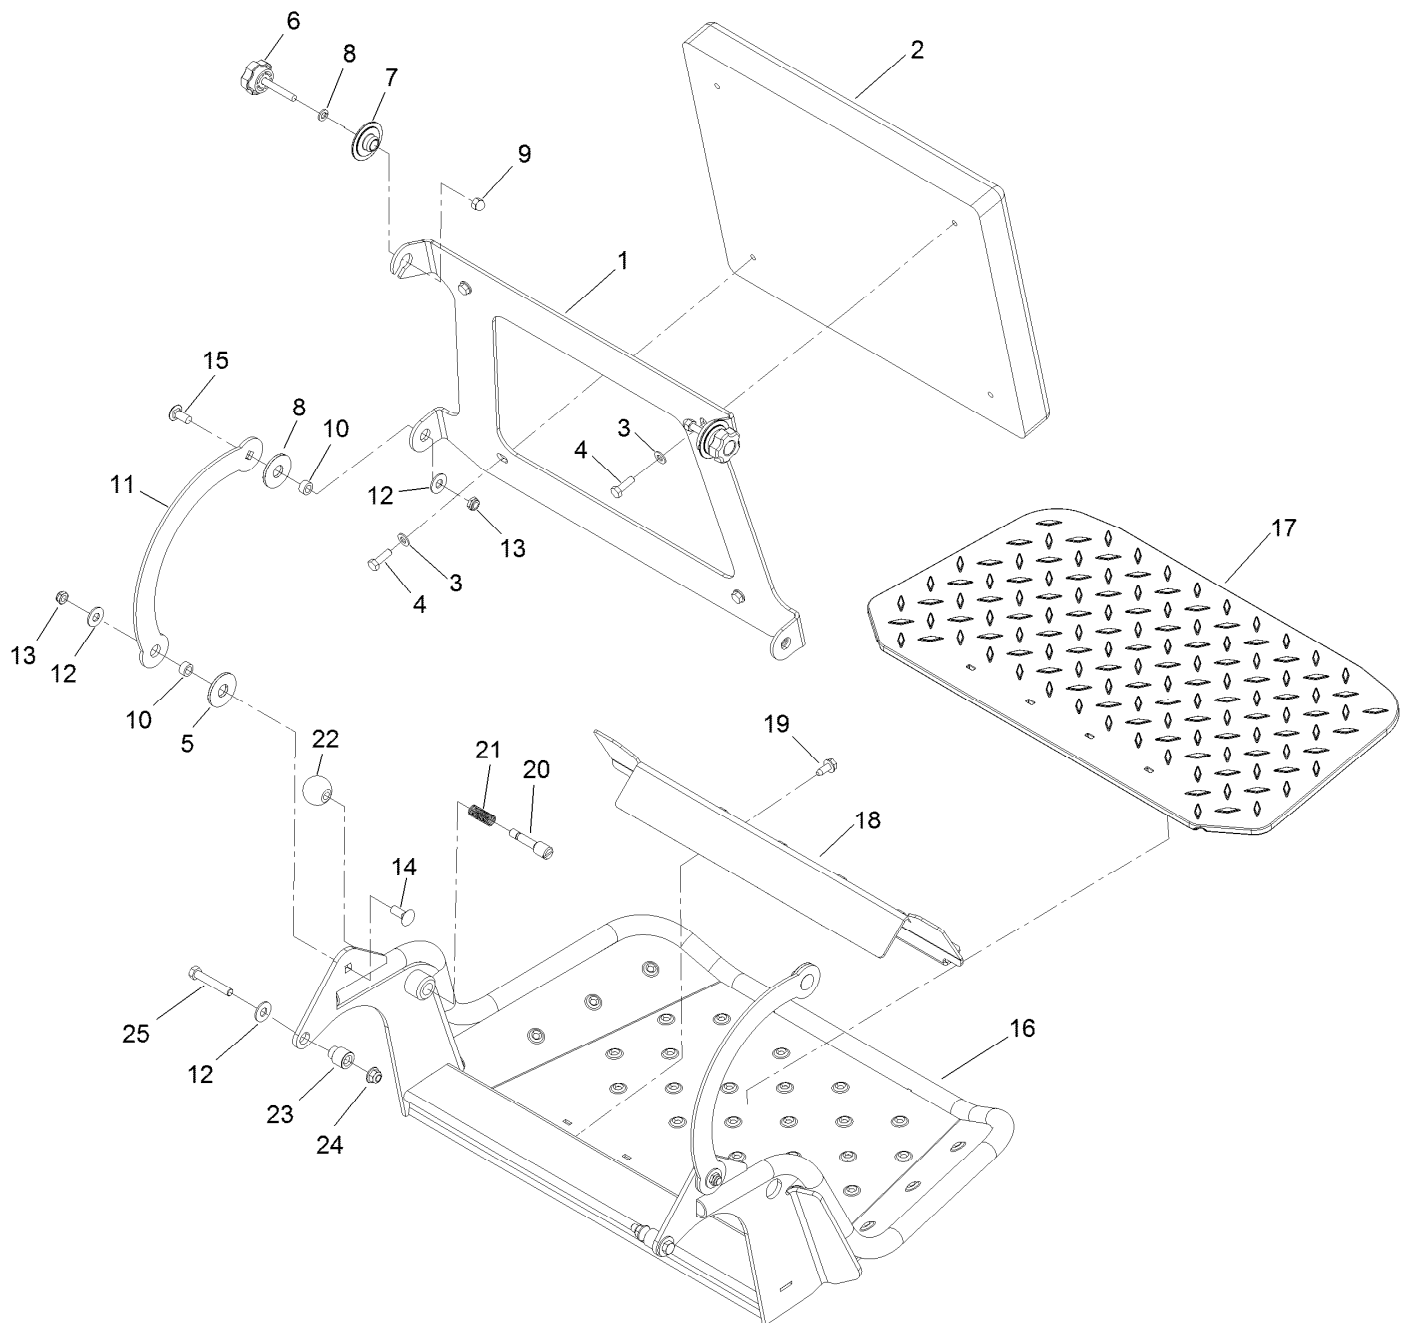

Platform Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	120-8499-03	1	Hinge-Pad	14	3231-2	2	Bolt-CARR
2	117-9739	1	Pad-Cushion	15	3231-27	2	Screw-CARR
3	3256-23	4	Washer-Plain	16	120-8475-01	1	Platform
4	121-7999	4	Screw-HH	17	126-7157	1	Mat-Platform
5	114-0463	4	Washer-Friction, Composite	18	136-5669-01	1	Clamp-Shield
6	133-1426	2	Knob	19	32144-70	2	Screw-HWHTF
7	116-2886	2	Slide-Bushing	20	119-8650	1	Pin-Latch
8	3253-4	2	Washer-Lock	21	114-5348	1	Spring
9	131-4535	2	Nut-Acorn	22	1-603175	1	Knob-Ball
10	111044	4	Spacer	23	132-7583	2	Bushing-Flanged
11	114-1915-01	2	Link-Pad	24	104-8301	2	Nut-HF, NI
12	3256-4	6	Washer-Flat	25	323-11	2	Screw-HH
13	3296-59	4	Nut-Lock, NI				


Engine Assembly

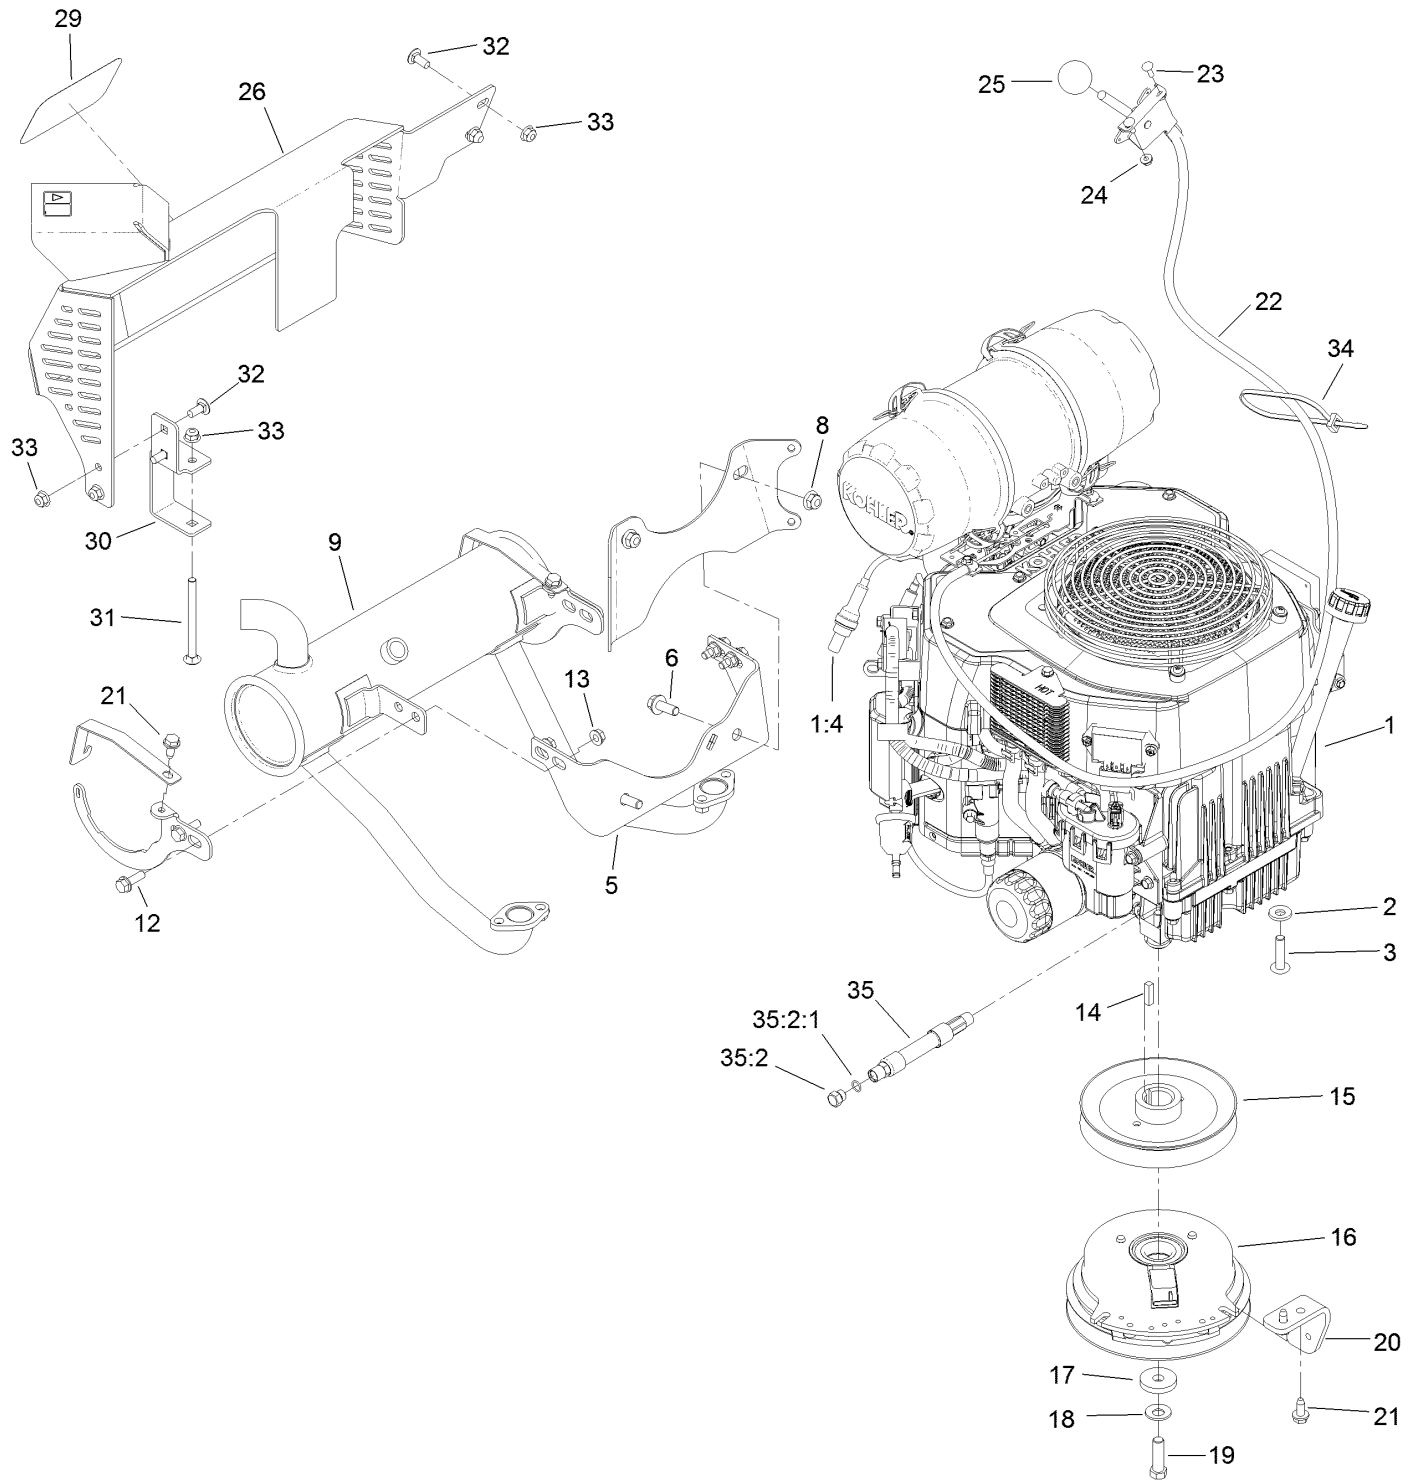

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	131-1159	1	Engine-Kohler, Ecv749	20	131-3586-03	1	Stop-Clutch
1:4	116-5395	1	Sensor-Oxygen	21	32144-70	4	Screw-HWHTF
2	98-5975	4	Washer-Belleville	22	132-5152	1	Throttle ASM
3	126-0983	4	Screw-BHTF	23	1-807533	2	Bolt-CARR
5	132-1168	1	Bracket-Muffler	24	32128-17	2	Nut-Lock, Flange
6	3234-42	2	Screw-HHF	25	1-603175	1	Knob-Ball
8	104-8301	2	Nut-HF, NI	26	131-3550	1	Muffler Guard ASM
9	133-4634	1	Muffler-Kohler	29	94-2579	1	Decal
12	3234-17	4	Screw-HHF	30	131-3530-03	1	Bracket-Mounting, Guard
13	32128-25	4	Nut-HF	31	106-9758	1	Screw-CARR
14	1-807259	1	Key	32	3230-23	4	Bolt-CARR
15	120-8498	1	Pulley	33	104-8300	5	Nut-HF, NI
16	131-1100	1	Clutch	34	3290-378	1	Tie-Cable
17	107-4136	1	Washer	35	133-4657	1	Hose ASM
18	1-603610	1	Washer-Spring	35:2	353-508	1	Plug-HH
19	3212-6	1	Screw-HH	35:2:1	237-42	1	O-Ring


Fuel Tank Assembly

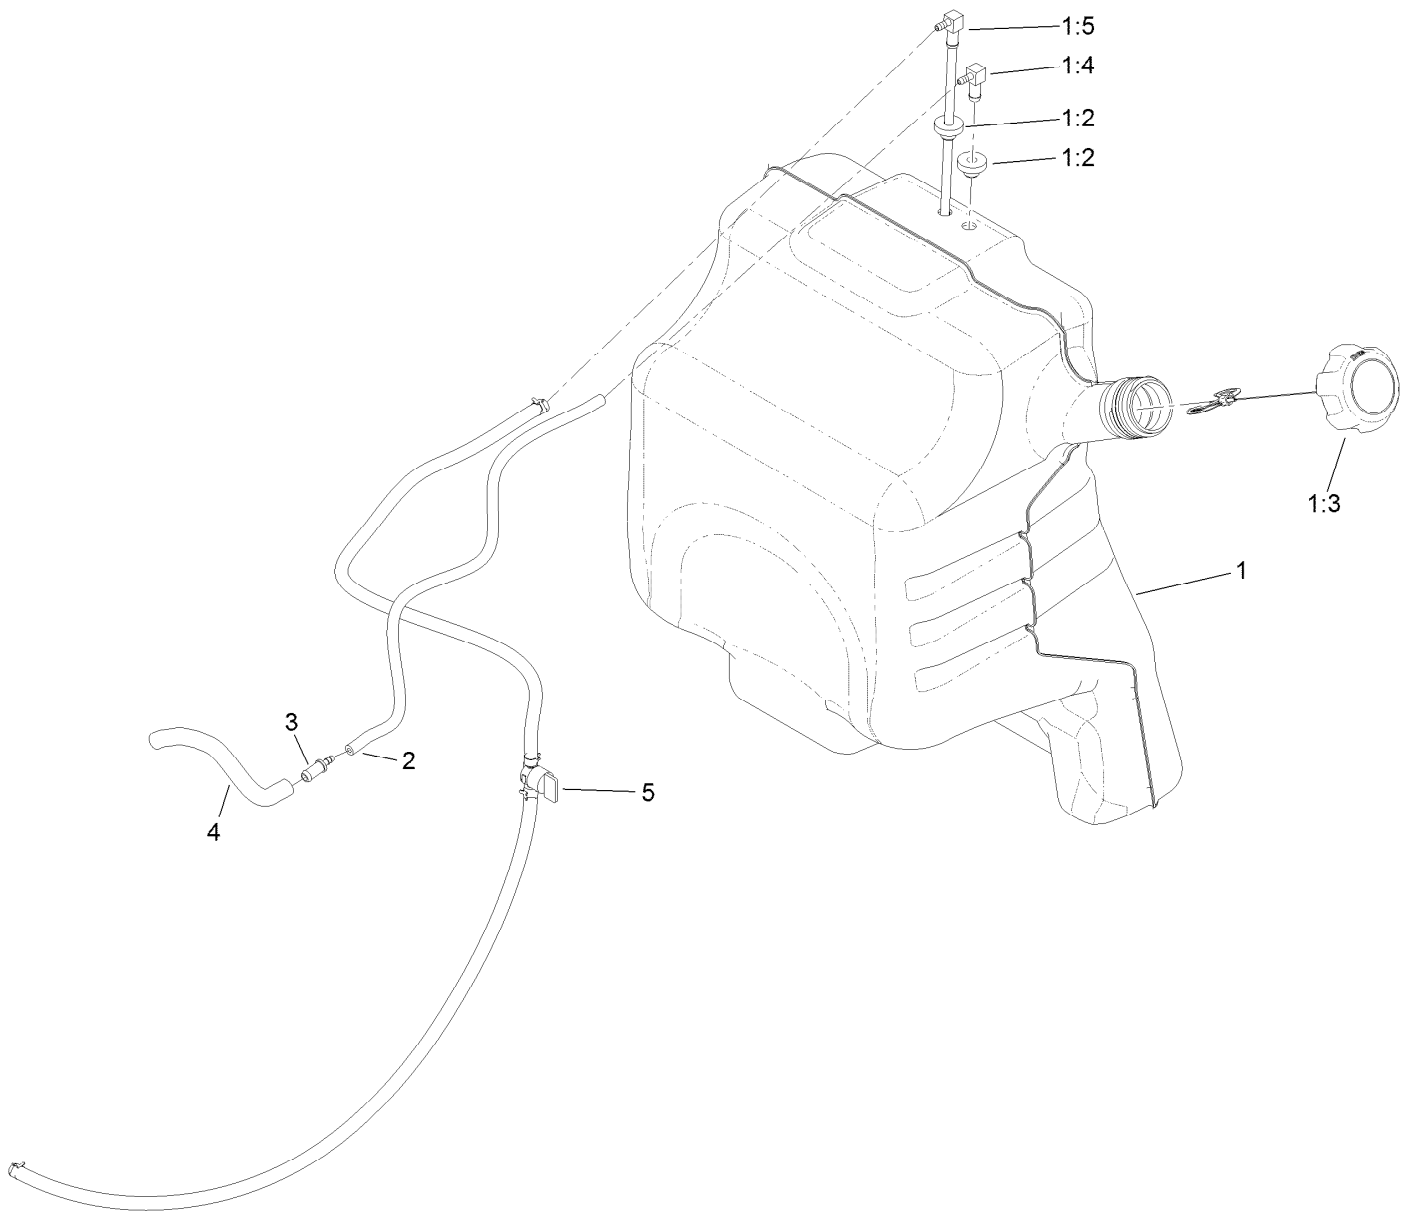

Fuel Tank Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	132-7560	1	Fuel Tank ASM	2	110-8255	1	Hose-Fuel
1:2	46-6560	2	Bushing	3	98-2952	1	Fitting-Straight
1:3	115-7788	1	Cap-Fuel	4	132-7576	1	Hose-Fuel
1:4	104-5228	1	Fitting-Elbow, 90 DEG	5	132-7545	1	Fuel Line ASM
1:5	132-7559	1	Fuel Tube ASM				

Wire Harness Assembly

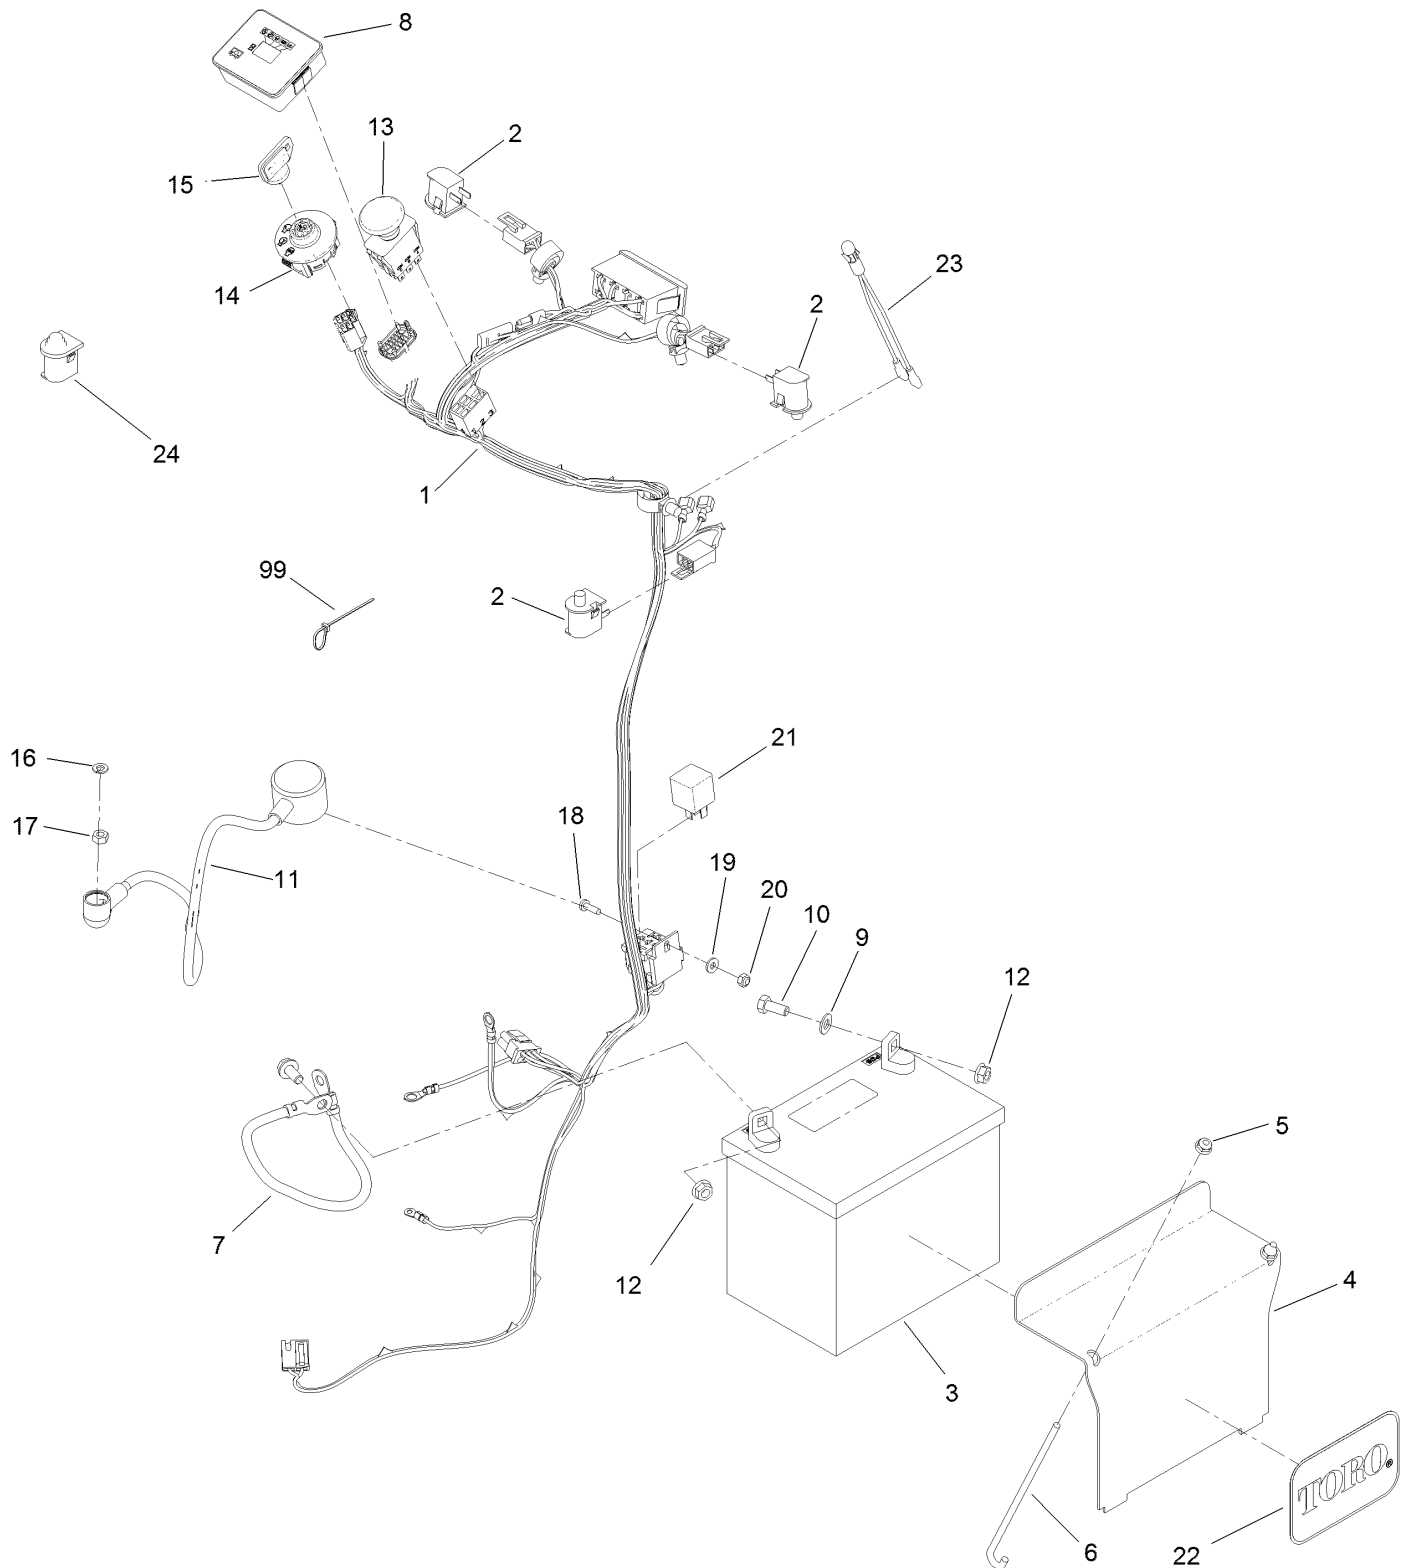

Wire Harness Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	136-5422	1	Harness-Wire	14	117-2222	1	Switch-Ignition
2	82-2190	2	Switch-Bail	15	63-8360	1	Key-Ignition
3	104-8162	1	Battery	16	3253-3	1	Washer-Lock
4	130-6635-01	1	Bracket-Hold Down, Battery	17	3217-5	1	Nut-Hex
5	104-7201	2	Nut-HF	18	3290-500	1	Screw-PPH
6	1-633651	2	Bolt-Holddown	19	3256-14	1	Washer-Flat
7	112-7063	1	Cable-Battery, Black	20	3296-2	1	Nut-Lock, NI
8	130-6570	1	Module-Meter, Hour	21	1-643275	1	Relay
9	3256-23	2	Washer-Plain	22	67-1300	1	Decal
10	322-3	2	Screw-HH	23	1-643267	1	Indicator-LED, Red
11	115-3864	1	Cable-Battery, Positive	24	133-4654	1	Switch-Plunger
12	109-5715	2	Nut-HHF, Smooth	99	3290-378	4	Tie-Cable
13	114-0279	1	Switch-PTO, On-On				

Attachments and Accessories

For 74523 GrandStand Multi Force Mower With 60in TURBO FORCE Cutting Unit

Product Name	Model/Part
15-Pound Cast Weight.....	112-7059-01
Bucket Mount Kit.....	136-5681
E-Z Vac Bagger	78570
60in EZ Vac Blower.....	78576
Brake Hub Puller.....	116-6518
Speed Setting Tool.....	132-7595
Light Kit.....	133-1437
Electric Accessory Port.....	133-1438
Snow Tires.....	133-4603
Quick-attach-male	136-0513
Hydraulic Cap Lock Kit.....	136-5420
Twin Bagger Kit.....	78524
Pro Force Blower	78593
Grandstand Multi Force High-Flow Kit	78601
Aerator, 38in Multi Force.....	78694
Trash Bag Assembly.....	133-1435
HOC Set Blocks.....	133-1439
Strobe Light Kit	133-1495
Wheel Weight Kit	133-5386
Grandstand Multi Force Broom.....	78596
Aerator Mount, Multi Force	78695
Grandstand Low Flow Hydraulics Kit	MSC13950
Grandstand Side PLOW Kit.....	MSC13960
Recycler Kit	115-7468
Harness Wire Splitter.....	121-5988
Trimmer Rack	133-1441
5 Gallon Bucket	133-2533
Broom Rubber Flap Kit	137-3920
Idler Kit, Blower Kit for GrandStand Multi Force Mower.....	139-1546
Dethatcher, 46in Multi Force.....	78690
Filter-Oil.....	98020
Spark Plug	130-8380
Chute Gate Kit W/ Bag.....	133-1434
Multiforce EC Float Kit	136-8350
Pneumatic Castor Wheel Kit.....	137-4136
Blower Drive 60-in	78527
Dethatcher Mount, Multi Force.....	78691
Blade Crate (Snowplow), ATV Poly S	STB13567B
Roller Striper Kit.....	133-1436
Starter Fuse Kit, GrandStand Mower	139-5555
18x8.5n10 X-Tweel Turf.....	139-7890
Soft Bag (3 Bushel).....	30104
LEAF PLOW WITHOUT MOUNT, MULTI-FORCE.....	78697
Urethane Edge Kit	STB13801
Plug-Quick Connect.....	T56152150

Attachments and Accessories (continued)

Air Cleaner Filter	100-4556
Turbo Baffle Kit	107-1634
Blade Extension Kit, 6in, stb	MSC13850B
Cap-Connect, Quick	T56152152
Filter Air Safety	103-1326
CASE DRAIN KIT	136-7436
Bagger Enhancement Kit	139-1529
Lift Cylinder Lock Kit	137-4106
6in Hose Kit, E-Z Vac Twin Bagger, 2016 and After Grandstand Mower	139-7930
Blower Upgrade Kit, Twin Bagger, 2016 and After Grandstand Mower	139-7940
Straight Blade, ATV Plow Shoe Kit	MSC13040
Fuel Filter	130-8381
Snow Deflector	MSC04587B
Kit-Grandstand, Filter, Winter	HYD14084
6 Pack-Blade, 20.5in Lo Flow	108-1128
Blade-Lo Flow, 20.5in	105-7716-03
6 Pack Blade, 20.5in Mid-Flow	108-1123
Blade-Mid Flow, 20.5in	105-7715-03
6 Pack Blade, 20.5in Hi-Flow	108-1114
Blade-Hi Flow, 20.5in	105-7718-03
6 Pack-Blade, 20.5in Recycler	110-0405
Blade-Recycler, 20.5in	105-7777-03
6 Pack-Blade, 20.5in Atomic	108-1115
Blade-Atomic, 20.5in	105-8777-03
60 In Blade And Belt Kit	132-4742
Hypr-Oil 500 (quart)	114-4713
Hypr-Oil 500 (gallon)	114-4714
Hypr-Oil 500-5 (5 gallon)	114-4715
Toro Premium Fuel Treatment 12 Oz Bottle	131-6572
Hydro Filter Kit	132-4743
Hydro Oil Change Kit	133-1457
10w30 4-Cycle Engine Oil (32oz Bottle)	38280
Toro 4-Cycle SAE 30 Oil (32oz Bottle)	38903
Spark Arrestor	98-9099



Count on it.