



44" Side Discharge Mower

Proline Midsize Traction Unit

Model No. 30149—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Deck And Cover Assembly	3	Spindle Assembly No. 67–7660	6
Spindle And Idlers Assembly	4	Carrier Frame Assembly	7
Spindle Assembly No. 67–7600	5	Belt And Decal Assembly	8

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

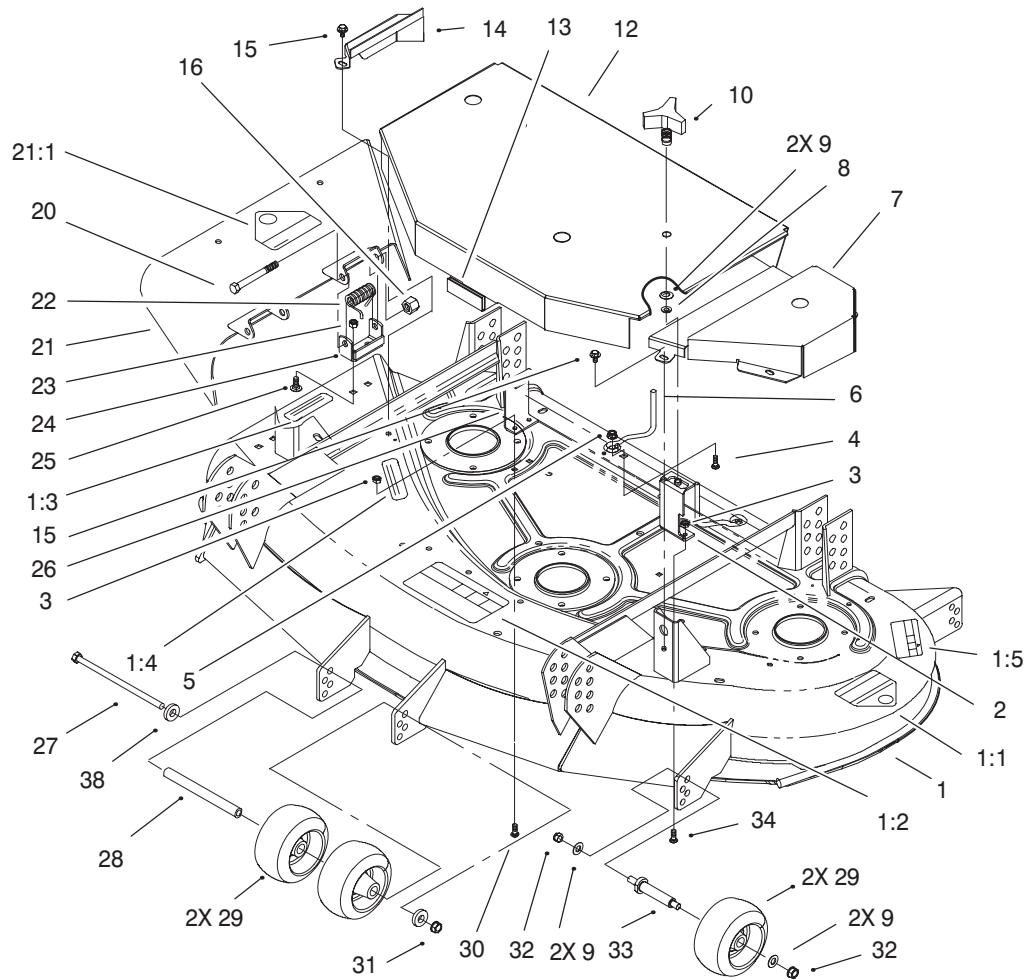

Sheet No.:2
C-2912

Deck And Cover Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-6448	1	Deck ASM	24	29-5590-01	2	Bracket-Pivot
1:1	43-8480	1	Decal-Danger	25	3230-18	4	Screw-CARR
1:2	66-1340	1	Decal-Danger	26	54-3230-03	1	Bracket-Cover, RH
1:3	66-6380	1	Decal-Danger	27	322-50	1	Screw-Cap
1:4	67-5360	1	Decal-Danger	28	98-5967	1	Spacer-Wheel
1:5	68-8340	1	Decal-Torque, Blade Bolt	29	68-2730	4	Wheel-Gage
2	54-3240-03	1	Bracket-Cover, LH	30	3229-1	2	Screw-CARR
3	3296-42	4	Nut-Lock	31	3296-29	1	Nut-Lock, NI
4	3230-2	2	Screw-CARR	32	3296-39	4	Nut-Lock, NI
5	32128-13	2	Nut-HF	33	99-2842	2	Spacer-Wheel
6	52-4780	2	Rod-Belt	34	3229-3	2	Screw-CARR
7	54-2220-01	1	Cover-Deck, LH	38	3256-23	2	Washer-Flat
8	32151-72	2	Ring-Retaining				
9	3256-24	6	Washer-Flat				
10	62-6520	2	Knob				
12	54-3190-01	1	Cover-Center				
13	29-0641	5	Jiffy Trim				
14	54-2250-01	1	Cover-Deck, RH				
15	46-8560	5	Screw-HHF				
16	3296-5	2	Nut-Lock, NI				
20	3211-15	2	Screw-HH				
21	100-8003	1	Deflector				
21:1	93-1122	1	Decal-Danger				
22	40-6230	2	Spring				
23	32152-1	4	Nut-Lock, NI				

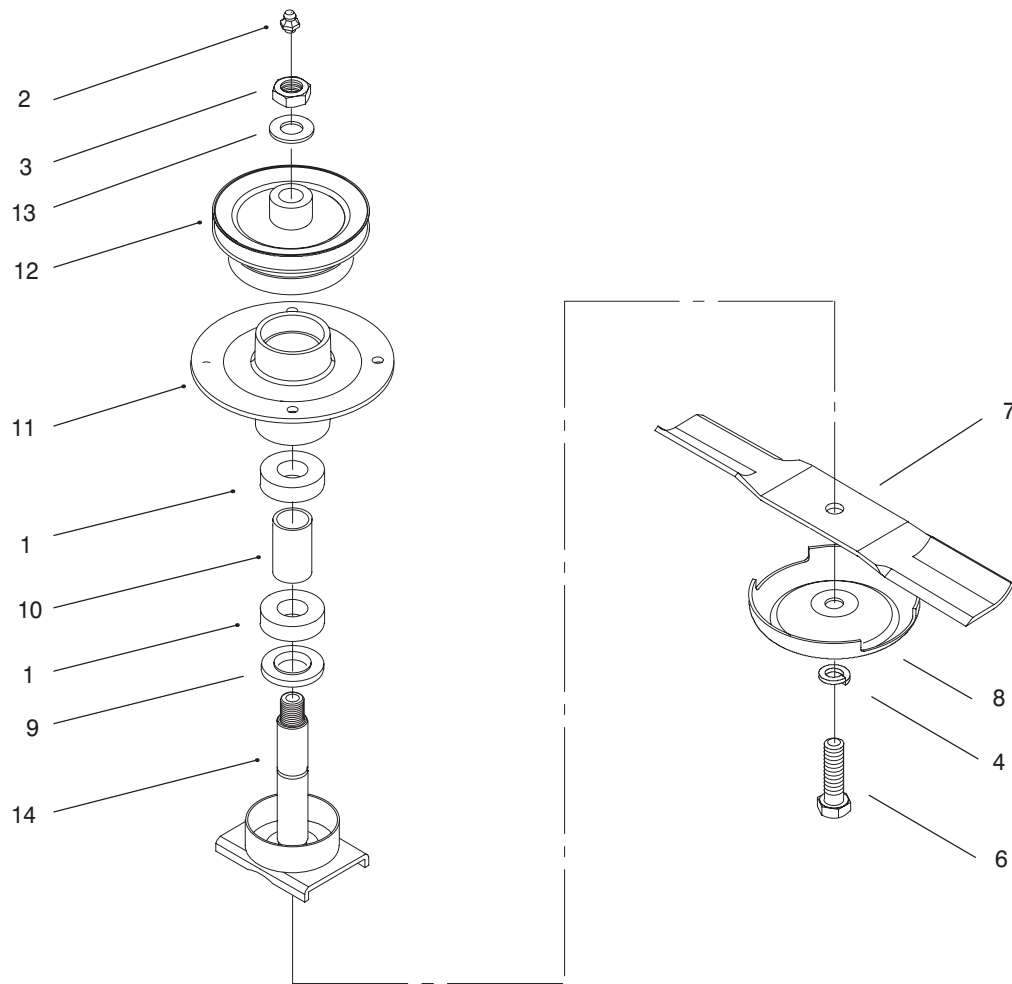


Sheet No.:A1
C-2922

Spindle Assembly No. 67-7600

Ref. No.	Part No.	Qty.	Description
1	251-257	2	Bearing
2	302-2	1	Fitting-Grease
3	32146-20	1	Nut-Jam
4	3253-8	1	Washer-Lock, Sp
6	51-4060	1	Screw-Blade
7	54-0010	1	Blade
8	67-7561	1	Cup-Scalp, Anti
9	67-7570	1	Spacer-Spindle
10	67-7580	1	Spacer-Bearing
11	67-7590	1	Spindle Housing
12	67-7650-03	1	Pulley ASM-Center
13	7-4150	1	Washer-Pinion
14	71-2790	1	Shaft-Spindle

Ref. No.	Part No.	Qty.	Description

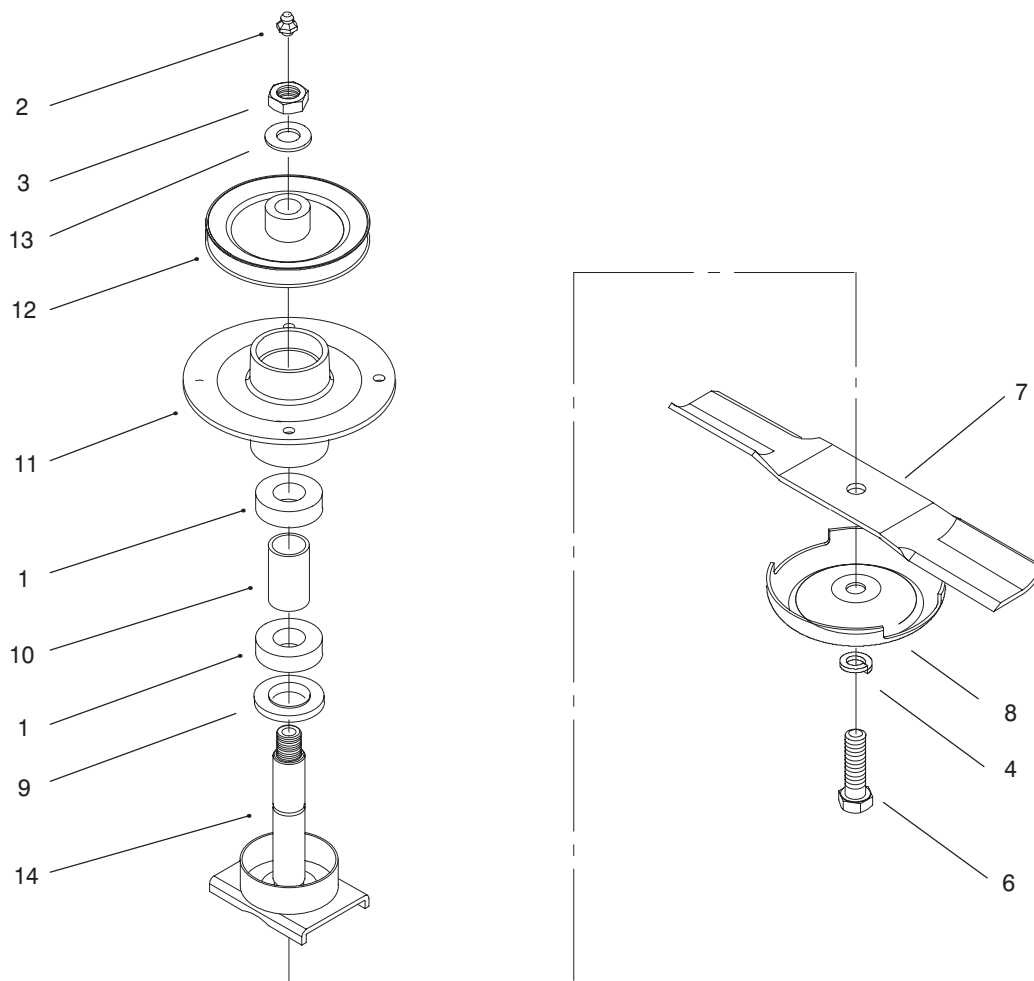


Sheet No.:A2

Spindle Assembly No. 67-7660

Ref. No.	Part No.	Qty.	Description
1	251-257	2	Bearing
2	302-2	1	Fitting-Grease
3	32146-20	1	Nut-Jam
4	3253-8	1	Washer-Lock, Sp
6	51-4060	1	Screw-Blade
7	54-0010	1	Blade
8	67-7561	1	Cup-Scalp, Anti
9	67-7570	1	Spacer-Spindle
10	67-7580	1	Spacer-Bearing
11	67-7590	1	Spindle Housing
12	67-7690-03	1	Pulley ASM-Outer
13	7-4150	1	Washer-Pinion
14	71-2780	1	Shaft-Spindle

Ref. No.	Part No.	Qty.	Description

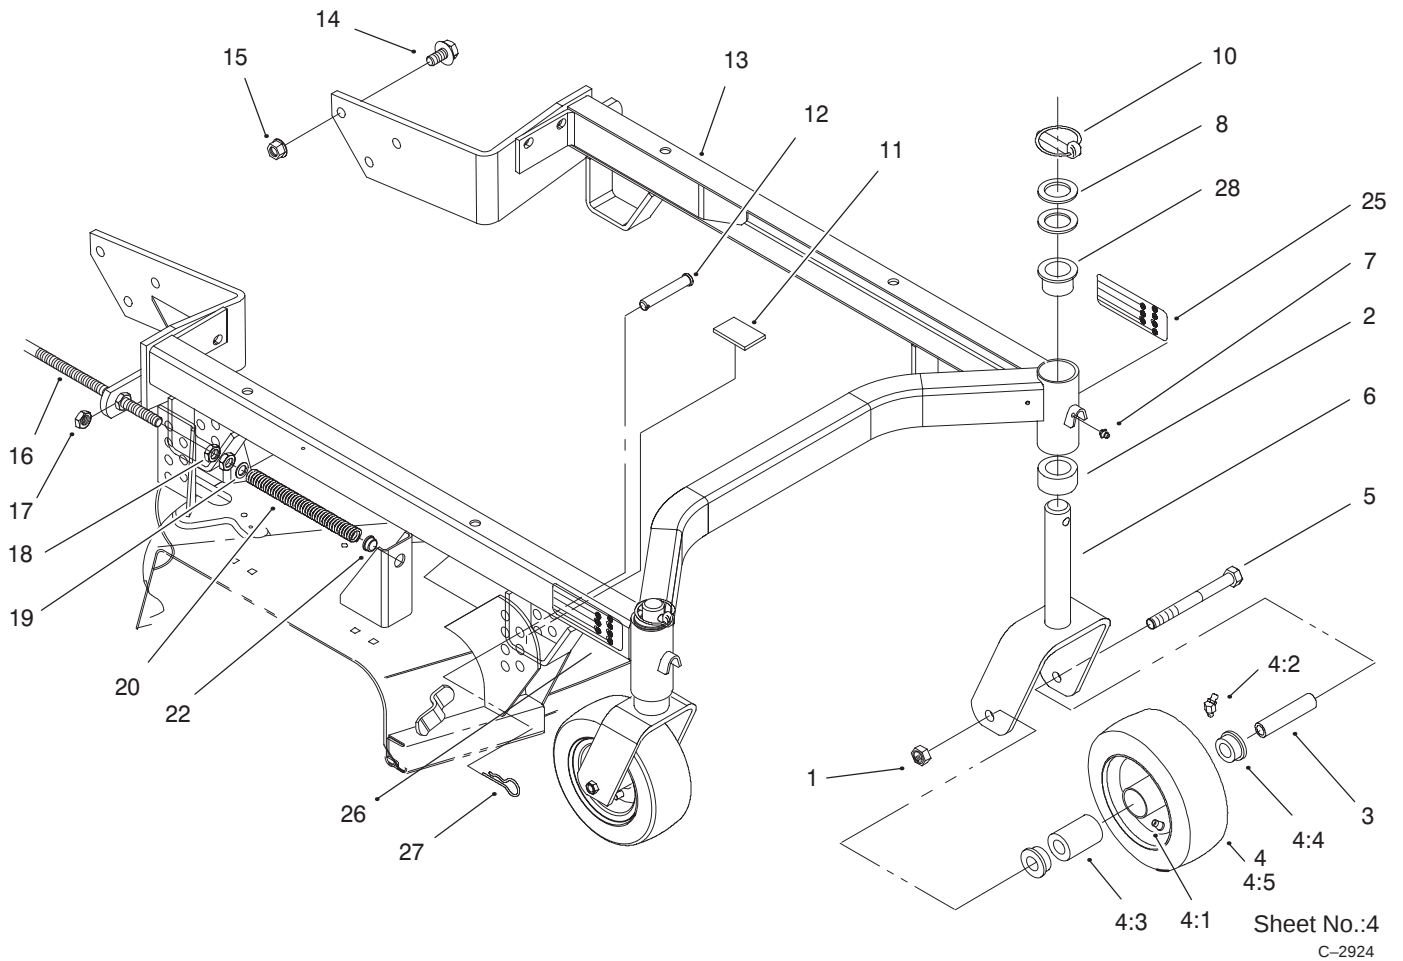

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	32153-5	2	Nut-Lock
2	93-1166	2	Spacer-Castor
3	100-6453	2	Bushing-Spanner
4	100-6451	2	Castor Wheel ASM
4:1	232-27	1	Stem-Valve
4:2	302-11	1	Fitting-Lube, 45°
4:3	83-4740	1	Bearing
4:4	62-5580	2	Bearing-Outside
4:5	100-6452	1	Tire-Tubeless
5	325-19	2	Screw-HH
6	100-6455-01	2	Castor Fork ASM
7	302-5	2	Fitting-Lube
8	3-6781	8	Washer-Thrust
10	3290-384	2	Pin-Lynch
11	74-0340	4	Cushion-Rubber
12	283-55	4	Pin-Clevis
13	17-0279-01	1	Carrier Frame ASM
14	3234-6	6	Screw-HHF
15	32128-23	6	Nut-HF
16	74-0310	2	Shaft-Adjusting
17	3296-45	2	Nut-Lock, NI
18	3218-5	4	Nut-Jam
19	41-8440	2	Washer
20	74-0290	2	Spring
22	256-156	2	Bushing-Flange
25	85-7450	1	Decal-HOC, LH

Ref. No.	Part No.	Qty.	Description
26	85-7460	1	Decal-HOC, RH
27	3290-355	4	Pin-Hair
28	94-1291	4	Bushing-Special

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

