



Groundsmaster[®] 3000-D 2WD/4WD Traction Unit

Model No. 30301TC—210000001 and Up

Model No. 30302TC—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part. This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

Contents

Description	Page	Description	Page
Frame, Fuel Tank and Battery Assembly	4	Steering Cylinder Assembly No. 93-5962	32
Muffler and Bumper Assembly	5	Degasser Bottle and Mounting Assembly	33
Center Shroud, Air Cleaner and Roll-Over-Protection System Assembly	6	Hydraulic Plumbing Assembly	34
Air Cleaner Assembly No. 93-5111	7	Manifold Assembly No. 94-9291	36
Hood Assembly	8	Front Axle Center Section Assembly	37
Radiator, Oil Cooler and Support Assembly	9	Hydraulic Housing Assembly	39
Operator Platform and Seat Base Assembly	10	Hydraulic Housing Assembly-Control	41
Steering Tower Assembly	11	Front Axle Gear Housing Assembly	42
Steering Control Valve Assembly No. 93-5165	12	Front Axle Cover Assembly	44
Traction Pedal and Linkage Assembly	13	Cylinder Block Assembly	45
Front Axle, Brake and Tire Assembly	14	Cylinder Head Assembly	46
Lift Arm and Cylinder Assembly	15	Piston and Crankshaft Assembly	47
Hydraulic Cylinder Assembly No. 95-5699	16	Camshaft and Valves Assembly	49
Brake Pedals and Linkage Assembly	17	Oil System Assembly	52
Control Console and Tool Box Assembly	18	Oil Pump Assembly	53
Control Console Assembly	19	Coolant System Assembly	54
Engine and Fan Drive Assembly	20	Coolant Outlet Box Assembly	55
Drive Shaft and Adapter Assembly	22	Intake Manifold Assembly	56
Engine Drive Shaft Assembly No. 100-1353	23	Injection Pump Assembly	57
4 WD Drive Shaft Assembly No. 93-5042	24	Fuel Injector and Plumbing Assembly	58
2WD Rear Axle	25	Engine Mount Assembly	59
Tie Rod Assembly No. 104-0100-03	26	Alternator Assembly	60
Steering Cylinder Assembly No. 93-5502	27	Starter and Glow Plugs Assembly	61
Axle Assembly (Model 30301TC Only)	28	Fuel Filter Assembly	62
4WD Rear Axle ASM (Model 30302TC Only)	29	Electrical Schematic	63
4WD Rear Axle Assembly No. 95-2592 (Model 30302TC Only)	30	Hydraulic Schematic	64


Accessories

Description	Model / Part No.	Description	Model / Part No.
Two Post ROPS Kit	30388	Road Light Kit	30397
Cruise Control Kit	30394	Standard Seat Kit	30398
Standard Seat Suspension Kit	30395	Armrest Kit	30707
Deluxe Seat Suspension Kit	30396	Hydraulic Kit (Contour Deck)	30726

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

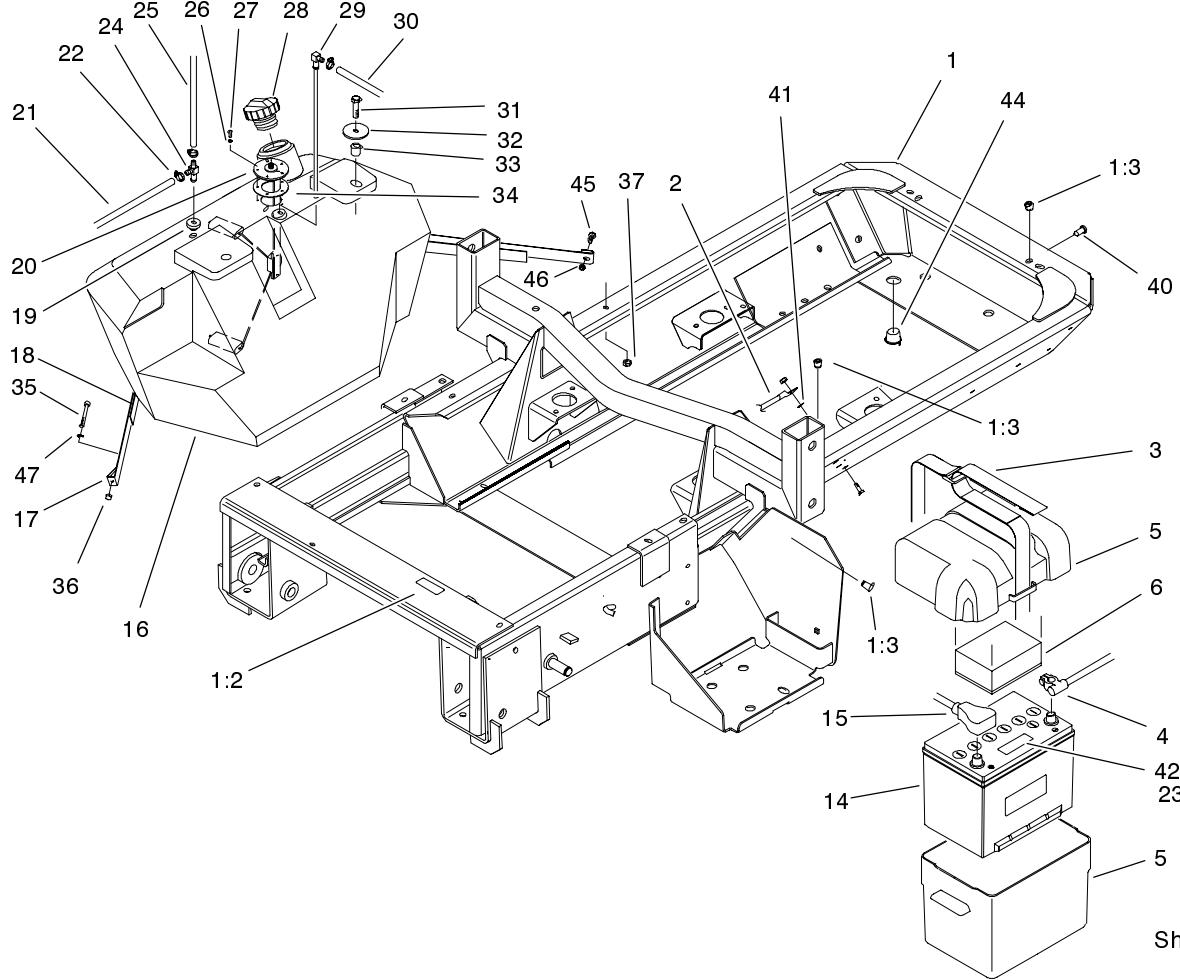


Sheet No.:2

Frame, Fuel Tank and Battery Assembly

Ref. No.	Part No.	Qty.	Description
1	104-0123	1	Frame Assembly
1:2	93-8067	1	Decal-Oil, Hyd
1:3	93-5450	7	Nut-Clinch
2	18-2770	1	Ground Cable
3	94-1445	1	Strap - Battery
4	93-5418	1	Cable-Battery,N
5	93-7595	1	Box-Battery
6	93-7968	1	Pad - Foam
14	63-9230	1	Battery - Dry
15	98-7093	1	Cable-Battery, Positive
16	95-5621	1	Tank - Fuel
17	95-3034	1	Strap
18	93-5273	1	Strap-Felt
19	46-6560	2	Bushing
20	92-9267	1	Sender - Fuel
21	93-5483	1	Hose - Fuel
22	2412-108	3	Clamp-Worm
24	93-5119	1	Fitting
25	95-5936	1	Hose - Fuel
26	3253-15	5	Washer-Lock/Sp
27	32122-24	5	Screw-Pth
28	93-3102	1	Cap-Fuel
29	93-5453	1	Pipe - Stand
30	93-5484	1	Hose - Fuel
31	33105-040	2	Screw-HHF


Ref. No.	Part No.	Qty.	Description
32	83-1040	2	Washer - Flat
33	93-5384	2	Spacer
34	62-7650	1	Gasket
35	3274-62	1	Screw-HSH
36	32146-17	1	Nut-Lock
37	33025-00	2	Nut-Lock
40	237-37	3	Grommet
41	3254-6	1	Washer-Lock, Internal
42	93-7276	1	Decal-Danger
42	93-6668	1	Decal-Battery
44	95-1587	2	Plug - 1"
45	33103-016	1	Screw-HHF
46	33023-00	1	Nut-Lock
47	3253-3	1	Washer-Lock

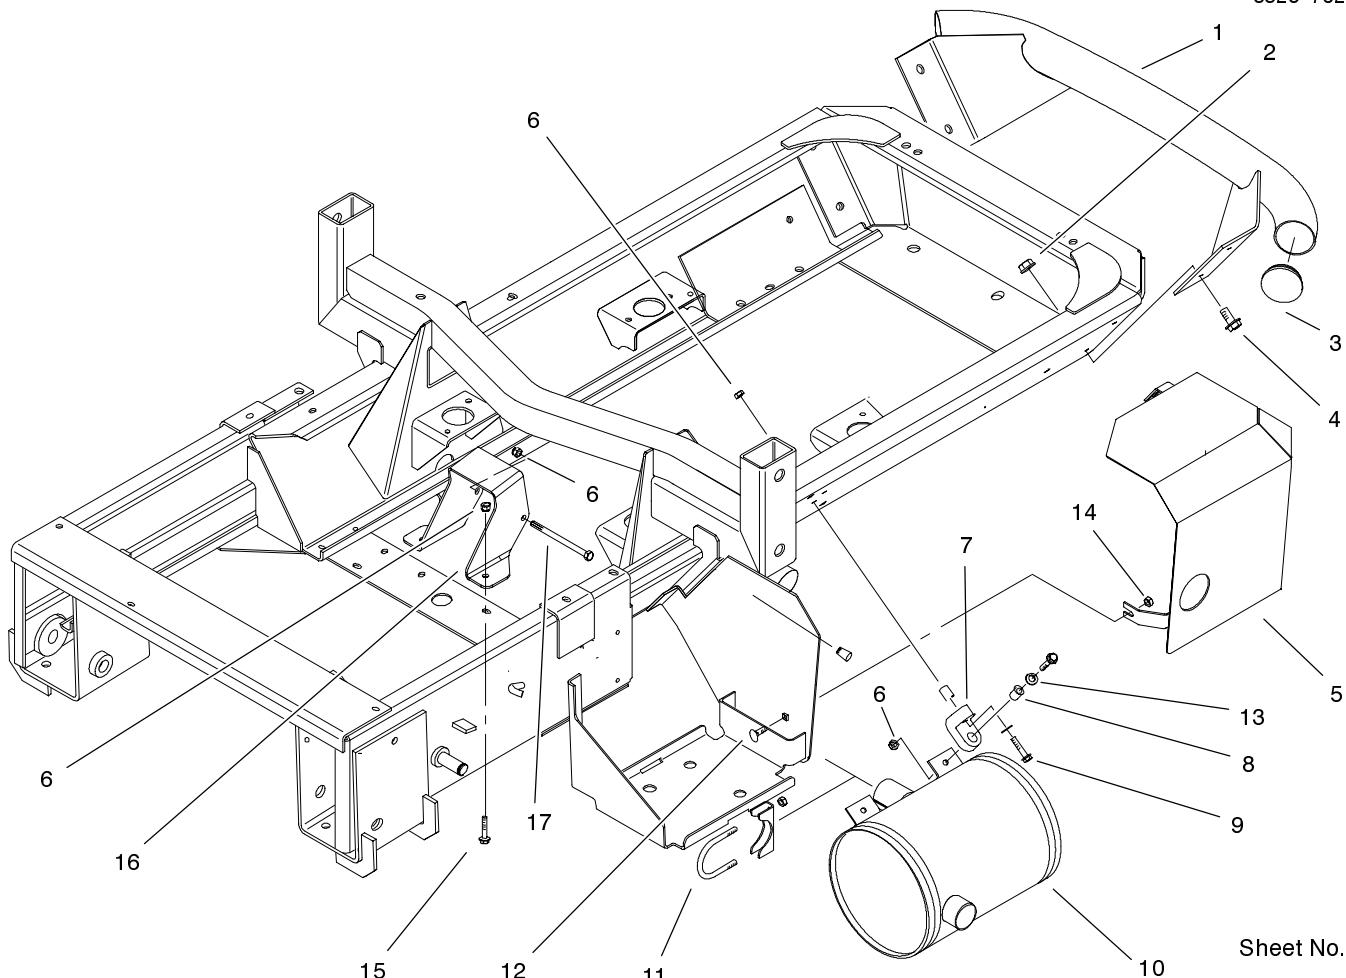

Sheet No.:3

Muffler and Bumper Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5440-03	1	Bumper ASM				
2	33006-00	4	Nut-Hex Flange				
3	2410-42	2	Cap-End				
4	33106-030	4	Screw-HHF				
5	93-5594-03	1	Guard-Muffler				
6	33024-00	6	Nut-Lock				
7	95-5622	2	Hanger - Rubber				
8	93-5023	4	Spacer				
9	33104-035	4	Screw-HHF				
10	93-5946	1	Muffler W/ Spark Arrestor				
11	2112-6	1	Clamp-Muffler				
12	33124-020	3	Screw-CARR				
13	3256-3	4	Washer-Flat				
14	33004-00	3	Nut-HF				
15	33104-020	2	Screw-HHF				
16	95-2637-03	1	Guard-Shaft				
17	33114-120	1	Screw-HH				

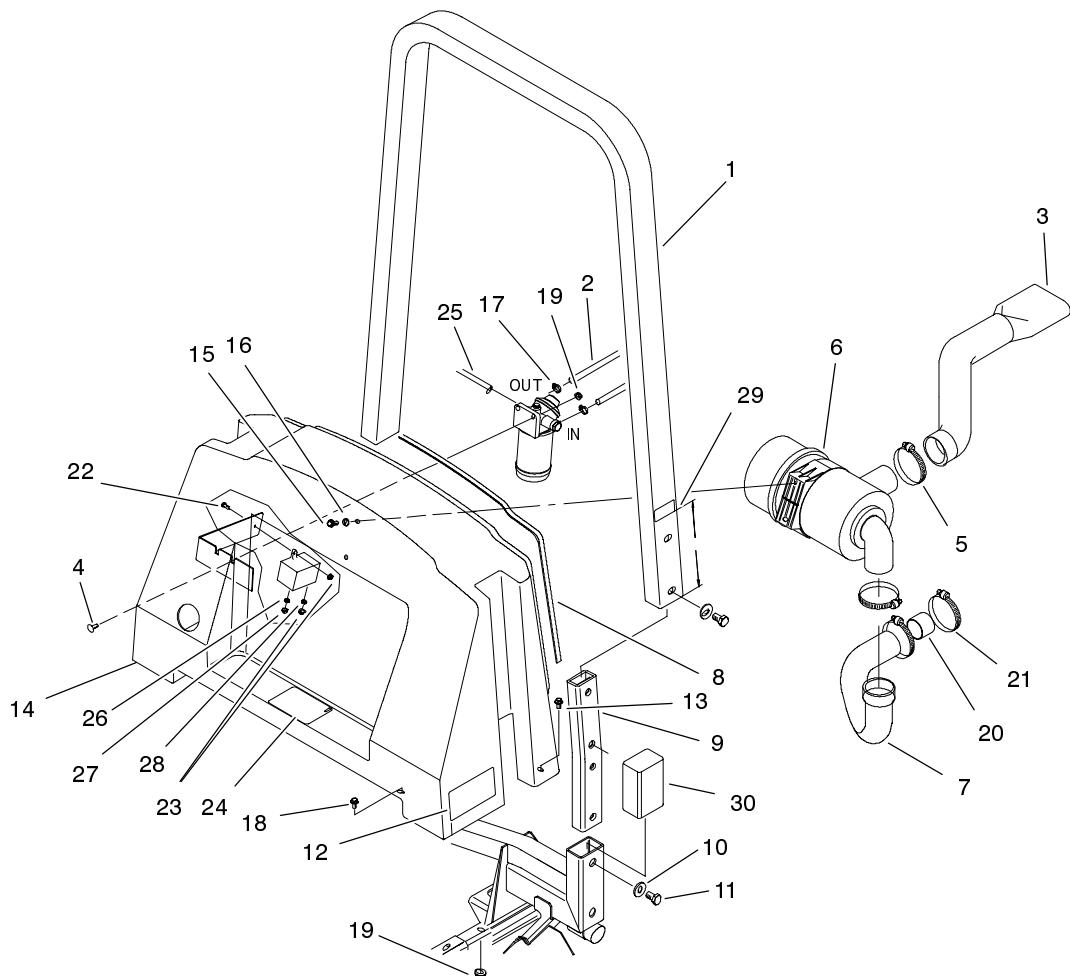


Sheet No.:4

Center Shroud, Air Cleaner and Roll-Over-Protection System Assembly

Ref. No.	Part No.	Qty.	Description
1	93-5044-03	1	Rops (only on: 30302tc)
2	95-5936	1	Hose - Fuel
3	93-5083	1	Hose-Air Cleaner
4	33124-025	2	Screw-CARR
5	2412-110	2	Hose Clamp
6	93-5111	1	Air Cleaner
7	93-5084	1	Hose-Air Cleaner
8	93-5253	1	Strip-Foam, Hood
9	93-5157-03	2	Bar-Rops (only on: 30302tc)
10	3256-6	8	Washer-Flat (only on: 30302tc)
11	93-5420	8	Screw-HH (only on: 30302tc)
12	94-8099	2	Decal - 4wd (only on: 30302tc)
13	33104-016	2	Screw-HHF
14	93-5645	1	Center Shroud ASM
15	33104-020	2	Screw-HHF
16	3256-3	2	Washer-Flat
17	2412-108	2	Clamp-Worm
18	33104-025	2	Screw-HHF
19	33004-00	4	Nut-HF


Ref. No.	Part No.	Qty.	Description
20	93-5427	1	Spacer - Intake
21	2412-130	2	Hose Clamp
22	33113-020	1	Screw-HH
23	33003-00	2	Nut-HF
24	93-9894	1	Decal - Safety
25	68-5910	1	Hose-Fuel Line, 19"
26	3255-10	1	Washer-Lock/Ext
27	48-7880	1	Nut-Hex
28	3255-7	1	Washer-Lock/Ext
29	95-5646	1	Decal - Rops (only on: 30302tc)
30	93-5638	2	Cover - Tube (only on: 30301tc)

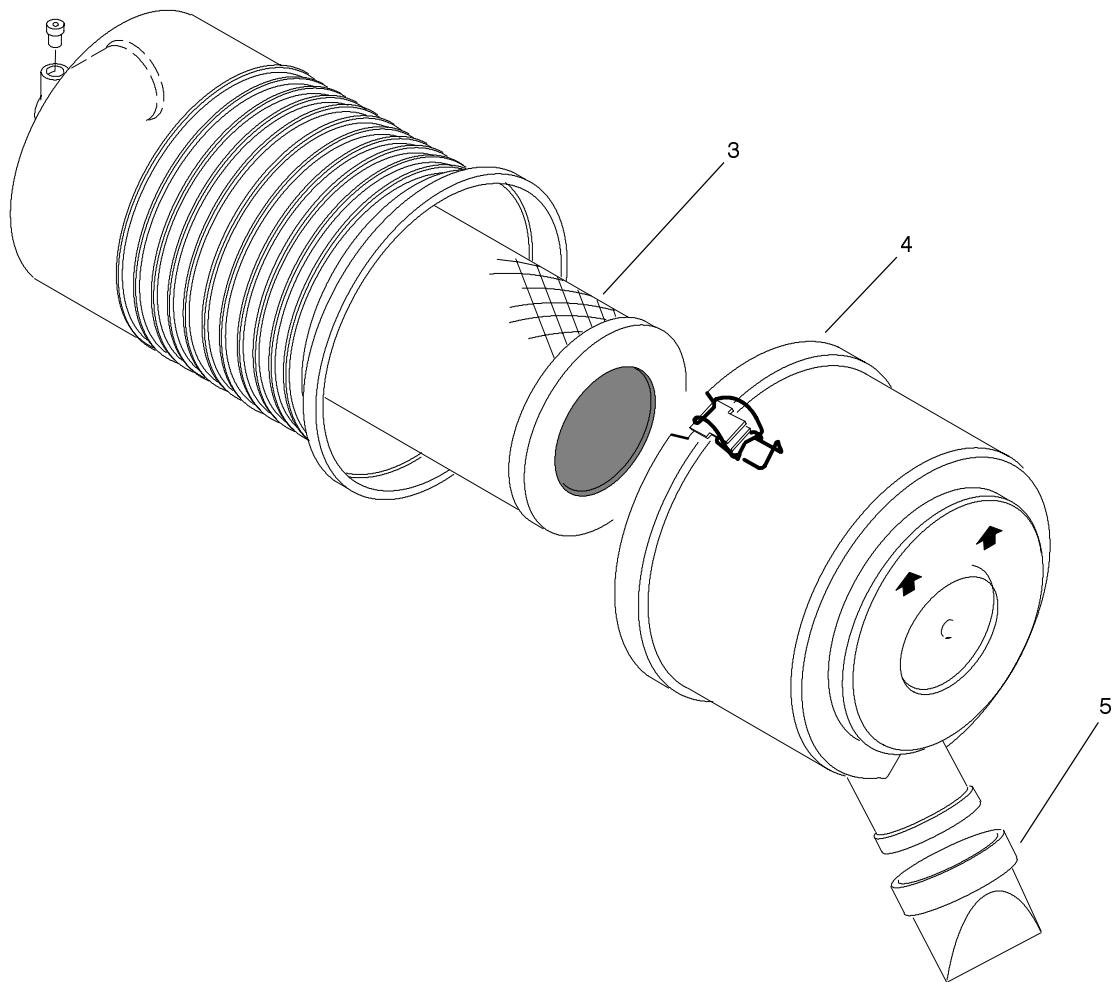

Sheet No.:A1
T-2252-1

Air Cleaner Assembly No. 93-5111

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
3	94-1412	1	Filter - Primary				
4	93-5986	1	Cover ASM				
5	94-1414	1	Valve-Vacuator				

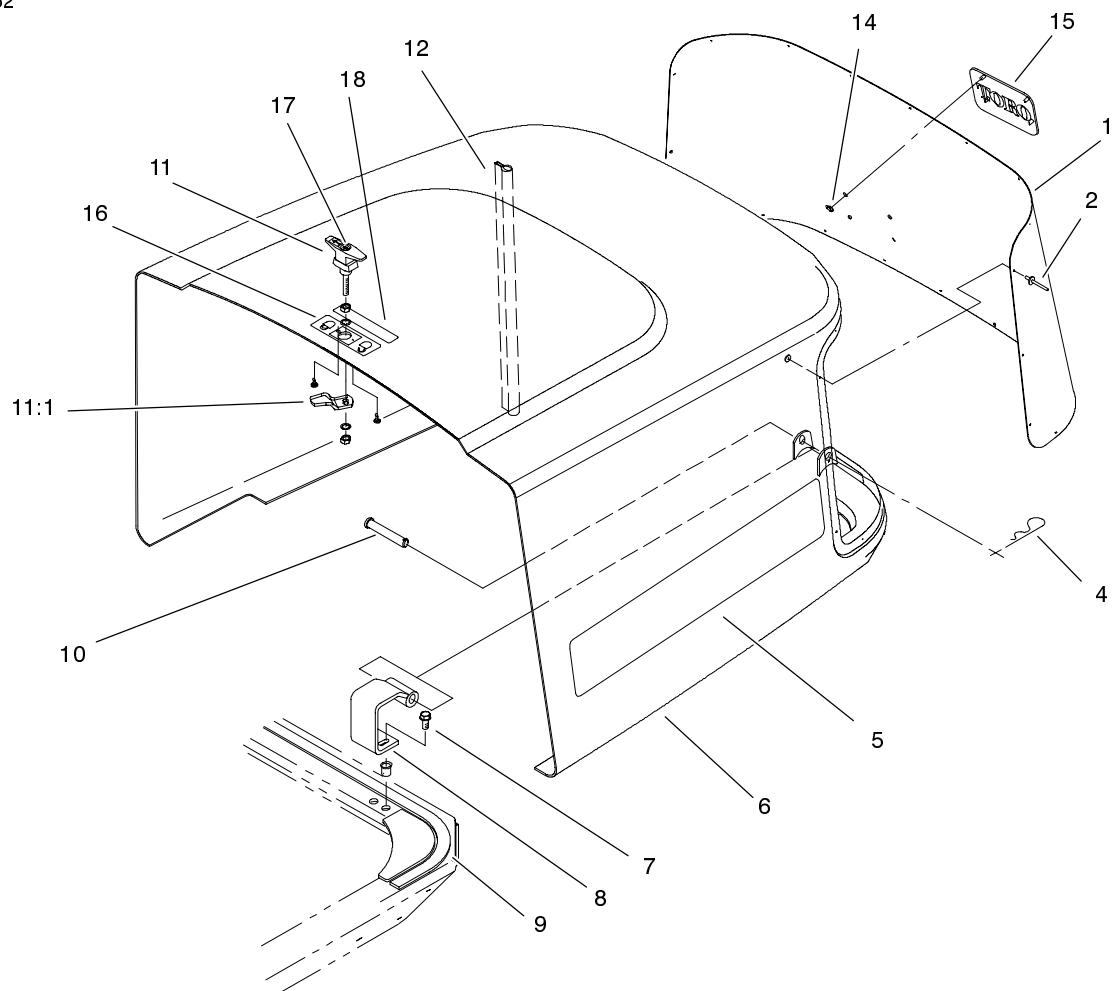


Sheet No.:5

Hood Assembly

Ref. No.	Part No.	Qty.	Description
1	93-5229-03	1	Screen-Rear
2	104-1417	22	Rivet-Plastic
4	3290-467	2	Pin-Hair
5	93-5422	2	Decal - Hood
6	93-5086	1	Hood ASM
7	33104-020	4	Screw-HHF
8	93-5093-03	2	Pivot-Hood
9	93-5254	1	Strip-Foam, Rear
10	283-55	2	Pin-Clevis
11	93-5570	1	Latch - Handle
11:1	93-5566	1	Arm-Latch
12	93-5250	2	Seal-Bulb, Side
14	94-2638	4	Nut-Tinnerman
15	93-6028	1	Plate - Logo, Toro
16	94-6328	1	Decal - Hood Lock
17	94-6329	1	Decal - Arrow
18	93-7272	1	Decal - Warning


Ref. No.	Part No.	Qty.	Description

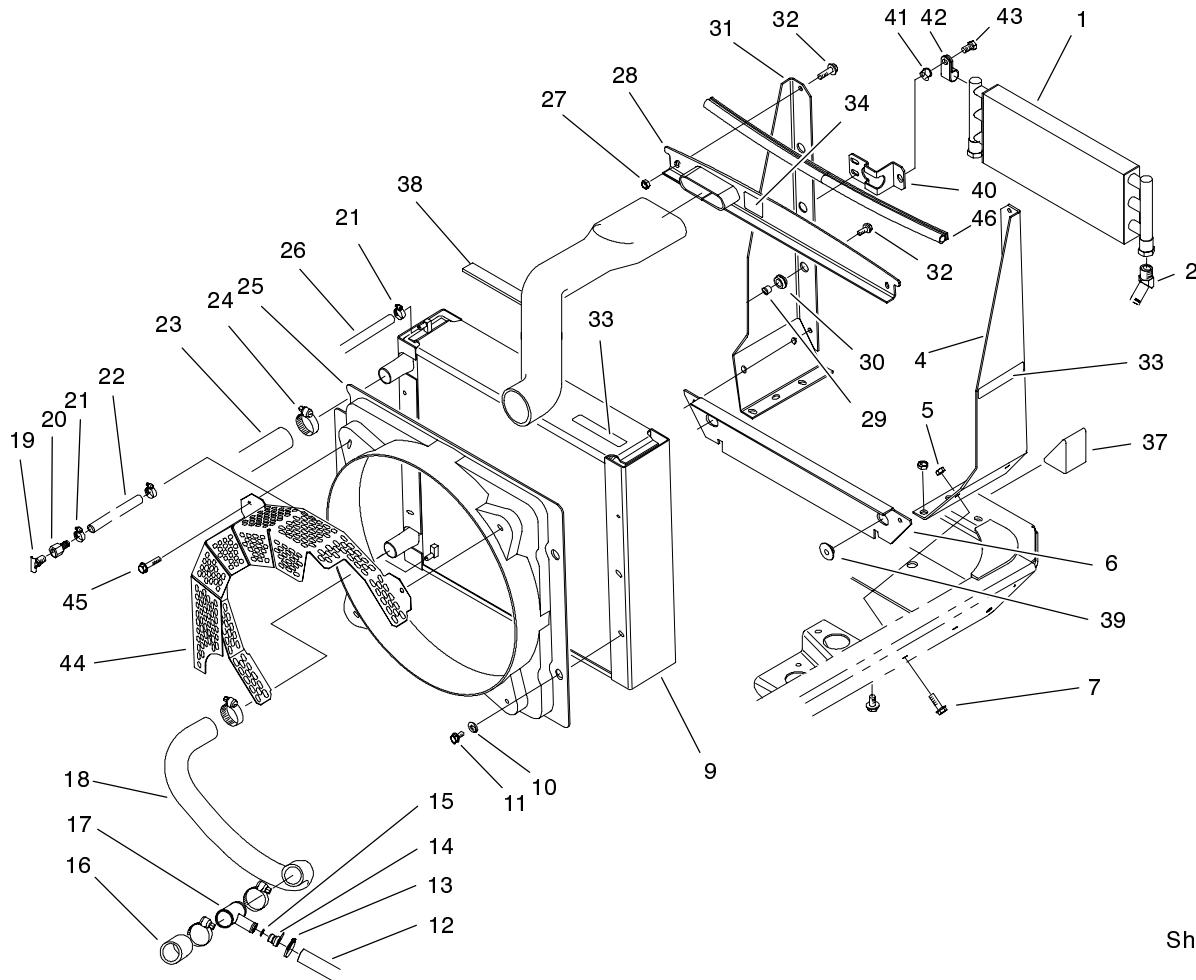

Sheet No.:6

Radiator, Oil Cooler and Support Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	63-5400	1	Exchanger-Heat	23	93-5595	1	Hose - Radiator, Upper
2	95-5629	2	Fitting - 45 DEG	24	2412-111	6	Clamp
4	93-5105-03	1	Support - Radiator	25	93-5034	1	Shroud - Radiator
5	33025-00	4	Nut-Lock	26	93-5538	1	Hose - Peugeot
6	95-0987-03	1	Support-Radiator, Lower	27	33024-00	4	Nut-Lock
7	33105-030	4	Screw-HHF	28	99-5799-03	1	Support ASM
9	93-5942	1	Radiator	29	93-5109	6	Spacer
10	3256-35	4	Washer-Flat	30	93-5108	6	Grommet - Rubber
11	33104-016	4	Screw-HHF	31	93-5104-03	1	Support - Radiator
12	93-5537	1	Hose - Peugeot	32	33104-020	10	Screw-HHF
13	2412-141	2	Clamp-Drive, Worm	33	93-7272	3	Decal - Warning
14	93-5054	1	Fitting-Restriction	34	93-7275	1	Decal-Fluid, Starting
15	93-5392	1	O-Ring	37	93-5954	2	Foam - Plug
16	93-5597	1	Hose - Radiator	38	95-0698	1	Strip - Foam
17	93-5053	1	Fitting-Radiator	39	240-3	2	Grommet-Rubber
18	93-5596	1	Hose - Radiator, Lower	40	95-0972-03	2	Bracket - Cooler
19	93-5528	1	Fitting- Drain Cock	41	32148-9	2	Nut-Insert
20	354-94	1	Hose-Female, Barb	42	2412-81	2	Clamp
21	2412-36	3	Clamp-Hose (only on: 30302tc)	43	323-6	2	Screw-HH
21	2412-36	5	Clamp-Hose (only on: 30301tc)	44	98-0663-03	1	Guard - Fan
22	104-0109	1	Hose	45	33104-020	3	Screw-HHF (only on: 30302tc)
				46	93-5251	1	Seal-Bulb, Top

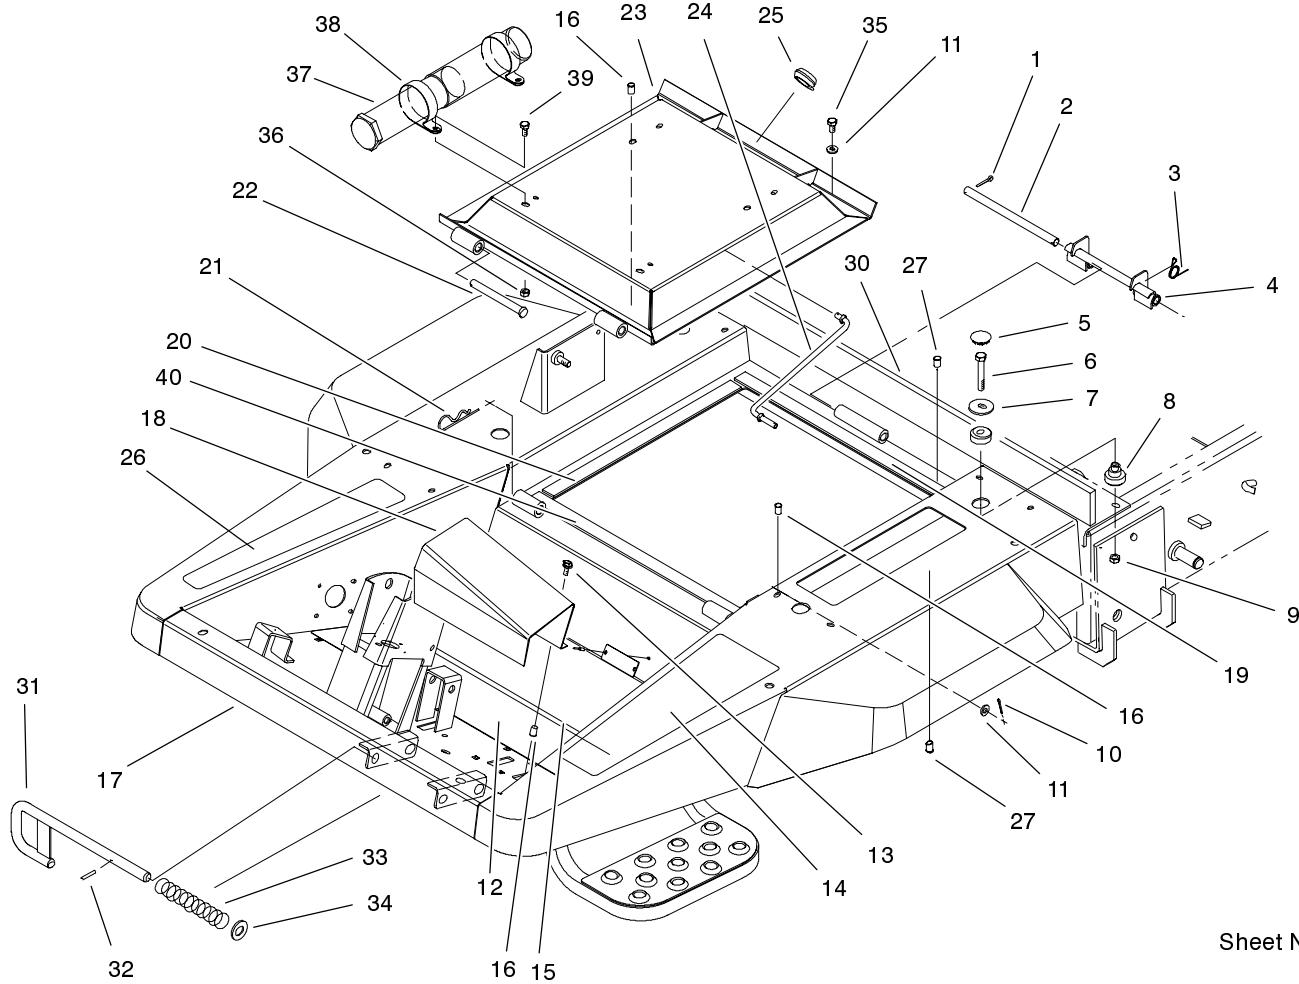


Sheet No.:7

Operator Platform and Seat Base Assembly

Ref. No.	Part No.	Qty.	Description
1	3272-11	2	Pin-Cotter
2	93-5366	1	Shaft-Latch
3	93-5367	1	Spring-Torsion
4	93-5363	1	Latch ASM
5	93-3094	4	Plug - Cap
6	33115-060	4	Screw-HH
7	93-5308	4	Washer-Iso Mount
8	93-5307	4	Mount -Iso
9	33025-00	4	Nut-Lock
10	3272-5	2	Pin-Cotter
11	3256-23	4	Washer-Flat
12	93-5348	1	Abrasive-Floor
13	33103-016	2	Screw-HHF
14	93-5507	1	Abrasive - Platform
15	93-5349	1	Abrasive-Floor
16	93-5447	13	Nut-Clinch
17	93-5232-01	1	Platform
18	93-5310-01	1	Cover-Tubes
19	93-5335	1	Strip-Foam, Seat (only on: 30302tc)
20	93-5334	2	Strip-Foam, Seat
21	3290-355	2	Pin-Hair
22	283-83	2	Pin-Clevis
23	98-2395-03	1	Seat-Base
24	93-5338	1	Rod-Prop
25	240-5	1	Grommet


Ref. No.	Part No.	Qty.	Description
26	93-7834	1	Decal-Footrest, RH
27	93-5449	4	Nut-Clinch
30	93-5255	1	Strip-Foam, Plat
31	95-3033	1	Rod
32	32121-79	1	Pin-Roll
33	28-0570	1	Comp Spring
34	3256-69	1	Washer-Flat
35	33114-020	2	Screw-HH (only on: 30301tc)
36	33024-00	2	Nut-Lock
37	74-0720	1	Tube-Manual
38	2412-133	2	R-Clamp
39	33114-016	2	Screw-HH
40	99-5789	1	Strip-Foam

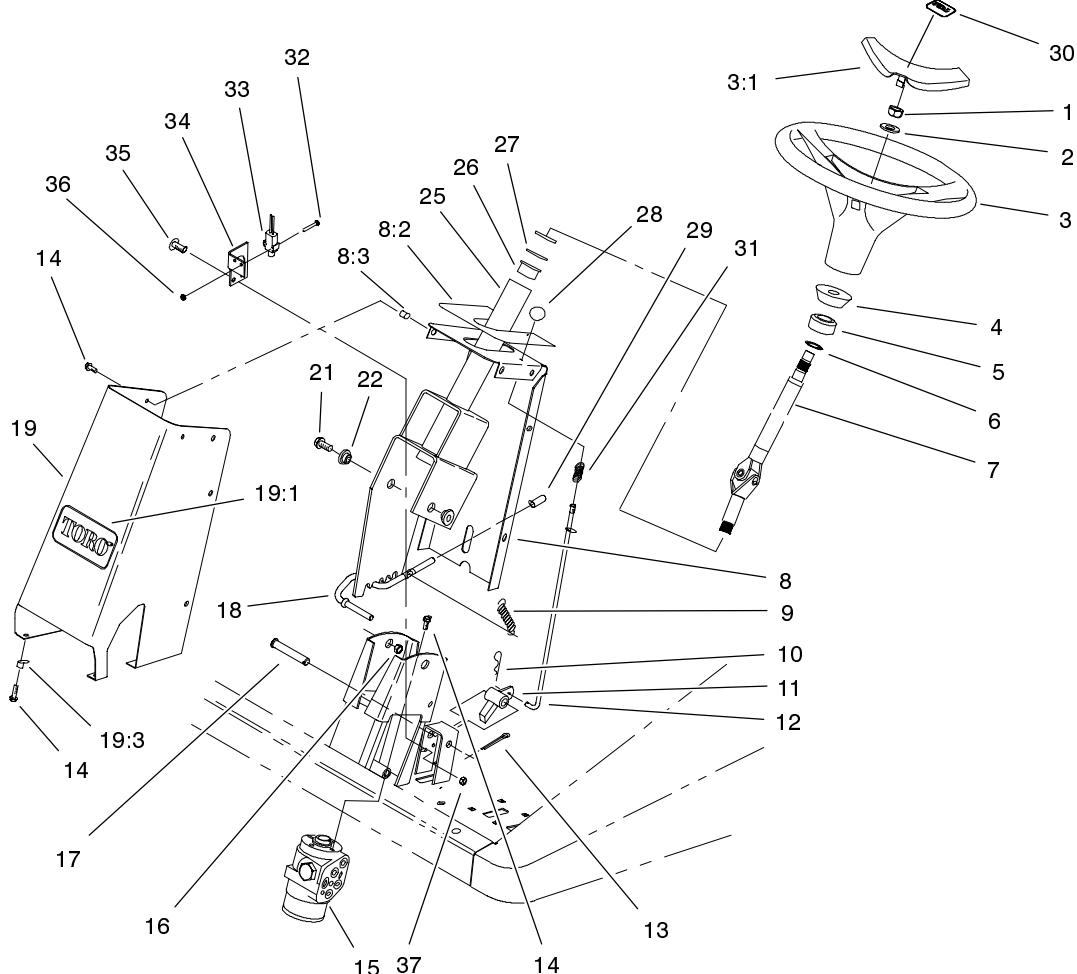

Sheet No.:8

Steering Tower Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5590	1	Nut-Hex	19:3	93-5447	4	Nut-Clinch
2	3256-27	1	Washer-Flat	21	33105-025	2	Screw-HHF
3	98-1471	1	Wheel - Steering	22	93-5988	2	Hub - Pivot
3:1	98-1468	1	Cover-Wheel, Steering	25	93-5205-03	1	Steering Column ASM
4	93-5429	1	Collar - Foam	26	256-132	2	Bushing-Flange
5	93-5439	1	Seal - Steering	27	256-260	4	Washer-Thrust
6	32151-29	2	Ring-Snap, External	28	93-5312	1	Knob
7	93-5428	1	Steering Shaft ASM	29	93-5446	1	Cap - Vinyl
8		1	Tower Cover ASM	30	98-1459	1	Decal-Toro
8:2	95-0814	1	Decal - Steering Tower	31	71-8310	1	Spring-Compression
8:3	93-5447	8	Nut-Clinch	32	3250-35	2	Screw-PPH
9	93-5985	1	Spring - Extension	33	99-3410	1	Switch
10	3272-5	1	Pin-Cotter	34	104-0128	1	Bracket-Switch
11	93-5276-03	1	Brake Pawl ASM	35	32122-42	2	Screw
12	104-8308	1	Rod ASM	36	3296-9	2	Nut-Lock NI
13	3272-10	1	Pin-Cotter	37	3296-42	2	Nut-Lock NI
14	33103-016	16	Screw-HHF				
15	93-5165	1	Valve - Control,Steering				
16	33005-00	2	Nut-Hex Flange				
17	283-5	1	Pin-Clevis				
18	93-5989	1	Rod-Tilt				
19	93-5633	1	Tower Housing ASM				
19:1	67-1300	1	Decal - Toro				

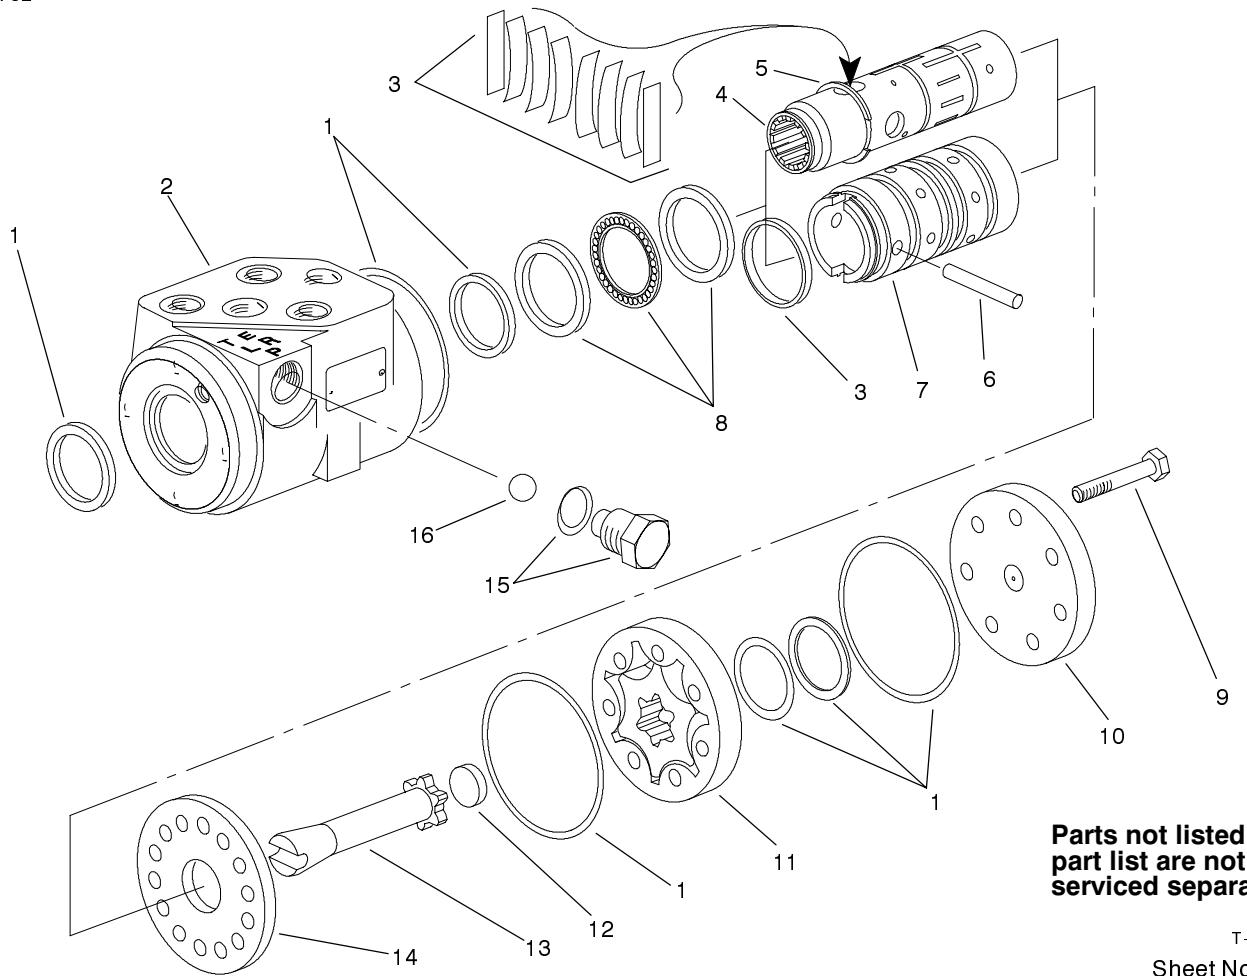


T-2312

Sheet No.:A2

Steering Control Valve Assembly No. 93-5165

Ref. No.	Part No.	Qty.	Description
1	94-4099	1	Kit - Seal
3	94-4095	1	Kit - Spring, Centering
5	94-4098	1	Ring - Retaining
6	94-4094	1	Pin
8	94-4096	1	Kit - Bearing
9	94-4088	7	Screw - Cap
10	94-4089	1	Cap - End
11	94-4090	1	Gerotor
12	94-4091	1	Spacer
13	94-4093	1	Drive
14	94-4092	1	Plate - Wear
15	94-4097	1	Plug ASM
16	94-4100	1	Ball


Ref. No.	Part No.	Qty.	Description

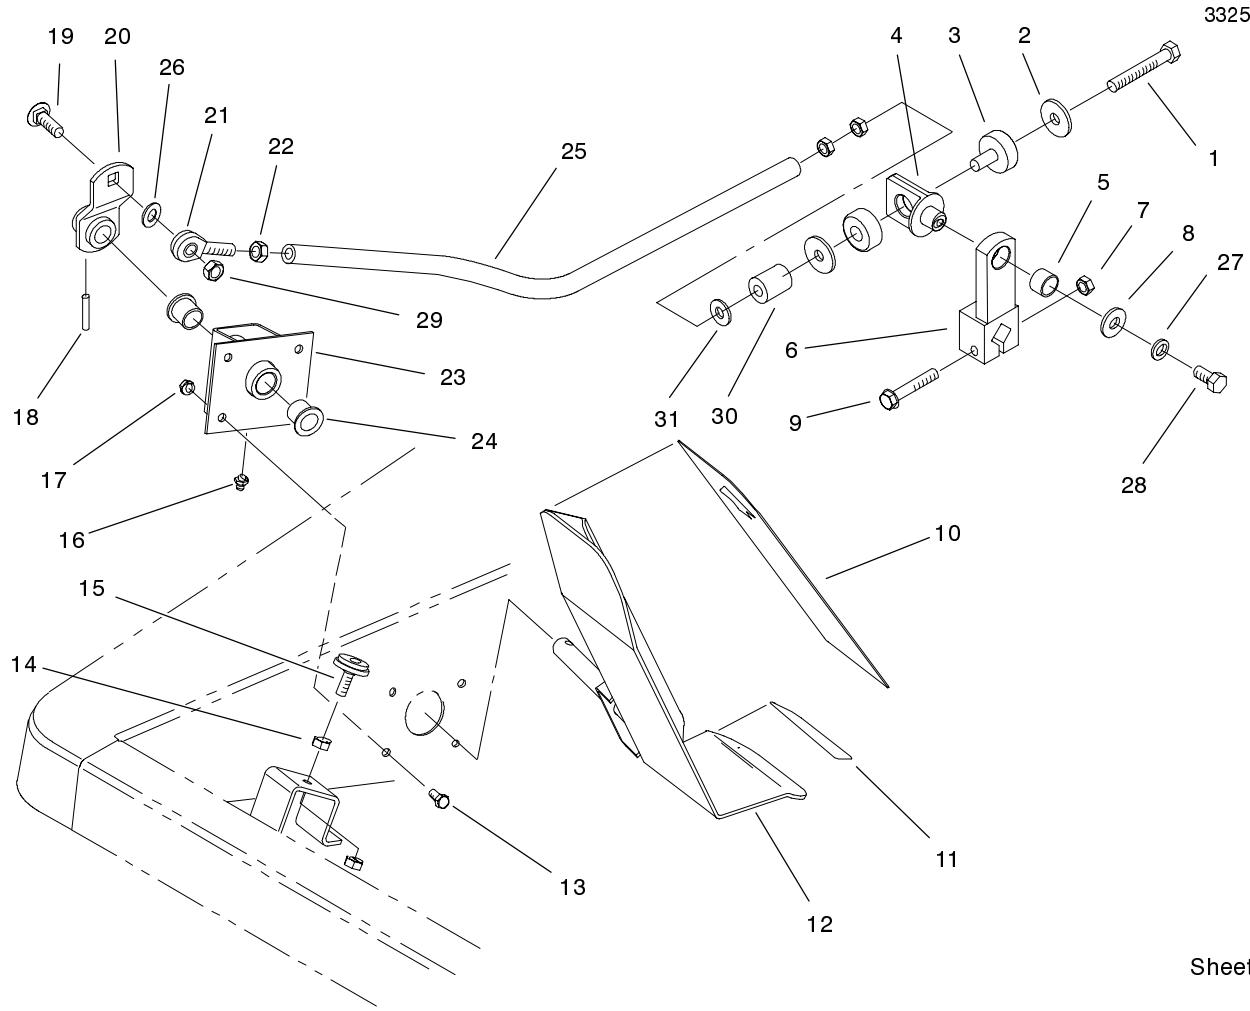

Sheet No.:9

Traction Pedal and Linkage Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3211-15	1	Screw-HH	26	3256-24	1	Washer-Flat (only on: 30302tc)
2	63-8410	2	Washer	27	3253-21	1	Washer-Lock
3	95-2596	1	Mount - Iso	28	3211-2	1	Screw-HH
4	95-2595	1	Post - Pivot	29	3296-59	1	Nut-Lock NI
5	256-42	1	Bushing	30	66-4310	1	Tube-Pivot
6	95-2598-03	1	Lever	31	3256-3	1	Washer-Flat
7	33024-00	1	Nut-Lock				
8	80-6990	1	Washer-Hardened				
9	33104-050	1	Screw-HHF				
10	93-5347	1	Abrasive-Pedal				
11	93-5368	1	Abrasive-Pedal				
12	93-5133-01	1	Traction Pedal ASM				
13	33113-016	4	Screw-HH				
14	3217-6	2	Nut-Hex				
15	32141-36	1	Screw-Adjust, Level				
16	302-5	1	Fitting-Grease				
17	33003-00	4	Nut-HF				
18	32121-9	1	Pin-Spring				
19	3231-25	1	Screw-CARR				
20	93-5137	1	Lever-Traction				
21	2411-36	1	Bearing-End, Rod				
22	3220-3	3	Nut-Jam				
23	93-5129-03	1	Bracket-Pedal				
24	256-10	2	Bushing-Flange				
25	100-5597-03	1	Tube-Control				

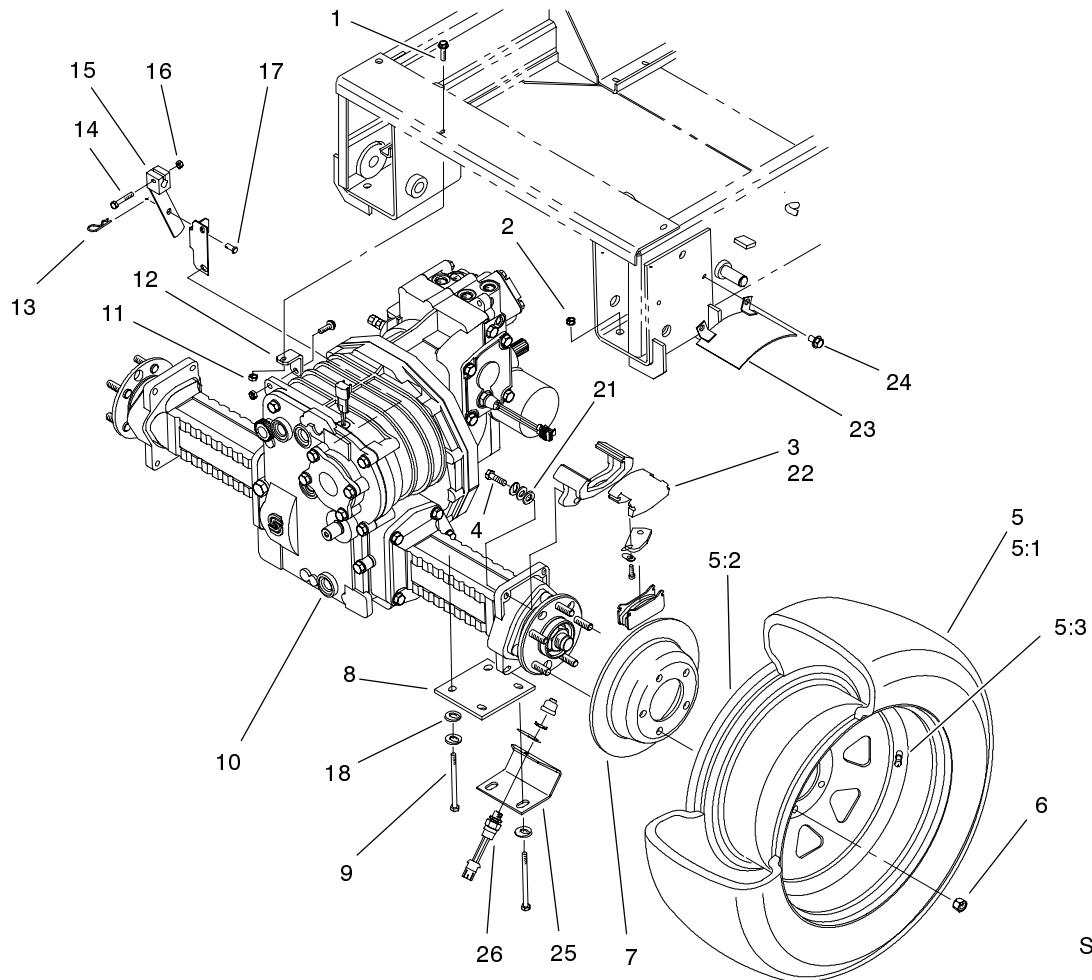


Sheet No.:10

Front Axle, Brake and Tire Assembly

Ref. No.	Part No.	Qty.	Description
1	33104-025	2	Screw-HHF
2	33006-00	8	Nut-Hex Flange
3	95-2619	1	Caliper-Brake, LH
4	323-44	4	Screw-HH
★5		2	Tire ASM
5:1	93-5431	1	Tire
5:2	93-5548	1	Wheel
5:3	232-27	1	Stem-Valve
6	93-5268	10	Nut-Lug
7	93-5958	2	Brake - Rotor
8	93-5036-03	2	Plate - Axle
9	100-1373	8	Screw-HH
10	95-2630	1	Axle - Iht
11	33024-00	2	Nut-Lock
12	93-5306	1	Bracket-Transaxle
13	3290-467	1	Pin-Hair
14	33114-040	1	Screw-HH
15	93-5383-03	1	Lever
16	33024-00	1	Nut-Lock
17	283-62	1	Pin-Clevis
18	3256-26	14	Washer-Flat
21	3290-461	12	Washer-Spring
22	95-2623	1	Caliper-Brake, RH
23	93-5977-03	2	Shield-Brake
24	32144-14	4	Screw-HWH

★ Not serviced


Ref. No.	Part No.	Qty.	Description
25	93-4869-03	1	Bracket - Switch
26	94-3429	1	Switch-Ball

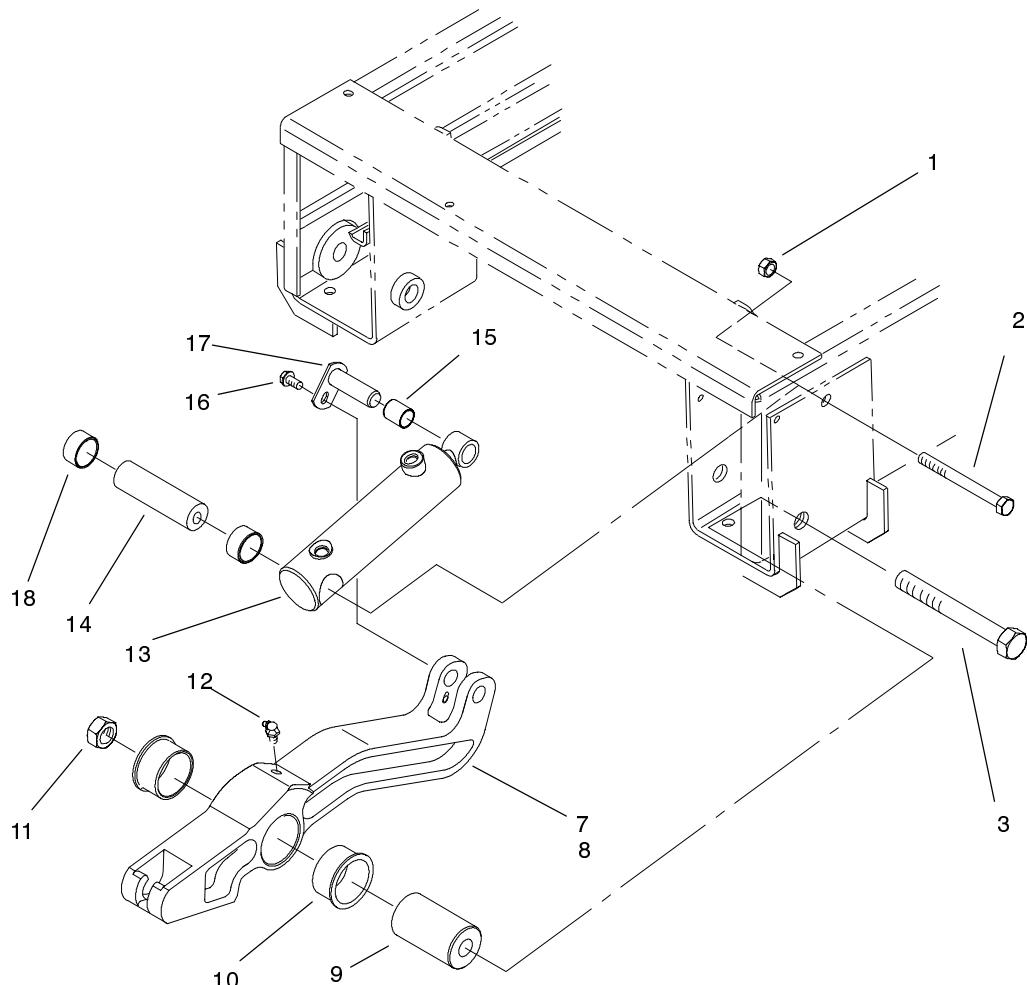

Sheet No.:11

Lift Arm and Cylinder Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	33026-00	2	Nut-Lock				
2	33116-150	2	Screw-HH				
3	33119-160	2	Screw-HH				
7	93-4868-03	1	Arm-Lift, LH				
8	93-4867-03	1	Arm - Lift, RH				
9	93-4587	2	Spacer - Pivot				
10	93-4665	4	Bushing-Flange				
11	33019-00	2	Nut-Hex				
12	302-33	2	Fitting-Grease				
13	95-5699	2	Cylinder - Hyd				
14	95-9646	2	Spacer - Cylinder				
15	93-4639	2	Bushing				
16	33104-016	2	Screw-HHF				
17	93-4630	2	Pin				
18	95-9645	4	Bushing				

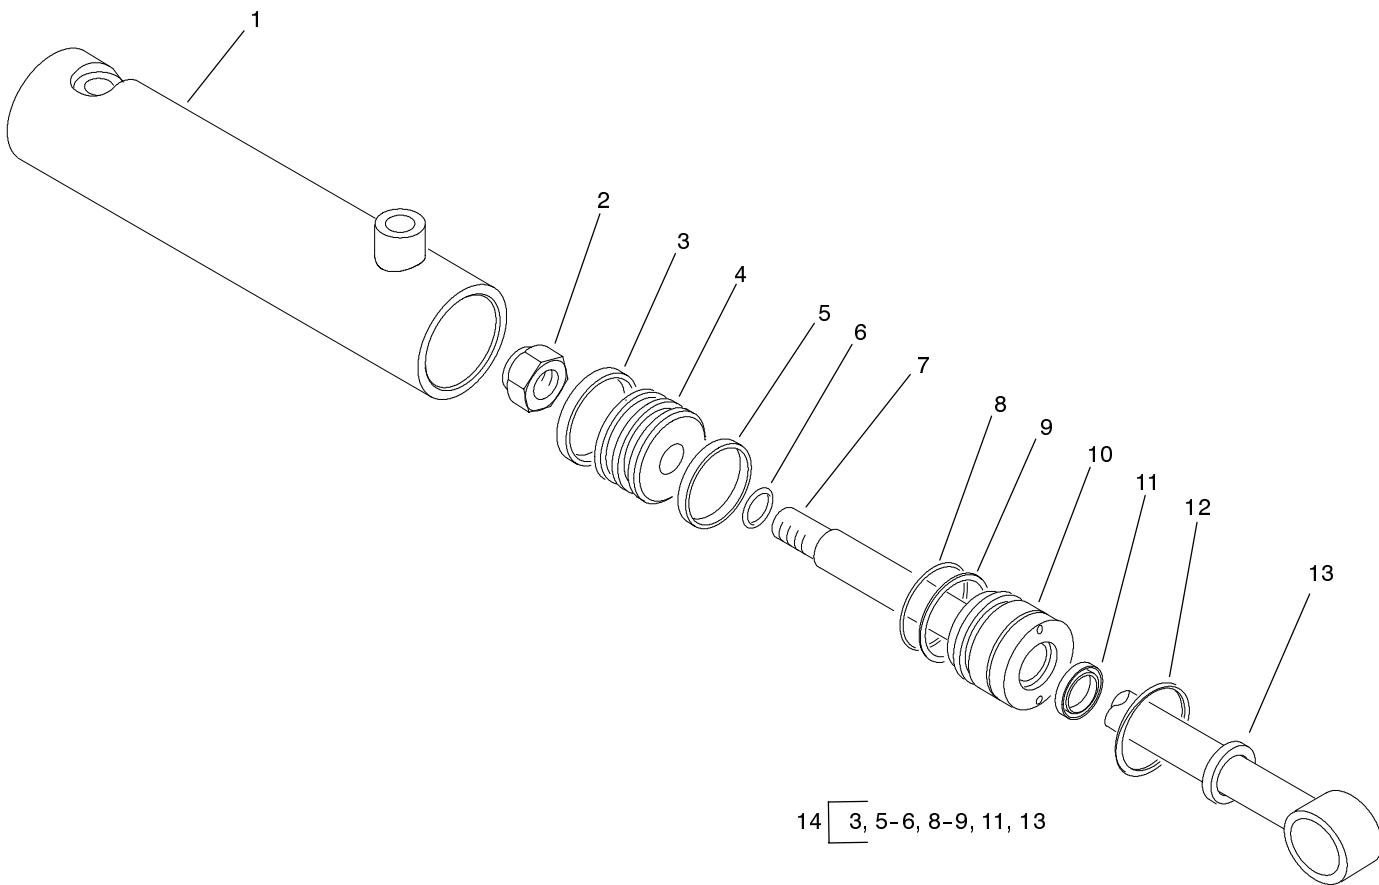


T-3210
Sheet No.:A3

Hydraulic Cylinder Assembly No. 95-5699

Ref. No.	Part No.	Qty.	Description
1	95-2606	1	Tube ASM
2	95-2601	1	Nut-Lock
4	95-2603	1	Piston
7	95-2605	1	Rod ASM
10	95-2602	1	Head
12	95-2604	1	Ring-Retaining
14	95-2607	1	Repair Kit


Ref. No.	Part No.	Qty.	Description

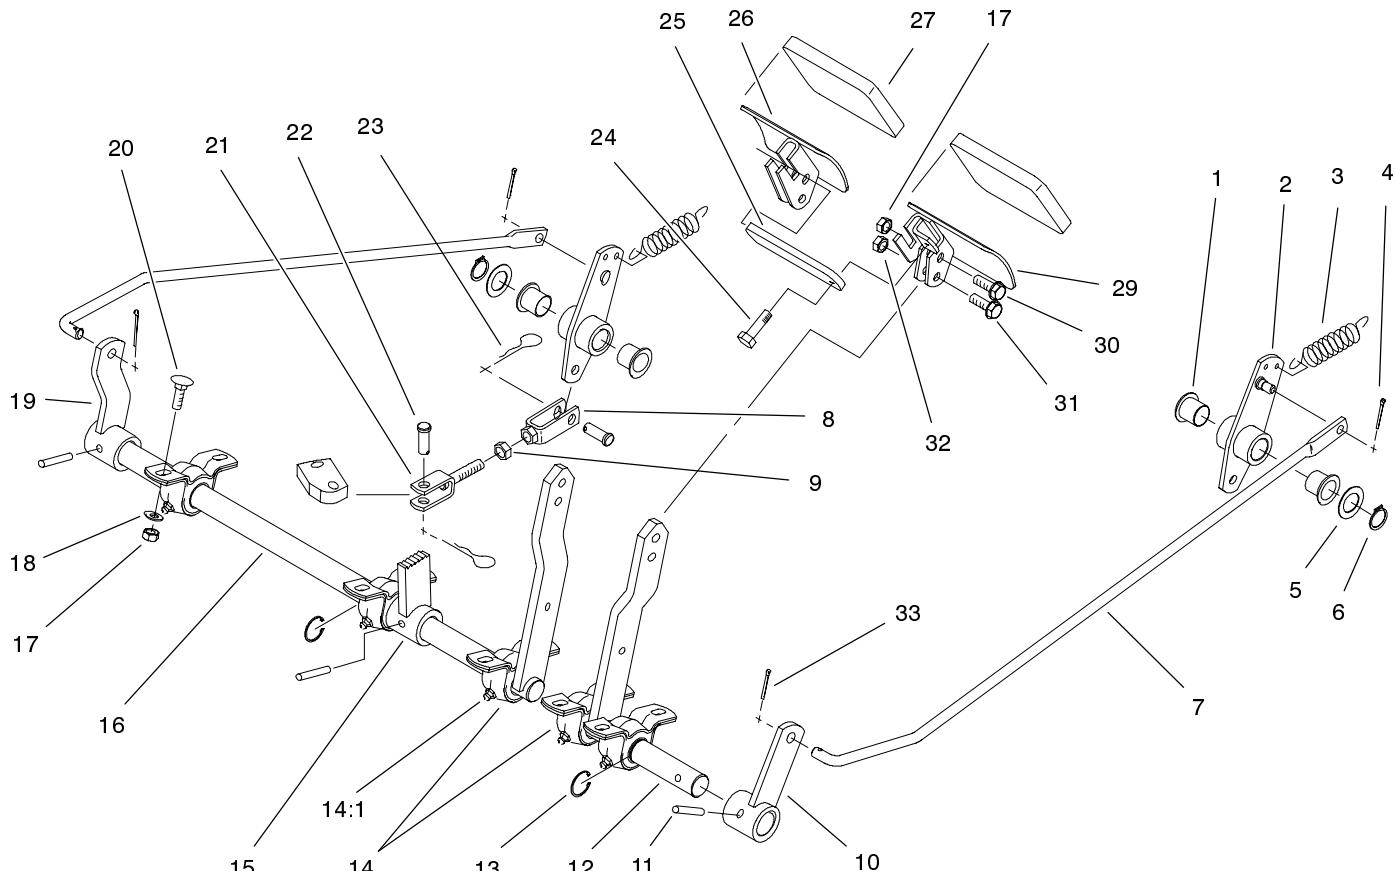

Sheet No.:12

Brake Pedals and Linkage Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5313	4	Bushing - Nylon	26	93-5456-03	1	Pedal ASM-RH
2	93-5326	2	Bellcrank	27	93-8742	2	Footpad - Brake
3	93-5262	2	Spring-Extension	29	93-5455-03	1	Pedal ASM-LH
4	3272-7	2	Pin-Cotter	30	33114-025	3	Screw-HH
5	3-6498	2	Washer-Thrust	31	322-4	1	Screw-HH
6	32120-72	2	Ring-Snap	32	3218-2	1	Nut-Jam
7	93-5333	2	Rod-Control	33	3272-10	2	Pin-Cotter
8	93-5552	2	Clevis				
9	3220-3	2	Nut-Jam				
10	93-5473-03	1	Lever-Brake, LH				
11	32121-15	3	Pin-Roll				
12	93-5280-03	1	Arm-Brake, LH				
13	32151-83	3	Ring-Snap				
14	93-4849	5	Bearing - Pillow Block				
14:1	302-5	3	Fitting-Grease				
15	93-5475-03	1	Brake Latch ASM				
16	93-5284-03	1	Arm-Brake, RH				
17	33024-00	14	Nut-Lock				
18	33094-00	10	Washer-Flat				
19	93-5474-03	1	Lever-Brake, RH				
20	33124-020	10	Screw-CARR				
21	93-5551	2	Clevis				
22	283-2	4	Pin-Clevis				
23	3290-467	4	Pin-Hair				
24	33114-020	1	Screw-HH				
25	93-5568	1	Arm - Lock				

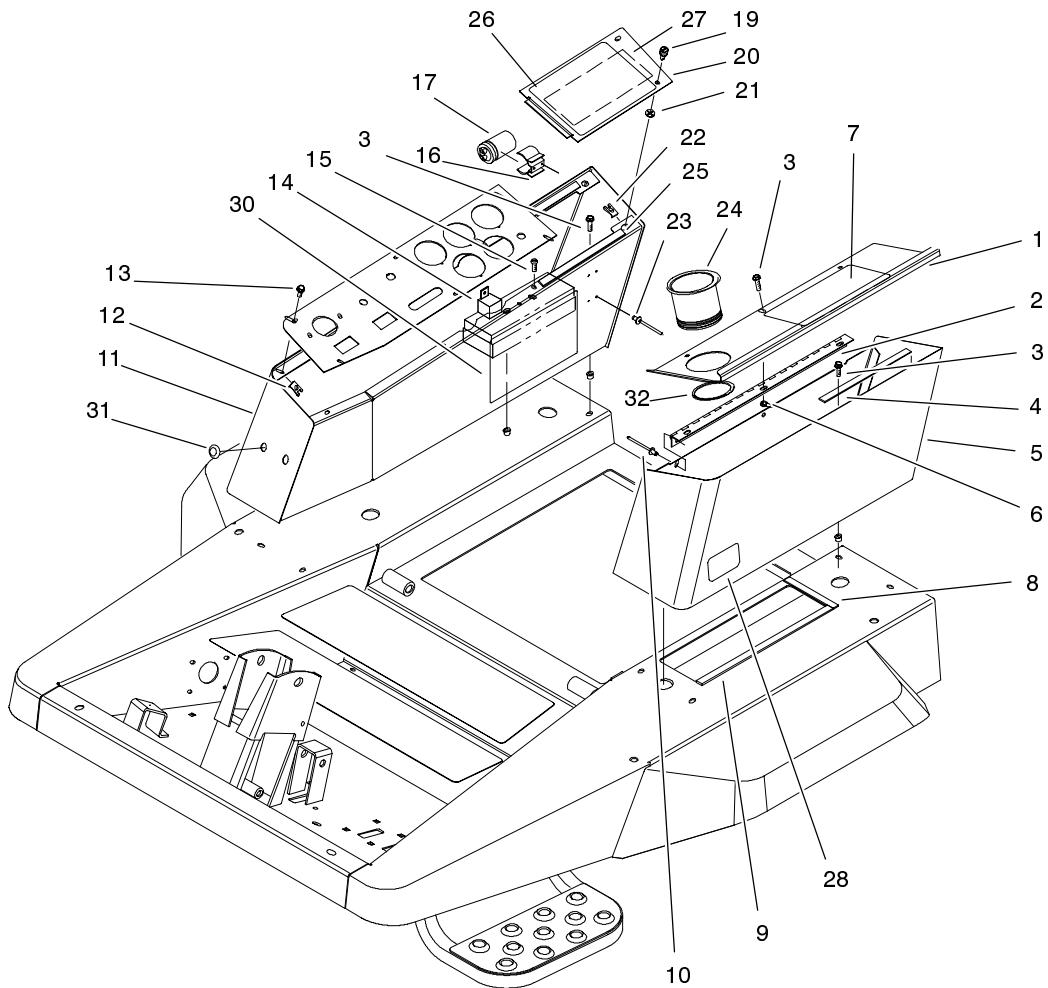


Sheet No.:13

Control Console and Tool Box Assembly

Ref. No.	Part No.	Qty.	Description
1	93-5403-03	1	Cover - Console
2	93-5554	1	Hinge - Cover
3	33103-016	12	Screw-HHF
4	66-3050	2	Latch-Tool Box
5	93-5399-03	1	Console-LH
6	33003-00	3	Nut-HF
7	93-5620	1	Decal - Warning
8	93-5413	2	Strip-Foam
9	93-5414	2	Strip-Foam
10	93-8744	3	Pop - Rivet
11	93-5369-03	1	Console
12	3290-191	6	Nut-Speed
13	3250-14	6	Screw-PPH
14	116397	7	Relay
15	93-5949	2	Screw - Machine
16	74-2310	2	Clamp-Plastic
17	37-2690	2	Capacitor
19	93-5556	2	Screw - Knurled
20	93-5527-03	1	Panel - Access
21	93-5557	2	Retainer - Nylon
22	93-5558	2	Nut - Clip On
23	117433	4	Poprivet
24	94-1410	1	Holder-Can, Beverage
25	93-5637	2	Strip - Foam
26	94-6323	1	Decal-Operator Instruction, Ce


Ref. No.	Part No.	Qty.	Description
27	93-5624	1	Decal - Fuses, Ce
28	93-7252	1	Decal-International
30	93-5934	1	Decal - Service
30	94-8050	1	Decal - Service, Danish
30	94-8051	1	Decal - Service, Dutch
30	94-8052	1	Decal - Service, Finnish
30	94-8053	1	Decal - Service, French
30	94-8054	1	Decal - Service, German
30	94-8055	1	Decal - Service, Italian
30	94-8056	1	Decal - Service, Norweg
30	94-8057	1	Decal - Service, Portug
30	94-8058	1	Decal - Service, Spanish
30	94-8059	1	Decal - Service, Swedish
31	93-5992	2	Plug - 1/2"
32	104-1476	1	Ring-Rubber

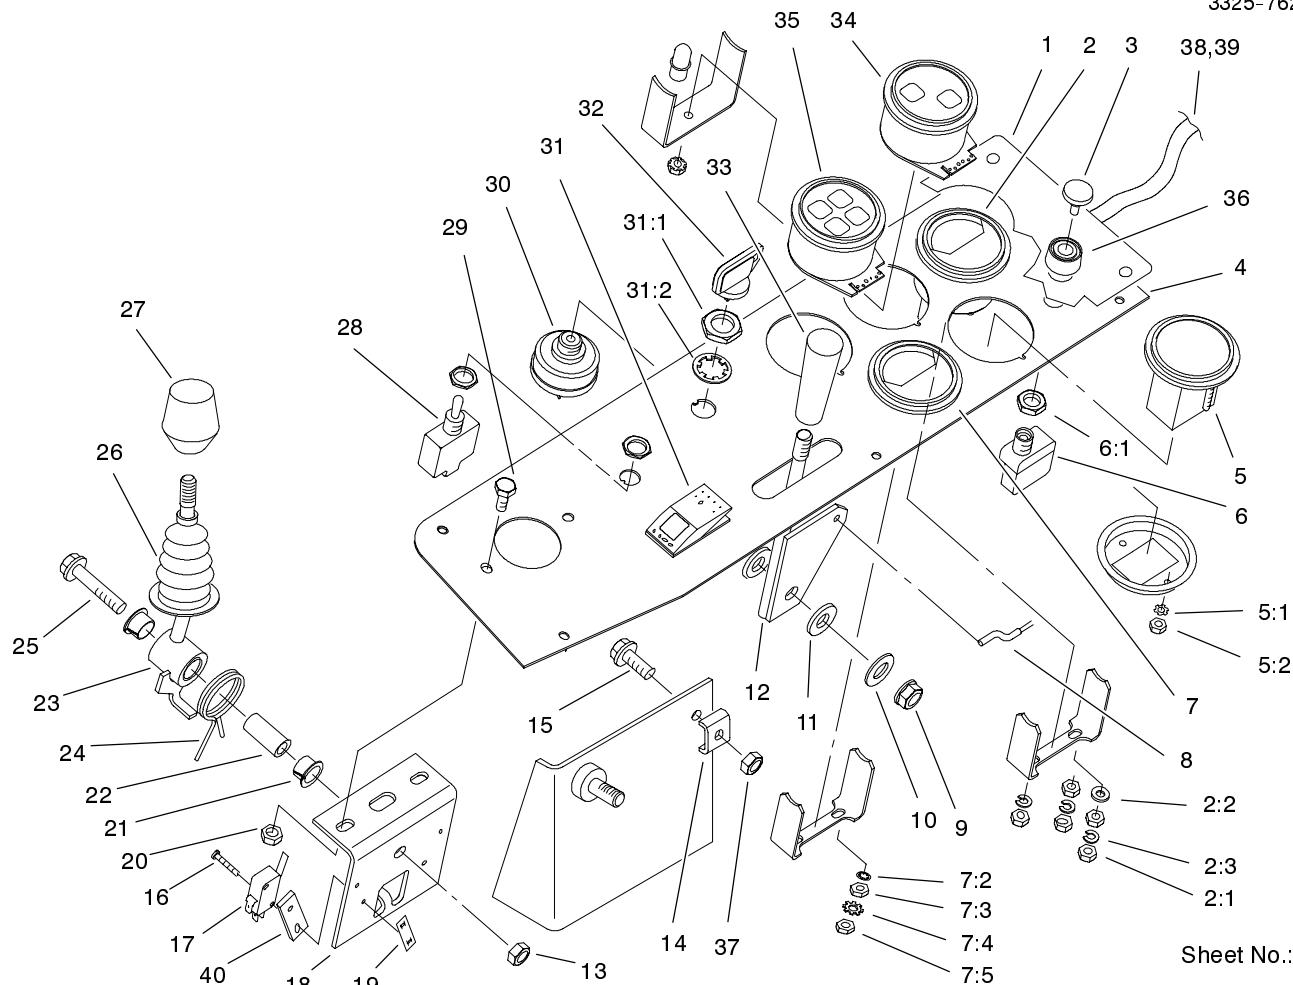

Sheet No.:14

Control Console Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5425	1	Decal - Control, DI	17	111332	2	Switch
2	76-9060	1	Gauge-Temperature	18	93-5991-03	1	Bracket - Lift Lever
2:1	3219-14	6	Nut-Hex	19	3290-354	2	Nut-Speed
2:2	3253-2	5	Washer-Lock/Sp	20	33023-00	2	Nut-Lock
2:3	3256-14	2	Washer-Flat	21	93-5547	2	Bushing - Nylon
3	43-6280	1	Button-Push	22	93-5512	1	Spacer
4	93-5376-03	1	Plate-Control, Dsl	23	93-5515-03	1	Lever
5	66-2950	1	Gauge-Hourmeter	24	93-5509	1	Spring - Tension
5:1	3255-20	2	Washer-Lock	25	33104-040	1	Screw-HHF
5:2	3217-25	2	Nut-Hex	26	93-5961	1	Boot - Lever
6	72-9760	1	Switch	27	233-37	1	Knob
6:1	218-498	1	Locknut-Hex	28	93-5270	1	Switch - PTO
7	66-2940	1	Gauge-Fuel	29	33103-016	2	Screw-HHF
7:2	3254-1	2	Washer-Lock/Int	30	27-2360	1	Switch-Key
7:3	3217-27	2	Nut-Hex	30:1	218-446	1	Nut-Hex
7:4	3255-24	3	Washer-Lock/Ext	30:2	218-447	1	Washer-Lock
7:5	3217-16	3	Nut-Hex	31	93-5476	1	Switch-Carling
8	93-5350	1	Cable-Throttle	32	62-7770	1	Key-Ignition
9	95-1579	1	Nut-Lock	33	233-39	1	Knob-Control
10	3256-24	1	Washer-Flat	34	93-5481	1	Cluster-Warning Light
11	66-2920	2	Washer-Friction	35	93-5478	1	Cluster-Warning Light
12	93-5373	1	Lever-Throttle	36	43-6420	1	Bezel
13	33024-00	1	Nut-Lock	37	33003-00	1	Nut-HF
14	29-9550	1	Cable Clamp	38	104-0130	1	Harness - Wire
15	33103-016	1	Screw-HHF	39	104-0129	1	Harness - Wire
16	3290-329	4	Screw-PPH	40	61-2990	2	Spacer

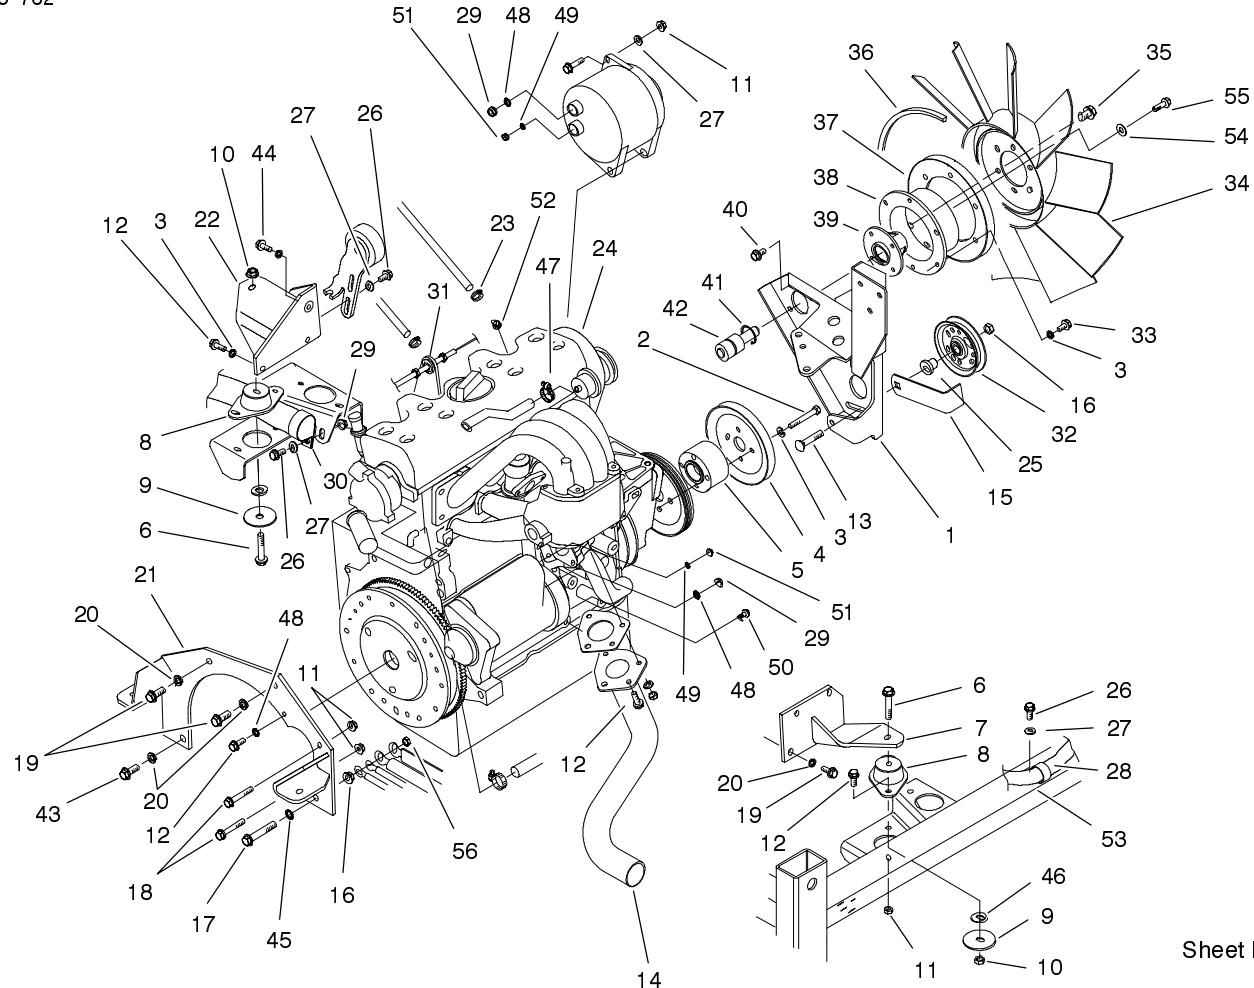


Sheet No.:15

Engine and Fan Drive Assembly

Ref. No.	Part No.	Qty.	Description
1	93-5166-03	1	Bracket-Fan
2	33114-060	4	Screw-HH
3	3253-4	13	Washer-Lock
4	93-5192-03	1	Pulley-Crank
5	93-5196	1	Spacer - Crank
6	57-6360	4	Screw-Clutch
7	93-5062-03	1	Mount-Engine, LH
8	93-5265	4	Mount-Engine
9	87-5100	4	Washer - Snubbing
10	33025-00	3	Nut-Lock
11	33024-00	11	Nut-Lock
12	33104-020	12	Screw-HHF
13	33125-040	1	Screw-CARR
14	93-5049	1	Pipe-Exhaust
15	93-5504-03	1	Lever
16	33005-00	2	Nut-Hex Flange
17	71-4690	1	Screw-HH
18	33104-050	2	Screw-HHF
19	33105-025	5	Screw-HHF
20	3253-6	6	Washer-Lock/Sp
21	93-5055-03	1	Plate-Engine, Front
22	93-5059-03	1	Mount-Engine, RH
23	2412-108	2	Clamp-Worm
24	93-5389	1	Peugeot Engine
25	93-5197	1	Spacer-Idler
26	33114-020	4	Screw-HH


Ref. No.	Part No.	Qty.	Description
27	3256-23	5	Washer-Flat
28	2412-104	1	R Clamp
29	33004-00	3	Nut-HF
30	2412-147	1	Clamp
31	86-2990	2	Mount-Throttle Cable
32	66-5310-03	1	Pulley-Idler, V
33	33114-016	6	Screw-HH
34	93-5114	1	Fan-18"
35	33105-020	7	Screw-HHF
36	95-5618	1	V-Belt
37	96-1267-03	1	Pulley - Fan, 7.375
38	93-5545	1	Hub - Fan
39	93-5187	1	Fan Hub
40	33104-016	4	Screw-HHF
41	32120-10	1	Ring-Snap
42	98-3578	1	Bearing
43	33105-035	1	Screw-HHF
44	33104-035	1	Screw-HHF
45	3255-9	1	Washer-Lock/Ext
46	33095-00	4	Washer-Flat
47	2412-36	2	Clamp-Hose
48	3255-8	3	Washer-Lock/Ext
49	3255-10	2	Washer-Lock/Ext
50	33103-016	2	Screw-HHF
51	48-7880	2	Nut-Hex
52	48-7870	1	Nut

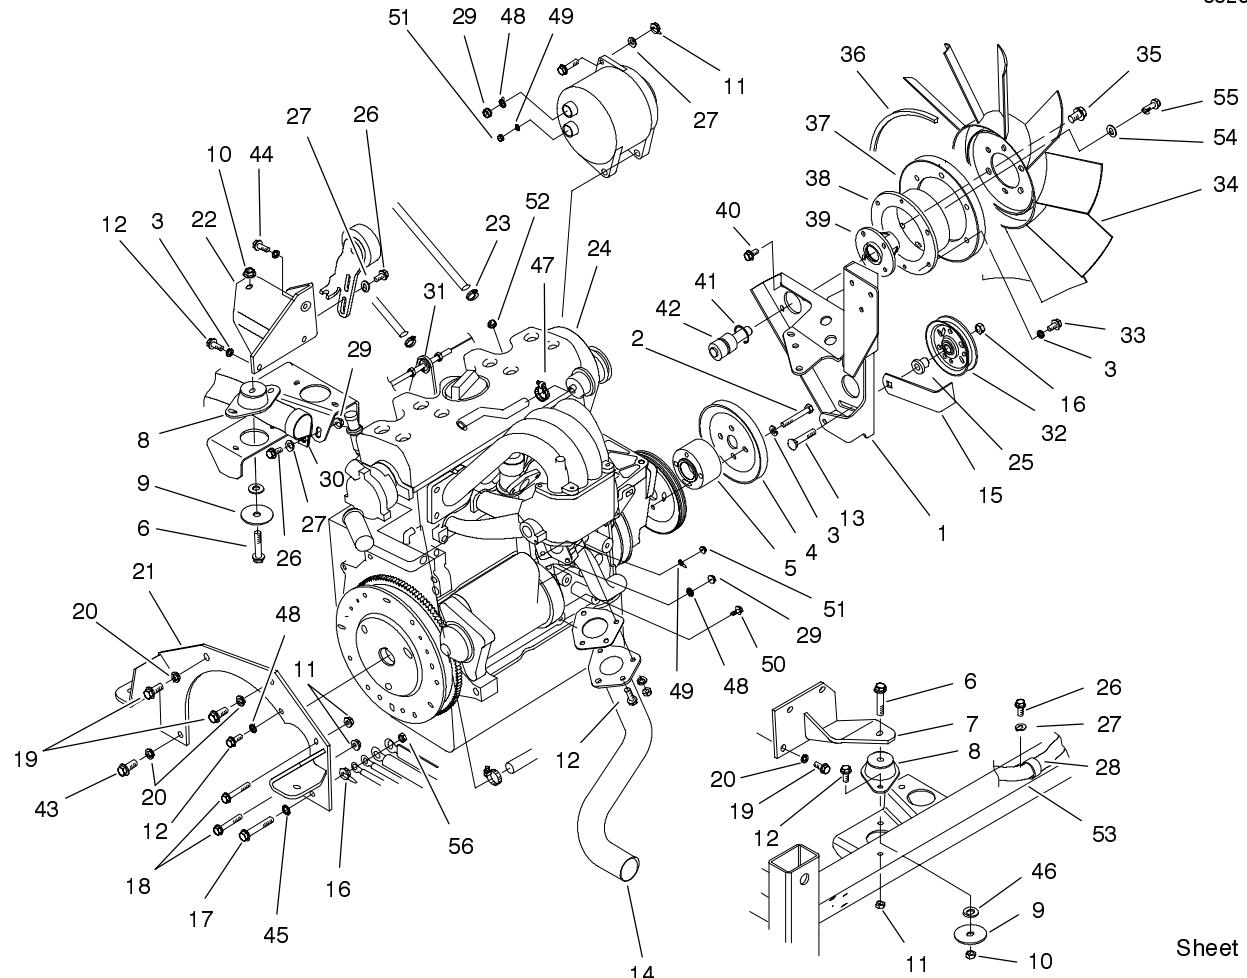

Sheet No.:15

Engine and Fan Drive Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
53	93-5450	1	Nut-Clinch				
54	3256-24	1	Washer-Flat				
55	3234-25	1	Bolt-Flange				
56	33015-00	1	Nut-Hex				

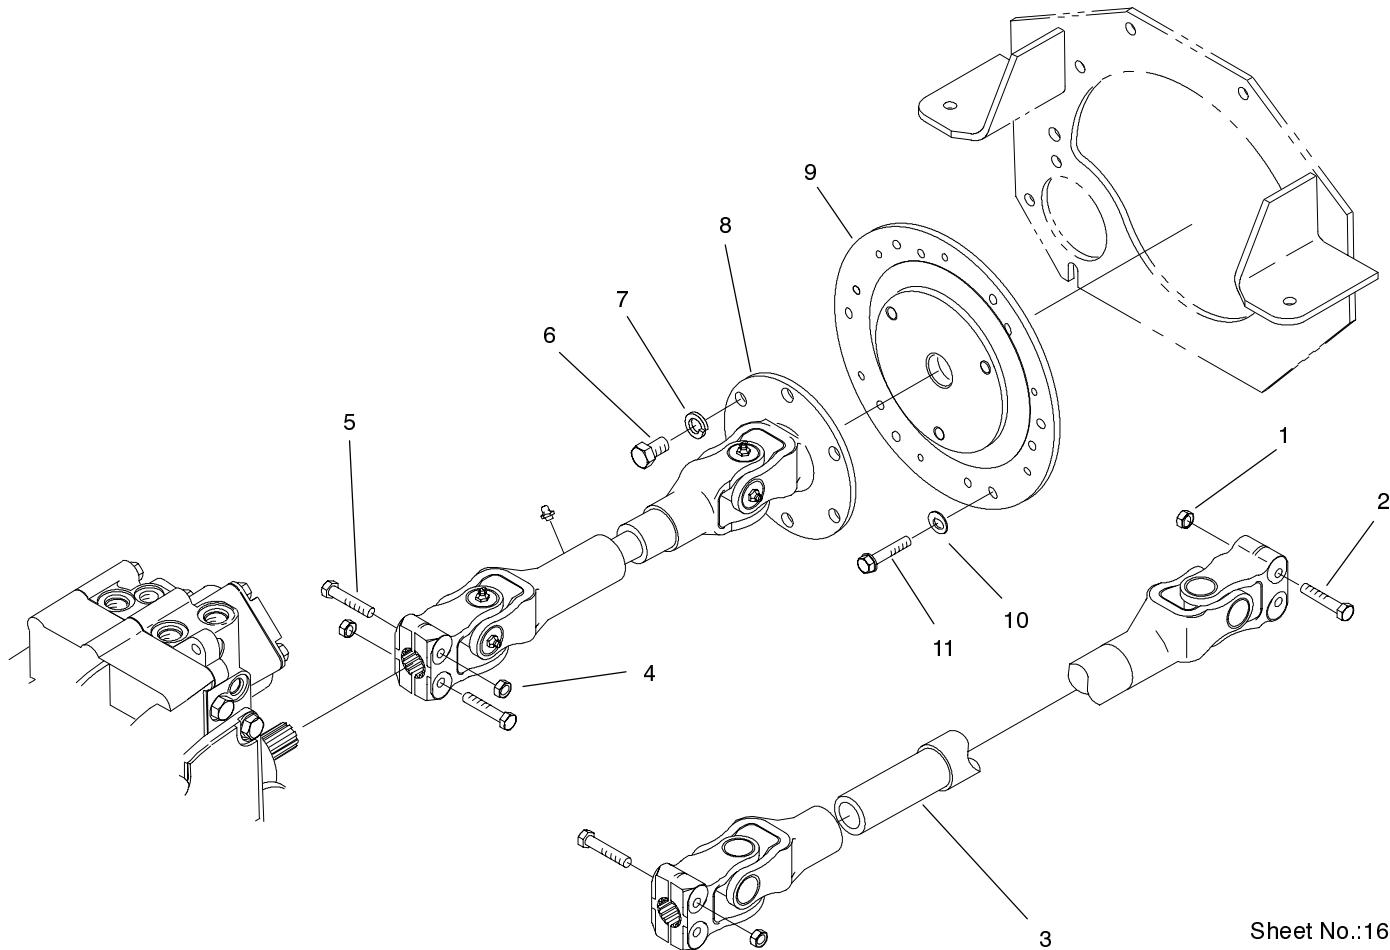


Sheet No.:16

Drive Shaft and Adapter Assembly

Ref. No.	Part No.	Qty.	Description
1	33024-00	4	Nut-Lock (only on: 30302tc)
2	33114-045	4	Screw-HH (only on: 30302tc)
3	93-5042	1	Driveshaft-4wd (only on: 30302tc)
4	33025-00	2	Nut-Lock
5	33115-045	2	Screw-HH
6	33106-020	3	Screw-HHF
7	3253-7	3	Washer-Lock
8	100-1353	1	Driveshaft - Engine
9	93-5043-03	1	Coupler - Engine
10	3253-4	6	Washer-Lock
11	93-5398	6	Screw-HH


Ref. No.	Part No.	Qty.	Description

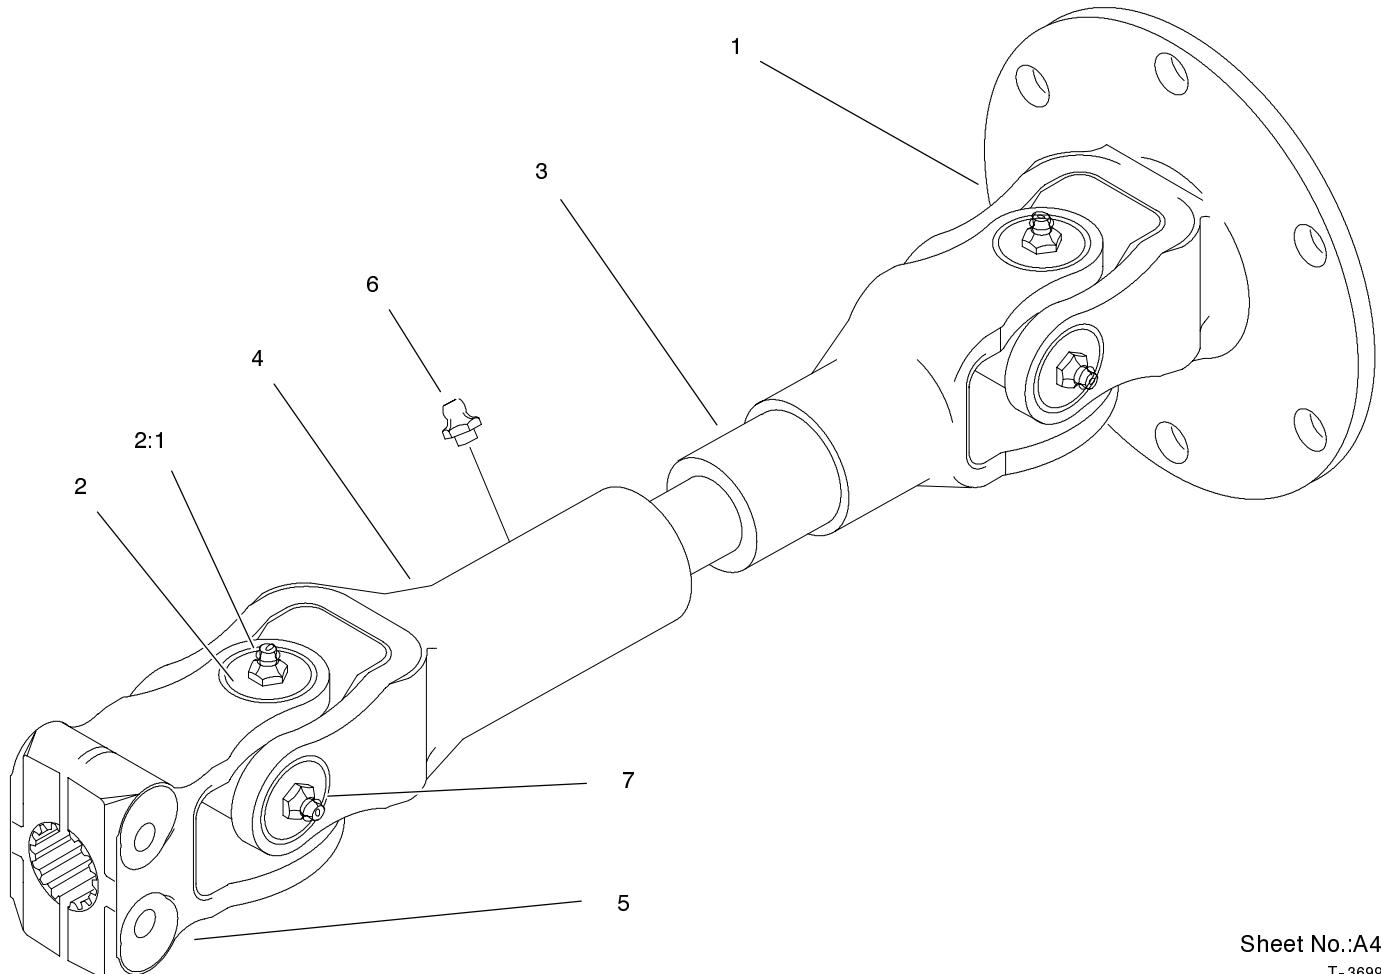

Sheet No.:A4
T-3699

Engine Drive Shaft Assembly No. 100-1353

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-2643	1	Yoke-Flange				
2	95-2644	2	Cross & Bearing Kit				
2:1	302-58	1	Fitting - Grease				
3	95-2599	1	Yoke & Shaft				
4	95-2600	1	Yoke-Slip				
5	100-1354	1	Yoke-Clamp				
6	302-5	1	Fitting-Grease				
7	302-58	4	Fitting - Grease				

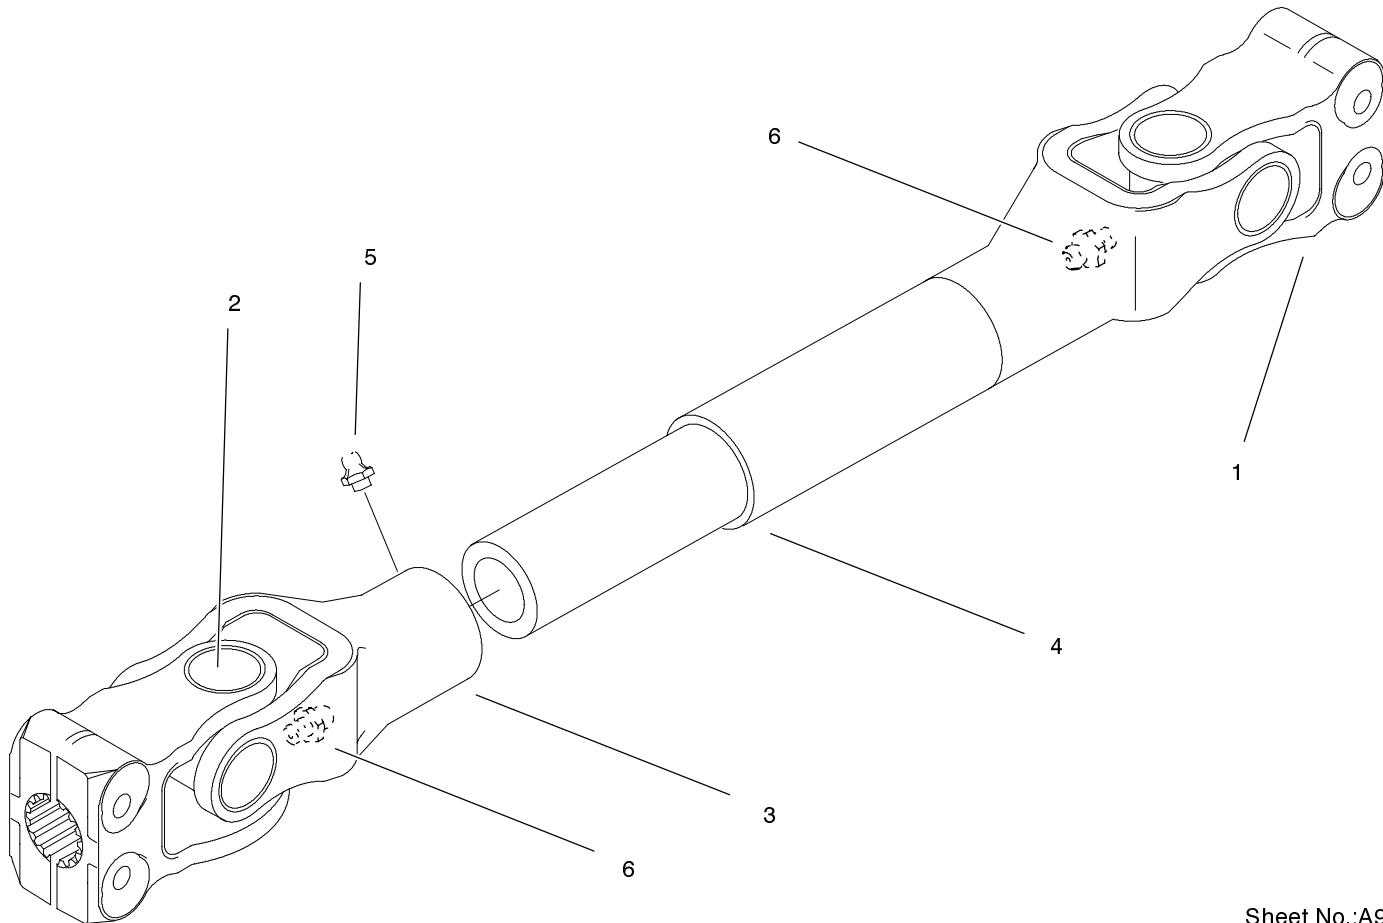


Sheet No.:A9
T-3700

4 WD Drive Shaft Assembly No. 93-5042

Ref. No.	Part No.	Qty.	Description
1	93-5560	2	Yoke - Clamp (only on: 30302tc)
2	93-5561	2	Cross & Bearing Kit (only on: 30302tc)
3	93-5564	1	Yoke & Shaft (only on: 30302tc)
4	93-5565	1	Yoke & Sleeve (only on: 30302tc)
5	302-5	1	Fitting-Grease (only on: 30302tc)
6	302-8	2	Fitting-Grease (only on: 30302tc)

Ref. No.	Part No.	Qty.	Description

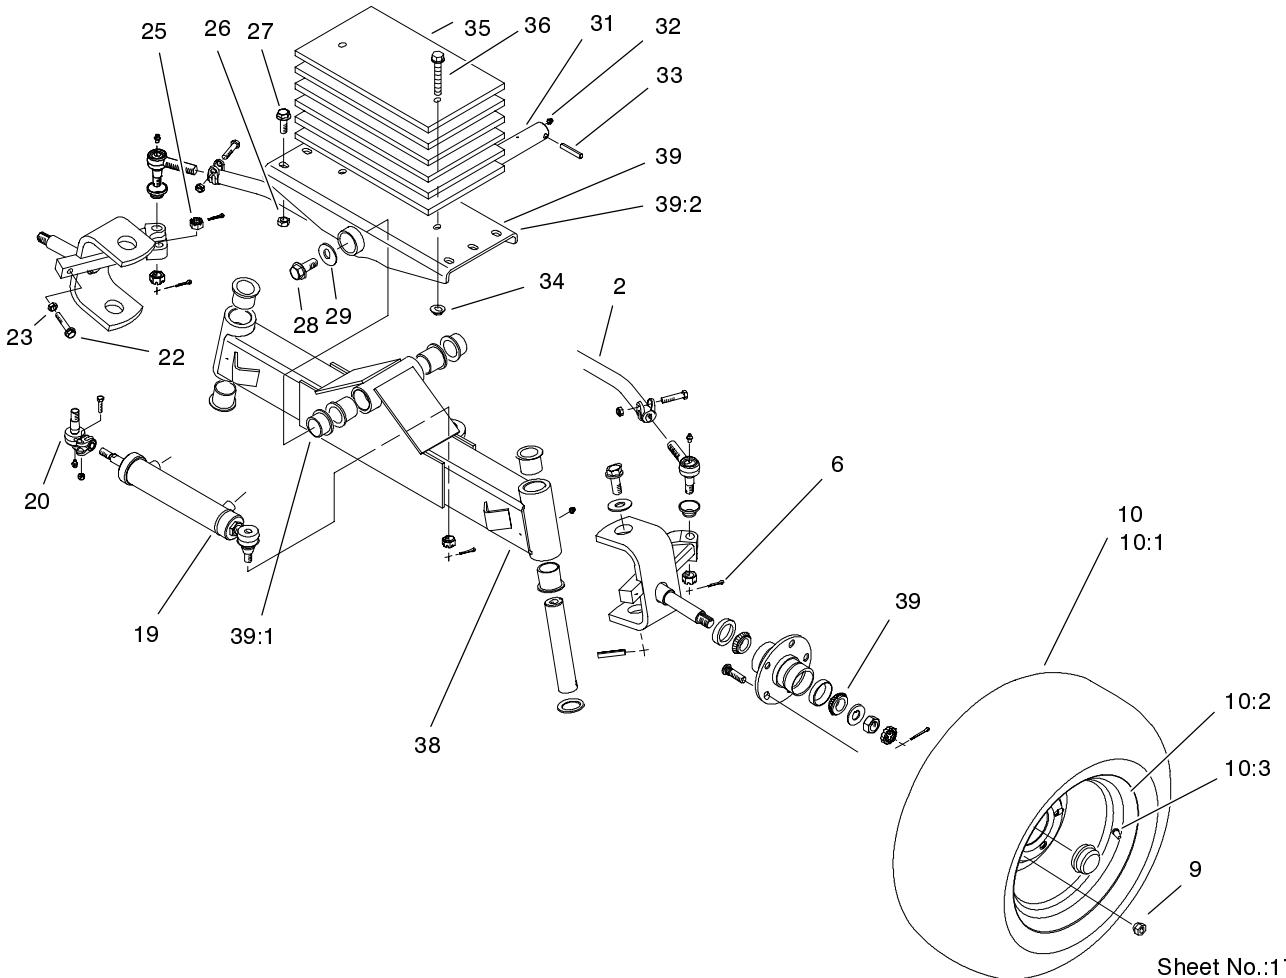


Sheet No.:17

2WD Rear Axle

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	104-0100-03	1	Rod-Tie	35	93-5983-03	6	Plate - Weight (only on: 30301tc)
6	3272-11	4	Pin-Cotter	36	33106-100	2	Screw-HHF (only on: 30301tc)
9	242-50	10	Nut - Lug (only on: 30301tc)	36	33114-020	2	Screw-HH (only on: 30302tc)
★10		2	Tire & Wheel ASM	★38		1	Axle ASM (only on: 30301tc)
10:1	74-5560	1	Tire	★39		1	Axle Pivot ASM
10:2	217-122	1	Wheel ASM	39:1	93-4510	2	Bushing-Castor
10:3	232-27	1	Stem-Valve	39:2	95-4411-03	1	Pivot-Axle
19	93-5502	1	Steering Cylinder (only on: 30301tc)				
20	92-5072-03	1	End-Rod, Ball Joint				
22	33115-040	2	Screw-HH (only on: 30301tc)				
23	33015-00	2	Nut-Hex (only on: 30301tc)				
25	32136-13	1	Nut-Hex, Slotted				
26	33026-00	6	Nut-Lock				
27	33106-035	6	Screw-HHF				
28	33108-035	1	Screw-HHF				
29	3256-7	1	Washer-Flat				
31	93-5142	1	Pin-Axle Pivot				
32	302-2	1	Fitting-Grease				
33	32121-110	1	Pin-Roll, Slotted				
34	33006-00	2	Nut-Hex Flange (only on: 30301tc)				

☆ Not serviced

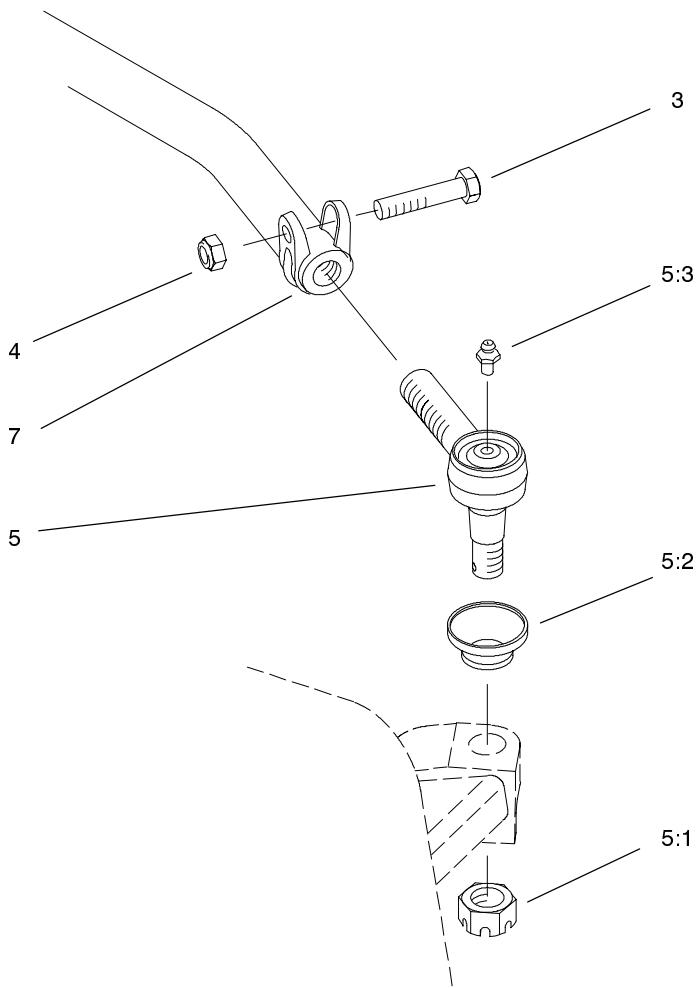


Sheet No.: A5
T-3701

Tie Rod Assembly No. 104-0100-03


Ref. No.	Part No.	Qty.	Description
3	323-9	2	Screw-HH
4	3296-39	2	Nut-Lock, NI
5	71-4740	2	End-Tie Rod
5:1	32136-13	1	Nut-Hex, Slotted
5:2	71-4760	1	Seal
5:3	302-55	1	Zerk
7	93-5169	1	Tube & Clamp ASM

Ref. No.	Part No.	Qty.	Description

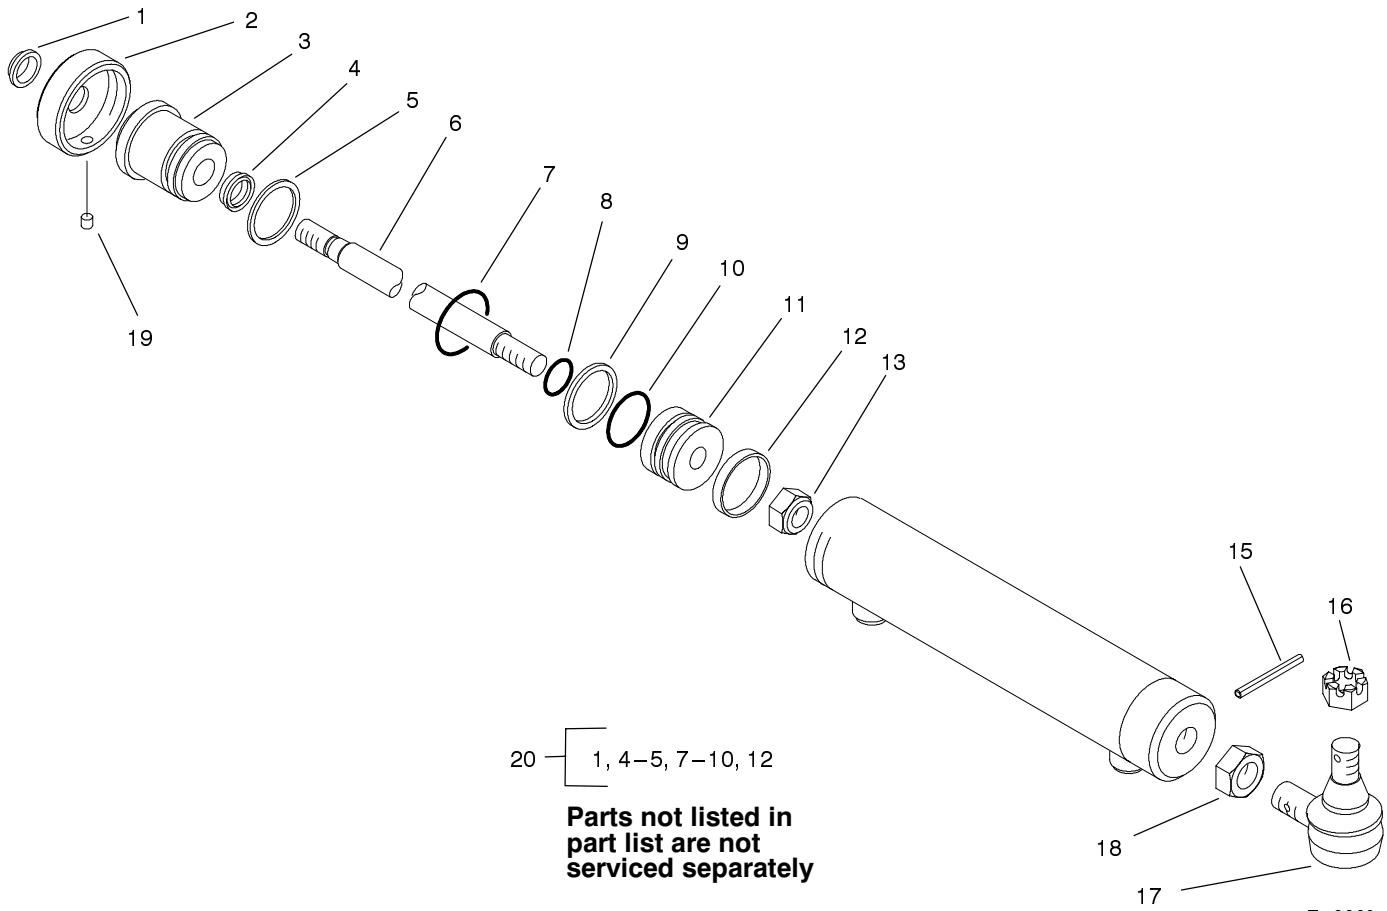T-2260
Sheet No.:A6

Steering Cylinder Assembly No. 93-5502

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	92-5705	1	Thread-Cap (only on: 30301tc)				
3	92-5706	1	Thread-Cap Head (only on: 30301tc)				
6	93-5555	1	Rod (only on: 30301tc)				
11	92-5703	1	Piston (only on: 30301tc)				
13	88-3590	1	Nut-Lock (only on: 30301tc)				
15	32121-44	1	Pin - Roll (only on: 30301tc)				
16	32136-13	1	Nut-Hex, Slotted (only on: 30301tc)				
17	82-5730	1	End-Tie Rod (only on: 30301tc)				
18	82-5740	1	Nut-Jam (only on: 30301tc)				
19	92-5708	1	Screw-Thread Cap (only on: 30301tc)				
20	92-5707	1	Seal Repair Kit (only on: 30301tc)				

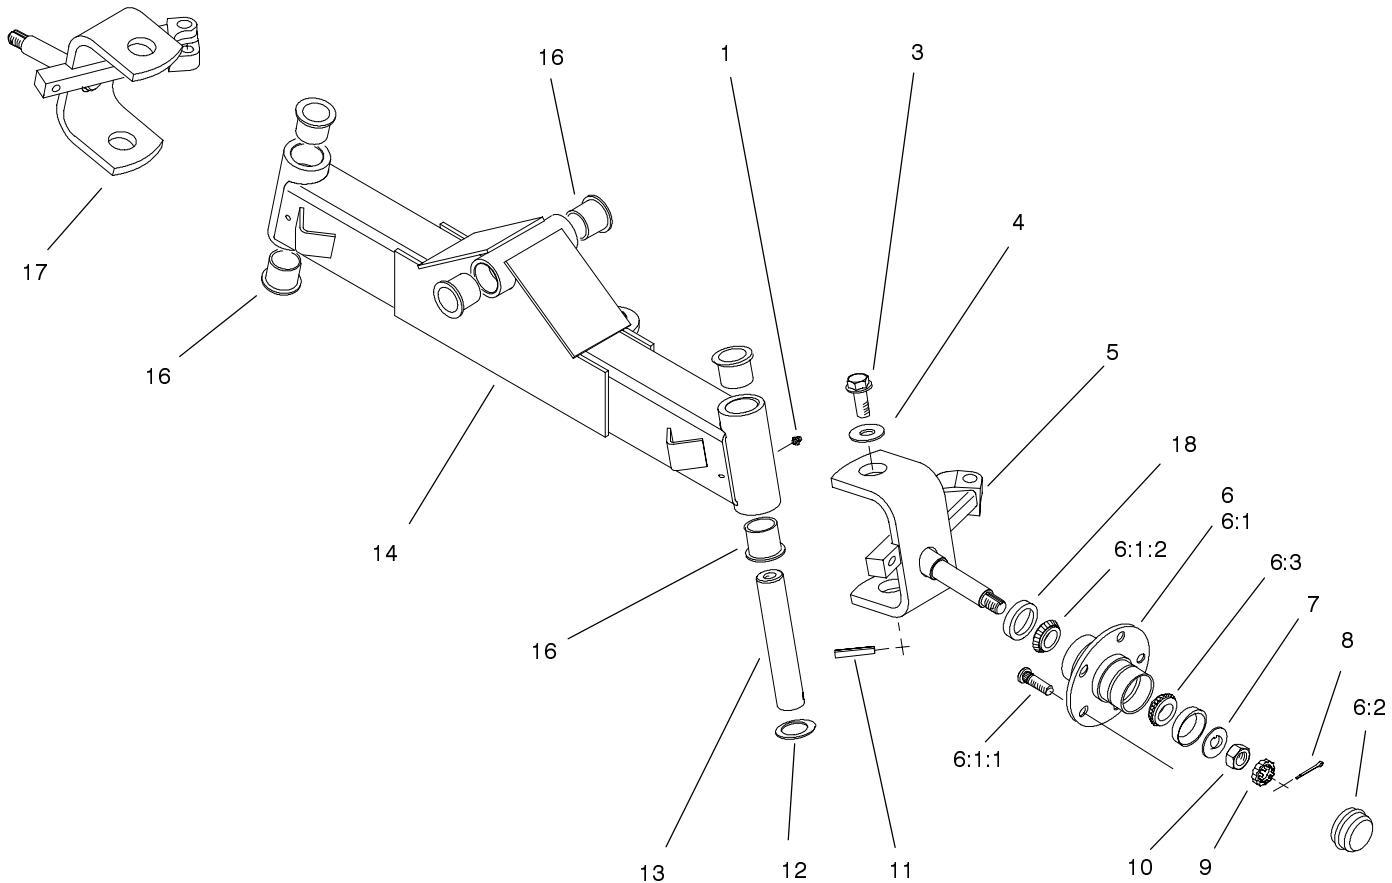


Sheet No.:A7

T-3702

Axle Assembly (Model 30301TC Only)

Ref. No.	Part No.	Qty.	Description
1	302-5	2	Fitting-Grease
3	33108-035	2	Screw-HHF
4	3256-7	4	Washer-Flat
5	95-2629-03	1	Spindle ASM, LH
6	95-2645	2	Hub ASM - Wheel
6:1	21-2820	1	Hub ASM
6:1:1	10-6830	5	Stud-Type, Drive
6:1:2	254-72	2	Bearing-Taper/Cup
6:2	241-119	1	Cap-Dust
6:3	95-2646	2	Bearing Cone
7	93-0309	2	Washer - Tab
8	3272-13	2	Pin-Cotter
9	93-0307	2	Nut Retainer-Lock
10	3220-7	2	Nut-Jam
11	32121-110	2	Pin-Roll, Slotted
12	62-2170	2	Washer-Thrust
13	93-5503	2	Pin - Spindle Pivot
14	93-5121-03	1	Axle-Rear
16	69-6470	6	Bushing-Castor
17	95-2628-03	1	Spindle ASM, RH
18	95-2647	2	Seal - Hub


Ref. No.	Part No.	Qty.	Description

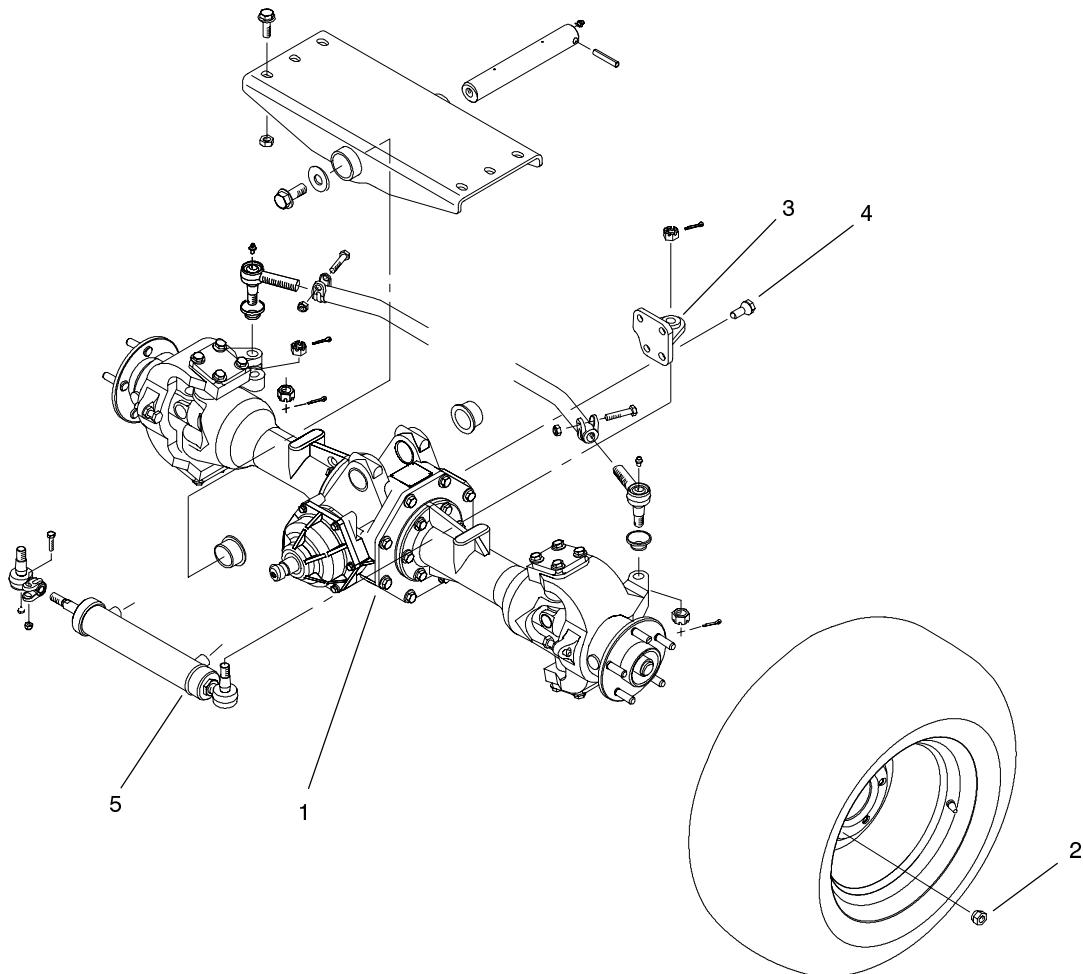


Sheet No.:18

4WD Rear Axle Assembly (Model 30302TC Only)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-2592	1	Axle - Rear, 4wd				
2	93-5268	10	Nut-Lug				
3	93-5436-03	1	Anchor-Cylinder				
4	93-5444	4	Screw-Tapered				
5	93-5962	1	Cylinder - Steering				

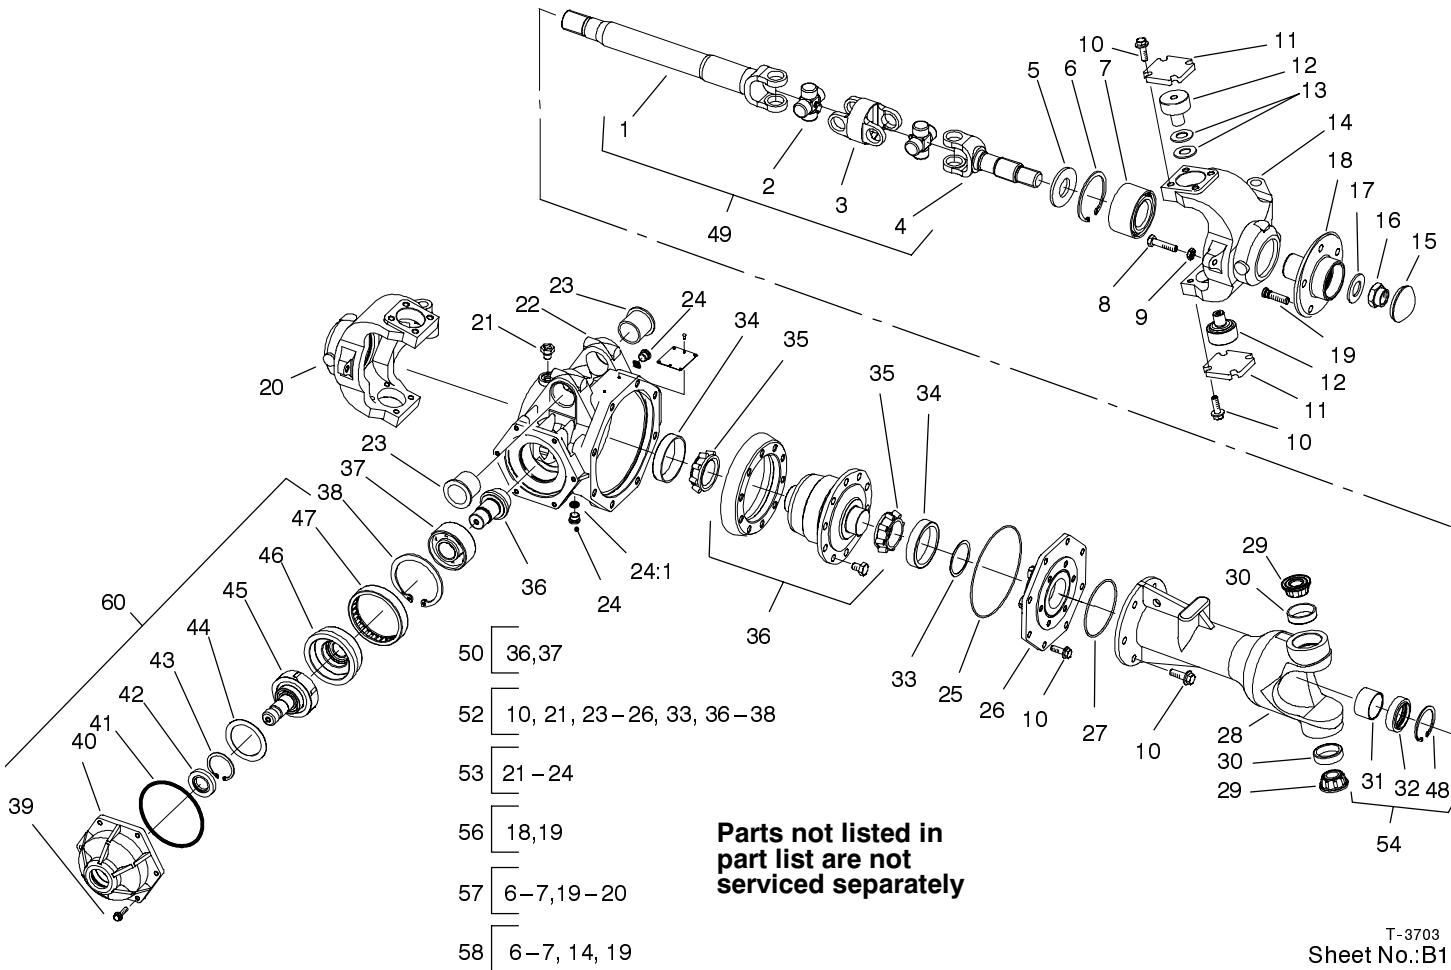


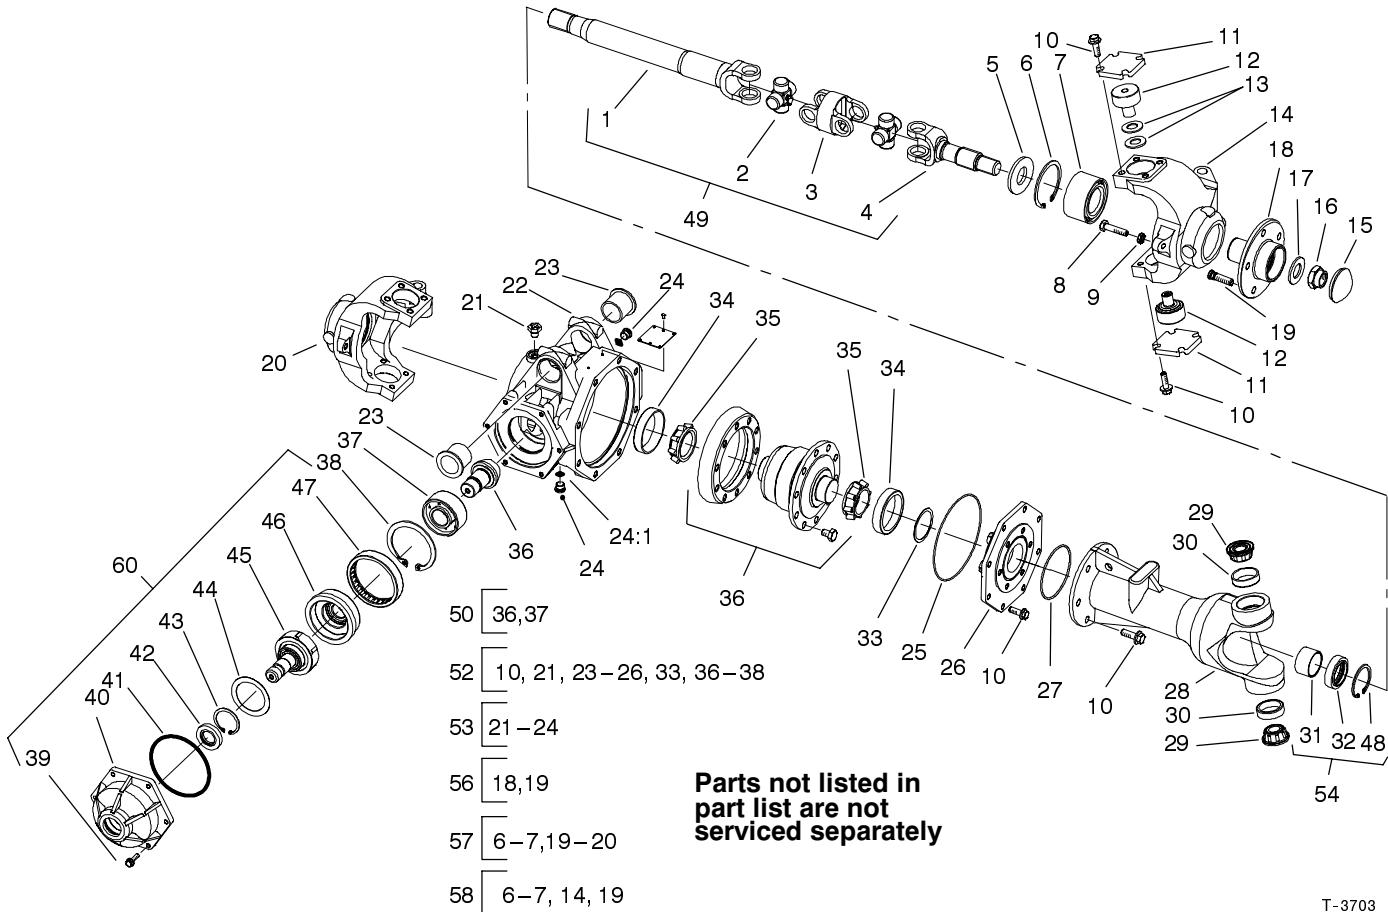

T-3703
Sheet No.:B1

4WD Rear Axle Assembly No. 95-2592 (Model 30302TC Only)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
54	94-9190	2	ASM - Axle Housing				
55	94-9191	4	Kit - Kingpin Bearing				
56	94-9193	2	ASM - Wheel Hub				
57	94-9194	1	RH Spindle Flange ASM				
58	94-9195	1	ASM - LH Spindle Flange				
59	94-9198	1	Kit - Overhaul Seal				
60	95-2591	1	ASM - Over Running				

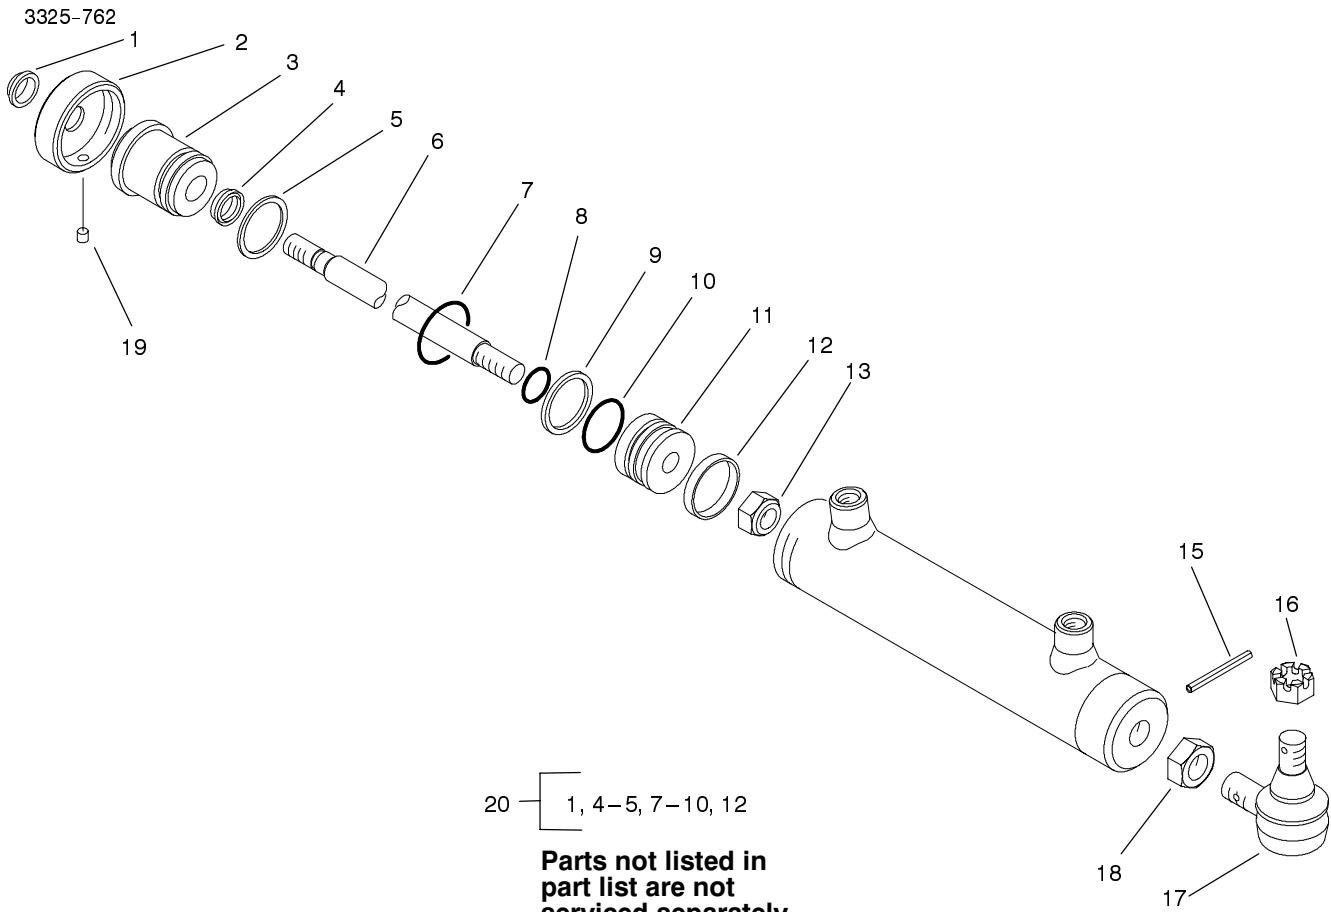


Sheet No.:B2

T-2432

Steering Cylinder Assembly No. 93-5962

Ref. No.	Part No.	Qty.	Description
2	92-5705	1	Thread-Cap (only on: 30302tc)
3	92-5706	1	Thread-Cap Head (only on: 30302tc)
6	93-5555	1	Rod (only on: 30302tc)
11	92-5703	1	Piston (only on: 30302tc)
13	88-3590	1	Nut-Lock (only on: 30302tc)
15	32121-44	1	Pin - Roll (only on: 30302tc)
16	32136-13	1	Nut-Hex, Slotted (only on: 30302tc)
17	82-5730	1	End-Tie Rod (only on: 30302tc)
18	82-5740	1	Nut-Jam (only on: 30302tc)
19	92-5708	1	Screw-Thread Cap (only on: 30302tc)
20	92-5707	1	Seal Repair Kit (only on: 30302tc)


Ref. No.	Part No.	Qty.	Description

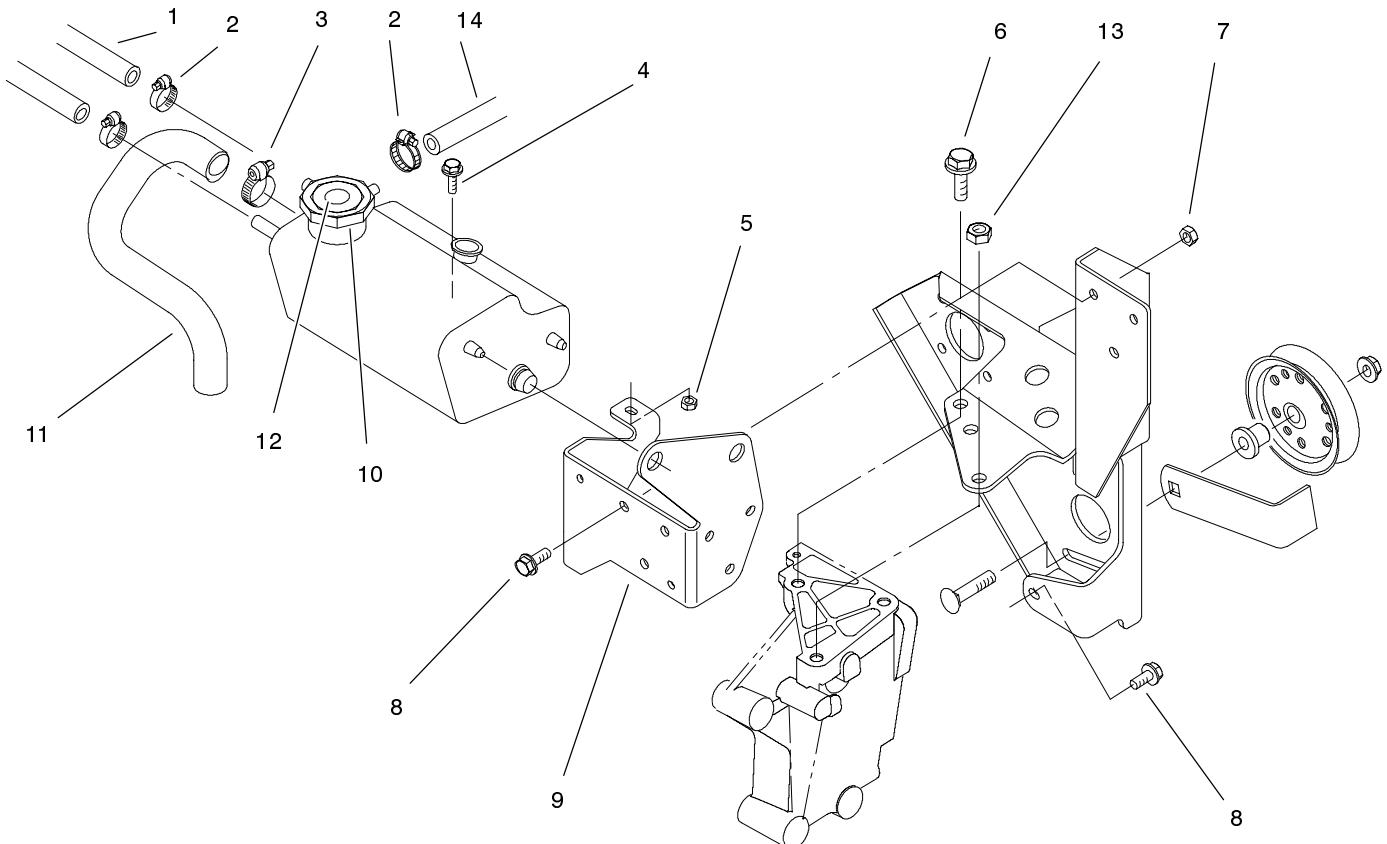

Sheet No.:19

Degasser Bottle and Mounting Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5539	1	Hose - Peugeot				
2	2412-36	4	Clamp-Hose				
3	2412-141	2	Clamp-Drive, Worm				
4	33103-020	1	Screw-HHF				
5	33023-00	1	Nut-Lock				
6	33105-020	1	Screw-HHF				
7	33024-00	3	Nut-Lock				
8	33104-020	4	Screw-HHF				
9	93-5096-03	1	Bracket-Degasser				
10	66-3240	1	Cap-Radiator				
11	93-5536	1	Hose - Degasser				
12	93-7840	1	Decal-Cap, Radiator				
13	33025-00	1	Nut-Lock				
14	47-2967	1	Hose-Gas				

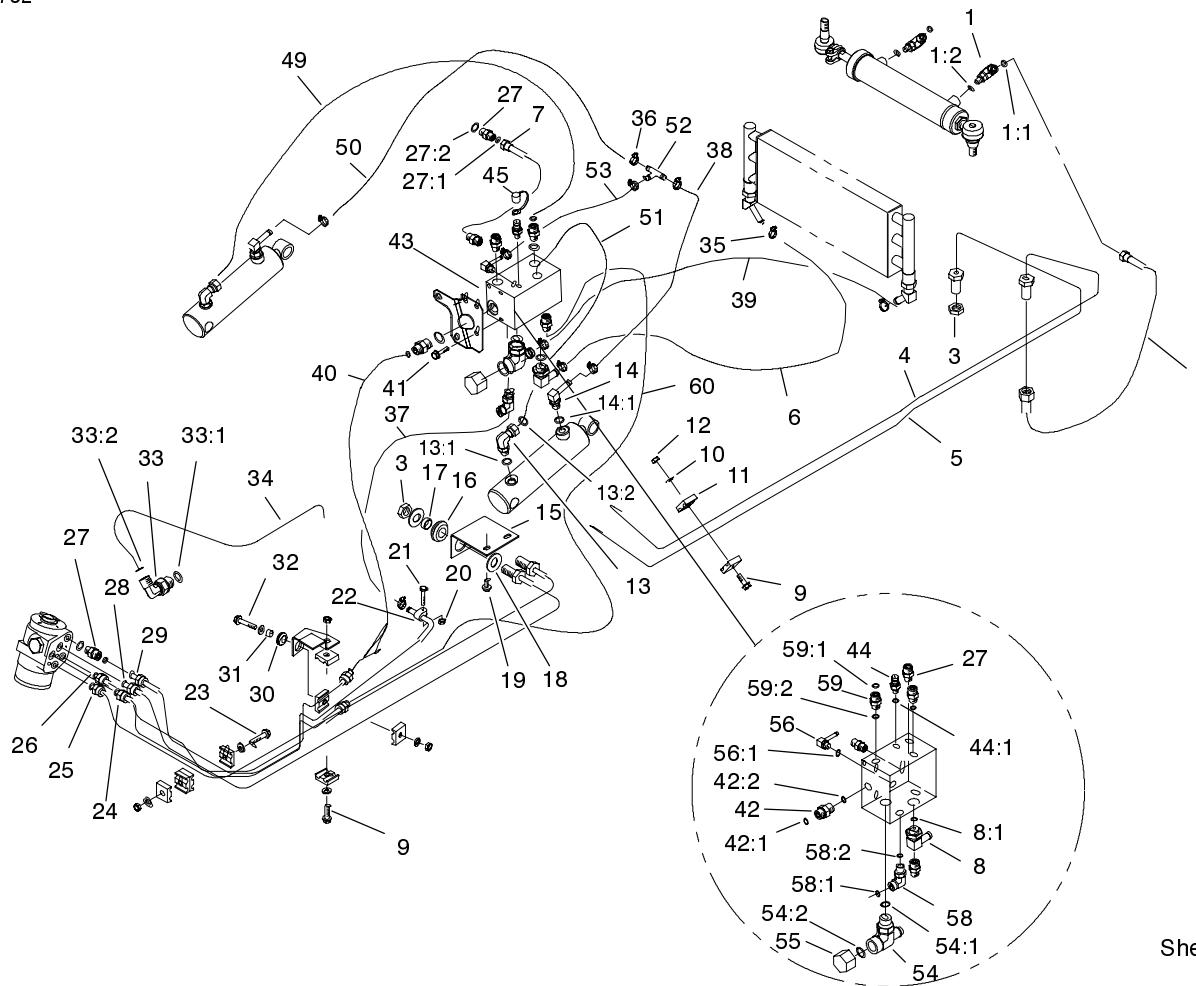


Sheet No.:20

Hydraulic Plumbing Assembly

Ref. No.	Part No.	Qty.	Description
1	340-97	2	Fitting-Hyd, 90
1:1	237-22	1	O-Ring
1:2	237-78	1	O-Ring
2	93-5353	2	Hose ASM
3	340-70	4	Locknut-Bulkhead
4	93-5571	1	Tube - Hydraulic
5	93-5572	1	Tube - Hydraulic
6	95-0954	1	Hose
7	95-0950	1	Hose ASM
8	354-128	1	Elbow-90 DEG
8:1	237-80	1	O-Ring
9	33104-035	2	Screw-HHF
10	3256-23	6	Washer-Flat
11	56-7973	10	Clamp-Tube
12	33024-00	4	Nut-Lock
13	340-77	2	Fitting-90 DEG
13:1	237-22	1	O-Ring
13:2	237-42	1	O-Ring
14	354-135	2	Fitting-Hyd 90 DEG
14:1	237-42	1	O-Ring
15	93-5587-03	1	Bracket - Bulkhead
16	240-4	2	Grommet-Rubber
17	69-8970	2	Spacer
18	69-8940	4	Washer
19	33104-016	2	Screw-HHF
20	33023-00	1	Nut-Lock


Ref. No.	Part No.	Qty.	Description
21	33113-035	1	Screw-HH
22	2412-114	1	Clamp - Single 3/8"
23	33114-060	1	Screw-HH
24	93-5574	1	Tube - Hydraulic
25	93-5576	1	Tube - Hydraulic
26	93-5575	1	Tube - Hydraulic
27	340-2	10	Adapter
27:1	237-22	3	O-Ring
27:2	237-42	3	O-Ring
28	93-5577	1	Tube - Hydraulic
29	93-5573	1	Tube - Hydraulic
30	93-5108	1	Grommet - Rubber
31	93-5109	1	Spacer
32	33104-040	1	Screw-HHF
33	340-105	1	Fitting-90 DEG
33:1	237-80	1	O-Ring
33:2	237-30	1	O-Ring
34	95-0975	1	Tube - Hyd
35	2412-141	4	Clamp-Drive, Worm
36	2412-36	7	Clamp-Hose
37	95-0952	1	Hose
38	93-5358	1	Hose ASM
39	95-0955	1	Hose
40	93-5346	1	Hose ASM
41	33104-025	3	Screw-HHF
42	340-2	1	Adapter

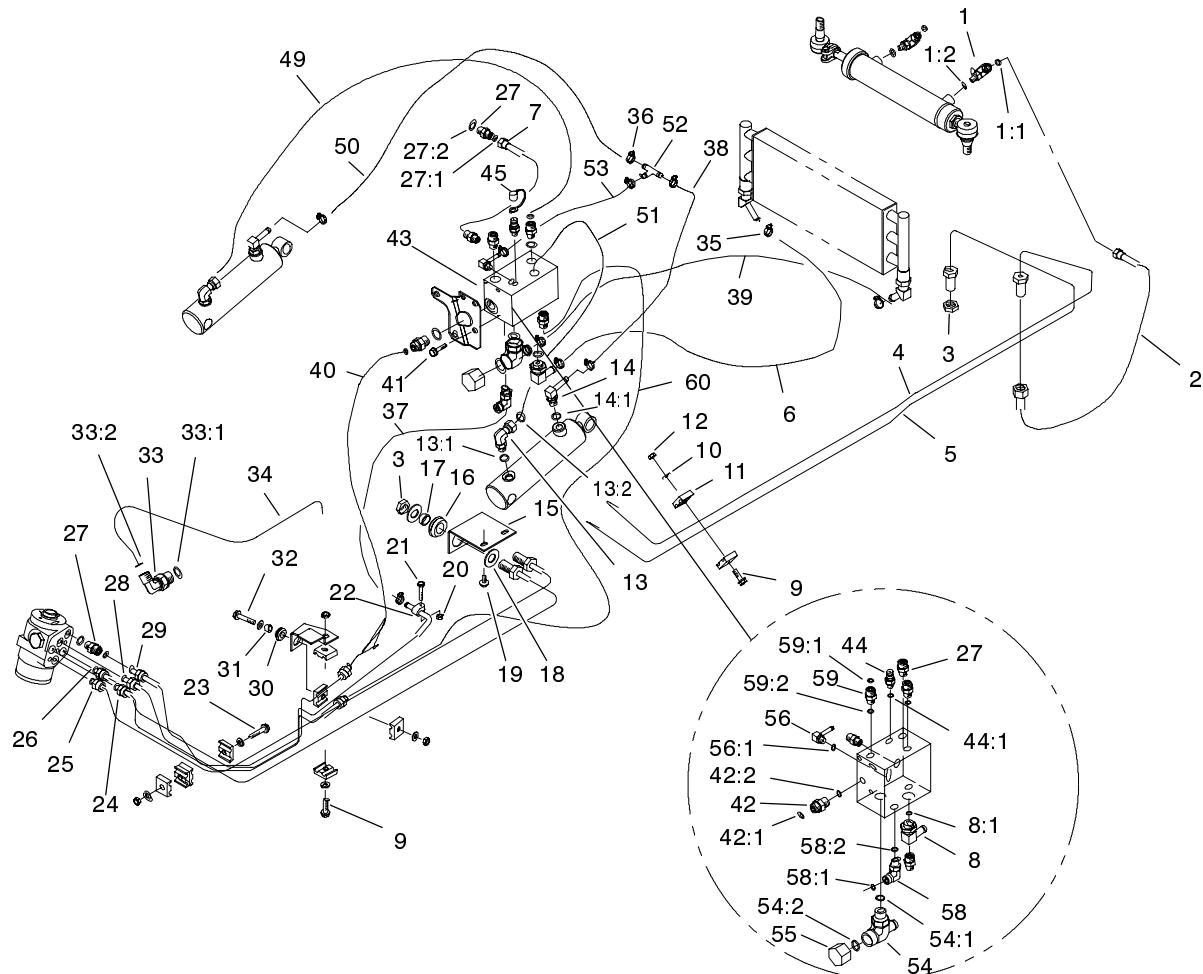

Sheet No.:20

Hydraulic Plumbing Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
42:1	237-22	1	O-Ring				
42:2	237-42	1	O-Ring				
43	94-9291	1	Manifold - Hyd				
44	354-77	1	Fitting-Quick				
44:1	237-78	1	O-Ring				
45	353-947	1	Cap-Dust, Rubber				
49	93-5386	1	Hose ASM				
50	93-5357	1	Hose ASM				
51	93-5385	1	Hose ASM				
52	354-107	1	Fitting-Hydraulic, Tee				
53	95-0953	1	Hose				
54	94-9295	1	Fitting - Special				
54:1	237-80	1	O-Ring				
54:2	237-58	1	O-Ring				
55	95-0979	1	Fitting - Straight				
56	354-135	1	Fitting-Hyd 90 DEG				
56:1	237-42	1	O-Ring				
58	340-77	1	Fitting-90 DEG				
58:1	237-22	1	O-Ring				
58:2	237-42	1	O-Ring				
59	340-5	1	Fitting-Straight				
59:1	237-42	1	O-Ring				
59:2	237-30	1	O-Ring				
60	95-0951	1	Hose ASM				

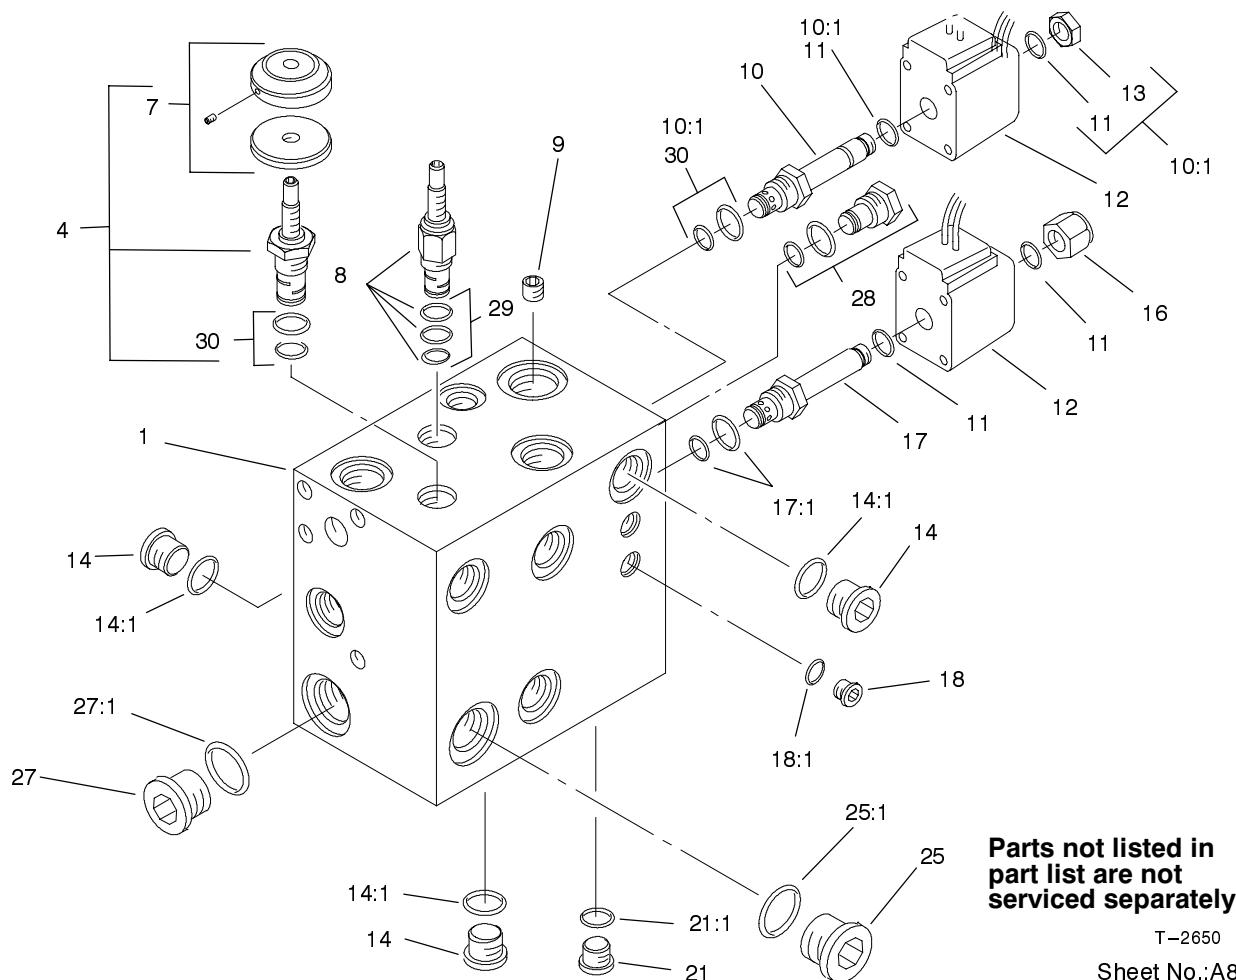

Manifold Assembly No. 94-9291


Ref. No.	Part No.	Qty.	Description
4	93-5944	1	Valve - Needle
7	93-5948	1	Kit - Knob
8	93-5943	1	Valve - Logic, Adj
9	95-5941	1	Plug - Orifice
10	92-6315	1	Cartridge-N.c. Poppet
10:1	69-4230	1	Kit-Seal
11	94-5438	4	Seal-Solenoid
12	88-9190	2	Kit-Coil, Solenoid
13	3219-10	1	Nut-Hex
14	353-989	6	Plug-Hex, Hollow
14:1	237-42	1	O-Ring
17	93-7494	1	Cartridge
17:1	75-2080	1	Seal Kit
18	353-991	5	Plug-Hex, Hollow
18:1	237-156	1	O-Ring
21	353-990	1	Plug
21:1	237-78	1	O-Ring
25	354-70	1	Plug-Hex, Hollow
25:1	237-80	1	O-Ring
27	353-988	1	Plug-Hex, Hollow
27:7	237-79	1	O-Ring
28	95-7480	1	Plug - Cavity
29	69-4240	1	Seal Kit
30	75-2080	1	Seal Kit
31	95-7003	1	Plug-Orifice (Optional)

Ref. No.	Part No.	Qty.	Description

**Parts not listed in
part list are not
serviced separately**

T-2650

Sheet No.:A8

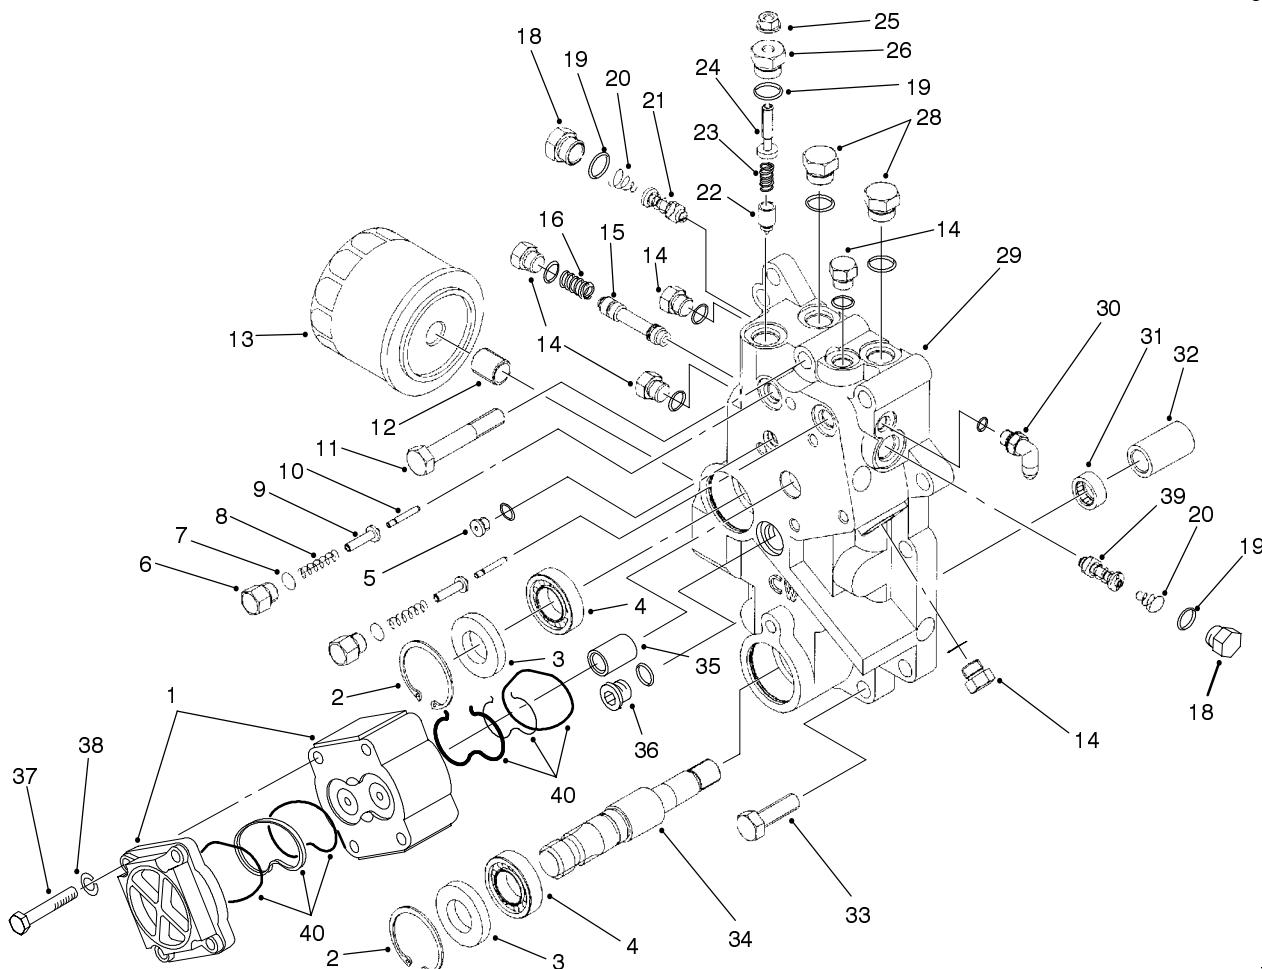


T-2257-1

Front Axle Center Section Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-3968	1	Pump-Gear (Incl. Ref. #37, 38 & 40)	26	94-3990	1	Plug-Relief, Implement
2	94-4029	2	Ring-Retaining	28	28-3440	2	Plug ASM
3	94-3925	2	Seal-Lip	+29		1	Center Section
4	94-3942	2	Bearing-Ball	30	94-4075	1	Elbow
5	75-0170	1	Plug ASM	31	94-4021	1	Bearing
6	94-3986	2	Plug-HH	32	94-4023	1	Coupling-Drive, 4-Wheel
7	94-3987	2	O-Ring	33	94-4020	8	Screw
+8		2	Spring	34	94-4022	1	Shaft-Drive, 4-Wheel
+9		2	Sleeve ASM	35	94-3922	1	Coupling-Pump, Gear
+10		2	Piston	36	94-9172	1	Plug ASM
11	94-3999	2	Screw	37	94-9182	4	Screw
12	25-2660	1	Union-Filter	38	94-9183	4	Washer
13	94-3951	1	Filter	39	84-0540	1	Valve (5000 psi)
14	69-3940	5	Plug ASM	40	94-9184	1	Kit-Seal, Gear Pump
+15		1	Spool	* 95-7033		1	Center Section ASM (Incl. Ref. #5-10, 12, 14-29 & 31)
+16		1	Spring-Helical	* 94-9168		1	Implement Relief Valve ASM (Incl. Ref. #19 & 22-26)
18	75-0190	2	Plug	* 94-9169		1	Kit-Valve, SCR (6000 psi) (Incl. Ref. #18-21)
19	75-0240	3	O-Ring				
20	75-0140	2	Spring-Conical				
21	94-3979	2	Valve (6000 psi)				
+22		1	Cone-Valve, Relief				
+23		1	Spring-Helical				
+24		1	Screw-Adjusting				
25	94-4017	1	Nut				

* Not Illustrated

† Not Serviced Separately

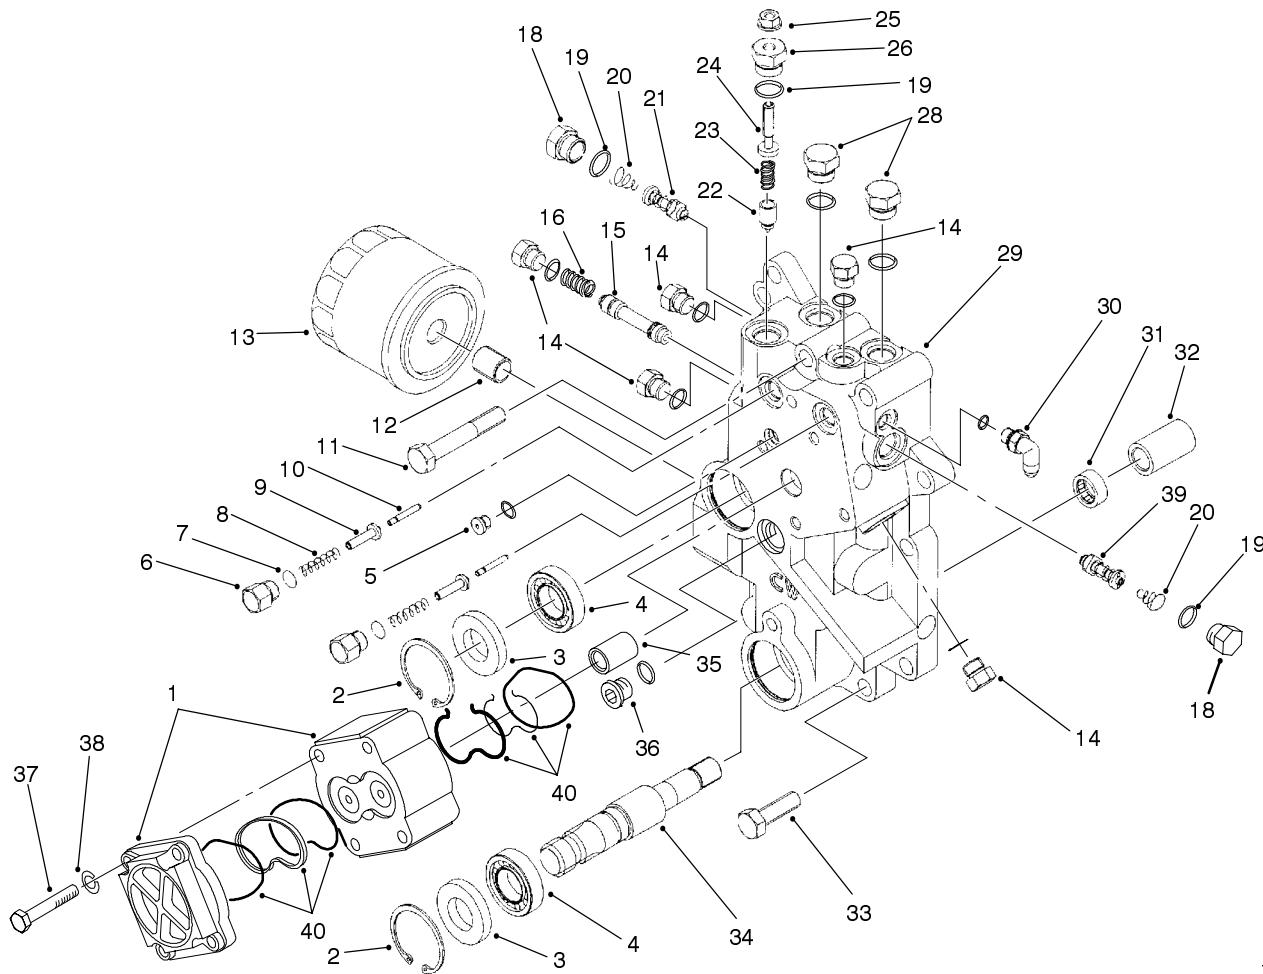


T-2257-1

Front Axle Center Section Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
*	94-9170	1	Kit-Charge Press. Priority Valve (Incl. Ref. #14-16)
*	94-9171	1	Kit-Valve, Easy Ride (Incl. Ref. #6-10)

Ref. No.	Part No.	Qty.	Description

* Not Illustrated

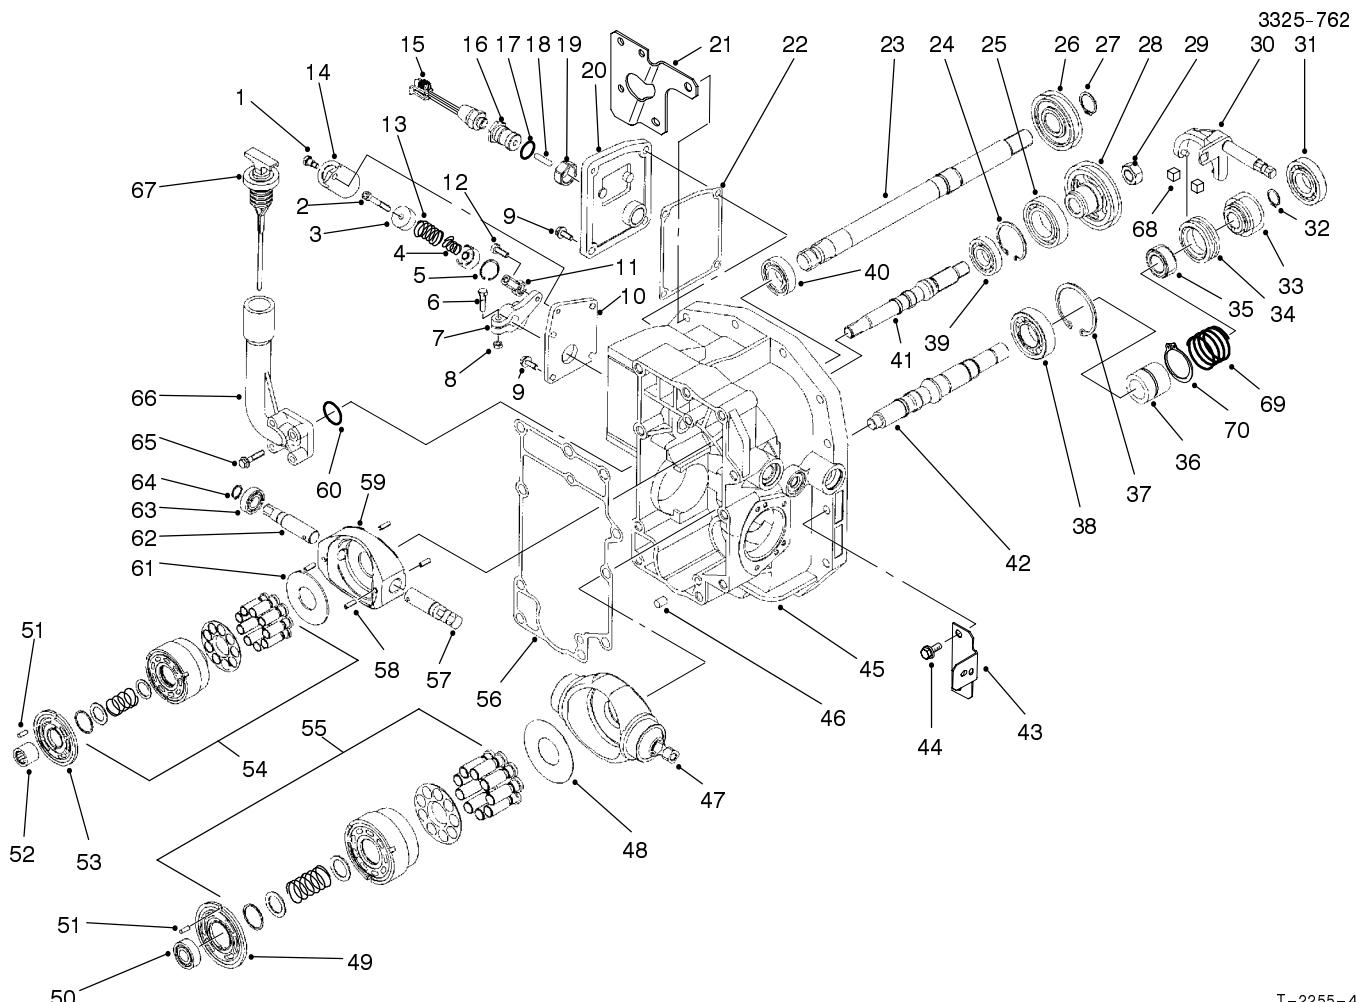


T-2255-4

Hydraulic Housing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-3928	1	Screw-HH, Shoulder	23	94-3901	1	Shaft-Input
+2		1	Screw-Head, Socket	24	94-4029	1	Ring-Retaining
+3		2	Seat-Spring	25	94-3971	1	Bearing-Ball
+4		1	Spring-Compression	26	94-3903	1	Pinion-Drive, Pump
+5		1	Ring-Retaining	27	94-3994	1	Ring-Retaining
6	94-3940	1	Screw-HH	28	94-3905	1	Gear-Drive, Pump
+7		1	Handle-Return, Neutral	29	94-3953	1	Nut-Lock
8	94-3936	1	Nut-Lock	30	95-7875	1	Yoke-2 Speed
9	94-4002	8	Screw-HHF	31	251-8	1	Bearing
+10		1	Plate-Return, Neutral	32	94-3963	1	Ring-Retaining
+11		1	End-Rod, Female	33	94-3919	1	Pinion-Drive, Final
12	94-3927	1	Screw-HH	+34		1	Coupling-Gear, Change
+13		1	Spring-Compression	+35		1	Coupling-2 Speed
+14		1	Housing-Return, Neutral	36	95-2728	1	Spacer-Drive, Final
15	95-7034	2	Switch	37	94-3997	3	Ring-Retaining
16	94-4045	1	Adjuster-Threaded	38	84-0310	1	Bearing
17	28-3570	1	O-Ring	39	94-3960	1	Bearing-Ball
18	94-4046	1	Pin	40	94-3942	1	Bearing-Ball
19	94-4044	1	Nut-Hex	41	94-3904	1	Shaft-Pump
20	94-3943	1	Cover-Return, Neutral	42	94-3906	1	Shaft-Motor
21	94-9282	1	Bracket-Balance, Counter	43	93-5381	1	Bracket
22	94-3944	1	Gasket-Return, Neutral	44	94-4004	23	Screw-HHF

† Not Serviced Separately

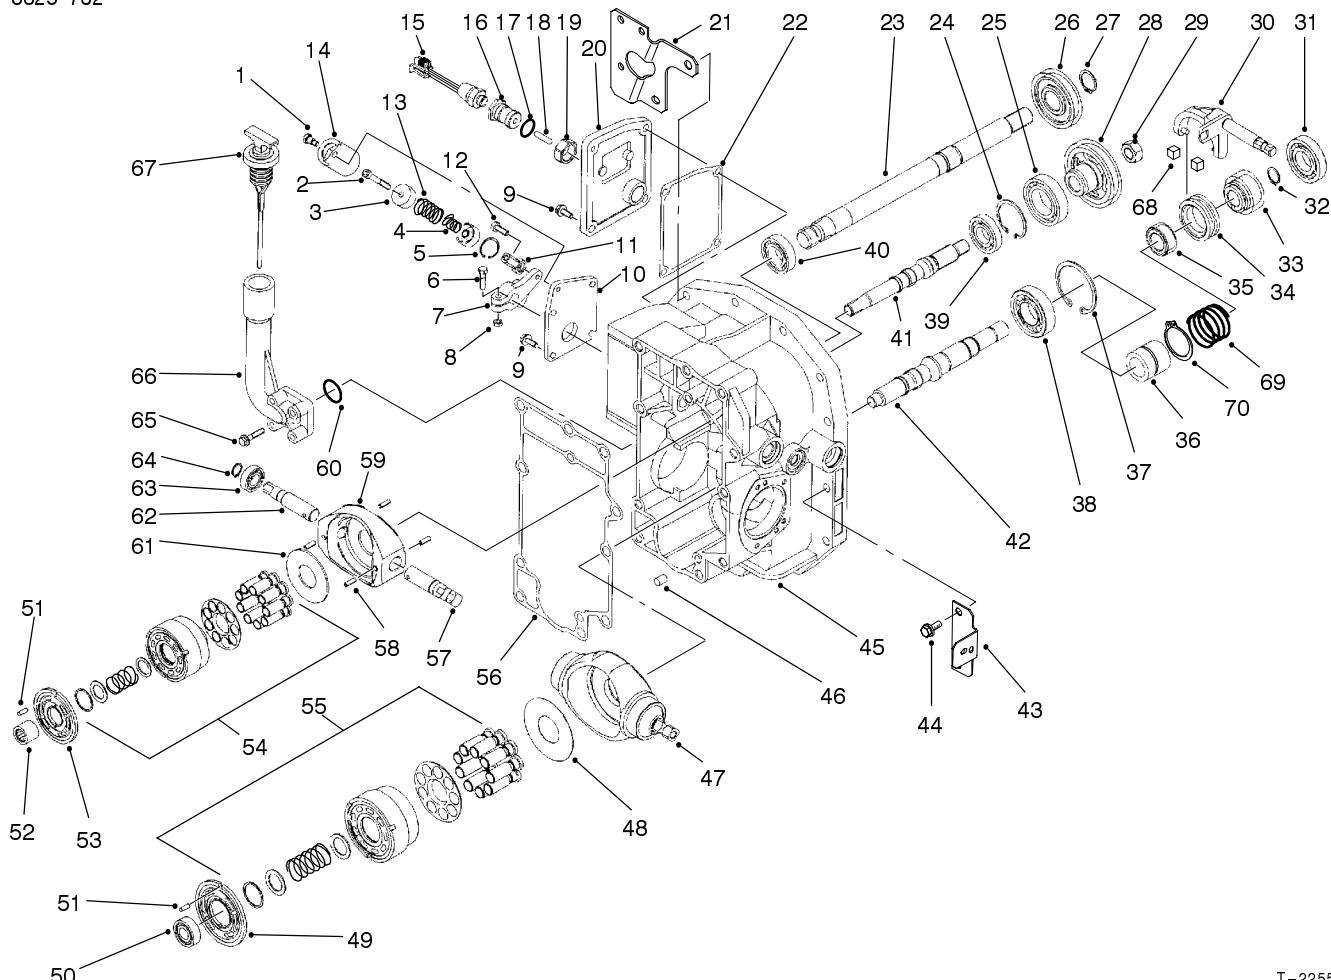


T-2255-4

Hydraulic Housing Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
45	95-7038	1	Housing-Motor, Variable	68	95-7036	2	Guide-Slot Spring
46	94-3975	2	Pin	69	95-2730	1	Ring-Retaining
47	94-4058	1	Swashplate-Variable	70	95-2729	1	Neutral Return ASM (Incl. Ref. #1-14)
48	75-0400	1	Plate-Thrust	* 93-5969			Kit-Seal, Overhaul
49	94-3921	1	Plate-Valve, Motor	* 93-5971			Gear Change Coupling ASM (Incl. Ref. #34 & 35)
50	94-3956	1	Bearing-Ball	* 94-4149			
51	94-3974	2	Pin				
52	94-3957	1	Bearing-Needle				
53	94-3973	1	Plate-Valve, Pump				
54	48-1800	1	Kit-Block, Cylinder				
55	75-0470	1	Kit-Block, Cylinder				
56	94-3992	1	Gasket-Section, Center				
57	94-3946	1	Shaft-Trunnion				
58	32121-91	4	Pin				
59	94-3967	1	Swashplate-Pump, Variable				
60	94-4051	1	O-Ring				
61	94-3978	1	Plate-Thrust				
62	94-3934	1	Shaft-Trunnion				
63	94-4040	1	Bearing-Ball				
64	94-3932	1	Ring-Retaining				
65	94-4050	4	Screw-HHF				
66	94-4048	1	Housing-Dipstick				
67	94-4049	1	Dipstick				

* Not Illustrated

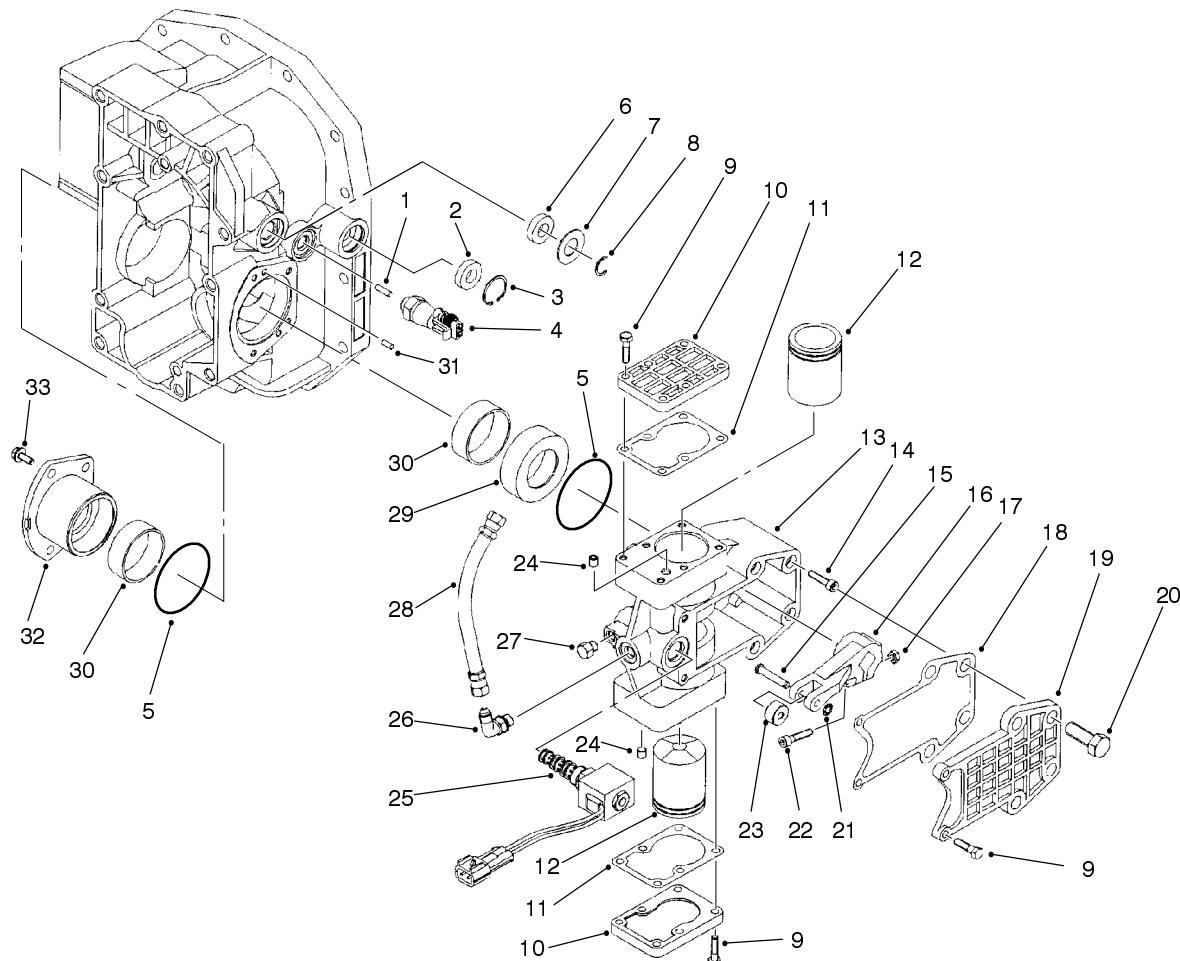


T-2256

Hydraulic Housing Assembly-Control

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-4028	1	Roller-Needle	26	94-4075	2	Elbow
2	94-3939	1	Seal-Lip	27	94-4074	1	Plug
3	94-3962	1	Ring-Retaining	28	94-4076	1	Hose
4	95-7034	2	Switch	†29		1	Carrier-Bearing, Trunnion
5	94-4059	2	O-Ring	†30		2	Bearing-Journal
6	25-3210	1	Seal	31	69-3450	2	Pin
7	25-2510	1	Washer	†32		1	Carrier-Trunnion Bearing
8	94-3945	1	Ring-Retaining	33	94-4026	4	Screw-HHF
9	95-7037	14	Screw-HH	* 93-5968		1	Trunnion Bearing Carrier ASM (Incl. Ref. #30 & 32)
10	94-4063	2	Cover-Servo	* 93-5967		1	Trunnion Bearing Carrier ASM MV (Incl. Ref. #29 & 30)
11	95-7040	2	Gasket-Cover	* 95-7041		1	Housing Control ASM (Incl. Ref. #13, 24 & 27)
12	94-4070	2	Piston-Control	* 94-9174		1	Control Arm ASM (Incl. Ref. #15-17 & 21-23)
13		1	Housing-Control				
14	94-4009	4	Screw				
†15		1	Pin-Headed				
†16		1	Arm-Control				
17	94-3936	1	Nut-Lock				
18	95-7039	1	Gasket-Housing				
19	94-4065	1	Cover-Control				
20	94-4007	4	Screw-HHF				
†21		1	Washer-Retention, Shaft				
22	94-4069	1	Screw				
†23		1	Roller-Arm, Control				
†24		2	Plug-Orifice				
25	94-4072	1	Valve-Solenoid				

* Not Illustrated

† Not Serviced Separately

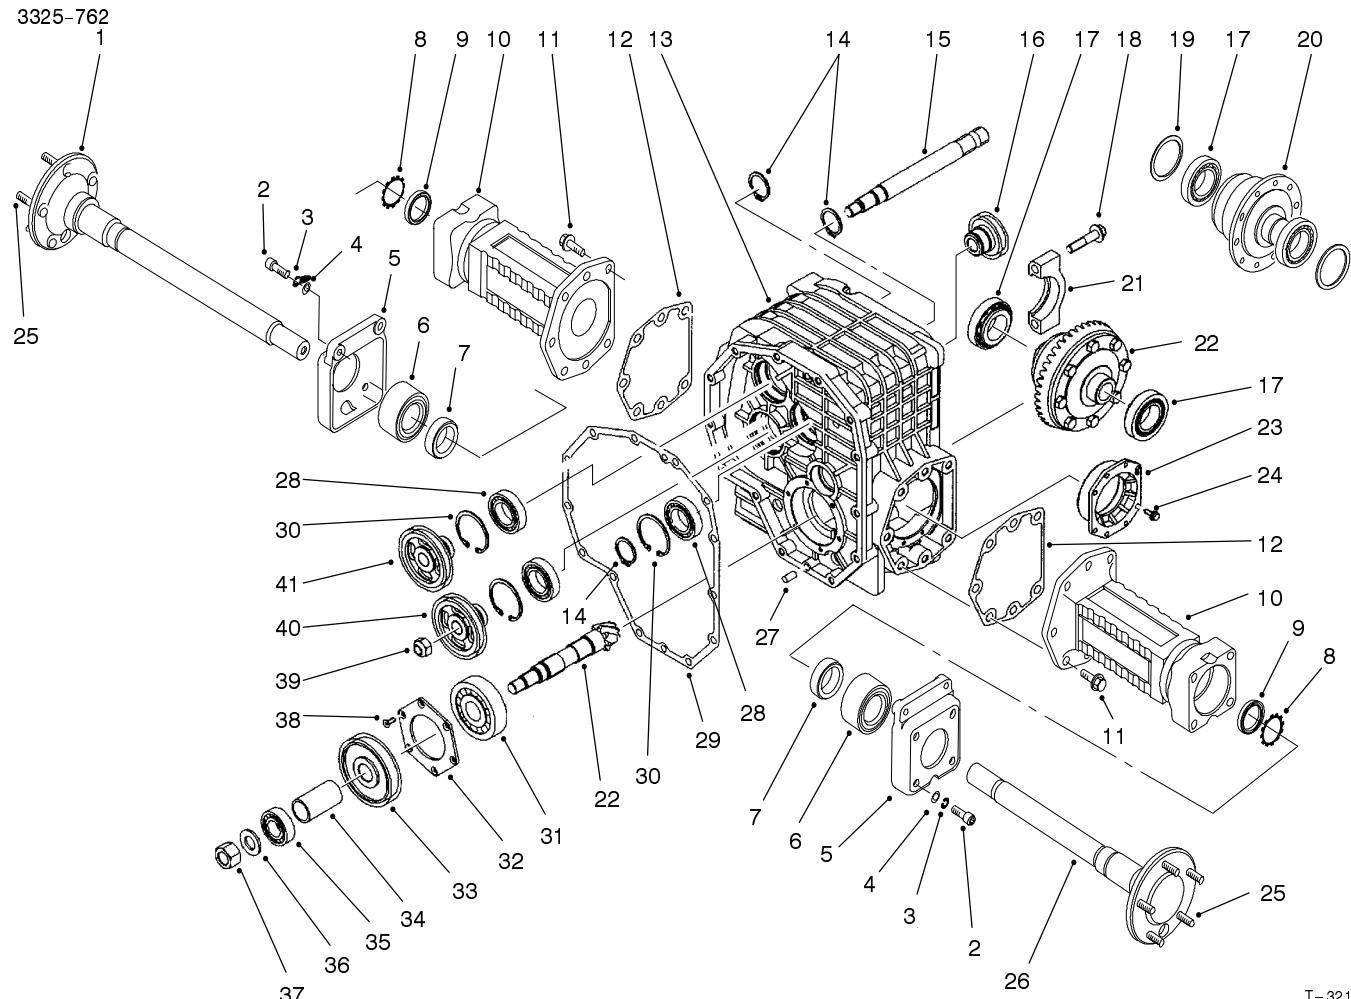

T-3214


Front Axle Gear Housing Assembly

Ref. No.	Part No.	Qty.	Description
1	94-4031	1	Shaft-Axle, Left
2	94-4036	8	Screw
3	3253-7	8	Washer-Lock
4	3256-6	8	Washer-Flat
5	95-2632	2	Bracket-Brake
6	94-4030	2	Bearing
7	94-4144	2	Collar-Bearing
8	94-4142	2	Ring-Retaining
9	94-4032	2	Seal-Lip
10	95-2631	2	Housing-Axle
11	94-4007	14	Screw-HHF
12	94-4015	2	Gasket-Housing
†13		1	Housing-Gear
14	69-3170	3	Ring-Retaining
15	94-3913	1	Shaft-PTO, Front
16	94-4052	1	Pinion-Clutch, PTO
17	93-5966	2	Kit-Bearing
18	94-4003	2	Screw-HHF
19		2	Washer
20	99-5781	1	Differential ASM
†21		1	Clamp-Differential
22	99-5780	1	Differential Ring & Pinion
†23		1	Carrier-Bearing
24	94-4002	6	Screw-HHF
25	94-4143	10	Stud-Wheel

* Not Illustrated

† Not Serviced Separately

Ref. No.	Part No.	Qty.	Description
26	94-4035	1	Shaft-Axle, Right
27	94-3975	4	Pin
28	94-3971	3	Bearing-Ball
29	94-3959	1	Gasket-Housing
30	94-3997	3	Ring-Retaining
31	94-3961	1	Bearing-Ball
†32		1	Retainer-Bearing
33	94-3912	1	Gear-Drive, Final
34	94-3958	1	Spacer-Pinion
35	75-0520	1	Bearing
36	99-5784	1	Washer
37	99-5783	1	Nut-Lock
38	98-1812	6	Screw
39	94-3953	1	Nut-Lock
40	94-3914	1	Gear-Drive, PTO
41	94-3909	1	Pinion-Drive, PTO
*	95-2634	1	LH Axle ASM (Incl. Ref. #1-12 & 25)
*	95-2633	1	RH Axle ASM (Incl. Ref. #2-12, 25 & 26)

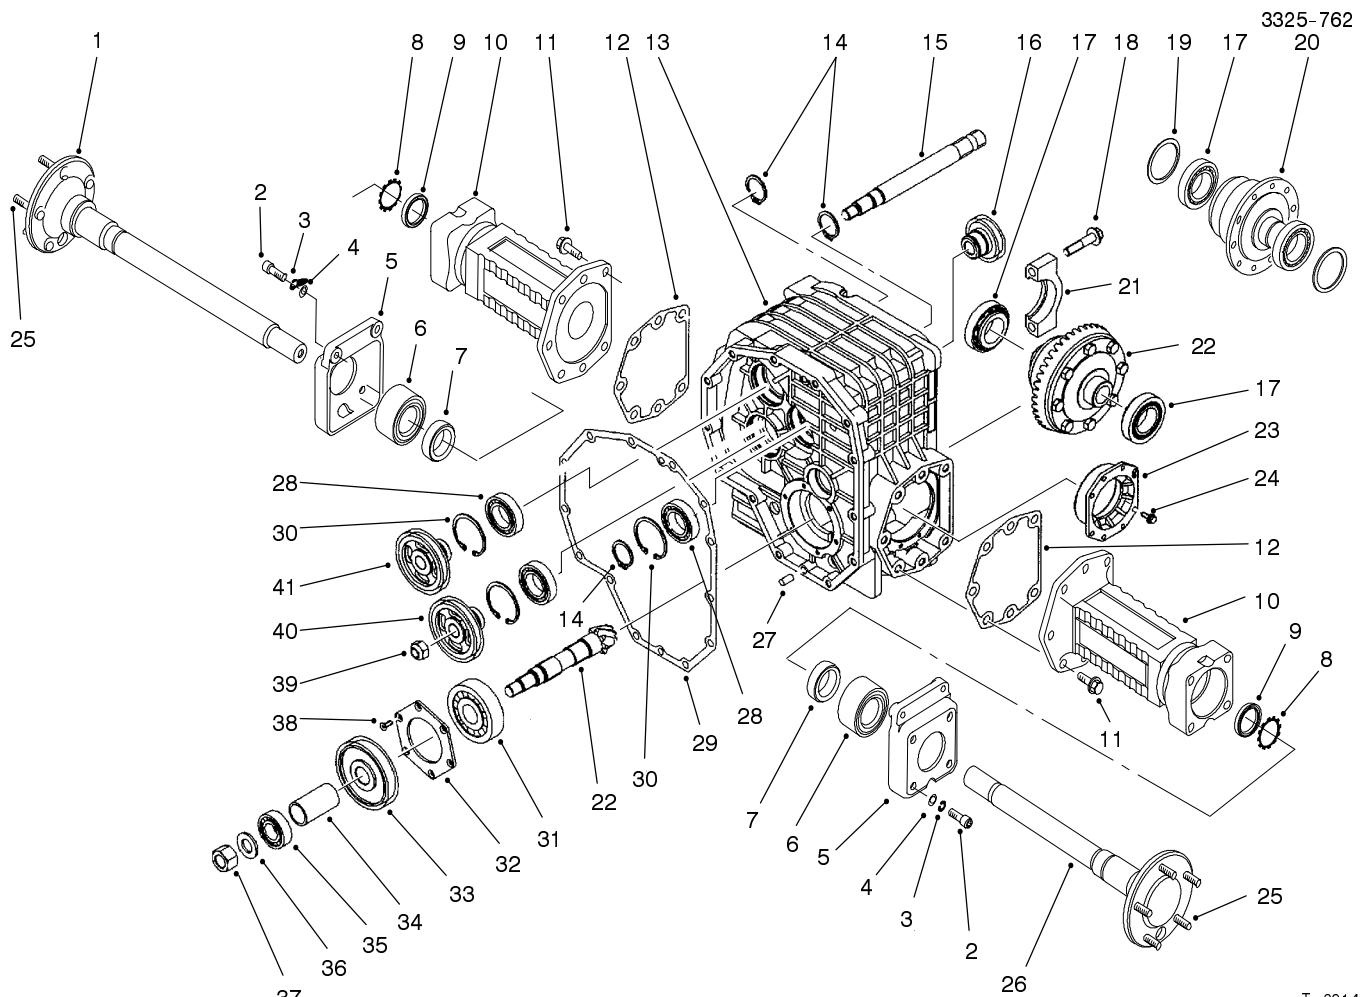


T=3214

Front Axle Gear Housing Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
*	99-5777	1	Gear Housing ASM (Incl. Ref. #13, 14, 17, 18, 21-24, 28-32 & 38)				
*	94-9178	1	Kit-Bearing, Pinion Head (Incl. Ref. #31, 32 & 38)				
*	99-5782	1	Ring & Pinion ASM				

* Not Illustrated

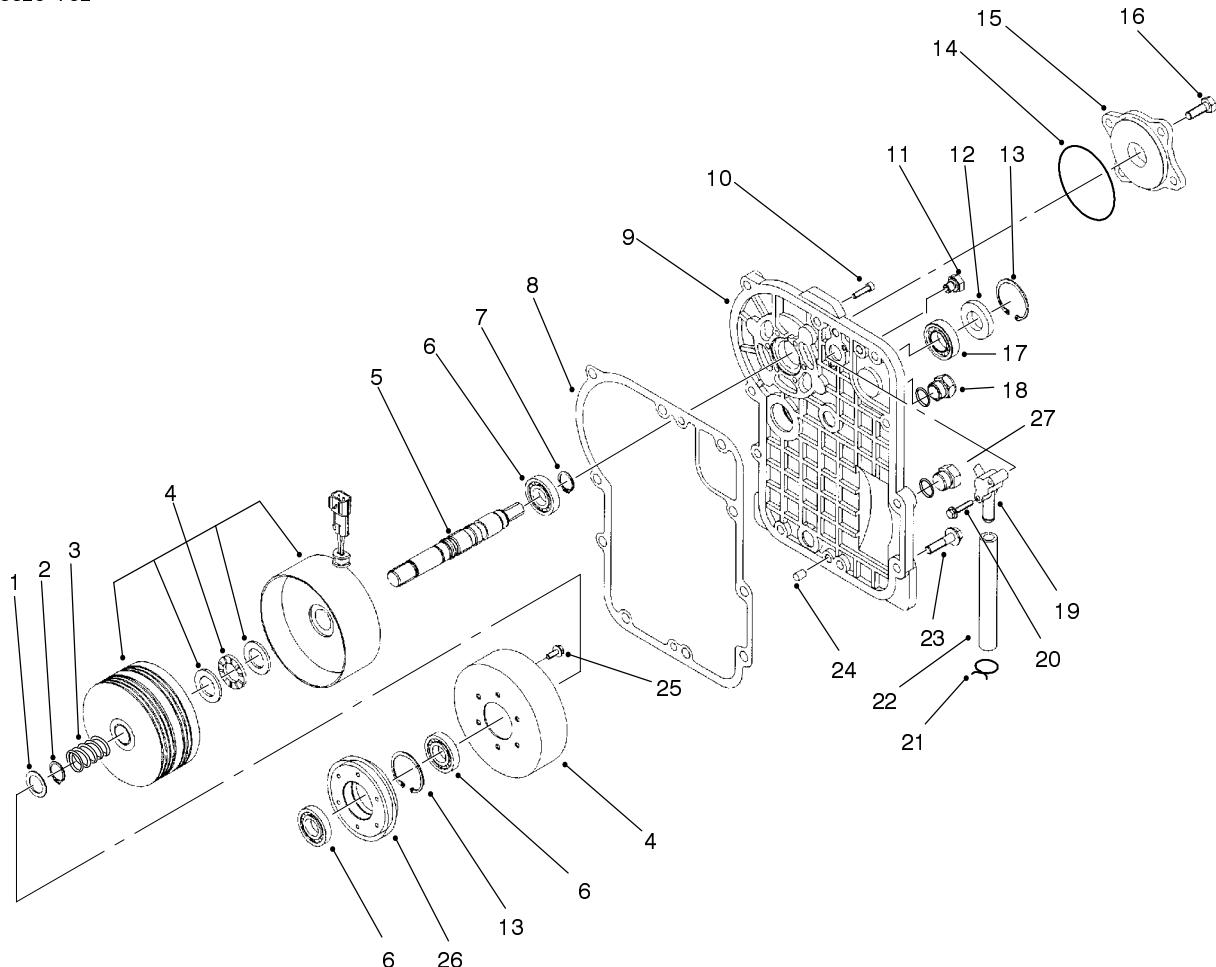

T-2259-1


Front Axle Cover Assembly

Ref. No.	Part No.	Qty.	Description
1	94-3995	1	Washer
2	94-4006	1	Ring-Retaining
3	94-4005	1	Spring-Compression
+4		1	Clutch-PTO
5	94-3910	1	Shaft-Clutch
6	94-3960	3	Bearing-Ball
7	94-3996	1	Ring-Retaining
8	94-4001	1	Gasket-Cover, Front
9	94-3991	1	Cover-Front
10	94-4009	6	Screw
11	94-3998	1	Vent-Breather
12	94-3925	1	Seal-Lip
13	94-4029	2	Ring-Retaining
14	94-4011	1	O-Ring
15	94-4010	1	Cover-Gerotor
16	94-4008	4	Screw
17	94-3942	1	Bearing-Ball
18	67-8030	1	Plug
+19		1	Tube-Lubrication
20	95-7037	2	Screw-HHF
+21		2	Clamp
+22		1	Hose-Lubricating
23	94-4004	10	Screw-HHF
24	94-3975	2	Pin
25	94-4026	6	Screw-HHF
26	94-4053	1	Gear-Clutch, PTO

* Not Illustrated

† Not Serviced Separately

Ref. No.	Part No.	Qty.	Description
27	104-0112	1	Plug-Magnetic
*	94-9179	1	Clutch ASM (Incl. Ref. #1-7, 13, 25 & 26)
*	94-9180	1	Front Cover ASM (Incl. Ref. #9, 11, 18, & 19-22)
*	94-9181	1	Lubricating Nozzle ASM (Incl. Ref. #19, 21 & 22)

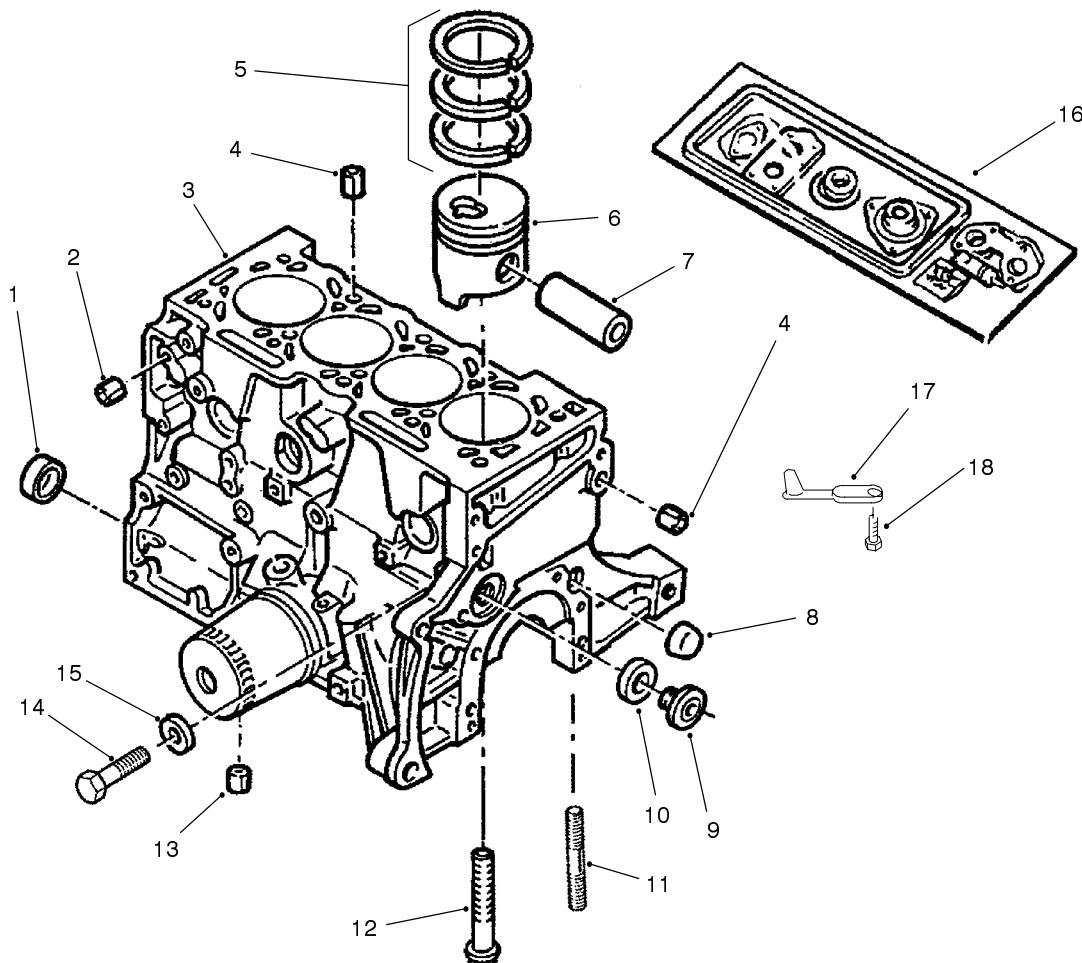

T-2277

Cylinder Block Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	74-7840	7	Plug				
2	93-5659	2	Pin (Dowel-Ring)				
3	93-5965	1	Cylinder Block ASM (Incl. Ref. #9, 10, 14, 15, 17 & 18)				
4	76-5690	4	Pin (Dowel-Ring)				
5	93-5714	1	Set-Ring, Piston (77mm Dia.) (Set of 3)				
†6		4	Piston				
†7		4	Pin-Wrist				
8	93-5656	1	Plug				
9	94-3121	2	Plug-Threaded				
10	93-5653	2	Seal-Plug				
11	93-5660	3	Stud				
12	93-5657	10	Screw				
13	93-5658	1	Pin (Dowel)				
14	100-1389	1	Plug-Drain				
15	95-3026	1	Gasket-14mm Dia.				
16	93-5652	1	Set-Gasket, Engine				
■17	100-1358	4	Jet-Oil				
▲17	100-1359	4	Jet-Oil				
■18	93-5704	4	Screw				
▲18	93-5680	4	Screw				
*	93-5650	1	Engine-Stripped				

*Not Illustrated

†Not Serviced Separately

■For Engine Serial Numbers 600505 & Up.

▲For Engine Serial Numbers 600504 & Down.

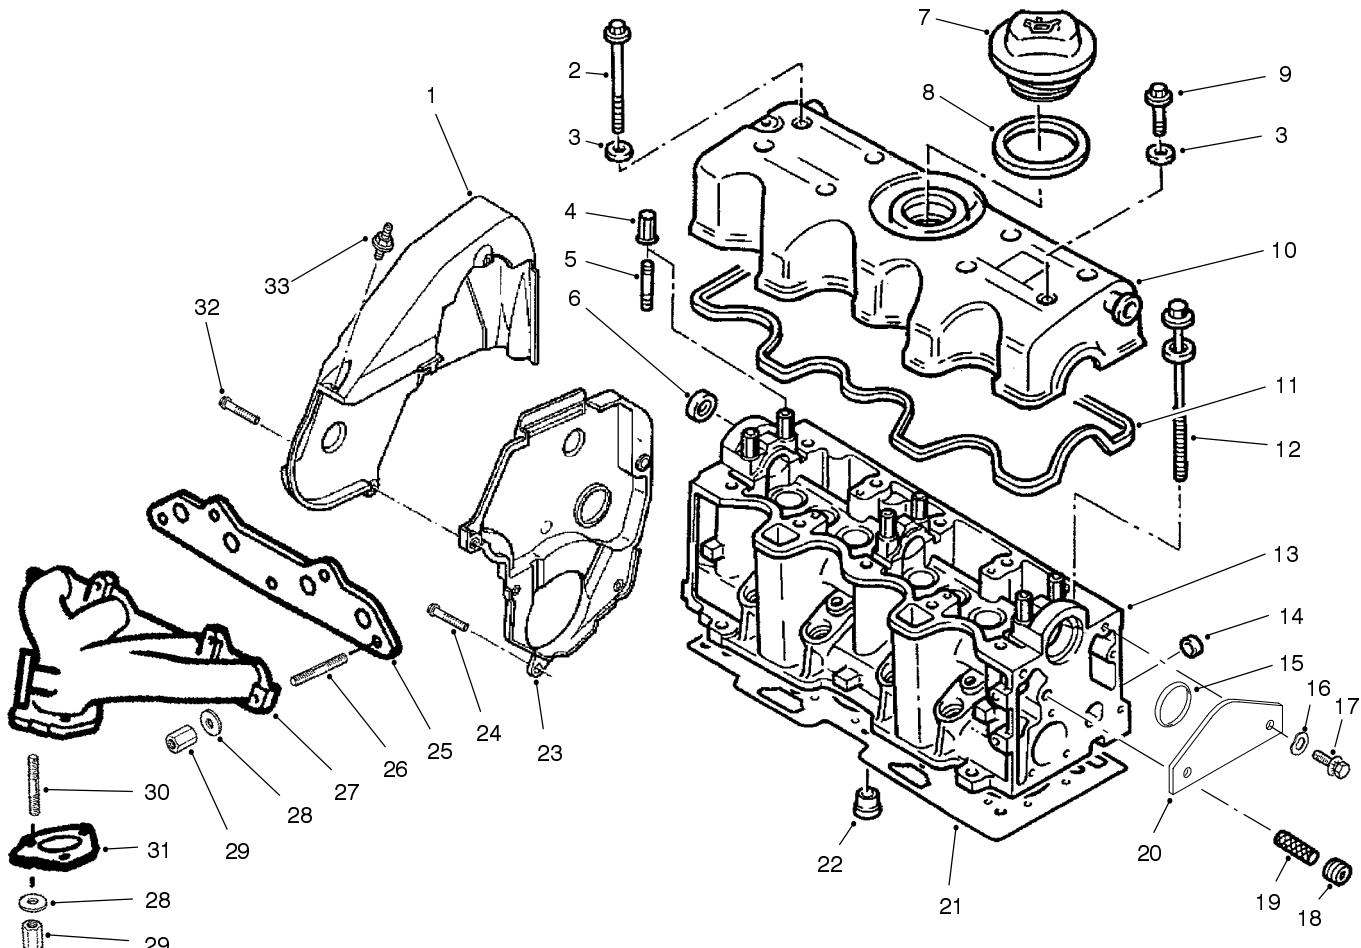


T-2278

Cylinder Head Assembly

Ref. No.	Part No.	Qty.	Description
1	95-7475	1	Cover-Upper
2	93-5672	4	Screw
3	93-5667	8	Gasket
4	93-5674	6	Nut
5	94-3162	6	Stud
6	74-7840	2	Plug
7	93-5668	1	Oil Cap Filler ASM (Incl. Ref. #8)
8	93-5666	1	Gasket
9	93-5673	4	Screw
10	93-5662	1	Cover (Incl. Ref. #11)
11	93-5665	1	Gasket
12	94-4146	10	Screw
13	93-5661	1	Head-Cylinder
14	93-5669	4	Plug
15	93-5926	1	O-Ring
16	93-5928	2	Washer-Spring
17	93-5927	2	Screw
18	94-3118	2	Plug
19	93-5670	1	Element-Filter
20	100-1364	1	Cover Plate ASM (Incl. Ref. #15)
21	93-5947	1	Gasket-Head, Cylinder
22	94-4145	4	Chamber-Swirl
23	98-8070	1	Cover-Lower
24	95-7477	5	Screw

Ref. No.	Part No.	Qty.	Description
25	93-5894	1	Gasket
26	93-5895	5	Stud
27	93-5893	1	Manifold-Exhaust
28	93-5897	8	Washer-Plate
29	93-5896	8	Nut-Hex
30	93-5898	3	Stud
31	93-5892	1	Gasket-Pipe
32	95-7479	1	Screw
33	95-7478	1	Screw
*	93-5664	1	Set-Gasket, Cylinder Head Gasket

*Not Illustrated

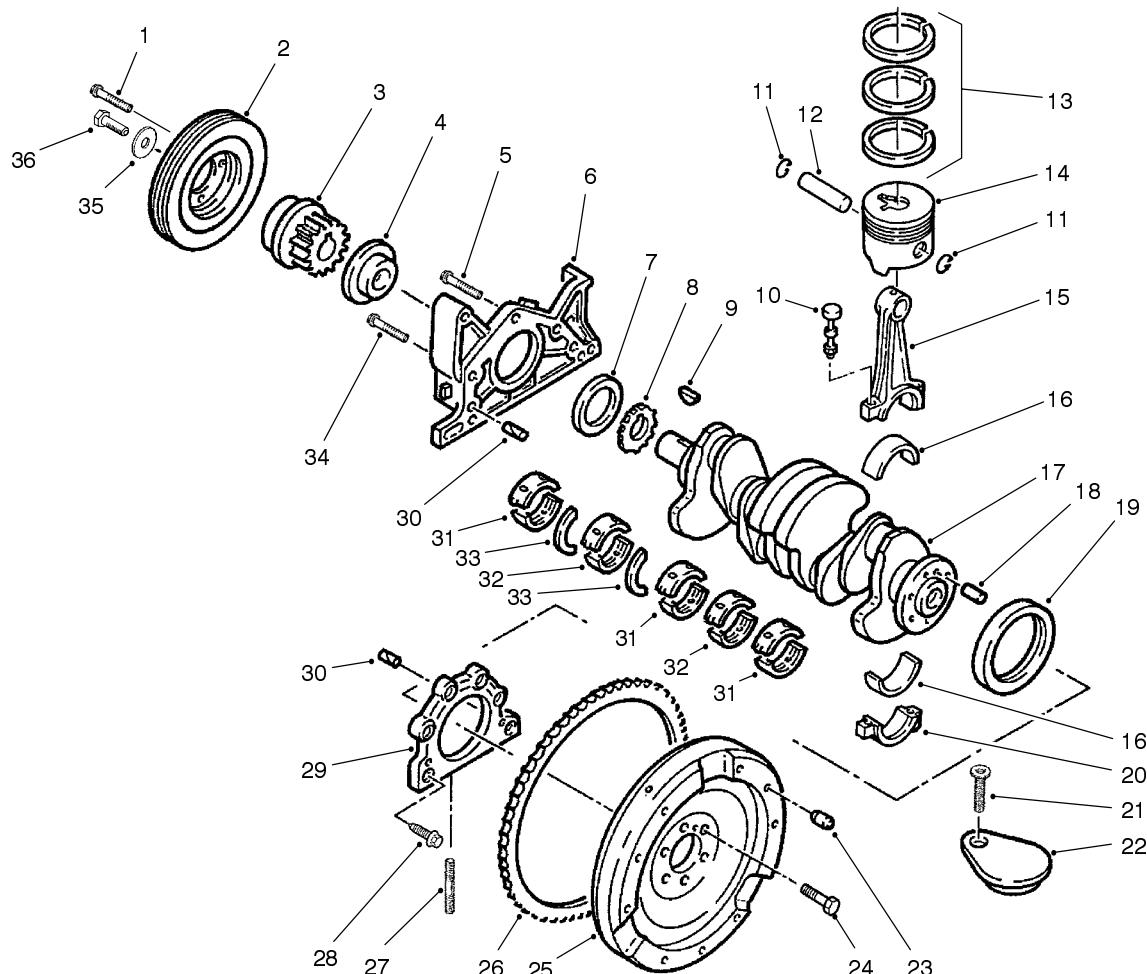

T-2279

Piston and Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-3112	4	Screw	19	93-5702	1	Gasket
2	98-8071	1	Pulley-Crankshaft	†20	93-5709	4	Cap-Rod, Connecting
▲3	93-5684	1	Gear-Timing	21	93-5709	1	Screw
●3	100-1374	1	Gear-Timing	22	93-5700	1	Plug
4	93-5699	1	Spacer	23	93-5705	3	Pin
5	93-5710	2	Screw	24	93-5708	6	Screw
6	93-5687	1	Plate-Gasket	■25	95-2642	1	Flywheel-Engine (Incl. Ref. #26)
7	93-5701	1	Gasket	■26	95-2641	1	Gear-Starter, Starter
▲8	93-5698	1	Gear-Pump, Oil	27	93-5707	2	Stud
●8	100-1375	1	Gear-Pump, Oil	28	93-5704	6	Screw
9	93-5703	1	Key	29	93-5686	1	Plate-Gasket
10	93-5715	8	Bolt- Rod, Connecting	30	100-1383	4	Pin
11	93-5716	8	Circlip	31	93-5688	6	Bearing-Half (1.844 Thick)
†12		4	Pin-Wrist	* 93-5689		6	Bearing-Half (1.858 Thick)
13	93-5714	4	Set Of 3 Piston Rings (77mm Dia.)	* 93-5690		6	Bearing-Half (1.869 Thick)
†14		4	Piston	* 95-2706		6	Bearing-Half (1.994 Thick)
15	93-5712	1	Set Of 4 Connecting Rods (Incl. Ref. #10 & 20)	* 95-2707		6	Bearing-Half (2.008 Thick)
16	93-5713	1	Set Of 8 Half Bearings (45mm Dia.)				
16	95-2705	1	Set Of 8 Half Bearings (44.7mm Dia.)				
17	93-5681	1	Crankshaft				
18	74-8250	1	Pin				


*Not Illustrated

■For Engine Serial No. 549159 & Up

●For Engine Serial No. 650226 & Down.

†Not Serviced Separately

▲For Engine Serial No. 650227 & Up.

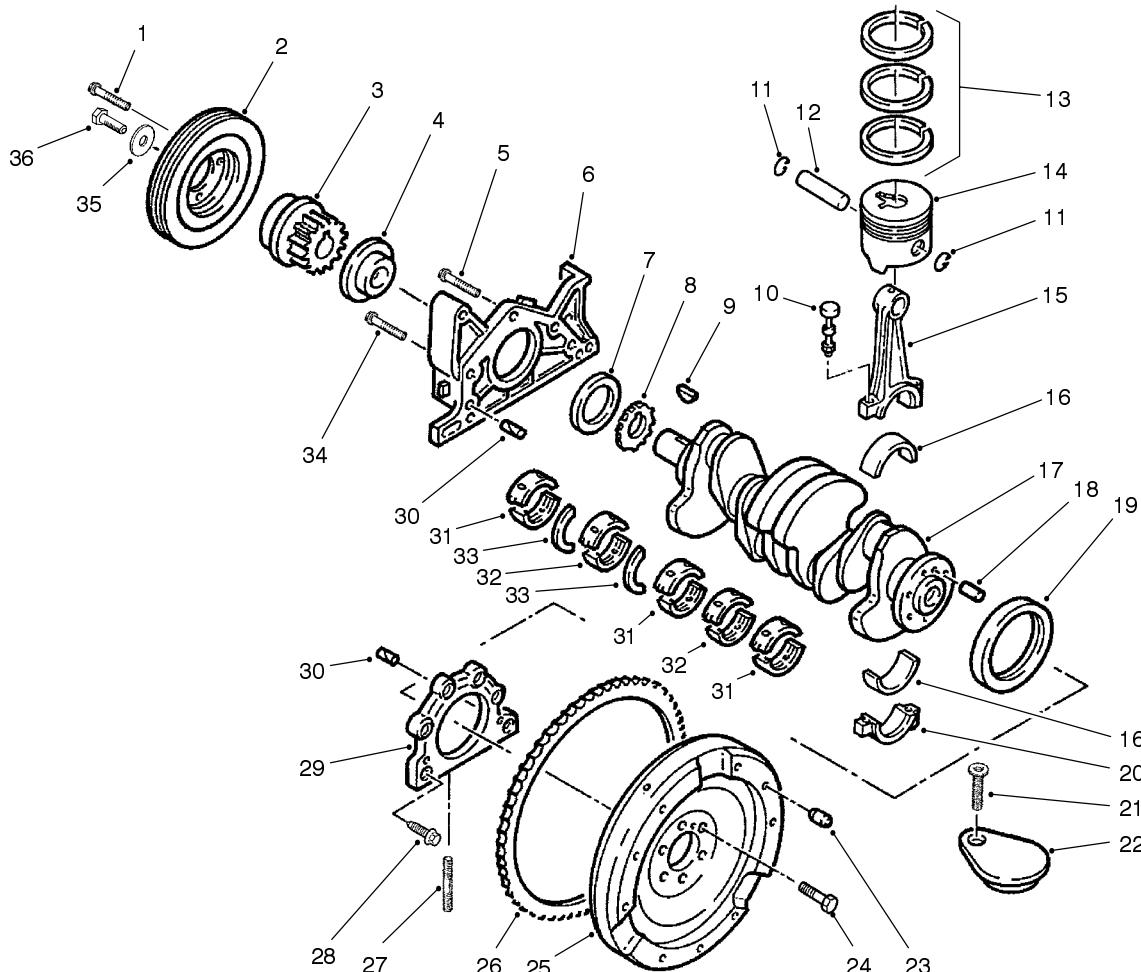

T-2279


Piston and Crankshaft Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
*	95-2708	6	Bearing-Half (2.019 Thick)	*	95-2702	1	Piston ASM. Repair A (Incl. Ref. #11-14)
32	93-5691	4	Bearing-Half (1.844 Thick)	*	95-2703	1	Piston ASM. Repair B (Incl. Ref. #11-14)
*	93-5692	4	Bearing-Half (1.858 Thick)	*	95-2704	1	Piston ASM. Repair C (Incl. Ref. #11-14)
*	93-5693	4	Bearing-Half (1.869 Thick)				
*	95-2709	4	Bearing-Half (1.994 Thick)				
*	95-2710	4	Bearing-Half (2.008 Thick)				
*	95-2711	4	Bearing-Half (2.019 Thick)				
33	93-5694	2	Flanges-Half (2.40 Thick)				
*	93-5695	2	Flanges-Half (2.50 Thick)				
*	93-5696	2	Flanges-Half (2.55 Thick)				
*	93-5697	2	Flanges-Half (2.60 Thick)				
34	93-5711	3	Screw				
35	74-8080	1	Washer-Pate				
▲36	94-3145	1	Screw-Pulley				
●36	100-1376	1	Screw-Pulley				

*Not Illustrated

▲For engine Serial No. 650227 & Up.

●For Engine Serial No. 650226 & Down.

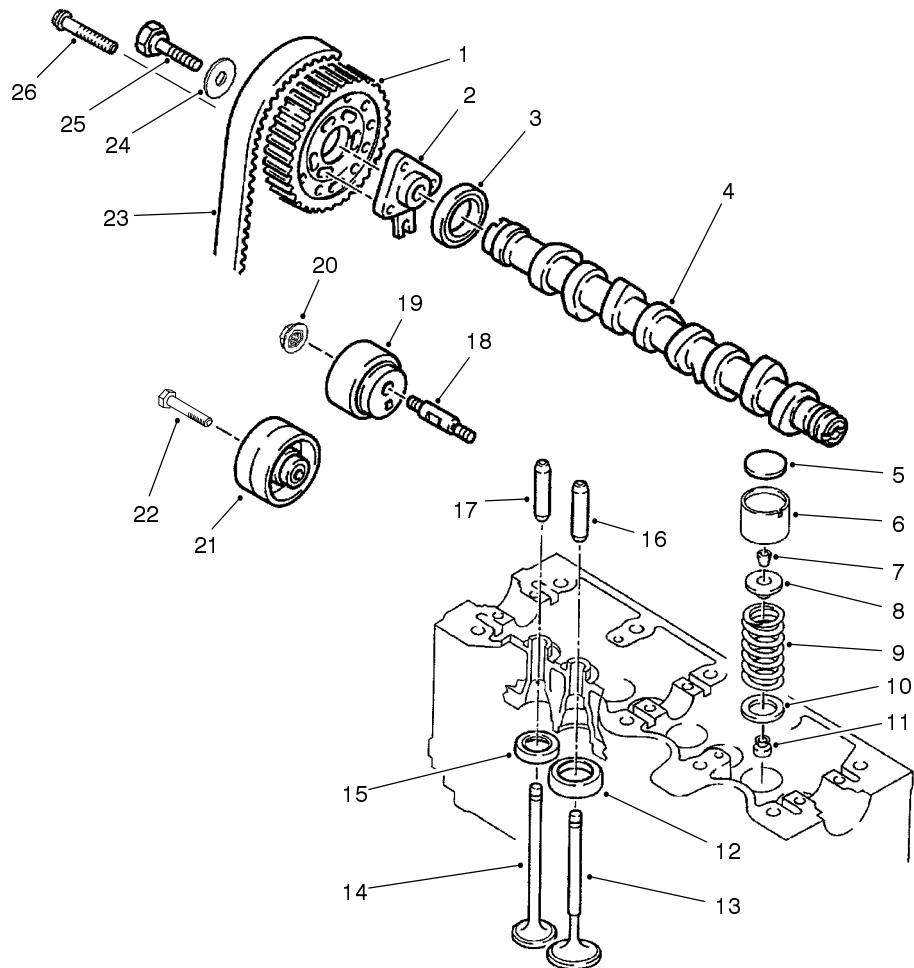


T-2280

Camshaft and Valves Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5719	1	Gear-Camshaft	*	93-5753	8	Shim-Tappet (3.72 mm)
2	93-5723	1	Hub-Pulley	*	93-5754	8	Shim-Tappet (3.75 mm)
3	93-5718	1	Seal-Camshaft	*	93-5755	8	Shim-Tappet (3.77 mm)
4	93-5717	1	Camshaft	*	93-5756	8	Shim-Tappet (3.80 mm)
5	93-5742	8	Shim-Tappet (3.20 mm)	*	93-5757	8	Shim-Tappet (3.82 mm)
*	93-5743	8	Shim-Tappet (3.25 mm)	*	93-5758	8	Shim-Tappet (3.85 mm)
*	93-5744	8	Shim-Tappet (3.30 mm)	*	93-5759	8	Shim-Tappet (3.87 mm)
*	93-5745	8	Shim-Tappet (3.35 mm)	*	93-5760	8	Shim-Tappet (3.90 mm)
*	93-5746	8	Shim-Tappet (3.40 mm)	*	93-5761	8	Shim-Tappet (3.92 mm)
*	93-5747	8	Shim-Tappet (3.45 mm)	*	93-5762	8	Shim-Tappet (3.95 mm)
*	93-5748	8	Shim-Tappet (3.50 mm)	*	93-5763	8	Shim-Tappet (3.97 mm)
*	93-5749	8	Shim-Tappet (3.55 mm)	*5	93-5764	8	Shim-Tappet (4.00 mm)
*	93-5750	8	Shim-Tappet (3.60 mm)				
*	93-5751	8	Shim-Tappet (3.65 mm)				
*	93-5752	8	Shim-Tappet (3.70 mm)				

*Not Illustrated

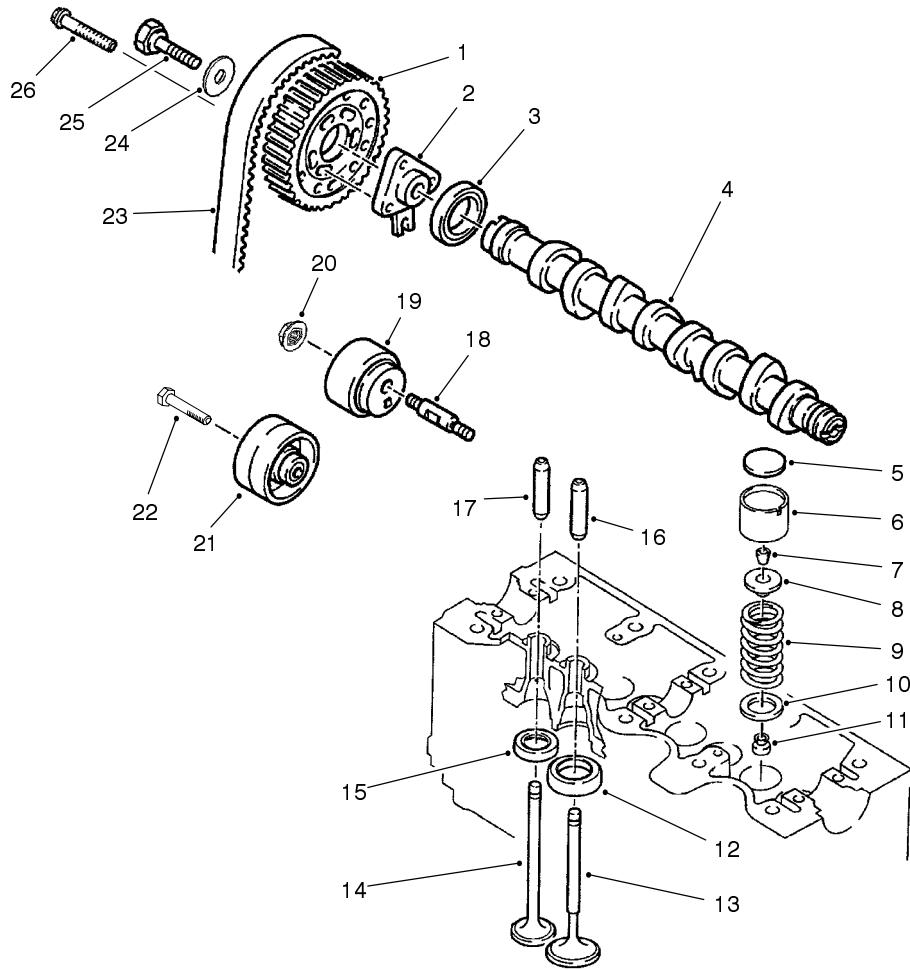


T-2280

Camshaft and Valves Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
* 93-5765	8	Shim-Tappet (4.02 mm)	
* 93-5766	8	Shim-Tappet (4.05 mm)	
* 93-5767	8	Shim-Tappet (4.07 mm)	
* 93-5768	8	Shim-Tappet (4.10 mm)	
* 93-5769	8	Shim-Tappet (4.12 mm)	
* 93-5770	8	Shim-Tappet (4.15 mm)	
* 93-5771	8	Shim-Tappet (4.17 mm)	
* 93-5772	8	Shim-Tappet (4.20 mm)	
* 93-5773	8	Shim-Tappet (4.22 mm)	
* 93-5774	8	Shim-Tappet (4.25 mm)	
* 93-5775	8	Shim-Tappet (4.27 mm)	
* 93-5776	8	Shim-Tappet (4.30 mm)	
* 93-5777	8	Shim-Tappet (4.32 mm)	

Ref. No.	Part No.	Qty.	Description
* 93-5778	8	Shim-Tappet (4.35 mm)	
* 93-5779	8	Shim-Tappet (4.37 mm)	
* 93-5780	8	Shim-Tappet (4.40 mm)	
* 93-5781	8	Shim-Tappet (4.42 mm)	
* 93-5782	8	Shim-Tappet (3.45 mm)	
* 93-5783	8	Shim-Tappet (4.47 mm)	
* 93-5784	8	Shim-Tappet (4.50 mm)	
* 93-5785	8	Shim-Tappet (4.52 mm)	
* 93-5786	8	Shim-Tappet (4.55 mm)	
* 93-5787	8	Shim-Tappet (4.57 mm)	
* 93-5788	8	Shim-Tappet (4.60 mm)	
* 93-5789	8	Shim-Tappet (4.62 mm)	

*Not Illustrated

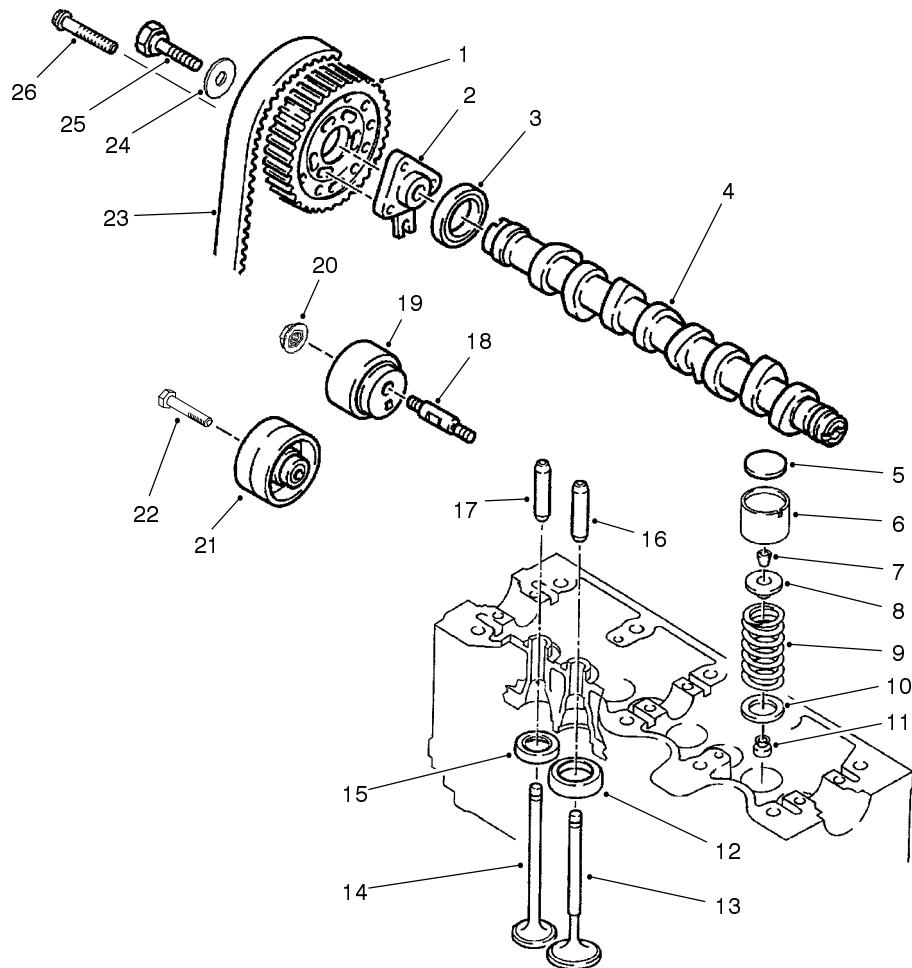


T-2280

Camshaft and Valves Assembly (Continued)

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
*5	93-5790	8	Shim-Tappet (4.65 mm)	10	93-5741	8	Washer-Flat
*	93-5791	8	Shim-Tappet (4.67 mm)	11	100-1367	8	Seal-Valve
*	93-5792	8	Shim-Tappet (4.70 mm)	12	93-5739	4	Valve-Seat, Inlet
*	93-5793	8	Shim-Tappet (4.72 mm)	13	93-5730	4	Valve-Intake
*	93-5794	8	Shim-Tappet (4.75 mm)	14	93-5731	4	Valve-Exhaust
*	93-5795	8	Shim-Tappet (4.77 mm)	15	93-5740	4	Valve-Seat, Outlet
*	93-5796	8	Shim-Tappet (4.80 mm)	16	93-5737	4	Guide-Valve, Inlet
*	93-5797	8	Shim-Tappet (4.82 mm)	17	93-5738	4	Guide-Valve, Outlet
*	93-5798	8	Shim-Tappet (4.85 mm)	18	93-5724	1	Spindle-Tensioner
*	93-5799	8	Shim-Tappet (4.87 mm)	19	100-1360	1	Tensioner
*	93-5800	8	Shim-Tappet (4.90 mm)	20	93-5729	1	Nut
6	93-5736	8	Tappet	21	100-1363	1	Kit-Roller (Incl. Ref. #22)
7	93-5734	16	Valve Half Bush	22	93-5726	1	Screw
8	93-5733	8	Seat-Spring, Valve	23	93-5720	1	Belt-Cogged
9	93-5732	8	Spring-Valve	24	93-5728	1	Washer-Plate
				25	93-5725	1	Screw-Pulley
				26	93-5851	3	Screw


*Not Illustrated

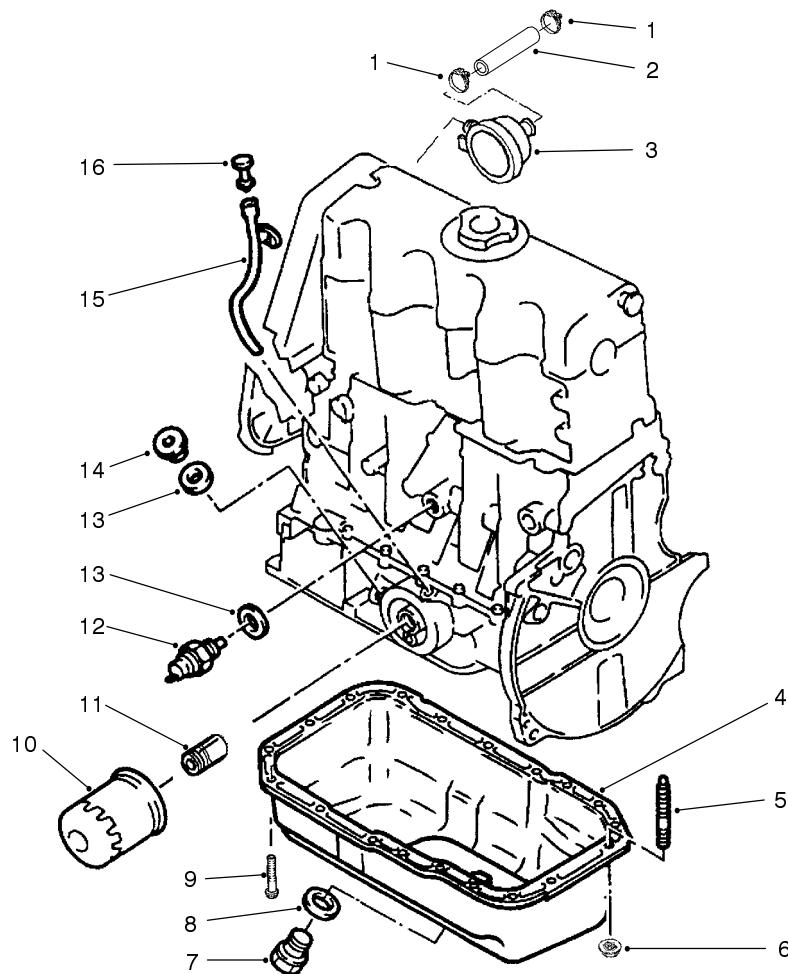

T-2281

Oil System Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	2412-36	2	Clamp				
2	93-5817	1	Union				
3	93-5816	1	Regulator				
4	93-5810	1	Sump-Oil				
5	93-5660	3	Stud				
6	93-5815	3	Nut				
7	74-7310	1	Plug-Drain				
8	74-7320	1	Gasket				
9	93-5704	16	Screw				
10	74-7970	1	Filter-Oil				
11	93-5809	1	Adaptor				
12	94-3180	1	Switch-Pressure				
13	93-5814	2	Gasket				
14	93-5813	1	Plug-Threaded				
15	93-5811	1	Guide-Dipstick				
16	93-5812	1	Dipstick-Oil				

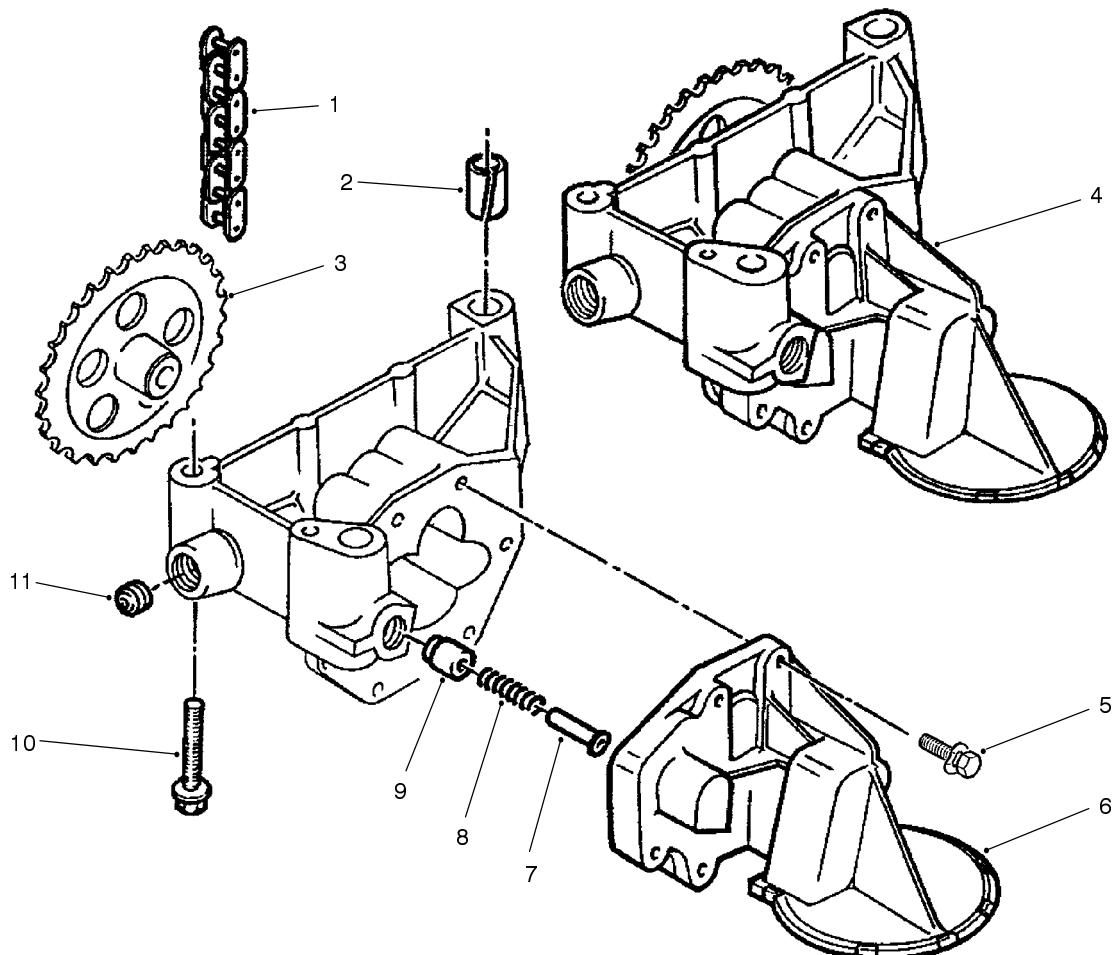


T-2282

Oil Pump Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5804	1	Chain-Pump, Oil				
2	93-5658	1	Pin				
†3		1	Gear-Drive				
4	93-5801	1	Pump-Oil (Incl. Ref. #3 & 6)				
5	93-5807	6	Screw				
†6		1	Strainer				
7	93-5806	1	Shaft				
8	93-5805	1	Spring				
9	94-3176	1	Plunger				
10	93-5803	3	Screw				
11	94-3177	1	Plug				

† Not Serviced Separately

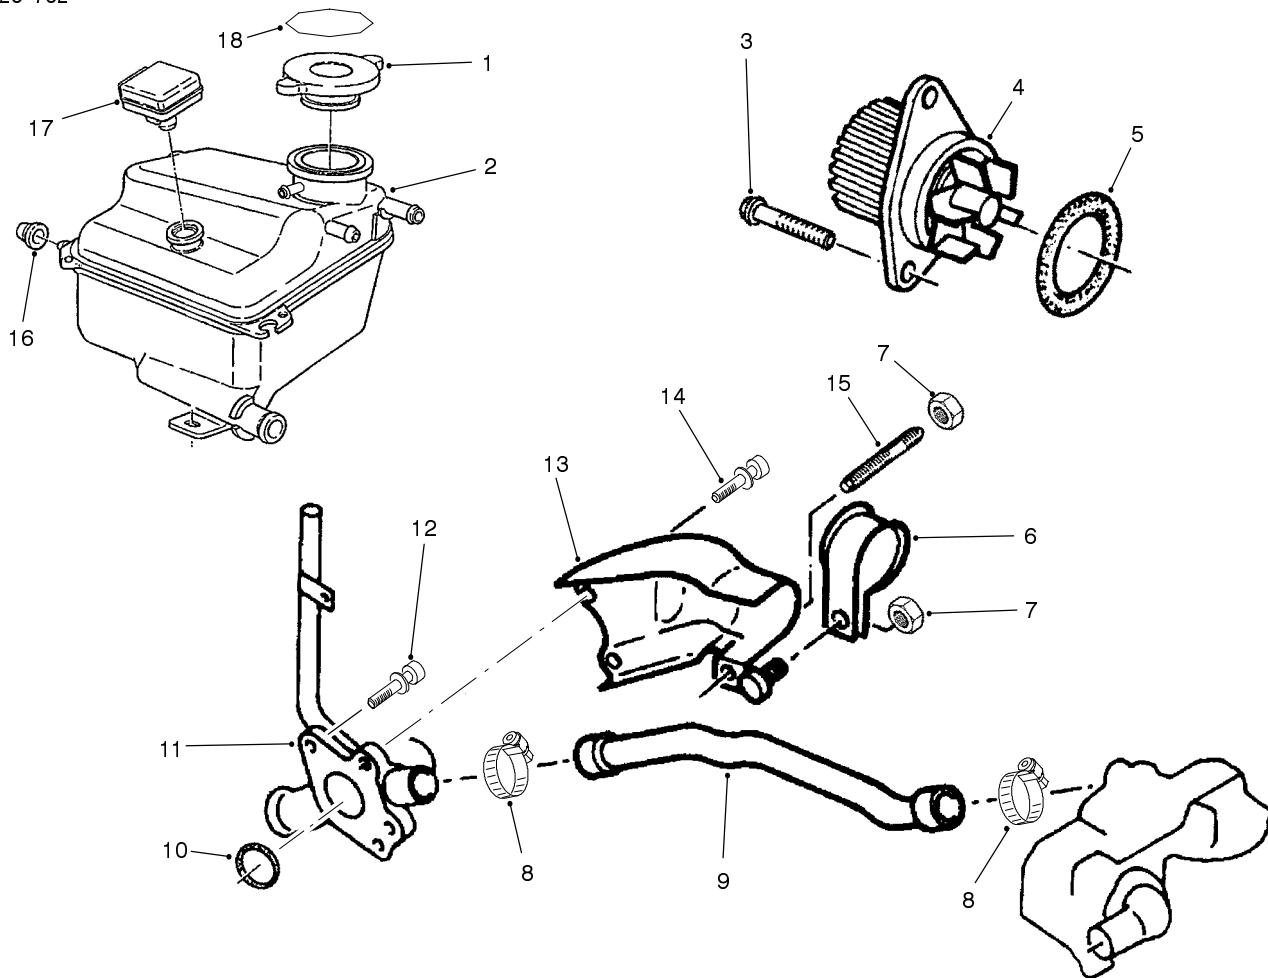


T-2283

Coolant System Assembly

Ref. No.	Part No.	Qty.	Description
1	94-2800	1	Plug-Pressure
1	66-3240	1	Cap-Radiator (Europe)
2	98-1805	1	Box-Degassing
3	94-3163	2	Screw
4	104-0111	1	Pump-Water
5	93-5822	1	O-Ring
●6	93-5826	1	Clip
●7	94-3267	2	Nut
8	2412-129	2	Clamp
●9	93-5824	1	Union-By-pass
◆9	104-0114	1	Union-By-pass
10	93-5821	1	O-Ring
◆11	93-5819	1	Inlet-Water
●11	104-0113	1	Inlet-Water
12	93-5823	2	Screw
●13	93-5825	1	Shield-Heat
●14	93-5827	2	Screw
●15	93-5660	1	Stud
16	94-2801	2	Grommet
17	94-9984	1	Sensor-Level, Water
18	93-7840	1	Decal-Radiator (Europe)

Ref. No.	Part No.	Qty.	Description

- For engine serial number 784440 & lower.
- ◆ For engine serial number 784441 & higher.

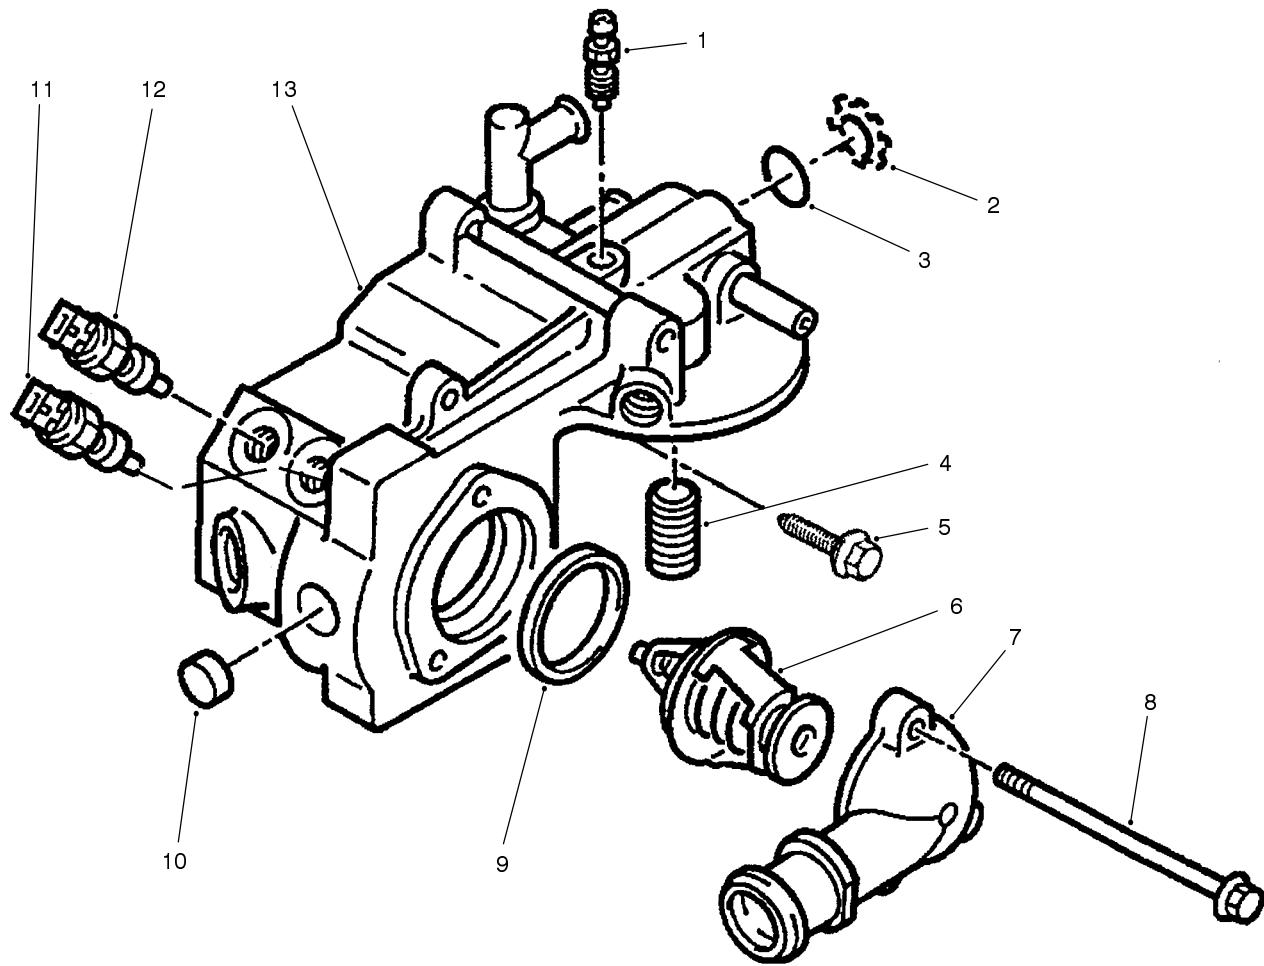


T-2284

Coolant Outlet Box Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5835	1	Screw-Bleed				
2	93-5840	1	Washer				
3	93-5838	2	O-Ring				
4	93-5836	1	Insert				
5	93-5807	1	Screw				
6	93-5831	1	Thermostat				
7	94-9197	1	Cover				
8	93-5839	4	Screw				
9	93-5837	1	Gasket-Box, Water				
10	93-5833	1	Plug (10.25mm Dia)				
*	93-5834	2	Plug (14.5mm Dia)				
11	94-3211	1	Thermoswitch				
12	93-5832	1	Sender				
13	93-5829	1	Box-Outlet, Water				

*Not Illustrated

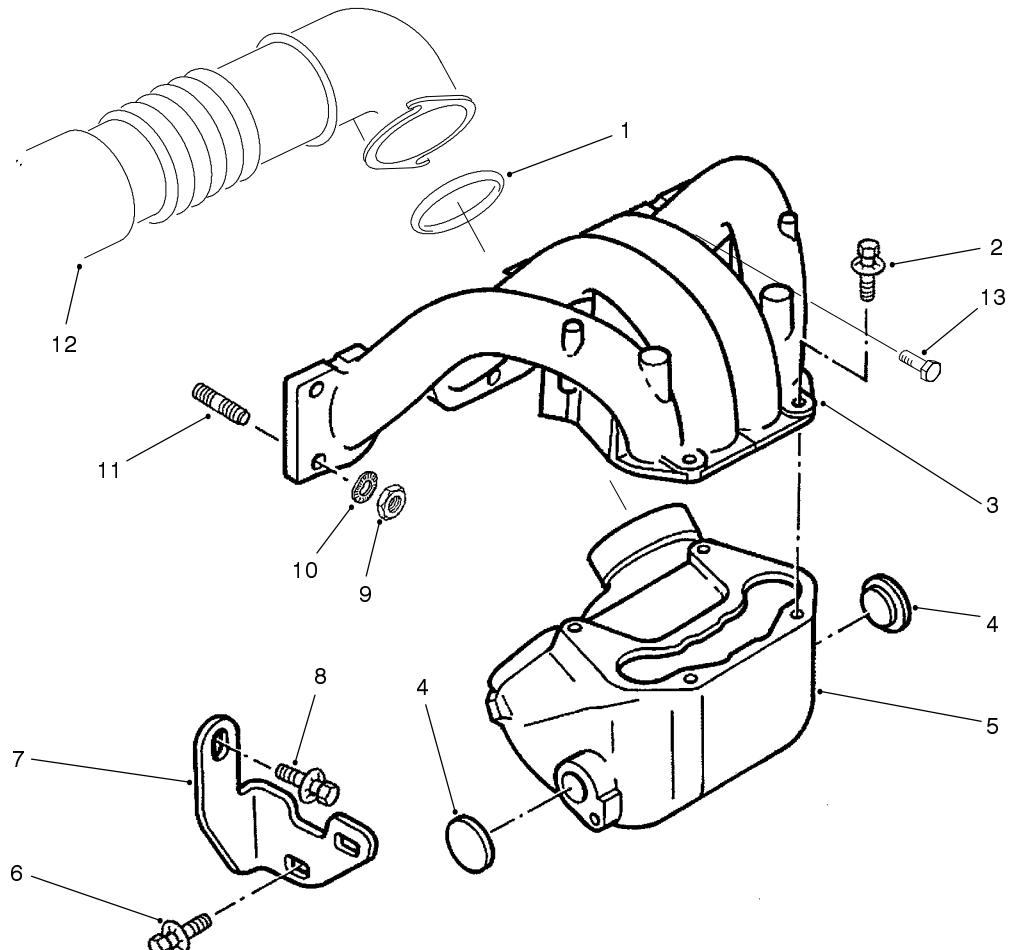

T-2285


Intake Manifold Assembly

Ref. No.	Part No.	Qty.	Description
1	93-5841	1	O-Ring
2	93-5847	4	Screw
3	93-5843	1	Manifold-Intake
4	93-5656	2	Plug
5	93-5844	1	Divider-Air
■6	94-3161	2	Screw
▲6	94-3161	6	Screw
7	93-5845	1	Bracket
8	94-3131	1	Screw
■9	94-3165	6	Nut
▲9	94-3165	2	Nut
▲10	94-3164	6	Washer-Spring
■10	94-3164	2	Washer-Spring
▲11	93-5846	6	Stud
11	93-5846	2	Stud
12	93-5842	1	Union-Air
13	94-9196	1	Screw

Ref. No.	Part No.	Qty.	Description

▲For Engine Serial No. 655961 & Down.

For Engine Serial No. 655961 & Down
For Engine Serial No. 655962 & Up.

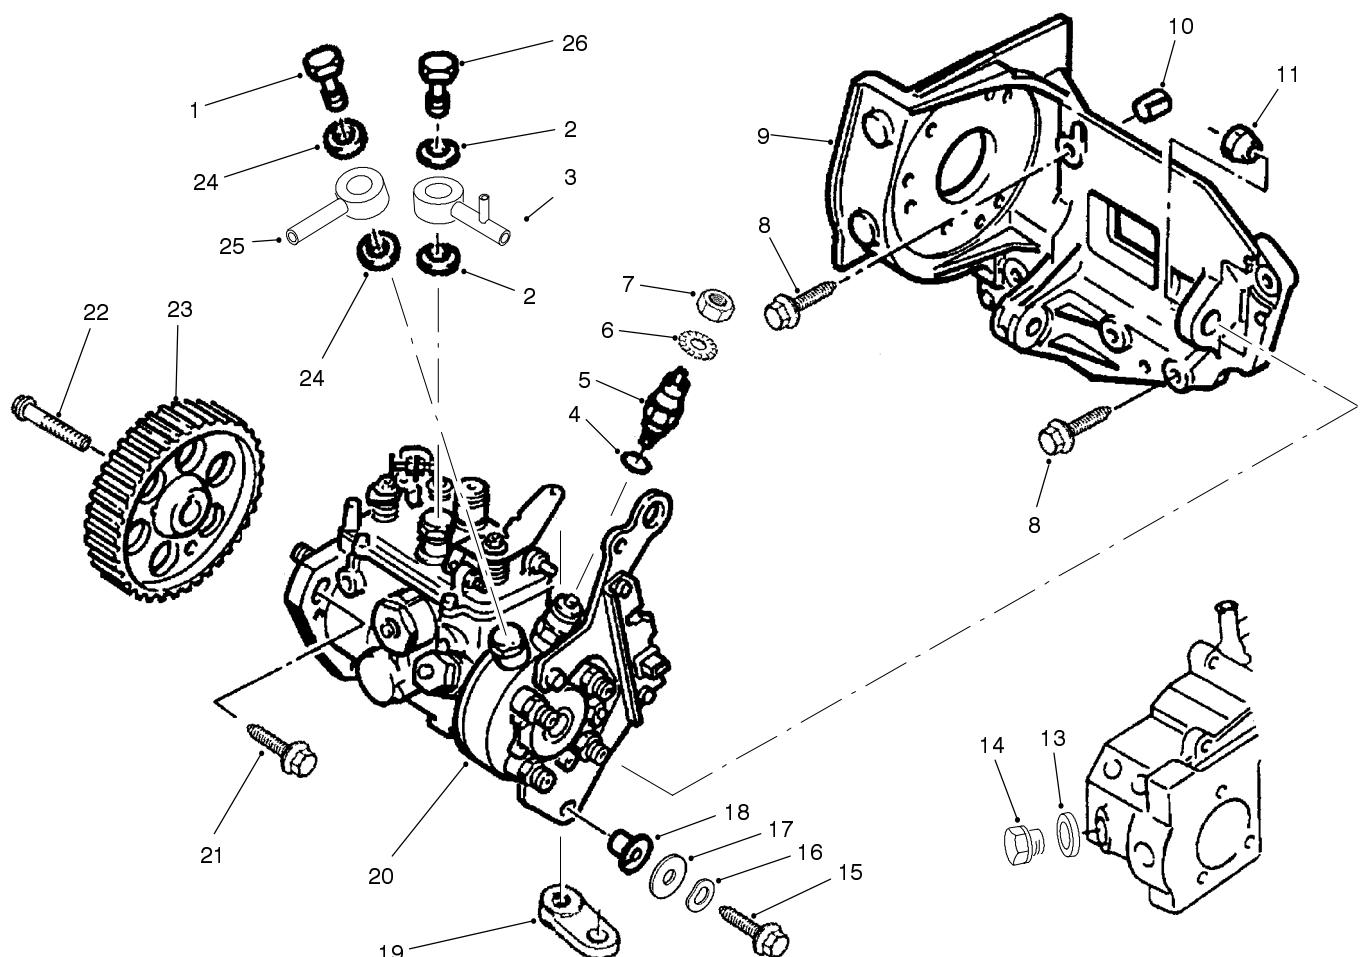


T-2286

Injection Pump Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-4111	1	Screw-Union, Inlet	26	94-3250	1	Screw-Union, Outlet
2	74-8870	2	Gasket				
3	95-1690	1	Union-Outlet				
4	94-3274	1	O-Ring				
5	98-8806	1	Valve-Solenoid				
6	74-8710	1	Washer				
7	48-7880	1	Nut				
8	93-5852	5	Screw (35mm)				
*	93-5853	1	Screw (45mm)				
9	93-5849	1	Bracket-Pump, Injection				
10	93-5659	2	Pin				
11	94-3165	1	Nut-Hex				
13	94-3122	1	Gasket				
14	94-3121	1	Plug				
15	94-3221	1	Screw				
16	94-3164	1	Washer-Spring				
17	93-5855	1	Washer-Plate				
18	93-5909	1	Ring				
19	74-8650	1	Journal				
20	93-5848	1	Pump-Injection				
21	93-5854	3	Screw				
22	93-5851	3	Screw				
23	93-5719	1	Gear-Pump, Injection				
24	74-8680	2	Gasket				
25	93-5857	1	Union-Inlet				

*Not Illustrated

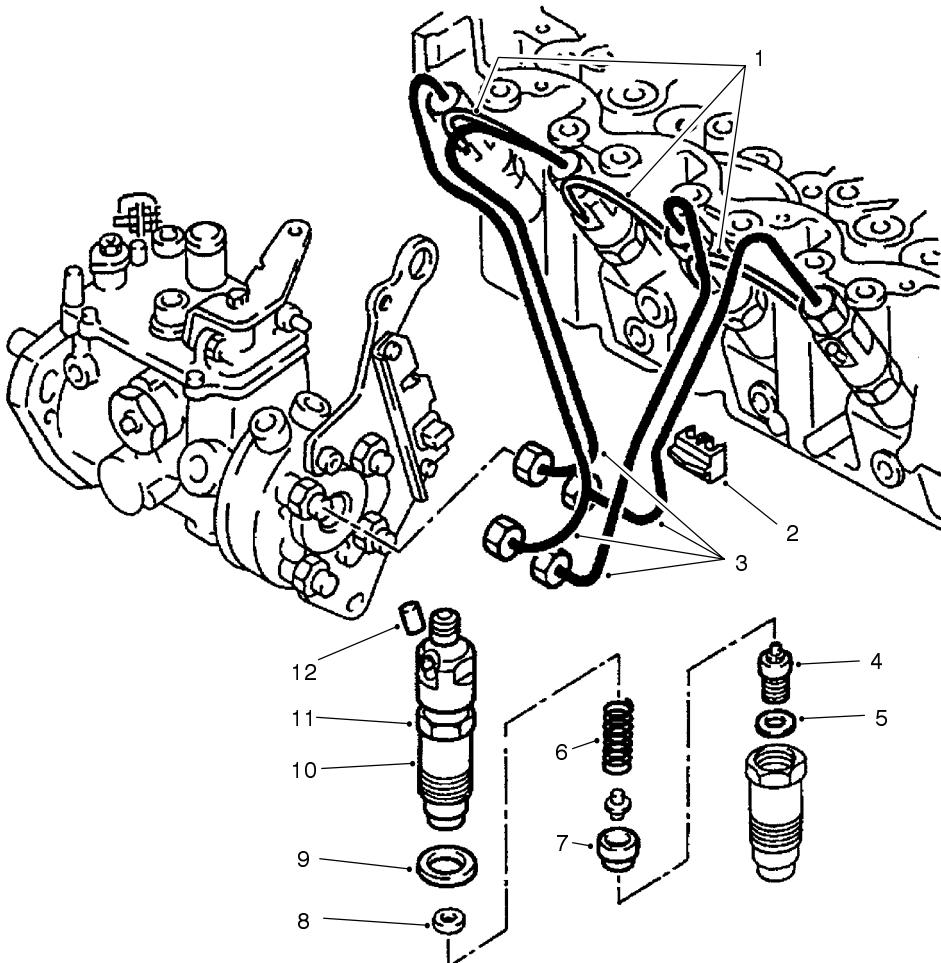


T-2287

Fuel Injector and Plumbing Assembly

Ref. No.	Part No.	Qty.	Description
1	93-5862	3	Union
*	93-5863	1	Union
2	94-3231	4	Bracket
3	93-5861	1	Harness-Pipes
4	93-5860	4	Injector
5	93-5867	4	Gasket-Injector
6	93-5864	4	Spring
7	93-5865	4	Spacer
8	93-5869	1	Shim (.680 mm)
*	93-5870	1	Shim (.720 mm)
*	93-5871	1	Shim (.760 mm)
*	93-5872	1	Shim (.800 mm)
*	93-5873	1	Shim (.840 mm)
*	93-5874	1	Shim (.880 mm)
*	93-5875	1	Shim (.920 mm)
*	93-5876	1	Shim (.960 mm)
*	93-5877	1	Shim (1.000 mm)
*	93-5878	3	Shim (1.035 mm)
*8	93-5879	1	Shim (1.065 mm)
*	93-5880	1	Shim (1.095 mm)
*	93-5881	1	Shim (1.125 mm)
*	93-5882	1	Shim (1.155 mm)
*	93-5883	1	Shim (1.185 mm)
*	93-5884	1	Shim (1.215 mm)
*	93-5885	1	Shim (1.245 mm)
*	93-5886	1	Shim (1.280 mm)

Ref. No.	Part No.	Qty.	Description
*	93-5887	1	Shim (1.320 mm)
*	93-5888	1	Shim (1.400 mm)
*	93-5889	1	Shim (1.480 mm)
*	93-5890	1	Shim (1.560 mm)
*	93-5891	1	Shim (1.640 mm)
9	93-5866	4	Gasket-Injector
10	93-5868	4	Holder-Injector + Injector
11	94-4147	4	Holder-Injector
12	74-8770	1	Plug


*Not Illustrated

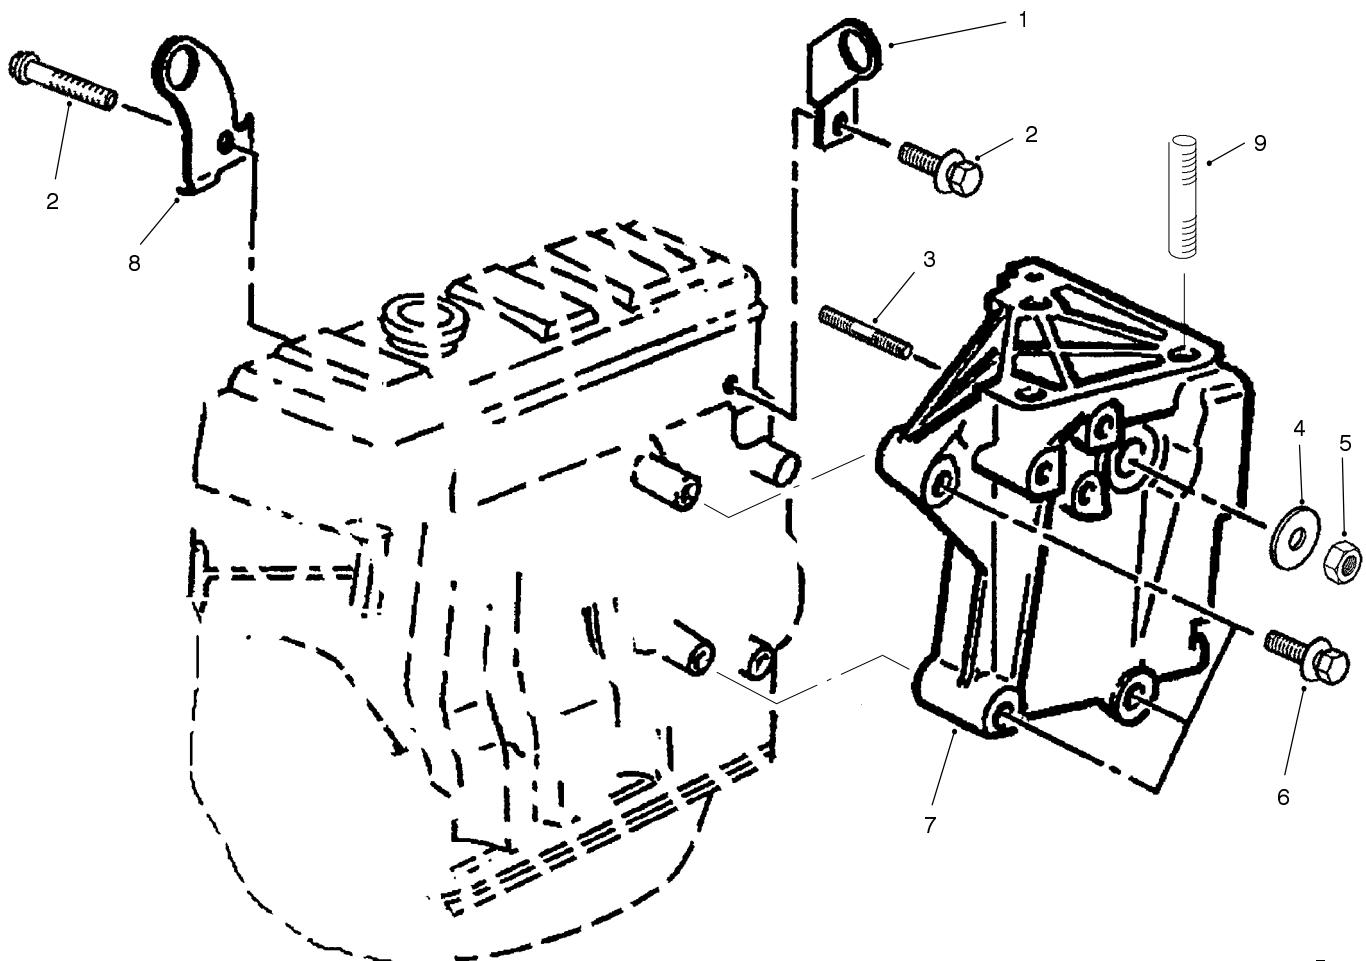

T-2288

Engine Mount Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	93-5901	1	Bracket-Lifting				
2	93-5906	4	Screw				
3	93-5905	1	Stud				
4	93-5904	1	Washer-Plate				
5	93-5903	1	Nut-Hex				
6	93-5902	3	Screw				
7	93-5899	1	Mount-Engine, RH				
8	74-7570	1	Bracket-Lifting				
9	93-5900	1	Stud				

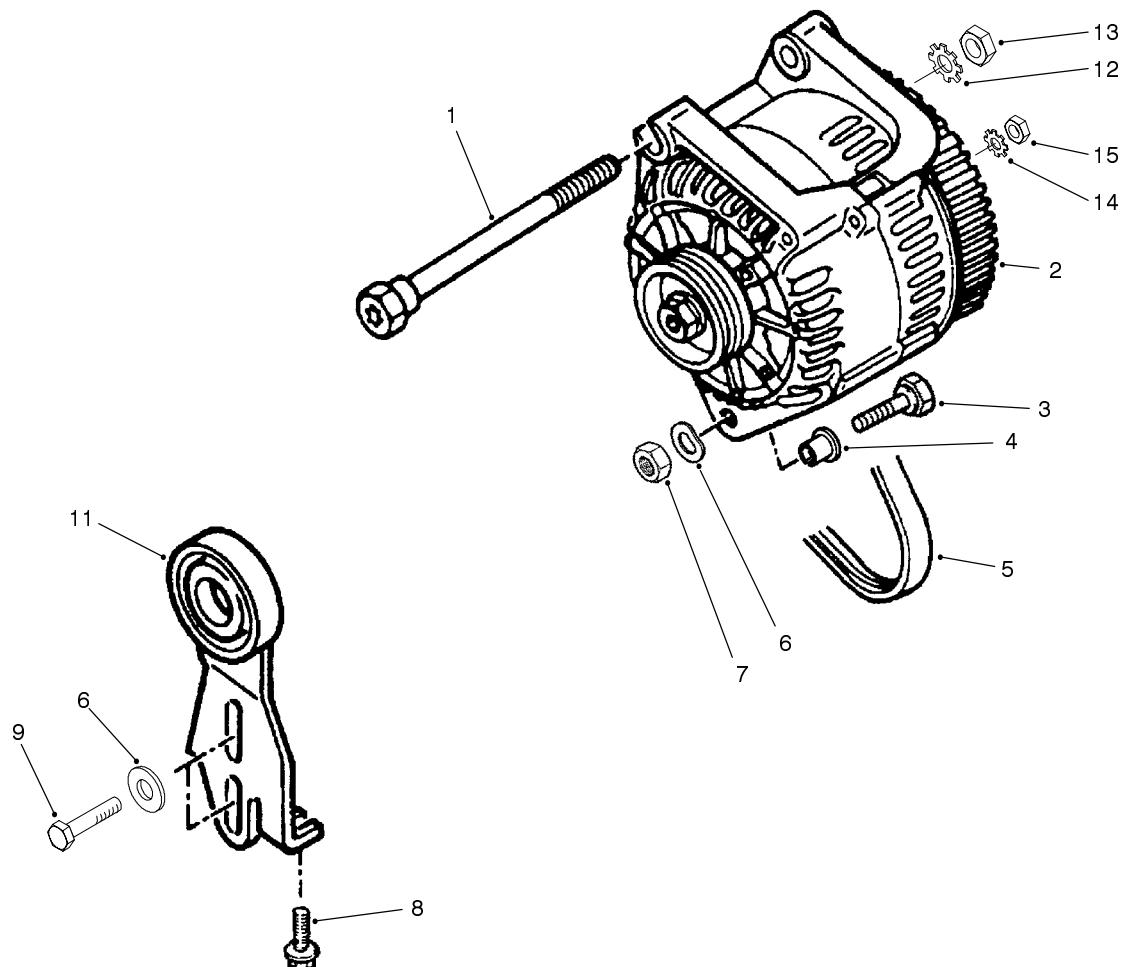


T-2289

Alternator Assembly

Ref. No.	Part No.	Qty.	Description
1	93-5908	1	Screw
2	93-5907	1	Alternator
3	94-3221	1	Screw
4	93-5909	1	Ring
5	93-5912	1	Belt
6	33094-00	3	Washer-Flat
7	33024-00	1	Nut-Hex
8	93-5911	1	Screw
9	33114-020	2	Screw-HH
11	93-5910	1	Tensioner
12	3255-8	1	Washer-Lock
13	33004-00	1	Nut-Hex
14	3255-10	1	Washer-Lock
15	48-7880	1	Nut-Hex


Ref. No.	Part No.	Qty.	Description

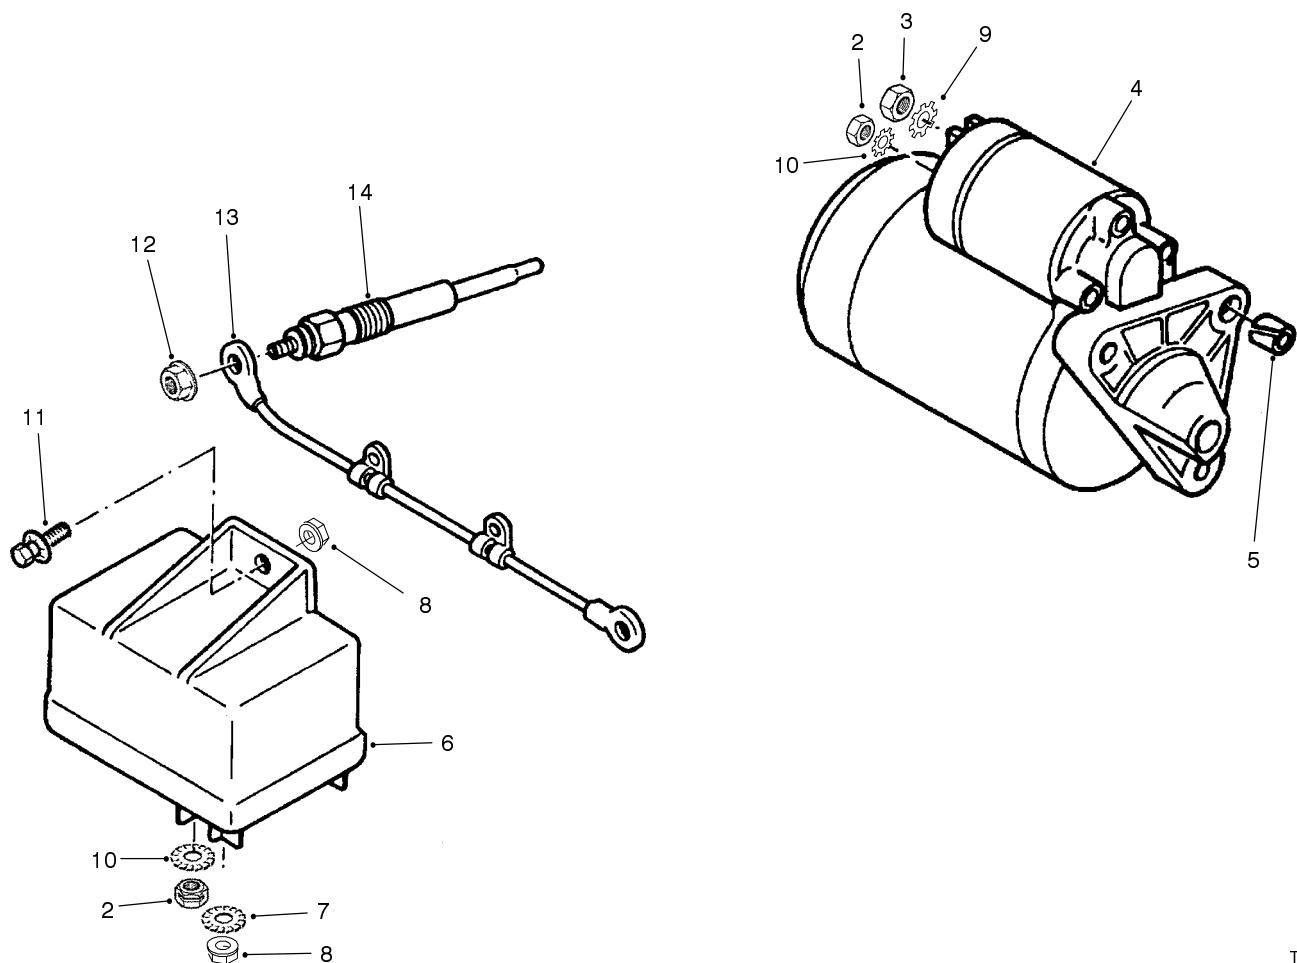

T-2290

Starter and Glow Plugs Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	48-7880	2	Nut				
3	33004-00	1	Nut-HF				
4	104-0142	1	Starter Motor				
5	93-5917	1	Pin				
6	93-5923	1	Unit-Preheating				
7	3255-7	1	Washer-Lock				
8	33003-00	2	Nut-HF				
9	3255-8	1	Washer-Lock				
10	3255-10	2	Washer-Lock				
11	33113-020	1	Screw-HH				
12	48-7870	4	Nut				
13	93-5922	1	Cable				
14	93-5921	4	Plug-Glow				

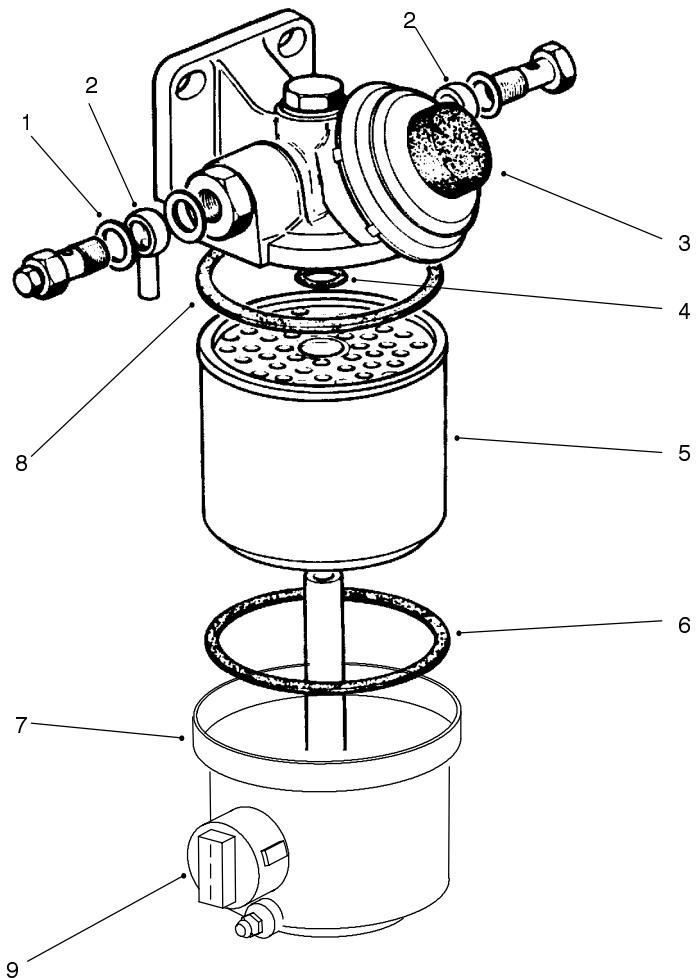


T-0966

Fuel Filter Assembly

Ref. No.	Part No.	Qty.	Description
1	76-5180	4	Washer-Copper
2	76-5190	2	Fitting-Adjustable
3	76-5300	1	Fuel Filter ASM (Incl. Ref. #7 & 9)
4		1	O-Ring
5	76-5220	1	Element-Filter (Incl. Ref. #4, 6 & 8)
6		1	Seal-Gasket
7		1	Cap-Filter, Fuel
8		1	Seal-Gasket
9	76-5320	1	Sensor-Water


Ref. No.	Part No.	Qty.	Description

Electrical Schematic

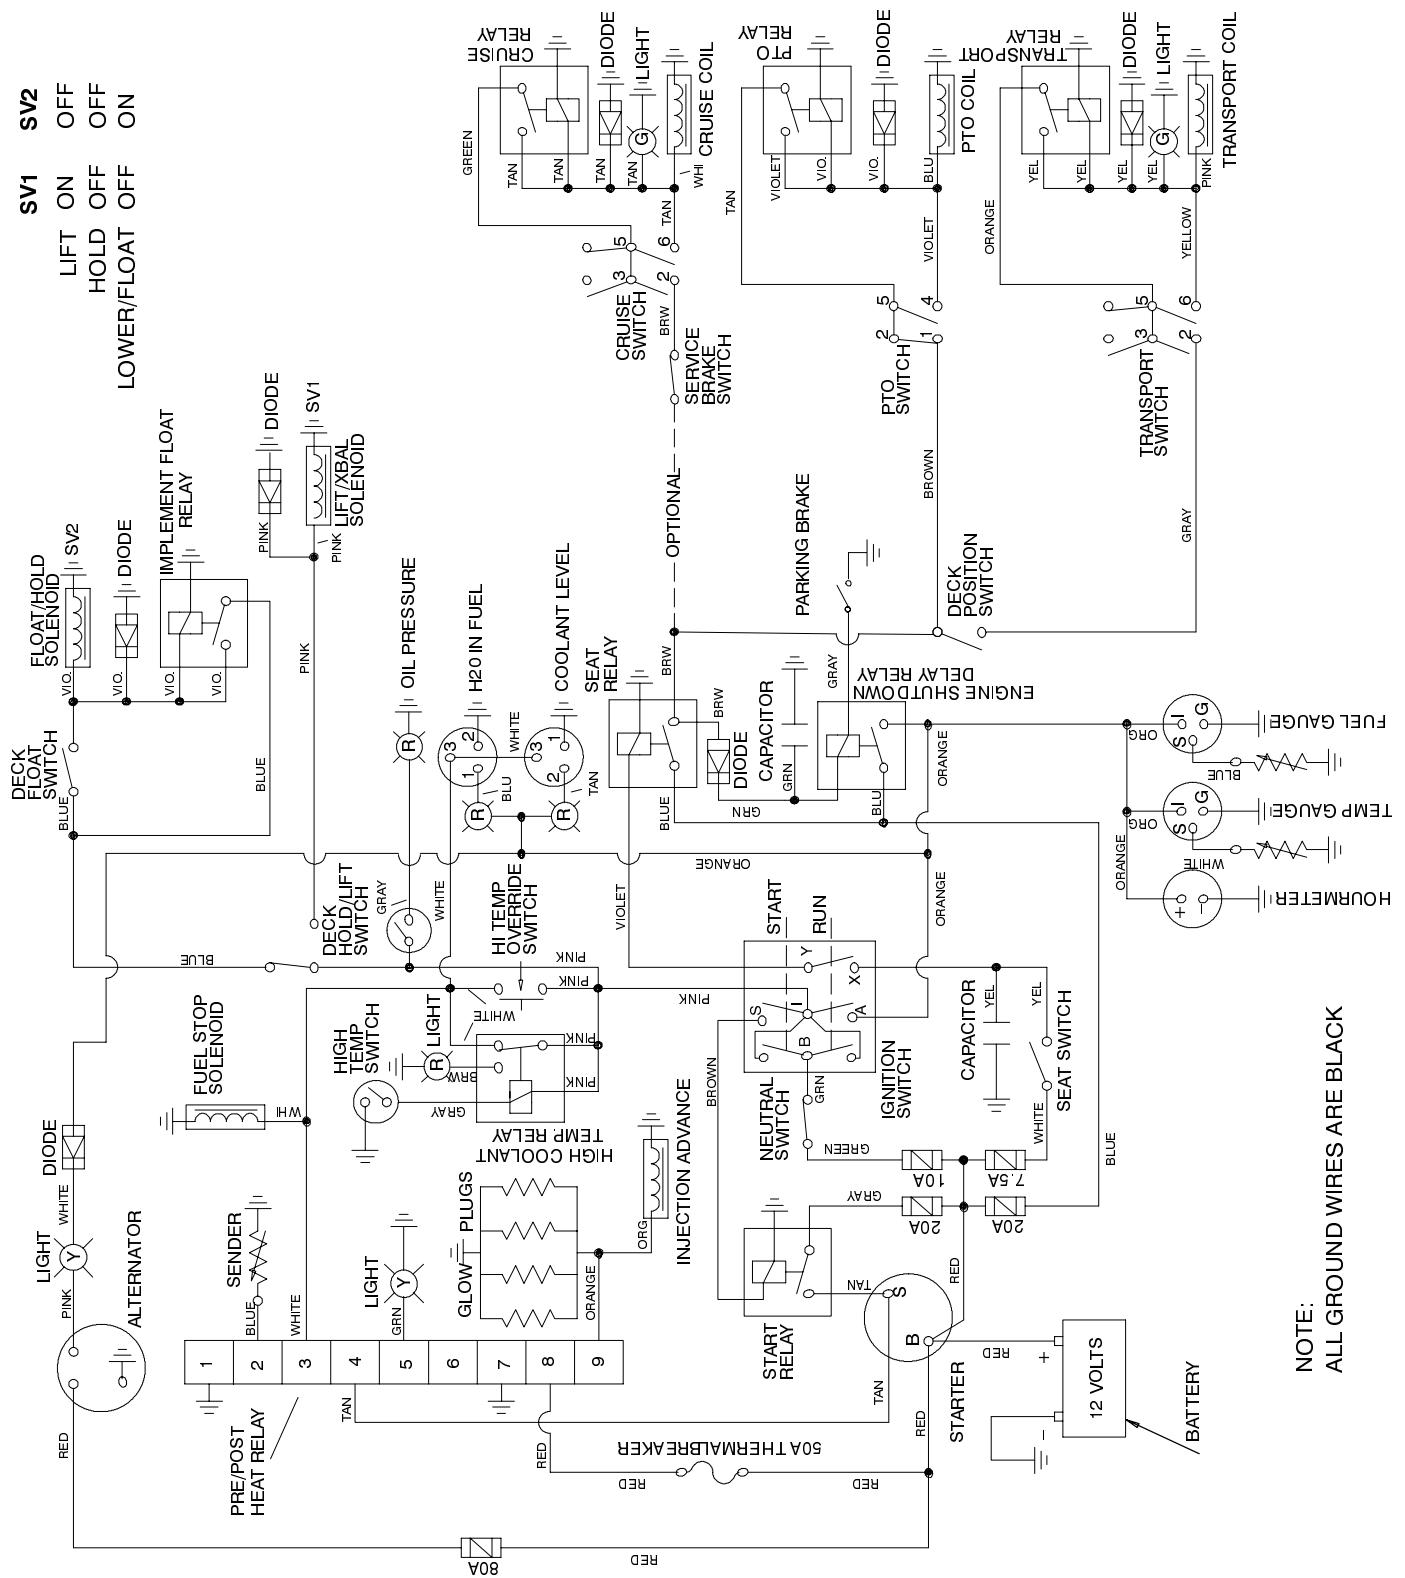

NOTE:
ALL GROUND WIRES ARE BLACK

Hydraulic Schematic

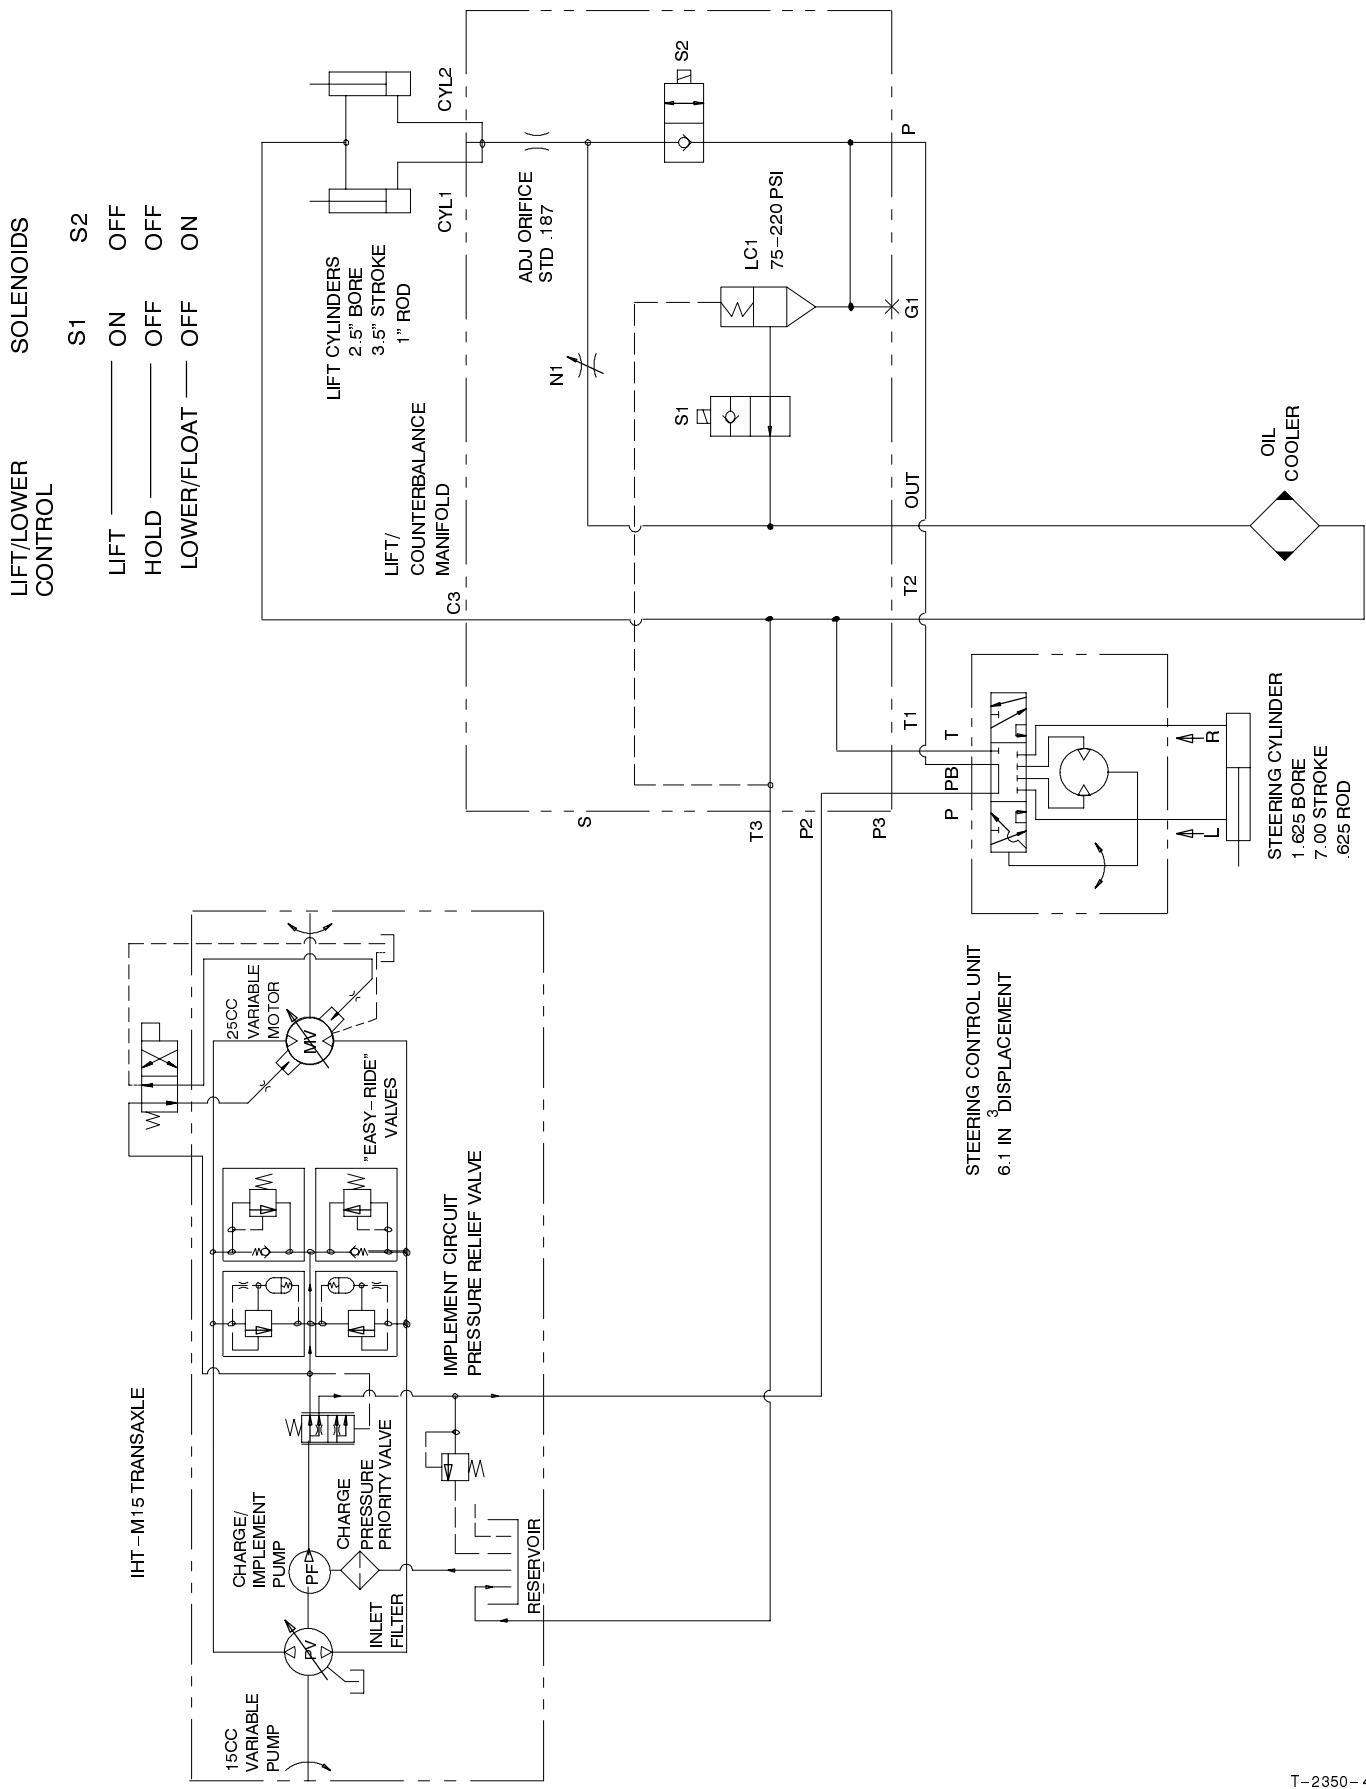

Maintenance Record

Maintenance Record

Maintenance Record

