



Form No. 3423-735 Rev B

**Count on it.**

# Parts Catalog

## **SnowMaster 724 ZXR Snowthrower**

Model No. 36001—Serial No. 404310000 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Main Frame Assembly . . . . . 4

Rotor Assembly . . . . . 6

Rotor Drive Assembly . . . . . 8

Transmission, Drive and Tire Assembly . . . . . 10

Engine Assembly . . . . . 12

Engine Decal Assembly . . . . . 14

Fuel System and Carburetor Assembly . . . . . 16

Intake and Exhaust Assembly . . . . . 18

Ignition and Electrical Assembly . . . . . 20

Crankcase Assembly . . . . . 22

Governor Assembly . . . . . 24

Piston and Head Assembly . . . . . 26

 
Blower Housing and Shrouds Assembly . . . . . 28

Chute Assembly . . . . . 30

Handle and Control Assembly . . . . . 32

Attachments and Accessories . . . . . 34


# Main Frame Assembly

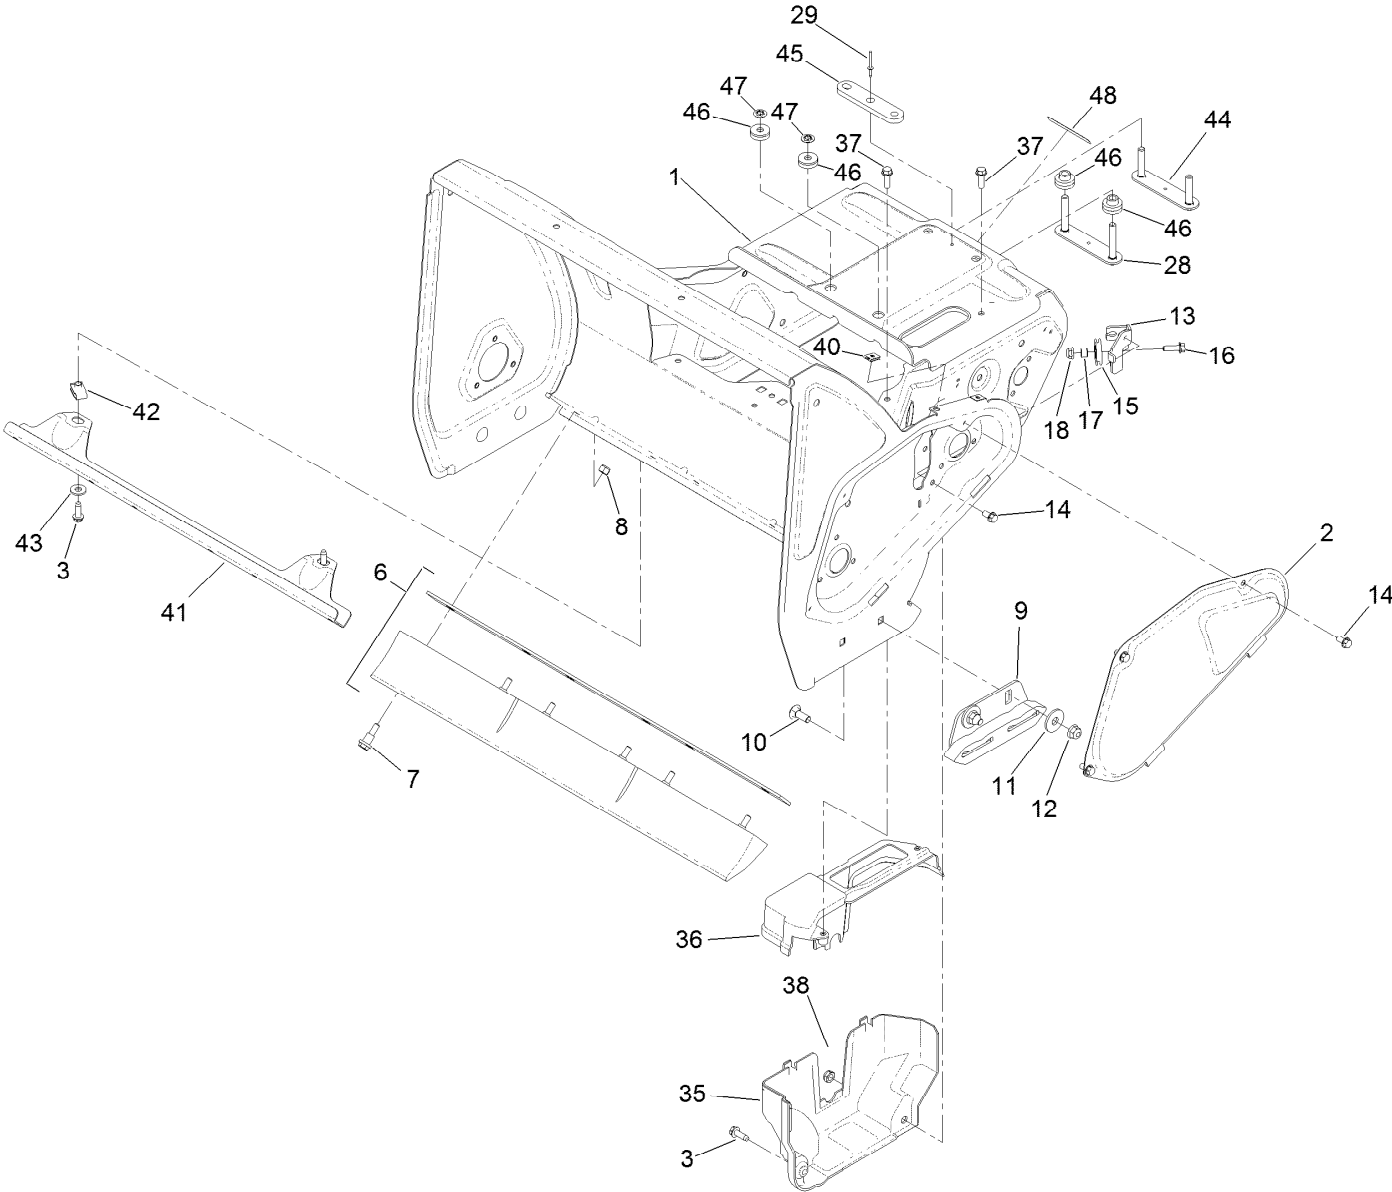

## Main Frame Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>  | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|---------------------|-------------|--------------------|-------------|----------------------|
| 1           | 130-9550-01        | 1           | Frame               | 28          | 136-7172           | 1           | Plate-Stud, Front    |
| 2           | 130-9581-01        | 1           | Cover-Belt          | 29          | 923786             | 1           | Rivet                |
| 3           | 49-2040            | 3           | Screw-HWHTF         | 35          | 131-1763           | 1           | Cover-Belt, Lower    |
| 6           | 130-9628           | 1           | Scraper ASM         | 36          | 131-1764           | 1           | Cover-Belt, Upper    |
| 7           | 104-0858           | 6           | Bolt-Shoulder       | 37          | 46-8091            | 2           | Screw-HWH            |
| 8           | 3296-42            | 6           | Nut-Lock, NI        | 38          | 3296-47            | 1           | Nut-Lock, NI         |
| 9           | 130-9619           | 2           | Skid ASM            | 40          | 107-1013           | 2           | Nut-Speed            |
| 10          | 3230-16            | 4           | Screw-CARR          | 41          | 131-1797-01        | 1           | Support-Frame, Lower |
| 11          | 52-2861            | 4           | Washer              | 42          | 107069             | 2           | Clip                 |
| 12          | 104-8300           | 4           | Nut-HF, NI          | 43          | 3256-2             | 2           | Washer-Flat          |
| 13          | 131-1793-03        | 1           | Bracket-Cable       | 44          | 136-7177           | 1           | Plate-Stud, Rear     |
| 14          | 32144-4            | 4           | Screw-HWH           | 45          | 131-5944-01        | 1           | Plate-Spacer         |
| 15          | 95-7949            | 1           | Cable-Pulley        | 46          | 131-5945           | 2           | Isolator-Engine      |
| 16          | 115-5103           | 1           | Screw-HHF           | 47          | 109-5667           | 2           | Nut-Push             |
| 17          | 55-9370            | 1           | Spacer-Blade, Rotor | 48          | 133-8061           | 1           | Decal-Warning        |
| 18          | 104-7201           | 1           | Nut-HF              |             |                    |             |                      |

 
# Rotor Assembly

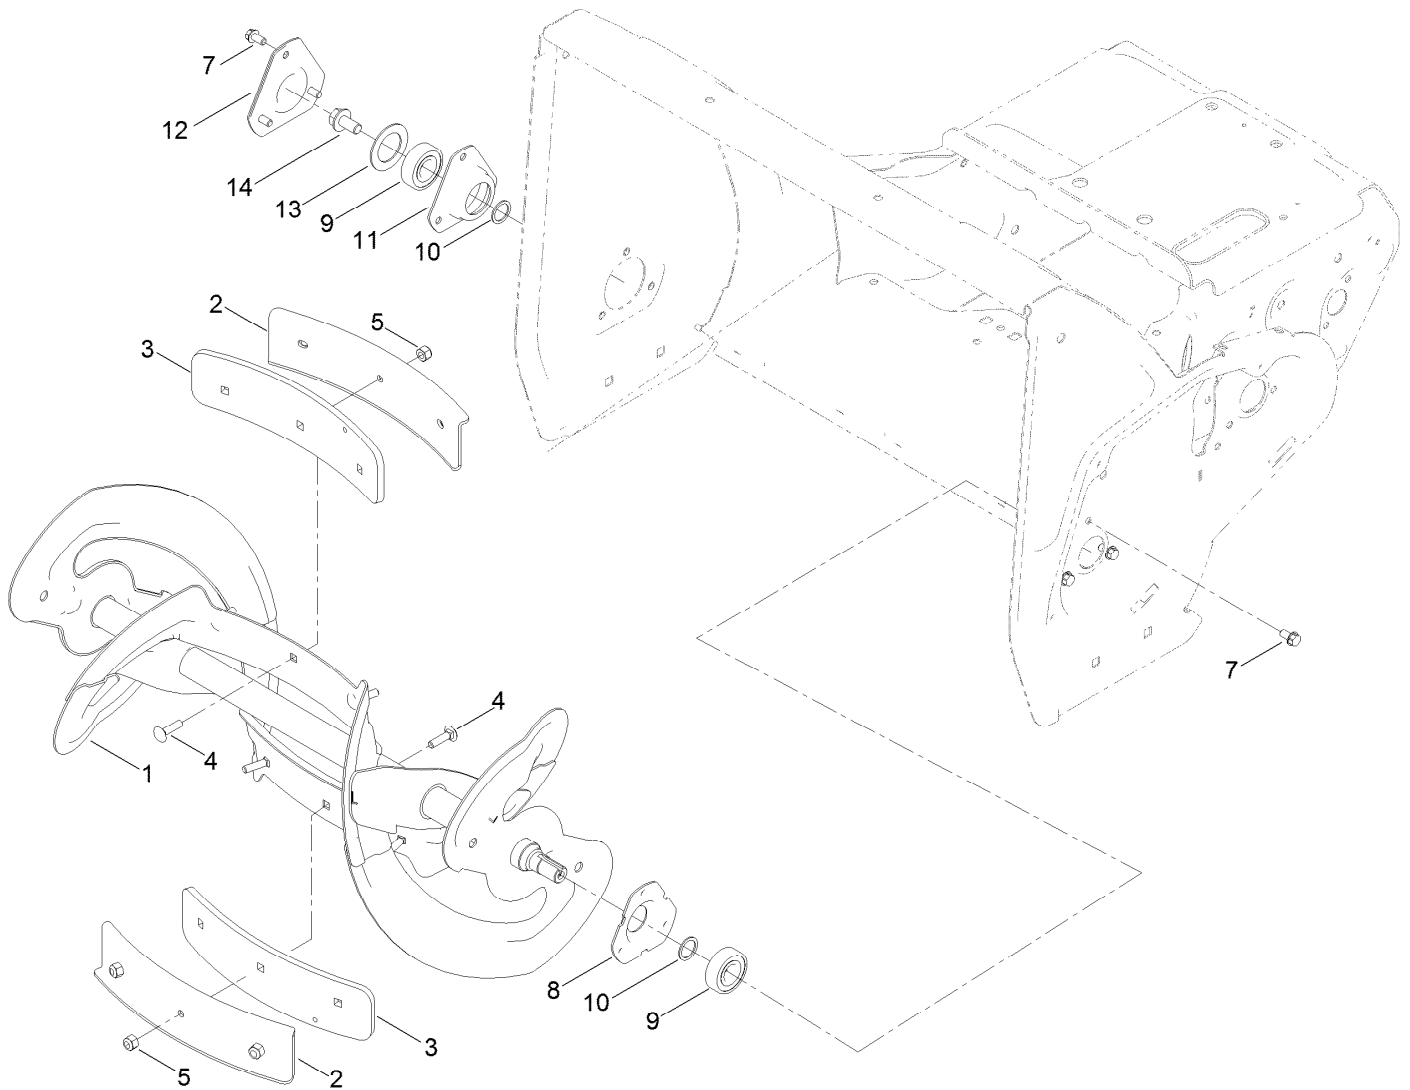

## Rotor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-9571-03        | 1           | Rotor ASM             | 9           | 38-7820            | 2           | Bearing-Ball       |
| 2           | 130-9568-03        | 2           | Support-Center, Rotor | 10          | 52-7280            | 2           | Washer-Thrust      |
| 3           | 130-9569           | 2           | Paddle-Center         | 11          | 136-7169           | 1           | Flange-Bearing     |
| 4           | 3229-2             | 6           | Screw-CARR            | 12          | 130-9558-01        | 1           | Cap-Bearing        |
| 5           | 3296-42            | 6           | Nut-Lock, NI          | 13          | 131-5905           | 1           | Washer-Rubber      |
| 7           | 32144-4            | 6           | Screw-HWH             | 14          | 110-9380           | 1           | Screw-HWH          |
| 8           | 136-7134           | 1           | Flange-Bearing        |             |                    |             |                    |

 
## Rotor Drive Assembly

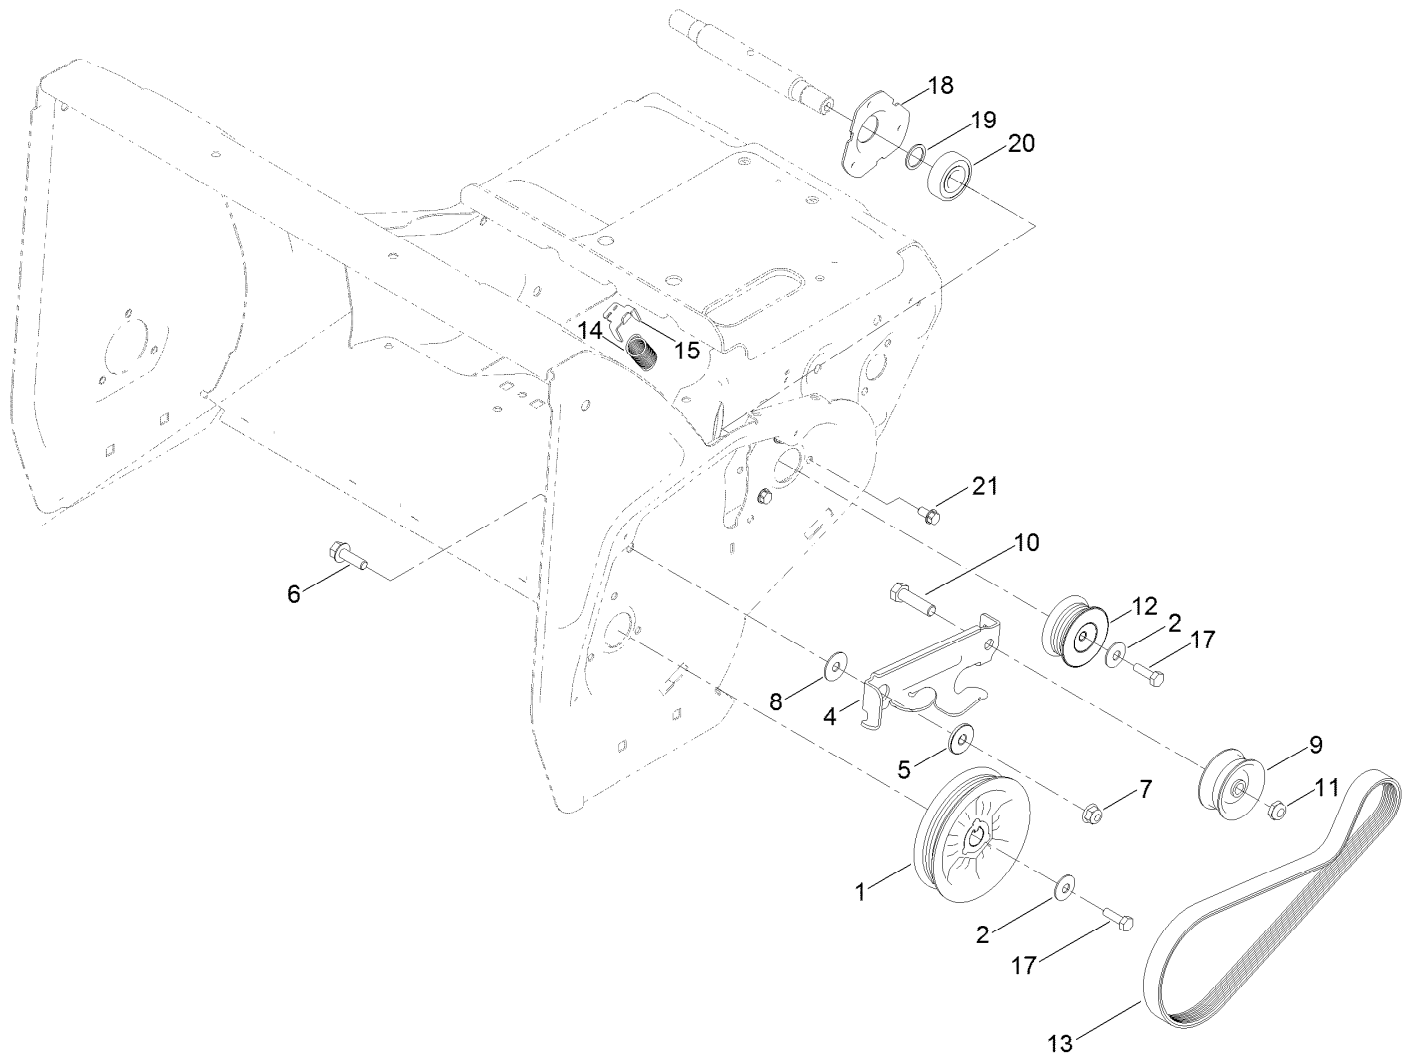

## Rotor Drive Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 130-9574           | 1           | Pulley-Rotor          | 12          | 130-9577           | 1           | Pulley-Jackshaft, Rotor |
| 2           | 3290-456           | 2           | Washer-Belleville     | 13          | 131-5967           | 1           | Belt-Poly V             |
| 4           | 136-7179           | 1           | Arm-Engagement, Rotor | 14          | 130-9572           | 1           | Spring-Extension        |
| 5           | 117-7711           | 1           | Bushing-Idler         | 15          | 136-7133           | 1           | Clip-Spring             |
| 6           | 3234-29            | 1           | Screw-HHF             | 17          | 9080046            | 2           | Screw-HH                |
| 7           | 104-8300           | 1           | Nut-HF, NI            | 18          | 136-7134           | 1           | Flange-Bearing          |
| 8           | 108-4925           | 1           | Washer                | 19          | 52-7280            | 1           | Washer-Thrust           |
| 9           | 131-5988           | 1           | Pulley-Idler, Flat    | 20          | 38-7820            | 1           | Bearing-Ball            |
| 10          | 323-29             | 1           | Screw-HH              | 21          | 32144-4            | 3           | Screw-HWH               |
| 11          | 3296-59            | 1           | Nut-Lock, NI          |             |                    |             |                         |

 Transmission, Drive and Tire Assembly

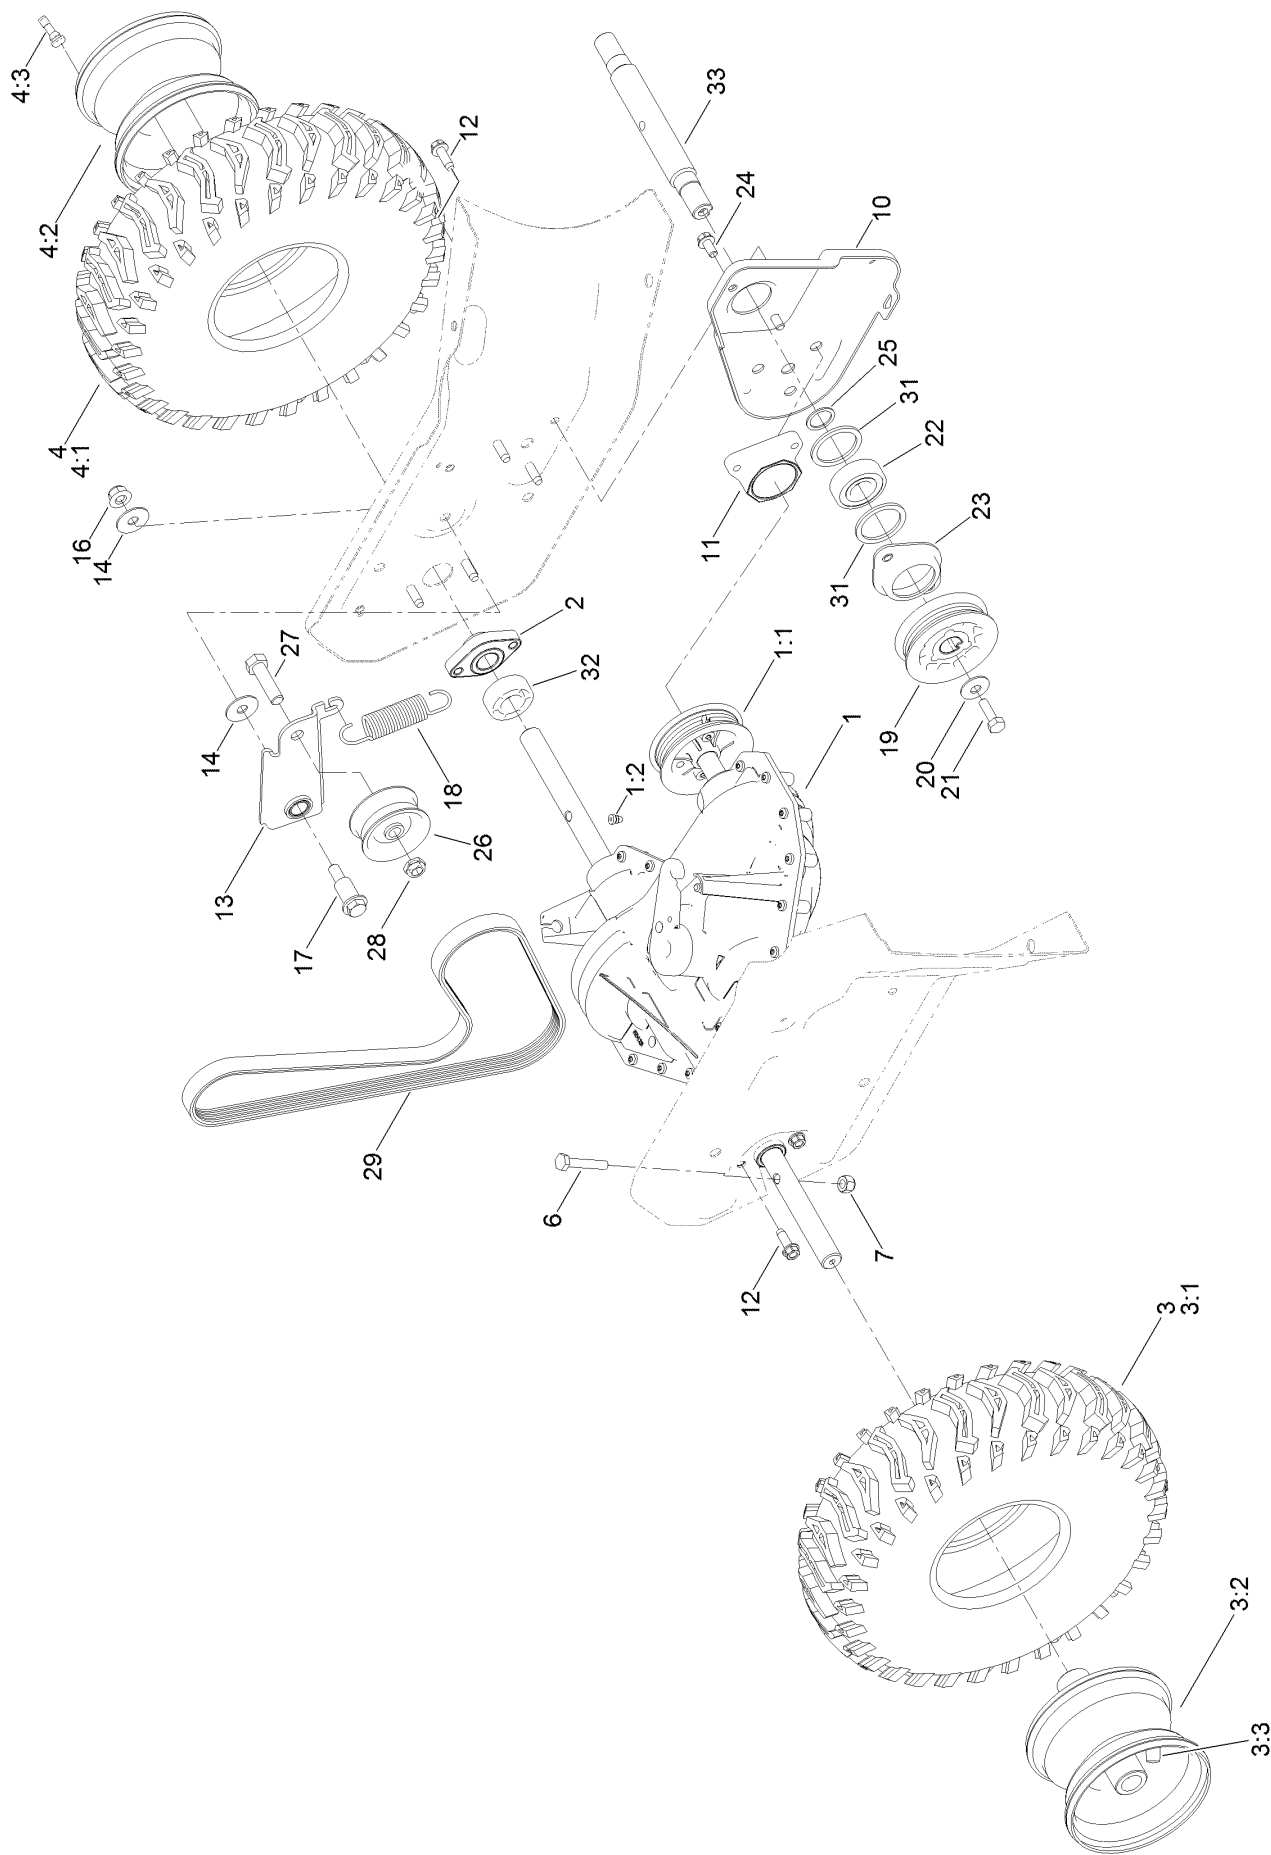


# Transmission, Drive and Tire Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 130-9642           | 1           | Transmission             | 14          | 108-4925           | 2           | Washer             |
| 1:1         | 131-5973           | 1           | Pulley Repair Kit        | 16          | 104-8300           | 1           | Nut-HF, NI         |
| 1:2         | 131-5984           | 1           | Plug-Oil                 | 17          | 136-7192           | 1           | Bolt-Shoulder, HHF |
| 2           | 130-9643           | 2           | Bearing-Axle             | 18          | 130-9645           | 1           | Spring-Extension   |
| 3           |                    | 1           | RH Wheel And Tire ASM ●  | 19          | 130-9583           | 1           | Pulley-Jackshaft   |
| 3:1         | 130-9559           | 1           | Tire                     | 20          | 3290-456           | 1           | Washer-Belleville  |
| 3:2         | 130-9560           | 1           | Wheel                    | 21          | 9080046            | 1           | Screw-HH           |
| 3:3         | 232-27             | 1           | Stem-Valve               | 22          | 38-7820            | 1           | Bearing-Ball       |
| 4           |                    | 1           | LH Wheel And Tire ASM ●  | 23          | 136-7171           | 1           | Retainer-Bearing   |
| 4:1         | 130-9559           | 1           | Tire                     | 24          | 32144-4            | 2           | Screw-HWH          |
| 4:2         | 130-9560           | 1           | Wheel                    | 25          | 52-7280            | 1           | Washer-Thrust      |
| 4:3         | 232-27             | 1           | Stem-Valve               | 26          | 131-5988           | 1           | Pulley-Idler, Flat |
| 6           | 321-9              | 2           | Screw-HH                 | 27          | 323-29             | 1           | Screw-HH           |
| 7           | 3296-42            | 2           | Nut-Lock, NI             | 28          | 3296-59            | 1           | Nut-Lock, NI       |
| 10          | 130-9586-03        | 1           | Plate-Support, Jackshaft | 29          | 131-5968           | 1           | Belt-Poly V        |
| 11          | 131-1794           | 1           | Support-Bearing          | 31          | 131-5904           | 2           | Washer-Rubber      |
| 12          | 49-2040            | 7           | Screw-HWHTF              | 32          | 131-5910           | 1           | Spacer-Axle        |
| 13          | 131-1795           | 1           | Idler-Traction           | 33          | 130-9585           | 1           | Jackshaft          |

● Not serviced separately

 
# Engine Assembly

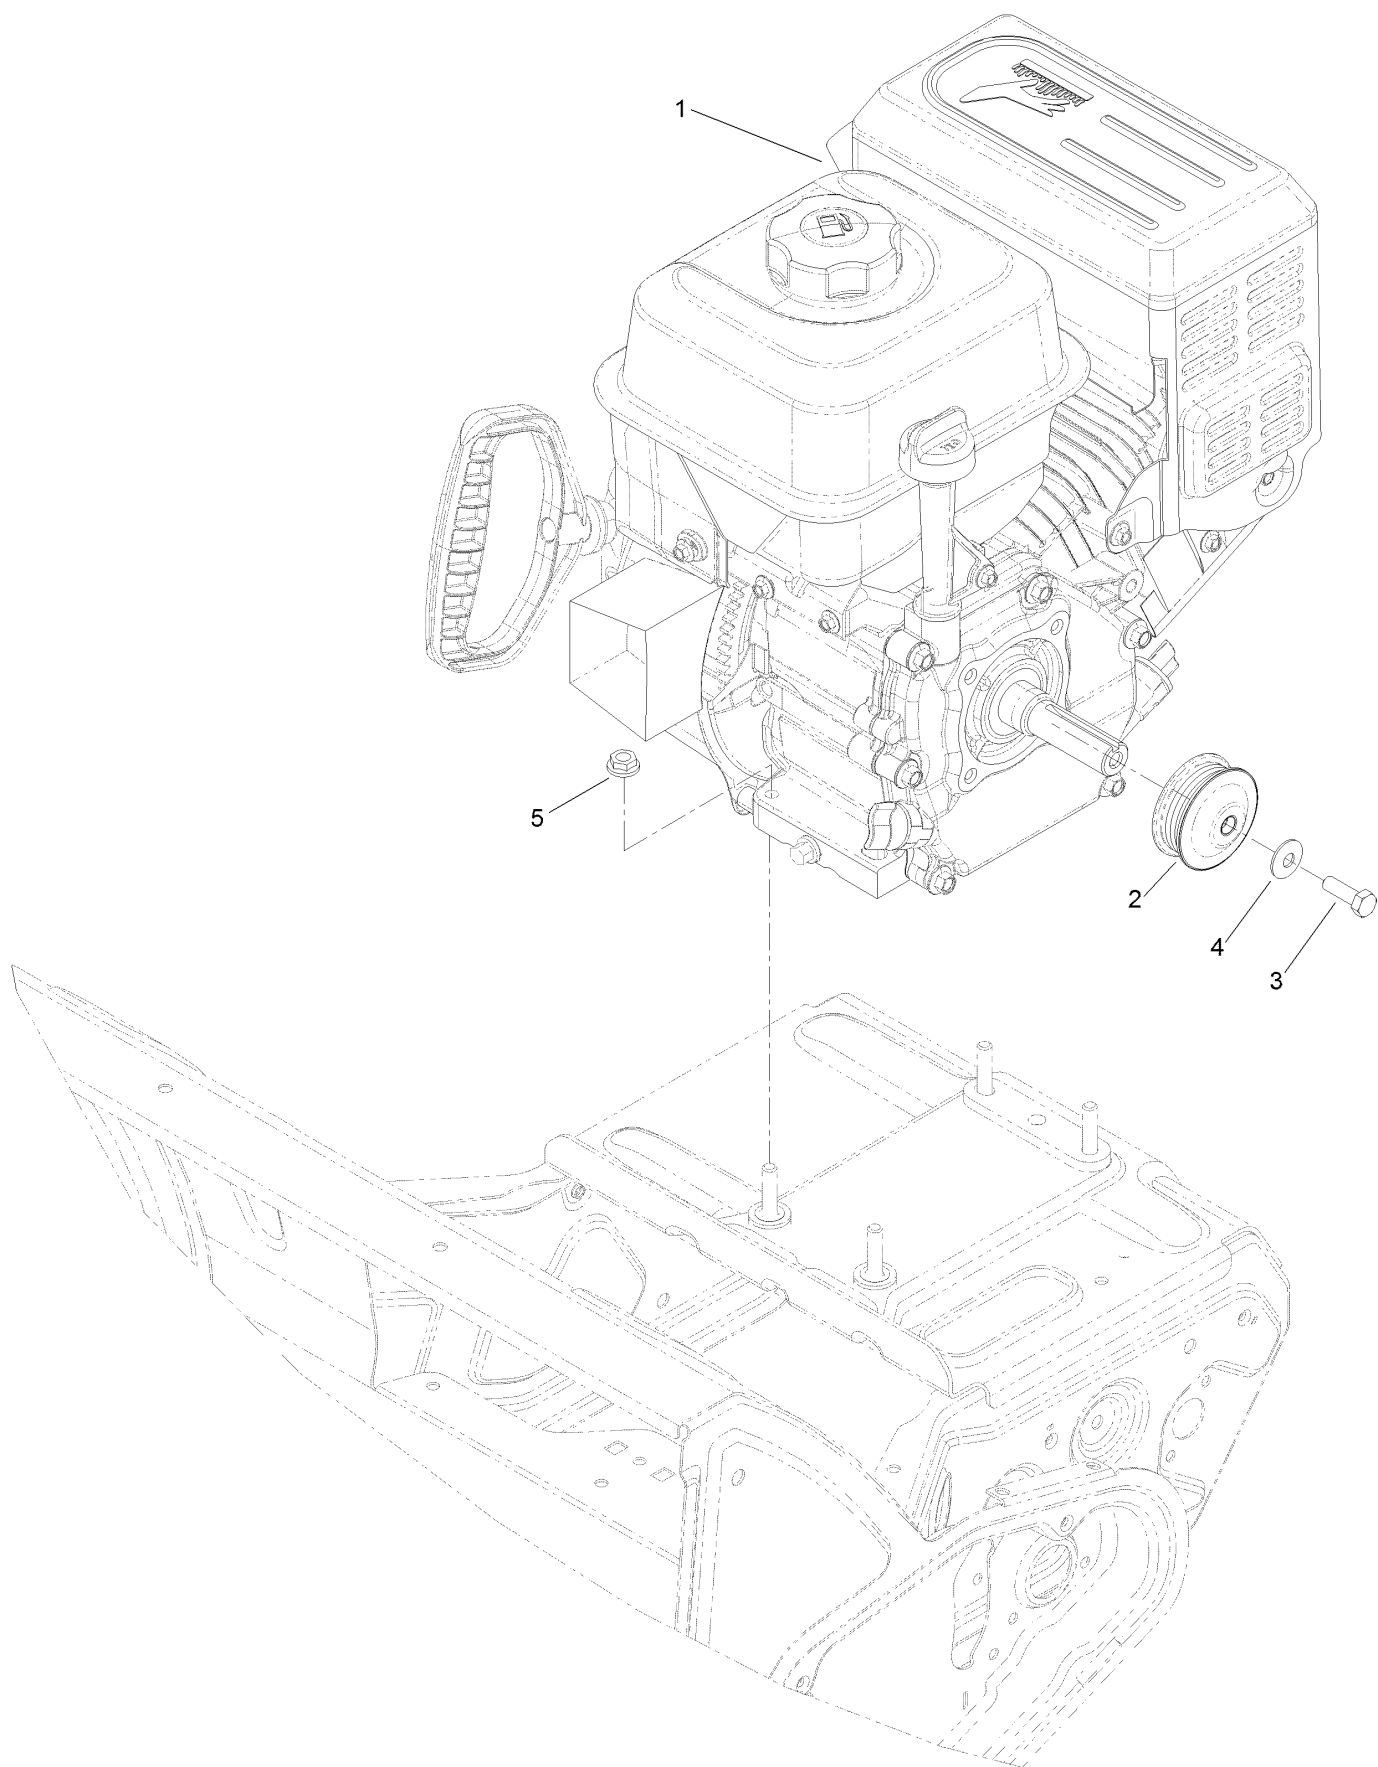

## Engine Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9170           | 1           | Engine-G210Fs-2    | 4           | 3290-456           | 1           | Washer-Belleville  |
| 2           | 131-5908           | 1           | Pulley-Engine      | 5           | 32128-20           | 4           | Nut-HF             |
| 3           | 131-5919           | 1           | Screw-HH, Patch    |             |                    |             |                    |

 
# Engine Decal Assembly

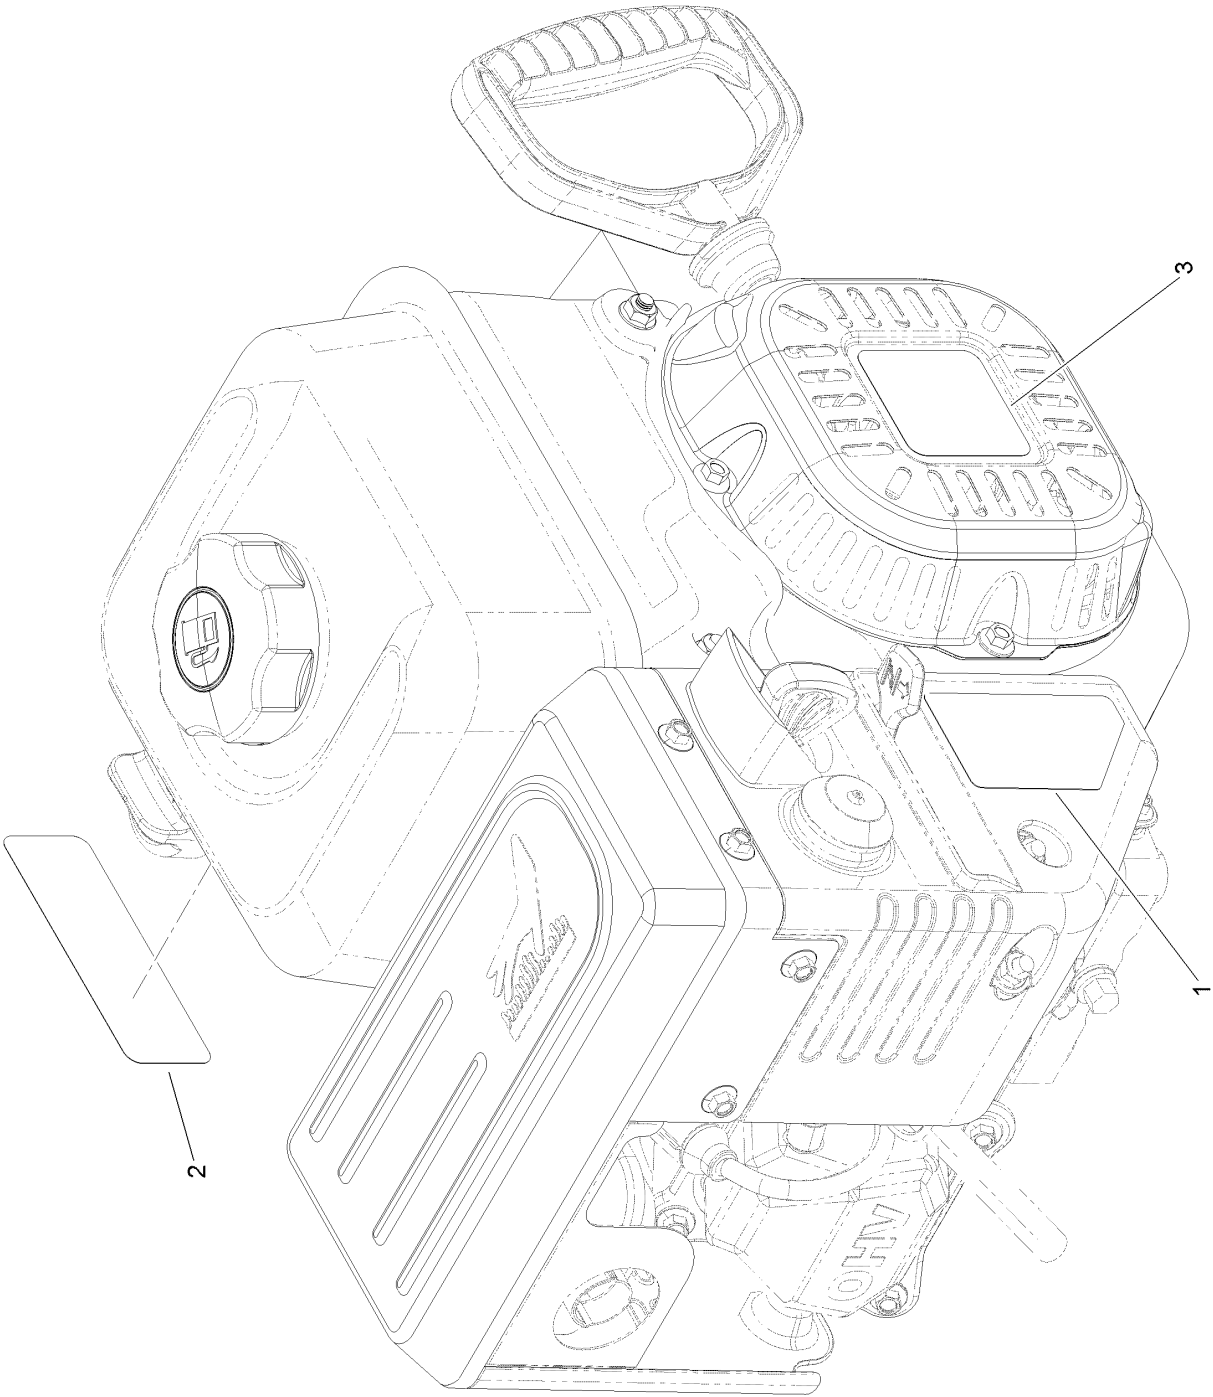

## Engine Decal Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>        |
|-------------|--------------------|-------------|---------------------------|
| 1           | 120-9805           | 1           | Decal-Control, Engine     |
| 2           | 120-9806           | 1           | Decal-Engine, Series G210 |
| 3           | 120-9809           | 1           | Decal-Recoil, G210        |
 
# Fuel System and Carburetor Assembly

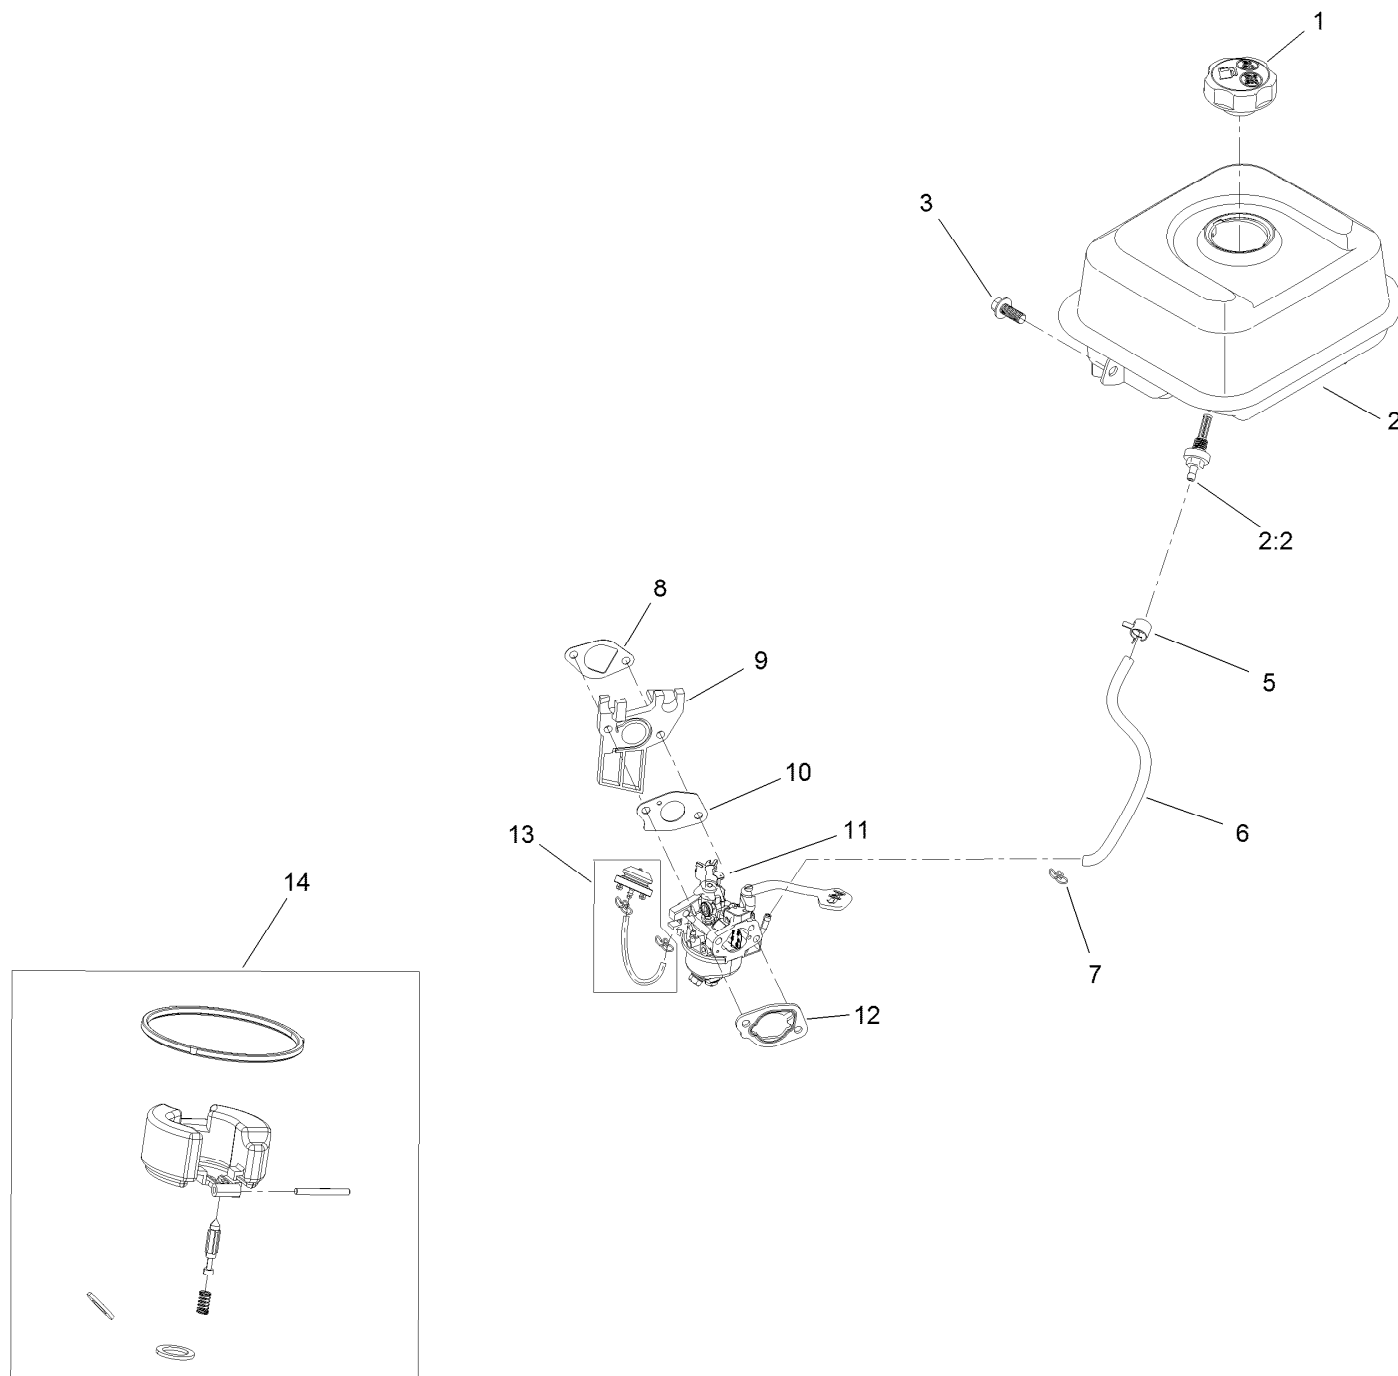


## Fuel System and Carburetor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>       | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>         |
|-------------|--------------------|-------------|--------------------------|-------------|--------------------|-------------|----------------------------|
| 1           | 133-9823           | 1           | Cap-Fuel                 | 9           | 121-0077           | 1           | Insulator-Carburetor       |
| 2           | 127-9497           | 1           | Fuel Tank And Filter ASM | 10          | 121-0078           | 1           | Gasket-Carburetor          |
| 2:2         | 127-9065           | 1           | Filter-Fuel              | 11          | 127-9111           | 1           | Carburetor ASM             |
| 3           | 121-0294           | 1           | Screw-HHF                | 12          | 121-0080           | 1           | Gasket-Carburetor          |
| 5           | 127-9120           | 1           | Clamp-Hose               | 13          | 127-9079           | 1           | Primer Kit                 |
| 6           | 127-9403           | 1           | Hose-Fuel                | 14          | 127-9394           | 1           | Internal Carb Service Kit  |
| 7           | 121-0087           | 1           | Clamp-Hose               | 99          | 127-9301           | 1           | High Altitude Kit - G210 ● |
| 8           | 121-0076           | 1           | Gasket-Carburetor        |             |                    |             |                            |

● Not illustrated
 
# Intake and Exhaust Assembly

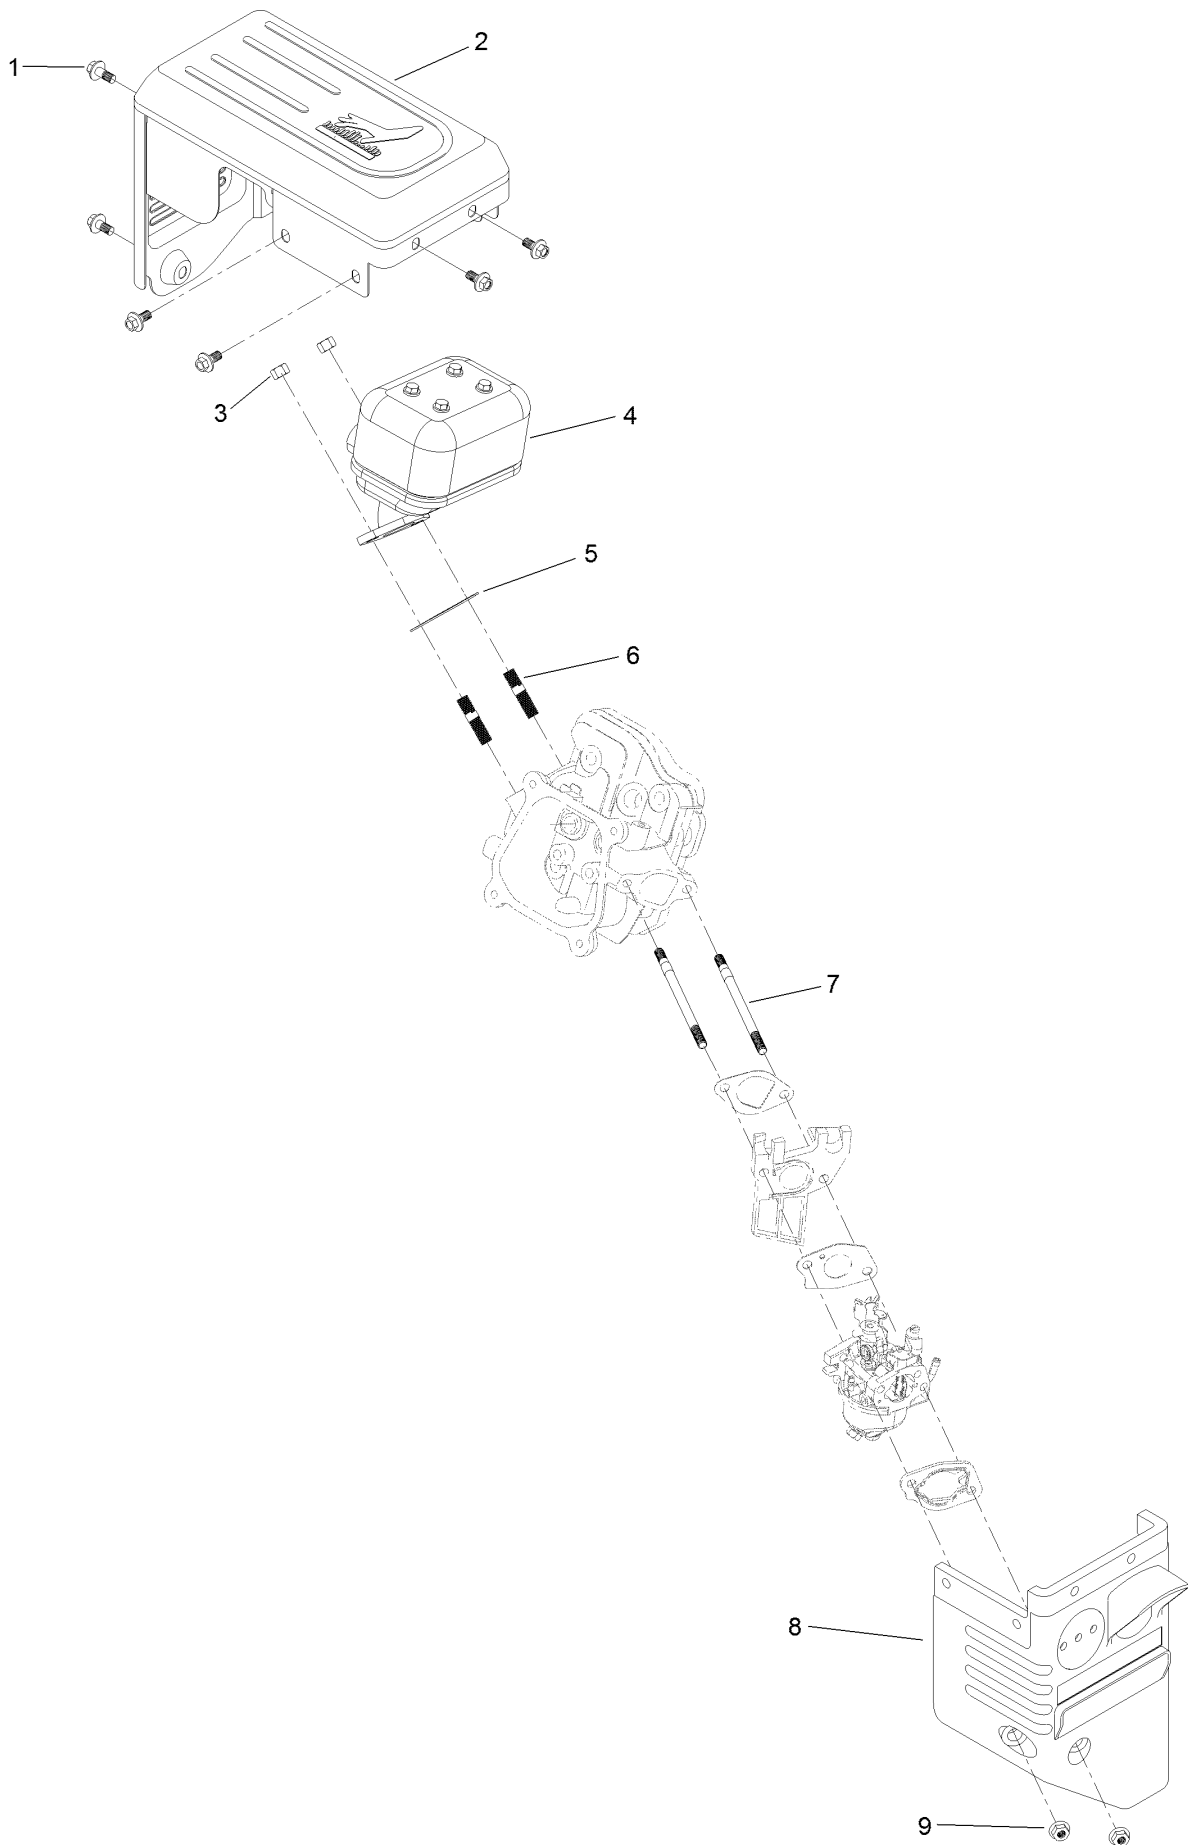


## Intake and Exhaust Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 121-0294           | 6           | Screw-HHF          |
| 2           | 136-7778           | 1           | Guard-Muffler      |
| 3           | 121-0199           | 2           | Nut-HH             |
| 4           | 133-9846           | 1           | Muffler ASM        |
| 5           | 121-0167           | 1           | Gasket-Exhaust     |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 121-0464           | 2           | Stud-Exhaust       |
| 7           | 121-4112           | 2           | Stud-Intake        |
| 8           | 127-9112           | 1           | Box-Heater         |
| 9           | 121-0308           | 2           | Nut-Flange         |
 
# Ignition and Electrical Assembly

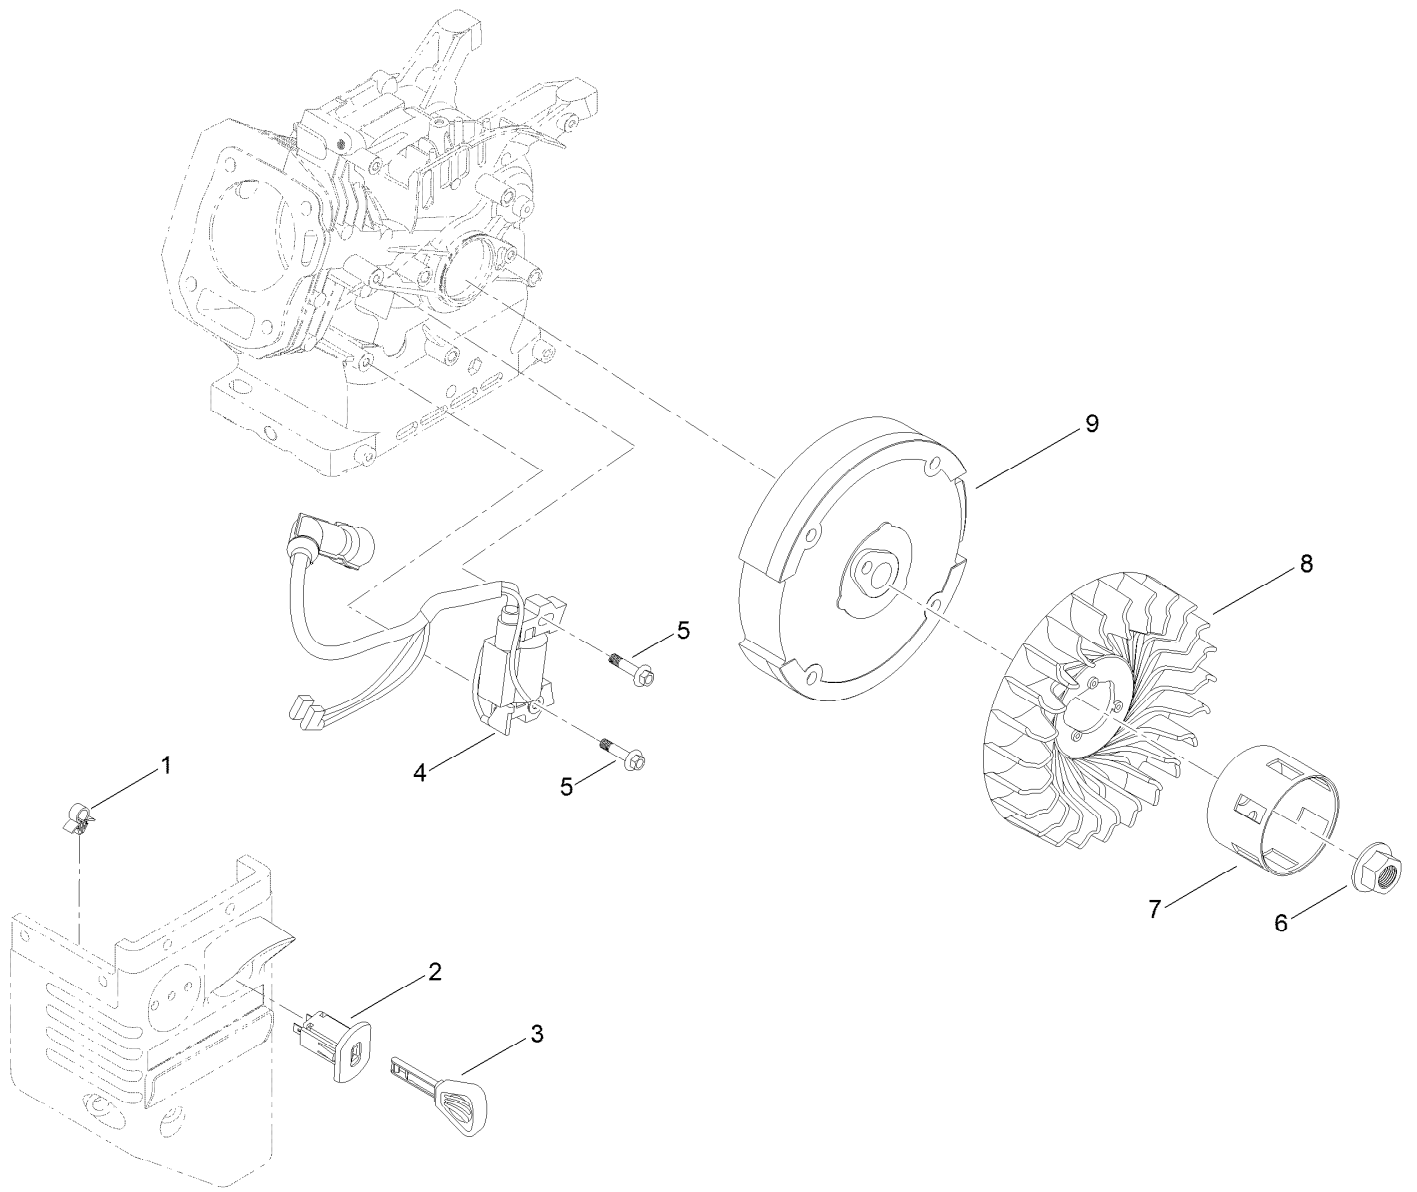


## Ignition and Electrical Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 1           | 121-0326           | 1           | Clip               |
| 2           | 121-0283           | 1           | Switch-Key         |
| 3           | 117-7728           | 1           | Key                |
| 4           | 136-7769           | 1           | Ignition Coil ASM  |
| 5           | 121-0097           | 2           | Screw-HHF          |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|
| 6           | 121-0047           | 1           | Nut-Flange         |
| 7           | 127-9106           | 1           | Cup-Starter        |
| 8           | 127-9002           | 1           | Fan                |
| 9           | 127-9003           | 1           | Flywheel-Recoil    |

 
# Crankcase Assembly

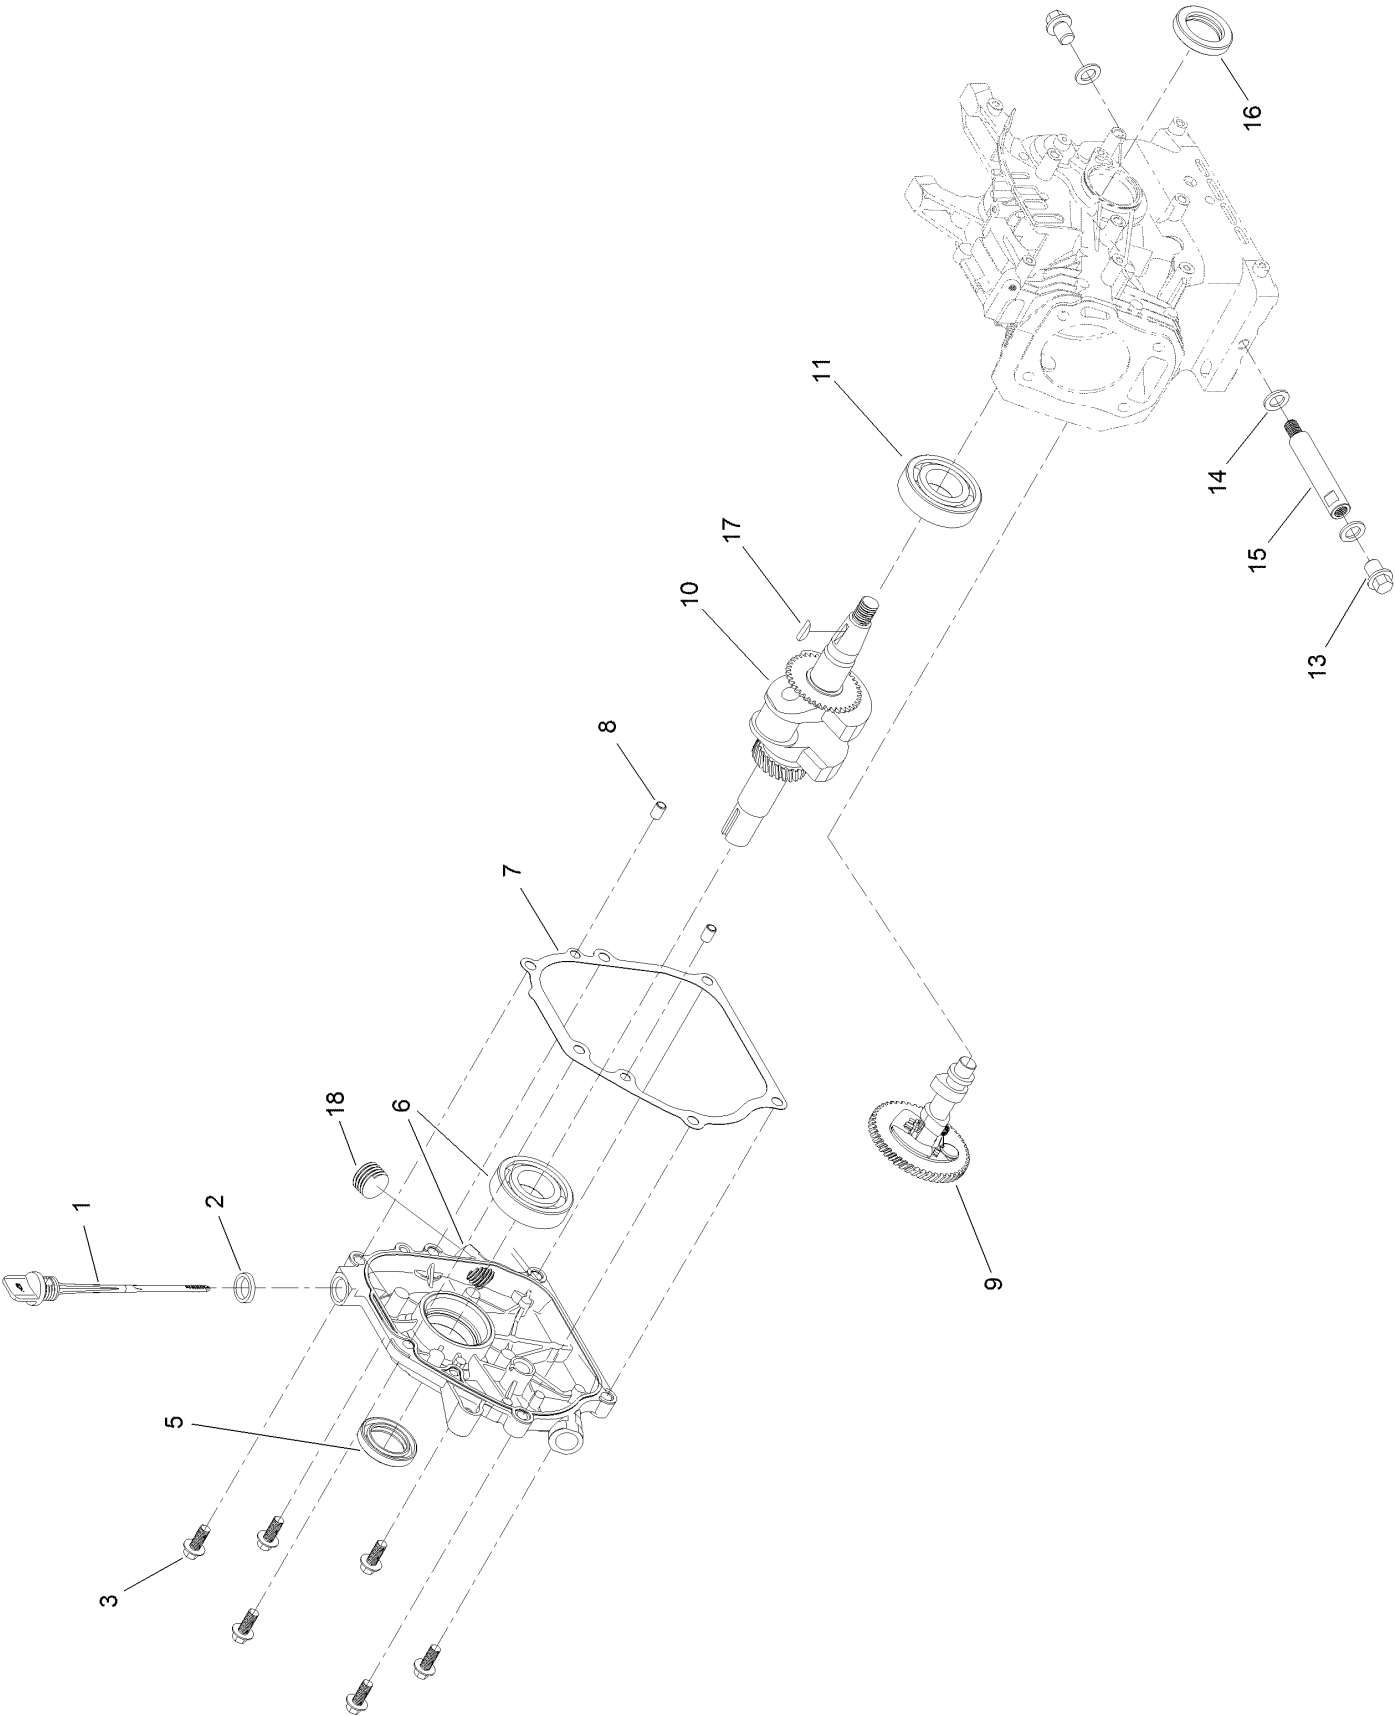

## Crankcase Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|-------------------------|-------------|--------------------|-------------|--------------------|
| 1           | 127-9409           | 1           | Dipstick-Oil            | 10          | 127-9399           | 1           | Crankshaft         |
| 2           | 127-9492           | 1           | Gasket-Dipstick, Rubber | 11          | 121-0056           | 1           | Bearing-Ball       |
| 3           | 121-4114           | 6           | Screw-HHF               | 13          | 121-0030           | 2           | Screw-HHF          |
| 5           | 121-0209           | 1           | Seal-Oil                | 14          | 121-0048           | 3           | Washer-Plain       |
| 6           | 133-9843           | 1           | Crankcase Cover ASM     | 15          | 127-9104           | 1           | Tube-Drain, Oil    |
| 7           | 121-0105           | 1           | Gasket-Cover, Crankcase | 16          | 121-0208           | 1           | Seal-Oil           |
| 8           | 121-0054           | 2           | Pin-Dowel               | 17          | 120-4320           | 1           | Key-Woodruff       |
| 9           | 133-9836           | 1           | Camshaft                | 18          | 133-9805           | 1           | Plug-Drain         |

 
# Governor Assembly

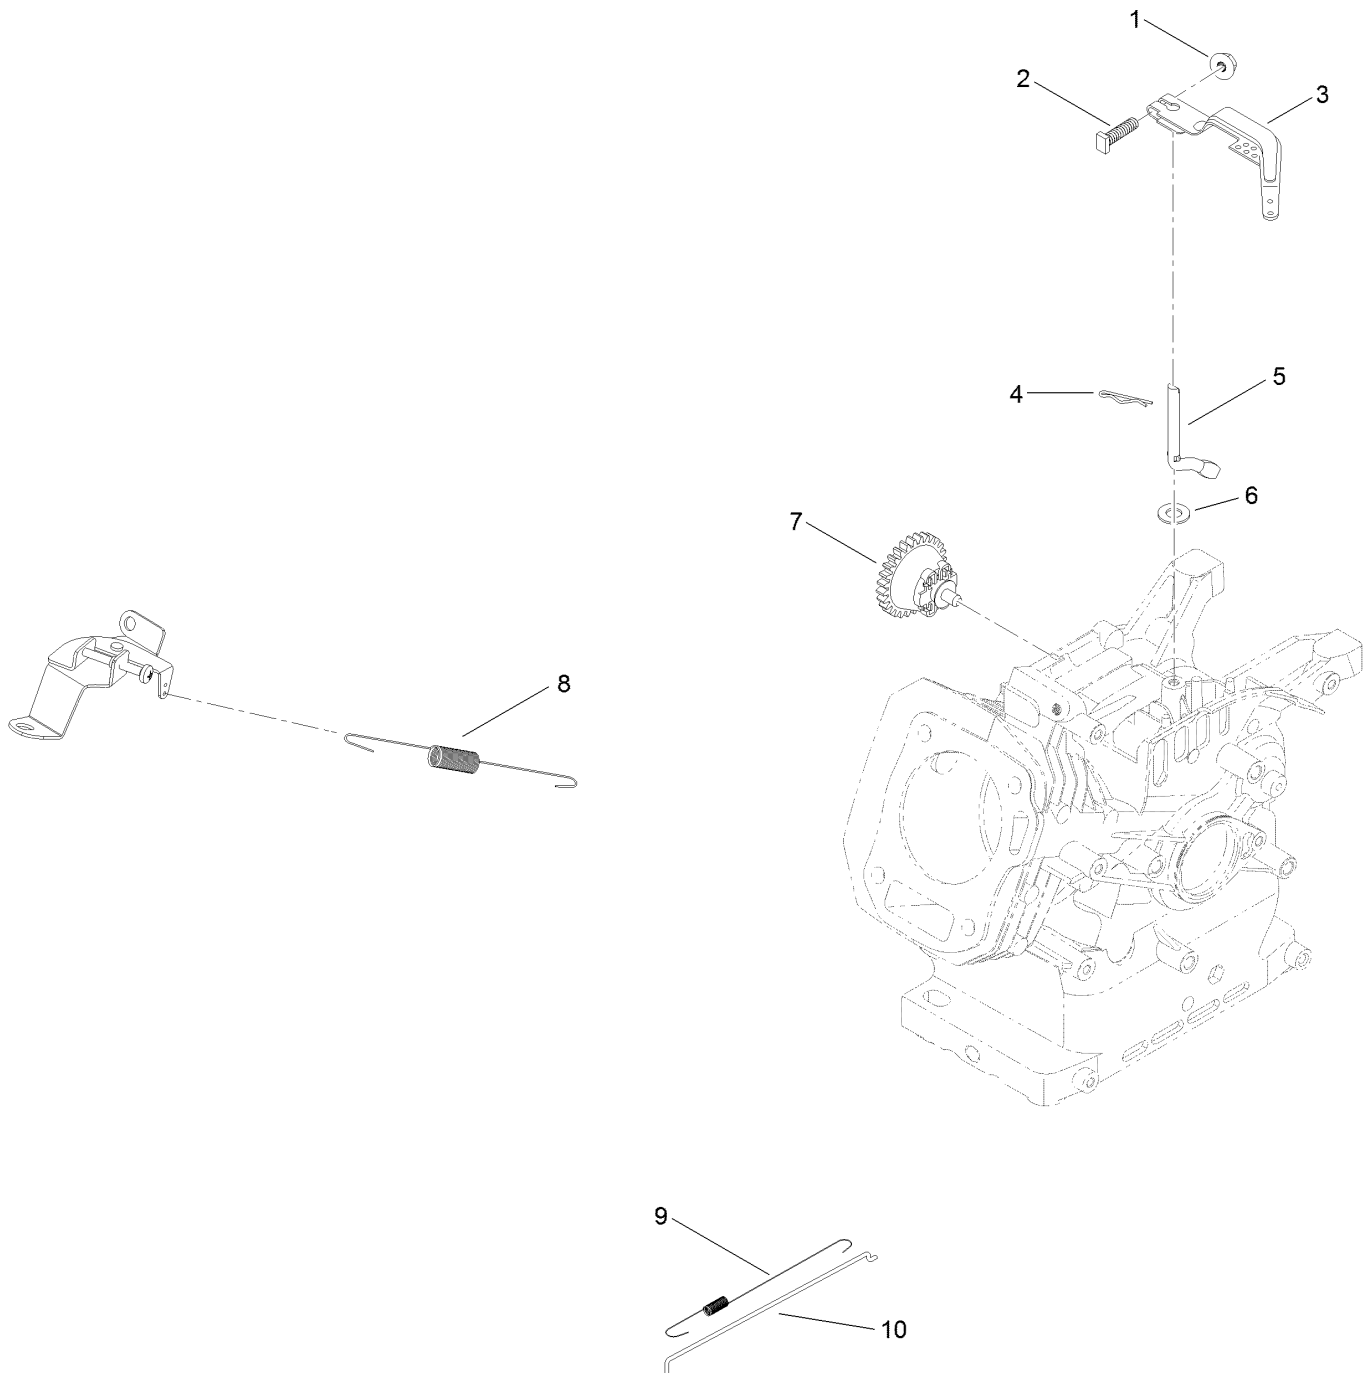

## Governor Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>      |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|-------------------------|
| 1           | 120-4236           | 1           | Nut-Flange         | 6           | 121-0498           | 1           | Washer-Plain            |
| 2           | 120-4238           | 1           | Bolt-Arm, Governor | 7           | 133-9994           | 1           | Governor Gear ASM       |
| 3           | 121-0155           | 1           | Arm-Governor       | 8           | 127-9398           | 1           | Spring-Governor         |
| 4           | 120-4256           | 1           | Pin-Hair           | 9           | 121-0153           | 1           | Spring-Return, Throttle |
| 5           | 136-7763           | 1           | Shaft-Governor     | 10          | 121-0148           | 1           | Rod-Governor            |
 
# Piston and Head Assembly

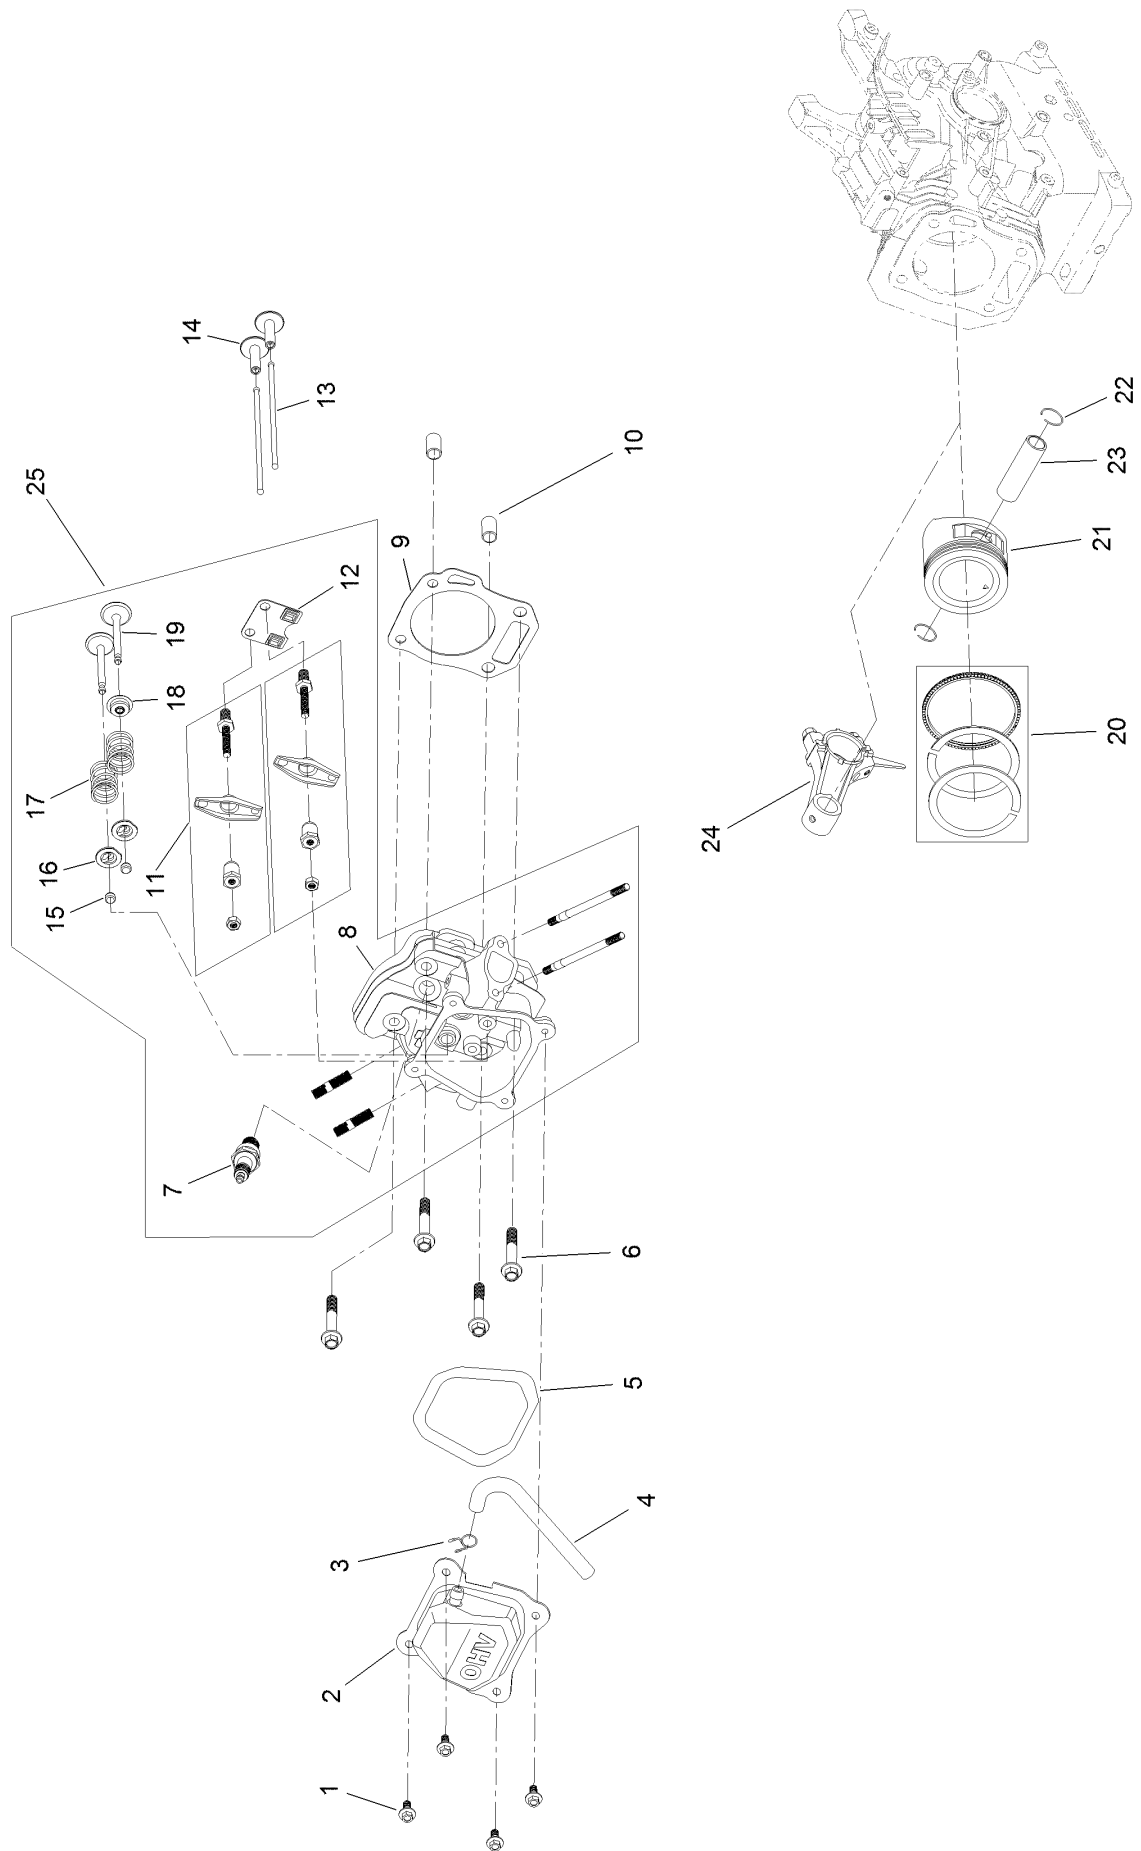


## Piston and Head Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|-----------------------|
| 1           | 120-4454           | 4           | Screw-HHF             |
| 2           | 127-9094           | 1           | Cover-Valve           |
| 3           | 127-9408           | 1           | Clamp-Hose            |
| 4           | 139-0631           | 1           | Tube-Breather         |
| 5           | 121-0109           | 1           | Gasket-Cover, Valve   |
| 6           | 121-4110           | 4           | Screw-HHF             |
| 7           | 81-3250            | 1           | Spark Plug            |
| 8           | 127-9013           | 1           | Head-Cylinder         |
| 9           | 127-9000           | 1           | Gasket-Head, Cylinder |
| 10          | 121-0053           | 2           | Pin-Dowel             |
| 11          | 120-4475           | 2           | Rocker Arm ASM        |
| 12          | 121-4120           | 1           | Plate-Guide, Push Rod |
| 13          | 121-4121           | 2           | Rod-Push              |

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>     |
|-------------|--------------------|-------------|------------------------|
| 14          | 127-9015           | 2           | Tappet-Valve           |
| 15          | 121-4116           | 2           | Rotator-Valve          |
| 16          | 121-4117           | 2           | Retainer-Spring, Valve |
| 17          | 127-9014           | 2           | Spring-Valve           |
| 18          | 121-4202           | 1           | Seal-Stem, Valve       |
| 19          | 127-9016           | 1           | Valve Set              |
| 20          | 121-4295           | 1           | Ring Set, Piston       |
| 21          | 121-4293           | 1           | Piston                 |
| 22          | 121-0313           | 2           | Clip-Pin, Piston       |
| 23          | 121-4128           | 1           | Pin-Piston             |
| 24          | 127-9017           | 1           | Connecting Rod ASM     |
| 25          | 133-9839           | 1           | Complete Head ASM      |

 
# Blower Housing and Shrouds Assembly

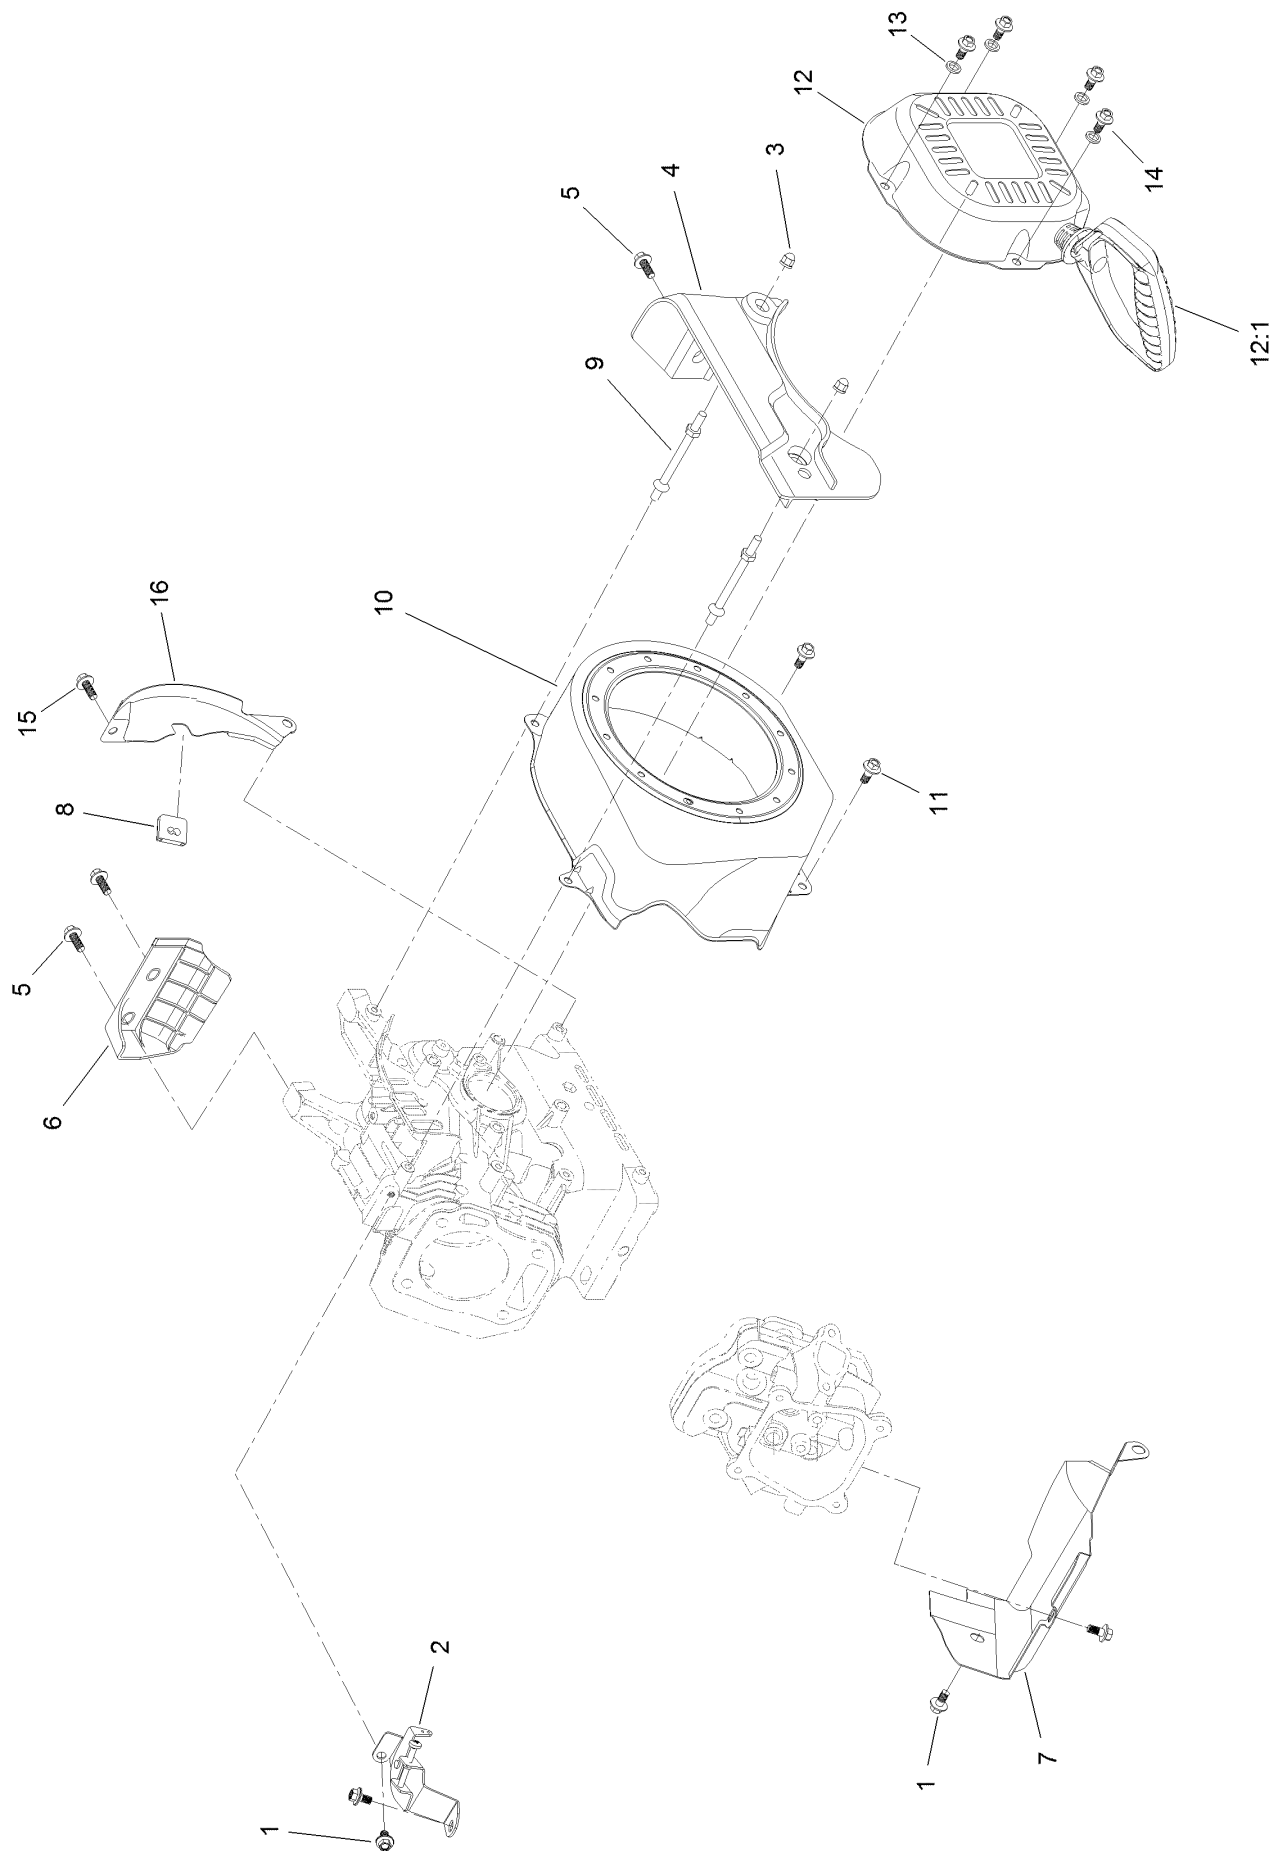

## Blower Housing and Shrouds Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i> |
|-------------|--------------------|-------------|--------------------|-------------|--------------------|-------------|--------------------|
| 1           | 121-0118           | 4           | Screw-HHF          | 10          | 127-9498           | 1           | Shroud-Blower      |
| 2           | 127-9396           | 1           | Speed Control ASM  | 11          | 121-0294           | 2           | Screw-HHF          |
| 3           | 127-9383           | 2           | Nut-Acorn          | 12          | 127-9402           | 1           | Recoil Starter ASM |
| 4           | 127-9406           | 1           | Panel-Front        | 12:1        | 121-0287           | 1           | Handle-Recoil      |
| 5           | 127-9123           | 3           | Screw-HHF          | 13          | 127-9380           | 4           | Washer-Plain       |
| 6           | 133-1551           | 1           | Panel-Side, Engine | 14          | 127-9031           | 4           | Screw-HHF          |
| 7           | 127-9096           | 1           | Shroud-Lower       | 15          | 120-4454           | 1           | Screw-HHF          |
| 8           | 121-0325           | 1           | Grommet-Rubber     | 16          | 133-1550           | 1           | Shield-Flywheel    |
| 9           | 127-9110           | 2           | Stud-Mount         |             |                    |             |                    |

 
# Chute Assembly

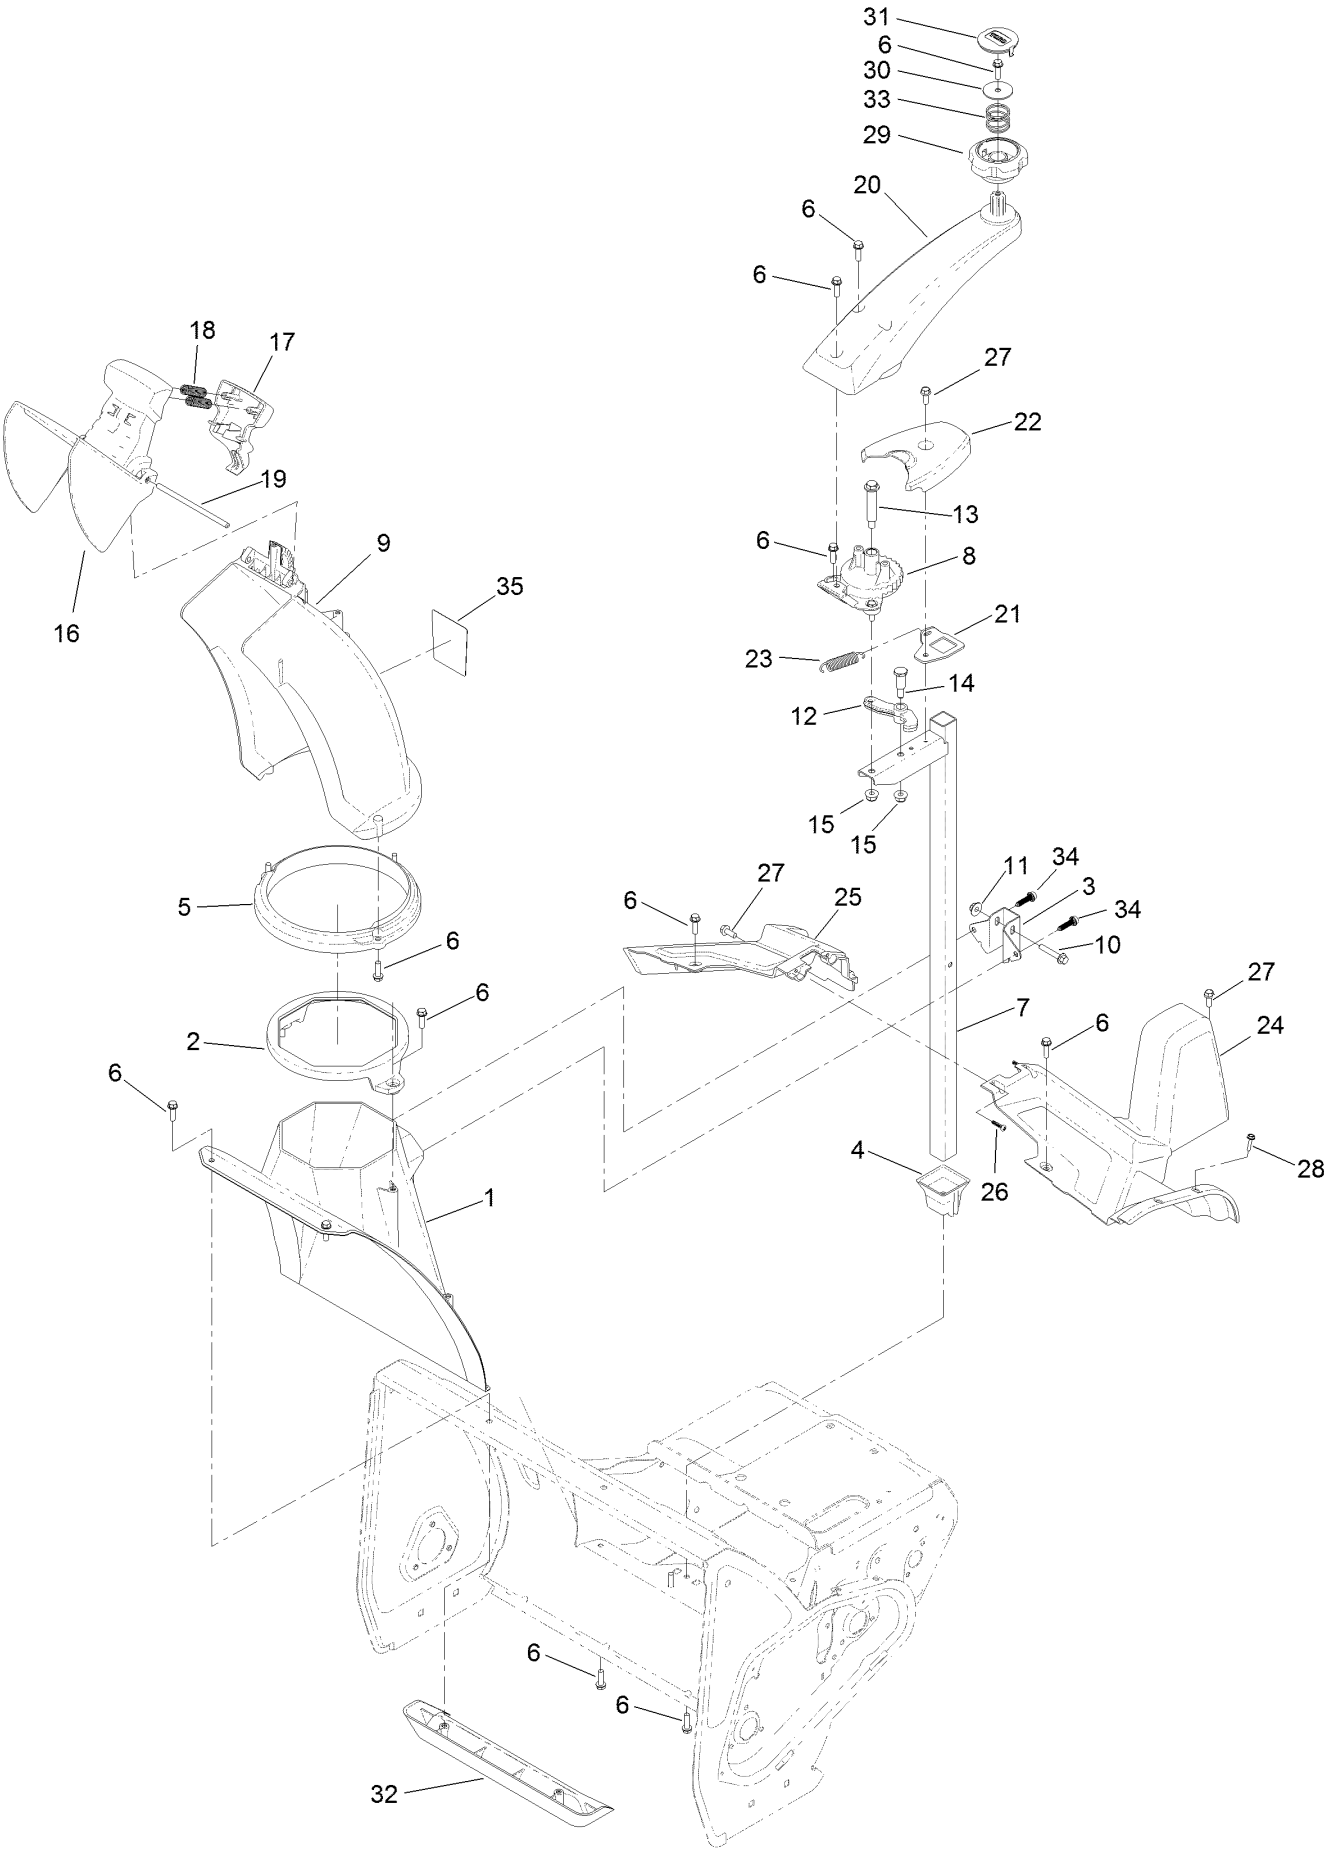

## Chute Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>               | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    |
|-------------|--------------------|-------------|----------------------------------|-------------|--------------------|-------------|-----------------------|
| 1           | 130-9587           | 1           | Chute-Lower                      | 18          | 136-7136           | 2           | Spring-Compression    |
| 2           | 130-9588           | 1           | Guide-Chute                      | 19          | 136-8672           | 1           | Pin-Hinge, Deflector  |
| 3           | 130-9589-03        | 1           | Bracket-Post, Support<br>(Chute) | 20          | 130-9598           | 1           | Handle-Chute, Manual  |
| 4           | 130-9590           | 1           | Retainer- Post, Chute            | 21          | 136-7175           | 1           | Bkt-Spring Support    |
| 5           | 130-9596           | 1           | Ring-Chute                       | 22          | 131-1760           | 1           | Cover-Spring          |
| 6           | 46-8091            | 19          | Screw-HWH                        | 23          | 131-1790           | 1           | Spring-Extension      |
| 7           | 130-9591-03        | 1           | Post-Chute, Manual               | 24          | 131-1754           | 1           | Shroud-Upper, LH      |
| 8           | 131-1798           | 1           | Gear-Chute, Manual               | 25          | 131-1765           | 1           | Shroud-Lower, RH      |
| 9           | 133-5591           | 1           | Chute-Discharge                  | 26          | 94-4496            | 2           | Screw-PPH             |
| 10          | 131-5927           | 1           | Screw-HHF                        | 27          | 32144-85           | 3           | Screw-HWH             |
| 11          | 114-3778           | 1           | Nut-HF                           | 28          | 98-1375            | 2           | Screw-HWH             |
| 12          | 131-1799           | 1           | Latch-Chute                      | 29          | 131-1774           | 1           | Knob-Control, Chute   |
| 13          | 136-7199           | 1           | Bolt-Shoulder                    | 30          | 136-7176           | 1           | Washer-Fender         |
| 14          | 63-2650            | 1           | Screw-Shoulder                   | 31          | 131-1777           | 1           | Insert-Knob           |
| 15          | 104-8300           | 2           | Nut-HF, NI                       | 32          | 131-1768           | 1           | Kicker-Housing        |
| 16          | 131-5916           | 1           | Deflector-Chute                  | 33          | 131-5926           | 1           | Spring-Compression    |
| 17          | 117-2314           | 1           | Trigger-Deflector                | 34          | 130-6658           | 2           | Screw-Flange, Plastic |
|             |                    |             |                                  | 35          | 133-5592           | 1           | Decal                 |
 
# Handle and Control Assembly

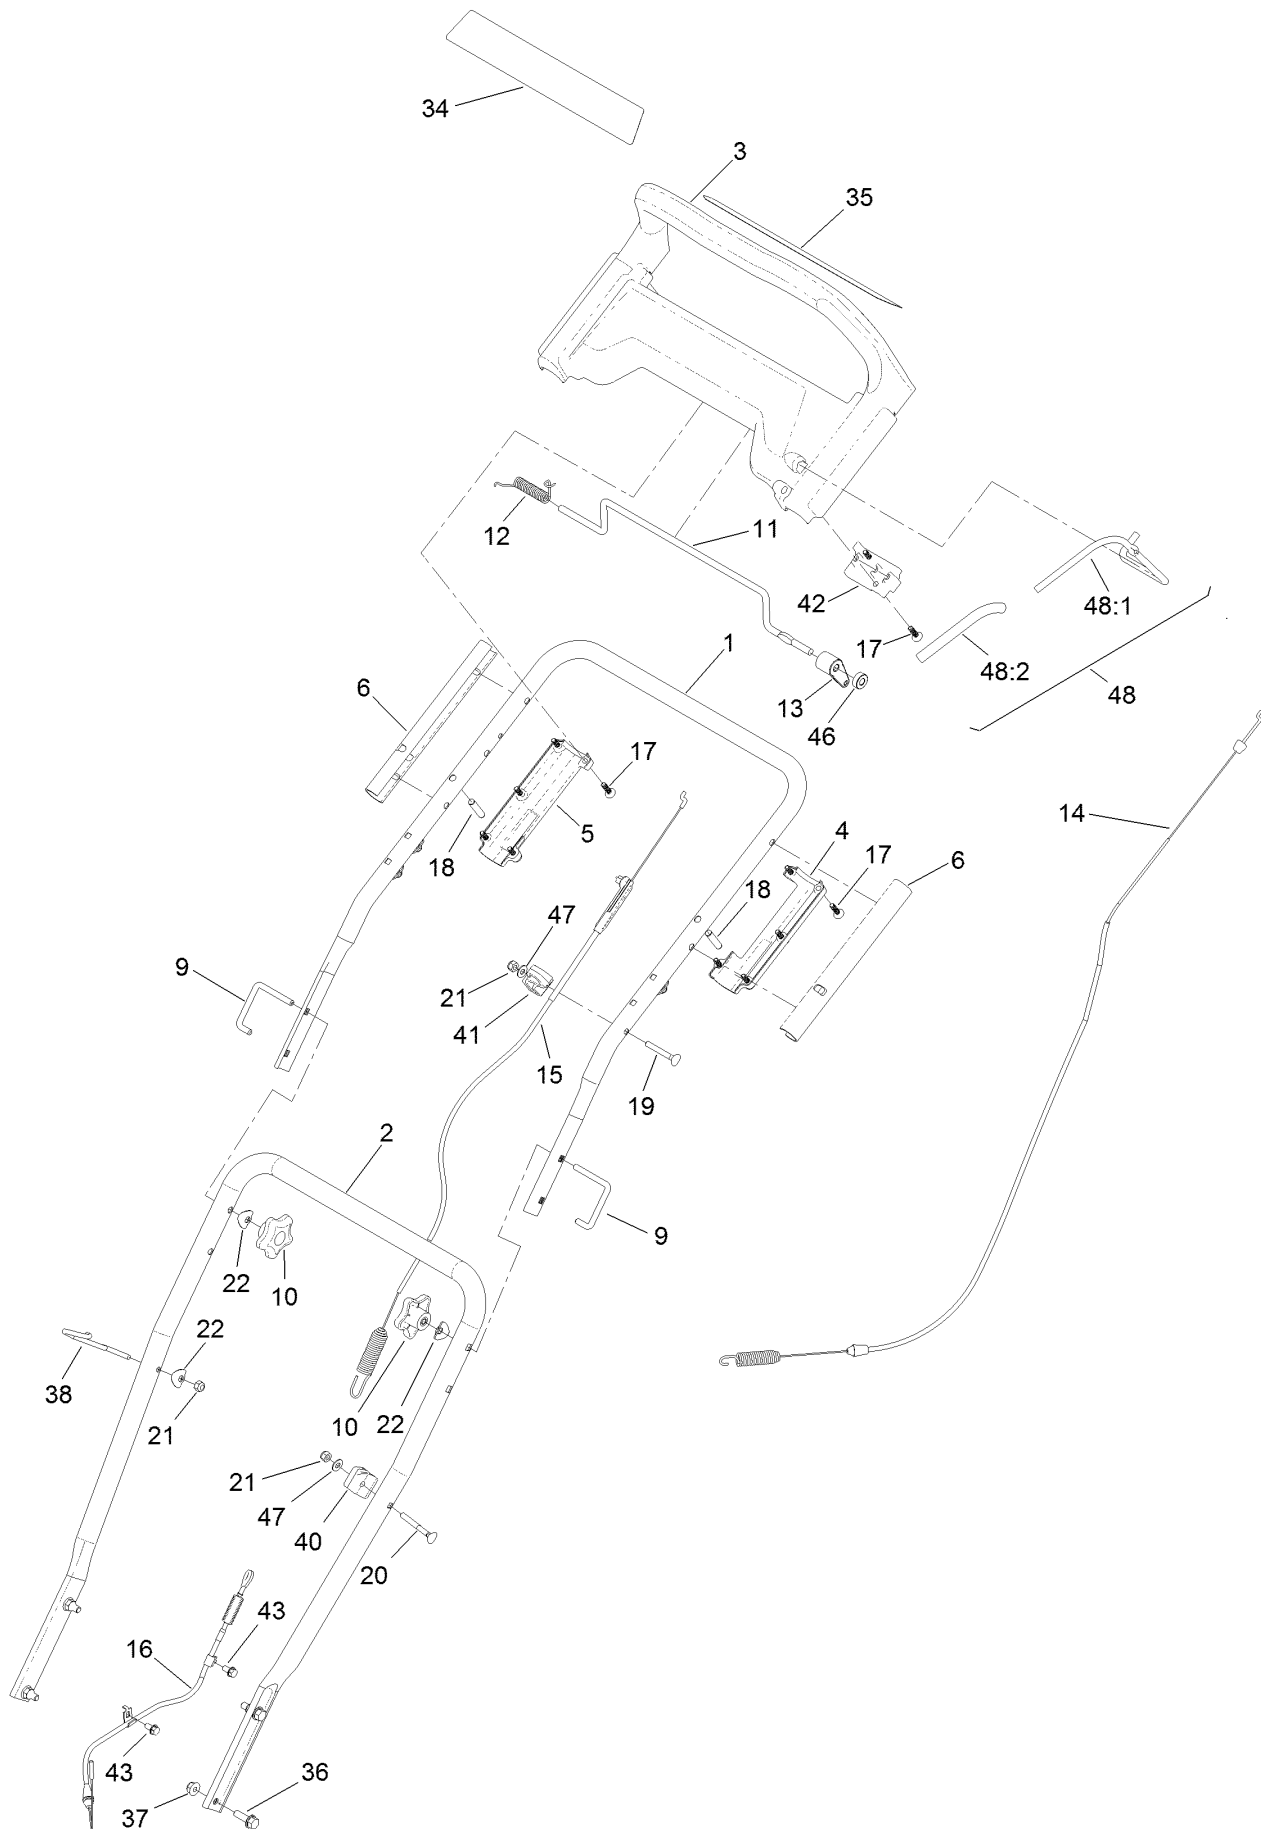

## Handle and Control Assembly (continued)

| <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>    | <i>Ref.</i> | <i>Part Number</i> | <i>Qty.</i> | <i>Description</i>   |
|-------------|--------------------|-------------|-----------------------|-------------|--------------------|-------------|----------------------|
| 1           | 120-2333-03        | 1           | Handle-Upper          | 20          | 92-2269            | 1           | Screw-Handle         |
| 2           | 120-2334-03        | 1           | Handle-Lower          | 21          | 3296-73            | 3           | Nut-Lock, NI         |
| 3           | 131-5921           | 1           | Handle                | 22          | 107-3844           | 3           | Washer               |
| 4           | 120-2336           | 1           | Handle-Bottom, LH     | 34          | 131-1786           | 1           | Decal-Display        |
| 5           | 131-1770           | 1           | Handle-Bottom, RH     | 35          | 131-1785           | 1           | Decal-Control, Panel |
| 6           | 120-2343           | 2           | Sleeve Handle         | 36          | 3234-29            | 4           | Screw-HHF            |
| 9           | 136-7130           | 2           | Lock-Handle           | 37          | 104-8300           | 4           | Nut-HF, NI           |
| 10          | 106-4161           | 2           | Knob-Handle           | 38          | 136-7147           | 1           | Guide-Rope           |
| 11          | 136-7150           | 1           | Bar-Control, Traction | 40          | 92-7729            | 1           | Anchor-Cable, Upper  |
| 12          | 136-7166           | 1           | Spring-Torsion        | 41          | 131-5903           | 1           | Cable-Guide          |
| 13          | 131-5917           | 1           | Lever-Traction        | 42          | 131-5901           | 1           | Bail-Mount           |
| 14          | 131-5924           | 1           | Cable-Transmission    | 43          | 32144-4            | 2           | Screw-HWH            |
| 15          | 120-2338           | 1           | Cable-Rotor, Upper    | 46          | 130-2343           | 1           | Spacer               |
| 16          | 131-1753           | 1           | Cable-Rotor, Lower    | 47          | 3256-1             | 2           | Washer-Flat          |
| 17          | 120-2349           | 12          | Screw                 | 48          | 131-5943           | 1           | Bail ASM             |
| 18          | 131-1771           | 2           | Pin-Dowel             | 48:1        |                    | 1           | Bail-Auger ●         |
| 19          | 95-4453            | 1           | Screw                 | 48:2        | 131-5902           | 1           | Cover-Bail           |

● Not serviced separately

# Attachments and Accessories

## For 36001 SnowMaster 724 ZXR Snowthrower

| Product Name                                       | Model/Part |
|----------------------------------------------------|------------|
| Center Paddle Replacement Kit.....                 | 130-9569P  |
| Skid Replacement Kit .....                         | 130-9619P  |
| Scraper Kit.....                                   | 130-9628P  |
| Rotor Belt.....                                    | 131-5967P  |
| Engine Maintenance Kit.....                        | 138-0699   |
| Case of 24 20-Ounce Bottles 5W30 Winter Oil .....  | 38908      |
| Toro Snow Oil 0W30 Synthetic 20-Ounce Bottle ..... | 38913      |
| Toro 2-Stage Cover.....                            | 490-7466   |

**Notes:**



**Count on it.**