



82" Contour Mower

Groundsmaster® 3000 Series

Model No. 30724—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Left Hand Chamber and Castor Assembly	3	Center Chamber and Lift Arm Assembly	7
Wheel Assembly No. 93-9938	4	Hydraulic Assembly	8
Right Hand Chamber and Pivot Assembly	5	Lift Arm Linkage and Brake Shield Assembly . .	9
Spindle Assembly No. 98-0697	6	Hydraulic Schematic	10


Accessories

Description	Model / Part No.	Description	Model / Part No.
Hydraulic Kit	30726	Deck Lock Kit	98-0688
Remote Lock and Lift Kit	30727	Motor Kit	98-5198
Wide Tire Kit	100-1350	Anti-Scalp Cup Kit	98-0696
HOC Kit	100-3925		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.


Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

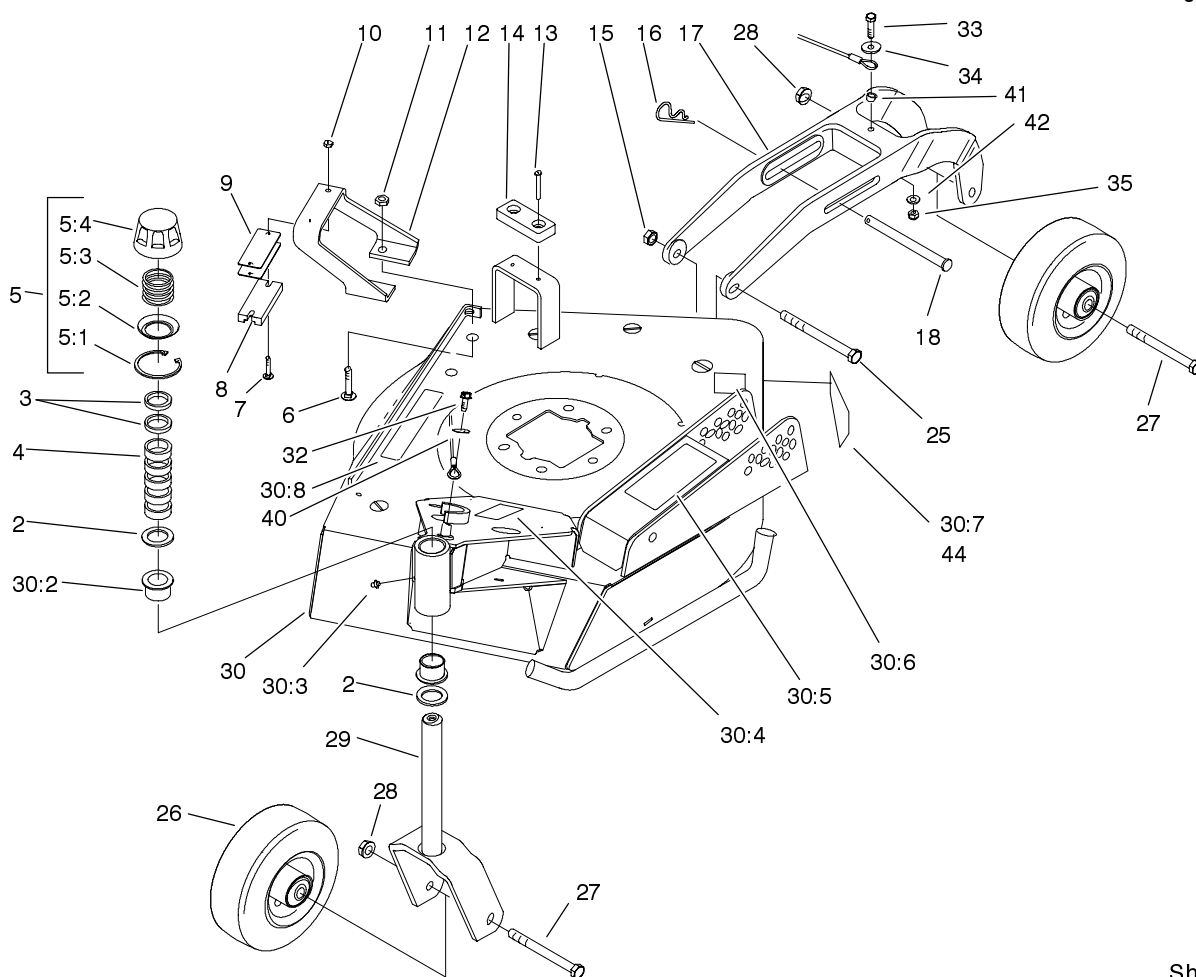

Sheet No.:2

Left Hand Chamber and Castor Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
2	3-6781	10	Washer-Thrust	30	96-1280	1	No. 1 Chamber ASM
3	27-1040	10	Spacer	30:2	94-1291	2	Bushing-Special
4	63-0070	25	Spacer	30:3	302-5	1	Fitting-Grease
5	92-8862	5	HOC Cap ASM	30:4	95-6001	1	Decal - HOC, Front
5:1	92-5581	1	Ring-Retaining	30:5	95-6003	1	Decal - HOC, LH Pivot
5:2	92-5583	1	Washer-Cap	30:6	93-0299	1	Decal-No Step
5:3	92-5584	1	Spring-Compression	30:7	43-8480	1	Decal-Danger
5:4	92-8861	1	Cap-HOC	30:8	95-6035	1	Decal - Warning
6	3232-1	6	Screw-CARR	32	323-2	2	Screw-HH
7	3229-3	6	Screw-CARR	33	322-6	2	Screw-HH
8	94-9273	3	Pad - Stop	34	2844	2	Washer
9	94-9299	6	Spacer-Support, Deck	35	3296-29	2	Nut-Lock
10	3296-8	6	Nut-Lock NI	40	3256-5	2	Washer-Flat
11	3296-48	6	Nut-Lock NI	41	92-6290	2	Spacer
12	96-1262-01	3	Bracket-Support	42	3256-23	2	Washer-Flat
13	3269-11	4	Rivet	44	93-7815	1	Decal-Danger, Int'l
14	86-5350	2	Bumper-Rubber				
15	32128-23	3	Nut-HF				
16	3290-355	3	Pin-Hair				
17	95-0999-01	3	Arm-Pivot				
18	283-38	3	Pin-Clevis				
25	325-22	3	Screw-HH				
26	93-9938	8	Wheel ASM				
27	327-24	8	Screw-HH				
28	3296-53	8	Nut-Lock, NI				
29	93-8431-01	5	Castor Fork ASM				

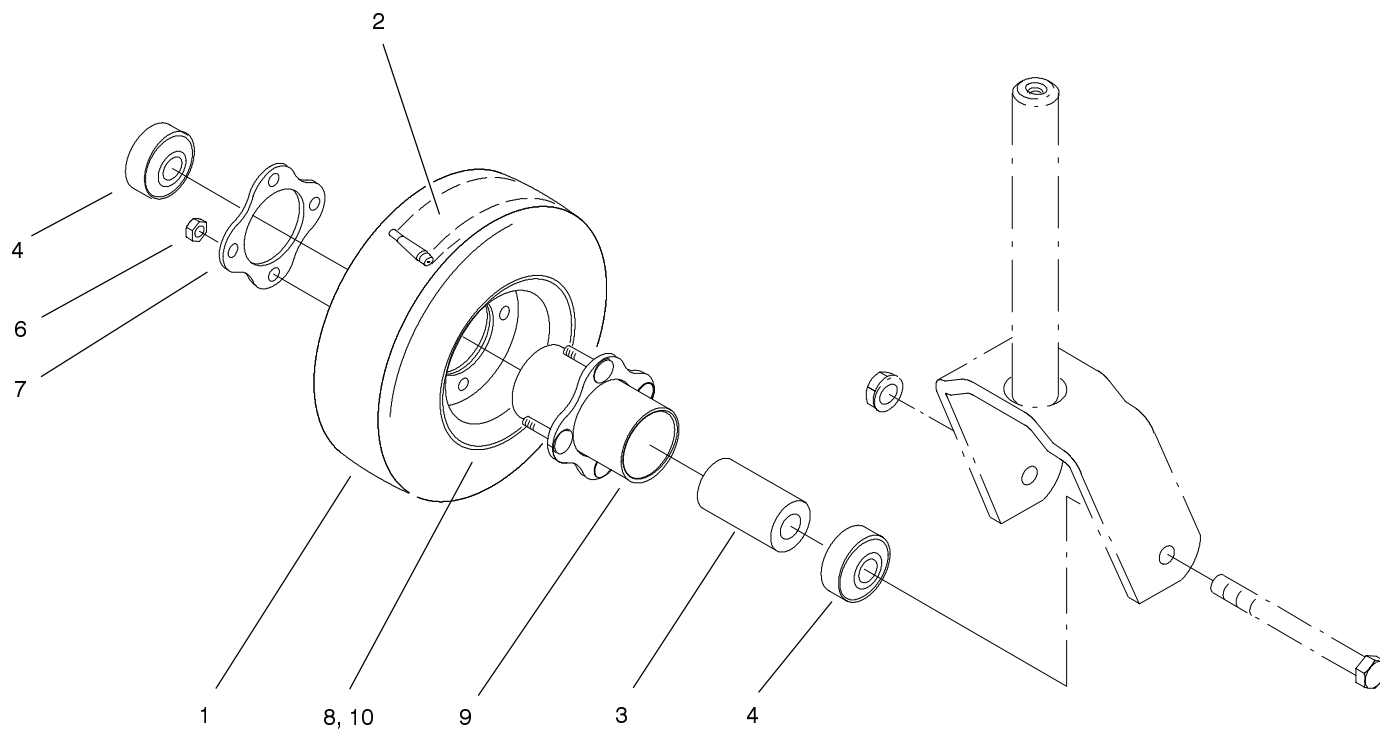


Sheet No.:A1

T-3602

Wheel Assembly No. 93-9938

Ref. No.	Part No.	Qty.	Description
1	93-9939	2	Tire
2	68-8950	2	Tube W/Valve
3	93-4241	2	Spacer-Bearing, Inner
4	93-4237	4	Bearing
6	32128-16	8	Nut-HHF
7	93-4242	2	Plate
8	93-4239	2	Rim-Wheel, Half
9	93-5980	2	Hub
10	95-2741	2	Rim-Wheel, Half (W/ Valve Stem Hole)

Ref. No.	Part No.	Qty.	Description

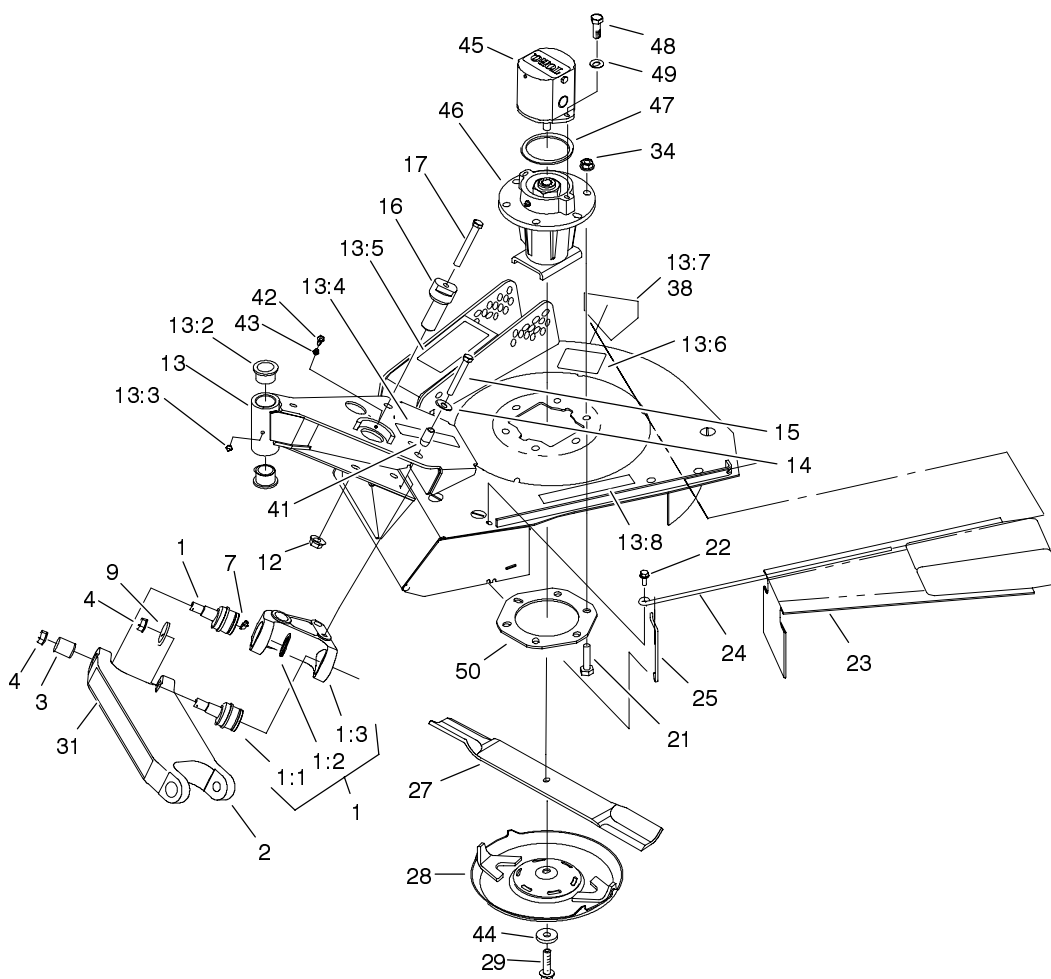


Sheet No.:3

Right Hand Chamber and Pivot Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆1		6	Pivot/Balljoints ASM	24	93-8418	6	Rod - Top
1:1	92-5838	12	Joint-Ball	25	93-8419	6	Rod - Front
1:2	94-9973	12	Ring-Retaining	27	93-8409-03	4	Blade
1:3	98-0699-01	6	Pivot	28	98-0690-03	4	Cup-Scalp, Anti
2	93-8406-01	3	Span	29	92-5816	4	Bolt-Blade
3	94-9267	6	Sleeve - Tapered	31	95-6006	3	Decal - Contour 82
4	3219-6	12	Nut-Hex	34	3296-23	24	Nut-Lock, NI
7	302-60	12	Fitting-Lube	38	93-7815	1	Decal-Danger, Int'l
9	3256-7	6	Washer-Flat	41	98-0683	6	Pin - Pilot
12	32128-37	6	Nut-HF	42	321-5	6	Screw-HH
13	96-1283	1	No. 4 Chamber ASM	43	3217-5	6	Nut-Hex
13:2	94-1291	2	Bushing-Special	44	98-0691	4	Washer - Hardened
13:3	302-5	1	Fitting-Grease	45	99-6104	4	Motor-Hydraulic
13:4	95-6001	1	Decal - HOC, Front	*45:2	99-6105	3	Kit-Seal
13:5	95-6002	1	Decal - HOC, RH	*45:3	98-5185	3	Bit-Flange/Valve, Back
			Pivot	*45:4	98-5191	3	Kit-Valve, Relief
13:6	93-0299	1	Decal-No Step	46	98-0697	4	Spindle ASM
13:7	43-8480	1	Decal-Danger	47	237-161	4	O-Ring
13:8	95-6035	1	Decal - Warning	48	3274-49	8	Screw-HSH
14	66-6480	12	Washer	49	3256-25	8	Washer-Flat
15	324-27	12	Capscrew-HH	50	98-0680-03	4	Plate-Support
16	93-8434	6	Plug - Eccentric				
17	324-28	6	Capscrew-HH				
21	325-6	24	Screw-HH				
22	32144-11	6	Screw-TAP				
23	93-8416	3	Flap - Pivot				

☆ Not serviced

* Not illustrated

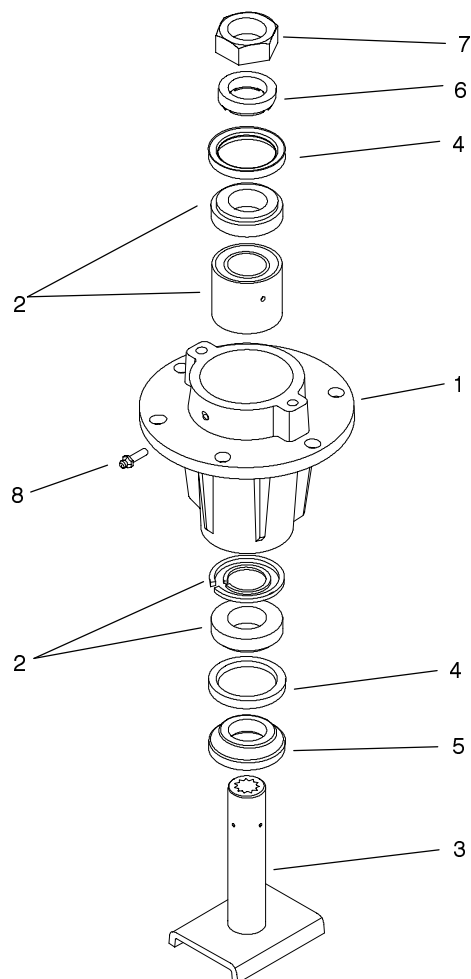


Sheet No.:A2

T-2946

Spindle Assembly No. 98-0697

Ref. No.	Part No.	Qty.	Description
1	96-1269	3	Housing-Spindle
2	93-4825	3	Kit-Spacer & Bearing
3	96-1271	3	Spindle Shaft ASM
4	253-154	6	Seal-Oil
5	69-6950	3	Spacer-Shaft, Spindle
6	96-1272	3	Spacer - Seal
7	3296-68	3	Nut-Lock NI
8	302-62	3	Fitting-Grease


Ref. No.	Part No.	Qty.	Description

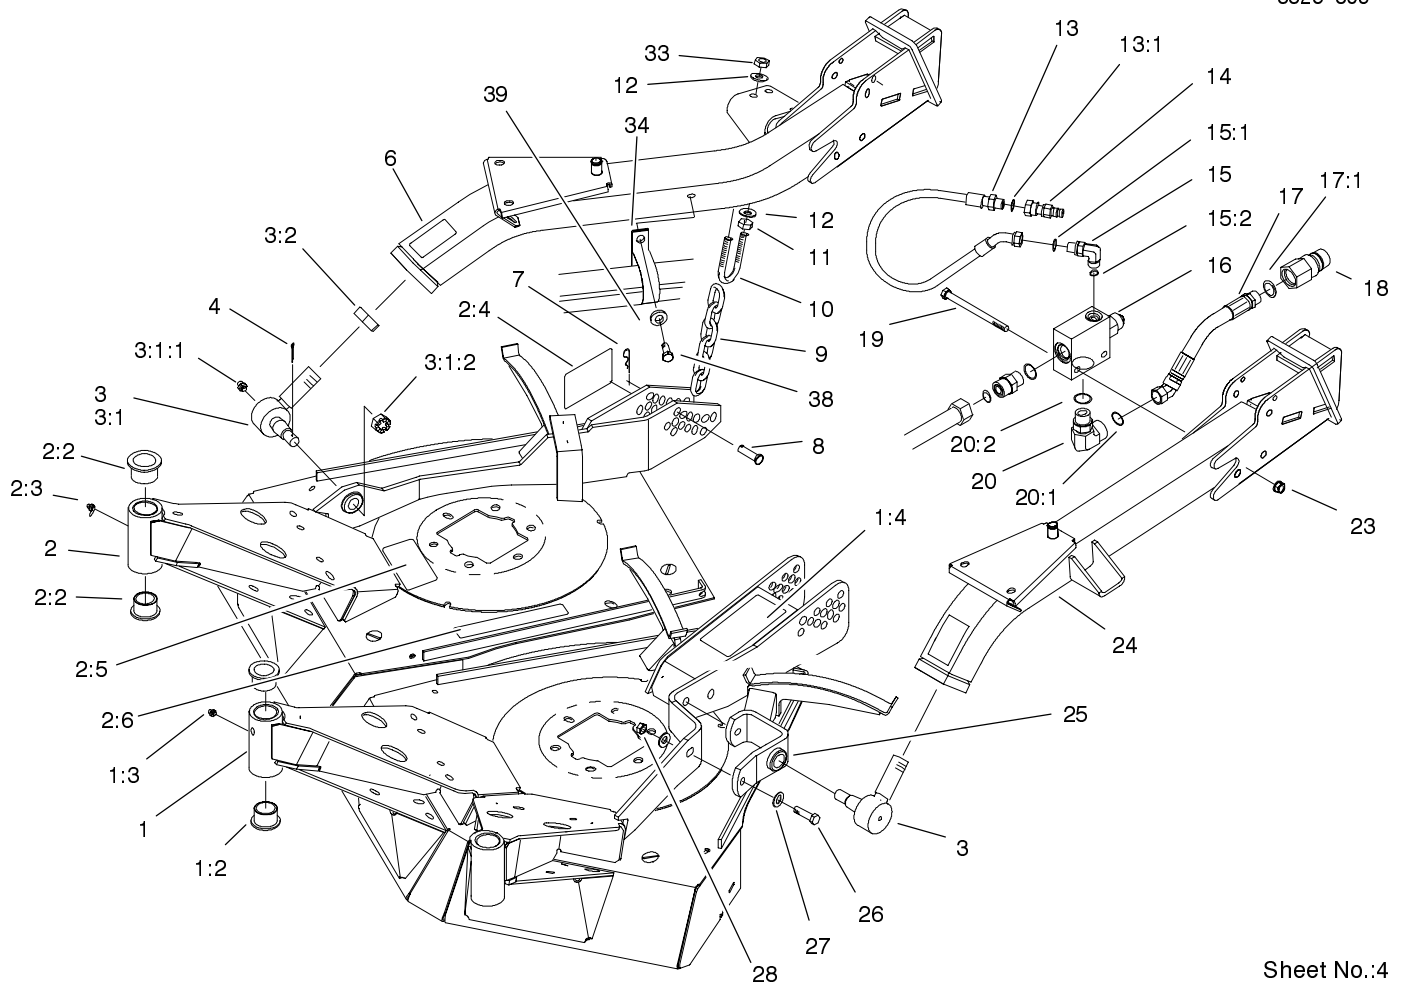

Sheet No.:4

Center Chamber and Lift Arm Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	96-1281	1	No. 2 Chamber ASM	13	95-0962	1	Hose ASM
1:2	94-1291	4	Bushing-Special	13:1	237-42	1	O-Ring
1:3	302-5	2	Fitting-Grease	14	86-5480	1	Nipple-Test
1:4	95-6002	1	Decal - HOC, RH Pivot	15	340-77	1	Fitting-HYD, 90°
2	96-1282	1	No. 3 Chamber ASM	15:1	237-22	1	O-Ring
2:2	94-1291	2	Bushing-Special	15:2	237-42	1	O-Ring
2:3	302-5	1	Fitting-Grease	16	94-9297	1	Valve-Balance, Counter
2:4	95-6004	1	Decal - HOC, Rear Link	17	95-0958	1	Hose ASM
2:5	93-7818	1	Decal-Torque, Blade Bolt	17:1	237-81	1	O-Ring
2:6	95-6035	1	Decal - Warning	18	96-1276	1	Nipple-Face, Flush
3		2	Balljoint/Nut ASM	19	323-39	2	Screw-HH
3:1	86-8100	1	Joint-Ball	20	340-16	1	Fitting-HYD, 90°
3:1:1	302-5	1	Fitting-Grease	20:1	237-80	1	O-Ring
3:1:2	32136-2	1	Nut-SHH	20:2	237-58	1	O-Ring
3:2	21-3000	1	Nut-HJ, Push Arm	23	3296-39	2	Nut-Lock, NI
4	3272-12	2	Pin-Cotter	24	99-5773-01	1	LH Lift Arm ASM
6	99-5772-01	1	RH Lift Arm ASM	25	96-1257-01	1	Pusharm Mount ASM
7	3290-355	1	Pin-Hair	26	324-7	2	Screw-HH
8	283-69	1	Clevis-Pin	27	66-6480	4	Washer
9	96-1260	1	Chain - HOC	28	3296-48	2	Nut-Lock NI
10	104-0108	1	U-Bolt	33	3296-25	2	Nut-Lock NI
11	3217-9	2	Nut-HH	34	2412-102	1	R-Clamp
12	3256-26	4	Washer-Flat	38	32144-11	1	Screw-TAP
				39	3256-3	1	Washer-Flat

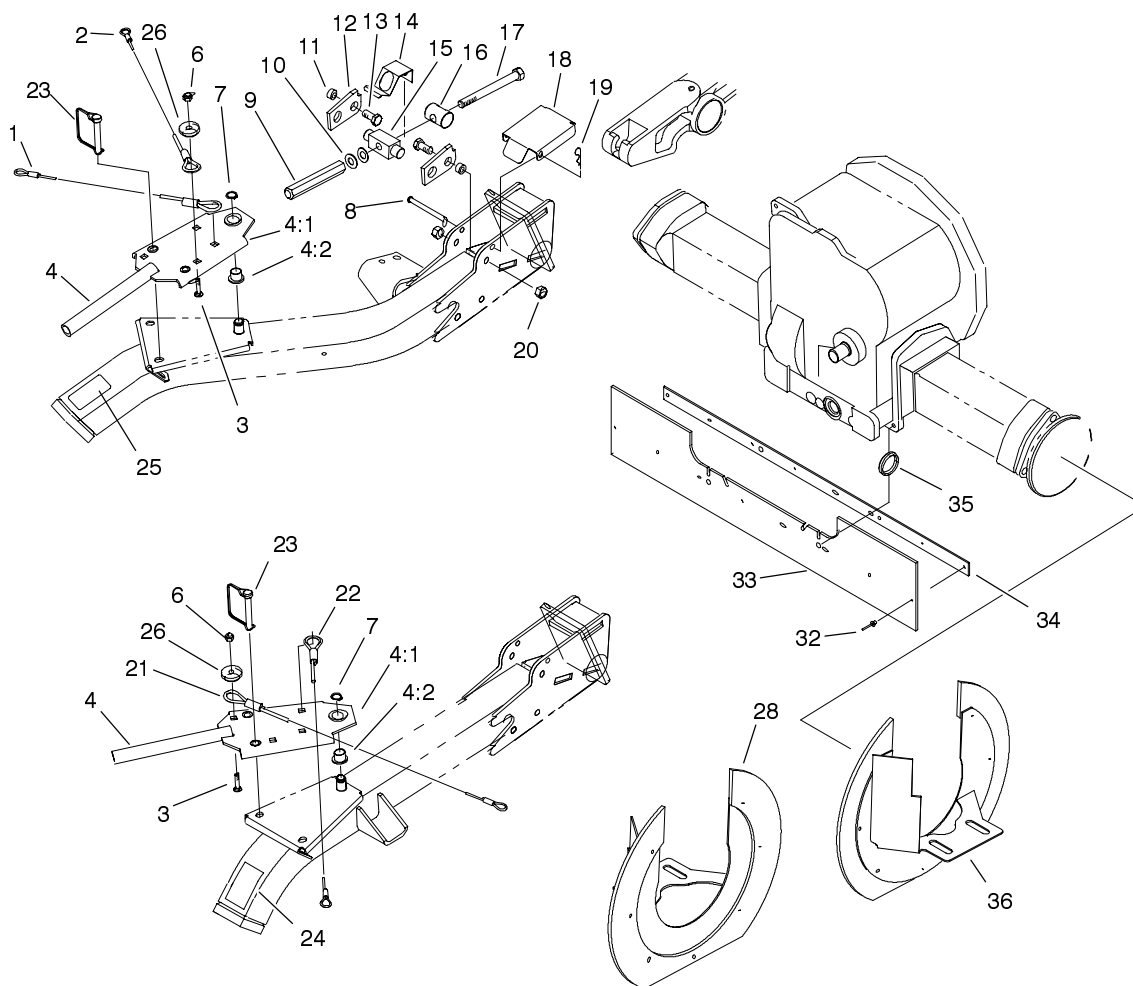


Sheet No.:7

Lift Arm Linkage and Brake Shield Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-8098	1	Cable-Front, RH	25	95-6008	1	Decal-Lock & Lift, LH
2	99-8123	1	Cable-Rear, RH	26	100-5749	4	Spacer
3	3231-2	4	Screw-CARR	28	104-0140	1	LH Shield ASM
☆4		2	Lock Lever / Bshg ASM	32	3269-28	8	Rivet-Pop
4:1	95-6028-01	2	Lock Lever ASM	33	95-6037	1	Guard-Rubber
4:2	3-1506	2	Bushing	34	95-6038-03	1	Support-Guard
6	3296-59	4	Nut-Lock NI	35	44-7540	2	Ring-Harness
7	32120-64	2	Ring-Snap, External	36	104-0141	1	RH Shield ASM
8	283-88	2	Pin-Clevis				
9	93-4678	2	Lever-Release				
10	3290-413	4	Washer-Belleville				
11	93-4618	4	Spacer-Pivot				
12	93-4675	4	Plate-Release				
13	323-6	4	Screw-HH				
14	93-4818	2	Spring-Lever				
15	93-4677	2	Hub-Release				
16	93-4676	2	Shaft-Latch				
17	3213-24	2	Screw-HH				
18	99-5769-01	2	Cover-Latch				
19	3290-467	2	Pin-Hair				
20	3296-59	4	Nut-Lock NI				
21	99-8097	1	Cable-Rear, LH				
22	99-8099	1	Cable-Front, LH				
23	93-4696	2	Pin-Snapper				
24	95-6005	1	Decal-Lock & Lift, RH				

☆ Not serviced

Hydraulic Schematic

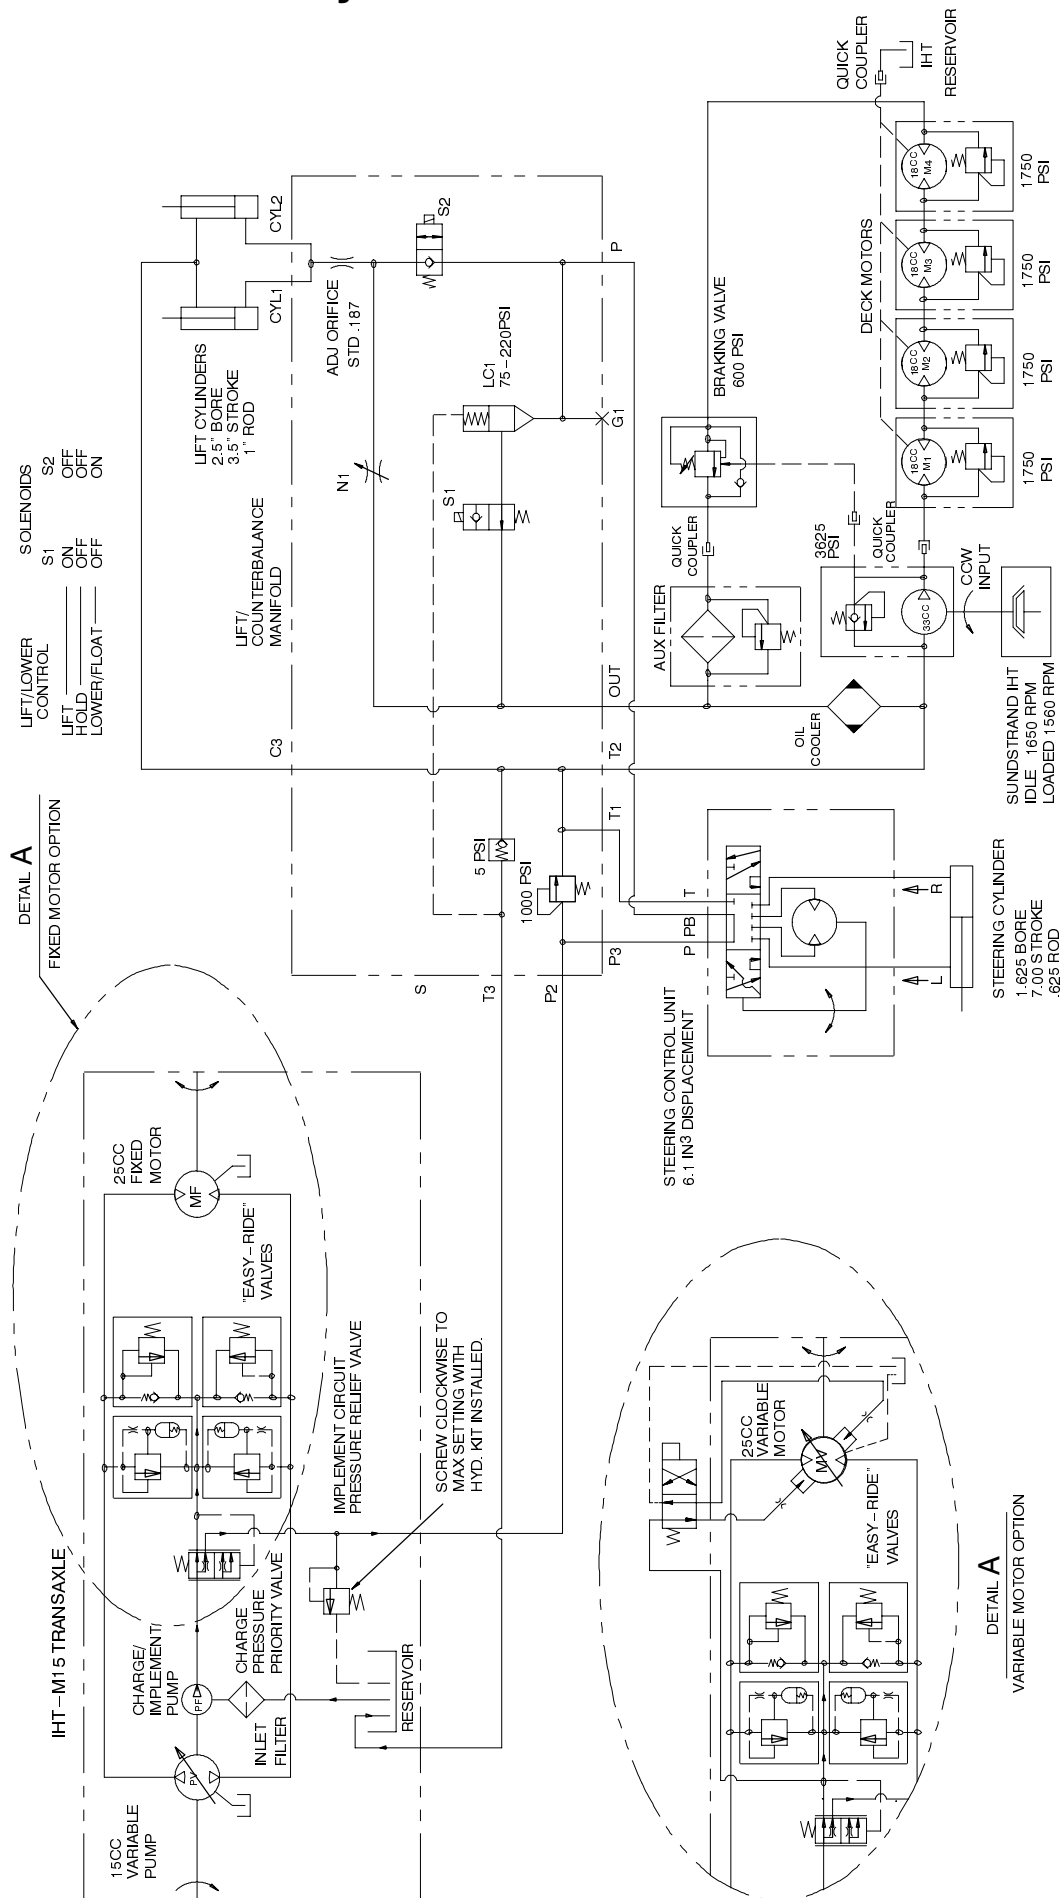

Maintenance Record

[illegible]

