



**Count on it.**

Form No. 3421-268 Rev B

# Parts Catalog

## SGR-13 Stump Grinder

Model No. 22619—Serial No. 402470001 and Up



# Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

## Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

## Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

## Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

# Contents

Engine and Frame Assembly ..... 4

Handle Assembly ..... 5

Brake Lever Assembly No. 120-1797 ..... 6


Cutter Wheel Assembly ..... 7

Wheel and Brake Assembly ..... 8

Flap Assembly ..... 9

Belt Drive Assembly ..... 10

Attachments and Accessories ..... 11

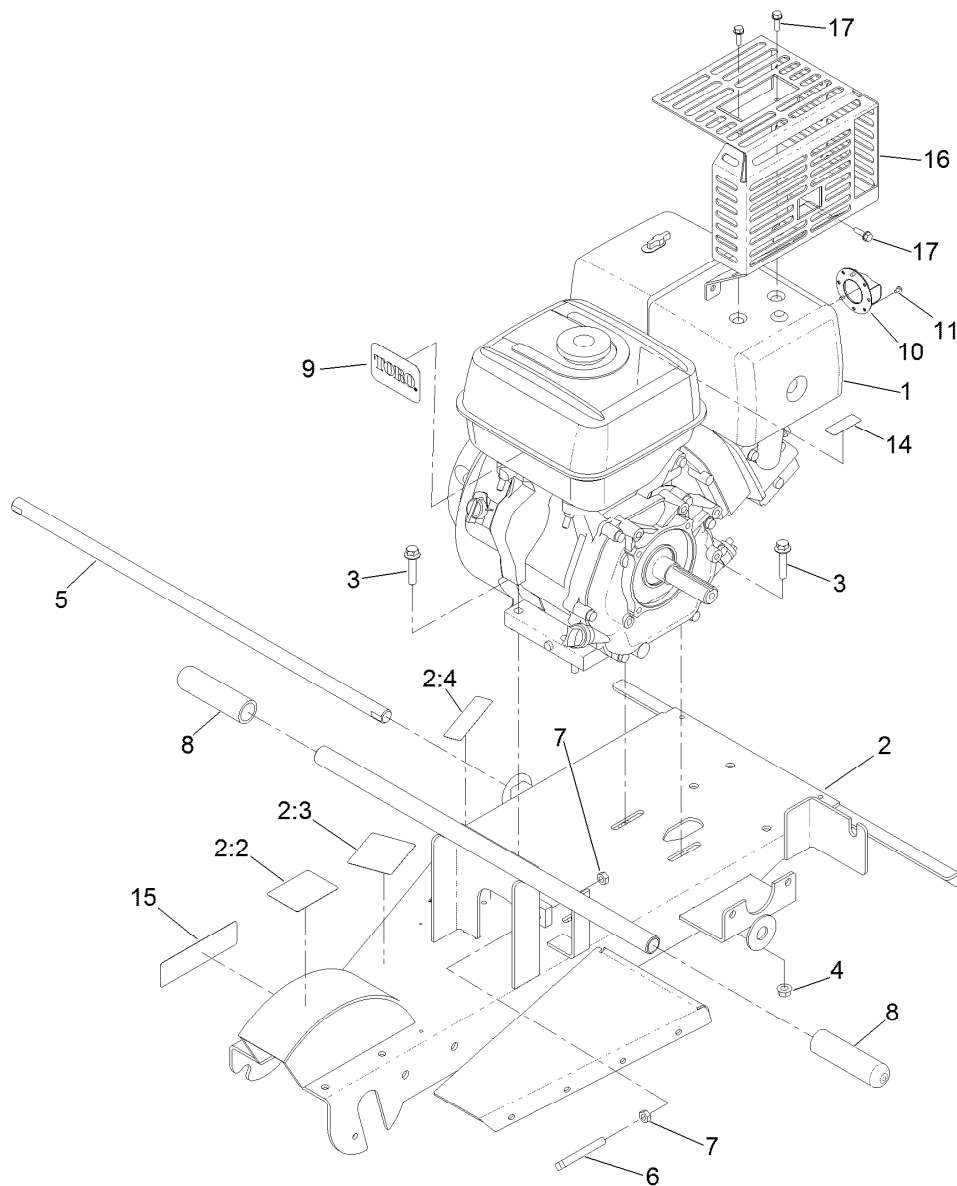


## Engine and Frame Assembly

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 1    |             | 1    | Engine-Honda, Gx390 ●■ |
| 2    | 132-3984    | 1    | Frame ASM              |
| 2:2  | 119-4690    | 1    | Decal-Danger           |
| 2:3  | 119-4693    | 1    | Decal-Caution          |
| 2:4  | 133-8056    | 1    | Decal-Arrester, Spark  |
| 3    | 3234-19     | 4    | Screw-HHF              |
| 4    | 32128-21    | 4    | Nut-HF Lock            |
| 5    | 120-1252    | 1    | Bar-Axle               |
| 6    | 119-4729    | 1    | Screw-Set, SQH         |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 7    | 3217-7      | 2    | Nut-Hex                  |
| 8    | 120-1333    | 2    | Grip-Handle              |
| 9    | 99-2385     | 1    | Decal                    |
| 10   | 120-1886    | 1    | Deflector-Exhaust, Honda |
| 11   | 125-0519    | 3    | Screw-Self Tapping       |
| 14   | 130-8322    | 1    | Decal-Warning, Ethanol   |
| 15   | 132-4004    | 1    | Decal-Rotate Tooth       |
| 16   | 137-0577-03 | 1    | Guard-Muffler, [black]   |
| 17   | 110-3986    | 4    | Screw                    |

● Not serviced separately


■ Obtain parts from [www.honda-engines.com](http://www.honda-engines.com)

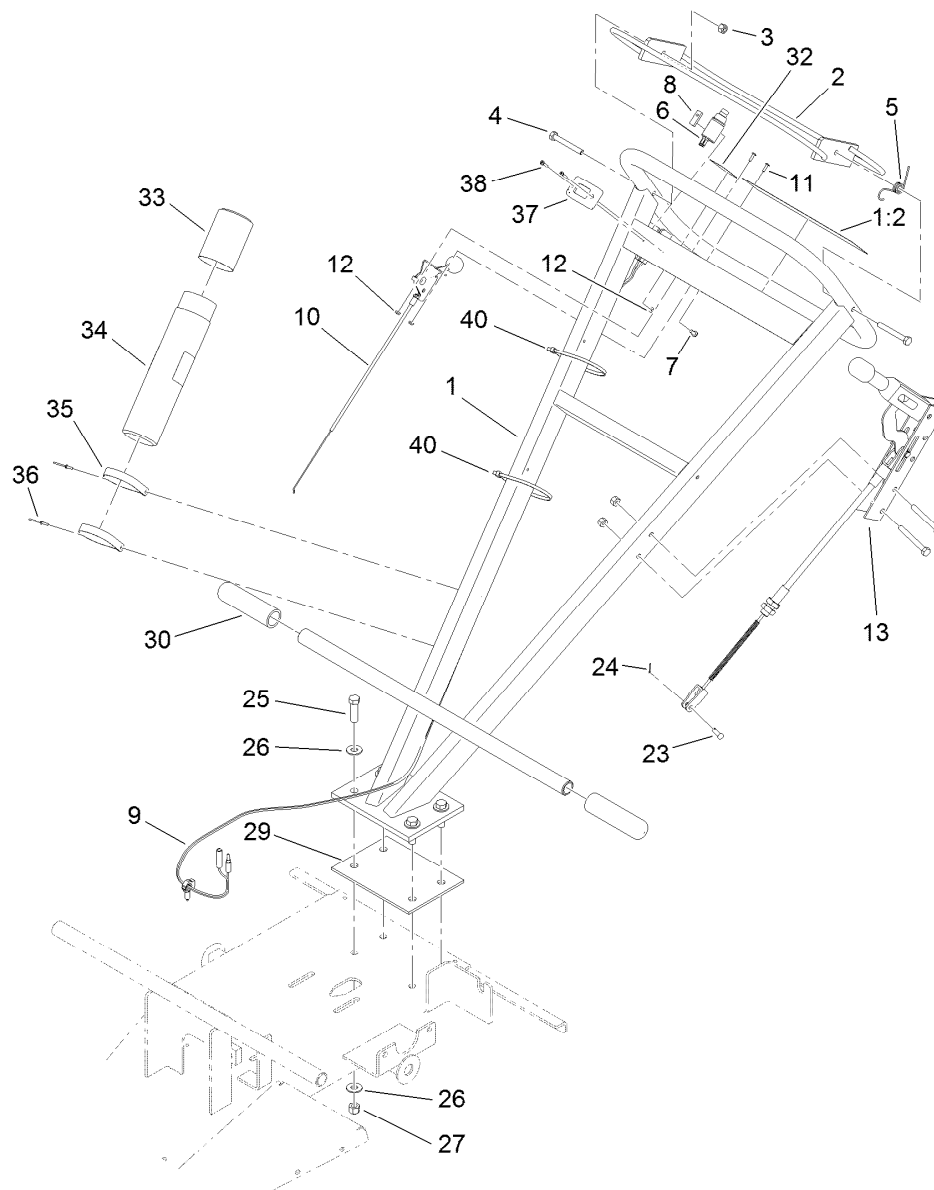

## Handle Assembly


| Ref. | Part Number | Qty. | Description                  |
|------|-------------|------|------------------------------|
| 1    | 121-4391    | 1    | Handle ASM                   |
| 1:2  | 119-4701    | 1    | Decal-Warning                |
| 2    | 119-4711-01 | 1    | Handle-Safety                |
| 3    | 3296-29     | 2    | Nut-Lock, NI                 |
| 4    | 322-12      | 2    | Screw-HH                     |
| 5    | 120-1291    | 1    | Spring-Return                |
| 6    | 120-1803    | 1    | Switch-Plunger, No (W/Cover) |
| 7    | 1-803071    | 2    | Screw                        |
| 8    | 1-633181    | 1    | Plate-Tapped                 |
| 9    | 120-1823    | 1    | Harness-Wire                 |
| 10   | 120-1285    | 1    | Cable-Throttle               |
| 11   | 3249-3      | 2    | Screw-PRH                    |
| 12   | 3296-9      | 2    | Nut-Hex                      |
| 13   | 120-1797    | 1    | Brake Lever ASM              |

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 23   | 1-808265    | 1    | Pin-Clevis          |
| 24   | 3272-1      | 1    | Pin-Cotter          |
| 25   | 324-6       | 4    | Screw-HH            |
| 26   | 3256-4      | 8    | Washer-Flat         |
| 27   | 3296-48     | 4    | Nut-Hex             |
| 29   | 120-1248    | 1    | Gasket-Handle       |
| 30   | 120-1333    | 2    | Grip-Handle         |
| 32   | 119-4721    | 1    | Decal-Engage        |
| 33   | 104-7048    | 1    | Cap-Housing         |
| 34   | 104-7050    | 1    | Tube-Manual         |
| 35   | 2412-120    | 2    | Clamp-R             |
| 36   | 3269-17     | 2    | Rivet-Pop           |
| 37   | 120-1218    | 1    | Hourmeter-Inductive |
| 38   | 3250-39     | 2    | Screw-PPH           |
| 40   | 3290-379    | 2    | Tie-Cable           |

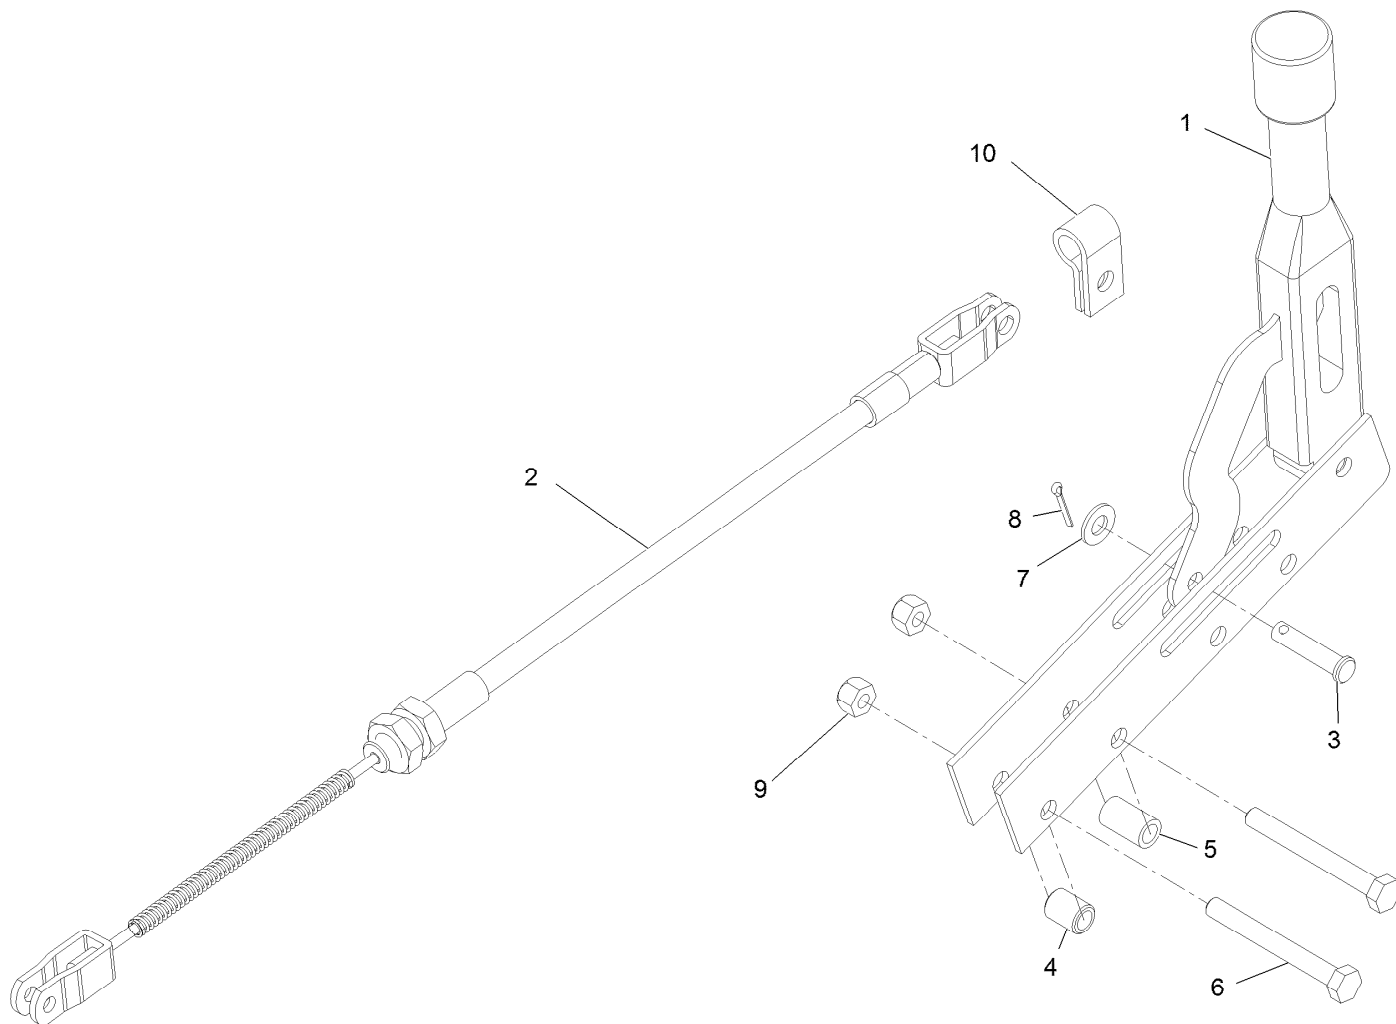


## Brake Lever Assembly No. 120-1797

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    | 120-1219    | 1    | Lever-Brake              |
| 2    | 120-1286    | 1    | Cable-Brake              |
| 3    | 283-14      | 1    | Pin-Clevis 5/16 X 1 3/8  |
| 4    | 88-7450     | 1    | Spacer-Lever, Control    |
| 5    | 115-0826    | 1    | Spacer-Idler             |
| 6    | 322-13      | 2    | Screw-HH 5/16-18 X 2 3/4 |
| 7    | 3256-23     | 1    | Washer-5/16 SAE          |
| 8    | 3272-6      | 1    | Pin-Cotter               |
| 9    | 3296-29     | 2    | Nut-Nyloc 5/16-18        |
| 10   | 120-1798    | 1    | Clamp-Conduit            |

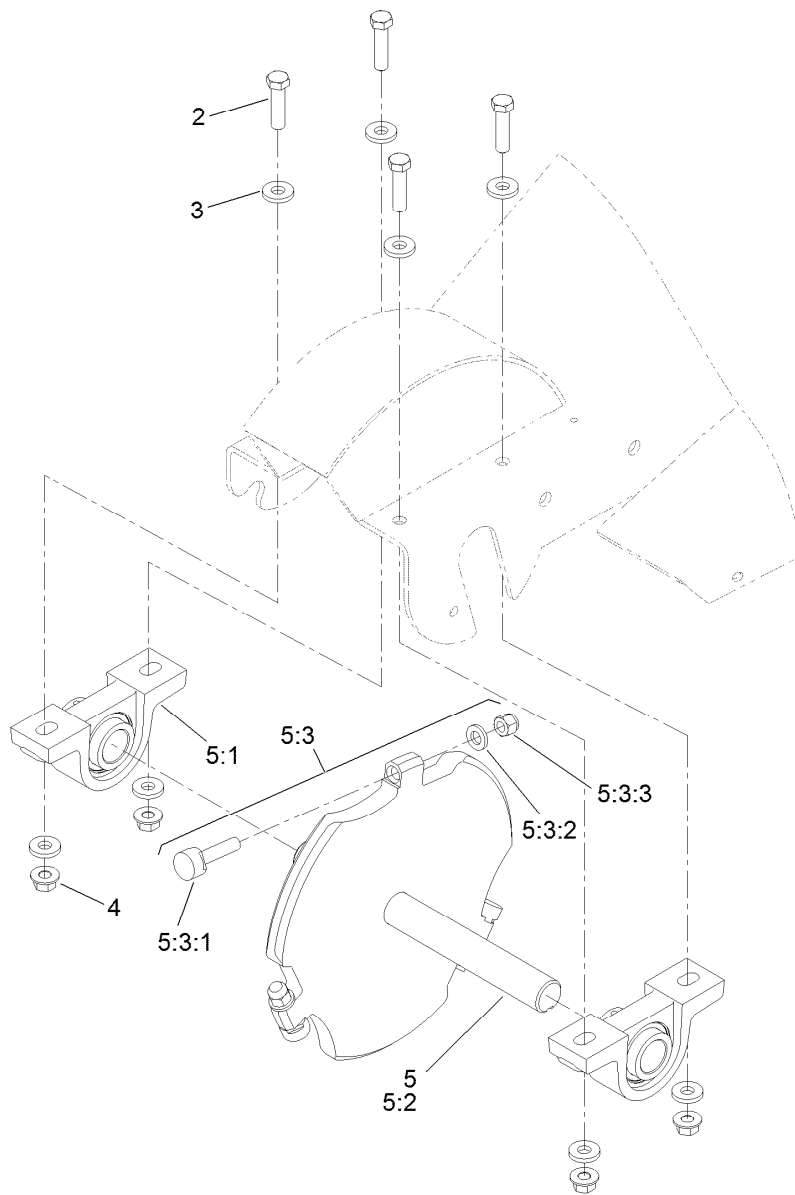

## Cutter Wheel Assembly


| Ref.  | Part Number | Qty. | Description                |
|-------|-------------|------|----------------------------|
| 2     | 3211-41     | 4    | Screw-HH                   |
| 3     | 71-9310     | 8    | Spacer                     |
| 4     | 127-6852    | 4    | Nut-Flange, Lock           |
| 5     | 136-1441    | 1    | Wheel And Bearings Kit     |
| 5:1   | 120-1211    | 2    | Bearing ASM                |
| 5:2   | 132-3991    | 1    | 3 Tooth Wheel/Shaft        |
| 5:3   | 132-4007    | 1    | Grinder Tooth Kit (3-Pack) |
| 5:3:1 | 130-2224    | 3    | Tooth-Grinder              |
| 5:3:2 | 107-1413    | 3    | Washer-Hardened            |
| 5:3:3 | 112-0236    | 3    | Nut-Lock                   |

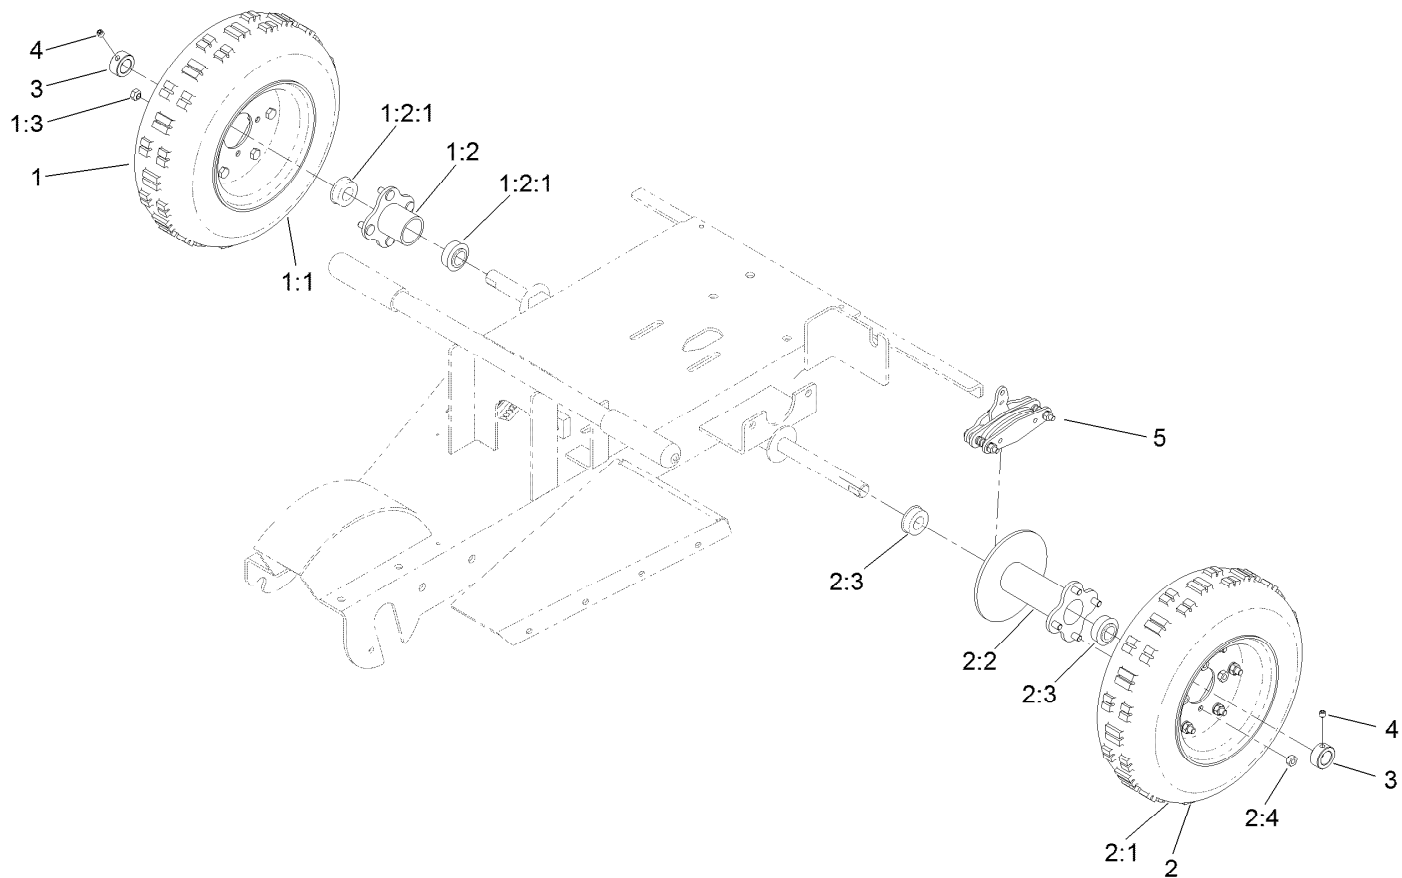

## Wheel and Brake Assembly


| Ref.  | Part Number | Qty. | Description                 |
|-------|-------------|------|-----------------------------|
| 1     | 120-1216    | 1    | Tire ASM (W/ Hub)           |
| 1:1   | 120-1287    | 1    | Tire ASM                    |
| 1:2   | 120-1295    | 1    | Hub                         |
| 1:2:1 | 120-1296    | 2    | Bearing-Wheel               |
| 1:3   | 120-1304    | 4    | Nut-Wheel                   |
| 2     | 120-1214    | 1    | Tire ASM (W/ Hub And Brake) |
| 2:1   | 120-1287    | 1    | Tire ASM                    |
| 2:2   | 120-1297    | 1    | Hub                         |
| 2:3   | 120-1296    | 2    | Bearing-Wheel               |
| 2:4   | 120-1304    | 4    | Nut-Wheel                   |
| 3     | 120-1294    | 2    | Collar-Set                  |
| 4     | 3246-2      | 2    | Screw-Set, HSH ●            |
| 5     | 120-1773    | 1    | Brake-Caliper               |

● Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on threads.

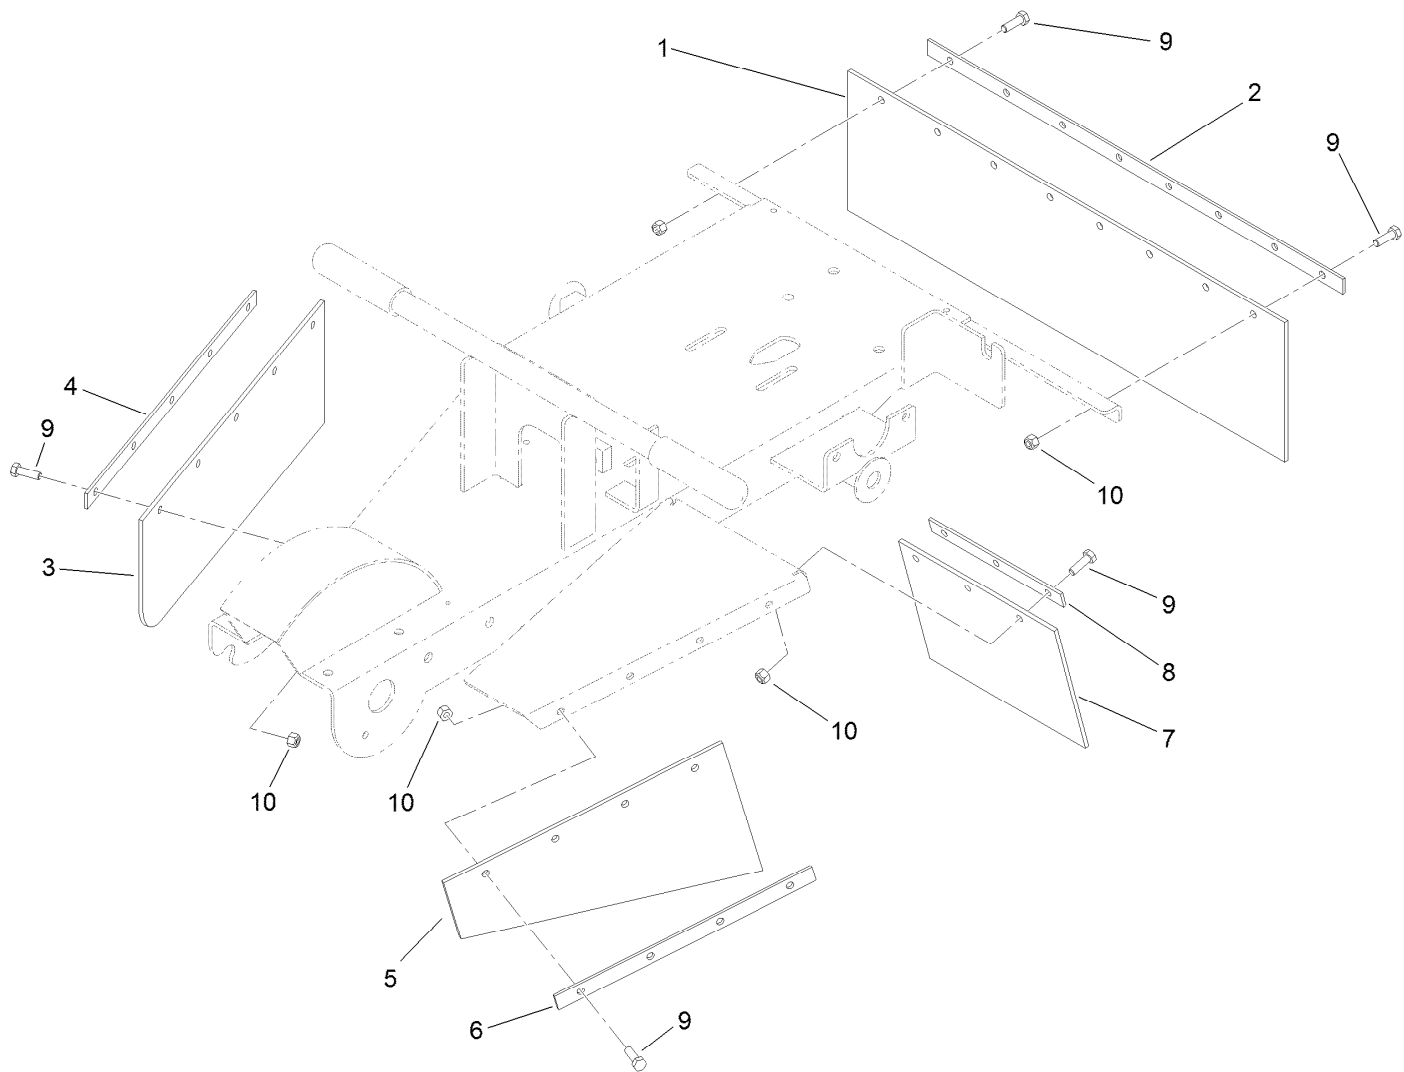

## Flap Assembly

| Ref. | Part Number | Qty. | Description                |
|------|-------------|------|----------------------------|
| 1    | 120-1236    | 1    | Flap-Rear                  |
| 2    | 120-1238-01 | 1    | Plate-Mounting, Flap       |
| 3    | 120-1240    | 1    | Flap-RH                    |
| 4    | 120-1241-01 | 1    | Bracket-Support, Flap (RH) |
| 5    | 120-1242    | 1    | Flap-LH                    |
| 6    | 120-1243-01 | 1    | Bracket-Support, Flap (LH) |
| 7    | 120-1244    | 1    | Flap-Small                 |
| 8    | 120-1246-01 | 1    | Bracket-Support, Flap      |
| 9    | 322-5       | 20   | Screw-HH                   |
| 10   | 3296-29     | 20   | Nut-Lock, NI               |

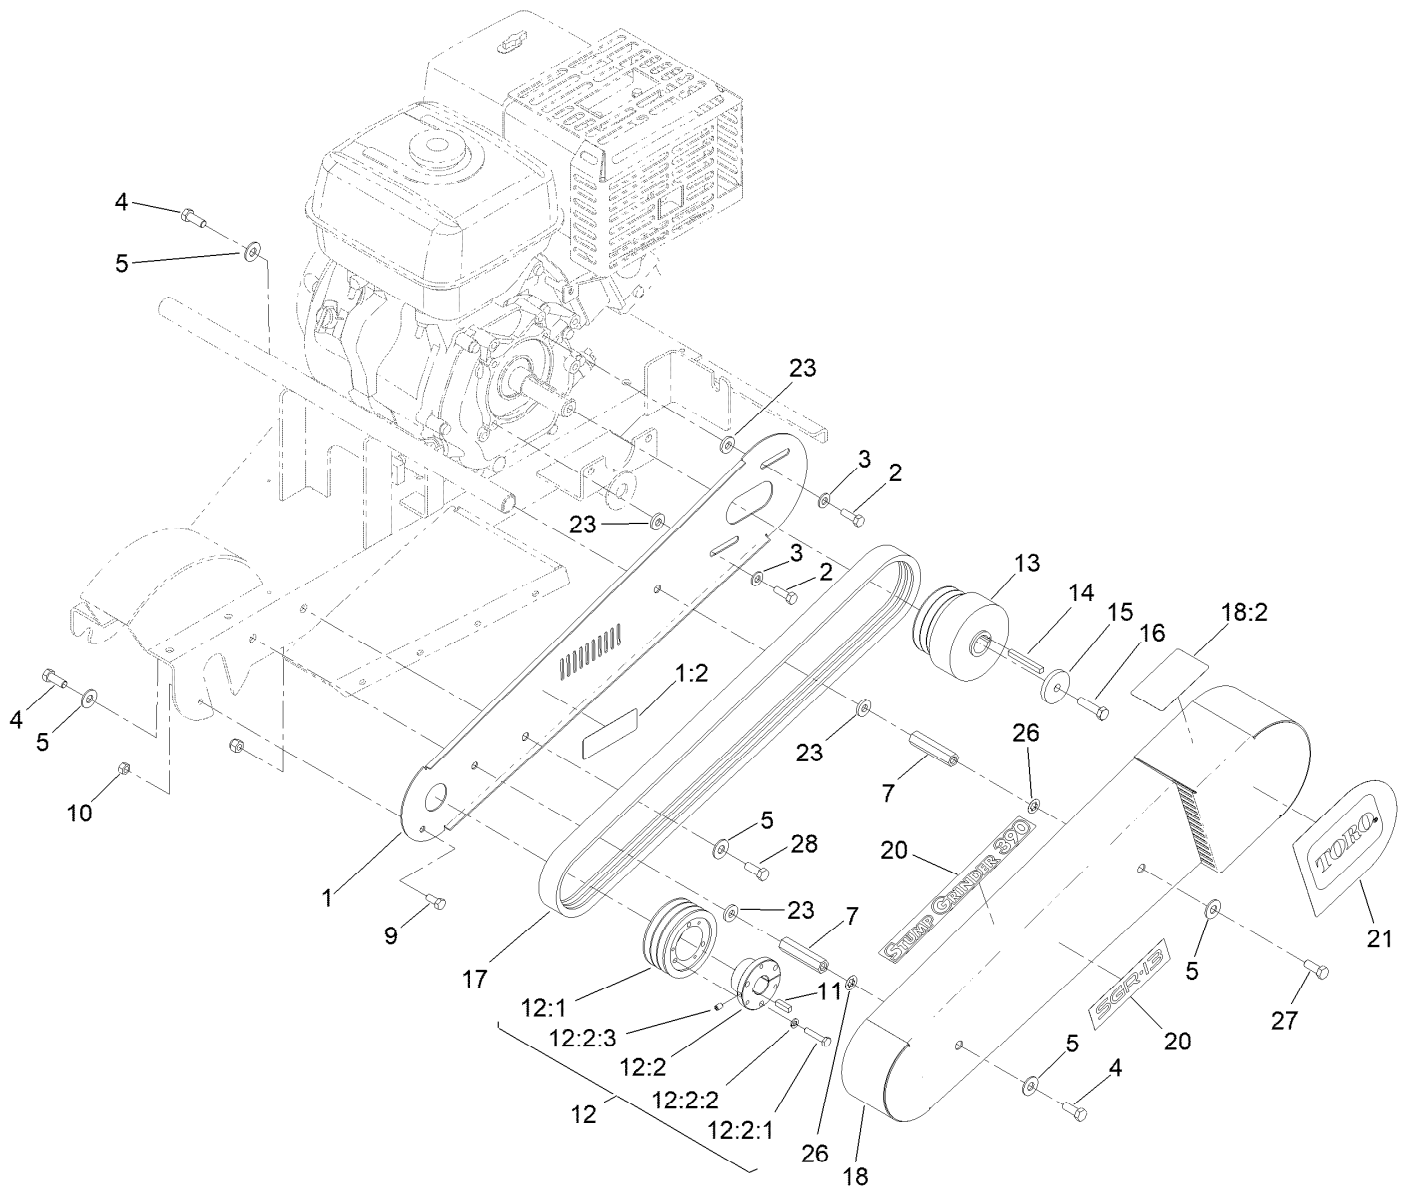

## Belt Drive Assembly

| Ref.   | Part Number | Qty. | Description     |
|--------|-------------|------|-----------------|
| 1      | 121-4413    | 1    | Plate-Guard     |
| 1:2    | 117-4979    | 1    | Decal-Warning   |
| 2      | 131-5919    | 2    | Screw-HH, Patch |
| 3      | 3256-38     | 2    | Washer-Flat     |
| 4      | 323-6       | 3    | Screw-HH        |
| 5      | 3256-4      | 4    | Washer-Flat     |
| 7      | 120-1234    | 2    | Spacer-Guard    |
| 9      | 322-3       | 1    | Screw-HH        |
| 10     | 3217-6      | 1    | Nut-Hex         |
| 11     | 10-7070     | 1    | Key-Square      |
| 12     | 120-1298    | 1    | Sheave ASM      |
| 12:1   | 95-0883     | 1    | Pulley          |
| 12:2   | 61-3340     | 1    | Bushing         |
| 12:2:1 | 321-13      | 3    | Screw-HH        |
| 12:2:2 | 3253-2      | 3    | Washer-Lock     |

| Ref.   | Part Number | Qty. | Description    |
|--------|-------------|------|----------------|
| 12:2:3 | 3245-2      | 1    | Screw-Set, HSH |
| 13     | 120-1204    | 1    | Clutch         |
| 14     | 63-8150     | 1    | Key-Square     |
| 15     | 110-9981    | 1    | Washer-Plain   |
| 16     | 3211-6      | 1    | Screw-HH ●     |
| 17     | 120-1203    | 1    | Belt-3V        |
| 18     | 121-4414    | 1    | Belt Guard ASM |
| 18:2   | 119-4692    | 1    | Decal-Caution  |
| 20     | 120-1816    | 1    | Decal          |
| 21     | 119-4724    | 1    | Decal          |
| 23     | 43-0940     | 4    | Spacer         |
| 26     | 107-3154    | 2    | Nut-Push       |
| 27     | 323-6       | 1    | Screw-HH       |
| 28     | 126-4246    | 1    | Screw-HH       |

● Use Pro-Lock retaining type, Part no. 1-840023 (.5cc tube) on threads.

# Attachments and Accessories

## For 22619 SGR-13 Stump Grinder

| Product Name                | Model/Part |
|-----------------------------|------------|
| Wheel Tooth Kit.....        | 132-4006   |
| 3-Pack Wheel Tooth Kit..... | 132-4007   |
| 6-Pack Wheel Tooth Kit..... | 132-4008   |



**Count on it.**