



Mid–Size Mower

ProLine Hydro with 36in. Side Discharge Mower

Model No. 30335—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Engine and Clutch Assembly	3	Spindle Housing Assembly No. 104–6317	14
Clutch Assembly No. 54–3200	4	Carrier Frame Assembly	15
Fuel Tank, Hydraulic Tank, Pump and Filter Assembly	5	Crankcase Assembly	16
Wheel Motors, Pump Belt and Pump Idler Assembly	6	Oil Pan and Lubrication Assembly	17
Lower Control Assembly	7	Cylinder Head, Valve And Breather Assembly .	18
Hydraulic Hose Assembly	8	Ignition and Electrical Assembly	19
Upper Handle Assembly	9	Blower Housing And Baffle Assembly	20
Control Panel Assembly	10	Starter Assembly	21
Deck Assembly	11	Fuel System Assembly	22
Spindle, Pulley and Belt Assembly	12	Engine Control Assembly	23
Spindle Housing Assembly No. 104–6315	13	Air Cleaner Assembly	24
		Exhaust Assembly	25
		Electrical Schematic	26


Accessories

Description	Model / Part No.	Description	Model / Part No.
Electric Start Kit	104–8580	36"/44"/52"/62" Soft Bagger	30104
Parking Brake ASM Kit	105–0898	36"/44"/52"/62" Steel Bagger	30107
Mid–Size Sully	30123	Blade Assembly–Atomic 18	104–1301
ProLine Mid–Size Platform Sully	30110	Blade	56–2390

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

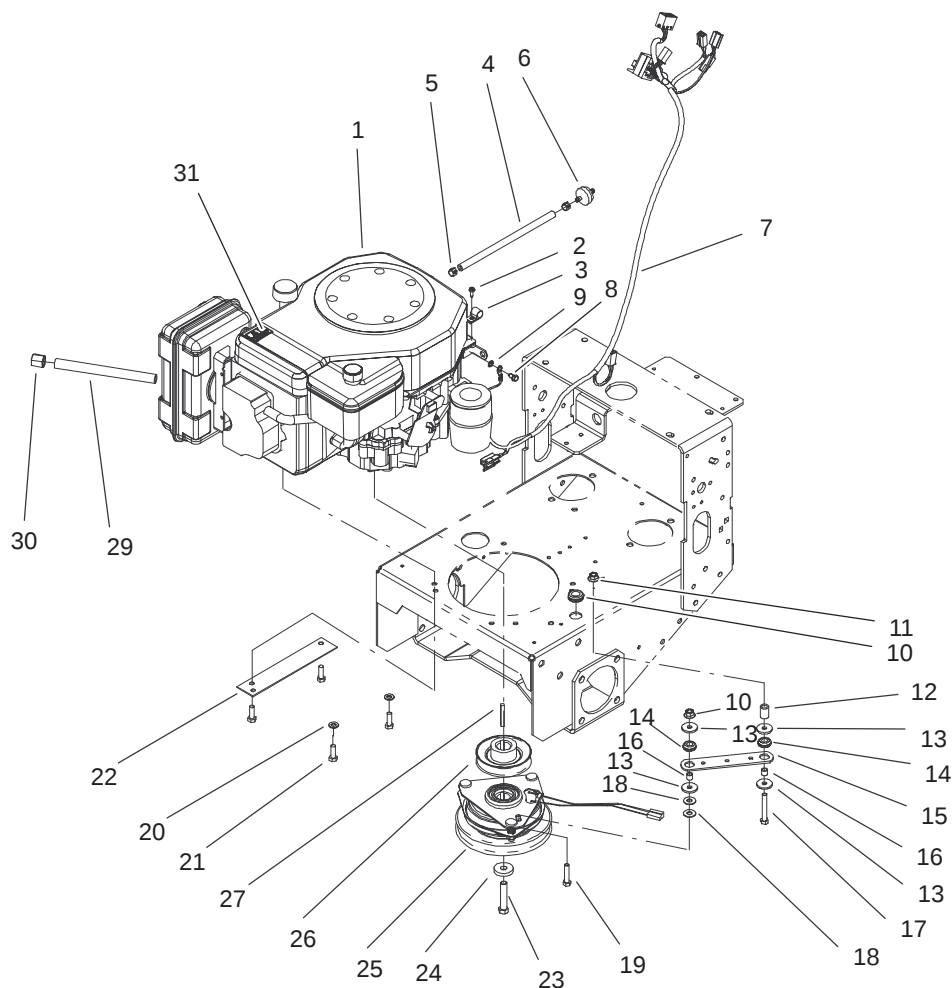


Sheet No.: 2

Engine and Clutch Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
☆1		1	Engine-Kohler, Cv15t-41604	25	54-3200	1	Clutch/Brake
2	32144-19	1	Screw-Forming, Thread	26	44-5940	1	Pulley
3	2412-87	1	Clamp-Cable	27	608006	1	Key
4	47-2982	1	Hose-Gas	29	105-2624	1	Pipe-Nipple
5	2412-98	2	Clamp	30	288-10	1	Cap-Pipe
6	56-6360	1	Filter-Fuel	31	63-8440	1	Decal-Surface, Hot
7	104-9821	1	Harness-Wire				
8	12-3270	1	Screw				
9	3255-7	1	Washer-Lock/Ext				
10	237-124	1	Grommet				
11	32128-20	2	Nut-HF				
12	104-6373	1	Tube - Retainer				
13	1-613235	4	Washer				
14	1-633630	2	Grommet-Brake				
15	1-633543	1	Strap-Clutch/Brake				
16	1-633545	2	Spacer-Grommet				
17	322-11	1	Screw-HH				
18	3256-3	2	Washer-Flat				
19	322-7	1	Screw-HH				
20	3256-23	2	Washer-Flat				
21	33114-025	4	Screw-HH				
22	94-5847-01	1	Cover - Pulley				
23	3212-9	1	Screw-HH				
24	112843	1	Washer				

☆ Not serviced

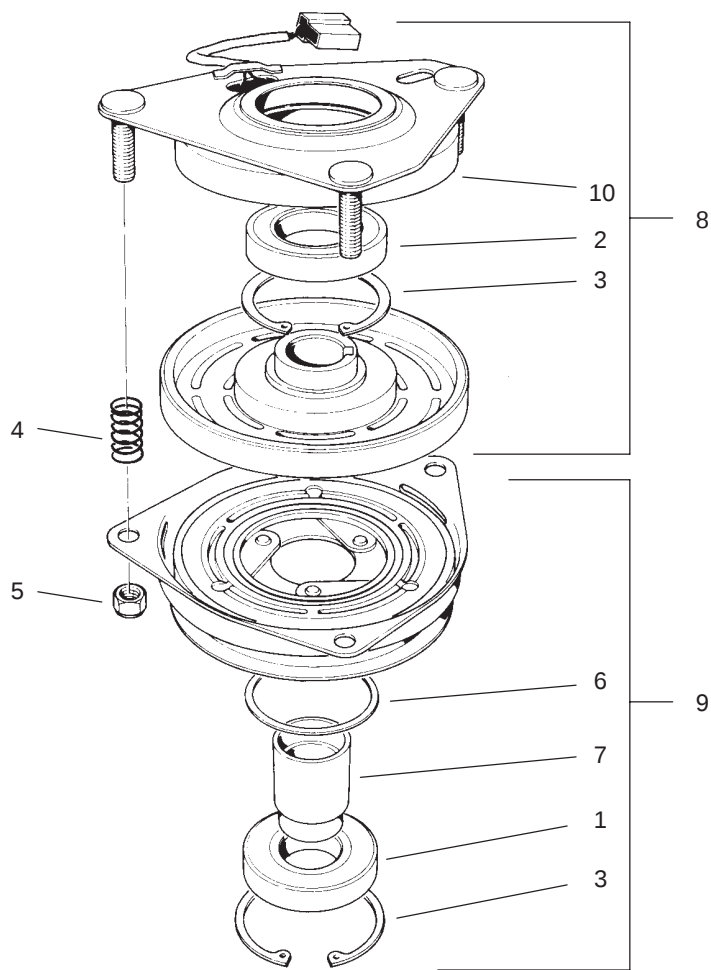


Sheet No.: A1
T-3726

Clutch Assembly No. 54-3200

Ref. No.	Part No.	Qty.	Description
1	251-291	1	Bearing-Pulley
2	251-292	1	Bearing-Field
3	44-8310	2	Ring-Retaining
4	44-8320	3	Spring
5	3296-6	3	Nut-Lock, NI
6	44-8330	1	Spacer-Bearing, Pulley
7	44-8340	1	Collar-Bearing
8	44-8360	1	Field Coil-Rotor / Bearing ASM
9	44-8370	1	Armature / Pulley / Bearing ASM
10	54-0230	1	Field Bearing ASM


Ref. No.	Part No.	Qty.	Description

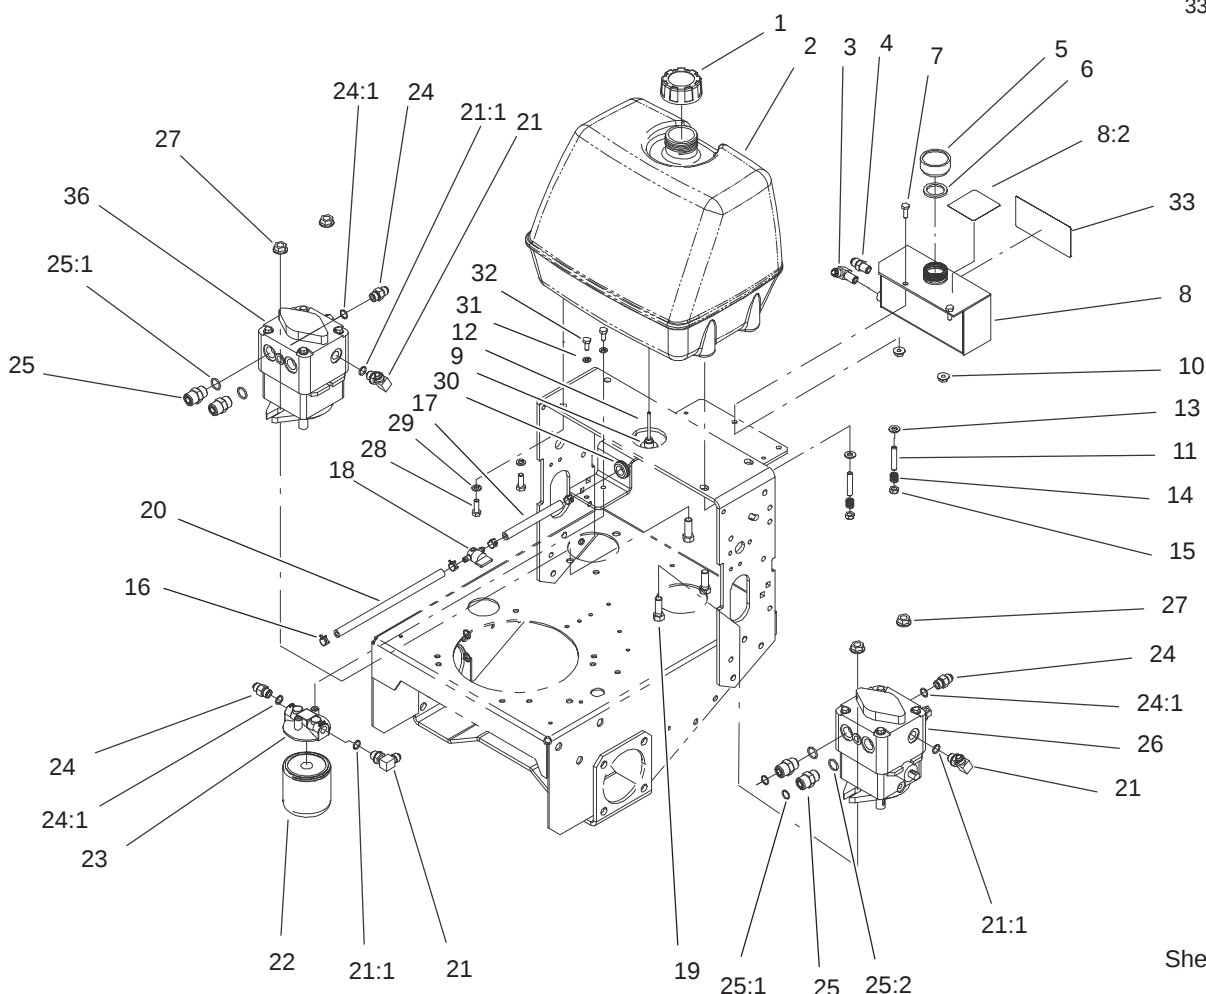

Sheet No.: 4

Fuel Tank, Hydraulic Tank, Pump and Filter Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	55-3570	1	Gas Cap ASM	24	353-384	3	Fitting-Straight
2	1-323551	1	Tank-Fuel	24:1	237-42	1	O-Ring
3	1-603988	1	Fitting-Elbow	25	340-4	4	Adapter
4	1-513510	1	Fitting-Straight	25:1	237-30	1	O-Ring
5	1-513167	1	Cap	25:2	237-79	1	O-Ring
6	1-523103	1	Gasket-Cap, Tank	26	104-1167	1	Pump-Hydraulic
7	321-4	2	Screw-HH	27	32128-42	4	Nut-HF
8	99-4625	1	Hydraulic Tank ASM	28	322-4	2	Screw-HH
8:2	1-523552	1	Decal-Tank, Hydraulic	29	3253-4	2	Washer-Lock
9	1-513645	1	Bushing-Valve, Fuel	30	237-124	1	Grommet
10	32128-33	2	Nut-HF	31	3253-3	2	Washer-Lock
11	104-8121	2	Stud-Threaded	32	321-3	2	Screw-HH
12	1-543277	1	Elbow-Tank, Fuel	33	104-8172	1	Decal-Mobil 1
13	3256-23	4	Washer-Flat	36	105-4101	1	Pump-Hydraulic
14	1-633349	2	Spring-Tank, Fuel				
15	3296-47	2	Nut-Lock, NI				
16	2412-98	4	Clamp				
17	47-2966	1	Hose-Gas				
18	1-603770	1	Valve-Fuel				
19	324-5	4	Screw-HH				
20	47-2982	1	Hose-Gas				
21	105-0858	3	Fitting-90°				
21:1	237-42	1	O-Ring				
22	1-633750	1	Filter-HYD				
22	1-633752	1	Filter-HYD, Winter				
23	104-7836	1	Head - Filter				

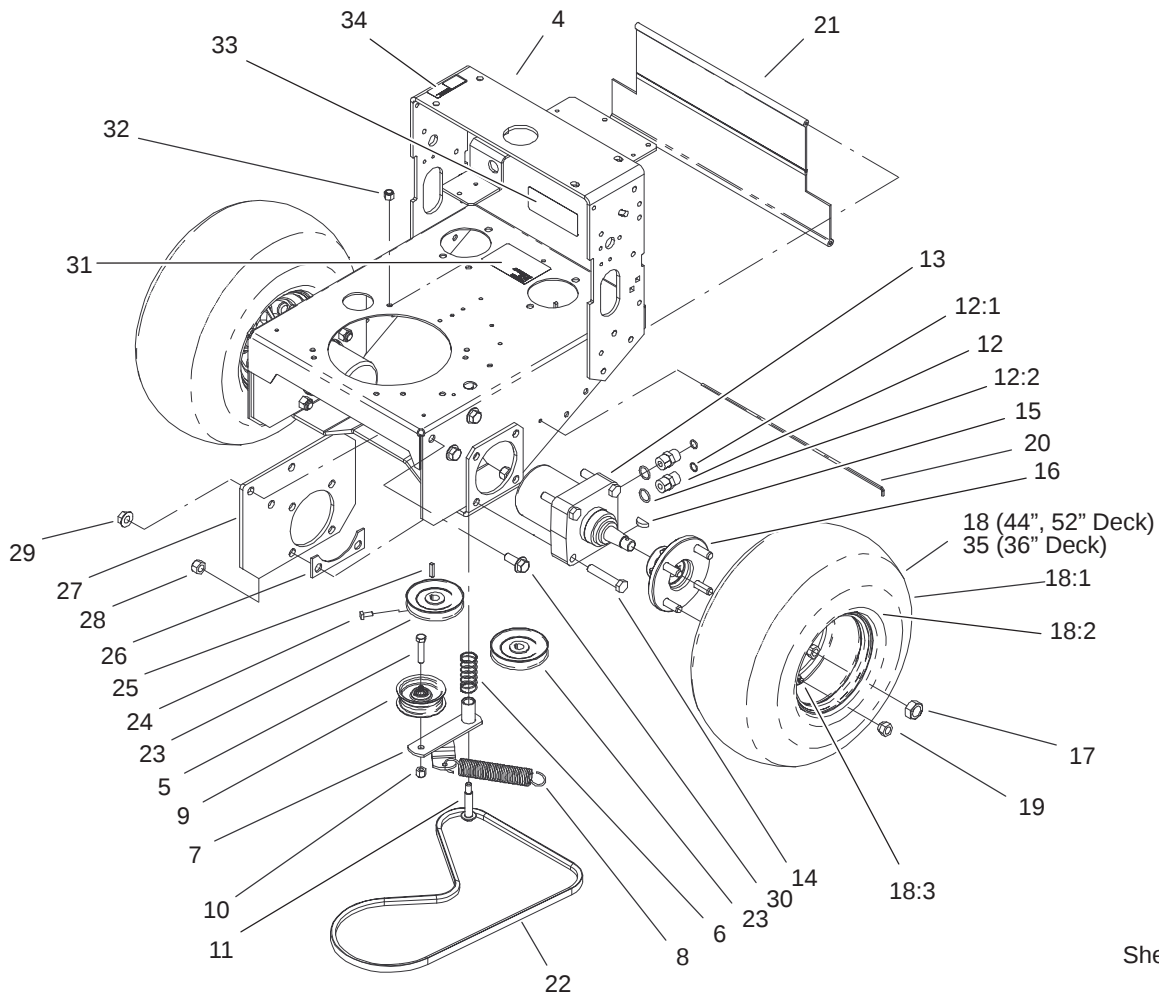


Sheet No.: 5

Wheel Motors, Pump Belt and Pump Idler Assembly

Ref. No.	Part No.	Qty.	Description
4	104-1100-01	1	Frame ASM
5	323-9	1	Screw-HH
6	88-1880	1	Spring-Compression
7	86-4770	1	Idler Lever ASM
8	68-2190	1	Spring
9	62-4540	1	Pulley
10	3296-39	1	Nut-Lock, NI
11	27-6230	1	Bolt-Wheel
12	340-6	4	Fitting-Straight, HYD
12:1	237-30	1	O-Ring
12:2	237-80	1	O-Ring
13	104-1171	2	Motor-Wheel
14	325-11	8	Screw-HH
15	80-6090	2	Key - Pump
16	105-0800	2	Wheel Hub/Stud ASM
17	85-7310	2	Nut-Motor, Wheel
18	104-1198	2	Wheel And Tire ASM
18:1	104-6320	1	Tire
18:2	104-1199	1	Wheel
18:3	232-27	1	Stem-Valve
19	242-50	8	Nut-Lug
20	95-1529	1	Rod-Shield
21	95-1526	1	Shield-Trailing
22	82-4110	1	V-Belt
23	95-1528	2	Pulley - Pump
24	3241-5	4	Screw-Set


Ref. No.	Part No.	Qty.	Description
25	3257-8	2	Key-Woodruff
26	86-4740-01	2	Spacer - Frame
27	104-6326-01	2	Plate-Frame
28	3296-23	8	Nut-Lock, NI
29	32128-23	6	Nut-HF
30	3234-32	6	Screw-HHF
31	95-1543	1	Decal-Adjustment, Valve
32	3296-6	1	Nut-Lock, NI
33	98-0776	1	Decal-Caution
34	95-2814	1	Decal-Shut Off, Fuel
35	104-6321	2	Wheel And Tire ASM

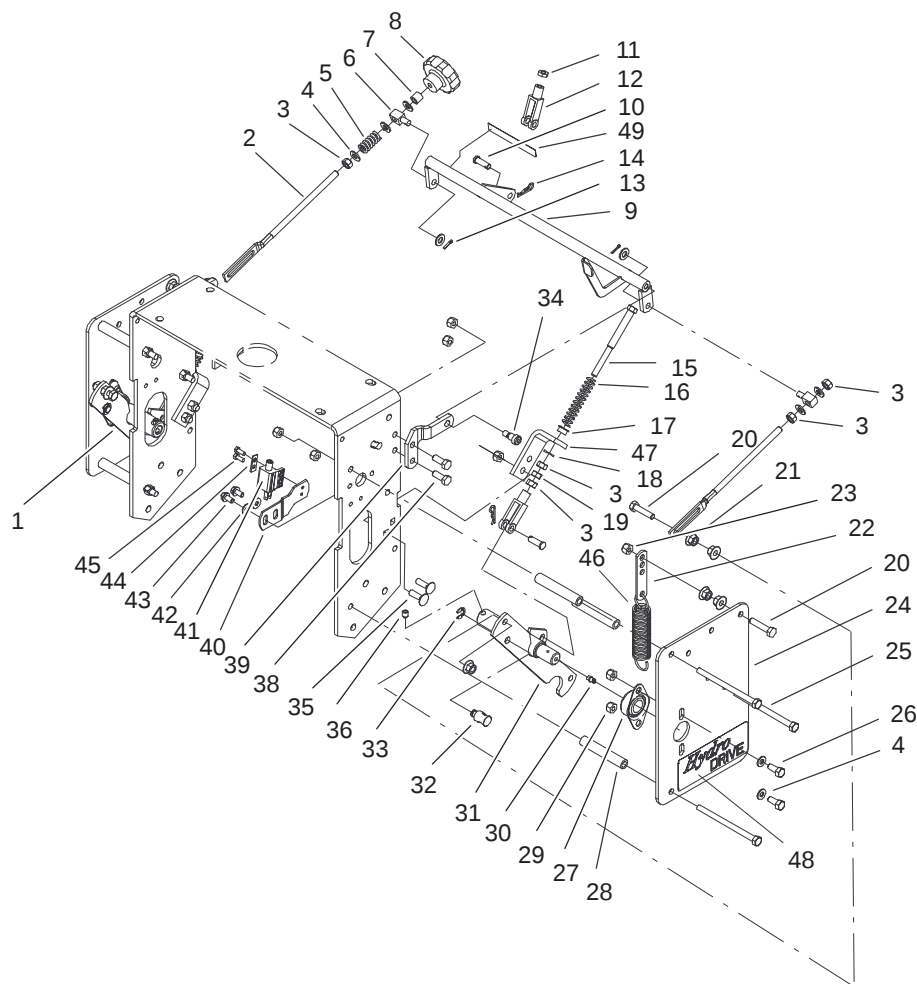

Sheet No.: 6

Lower Control Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-9810	1	Shaft Control ASM-RH	26	322-3	4	Screw-HH
2	1-413350	2	Link,Speed Control	27	1-633102	2	Bearing-Flange, Side
3	3219-2	7	Nut-Hex	28	104-9820	6	Spacer-Shield
4	3256-23	13	Washer-Flat	29	3296-29	18	Nut-Lock NI
5	1-323245	2	Spring-Compression	30	302-5	2	Fitting-Grease
6	1-603676	2	Swivel,Short Adjustable	31	104-9815	1	Shaft Control ASM-LH
7	1-603903	1	Spacer	32	103-1235	2	Swivel-Drive Lever
8	1-413151	1	Knob,Tracking	33	32151-47	2	Ring-Retaining
9	104-9807-01	1	Crank-Speed Control	34	1-809056	2	Screw
10	1-808280	3	Pin-Clevis	35	3230-2	4	Screw-CARR
11	3220-2	3	Nut	36	3246-3	4	Screw-HS
12	1-303105	3	Yoke-Adjustable	38	322-4	4	Screw-HH
13	3272-5	2	Pin-Cotter	39	104-9827-01	1	Crank Support ASM
14	3290-307	3	Pin-Hair	40	104-9836-01	1	Bracket-Neutral
15	1-603737	2	Bolt-Return, Neutral	41	95-1653	1	Switch - Single Pole
16	1-603807	2	Spring-Return, Neutral	42	3256-1	4	Washer-Flat
17	1-603735	2	Bushing-Flanged	43	32144-4	4	Screw-HWH
20	1-403180	4	Screw-HH	44	82-4570	1	Plate-Switch
21	32128-20	10	Nut-HF	45	32144-1	4	Screw-Taptite
22	1-613089	2	Tab, Spring Extension	46	1-603693	2	Spring,Extension
23	32128-25	2	Nut-Flange	47	104-9802-01	2	Bracket-Spring Mount
24	104-9817-01	2	Plate-Side, Hydro	48	82-4600	2	Decal-Hydro
25	322-38	6	Screw-HH	49	105-4109	1	Decal-Tracking

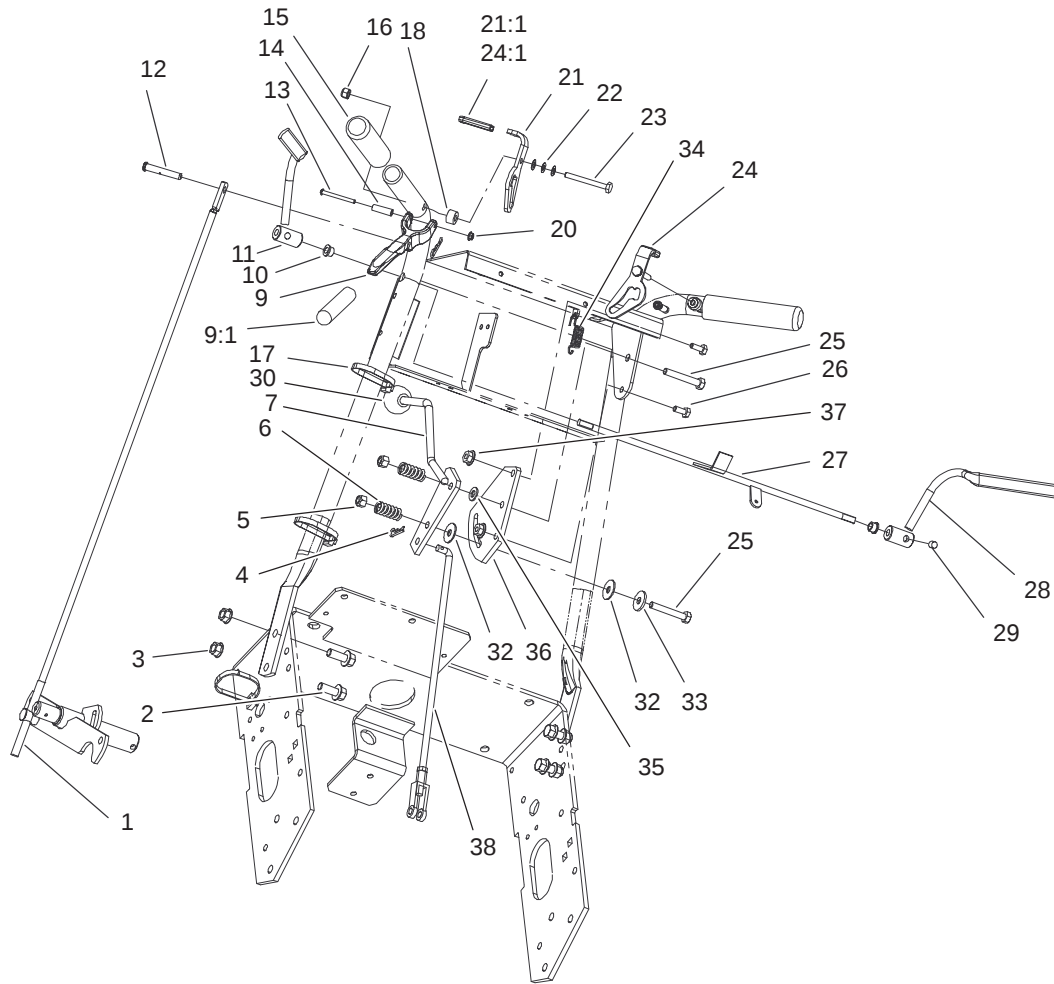

Sheet No.: 8

Upper Handle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	1-413219	2	Rod-Drive Lever	26	321-3	2	Screw-HH
2	3234-11	4	Screw-HHF	27	104-9803	1	Rod ASM
3	32128-21	4	Nut-HF	28	1-412185-03	1	Lever-RH
4	3290-307	3	Pin-Hair	29	1-803322	2	Screw-Set
5	3296-29	2	Nut-Lock NI	30	233-42	1	Knob
6	1-323245	2	Spring-Compression	32	1-323244	2	Washer-Friction
7	1-602733	1	Lever - Shift	33	1-603716	1	Washer-Friction
9	1-302006	2	Drive Lever ASM	34	1-303363	1	Spring-Extension
9:1	1-303021	1	Grip-Lever, Drive	35	3256-23	1	Washer-Flat
10	1-303365	2	Bushing-Nylon	36	1-603730	1	Plate-Shifter Lever
11	1-412183-03	1	Lever-LH	37	32128-33	2	Nut-HF
12	1-808286	2	Pin-Clevis	38	105-4103	1	Rod-Speed Control
13	1-808250	2	Pin-Clevis				
14	1-806340	2	Pin-Roll				
15	104-9838	2	Grip-Foam				
16	3296-42	4	Nut-Lock, NI				
17	3290-378	3	Tie-Cable				
18	1-323549	2	Spacer				
20	1-803001	2	Nut				
21	104-6261	1	Thumb Latch ASM, LH				
21:1	1-303019	1	Grip-Latch				
22	1-303435	6	Washer-Spring				
23	321-18	2	Screw-HH				
24	104-6262	1	Thumb Latch ASM, RH				
24:1	1-303019	1	Grip-Latch				
25	322-11	2	Screw-HH				

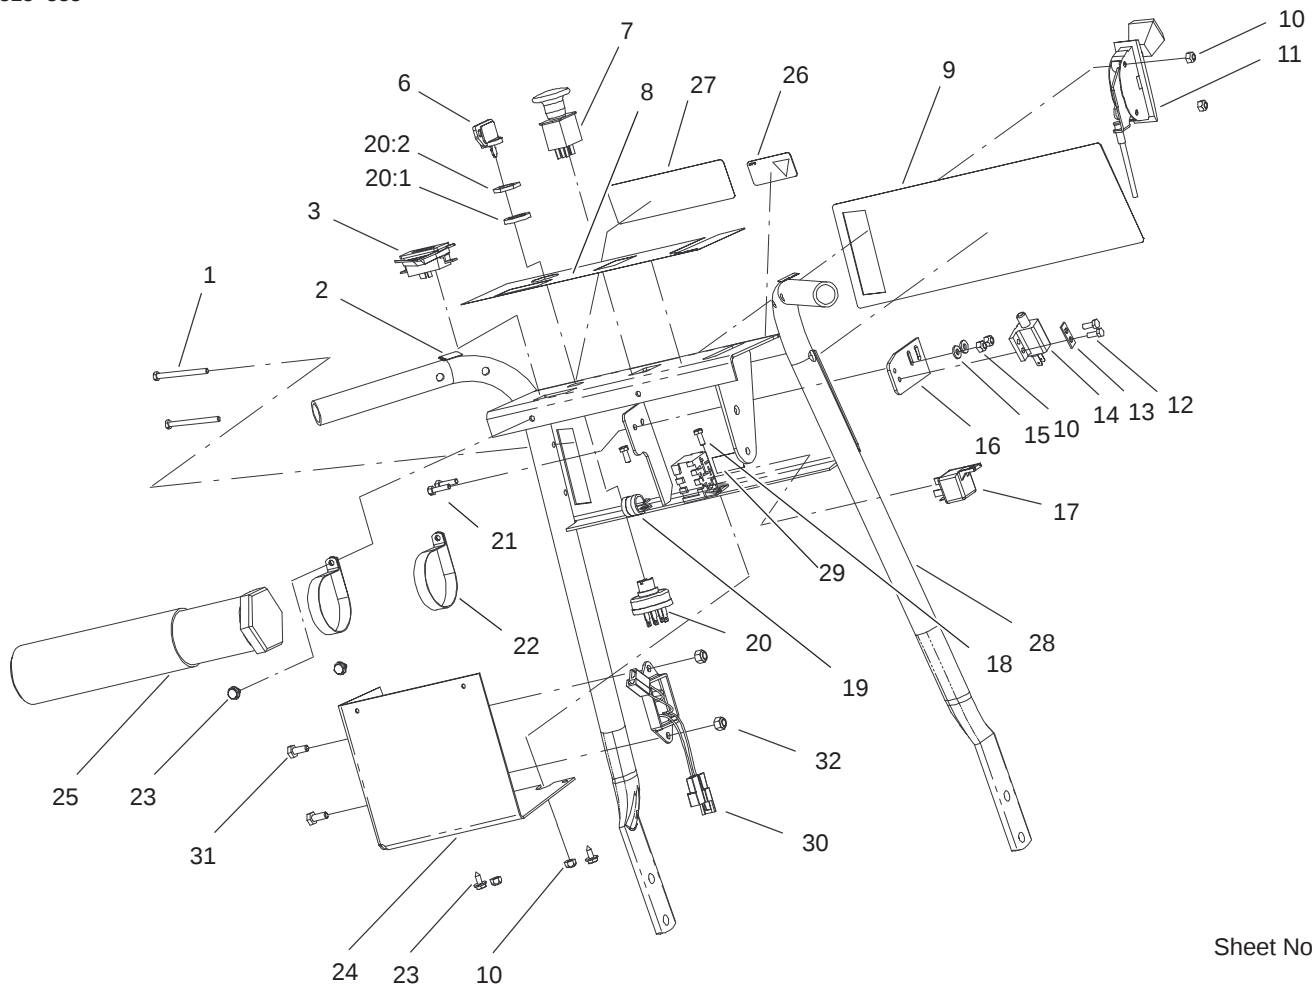


Sheet No.: 9

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	32105-14	2	Screw
2	105-4110	2	Decal-Neutral Lock
3	104-8143	1	Hourmeter
6	63-8360	1	Key-Ignition
7	95-7489	1	Switch - PTO
8	105-4106	1	Decal-Warning
9	105-4108	1	Decal-Proline
10	3296-2	6	Nut-Lock
11	105-4114	1	Control-Throttle
12	32144-1	2	Screw-Taptite
13	82-4570	1	Plate-Switch
14	95-1653	1	Switch - Single Pole
15	3256-14	2	Washer-Flat
16	105-4137-03	1	Plate-Switch Mounting
17	105-4145	1	Relay - S.p.d.t.
18	3290-321	2	Screw-HWH
19	2412-134	1	R-Clamp
20	29-5560	1	Switch-On Off
20:1	218-461	1	Nut-HH
20:2	3254-5	1	Washer-Lock, Internal
21	32105-13	2	Screw-SHH
22	2412-120	2	R-Clamp
23	32104-76	4	Screw
24	105-4112-03	1	Bracket-Cover
25	74-0720	1	Tube-Manual
26	98-4387	1	Decal-Protection, Ear


Ref. No.	Part No.	Qty.	Description
27	82-4590	1	Decal - Warning
28	105-4139	1	Handle ASM
29	105-4146	1	Decal-Relay 24 Volt
30	105-4608	1	Module-Filter
31	321-3	2	Screw-HH
32	3296-42	2	Nut-Lock, NI

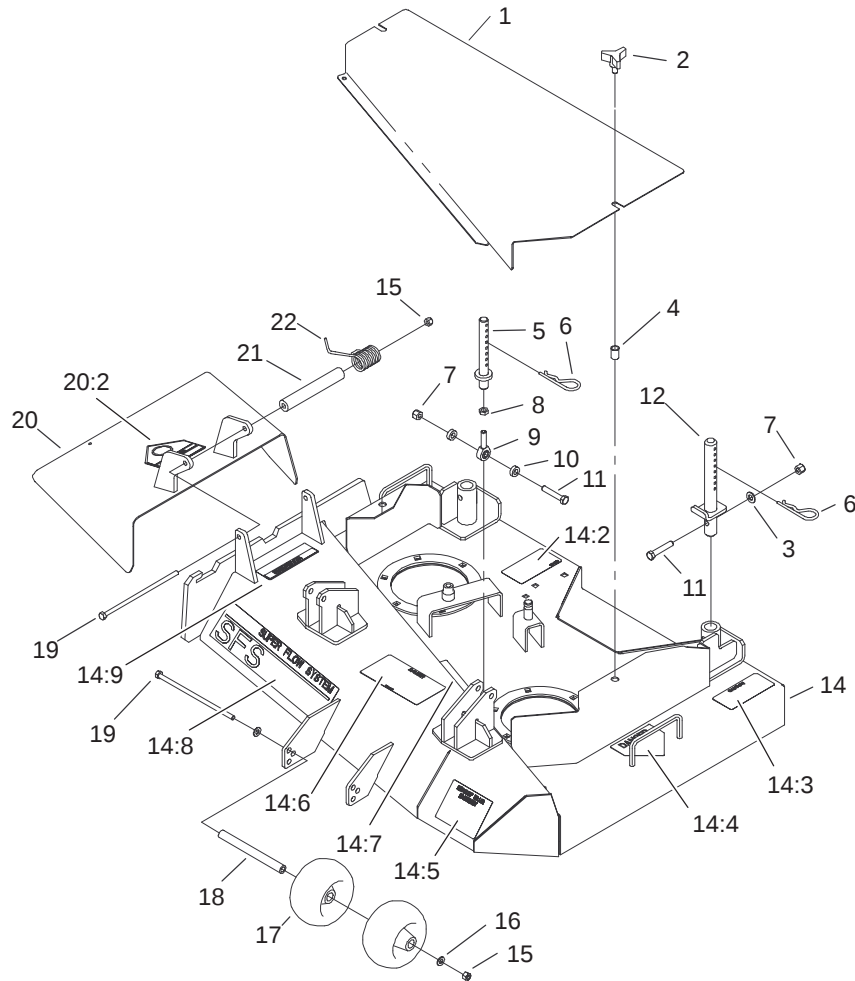

Sheet No.:2

Deck Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-8170-01	1	Cover	19	322-50	2	Screw-Cap
2	104-8587	2	Knob	20	104-7753	1	Deflector ASM
3	3256-24	2	Washer-Flat	20:2	54-9220	1	Decal-Danger
4	32148-9	2	Nut-Insert	21	104-8555	1	Spacer-Mounting, Deflector
5	105-0832	2	Link-Support	22	104-8554	1	Spring-Torsion
6	3290-256	6	Pin-Hair				
7	3296-39	4	Nut-Lock, NI				
8	3220-3	2	Nut-Jam				
9	1-613204	2	Balljoint				
10	104-1156	4	Spacer				
11	323-10	4	Screw-HH				
12	105-0831	2	Rod ASM				
14	104-6390	1	Deck ASM				
14:2	104-8185	1	Decal-Belt Routing				
14:3	68-8340	1	Decal-Torque				
14:4	43-8480	1	Decal-Danger				
14:5	105-0840	1	Decal-Anti Scalp				
14:6	66-1340	1	Decal-Danger				
14:7	67-5360	1	Decal-Danger				
14:8	98-8038	1	Decal-36"				
14:9	104-8569	1	Decal-Deflector Warning				
15	3296-29	2	Nut-Lock				
16	3256-23	2	Washer-Flat				
17	68-2730	2	Gage-Wheel				
18	98-5967	1	Spacer - Wheel				

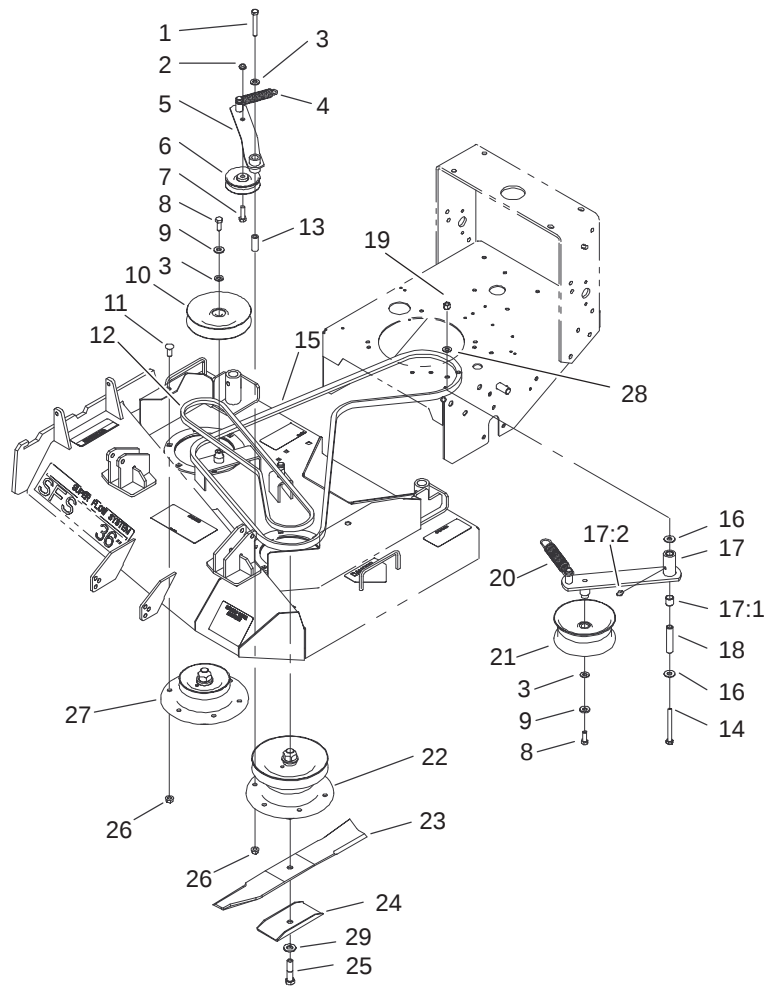


Sheet No.:3

Spindle, Pulley and Belt Assembly

Ref. No.	Part No.	Qty.	Description
1	323-12	1	Screw-HH
2	3296-5	1	Nut-Lock NI
3	3256-24	3	Washer-Flat
4	105-2673	1	Spring-Extension
5	105-0889	1	Idler Arm ASM
6	51-3660	1	Pulley-Idler
7	3211-5	1	Screw-HH
8	323-6	2	Screw-HH
9	98-5975	2	Washer-Belleville
10	1-633166	1	Idler Pulley
11	3231-22	11	Screw-CARR
12	51-3530	1	V-Belt, Deck Drive
13	51-3641	1	Idler-Pivot Sleeve
14	323-42	1	Screw-HH
15	105-0886	1	Belt-Drive, PTO
16	1-809107	2	Washer-Hardened
17	104-6370	1	Idler Arm ASM
17:1	1-513034	2	Sleeve-Bearing
17:2	302-5	1	Fitting-Grease
18	104-6377	1	Tube - Idler
19	3296-39	1	Nut-Lock, NI
20	104-8161	1	Spring-Extension
21	1-413099	1	Pulley-Idler
22	104-6315	1	Spindle Housing ASM
23	27-0990	2	Blade
24	92-9820	2	Stiffener - Blade


Ref. No.	Part No.	Qty.	Description
25	44-2200	2	Screw - Blade
26	32128-21	12	Nut-HF
27	104-6317	1	Spindle Housing ASM
28	3256-4	1	Washer-Flat
29	3256-6	2	Washer-Flat

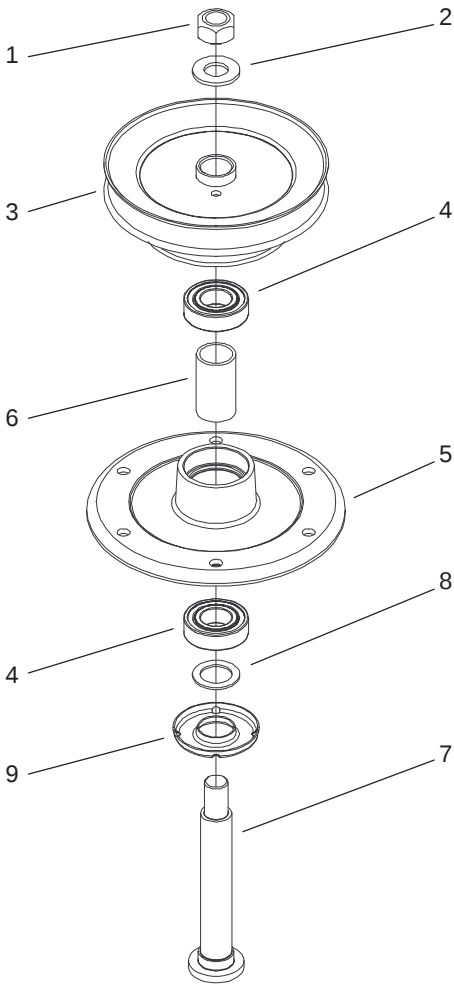

Sheet No.:A1
C-3011

Spindle Housing Assembly No. 104-6315

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex				
2	7-4150	1	Washer-Pinion				
3	104-1117	1	Pulley And Hub ASM				
4	104-6325	2	Bearing				
5	104-6307	1	Spindle Housing				
6	104-6313	1	Spacer-Bearing				
7	104-6311	1	Shaft-Spindle				
8	88-7540	1	Washer - Backup				
9	79-1920	1	Shield-Bearing				

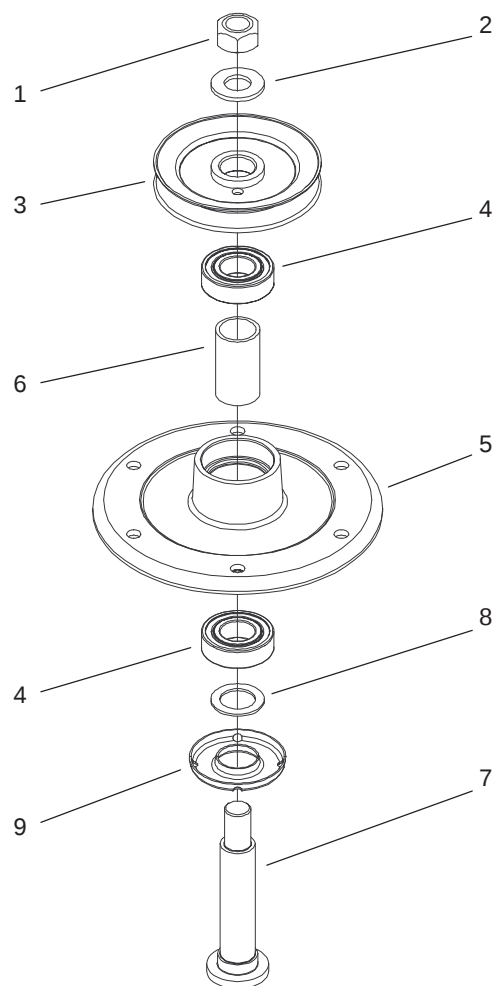


Sheet No.:A2
C-3012

Spindle Housing Assembly No. 104-6317

Ref. No.	Part No.	Qty.	Description
1	3219-7	1	Nut-Hex
2	7-4150	1	Washer-Pinion
3	104-1118	1	Pulley And Hub ASM
4	104-6325	2	Bearing
5	104-6307	1	Spindle Housing
6	104-6313	1	Spacer-Bearing
7	104-6310	1	Shaft-Spindle
8	88-7540	1	Washer - Backup
9	79-1920	1	Shield-Bearing

Ref. No.	Part No.	Qty.	Description

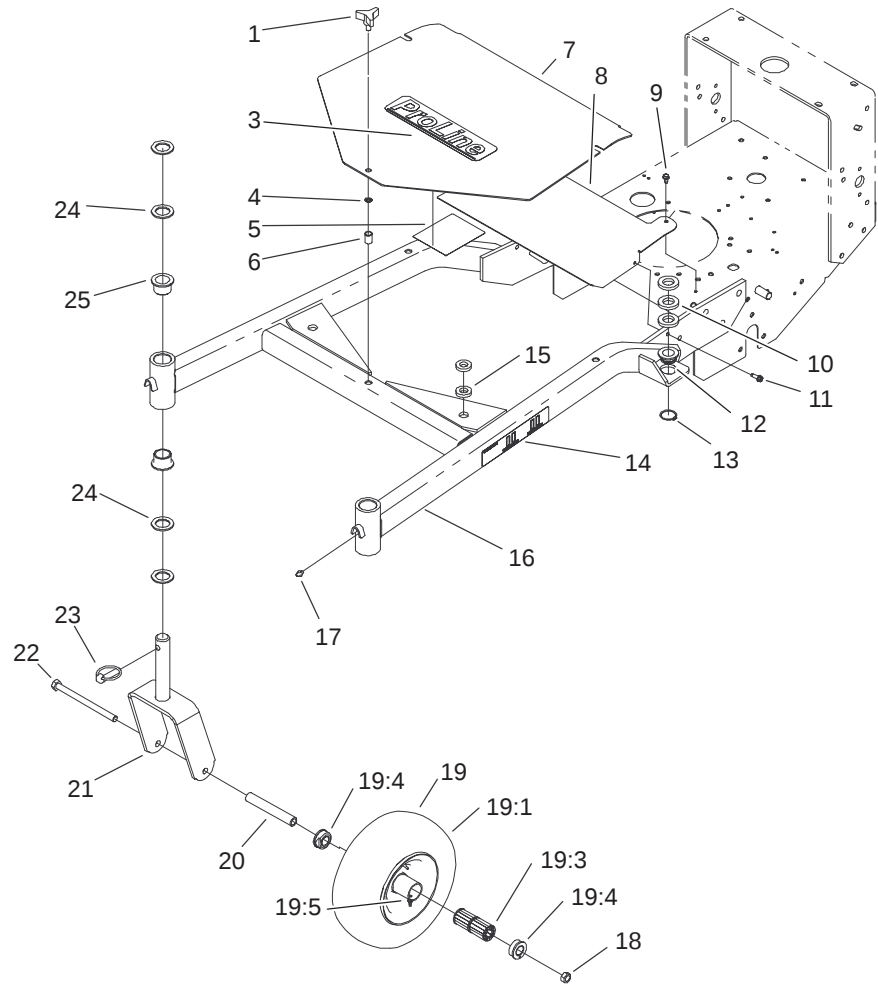


Sheet No.:4

Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	104-8587	3	Knob
3	74-2080	1	Decal-Proline
4	32151-72	1	Ring-Retaining
5	105-4143	1	Decal-Service
6	32148-9	3	Nut-Insert
7	104-8167-01	1	Cover-Carrier Frame
8	105-0846-01	1	Shield-Heat
9	12-3270	2	Screw
10	104-1105	6	Spacer-Deck Support
11	49-2040	2	Screw-Tapping
12	1-513336	2	Bushing - Deck
13	32120-33	2	Ring-Retaining
14	104-8171	2	Decal-HOC
15	105-0842	4	Spacer
16	104-1108-01	1	Carrier Frame ASM
17	302-5	2	Fitting-Grease
18	32153-5	2	Nut-Lock
19	104-1170	2	Castor Wheel ASM
19:1	104-1169	1	Tire And Tube ASM
19:3	62-5570	2	Bearing-Roller
19:4	62-5580	2	Bearing-Outside
19:5	302-11	1	Fitting-Lube, 45°
20	104-1189	2	Bushing-Spanner
21	104-1183-01	2	Castor Fork ASM
22	325-33	2	Screw-HH
23	283-71	2	Pin-Lynch

Ref. No.	Part No.	Qty.	Description
24	3-6781	8	Washer-Thrust
25	94-1291	4	Bushing-Special

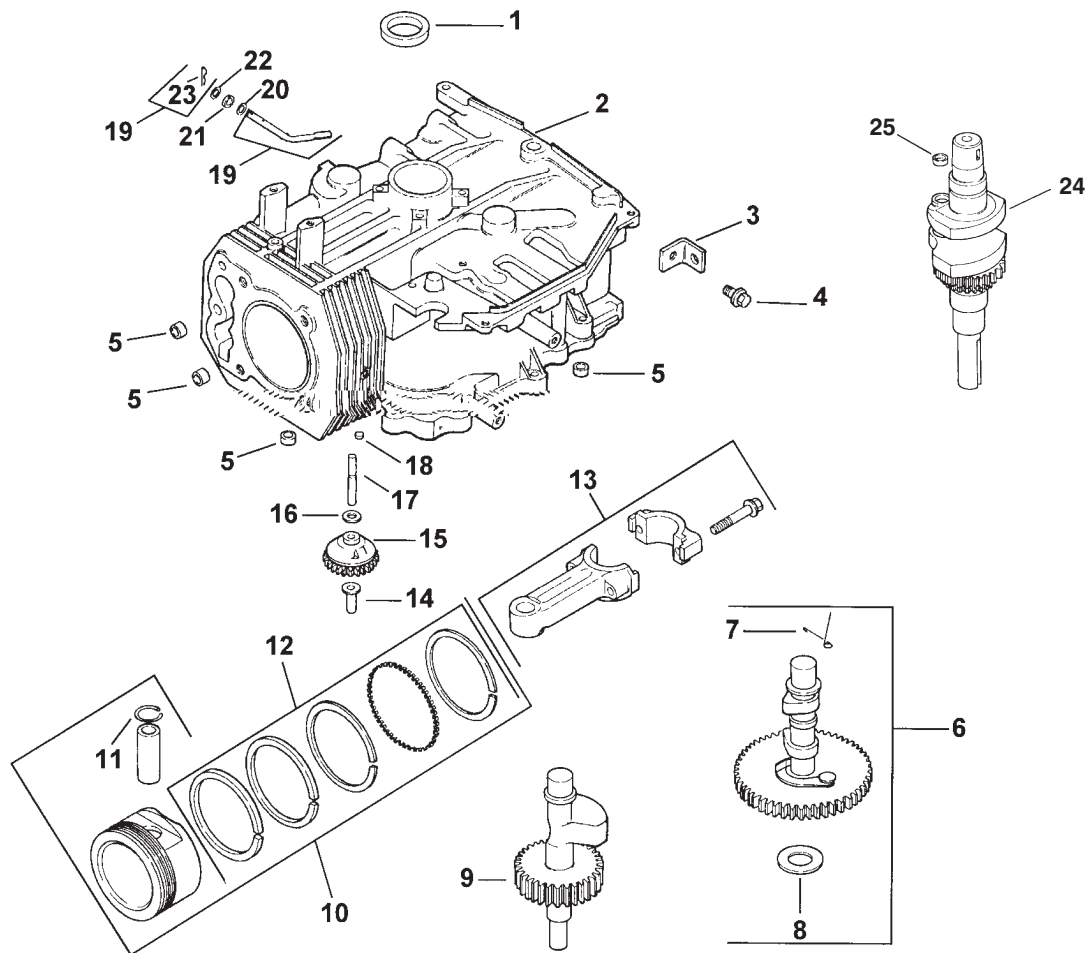


Crankcase Assembly – Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 032 03-S	1	Seal-Crankshaft
2	12 522 18-S	1	Shortblock
3	12 445 02-S	1	Strap-Lifting
4	M-839025-S	1	Screw-HF M8x1.25x22
5	24 380 13-S	4	Dowel-Locating
6	12 755 49-S	1	Kit-Camshaft (Incl. 7-8)
7	12 089 31-S	1	Spring-Actuating
8	12 422 07-S	A/R	Shim-Camshaft, White
8	12 422 08-S	1	Shim-Camshaft, Blue
8	12 422 09-S	A/R	Shim-Camshaft, Red
8	12 422 10-S	A/R	Shim-Camshaft, Yellow
8	12 422 11-S	A/R	Shim-Camshaft, Green
8	12 422 12-S	A/R	Shim-Camshaft, Gray
8	12 422 13-S	A/R	Shim-Camshaft, Black
9	12 144 27-S	1	Shaft-Balance
10	12 874 07-S	1	Piston w/Ring Set STD (Incl. 11,12)
10	12 874 08-S	1	Set-Piston w/Ring .25
10	12 874 09-S	1	Set-Piston w/Ring .50
10	12 874 11-S	1	Set-Piston w/Ring .08
11	12 018 02-S	2	Retainer-Piston Pin
12	12 108 07-S	1	Ring Set STD
12	12 108 08-S	1	Ring Set .25
12	12 108 09-S	1	Ring Set .50
13	12 067 05-S	1	Rod-Connecting, STD
13	12 067 06-S	1	Rod-Connecting .25

Ref. No.	Part No.	Qty.	Description
14	12 380 01-S	1	Pin-Governor Regulating
15	12 043 05-S	1	Gear-Governor
16	M-631005-S	1	Washer-Plain, 6mm
17	12 144 02-S	1	Shaft-Governor Gear
18	52 139 09-S	1	Plug-Cup
19	12 755 64-S	1	Kit-Governor Cross Shaft (Incl. 23)
20	X-25-102-S	1	Washer-Plain, 1/4
21	12 032 01-S	1	Seal-Governor Cross Shaft
22	M-631015-S	1	Washer-Plain, 6mm
23	12 154 05-S	1	Clip-Hitch Pin
24	12 014 30-S	1	Crankshaft ASM (Incl. 25)
25	12 139 01-S	1	Plug-Cup
*	12 755 93-S	1	Set-Gasket

* Not illustrated
Order Parts from Kohler

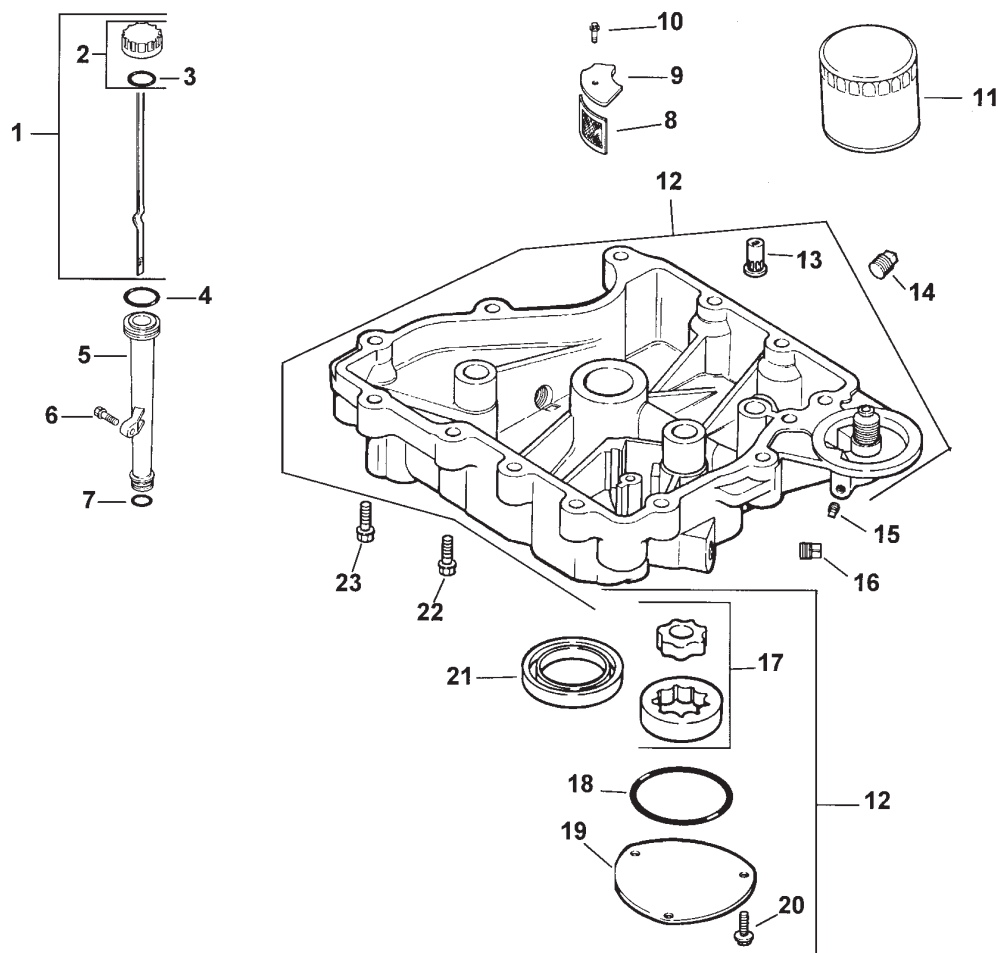


Oil Pan and Lubrication Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 038 01-S	1	Dipstick ASM(Incl. 2-3)
2	25 755 13-S	1	Kit-Oil Fill Cap (Incl. 3)
3	12 153 03-S	1	O Ring-Dipstick
4	12 153 02-S	1	O Ring-Upper Oil Fill Tube
5	12 123 04-S	1	Tube-Oil Fill
6	M-545020-S	1	Screw-HF, M5x0.8x20
7	12 153 01-S	1	O Ring-Lower Oil Fill Tube
8	25 162 07-S	1	Screen-Oil Pickup
9	12 096 03-S	1	Cover-Oil Pickup Screen
10	M-545016-S	1	Screw-HF, M5x0.8x16
11	52 050 02-S	1	Filter-Oil
12	12 199 50-S	1	Pan ASM - Oil (Incl.13, 17-20)
13	25 462 09-S	1	Valve-Oil Pressure Relief
14	25 139 57-S	1	Plug-Pipe, 3/8 SH
15	25 139 52-S	1	Plug-Pipe, 1/8
16	25 139 62-S	1	Plug-Pipe, 3/8 HSH
17	12 393 01-S	1	Pump-Oil
18	12 153 06-S	1	O Ring-Oil Pump Cover

Ref. No.	Part No.	Qty.	Description
19	12 096 34-S	1	Cover-Oil Pump
20	M-545016-S	3	Screw-HF, M5x0.8x16
21	12 032 03-S	1	Seal-Oil (PTO End)
22	24 086 16-S	11	Screw-HF, M8x1.25x45
23	24 086 17-S	1	Screw-HF, M8x1.25x45

Order Parts From Kohler

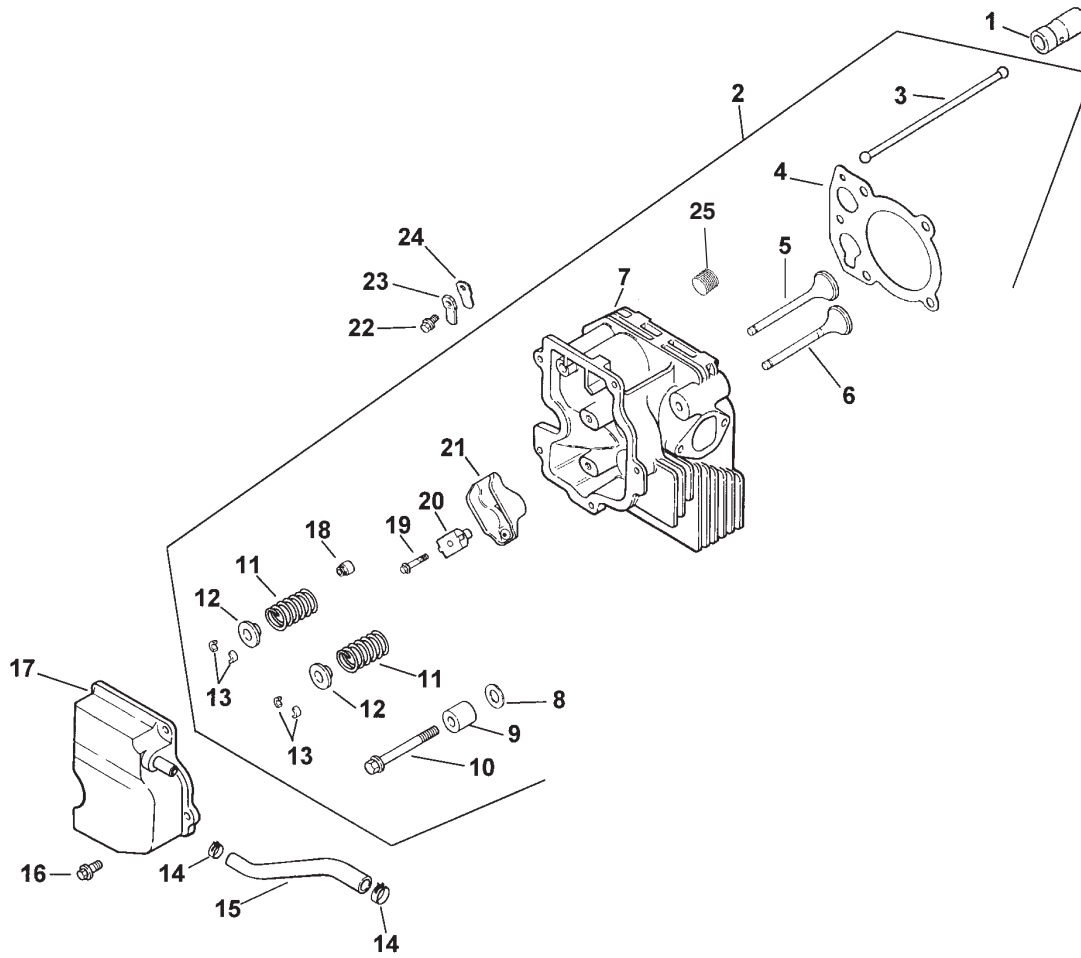


Cylinder Head, Valve And Breather Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 351 01-S	2	Lifter-Valve
2	12 755 81-S	1	Kit-Cylinder Head (Incl. 3-13, 18-21, 25, Carburator Gasket 12 041 01-S(2), Exhaust Manifold Gasket 12 041 03-S, Air Cleaner Gasket 12 041 02-S)
3	12 411 01-S	2	Rod-Push
4	12 041 10-S	1	Gasket-Cylinder Head
5	12 017 01-S	1	Valve-Intake STD
5	12 017 02-S	1	Valve-Intake .25
6	12 016 01-S	1	Valve-Exhaust STD
6	12 016 02-S	1	Valve-Exhaust, .25
7	12 318 19-S	1	Head - Cylinder
8	12 468 05-S	1	Washer-Plain 13/32
9	12 112 13-S	1	Spacer-Head Bolt
10	12 086 15-S	5	Screw-HF M10x1.5x81
11	12 089 01-S	2	Spring-Valve
12	12 173 01-S	2	Cap-Valve Spring
13	12 755 03-S	2	Kit-Retainer
14	25 237 14-S	2	Clamp-Hose

Ref. No.	Part No.	Qty.	Description
15	12 326 03-S	1	Hose-Breather
16	M-645020-S	3	Screw-HF M6x1.0x20
17	12 096 07-S	1	Cover-Valve w/Nipple
18	24 032 05-S	1	Seal-Valve Stem
19	M-640034-S	2	Screw-HF M6x1.0x34
20	12 599 03-S	2	Pivot-Rocker Arm
21	25 186 01-S	2	Arm-Rocker
22	M-545010-S	1	Screw-HF M5x0.8x10
23	12 018 01-S	1	Retainer-Breather Reed
24	12 402 02-S	1	Reed-Breather
25	25 139 60-S	1	Plug-Pipe, HSH 1/8


Order Parts From Kohler

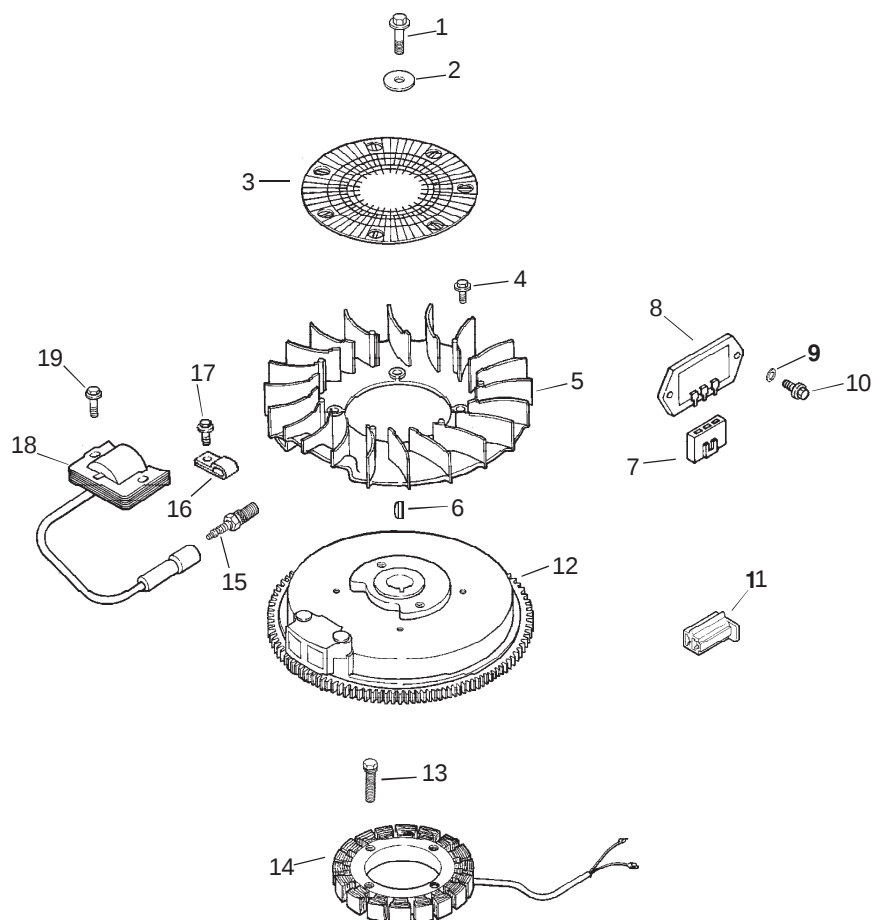

Ignition and Electrical Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 086 14-S	1	Screw-HF,M10x1.5x46				
2	12 468 03-S	1	Washer-Plain, 3/8	*	12 518 01-S	1	Tab Terminals) Lead-White, Ground To Kill, (19"-18 Gauge Fully Insulated Push On Tab and Uninsulated Push On Tab Terminals
3	12 162 03-S	1	Screen-Grass				
4	25 086 47-S	4	Bolt-Shoulder	*	25 518 12-S	1	Lead-Black,Ground, (5"-12Gauge-Insulated Grip Barrel Eyelet Terminals
5	12 157 03-S	4	Fan				
6	X-42-15-S	1	Key				
7	236602-S	1	Connector-Rectifier, Regulator(3 contact)				
8	12 403 01-S	1	Rectifier-Unregulated, 15 amp				
9	X-22-11-S	2	Washer - Lock				
10	M-639016-S	2	Screw-HF, M6x1.0x16				
11	41 155 03-S	1	Connector				
12	12 025 33-S	1	Flywheel				
13	M-548025-S	2	Screw-HH M5x0.8x25				
14	237878-S	1	Kit-Stator, 15 Amp				
15	12 132 06-S	1	Spark Plug				
16	X-728-1-S	2	Clip-Cable				
17	M-545010-S	2	Screw-HF, M5x0.8x10				
18	12 584 05-S	1	Module-Ignition				
19	M-545020-S	2	Screw-HF, M5x0.8x20				
*	25 518 05-S	1	Lead-Black, Rectifier/ Regulator,(5"-14Gauge Uninsulated Push On				


* Not illustrated
Order Parts From Kohler

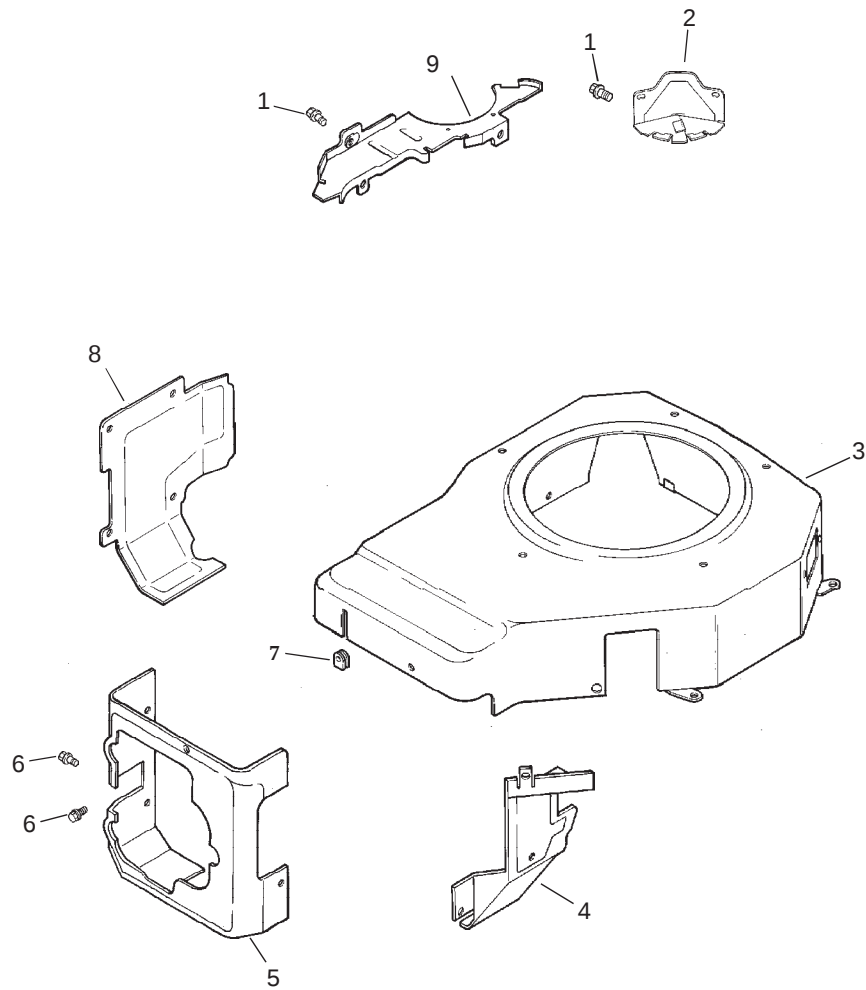

**Blower Housing And Baffle Assembly
Kohler Model CV15T-41604**

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-550010-S	6	Screw-HF, M5x0.8x10				
2	12 096 29-S	1	Cover-Starter				
3	12 027 68-S	1	Housing-Blower				
4	12 063 10-S	1	Baffle-Intake, Side				
5	12 063 08-S	1	Baffle-Cylinder Head				
6	M-545010-S	9	Screw-HF, M5x0.8x10				
7	12 313 03-S	1	Grommet-Spark Plug leads				
8	12 063 19-S	1	Baffle-Cylinder				
9	12 146 07-S	1	Plate-Blower Housing				
*	12 146 21-S	1	Decal-Horsepower				


* Not illustrated
Order Parts From Kohler

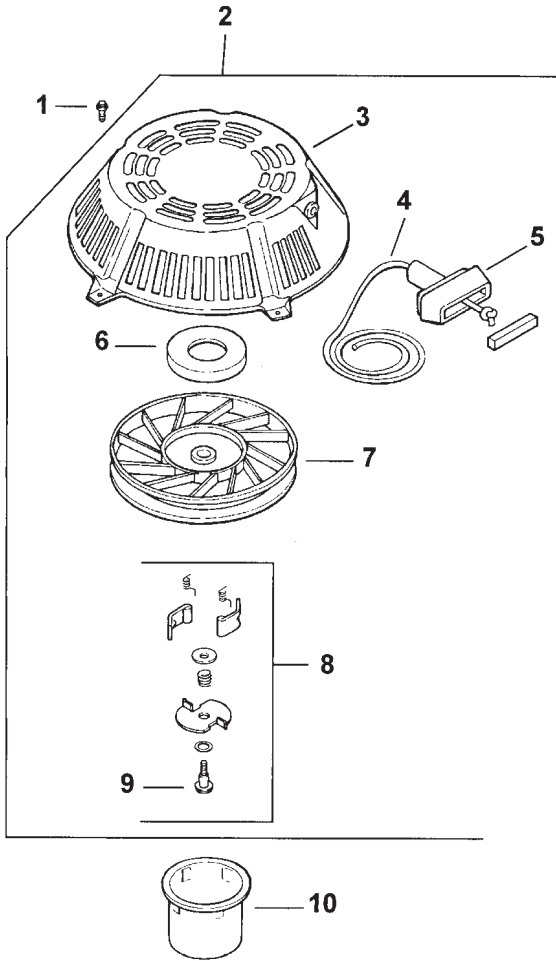

Starter Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	M-550010-S	5	Screw-HF, M5x0.8x10				
2	12 165 01-S	1	Starter ASM				
			Retractable (Incl. 3-9)				
3	12 081 01-S	1	Housing-Starter				
4	12 160 01-S	1	Rope-Starter				
5	25 166 01-S	1	Handle-Recoil				
6	12 089 06-S	1	Spring & Keeper				
7	12 093 01-S	1	Pulley				
8	12 757 06-S	1	Kit-Dog Repair				
			(incl. 9)				
9	41 086 09-S	1	Screw-Posidrive				
10	15 109 01-S	1	Cup-Drive				
*	12 113 07-S	1	Decal-Starting				

* Not illustrated
Order Parts From Kohler

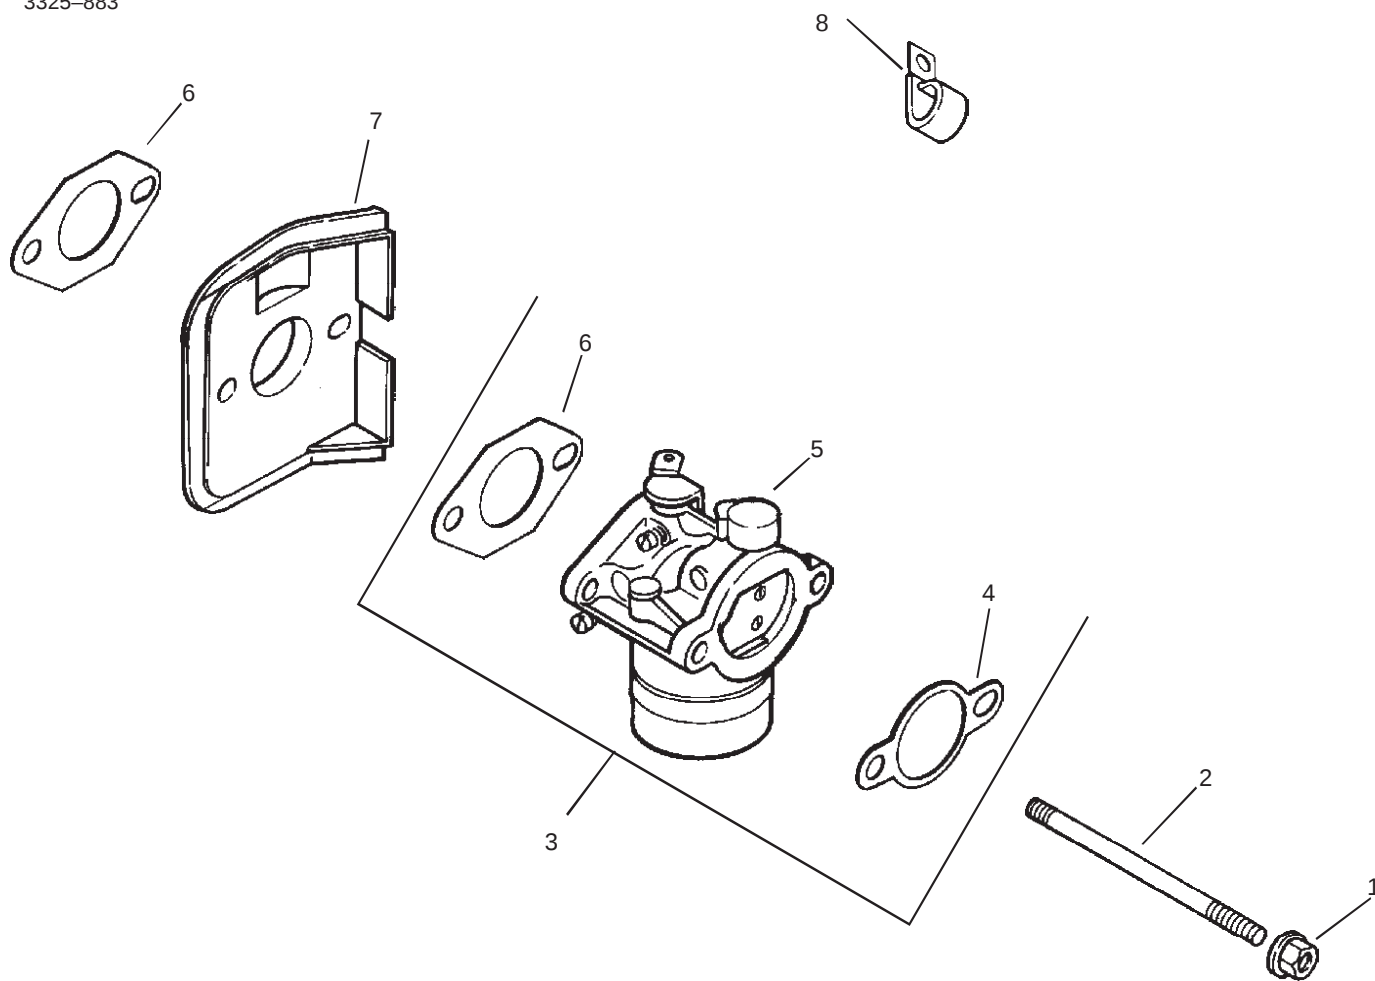


Fuel System Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	M-641060-S	2	Nut-HF M6x1.0
2	M-629116-S	2	Stud M6x1.0x116
3	12 853 80-S	1	Kit-Carburetor w/Gaskets (Incl. 4-6)
4	12 041 02-S	1	Gasket-Air Cleaner
5	12 053 80	1	Carburetor ASM (For Information Only Not Available Separately) (Service With Kits 12 757 02-S Float Kit 12 757 03-S Carb. Repair Kit and 12 757 08-S Choke Repair Kit)
6	12 041 01-S	2	Gasket-Carburetor
7	12 265 04-S	1	Deflector-Heat
8	47 154 01-S	1	Clip-Cable
*	12 757 02-S	1	Kit-Float
*	12 757 08-S	1	Kit-Choke Repair
*	12 757 03-S	1	Kit-Carburetor Repair

Ref. No.	Part No.	Qty.	Description

* Not illustrated
Order Parts From Kohler

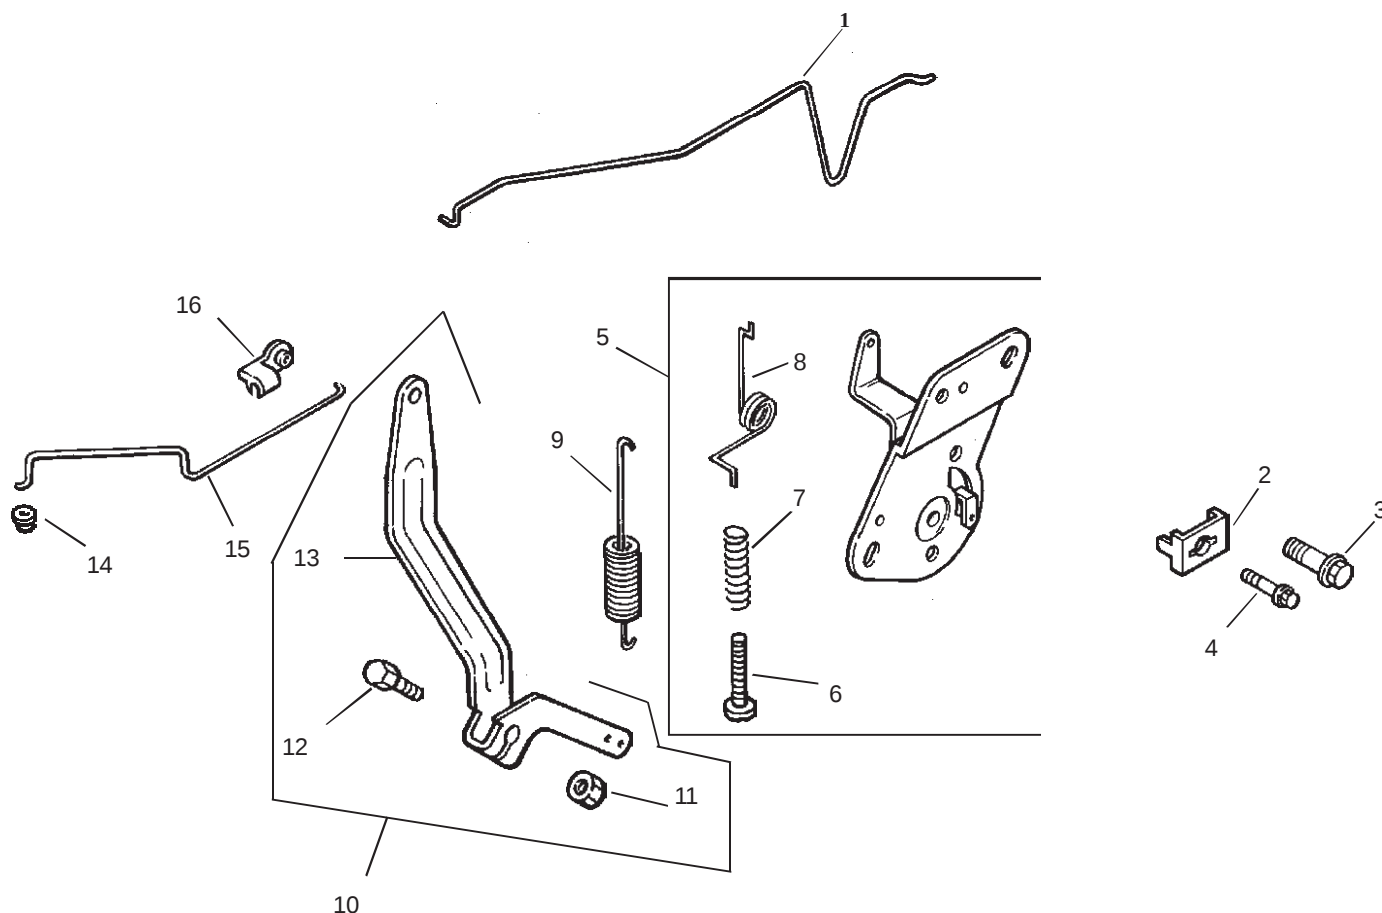


Engine Control Assembly Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description
1	12 079 07-S	1	Linkage-Choke
2	12 237 01-S	1	Clamp-Cable
3	M-664020-S	2	Screw-Lobed Socket M6x1.0x20
4	M-545016-S	1	Screw-HF M5x .08x16
5	12 536 01-S	1	Control-Speed ASM (Incl. 6-8)
6	M-443025-S	1	Screw-SPH, M4x0.7x25
7	12 089 11-S	1	Spring-Choke Adjustment
8	12 089 23-S	1	Spring-Choke Return
9	12 089 19-S	1	Spring-Governor
10	12 755 83-S	1	Kit - Governor Lever (Incl. 11-13)
11	12 100 07-S	1	Nut-HF
12	52 211 04-S	1	Bolt - Round HD
13	12 090 28-S	1	Lever-Governor
14	25 158 08-S	1	Bushing-Linkage Retaining
15	12 079 01-S	1	Linkage-Throttle
16	25 158 11-S	1	Bushing-Throttle Linkage

Ref. No.	Part No.	Qty.	Description


Order Parts From Kohler

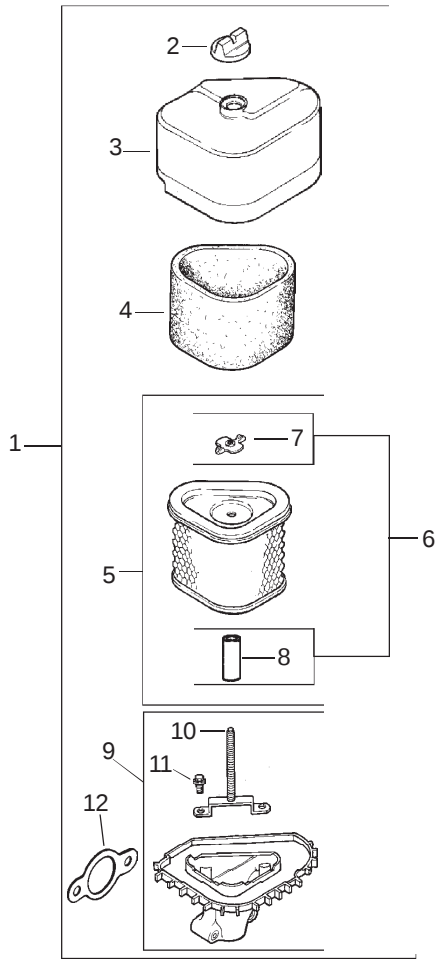

Air Cleaner Assembly
Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 743 02-S	1	Kit-Air Cleaner (Incl. 2-12)				
2	25 341 03-S	1	Knob-Air Cleaner Cover				
3	12 096 38-S	1	Cover-Air Cleaner				
4	12 083 12-S	1	Element-Precleaner				
5	12 083 10-S	1	Element-Air Cleaner (Incl. 6-8)				
6	12 743 12-S	1	Kit-Seal (Incl. 7-8)				
7	12 100 08-S	1	Nut-Wing				
8	12 032 11-S	1	Seal				
9	12 094 07-S	1	Base-Air Cleaner (Incl. 10,11)				
10	12 072 04-S	1	Stud-M6x1.0x66				
11	12 086 01-S	2	Screw-#10 Hi-Lo Thread Forming				
12	12 041 02-S	1	Gasket-Air Cleaner				
*	12 113 04-S	1	Decal-Air Cleaner				

* Not illustrated
Order Parts From Kohler

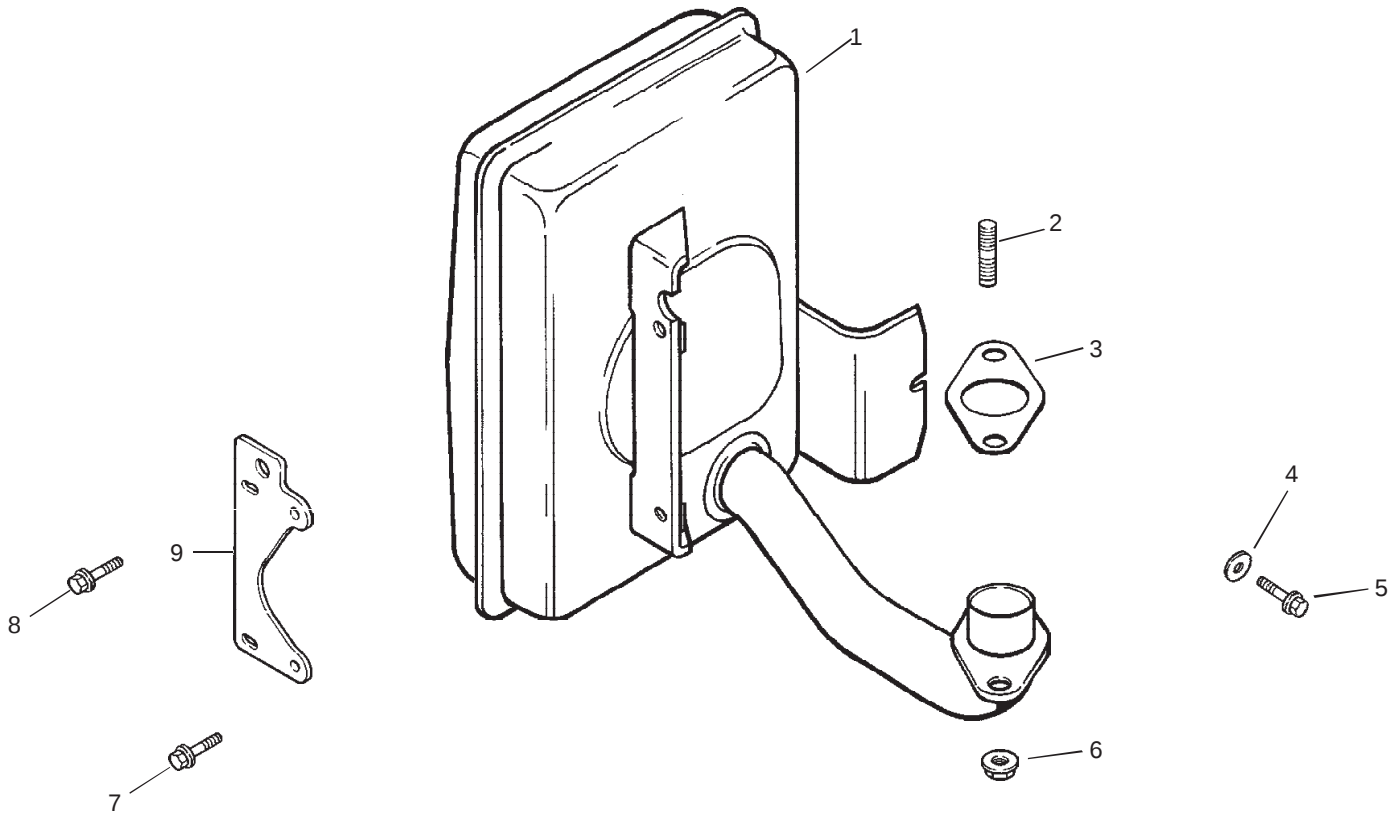


Exhaust Assembly
Kohler Model CV15T-41604

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	12 068 44-S	1	Muffler				
2	25 072 04-S	2	Stud M8x1.25x33				
3	12 041 03-S	1	Gasket-Exhaust Manifold				
4	X-25-78-S	1	Washer-Plain,1/4				
5	M-545016-S	1	Screw-HF, M5x0.8x16				
6	M-841080-S	2	Nut-HF, M8x1.25				
7	M-645016-S	2	Screw-HF, M6x1.0x16				
8	M-645025-S	2	Screw-HF, M6x1.0x25				
9	12 126 71-S	1	Bracket-Muffler				

Obtain Parts From Kohler

Electrical Schematic

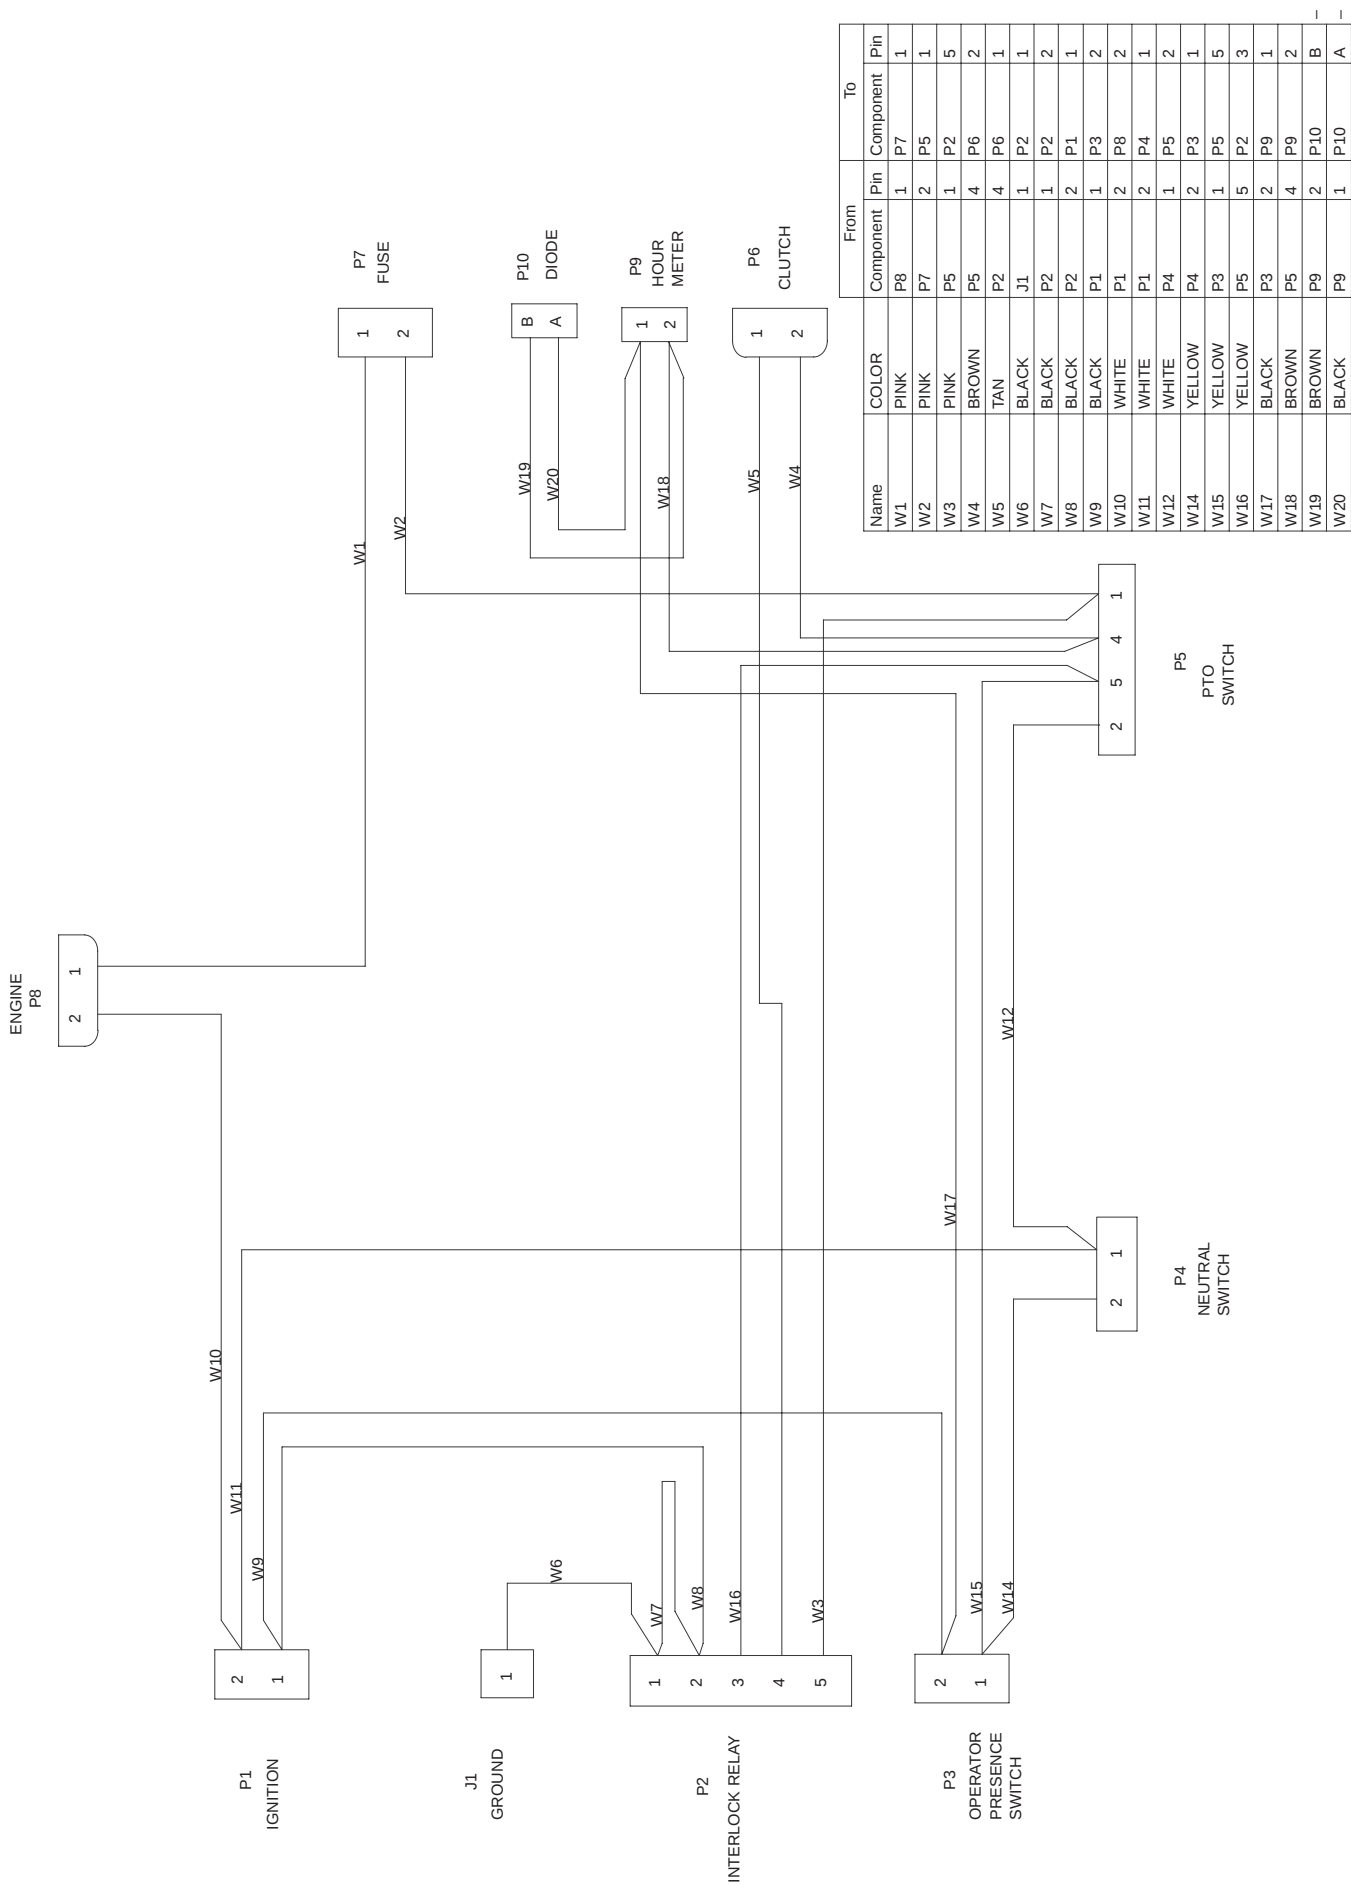

Maintenance Record

[illegible]

