



Hydrostatic Transaxle Replacement Kit

260 Series Yard and Garden Tractors

Part No. 105-1383

**INSTALLATION
INSTRUCTIONS**

Loose Parts

Note: Use the chart below to identify parts for assembly.

DESCRIPTION	QTY.	USE
Tapping Screw 1/4 x 3/4 in.	3	Install fan and pulley
Snap ring	1	
Fan	1	
Washer	1	
Fan Spacer	1	
Pulley	1	
Screw 1/4 x 1/4 in.	1	

Installing Fan and Pulley

Install the fan and pulley before installing transaxle into tractor.

1. Locate input shaft on transaxle (Fig. 1).
2. Align splines on input shaft and pulley. Slide pulley onto input shaft and install set screw into pulley (Fig. 1).
3. Install washer onto input shaft (Fig. 1).
4. Install snap ring onto input shaft (Fig. 1).
5. Install fan spacer and align holes in spacer with holes in pulley (Fig. 1).
6. Install fan onto spacer and align holes in fan with hole in fan spacer (Fig. 1).
7. Install tapping screws into aligned holes in fan, fan spacer and pulley (Fig. 1).

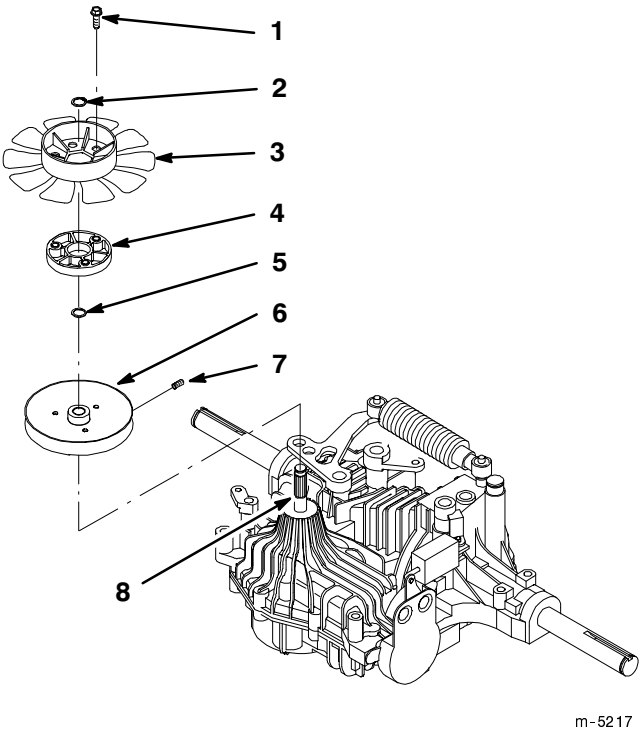


Figure 1

- | | |
|------------------|---------------------|
| 1. Tapping screw | 5. Washer |
| 2. Snap ring | 6. Pulley |
| 3. Fan | 7. Pulley set screw |
| 4. Fan spacer | 8. Input shaft |
-