



Form No. 3438-840 Rev C

Count on it.

Parts Catalog

Snow Thrower TXL 2000

Model No. 22583—Serial No. 320000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Frame Assembly..... 4

Auger Assembly 6

Hydraulic Assembly 8

Frame Assembly

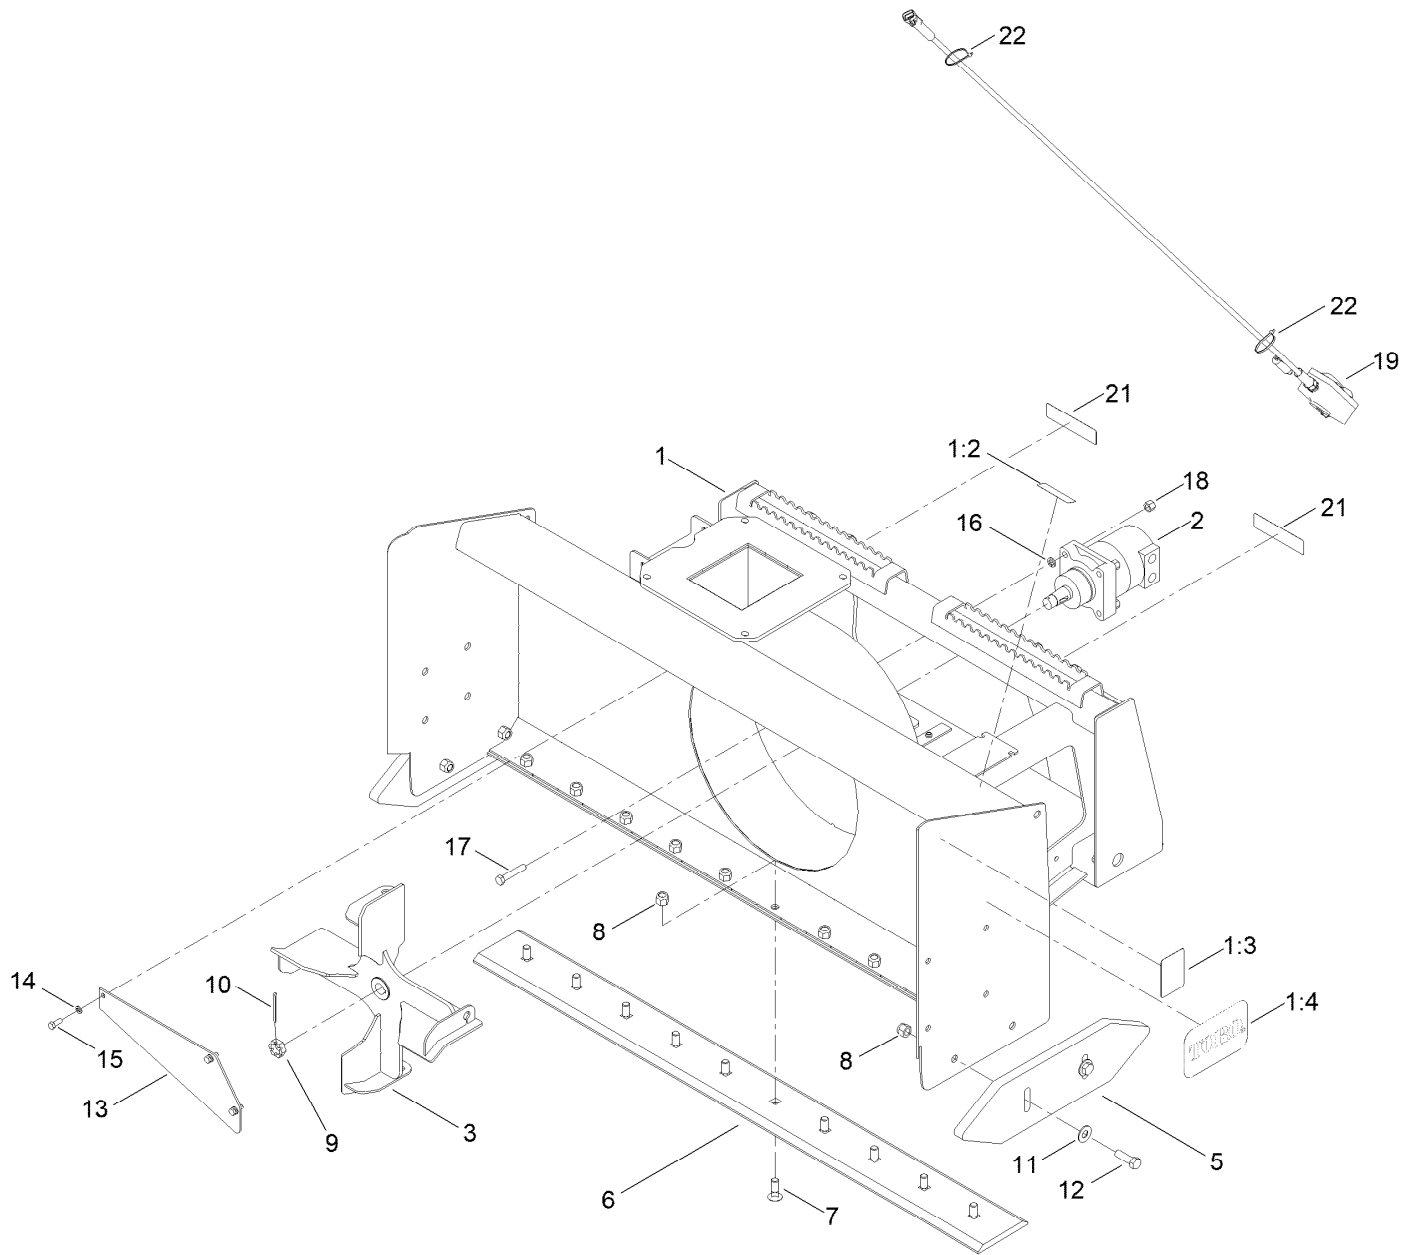


Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-4727	1	Frame-Snowblower,	10	138-5190	1	Pin-Cotter
1:2	139-8895	1	Decal-Warning	11	HDW14028	4	Washer,5/8 Flat,ST/ST 18-8
1:3	139-8896	2	Decal-Auger,Danger	12	327-6	4	Screw-HH
1:4	134-0551	2	Decal	13	138-5197	1	Cover-Fan
2	138-5171	1	Motor-HYD	14	3253-21	3	Washer-Lock
3	138-5172	1	Fan	15	323-6	3	Screw-HH
4	138-5173	1	Key-Woodruff ●	16	3253-7	4	Washer-Lock
5	138-5176	2	Skid-Snow Blower	17	325-11	4	Screw-HH
6	138-0468	1	Edge	18	3296-23	4	Nut-Lock, NI
7	138-1364	10	Bolt-Plow	19	144-2509	1	Toro Elc Box 2 Switch ASM
8	3296-53	14	Nut-Lock, NI	21	131-9290	2	Tape-Reflective
9	138-5189	1	Nut-Hex, Slotted	22	3290-378	4	Tie-Cable

● Not illustrated


Auger Assembly

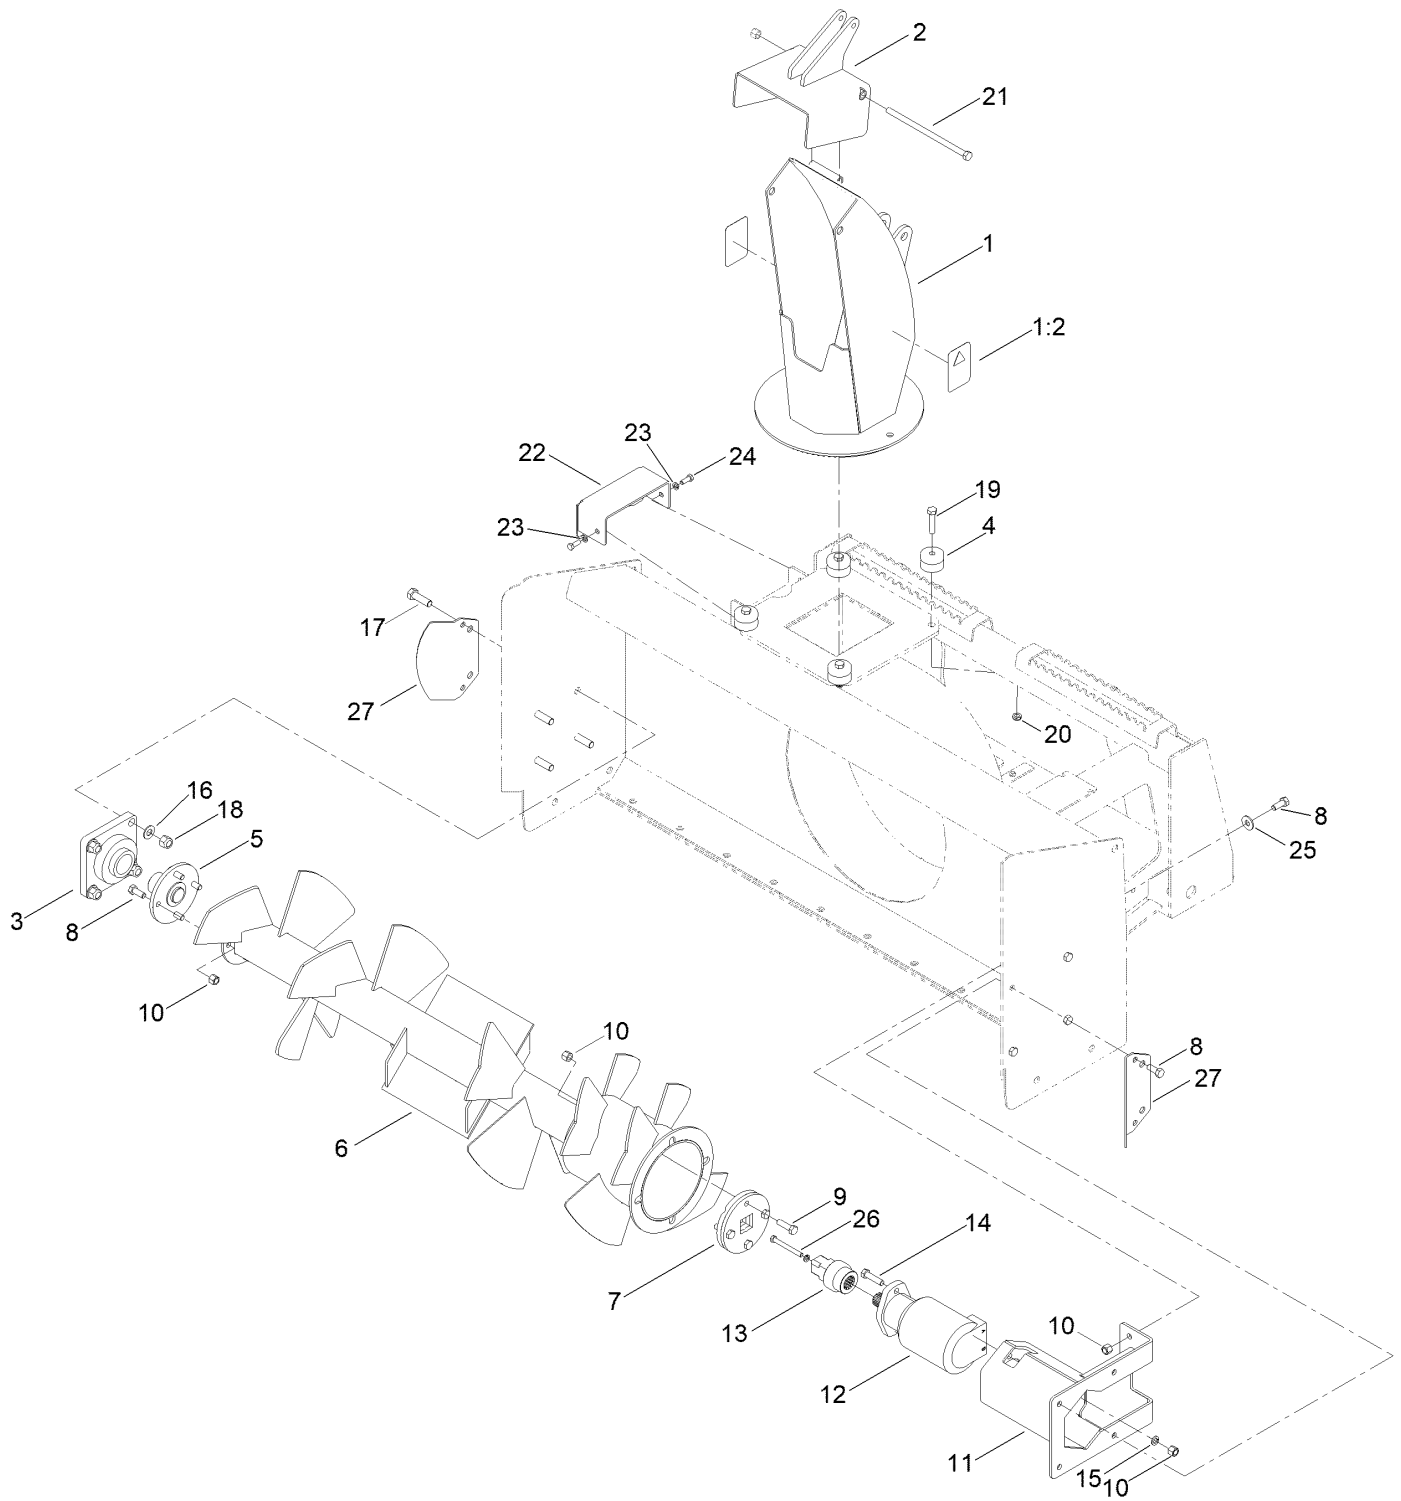

Auger Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	139-4728	1	Chute-Snowblower,	14	325-8	2	Screw-HH
1:2	93-7309	2	Decal-Danger, Discharge	15	3253-7	2	Washer-Lock
2	138-5177	1	Deflector	16	3256-27	4	Washer-Flat
3	137-9016	1	Bearing-Flanged	17	327-6	4	Screw-HH
4	138-5178	4	Retainer-Spout	18	3296-53	4	Nut-Lock, NI
5	138-5184	1	Shaft- Auger Follower	19	325-9	4	Screw-HH
6	138-5185	1	Auger-Snow Blower	20	3296-45	4	Nut-Hex
7	138-0456	1	Flange-Drive	21	SG475010	1	Bolt-HH
8	325-5	10	Screw-HH	22	138-5196	1	Guard-Snow Blower
9	325-7	4	Screw-HH	23	3253-21	3	Washer-Lock
10	3296-23	17	Nut-Lock, NI	24	323-6	2	Screw-HH
11	138-5186	1	Mount-Augur Motor	25	3256-6	2	Washer-Flat
12	138-5187	1	Motor-HYD. Auger	26	323-15	1	Screw-HH
13	138-5188	1	Adapter-Motor	27	139-4722-03	2	Plate-Side,Snow

Hydraulic Assembly

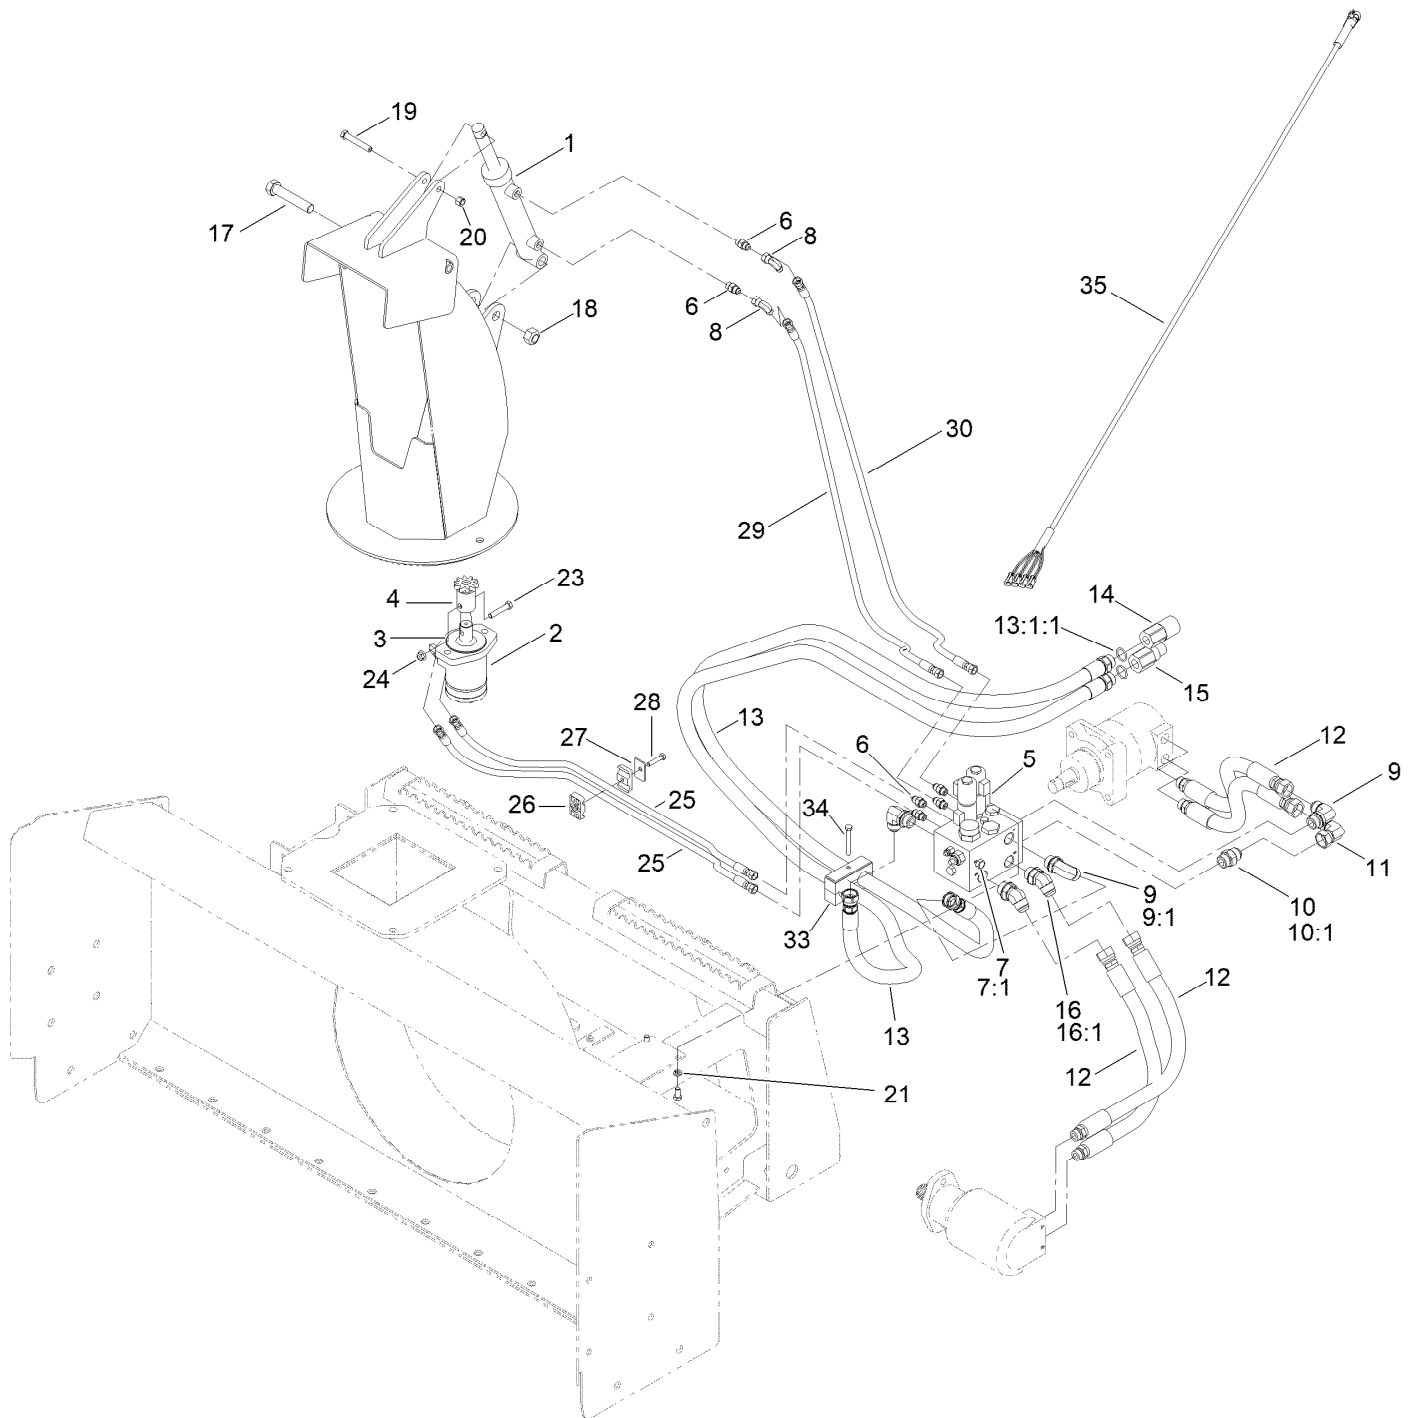

Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	138-5175	1	Cylinder-HYD	16:1	237-81	1	O-Ring
2	138-5179	1	Motor-HYD, Chute	17	328-7	1	Screw-HH
3	138-5180	2	Fitting-HYD, Elbow	18	120-7252	1	Nut-Lock
4	138-5181	1	Gear-Rotator	19	324-11	1	Screw-HH
5	138-5182	1	Manifold-Snow Blower	20	3296-48	1	Nut-Hex
6	HYD13932	4	Fitting-Straight	21	3253-21	4	Washer-Lock
7	353-508	1	Plug-HH	22	323-4	4	Screw-HH ●
7:1	237-42	1	O-Ring	23	323-10	1	Screw-HH
8	AU218-980	2	Fitting-Swivel, 90 DEG	24	104-8301	1	Nut-HF, NI
9	353-369	3	Fitting-Elbow, 90 DEG	25	138-0513	2	Hose-HYD
9:1	237-81	1	O-Ring	26	56-7976	2	Clamp-Tube
10	AU218-5064	1	Fitting-Straight	27	69-9760	1	Plate-Cover
10:1	237-81	1	O-Ring	28	322-7	1	Screw-HH
11	AU218-5231	1	Fitting-Elbow, 90	29	138-5195	1	Hose-HYD
12	138-5192	4	Hose-HYD ASM	30	138-5199	1	Hose-HYD
13	138-5193	2	HYD Hose ASM	31	325-7	2	Screw-HH ●
13:1		1	Fitting-Straight ■ ●	32	3296-23	2	Nut-Lock, NI ●
13:1:1	237-81	1	O-Ring	33	137-8969	1	Clamp-Hose
14	137-8974	1	Fitting-HYD	34	322-12	1	Screw-HH
15	137-8975	1	Fitting-HYD	35	144-2521	1	Harness-Wire
16	131-2606	2	Fitting-JIC 37				

● Not illustrated

■ Not serviced separately

Notes:

Notes:



Count on it.