

Deluxe Seat Kit Groundsmaster® 200 and 300 Series Model No. 30625

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

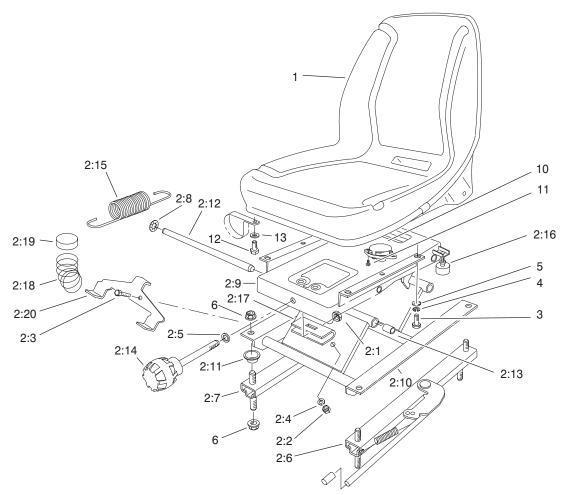

Sheet No.:0 T-3782

Deluxe Seat Kit Assembly

Ref. No.	Part No.	Qty.	Description
1	104–4620	1	Seat-Olympic, Toro
2	76–1970	1	Mini-Suspension
	32153–2	1	Nut-Lock
2:2	3217–6	1	Nut-Hex
2:3	322–6	1	Screw-HH
2:4	3253-33	1	Washer-Lock
2:5	3256–24	1	Washer–Flat
2:6	66–8510	1	Adjuster W/Handle
	66–8530	1	Adjuster
2:8	66–8560	4	Nut–Push
2:9	66–8600	1	Frame-Upper
2:10	66–8610	1	Frame-Lower
2:11	66–9290	4	Spacer–Suspension
2:12	76–1910	2	Shaft–Pivot
2:13	76–1920	4	Bearing-Sleeve
2:14	76–1930	1	Knob-Adjuster,
			Tension
2:15		2	Spring–Extension
2:16		2	Bumper
	77–2870	1	Hanger–Spring
	93–3163	2	Spring
2:19		2	Cap
2:20	00 0.00	1	Bracket
3		4	
4	3253–4	4	
5	3256–2	4	Washer–Flat

Ref. No.	Part No.	Qty.	Description
6 10 11 12 13	32144–10	4 1 2 2 2	Nut-Flange Switch-Seat Screw-HH Screw-HH Washer-Flat