



Rubber Stabilizer Foot Kit

Dingo® Backhoe

Part No. 104-5740

Installation
Instructions

1. Raise the stabilizers, stop the engine, and remove the key.
2. Using a hammer and punch, remove a roll pin from the pivot pin of one of the metal feet on the backhoe stabilizers (Fig. 1).

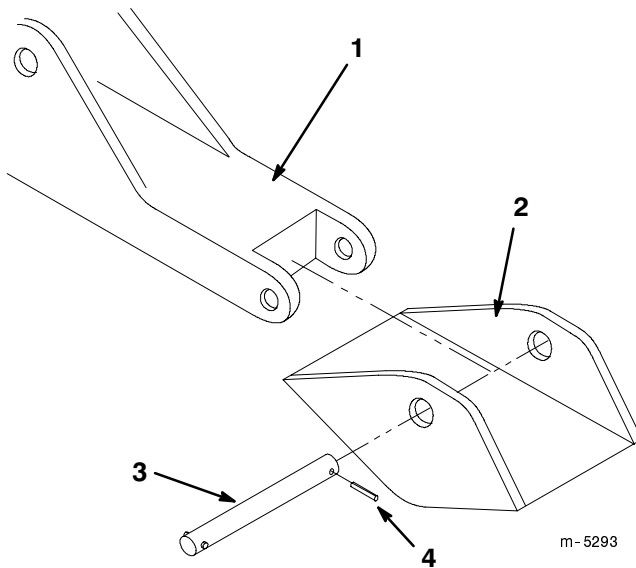


Figure 1

- | | |
|-------------------|--------------|
| 1. Stabilizer arm | 3. Pivot pin |
| 2. Metal foot | 4. Roll pin |

3. Pull the pivot pin out and remove the foot.
4. Place a new rubber foot over the end of the stabilizer and slide the new pivot pin through the foot and stabilizer (Fig. 2).

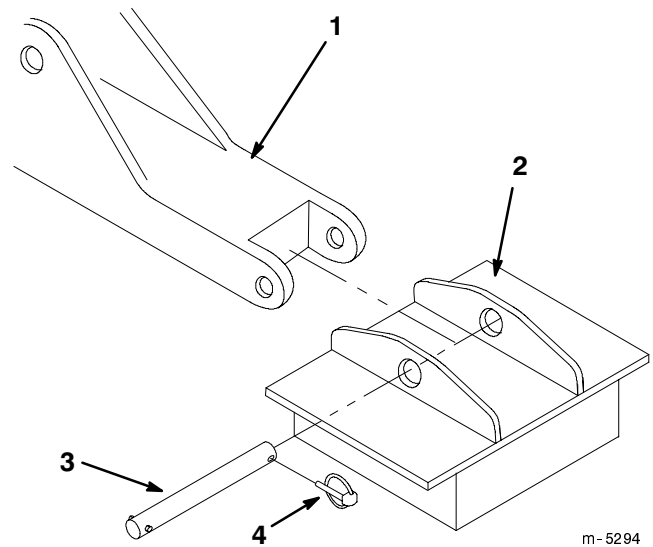


Figure 2

- | | |
|-------------------|--------------|
| 1. Stabilizer arm | 3. Pivot pin |
| 2. Rubber foot | 4. Lynch pin |

5. Secure the pivot pin with a lynch pin (Fig. 2).
6. Repeat steps 1 through 5 for the other stabilizer.