

LAWN-BOY®

Silver Pro Series®

Walk-Behind Mower

Model No. 10247C—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page	Description	Page
Housing, Handle Bracket And Wheel Assembly	3	Engine Assembly No. 98–1395	6
Engine And Blade Assembly	4	Short Block Assembly No. 95–7636	8
Handle And Controls Assembly	5	Carburetor Assembly No. 98–7042	9


Accessories

Description	Model / Part No.	Description	Model / Part No.
Side Bagging Kit	89817	Leaf Shredder Kit	89860
Leaf Bag	89804	Leaf Bag Kit with Chute	89811

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	INC	incorporated
ASM	assembly	LH	left hand
CARR	carriage	NI	nylon insert
DEG	degrees	PPH	Phillips pan head
FH	flat head	PTH	Phillips truss head
GA	gauge	PTO	power take off
HF	hex flange	RH	right hand
HH	hex head	SFH	slotted fillister head
HHF	hex head flange	SHH	slotted hex head
HLH	hex lag head	SQH	square head
HJ	hex jam	SHWH	slotted hex washer head
HOC	height-of-cut	SPH	slotted pan head
HS	hex socket	SRH	slotted round head
HSBH	hex socket button head	STD	standard
HSFH	hex socket flat head	TAP	self tapping
HSH	hex socket head	TTH	Torx truss head
HWH	hex washer head	WH	wing head
HWHTF	hex washer head thread forming		

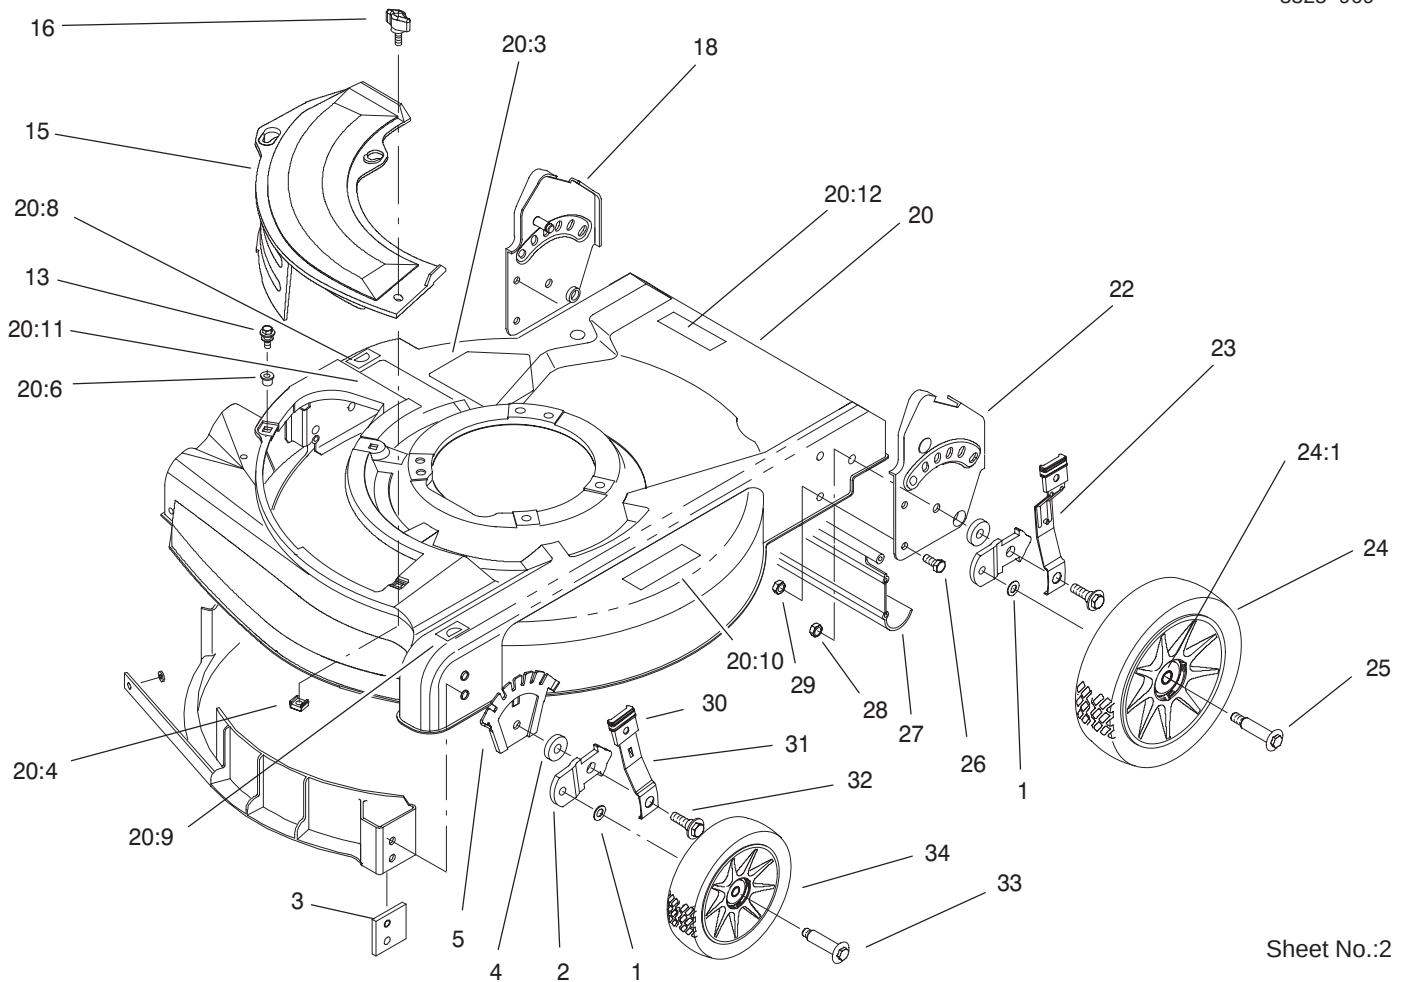


Sheet No.:2

Housing, Handle Bracket And Wheel Assembly

Ref. No.	Part No.	Qty.	Description
1	40-1940	4	Washer
2	95-7403-03	4	Bracket-Height Adjustment, Wheel
3	92-7731	2	Plate - Baffle
4	92-4890	4	Washer - Wheel
5	92-4881-03	2	Plate - Height Adjustment
13	614677	2	Screw-Sems
15	92-8630	1	Plate-Mulch
16	98-8332	1	Knob
18	92-7742	1	RH Handle Brkt ASM
20	105-1264	1	Housing-Service
20:3	56-6270	1	Danger Decal(Fr/E)
20:4	613765	1	Nut-Cage
20:6	94-1610	2	Grommet - Plastic
20:8	104-7616	1	Decal-HOC,RH
20:9	104-7617	1	Decal-HOC,LH
20:10	104-7627	1	Decal-Warning
20:11	104-7629	1	Decal-Warning
20:12	104-7634	1	Decal-Manual,Lb
22	92-7743	1	LH Handle Brkt ASM
23	92-1005	2	Spring Arm ASM - Rear
24	684777	2	8" Wheel & Tire ASM
24:1	27-6250	2	Bushing
25	614650	2	Bolt-Shoulder

Ref. No.	Part No.	Qty.	Description
26	322-3	4	Screw-HH
27	92-8647	1	Shield - Trailing
28	3296-39	2	Nut-Lock, NI
29	3296-29	4	Nut-Lock
30	92-1008	4	Knob-Lever, Height Adjustment
31	614687	2	Arm-Front Spring
32	614672	4	Bolt-Shoulder
33	92-1099	2	Bolt-Shoulder
34	684776	2	Wheel & Tire ASM
*	95-7052	1	Plate-Opening, Chute


* Not illustrated

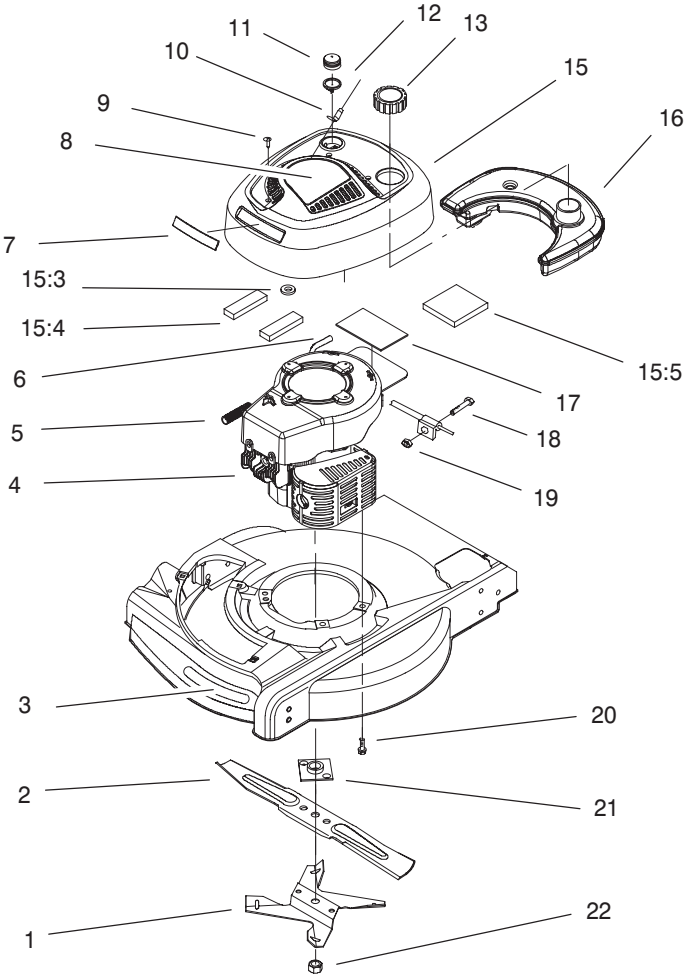

Sheet No.:3

Engine And Blade Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	99-6351-03	1	Fan-Mulching				
2	612543-03	1	Blade				
3	104-7958	1	Decal-Deck				
4		1	Engine Ay HP E Silver				
5	93-4306	1	Spring-Compression				
6	612782	1	Line-Fuel				
7	92-8615	1	Applique-Shroud				
8	95-7417	1	Decal - Recoil				
9	95-7621	3	Screw-Sems, Pan				
10	92-1701	1	Stop-Rope				
11	66-7460	1	Bulb-Primer				
12	44-2750	1	Body-Primer				
13	98-8344	1	Fuel & Oil Cap ASM				
15	100-6398	1	Shroud & Recoil Cover ASM				
15:3	613329	2	Nut-Push				
15:4	99-1522	2	Strip-Foam				
15:5	99-1521	1	Strip-Foam				
16	95-1897	1	Tank				
17	98-1386	1	Pad-Foam				
18	314576	1	Screw				
19	306531	1	Nut-Hex				
20	611774	3	Screw-HH				
21	677525	1	Plate & Collar ASM				
22	603164	1	Nut-Blade				

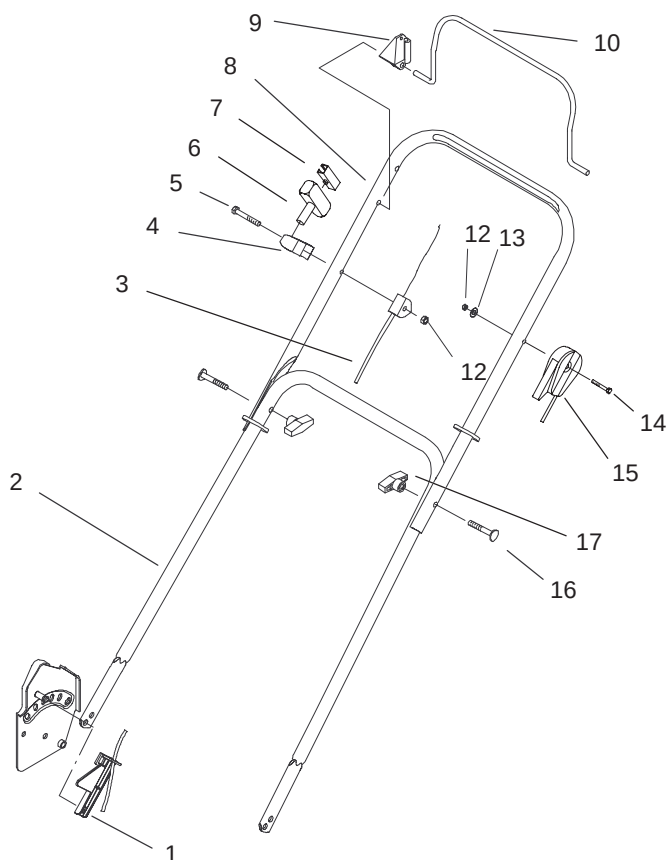

Sheet No.:4

Handle And Controls Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	104-1013	1	Guard-Cable				
2	614643-05	1	Handle - Lower				
3	100-5983	1	Cable-Brake				
4	93-7383	1	Guide-Rope				
5	321-50	1	Screw-HH				
6	612825	1	Handle-Start				
7	612824	1	Starter-Clip				
8	100-2888-05	1	Handle-Upper				
9	92-5412	1	Stop-Pivot				
10	93-4184-03	1	Bail - Brake				
12	3296-73	2	Nut-Lock, NI				
13	92-8632	1	Washer				
14	321-48	1	Screw-HH				
15	100-5987	1	Control ASM - Throttle				
16	614697	2	Screw				
17	98-7134	2	Knob-Handle				

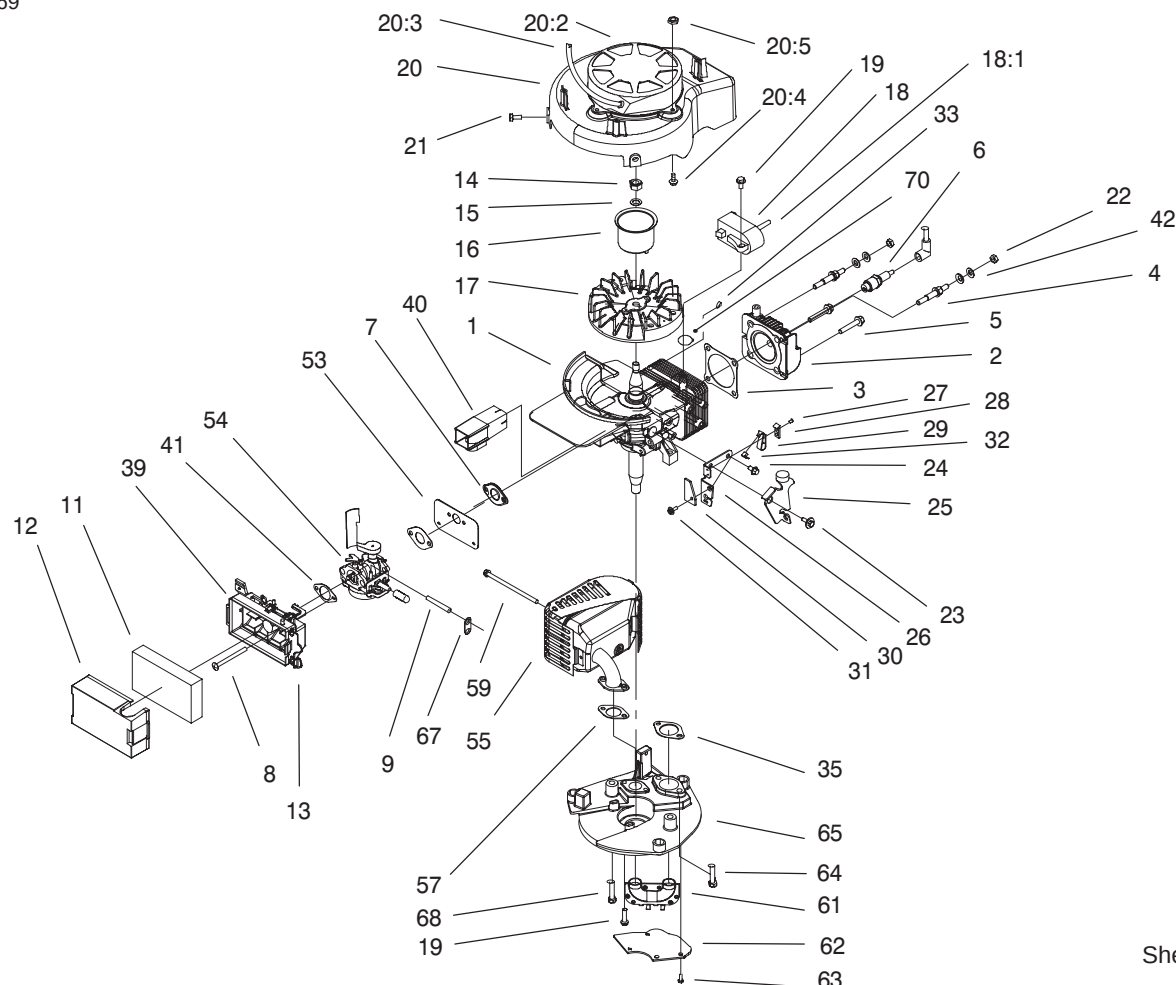


Sheet No.:A1

Engine Assembly No. 98-1395

Ref. No.	Part No.	Qty.	Description
1		1	Short Block ASM
1	95-7636	1	Short Block ASM
2	94-5776	1	Head-Cylinder
3	94-5778	1	Gasket-Head
4	94-5779	2	Stud
5	94-5780	2	Bolt - Head
6	50-1170	1	Plug-Spark
7	94-5795	2	Gasket-Intake
8	612507	2	Screw
9	95-1861	1	Hose-Primer
11	95-5574	1	Filter-Air
12	95-5577	1	Cover-Filter, Air
13	610383	1	Retainer-Cover, Filter
14	130743	1	Nut
15	316959	1	Washer-Lock
16	95-1786	1	Cup-Starter
17	95-1866	1	Flywheel
18	99-2911	1	Module-Ign.
18:2	99-6719	1	Lead-Tension, High
19	613208	4	Screw
20	95-1868	1	Shroud-Recoil
20:2	99-6713	1	Recoil ASM
*20:3	613773	1	Rope
*	100-9540	1	Retainer And Clip
20:4	3290-321	4	Screw-HWH
20:5	3296-2	4	Nut-Lock

Ref. No.	Part No.	Qty.	Description
21	700094	2	Screw-HH
22	146501	2	Nut
23	95-1870	1	Screw-Shoulder
24	95-1871	1	Screw-HWH
25	93-4312	1	Brake Plate ASM
26	84-7820	1	Plate-Brake
27	3290-459	2	Rivet-Plastic
28	92-2925	1	Strap-Insulation
29	60-9010	1	Strap-Ground
30	100-2929	1	Stop-Strap, Ground
31	12-5450	1	Screw
32	98-7037	1	Lead Wire-Switch, Brake
33	607199	1	Key
35	95-1778	1	Gasket-Exhaust
39	95-5588	1	Air Base ASM
40	95-5578	1	Tunnel-Inlet
41	95-7613	1	Gasket-Filter
42	3290-456	4	Washer-Belleville
*51	609790	1	Sealer-Loctite 50cc
53	98-1388	1	Shield-Carburetor
54	98-7042	1	Carburetor ASM
54		1	Carburetor ASM
55	100-9514	1	Muffler And Guard ASM E


* Not illustrated

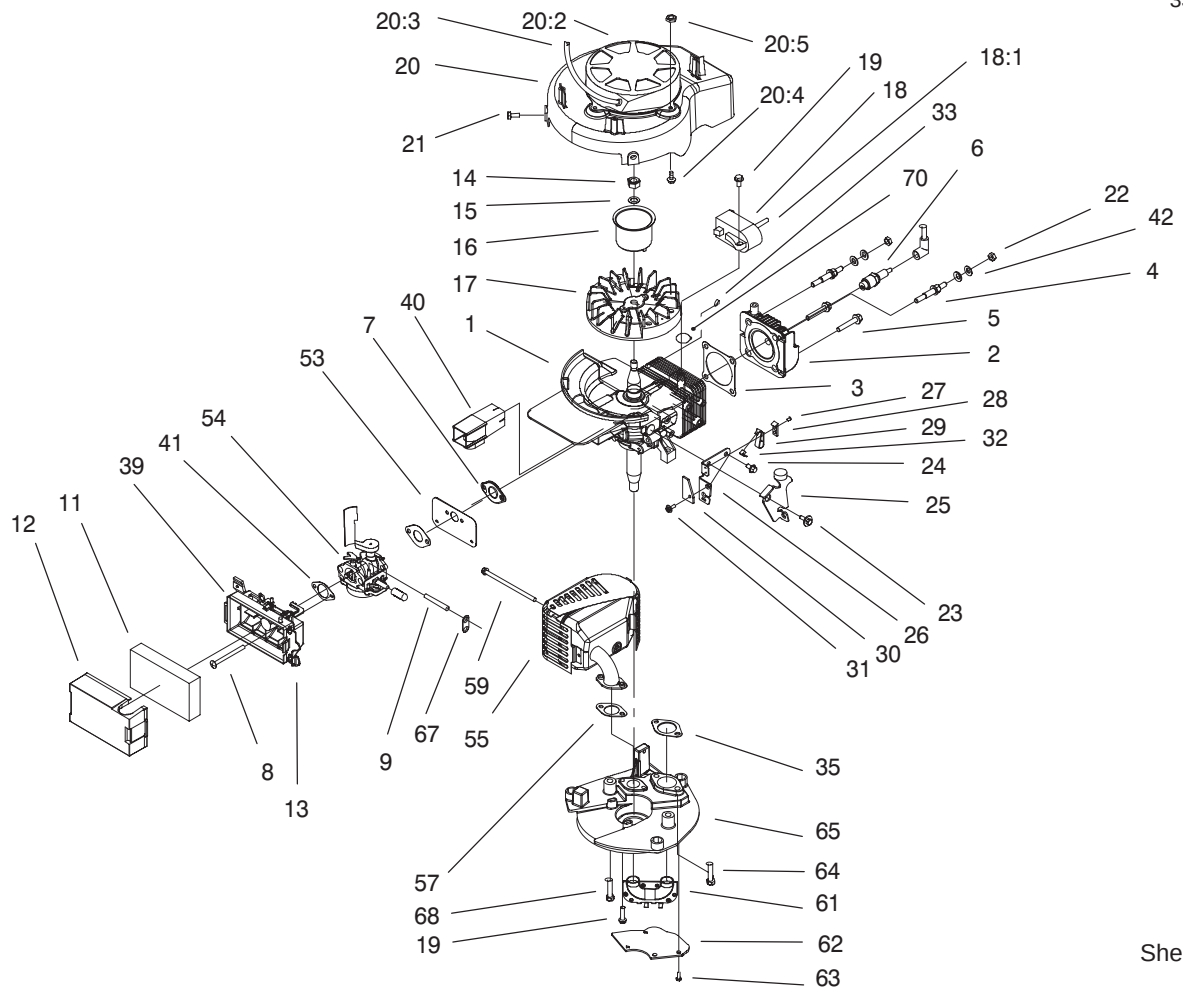

Sheet No.:A1

Engine Assembly No. 98-1395

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
57	98-1392	1	Gasket				
59	611228	1	Bolt-Console				
61	98-1557	1	Pipe-Transfer				
62	98-1591	1	Cover-Muffler				
63	700822	4	Screw-HH				
64	322-17	2	Screw-HH				
65	98-1384	1	Plate-Muffler				
67	95-7615	1	Hose-Retainer				
68	322-7	2	Screw-HH				
70	317893	1	Strap-Tie				

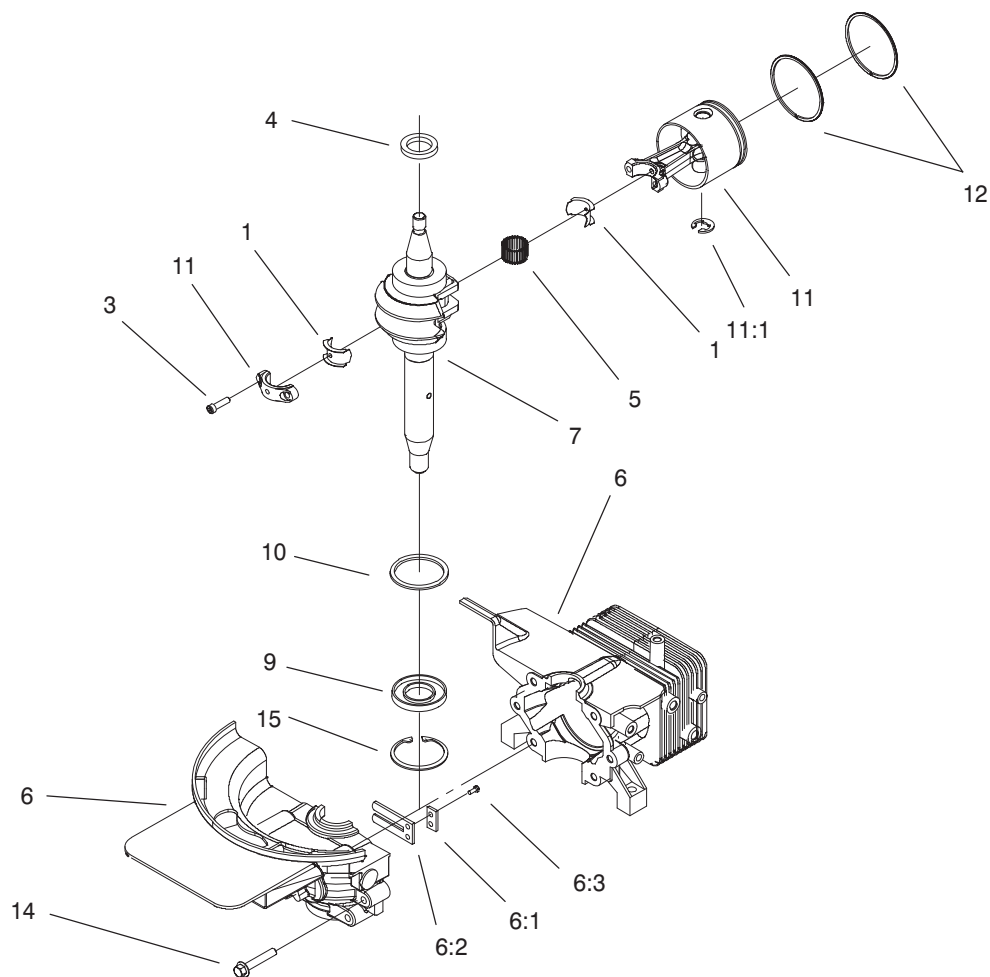


Sheet No.:A2
C-2958

Short Block Assembly No. 95-7636

Ref. No.	Part No.	Qty.	Description
1	677982	1	Liner ASM
*2	610372	1	Sealer—Loctite 6cc
*2	609790	1	Sealer—Loctite 50cc
3	611393	2	Screw—HSH
4	611396	1	Seal—Oil
5	683911	1	Bearing—Needle
6	95—7631	1	Cylinder And Crankcase ASM
6		1	Cylinder And Crankcase ASM
6:1	602587	1	Plate—Backup, Reed
6:2	602588	1	Reed—Carburetor
6:3	612872	2	Screw—HH
7	99—2920	1	Crankshaft And Bearing ASM
9	94—5764	1	Seal—Oil
10	94—5765	1	Ring—Retaining
11		1	Piston And Connecting Rod ASM
11:1	303712	2	Ring – Retaining
11:2	95—7629	1	Connecting Rod ASM
*11:4	94—5774	1	Pin—Wrist
11:5	100—2916	1	Piston And Rings ASM
12	100—2917	1	Set—Ring
14	94—5781	6	Screw
15	98—7046	1	Ring – Retaining

Ref. No.	Part No.	Qty.	Description

* Not illustrated

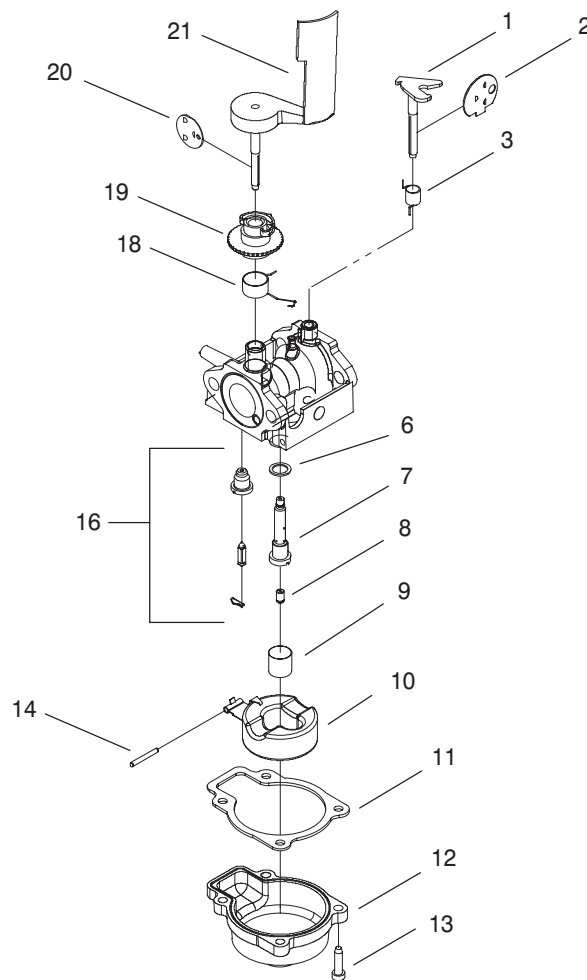

Sheet No.:A3

Carburetor Assembly No. 98-7042

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	95-5581	1	Shaft-Choke				
2	94-5788	1	Disc-Choke				
3	95-5583	1	Spring-Choke				
6	612383	1	Washer				
7	98-7001	1	Nozzle				
8	98-1357	1	Jet-Main				
9	94-5787	1	Filter-Fuel				
10	95-1899	1	Float & Arm ASM				
11	98-1362	1	Gasket				
12	92-9691	1	Chamber-Float				
13	608850	4	Screw-HH				
14	92-6389	1	Pin-Straight				
16	92-9697	1	Valve/Seat-Float				
18	98-7011	1	Spring-Throttle				
19	610834	1	Collar-Adjust, Airvane				
20	104-4431	1	Throttle-Disc				
21	104-4430	1	Air Vane And Shaft				

Maintenance Record

[illegible]

Maintenance Record

[illegible]

LAWN-BOY®