



## ProCore™ 440

Model No. 09700 – 20000001 and Up

Model No. 09700TE – 20000001 and Up

## Parts Catalog

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

## Contents

<b>Description</b>	<b>Page</b>	<b>Description</b>	<b>Page</b>
Hood Assembly .....	3	Drive Shaft Assembly .....	9
Roller Leg Assmebly .....	4	Gear Box Assembly No. 100-5381 .....	10
Decals .....	5	Tine Arm Assembly .....	11
Roller Assembly .....	6	Rotalink Assembly .....	12
Linkage Assembly .....	7	Crankshaft Assembly .....	13
PTO Assembly No. 100-3648 .....	8	Turf Guards .....	14


## Accessories

<b>Description</b>	<b>Model / Part No.</b>	<b>Description</b>	<b>Model / Part No.</b>
Needle Tine Head .....	09720	3 Tine Head HD .....	09733
Mini Tine Head .....	09721	4 Tine Head HD .....	09734
3 Tine Head .....	09722	Contour Following Kit .....	09154
4 Tine Head .....	09723	Windrow Kit PC660 .....	09732

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

<b>Abbreviation</b>	<b>Meaning</b>	<b>Abbreviation</b>	<b>Meaning</b>
AR .....	as required	INC .....	incorporated
ASM .....	assembly	LH .....	left hand
CARR .....	carriage	NI .....	nylon insert
DEG .....	degrees	PPH .....	Phillips pan head
FH .....	flat head	PTH .....	Phillips truss head
GA .....	gauge	PTO .....	power take off
HF .....	hex flange	RH .....	right hand
HH .....	hex head	SFH .....	slotted fillister head
HHF .....	hex head flange	SHH .....	slotted hex head
HLH .....	hex lag head	SQH .....	square head
HJ .....	hex jam	SHWH .....	slotted hex washer head
HOC .....	height-of-cut	SPH .....	slotted pan head
HS .....	hex socket	SRH .....	slotted round head
HSBH .....	hex socket button head	STD .....	standard
HSFH .....	hex socket flat head	TAP .....	self tapping
HSH .....	hex socket head	TTH .....	Torx truss head
HWH .....	hex washer head	WH .....	wing head
HWHTF .....	hex washer head thread forming		

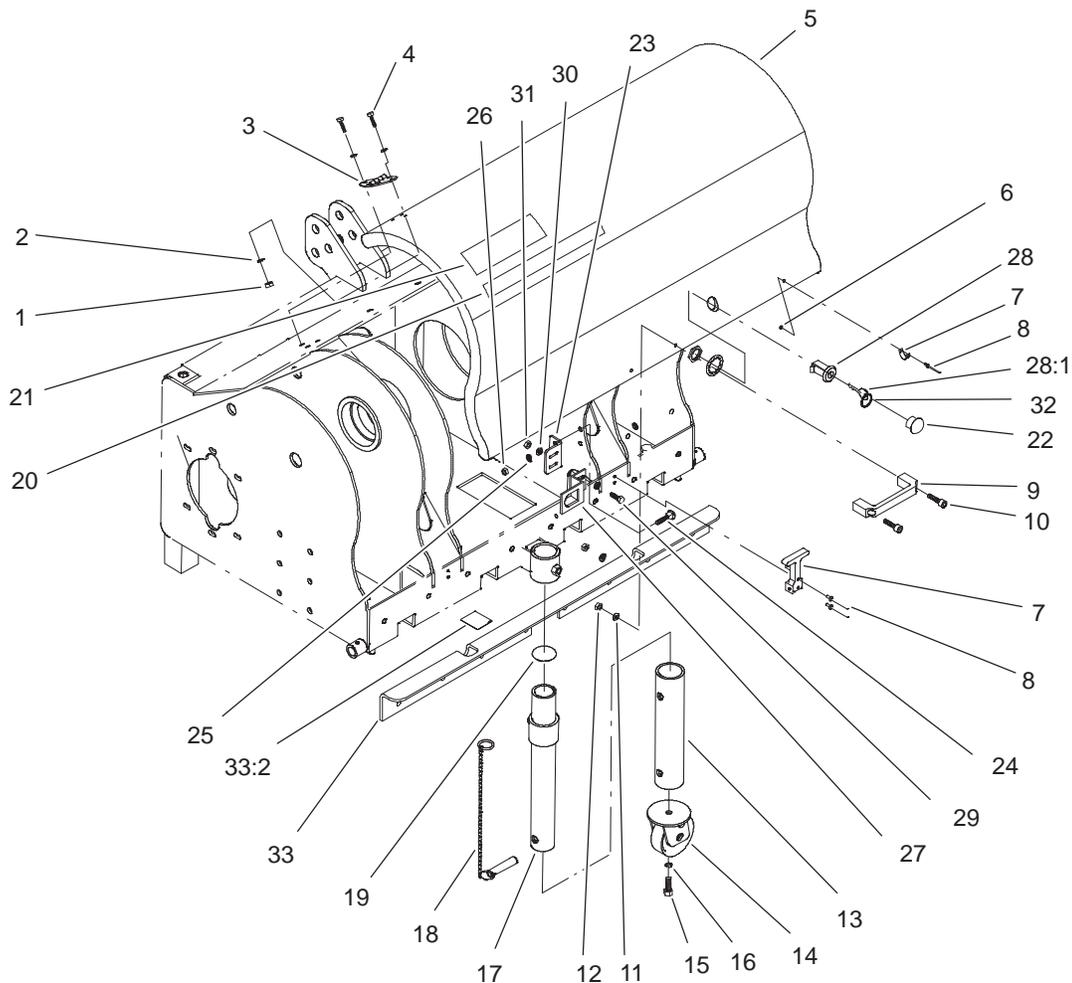


Sheet No.:2

## Hood Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	33023-00	6	Nut-Lock	24	33124-020	2	Screw-CARR (only on: 09700te)
2	33093-00	18	Washer-Flat	25	33094-00	2	Washer-Flat (only on: 09700te)
3	100-5352	2	Hinge-Hood	26	33024-00	2	Nut-Lock (only on: 09700te)
4	33113-020	12	Screw-HH	27	98-9316	1	Latch - Hood (only on: 09700te)
5	100-7591	1	Hood	28	98-9315	1	Latch - Locking (only on: 09700te)
6	3269-10	4	Washer-Back	28:1	99-8350	2	Key - Latch, Locking (only on: 09700te)
7	59-9740	2	Latch ASM-Flex Draw	29	33113-030	2	Screw-HH (only on: 09700te)
7:2	249-40	1	Keeper	30	33093-00	4	Washer-Flat (only on: 09700te)
8	3269-24	8	Rivet	31	33023-00	2	Nut-Lock (only on: 09700te)
9	100-5353	1	Handle-Hood	32	98-9321	1	Ring-Key (only on: 09700te)
10	100-7601	2	Screw-HSH	33	104-9906	1	Angle-Service
11	33094-00	2	Washer-Flat	33:2	100-3614	1	Decal-Warning
12	33024-00	2	Nut-Lock				
13	104-0971	1	Tube-Castor, Outer				
14	100-5370	1	Wheel-Caster				
15	33116-045	1	Screw-HH				
16	3253-7	1	Washer-Lock				
17	104-0970	1	Tube-Castor, Inner				
18	100-7551	1	Pin ASM				
19	100-7563	1	Cap-Plastic				
20	100-3616	1	Decal-Procore 440				
21	92-1242	1	Decal-Toro				
22	104-1453	1	Grommet (only on: 09700)				
23	100-3637	1	Bracket-Ce (only on: 09700te)				



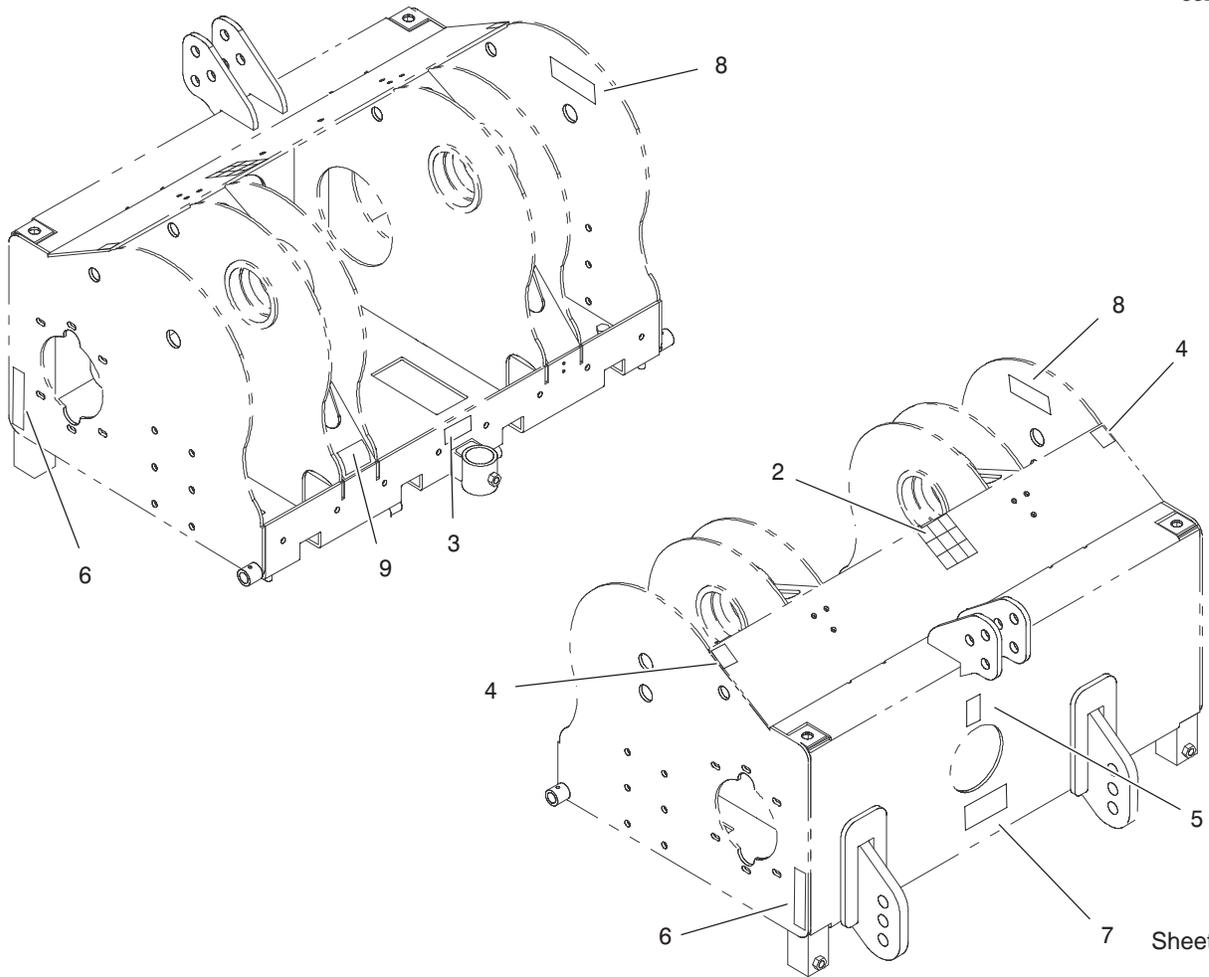

Sheet No.:A1  
T-3584

## Decals

Ref. No.	Part No.	Qty.	Description
2	100-3615	1	Decal-Warning
3	100-3614	1	Decal-Warning
4	100-5444	2	Decal-Depth Adjustment
5	100-5443	1	Decal-540 Rpm
6	100-5442	2	Decal-Depth Gauge
7	100-3613	1	Decal-Warning
8	93-9879	2	Decal - Warning
9	100-3612	1	Decal-Warning

Ref. No.	Part No.	Qty.	Description














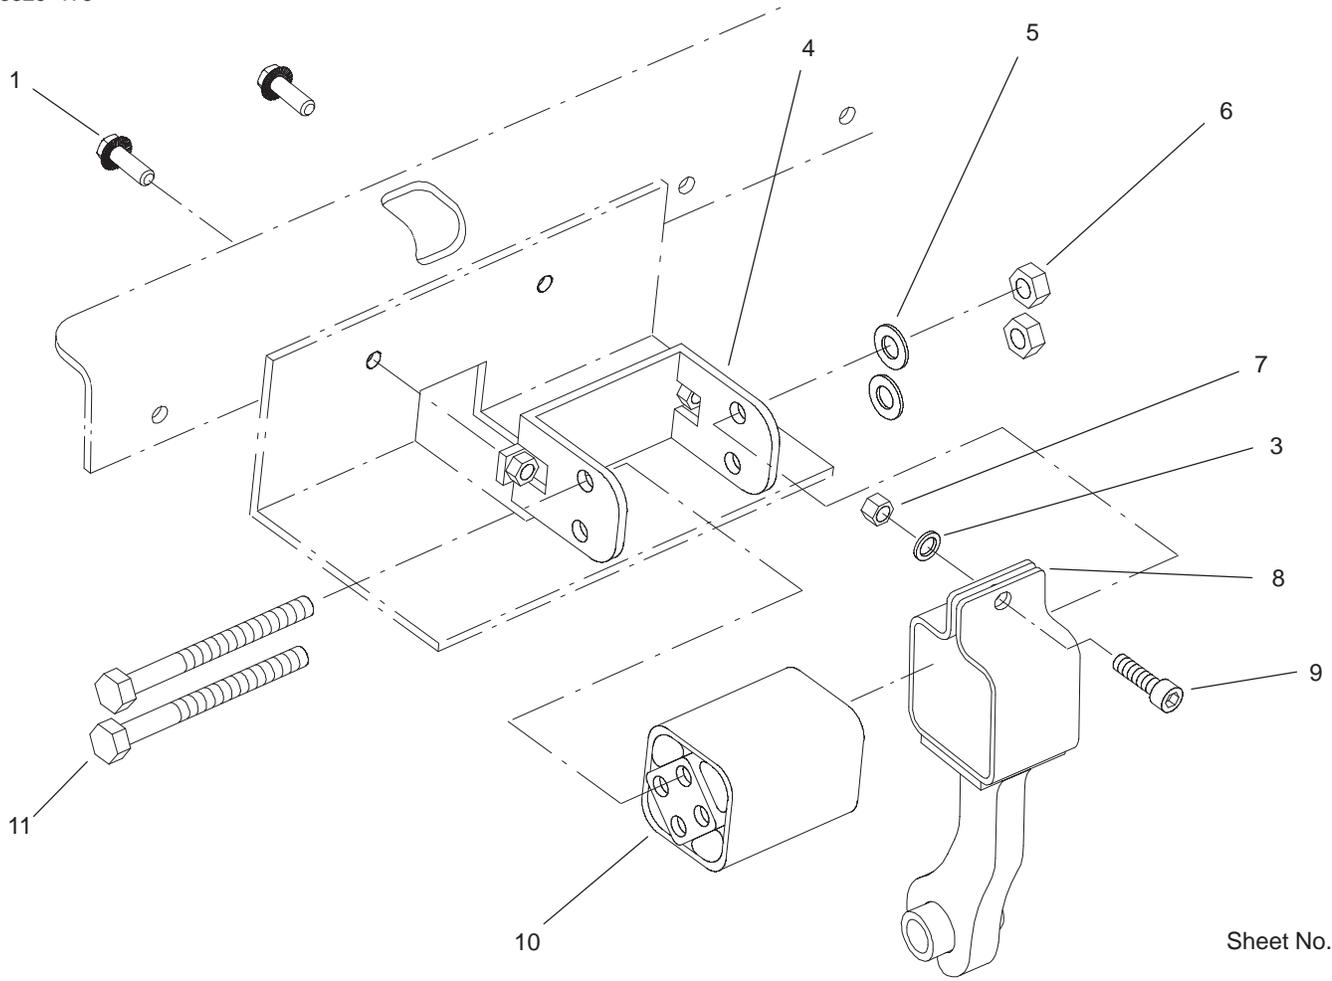

Sheet No.:8

## Rotalink Assembly

Ref. No.	Part No.	Qty.	Description
1	104-9900	8	Screw-Serrated Flange
3	33095-00	4	Washer-Flat
4	100-5393-03	4	Bracket-Rotalink
5	33096-00	8	Washer-Flat
6	33026-00	8	Nut-Lock
7	33025-00	4	Nut-Lock
8	104-9871-03	4	Rotalink Arm ASM
9	100-7602	4	Screw-HSH
10	100-5395	4	Element-Rotalink
11	33116-140	8	Screw-HH

Ref. No.	Part No.	Qty.	Description







