



17–44HXL Indy Special Edition

Wheel Horse® Lawn Tractor

Model No. 71233–210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

Contents

Description	Page
Frame and Body Assembly	3
Hood and Tower Assembly	4
Rear Body and Seat Assembly	5
Steering Assembly	6
Steering Assembly	7
Engine System Assembly	8
Traction Brake Assembly	9
Wheel and Tire Assembly	10
Hydro Transaxle Assembly	11
Hydro Transaxle Controls and NMIR Assembly .	12
Height of Cut Assembly	13
Electrical Assembly	14
Electrical Schematic	15
Housing and Bearing Assembly	16
Gear Assembly	17
Axle Assembly	18
Cylinder Assembly Briggs and Stratton Model 312777–0128–E1	19
Cylinder Head Assembly Briggs and Stratton Model 312777–0128–E1	20


Description	Page
Crankcase Assembly Briggs and Stratton Model 312777–0128–E1	21
Carburetor Assembly Briggs and Stratton Model 312777–0128–E1	22
Governor Assembly Briggs and Stratton Model 312777–0128–E1	23
Oil Filter, Tube, and Pump Assembly Briggs and Stratton Model 312777–0128–E1	24
Air Cleaner Assembly Briggs and Stratton Model 312777–0128–E1	25
Blower Housing Assembly Briggs and Stratton Model 312777–0128–E1	26
Starter Assembly Briggs and Stratton Model 312777–0128–E1	27
Carburetor Overhaul Kit Assembly Briggs and Stratton Model 312777–0128–E1	28
Maintenance	29–31

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning
AR	as required
ASM	assembly
CARR	carriage
DEG	degrees
FH	flat head
GA	gauge
HF	hex flange
HH	hex head
HHF	hex head flange
HLH	hex lag head
HJ	hex jam
HOC	height-of-cut
HS	hex socket
HSBH	hex socket button head
HSFH	hex socket flat head
HSH	hex socket head
HWH	hex washer head
HWHTF	hex washer head thread forming

Abbreviation	Meaning
INC	incorporated
LH	left hand
NI	nylon insert
PPH	Phillips pan head
PTH	Phillips truss head
PTO	power take off
RH	right hand
SFH	slotted fillister head
SHH	slotted hex head
SQH	square head
SHWH	slotted hex washer head
SPH	slotted pan head
SRH	slotted round head
STD	standard
TAP	self tapping
TTH	Torx truss head
WH	wing head

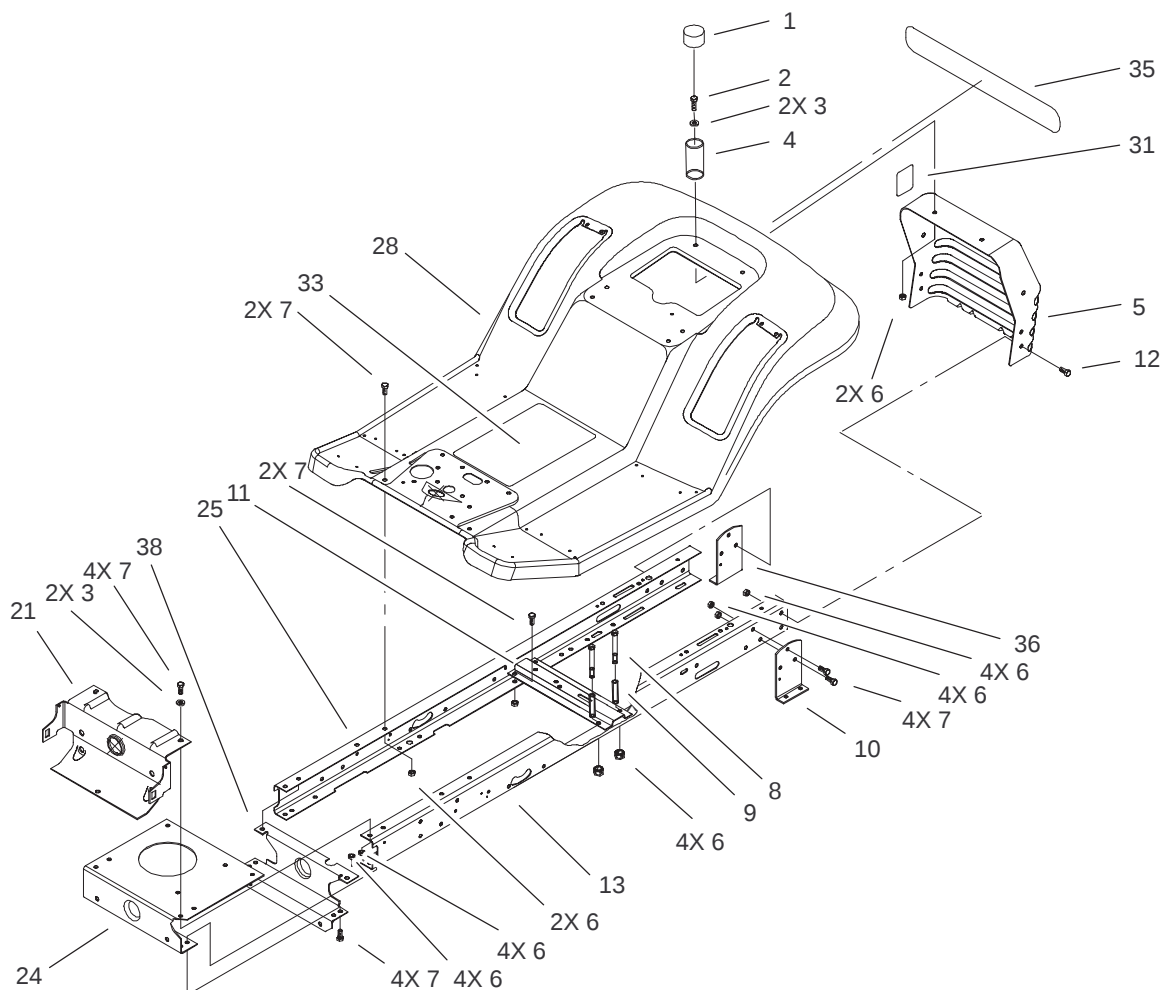


Sheet No.:2

Frame and Body Assembly

Ref. No.	Part No.	Qty.	Description
1	701178	2	Cap-Protector
2	322-5	2	Screw-HH
3	3256-23	4	Washer-Flat
4	88-6220	2	Spring - Compression
5	99-2957-03	1	Panel-Rear Hitch
6	3296-29	24	Nut-Lock NI
7	322-3	16	Screw-HH
8	322-13	2	Screw-HH
9	88-5470	2	Spacer-Front Axle
10	93-3857-03	1	Bracket-LH Trans Mounting
11	88-4620-03	1	Bracket-Idler Pivot
12	94-7817	4	Bolt - Shoulder
13	99-2958-03	1	Rail- LH Frame
21	98-3576-03	1	Support-Front Axle
24	88-4630-03	1	Plate-Eng Mtg
25	99-2959-03	1	Rail- RH Frame
28	99-2971	1	Rear Body ASM
31	100-7449	1	Decal-Dump Valve
33	99-6095	1	Decal - Instruction Hydro
35	95-0809	1	Decal-Rear Body
36	93-3856-03	1	Bracket-RH Trans Mounting
38	93-3831-03	1	Support - Rear

Ref. No.	Part No.	Qty.	Description

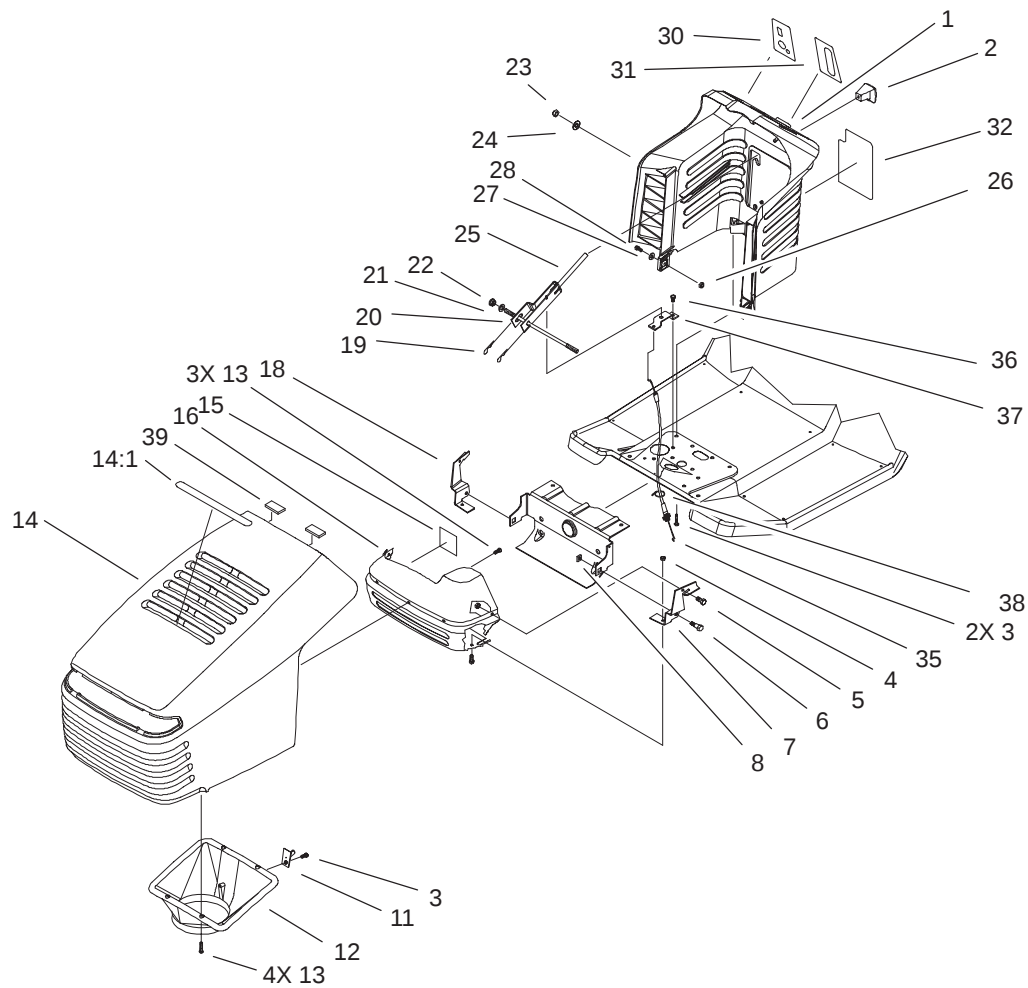


Sheet No.:3

Hood and Tower Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering
2	94-5565	1	Knob - Shift
3	46-8091	3	Screw-HWH
4	3296-42	4	Nut-Lock, NI
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-LH Hinge
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch - Pin
12	93-3891	1	Duct - Hood Air
13	46-8090	7	Screw-Plastite
14	92-8650	1	Hood-V-Chassis
14:1	92-5748	1	Decal-Air Duct Toro
15	92-5782	3	Tape-Foil
16	93-3864-03	1	Shield - Heat
18	88-6040-03	1	Bracket-RH Hinge
19	3290-307	2	Pin-Hair
20	100-7401	1	Rod-Tower Pivot
21	3256-24	2	Washer-Flat
22	3218-3	2	Nut-Jam
23	100-7402	2	Nut-Cap
24	100-7403	2	Washer-Flat
25	88-5190-03	1	Lever-Deck Engage
26	3296-29	2	Nut-Lock NI
27	3256-23	2	Washer-Flat


Ref. No.	Part No.	Qty.	Description
28	322-3	2	Screw-HH
30	99-8139	1	Decal-Ignition/Lights
31	92-2461	1	Decal - Throttle
32	92-2462	1	Decal - Deck Engage
35	99-6838	1	44 Inch Deck Cable
			ASM
36	9266714	2	Screw-HWH
37	93-3849	1	Brkt-Upper Cable
38	614249	1	Tie-Strap
39	94-1980	2	Foam - Hood

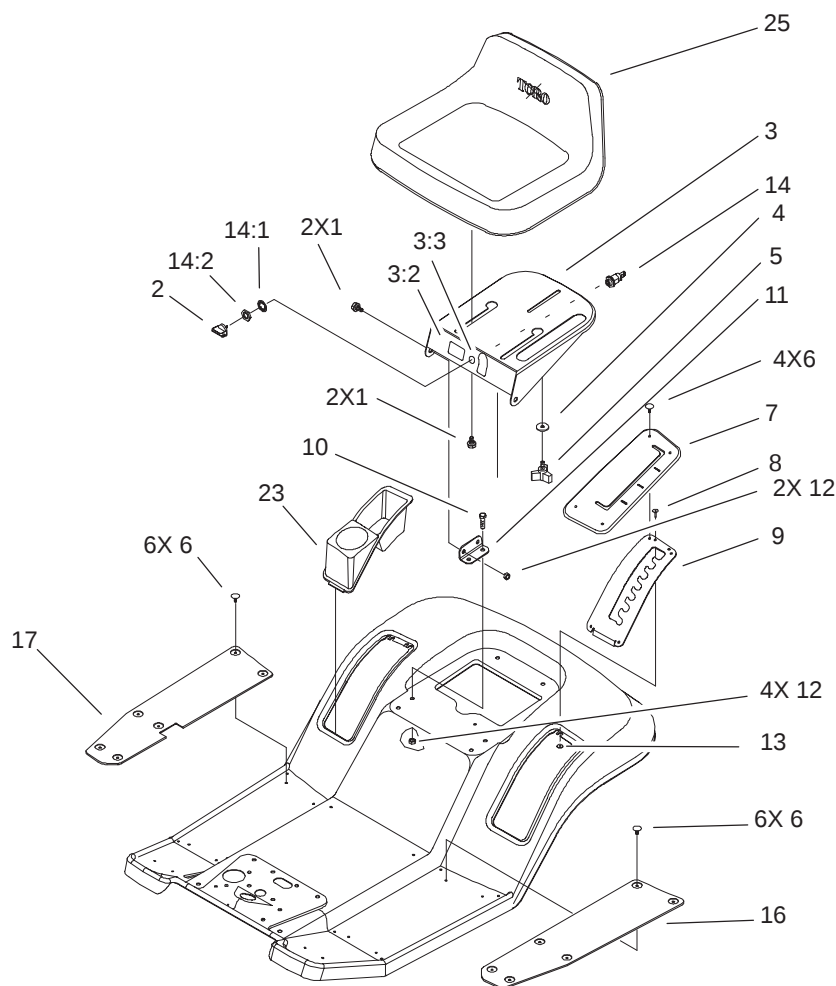

Sheet No.:4

Rear Body and Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	63-8360	1	Key-Ignition
3	99-5830	1	Seat Support ASM
3:2	99-2985	1	Decal-Danger
3:3	99-5339	1	Decal
4	5-4460	1	Washer-Pivot
5	92-9674	1	Knob
6	3290-479	16	Fastener-Panel
7	88-5170	1	Cover - HOC
8	3290-282	2	Rivet-Pop, Steel
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Seat Hinge
12	3296-29	6	Nut-Lock NI
13	3269-26	2	Washer-Flat
14	46-5780	1	Switch-Starter
14:1	3254-5	1	Washer-Lock, Internal
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-LH Foot
17	88-5230	1	Mat-RH Foot Hydro
23	88-4990	1	Tray - Fender
25	92-6511	1	Seat-V-511

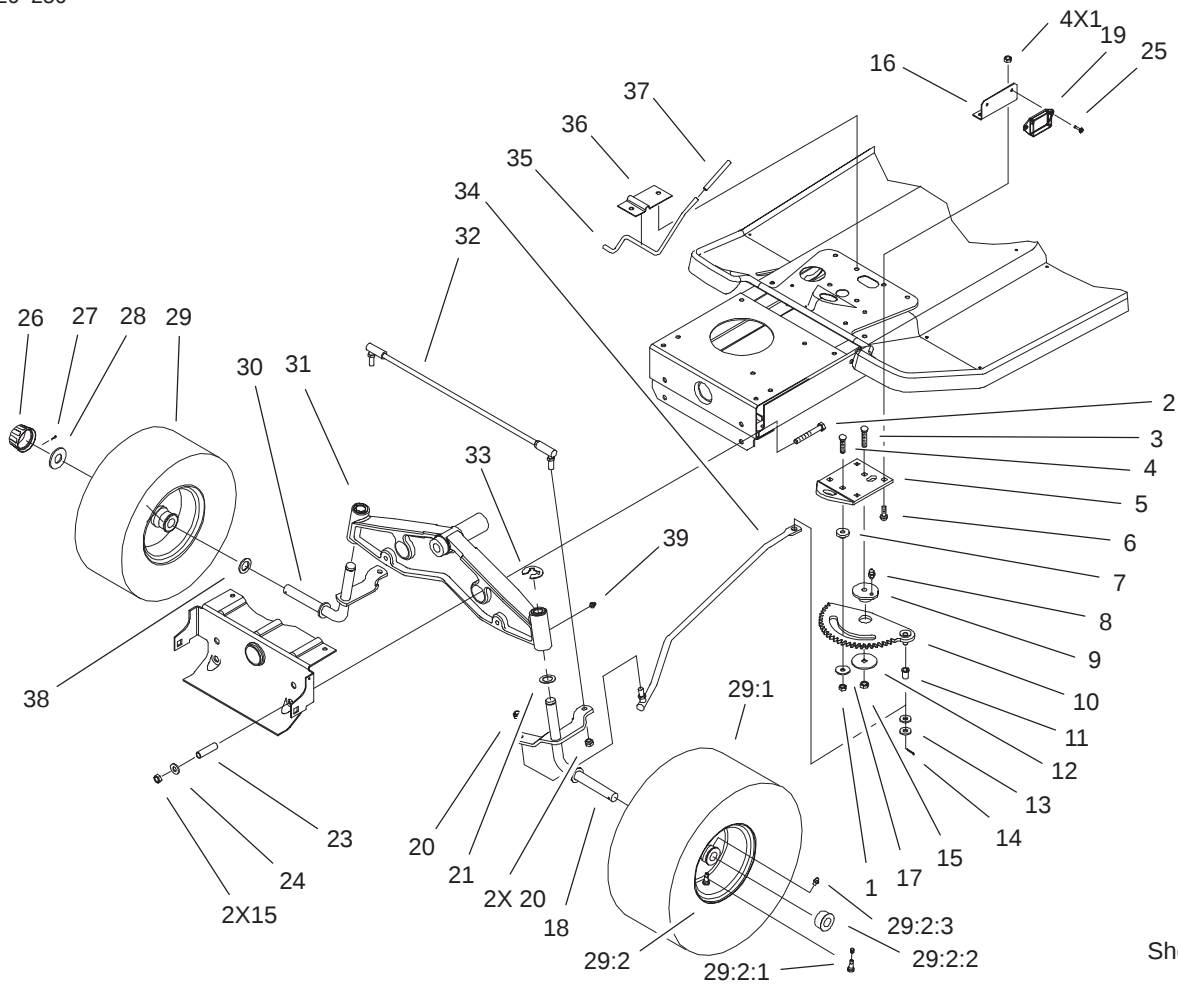


Sheet No.:5

Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Steering Rack
6	3230-2	4	Screw-CARR
7	88-5010	1	Spacer - Steering Rack
8	302-26	1	Zerk
9	88-4670	1	Bushing - Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	1	Bushing-Link, Steering
12	111419	1	Bearing-Washer
13	3256-25	2	Washer-Flat
14	3272-10	1	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	93-3833-03	1	Spindle-LH
19	99-3700	1	Module-Nmir
20	3296-5	3	Nut-Lock NI
21	3-6498	2	Washer-Thrust
23	88-5470	2	Spacer-Front Axle
24	3256-24	2	Washer-Flat

Ref. No.	Part No.	Qty.	Description
25	9266714	2	Screw-HWH
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
☆29		2	Front Wheel And Tire ASM
29:1	99-2988	1	Tire
29:2	88-4370	1	15 Inch Rim ASM
29:2:1	232-27	1	Stem-Valve
29:2:2	88-4400	2	Bearing - Wheel
29:2:3	302-5	1	Fitting-Grease
*	232-39	1	Tube
30	92-7889-03	1	Spindle-RH
31	99-2955-03	1	Axle-Front
32	93-3873	1	Tie Rod ASM
33	32151-48	2	E-Ring
34	93-3840	1	Link-Drag
35	88-5510	1	Rod-Parking Brake
36	88-5520-03	1	Bracket-Parking Brake
37	88-0890	1	Grip-Bag Handle
38	3-6498	4	Washer-Thrust
39	302-5	2	Fitting-Grease


☆ Not serviced
 * Not illustrated

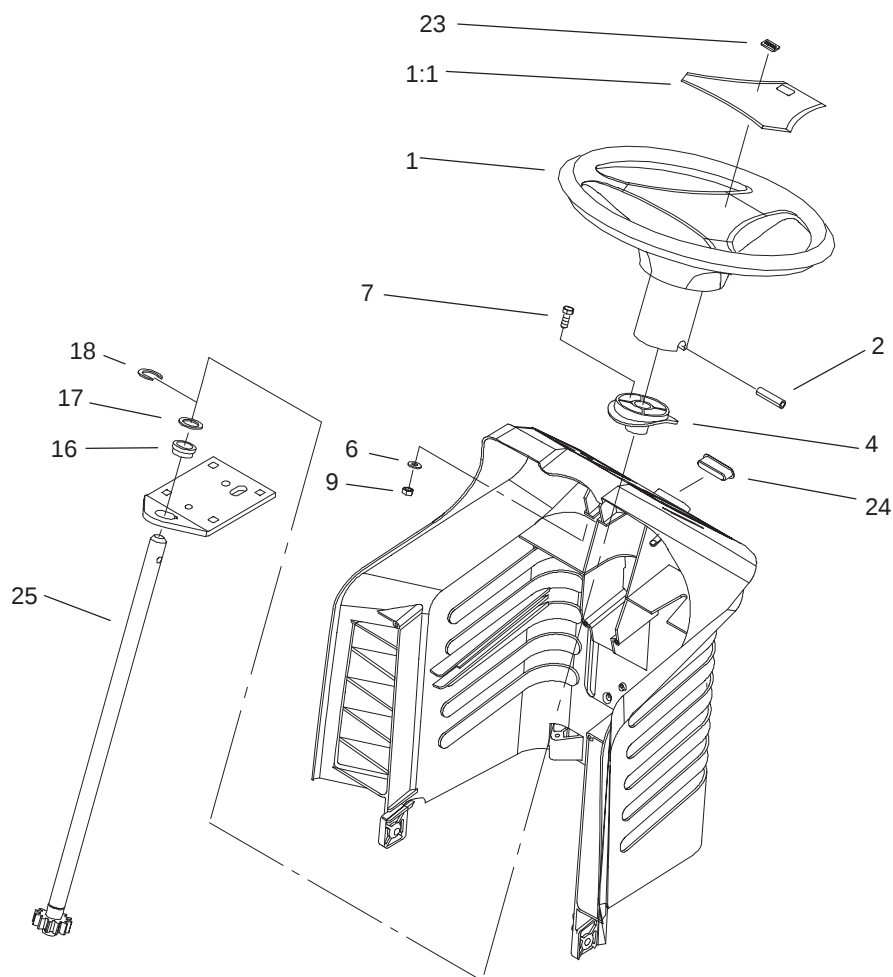

Sheet No.:6

Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	98-1467	1	Wheel – Steering
1:1	98-1468	1	Cover–Wheel, Steering
2	32121-111	1	Pin–Roll
4	88-4190	1	Bushing – Sliding
6	3256-22	2	Washer–Flat
7	321-4	2	Screw–HH
9	3296-42	2	Nut–Lock, NI
16	88-5150	1	Bearing–Flange
17	3-6498	1	Washer–Thrust
18	32151-48	1	E–Ring
23	98-1459	1	Decal–Toro
24	88-4150	1	Plug
25	88-6380	1	Shaft–Long Steering

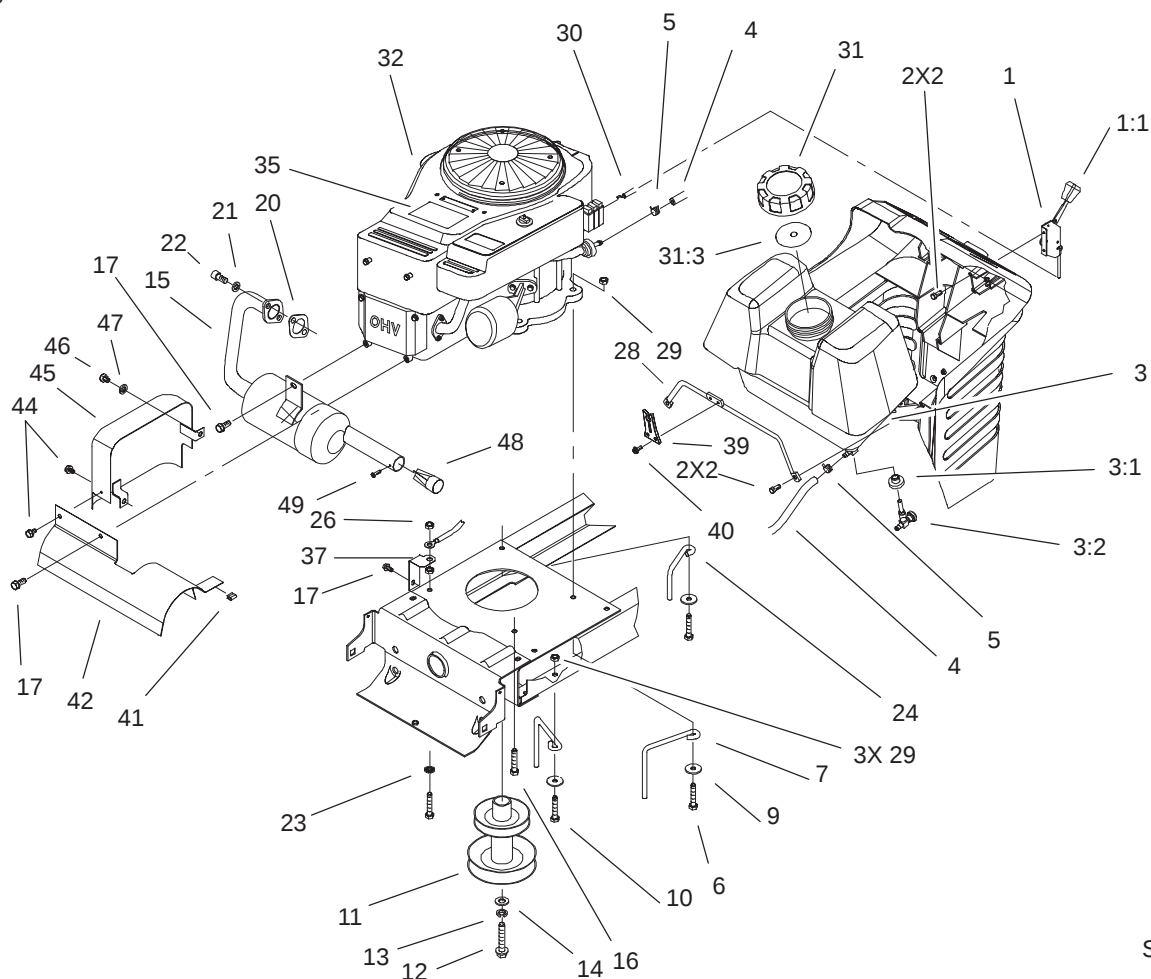


Sheet No.:7

Engine System Assembly

Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	104047	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Gas
5	2412-98	2	Clamp
6	322-9	3	Screw-HH
7	93-3854	3	Guide - Belt Engine
9	5-4460	4	Washer-Pivot
10	322-5	2	Screw-HH
11	100-7414	1	Pulley-Engine
12	62-3760	1	Screw-HH
13	3253-22	1	Washer-Lock
14	3256-25	1	Washer-Flat
15	99-6845	1	Muffler-17 HP
16	9267154	1	Screw
17	9266714	3	Screw-HWH
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock/Ext
24	93-3855	1	Guide - Belt RH
26	32149-1	2	Nut
28	94-1952	1	Rod - Gas Tank

Ref. No.	Part No.	Qty.	Description
29	3296-29	4	Nut-Lock NI
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
☆32		1	Engine-17.0 Briggs And Stratton Model 312777-0128-E1
35	99-8057	1	Decal - Engine
37	93-3809	1	Bracket- Ground
39	94-1951	1	Latch - Hood
40	32144-112	2	Screw-HWHTF
41	93-3882	1	Clip - Tinnerman, U
42	93-3880-03	1	Shield-Muffler
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock
48	93-9911	1	Screen-Silencer, Exhaust
49	32144-42	1	Screw-HH


☆ Not serviced

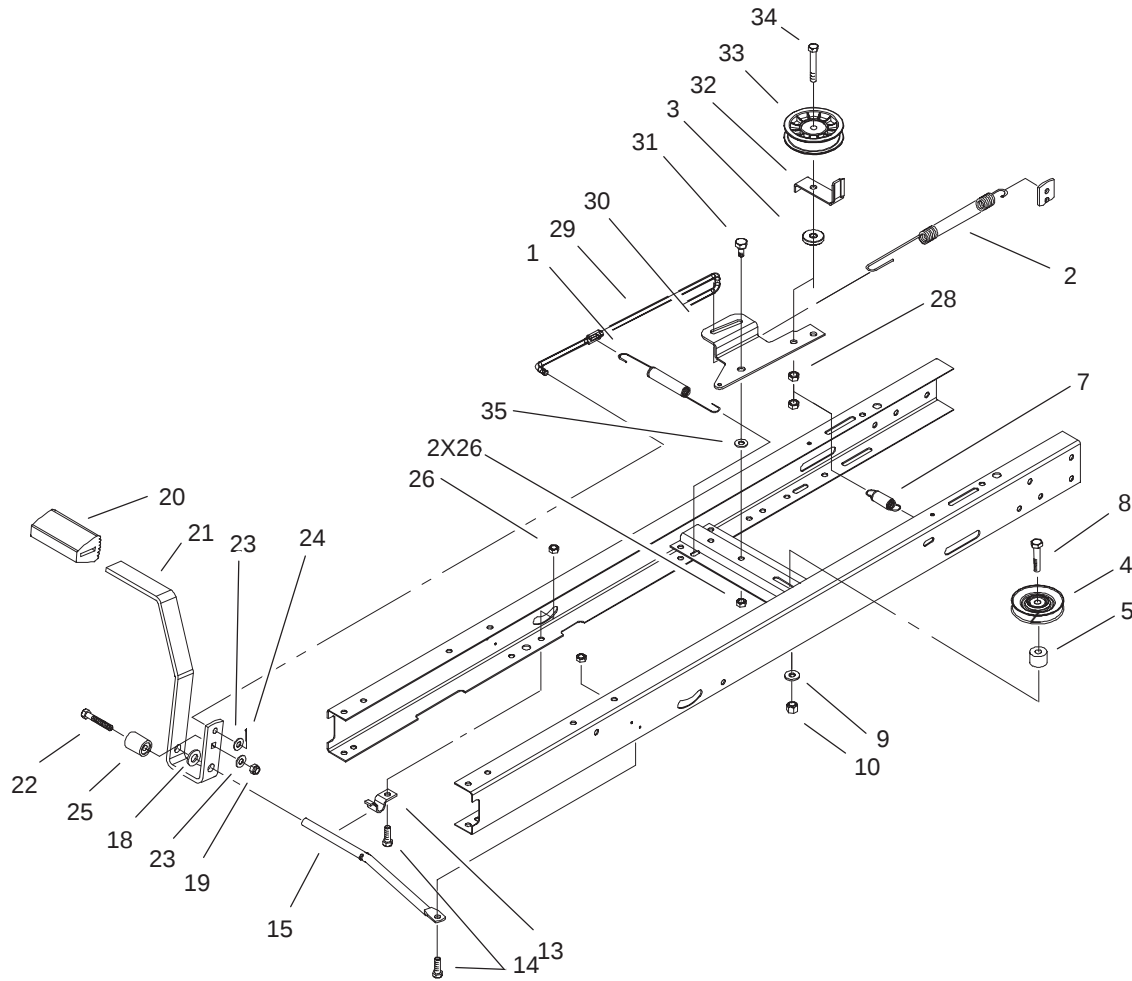

Sheet No.:8


Traction Brake Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring-Return	33	104-4160	1	Pulley-Idler
2	100-7422	1	Spring-Brake	34	323-11	1	Screw-HH
3	92-4890	1	Washer - Wheel	35	5-4460	1	Washer-Pivot
4	92-7102	1	Pulley-Idler				
5	92-5791	1	Spacer				
7	88-6330	1	Spring - Extension				
8	323-10	1	Screw-HH				
9	3256-3	1	Washer-Flat				
10	3296-39	1	Nut-Lock, NI				
13	88-4810	1	Clamp-Shift Pivot				
14	322-3	2	Screw-HH				
15	88-5500	1	Rod-Pedal Pivot				
18	3256-26	1	Washer-Flat				
19	3296-47	1	Nut-Lock, NI				
20	65-2920	1	Pad-Pedal				
21	88-5000-03	1	Pedal-Clutch/Brake				
22	322-9	1	Screw-HH				
23	3256-23	2	Washer-Flat				
24	3272-10	1	Pin-Cotter				
25	99-6836	1	Spacer-Switch				
26	3296-29	3	Nut-Lock NI				
28	3296-59	2	Nut-Lock NI				
29	88-5270	1	Rod-Clutch/Brake				
30	88-6070	1	Arm-Idler				
31	37-8770	1	Bolt-Shoulder				
32	88-5560	1	Guide-Idler Belt				

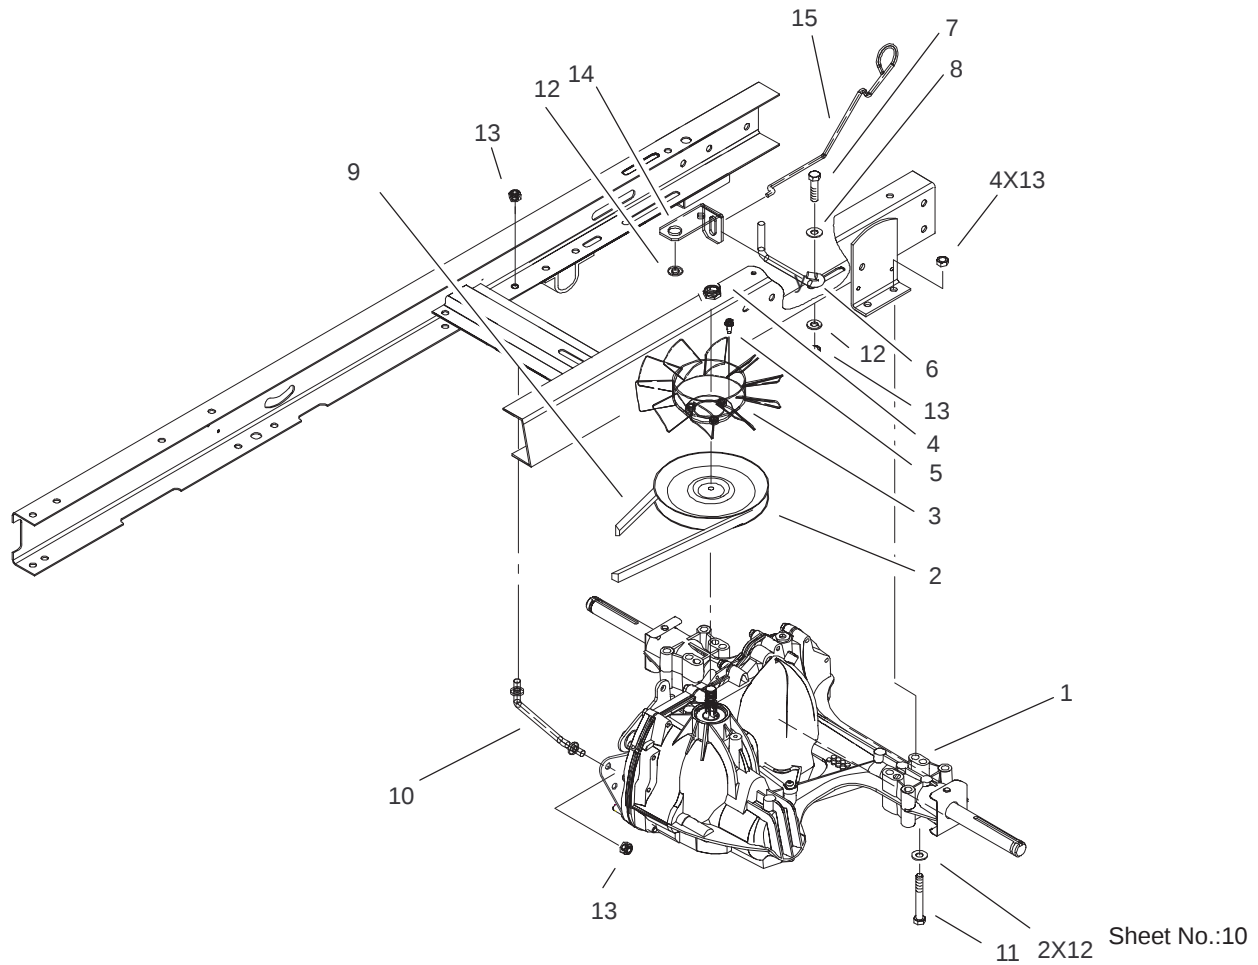

Hydro Transaxle Assembly

Ref. No.	Part No.	Qty.	Description
1	104-1760	1	Transaxle ASM
2	104-1753	1	Pulley-5.5 Inch
3	104-2162	1	Fan
4	3296-28	1	Nut-Lock NI
5	9134304	3	Screw
6	93-3868	1	Guide - Transmission Belt
7	322-5	1	Screw-HH
8	5-4460	1	Washer-Pivot
9	88-6250	1	V-Belt
10	100-6225	1	Strap-Torque
11	322-13	4	Screw-HH
12	3256-23	4	Washer-Flat
13	3296-29	7	Nut-Lock NI
14	100-7406	1	Bracket-Bypass
15	100-7407	1	Wire-Bypass

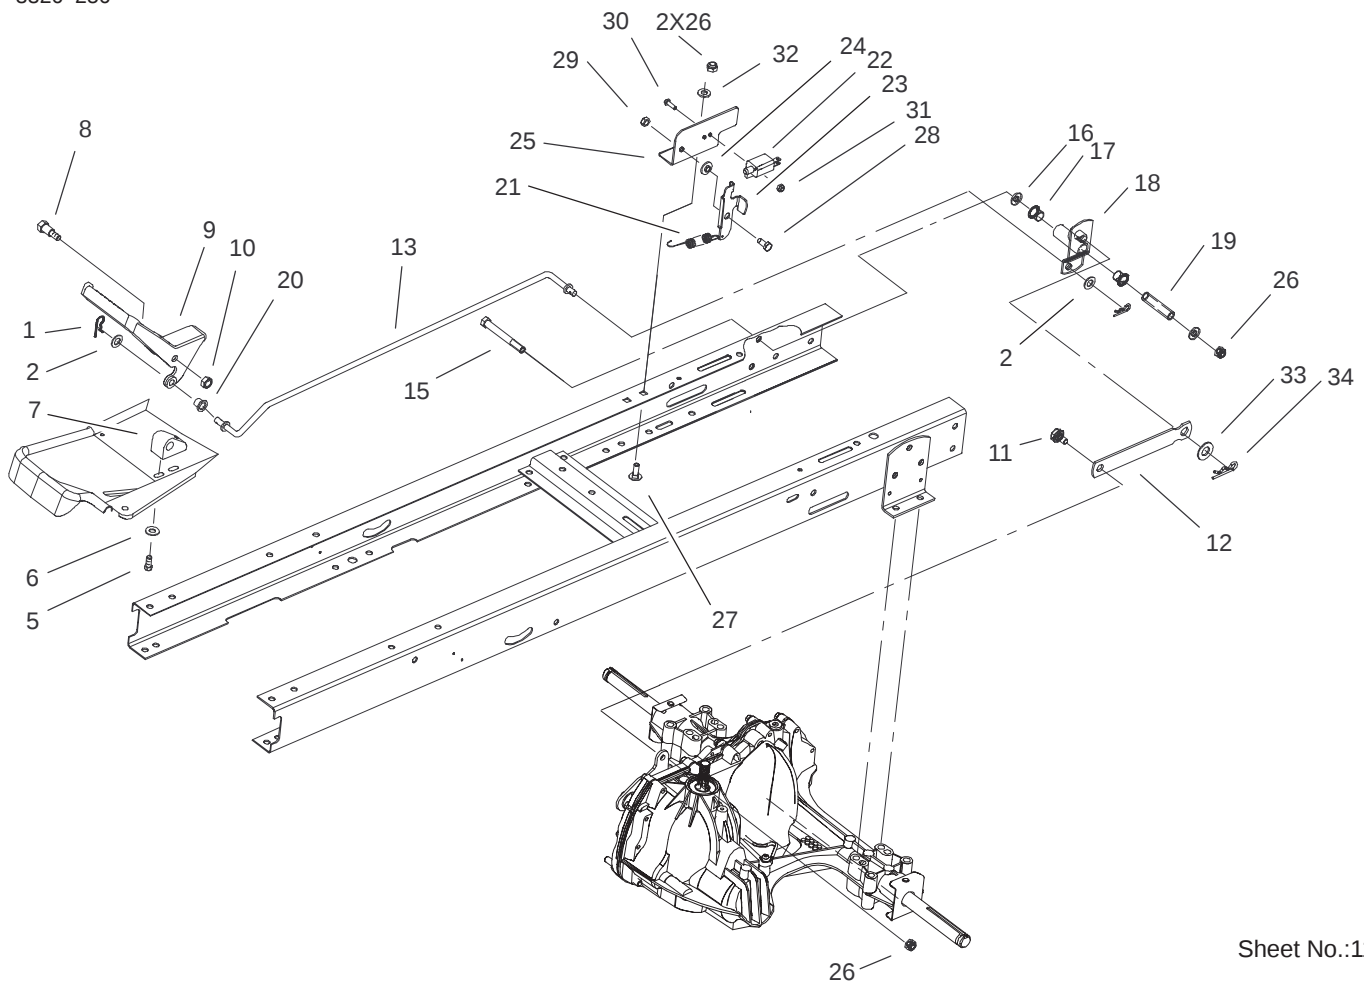


Sheet No.:11

Hydro Transaxle Controls and NMIR Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-307	2	Pin-Hair
2	3256-38	2	Washer-Flat
5	46-8090	2	Screw-Plastite
6	3256-22	2	Washer-Flat
7	88-4690	1	Block-Pivot
8	23-0310	1	Bolt-Shoulder
9	99-6120-05	1	Pedal-Speed Control
10	3296-59	1	Nut-Lock NI
11	37-8770	1	Bolt-Shoulder
12	99-6849	1	Link-Speed Control
13	99-6839	1	Rod-Speed Control
15	322-14	1	Screw-HH
16	3256-2	2	Washer-Flat
17	256-257	2	Flange-Nyliner
18	99-6835-03	1	Pivot ASM
19	99-6832	1	Spacer-Pivot
20	99-6121	1	Bushing
21	99-6805	1	Spring-Extension
22	95-1653	1	Switch - Single Pole
23	99-6807	1	Bracket - Pivot
24	99-6808	1	Washer-Stepped
25	99-6806	1	Bracket - Adjustment
26	3296-29	4	Nut-Lock NI
27	3230-18	2	Screw-CARR
28	99-6810	1	Screw-Hex Hd
29	3296-42	1	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
30	3290-392	2	Screw - HHF
31	3296-1	2	Nut-Lock NI
32	3256-23	2	Washer-Flat
33	3256-26	1	Washer-Flat
34	9335054	1	Pin-Hair

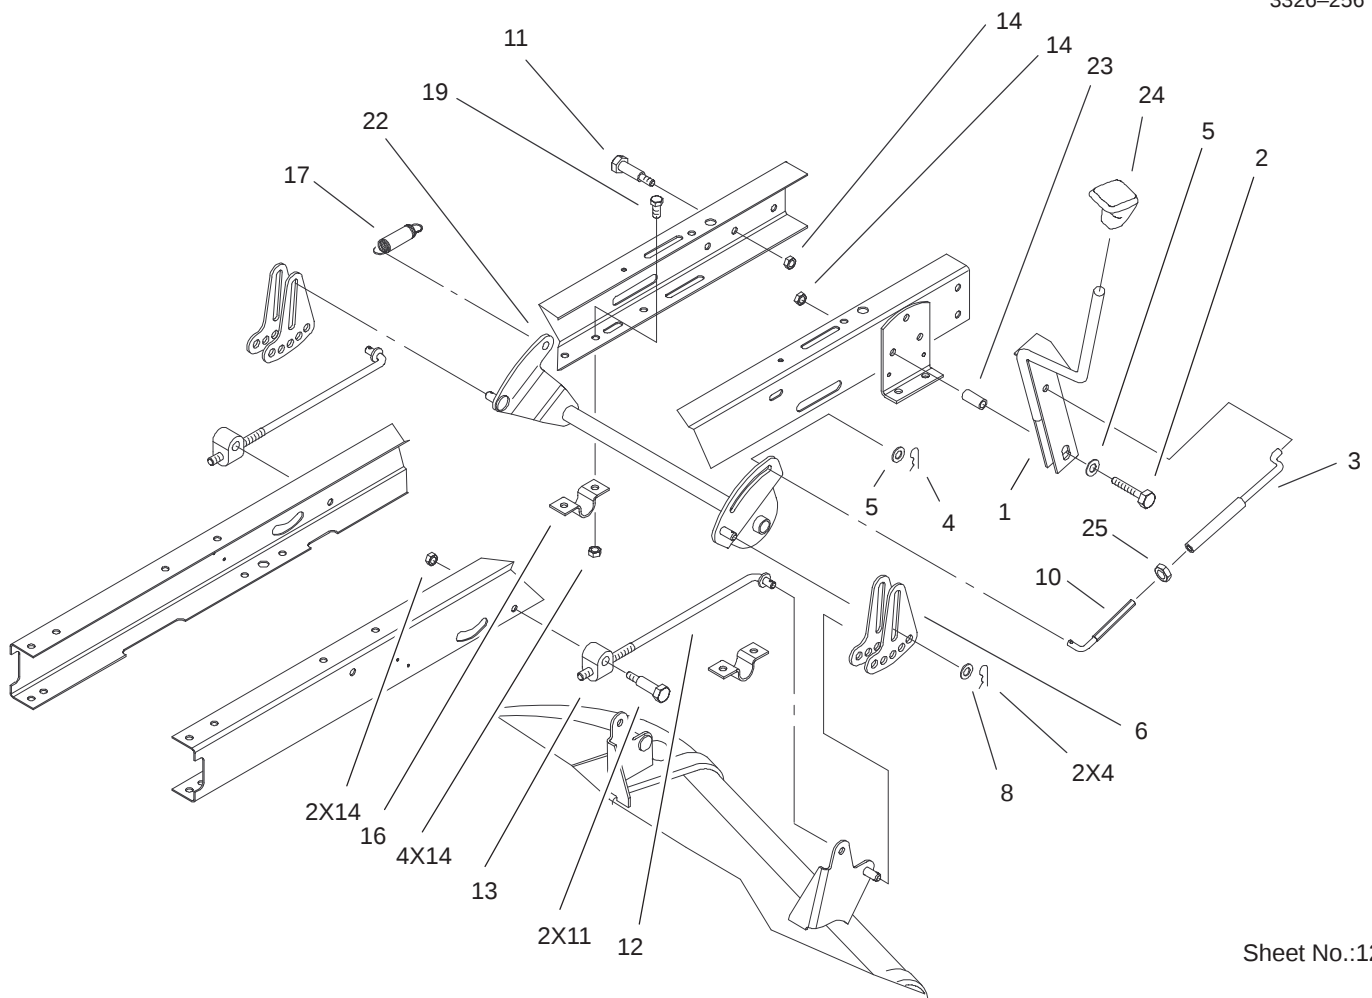


Sheet No.:12

Height of Cut Assembly

Ref. No.	Part No.	Qty.	Description
1	93-3822-03	1	Lever
2	322-39	1	Screw-HH
3	93-3885	1	Tube
4	3290-307	3	Pin-Hair
5	3256-24	2	Washer-Flat
6	88-5570-03	4	Link-HOC Adjusting
8	80-6990	2	Washer-Hardened
10	93-3888	1	Link - HOC
11	7-0030	3	Bolt-Shoulder
12	88-5450	2	Rod-Hanger Rear
13	88-4230	2	Trunnion-HOC
14	3296-29	8	Nut-Lock NI
16	88-4730	2	Clamp-HOC Pivot
17	93-3808	1	Spring - Extension
19	322-3	4	Screw-HH
22	93-7660-03	1	Pivot-HOC
23	65-7210	1	Spacer
24	94-5565	1	Knob - Shift
25	3218-2	1	Nut-Jam

Ref. No.	Part No.	Qty.	Description

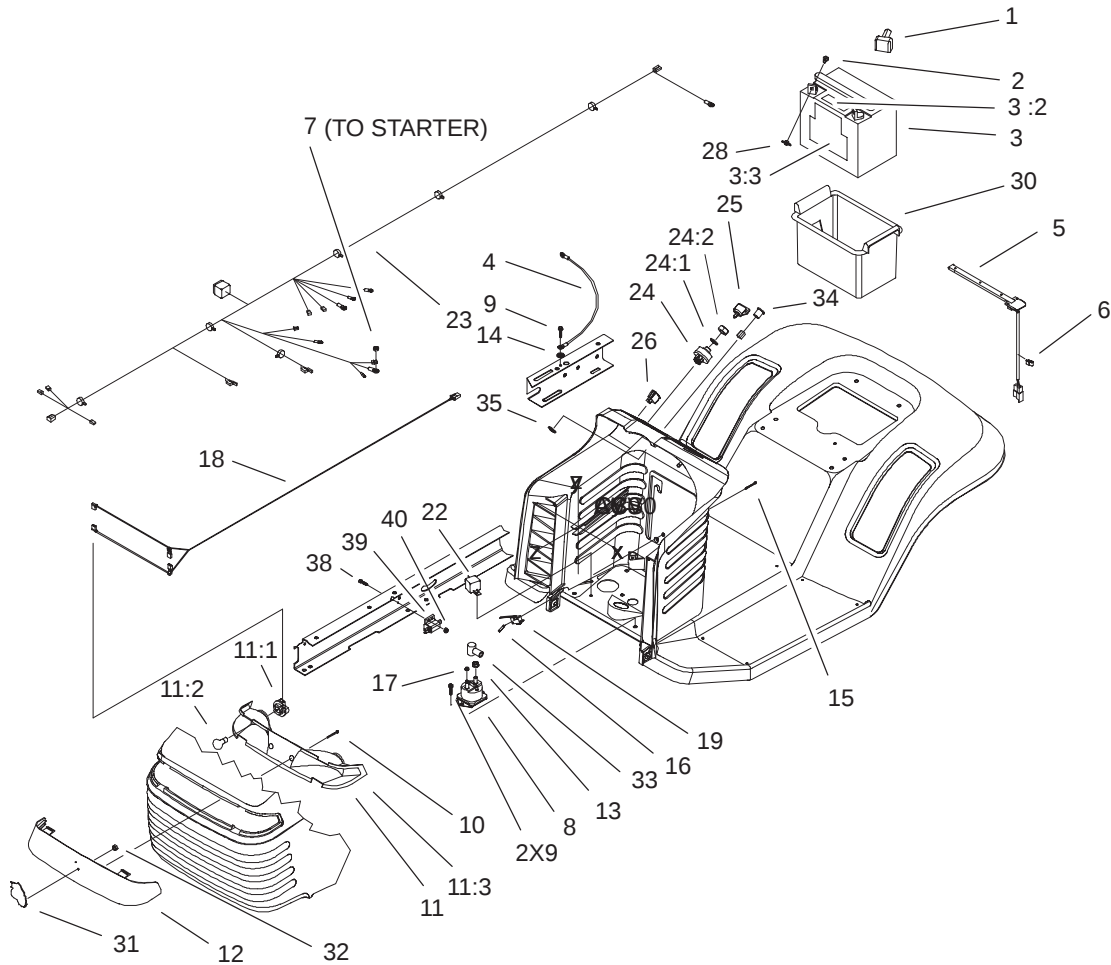


Sheet No.:13


Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery-155 Cca
3:2	104-4163	1	Decal-Battery
3:3	104-4164	1	Decal-Battery
4	44-8110	1	Wire ASM
5	38-1420	1	Switch-Seat
6	702366	1	Clip-Wire Retainer
7	32149-2	1	Nut
8	28-4210	1	Solenoid
9	9266714	3	Screw-HWH
10	32144-32	2	Screw
11	88-3970	1	Reflector And Lamp ASM
11:1	111686	2	Socket-Light
11:2	7228	2	Bulb -No. 1156
11:3	93-8741	1	Reflector
12	88-3960	1	Lens-Headlight
13	32149-1	2	Nut
14	3255-7	2	Washer-Lock/Ext
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
17	32149-8	2	Nut-Keps
18	99-1935	1	Harness-Headlight
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay

Ref. No.	Part No.	Qty.	Description
23	99-6840	1	Harness-Wire, Hydro
24	88-9830	1	Switch-Ignition
24:1	3254-5	1	Washer-Lock, Internal
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch - Rocker
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	95-4248	1	Logo - Horsehead
32	3290-299	1	Clip
33	93-3190	1	Boot-Terminal Insulator
34	95-7652	1	Light - Indicator
35	99-6059	1	Clip-Retainer
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch - Single Pole
40	3296-2	2	Nut-Lock

Electrical Schematic

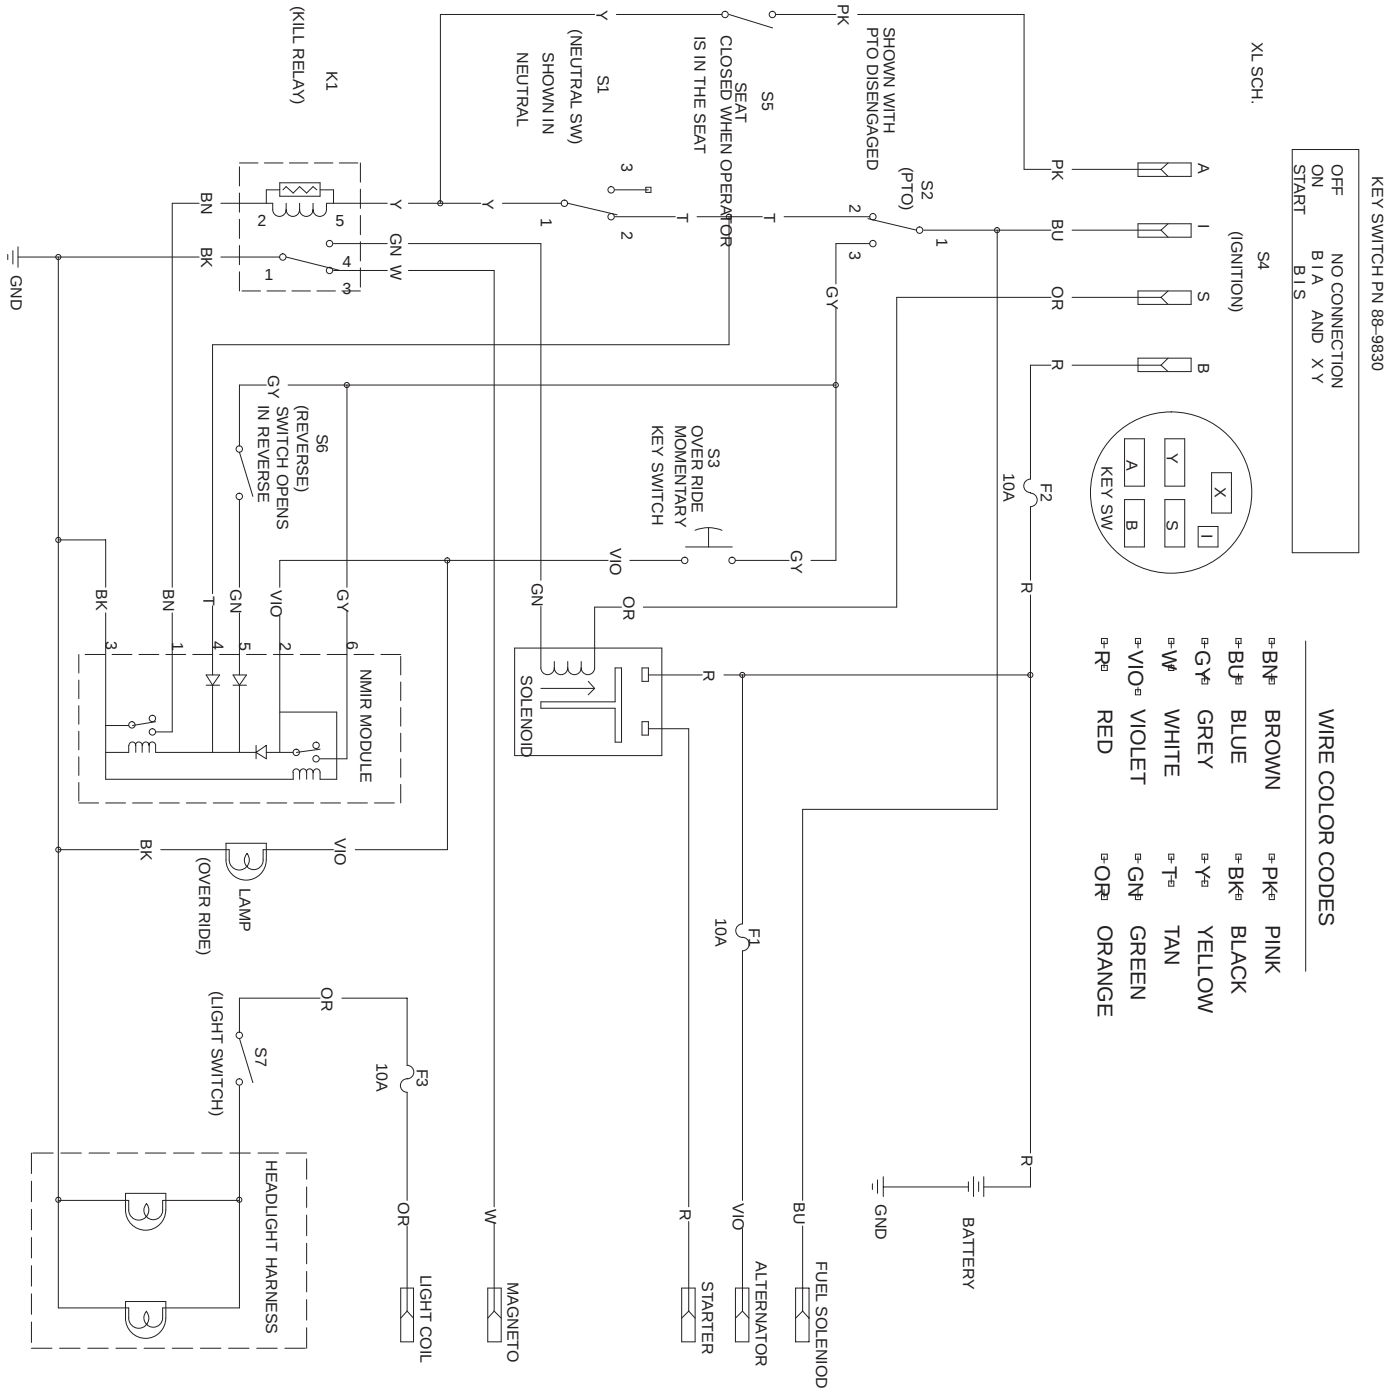

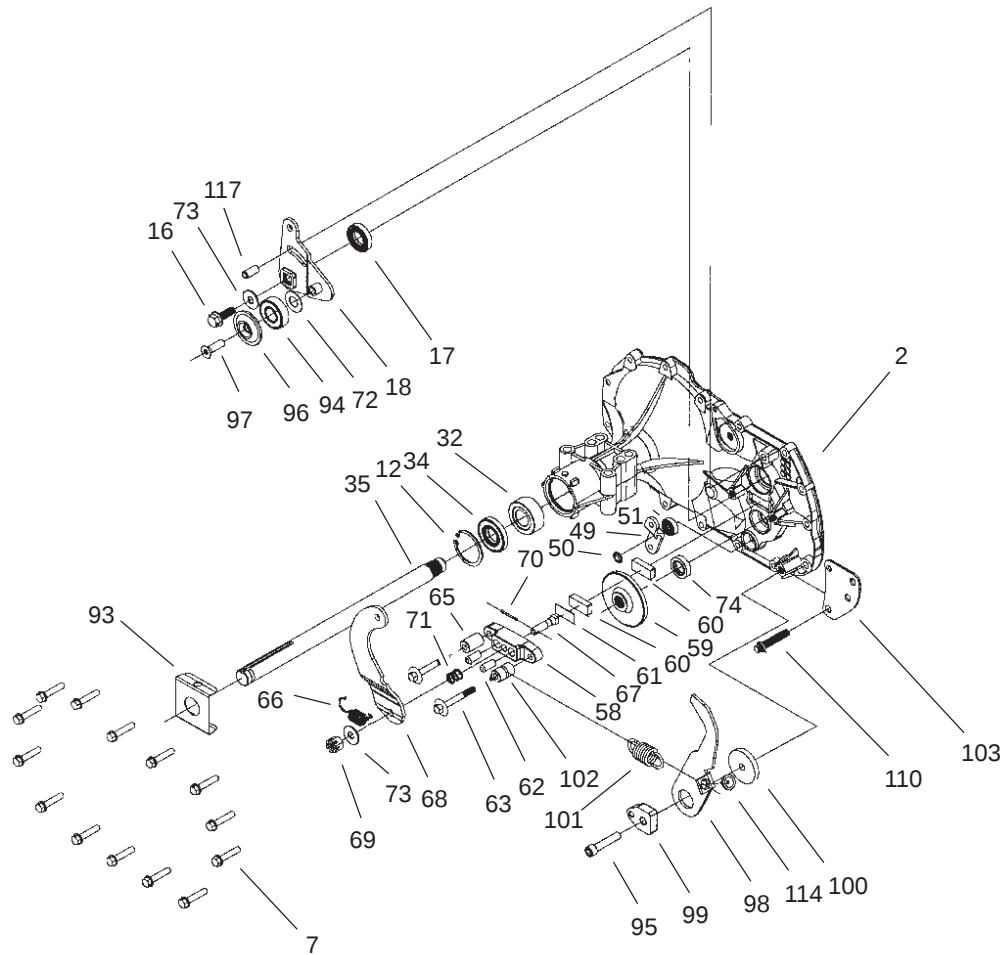


Sheet No.:3

Housing and Bearing Assembly

Ref. No.	Part No.	Qty.	Description
02	104-5302	1	Side Housing ASM
07	104-5305	14	Screw-Hex Flange
12	104-5309	1	Ring-Retaining
16	104-5312	1	Screw-Hex Flange
17	104-5313	1	Seal-Lip
18	104-5314	1	Arm-Control
32	104-5321	1	Bearing-Sleeve, Outboard
34	104-5322	1	Seal-Lip
35	104-5323	1	Shaft-Axle RH
49	104-5336	1	Arm-Bypass
50	104-5337	1	Ring-Retaining
51	104-5338	1	Seal-Lip
58	104-5343	1	Yoke-Brake
59	104-5344	1	Rotor-Brake
60	104-2171	2	Puck-Brake
61	104-2181	1	Puck-Plate
62	104-2176	2	Pin-Brake
63	104-5345	2	Screw-Hex Flange
65	104-2180	1	Spacer
66	104-2184	1	Spring-Brake Arm Bias
67	104-2174	1	Bolt-Square Head
68	104-5346	1	Arm-Brake
69	93-3807	1	Nut - Castle
70	104-2179	1	Pin-Cotter


Ref. No.	Part No.	Qty.	Description
71	104-2188	1	Spring-Brake Anti Drag Comp.
72	94-1933	1	Washer
73	104-2146	2	Washer
74	104-5347	1	Seal-Oil
93	104-5353	1	Clip-Spring
94	104-2156	1	Bearing
95	104-2155	1	Screw
96	104-2157	1	Spacer-Locating
97	104-2158	1	Screw-Countersunk
98	104-5354	1	Arm-Return
99	104-2119	1	Puck-Adjusting
100	104-5355	1	Washer
101	104-5356	1	Spring-Extension
102	104-5357	1	Spacer
103	104-5358	1	Bracket-Torque
110	104-2148	1	Screw-Torx Head
114	104-5363	1	Guide-Spring
117	104-5365	1	Pin-Spring

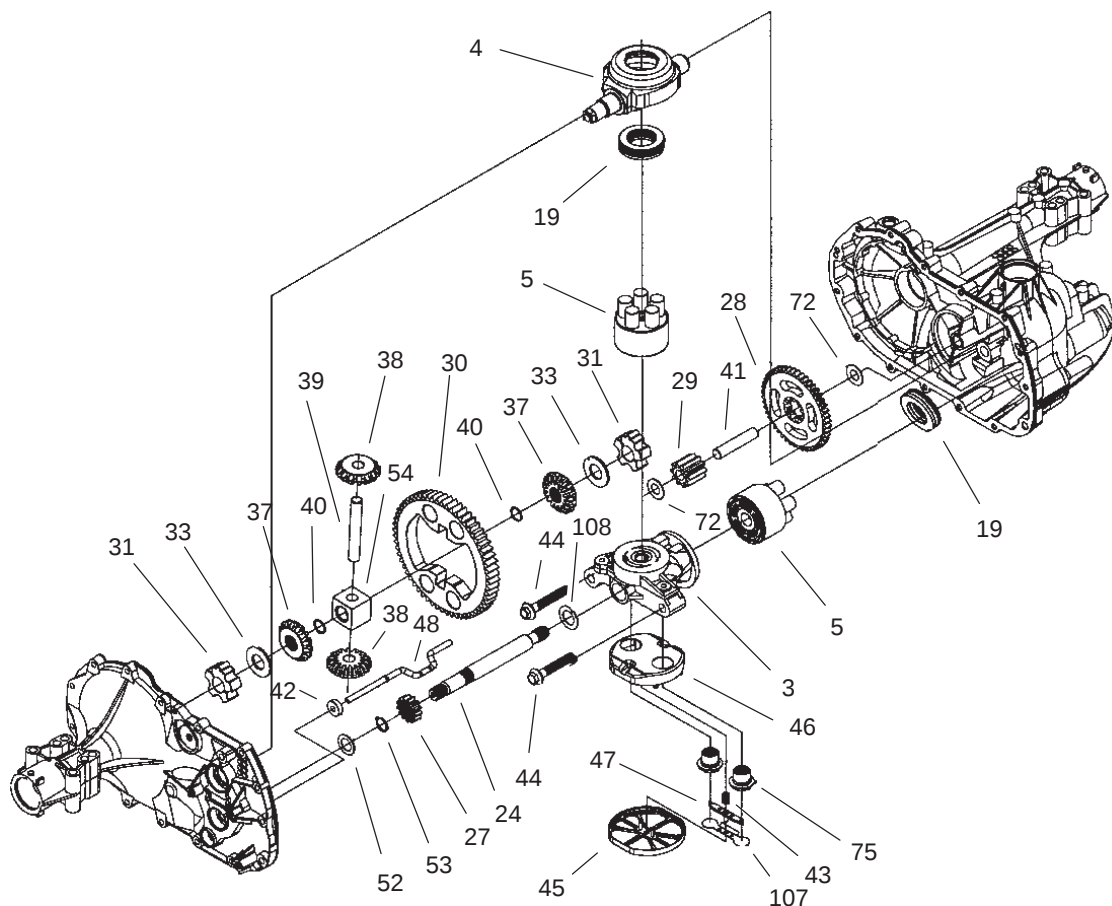

Sheet No.:4

Gear Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
03	104-5303	1	Center Section ASM	53	104-5340	1	Ring-Retaining
04	104-5304	1	Swashplate-Trunnion	54	104-5341	1	Bearing-Center Block
05	104-2106	2	10cc Cylinder Block	72	94-1933	2	Washer
19	94-6922	2	Bearing - Thrust	75	104-5348	2	Check Plug ASM
24	104-5314	1	Arm-Control	107	104-5359	1	Deflector
27	104-5316	1	Gear-Pinnion, 13t	108	104-5360	1	Washer-Motor Shaft
28	104-5317	1	Gear- 10t/48t				
29	104-5318	1	Gear-Jackshaft 10t				
30	104-5319	1	Gear-Bull 60t				
31	104-5320	2	Bearing-Sleeve				
33	94-1943	2	Washer				
37	104-5325	2	Gear-Miter				
38	104-5326	2	Gear-Miter 15t				
39	104-5327	1	Shaft				
40	104-5328	2	Ring-Spiral Retaining				
41	104-5329	1	Pin-Jackshaft				
42	104-5330	1	Magnet-Ring				
43	104-5331	1	Spring-Bypass				
44	94-6926	2	Bolt				
45	104-5332	1	Filter				
46	104-5333	1	Base-Filter				
47	104-5334	1	Actuator-Bypass				
48	104-5335	1	Rod-Bypass Actuator				
52	104-5339	1	Washer-Flat				

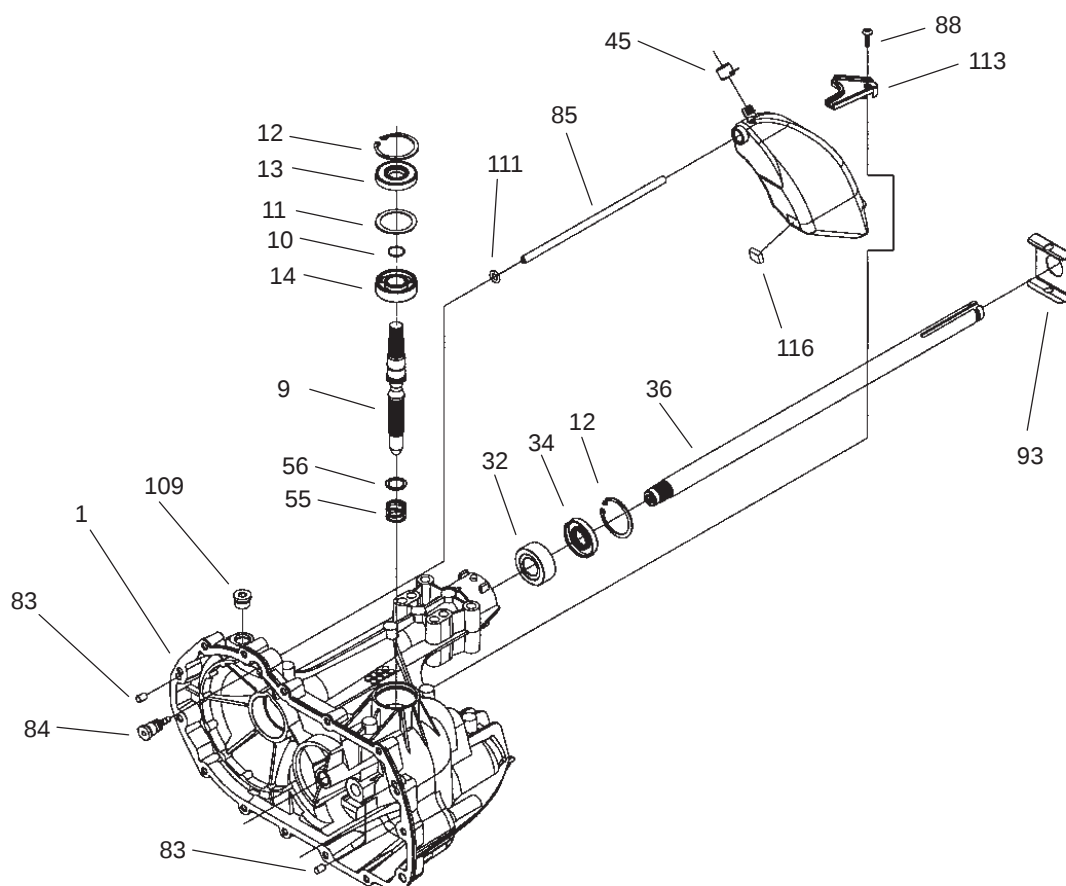


Sheet No.:5

Axle Assembly

Ref. No.	Part No.	Qty.	Description
01	104-5301	1	Main Housing ASM
09	104-5306	1	Shaft-Input
10	104-5307	1	Ring-Retaining
11	104-5308	1	Spacer
12	104-5309	2	Ring-Retaining
13	104-5310	1	Seal-Lip
14	104-5311	1	Bearing-Ball
32	104-5321	1	Bearing-Sleeve, Outboard
34	104-5322	1	Seal-Lip
36	104-5324	1	Shaft-Axle LH
55	94-1936	1	Spring - Block
56	94-1937	1	Washer - Block Thrust
83	104-2170	2	Pin-STD Hols
84	104-5349	1	Fitting-Sae
85	104-5350	1	Hose-Expansion Tank
87	104-5351	1	Cap-Vent
88	104-5352	1	Bolt-Self Tapping
93	104-5353	1	Clip-Spring
111	104-5361	1	O-Ring
113	104-5362	1	Bracket-Support
116	104-5364	1	Sponge-sillicone

Ref. No.	Part No.	Qty.	Description

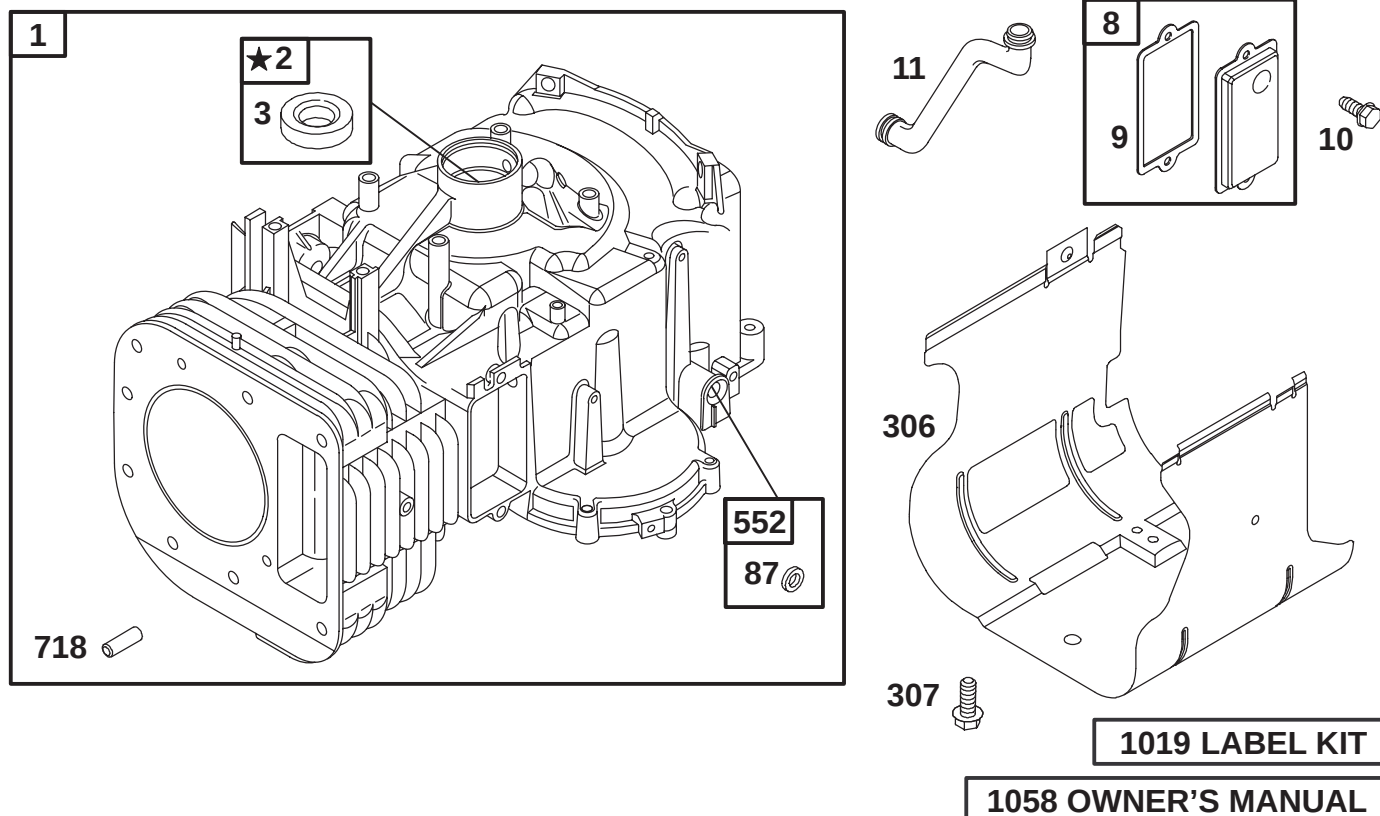

**★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

Assemblies include all parts shown in frames.

Cylinder Assembly

Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
1	690156	1	Cylinder Assembly
2	399265	1	Bushing/Seal Kit
★3	391086	1	Seal—Oil
8	495735	1	Breather Assembly
★9	27803	1	Gasket—Breather
10	691666	1	Screw—Hex.
11	281246	1	Tube—Breather
★87	491323	1	Seal—Governor Shaft
307	94930	1	Screw—Hex.
552	491986	1	Bushing—Governor Crank
718	230192	1	Pin—Locating
1019	690180	1	Label Kit
1058	273683	1	Owner's Manual


★ Included in Gasket Set—Ref. 358.

Cylinder Head Assembly

Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
1026	494432	1	Rod–Push Intake Rod–Push Exhaust
1029	224554	1	Arm–Rocker
1034	495248	1	Guide–Push Rod

▲ Included in Valve Overhaul Kit—Ref. 1033. ■ Included in Kits ★ ▲ ● ◆.

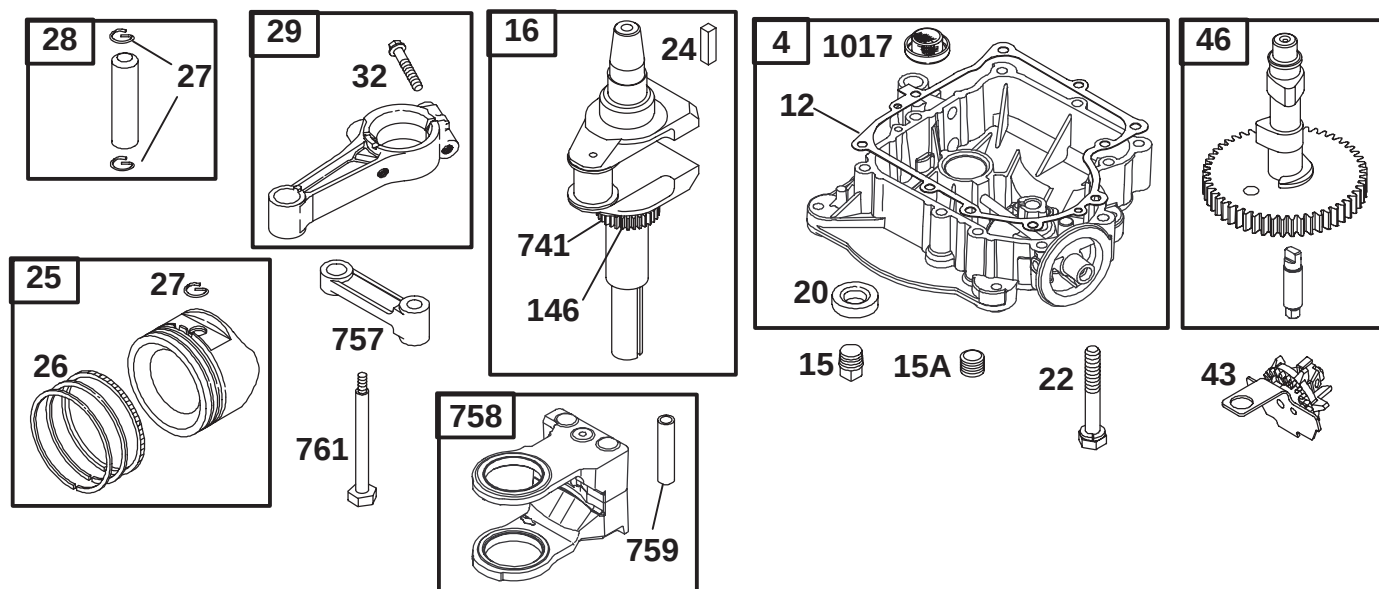


Assemblies include all parts shown in frames.

Crankcase Assembly Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
4	693582	1	Sump-Engine	29	692419	1	Pin-Piston .005" O.S.
★12	271916	1	Gasket-Crankcase				Rod-Connecting
		1	015" Thick				Standard
		1	Gasket-Crankcase				Rod-Connecting .020"
		1	005" Thick			1	Undersize
		1	Gasket-Crankcase	32	692852	1	Screw-Connecting Rod
		1	009" Thick	43	490815	1	Governor/Oil Slinger
15	94239	1	Plug-Oil Drain	46	693450	1	Gear-Cam
15A	91488	1	Plug-Oil Drain	146	94196	1	Key-Timing
16	690136	1	Crankshaft	741	262932	1	Gear-Timing
★20	291675	1	Seal-Oil	757	213998	1	Link-Counterweight
22	692125	1	Screw-Hex.	758	499994	1	Counterweight
24	222698	1	Key-Flywheel	759	230787	1	Pin-Counterweight
25	692271	1	Piston Assembly	761	94593	1	Screw-Hex.
			Standard	1017	693292	1	Screen-Oil Pump
		1	Piston Assy .010" O.S.				
		1	Piston Assy..020" O.S.				
		1	Piston Assy..030" O.S.				
26	690162	1	Ring Set Standard				
		1	Ring Set .010" O.S.				
		1	Ring Set .020" O.S.				
		1	Ring Set .030" O.S.				
27	263129	1	Lock-Piston Pin				
28	498319	1	Pin-Piston Standard				

★ Included in Gasket Set-Ref. 358.

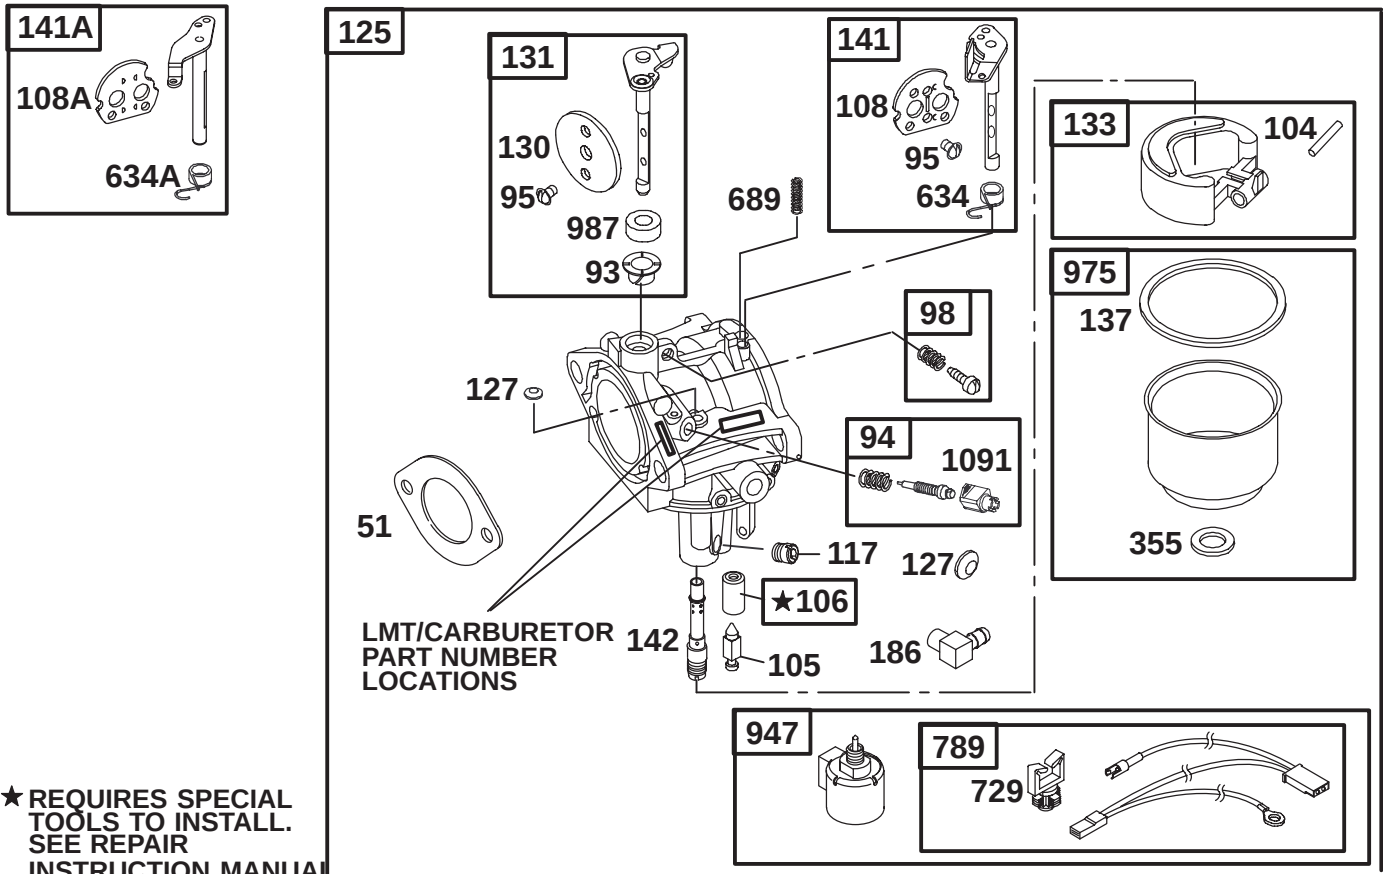


Assemblies include all parts shown in frames.

Carburetor Assembly Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
●51	273650	1	Gasket-Carburetor
●93	281346	1	Bushing-Throttle Shaft
94	498030	1	Valve-Idle Adjust
●95	94098	1	Screw-Round Head
98	495800	1	Screw-Idle Adjust
●104	231789	1	Pin-Float Hinge
●105	231855	1	Valve-Inlet Needle
●106	231854	1	Seat-Inlet
108	224558	1	Valve-Choke (Manual)
108A	224540	1	Valve-Choke (Remote)
●117	232118	1	Jet-Main (Standard)
		1	Jet-Main (High Altitude)
125	499153	1	Carburetor
●127		1	Plug-Welch (Sold in Kit Only)
130	224539	1	Valve-Throttle
131	494379	1	Shaft-Throttle
133	494381	1	Float-Carburetor
●◆137	281165	1	Gasket-Float Bowl
141	495097	1	Shaft-Choke (Manual)
141A	495931	1	Shaft-Choke (Remote)
●142	232117	1	Nozzle-Carburetor
186	493496	1	Elbow-Fuel Pipe

Ref. No.	Part No.	Qty.	Description
●◆355	281164	1	Washer-Float Bowl
●634	494453	1	Seal-Spring Assembly
●634A	494455	1	Seal-Spring Assembly
689	262715	1	Spring-Friction
789	497708	1	Harness-Wiring
947	497672	1	Solenoid
975	495933	1	Bowl-Float
●987	281166	1	Seal-Throttle Shaft
1091	691333	1	Cap-Limiter

● Included in Carburetor Kit-Ref. 121. ◆ Included in Carburetor Gasket Set-Ref. 977.

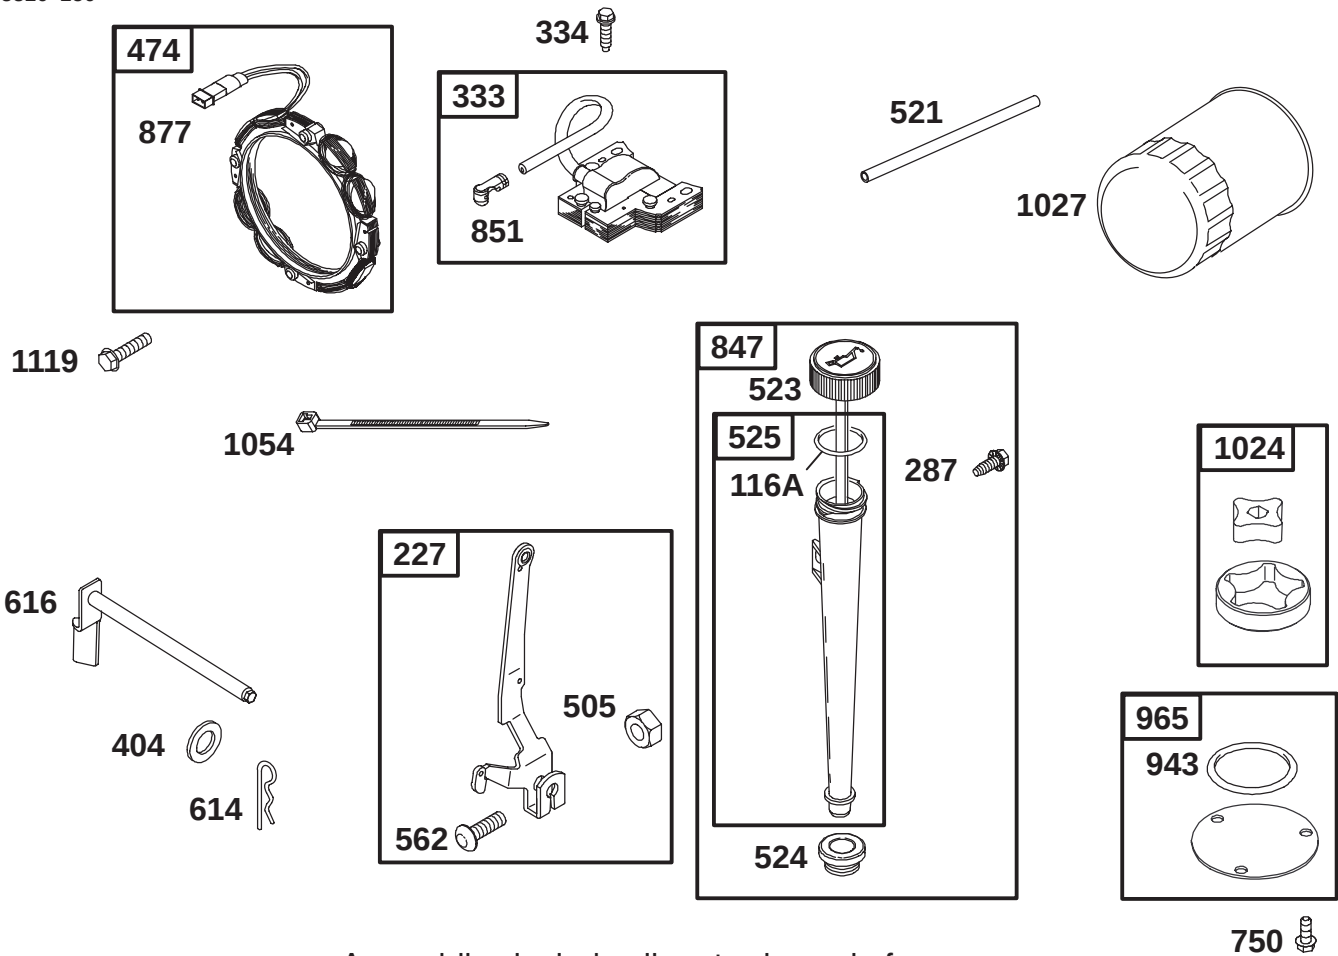


Assemblies include all parts shown in frames.

Oil Filter, Tube, and Pump Assembly Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
★116A	270920	1	Seal-O-Ring
227	493935	1	Lever-Governor
287	94903	1	Screw-Shoulder
333	495859	1	Armature-Magneto
334	94731	1	Screw-Hex.
404	94927	1	Washer-Flat
474	393474	1	Alternator
505	231978	1	Nut-Hex.
521	690581	1	Shield-Cable
523	495230	1	Dipstick
★524	281370	1	Seal-Fill Tube
525	691398	1	Tube-Oil Fill
562	94907	1	Bolt-Governor Lever
614	93306	1	Pin-Cotter
616	495157	1	Crank-Governor
750	691033	1	Screw-Hex.
847	496415	1	Dipstick/Tube Assembly
851	224110	1	Terminal-Cable
877	393456	1	Connector-Alt. Output
★943	280801	1	Seal-O-Ring
965	499613	1	Cover-Pump
1024	499054	1	Pump-Oil
1027	492932	1	Filter-Oil

Ref. No.	Part No.	Qty.	Description
1054	280275	1	Tie-Cable
1119	93621	1	Screw-Hex.

★ Included in Gasket Set-Ref. 358.

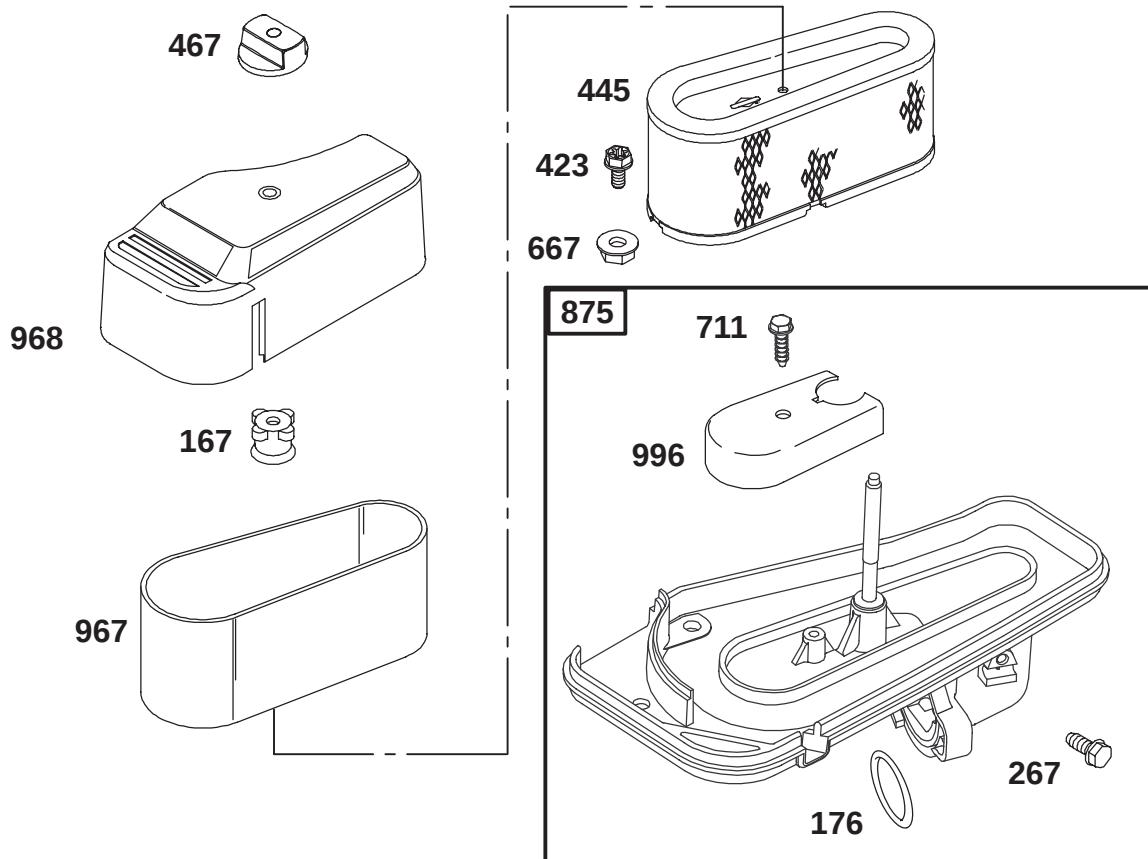

Assemblies include all parts shown in frames.


Air Cleaner Assembly

Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
167	281051	1	Knob—Air Cleaner
★176	281106	1	Gasket—Air Cleaner
267	693675	1	Screw
423	692129	1	Screw—TorxRHex.
467	493903	1	Nut— Air Cleaner
445	496894		Filter—Air Cleaner
		1	Element
667	94010	1	Nut
711	94704	1	Screw
875	693686		Base—Air Cleaner
		1	Plastic
967	272403	1	Filter—Pre—Cleaner
968	692355	1	Cover—Air Cleaner
996	690678	1	Shield—Carburetor

Ref. No.	Part No.	Qty.	Description

★ Included in Gasket Set—Ref. 358.

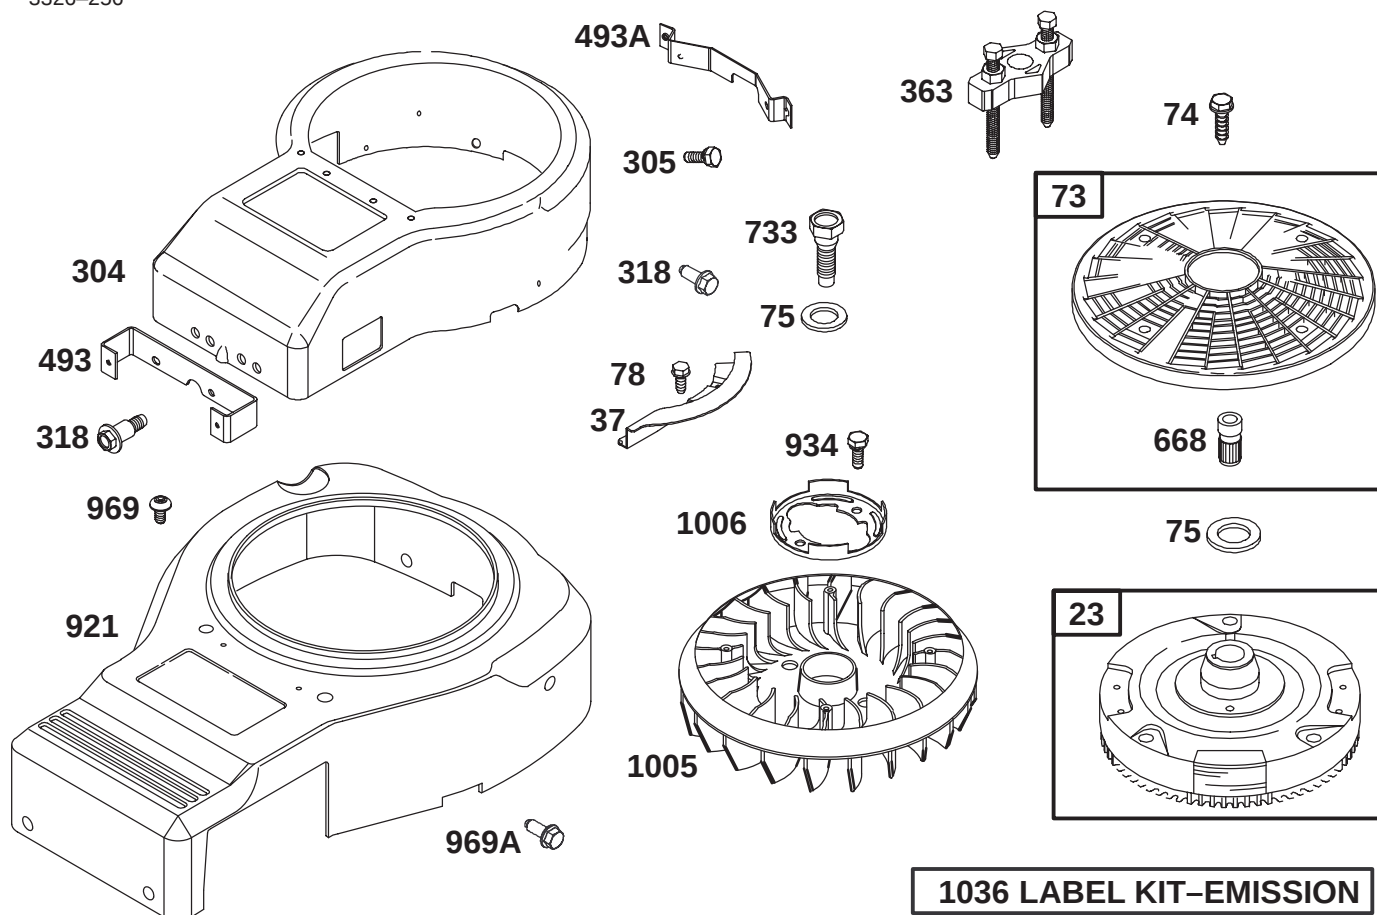


Assemblies include all parts shown in frames.

Blower Housing Assembly Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
23	693557	1	Flywheel
37	690456	1	Guard–Flywheel
73	494439	1	Screen–Rotating
75	225136	1	Washer–Flywheel
74	94821	1	Screw–TorxR
78	94896	1	Screw–Hex.
304	690497	1	Housing–Blower
305	690960	1	Screw–Blower Housing
318	692127	1	Screw–Shoulder
363	19203	1	Flywheel Puller
493	224968	1	Bracket–Mounting Front
493A	224969	1	Bracket–Mounting Rear
668	805402	1	Spacer
733	94673	1	Screw–Shoulder
921	690496	1	Cover–Blower Housing
934	94627	1	Screw–Hex.
969	690365	1	Screw–TorxR
969A	690960	1	Screw–Hex.
1005	281400	1	Fan–Flywheel
1006	690452	1	Retainer–Fan
1036	694332	1	Label Kit–Emission

Ref. No.	Part No.	Qty.	Description

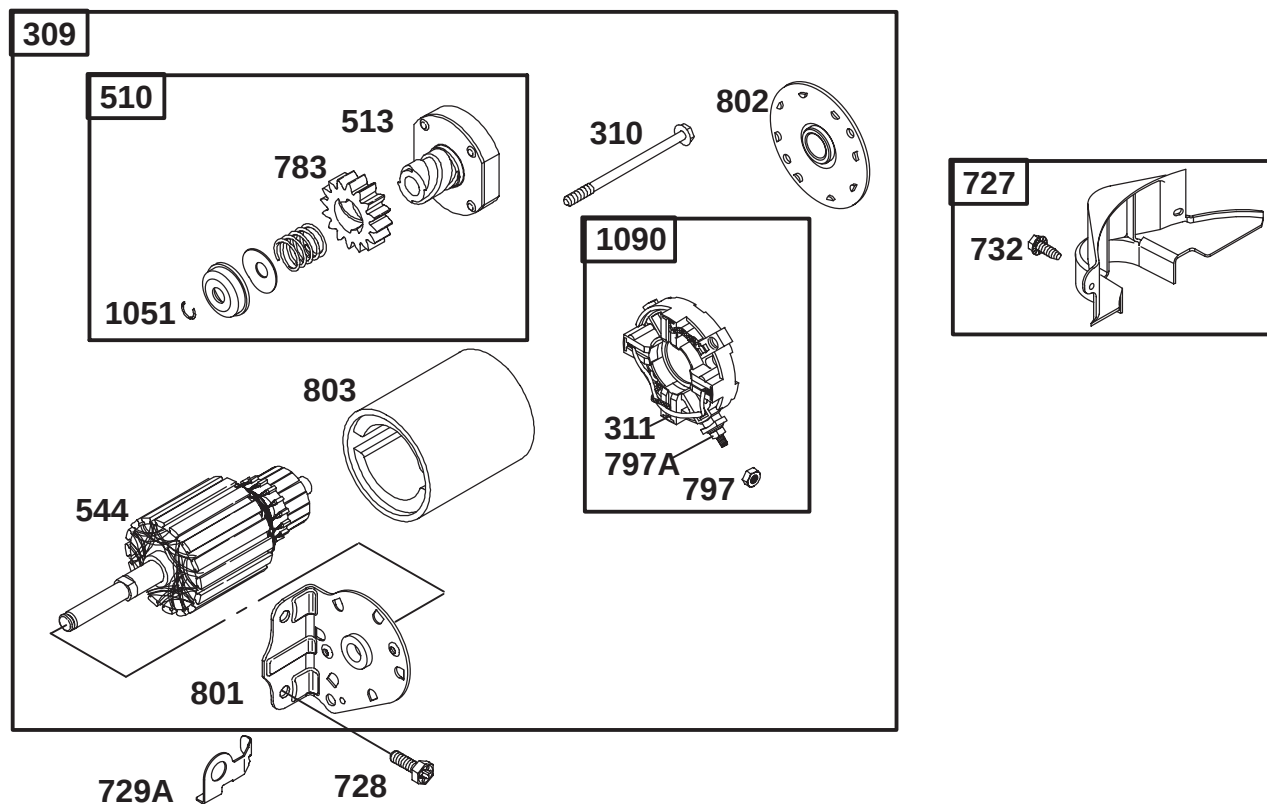


Assemblies include all parts shown in frames.



Starter Assembly

Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
309	693551	1	Motor–Starter
310	94003	1	Screw (Starter Motor)
311	497608	1	Brush Set
510	693699	1	Drive–Starter
513	398003	1	Clutch–Drive
544	497603	1	Armature–Starter
697	690372		Screw (Starter
		1	Motor Mounting)
727	490324	1	Cover–Starter Drive
729A	691224	1	Clip–Wire
732	691097	1	Screw (Starter Drive
			Cover)
783	693713	1	Starter–Pinion (Steel)
797	92278	1	Nut (Starter Terminal)
797A	693167	1	Nut (Starter Terminal)
801	497626	1	Cap–Drive
802	497607	1	Cap–End
803	693757	1	Housing–Starter
1051	263080	1	Ring–Retainer
1090	497605	1	Retainer–Brush

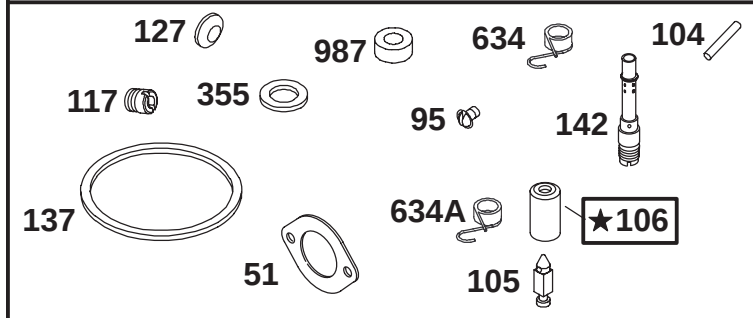121 CARBURETOR KIT

★ **REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.**

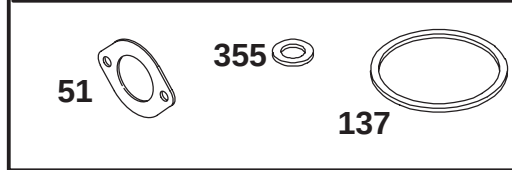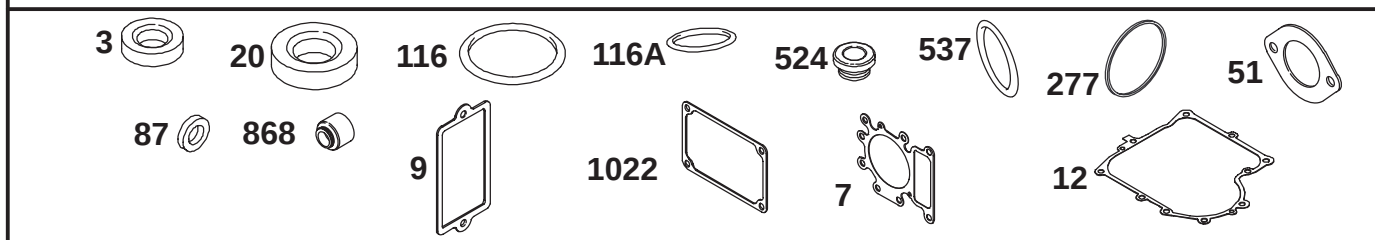1033 VALVE OVERHAUL KIT**977 CARBURETOR GASKET SET****358 GASKET SET**

Assemblies include all parts shown in
frames.

Carburetor Overhaul Kit Assembly Briggs and Stratton Model 312777-0128-E1

Ref. No.	Part No.	Qty.	Description
★3	391086	1	Seal-Oil
▲★7	692410	1	Gasket-Cylinder Head
★9	27803	1	Gasket-Breather
★12	271916	1	Gasket-Crankcase
		1	.015" Thick
		1	Gasket-Crankcase
		1	.005" Thick
		1	Gasket-Crankcase
		1	.009" Thick
★20	291675	1	Seal-Oil
■51	273650	1	Gasket-Intake
★87	491323	1	Seal-Governor Shaft
●95	94098	1	Screw-Choke/Throttle
●104	231789	1	Pin-Float Hinge
●105	231855	1	Valve-Needle
●106	231854	1	Seat-Inlet
★116	280801	1	Seal-O-Ring
★116A	270920	1	Seal-O-Ring
●117	232118	1	Jet-Main
121	690191	1	Carburetor Kit
●127		1	Plug-Welch
		1	Sold In Kit Only
◆●137	281165	1	Gasket-Float Bowl
●142	231117	1	Nozzle-Carburetor

Ref. No.	Part No.	Qty.	Description
▲★277	692138	1	Seal-O-Ring
◆●355	281164	1	Washer-Seal
358	690189	1	Gasket Set
★524	281370	1	Seal-Fill Tube
★537	281106	1	Gasket-Air Cleaner
●634	494453	1	Seal-Spring
●634A	494455	1	Assembly LMT 155
		1	Seal-Spring
		1	Assembly LMT 154
▲★868	499236	1	Seal-Valve
977	690192	1	Gasket Set-Carburetor
●987	281166	1	Seal-Throttle Shaft
▲★1022	272475	1	Gasket-Rocker Cover
1033	690190	1	Kit-Valve Overhaul

★ Included in Gasket Set-Ref. 358. ● Included in Carburetor Kit-Ref. 121. ■ Included in Kits ★ ▲ ● ◆.

▲ Included in Valve Overhaul Kit-Ref. 1033. ◆ Included in Carburetor Gasket Set-Ref. 977.

Maintenance Record

[illegible]

Maintenance Record

[illegible]

Maintenance Record

[illegible]

