 


TORO®

MODEL NO. 37038-50001 THRU 60001 & UP (TRACTOR)
 MODEL NO. 33677-50001 THRU 60001 & UP (PARKMASTER 7)
 MODEL NO. 33699-50001 THRU 60001 & UP (PARKMASTER 9)

PARTS CATALOG


PARKMASTER 7 DIESEL PARKMASTER 9 DIESEL

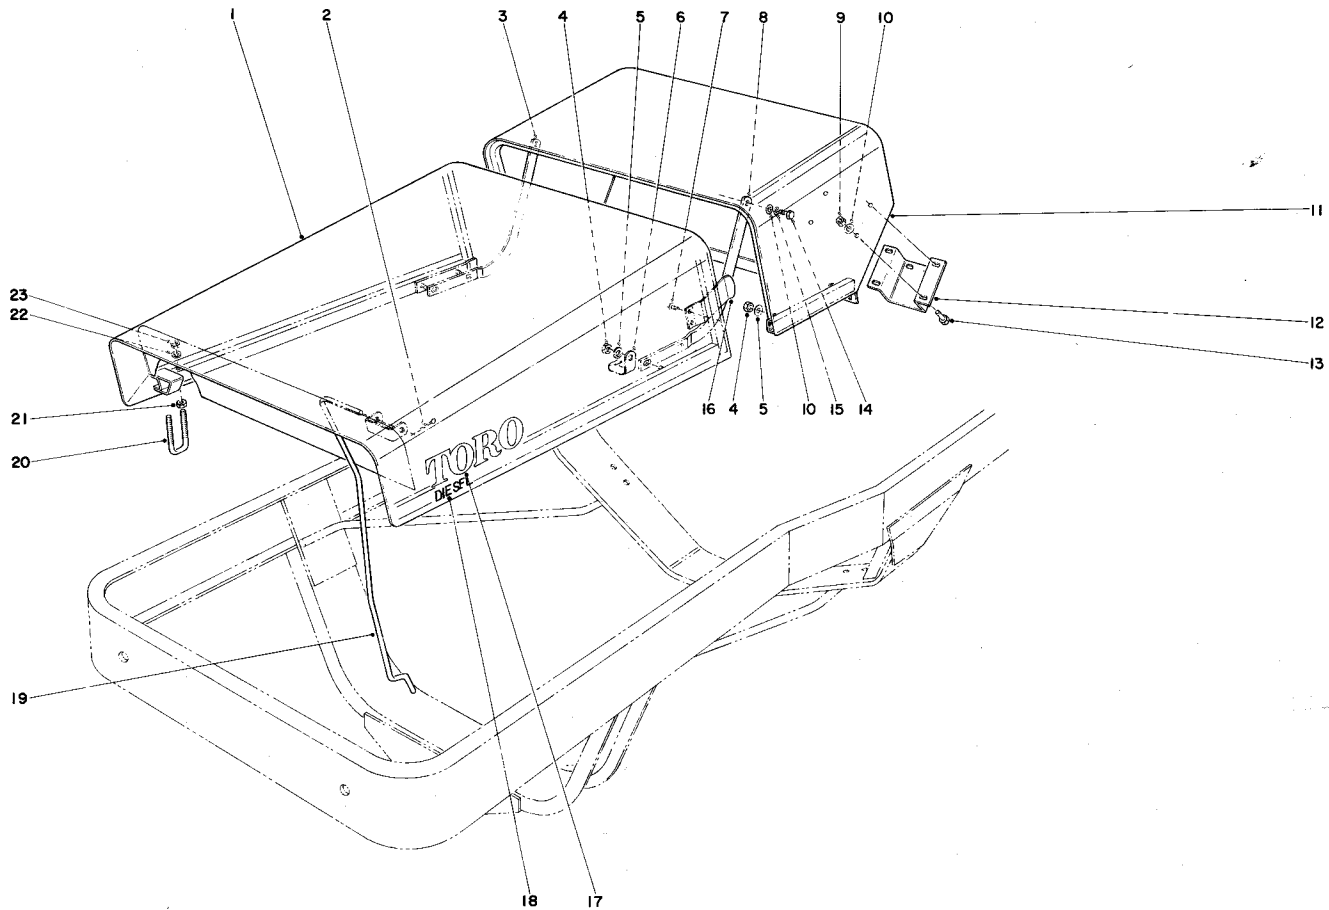

HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-0630	Hood	1
2	3272-9	Cotter Pin	1
3	18-0760	Pivot Arm R.H.	1
4	32146-2	Locknut	8
5	3256-24	Flat Washer	8
6	18-1270	Hood Clip	1
7	32140-32	Screw	4
8	18-0750	Pivot Arm L.H.	1
9	32146-5	Locknut	4
10	3256-23	Flat Washer	6
11	18-0560	Cowl	1
12	18-0770	Steering Column Support	1

Ref. No.	Part No.	Description	No. Used
13	322-2	Capscrew	4
14	322-1	Capscrew	2
15	3253-4	Lockwasher	2
16	18-3230	Hood Support Spring	2
17	18-2180	Decal Hood	2
18	19-6060	Decal — Diesel	2
19	19-2970	Hood Prop	1
20	18-1290	U-Bolt	2
21	3218-1	Jam Nut	4
22	3253-3	Lockwasher	4
23	3217-5	Nut	4

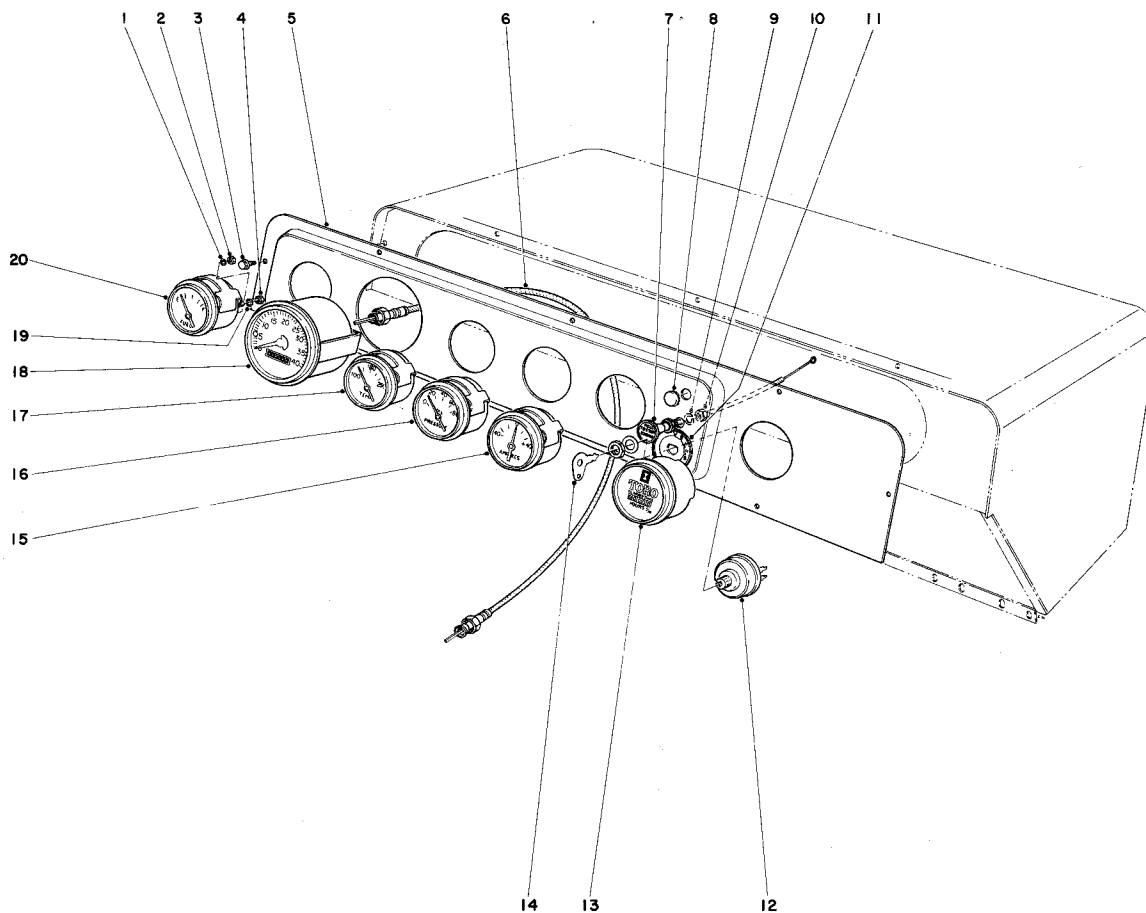 


DASH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3253-17	Lockwasher	8
2	3219-14	Nut	8
3	32104-77	Self-Tapping Screw	8
4	3217-29	Nut	8
5	18-1390	Instrument Panel	1
6	18-2670	Speedometer Cable	1
7	19-2930	Fuel Shut-off Cable	1
8	2410-13	Plug Button	1
9	3253-21	Lockwasher	1
10	3220-3	Jam Nut	1
11	19-8570	Index Plate (Perkins #31812163)	1


Ref. No.	Part No.	Description	No. Used
12	19-8550	Ignition Switch (Perkins No. 2846121)	1
13	12-9990	Hourmeter	1
14	20-0490	Key (Set of 2)	1
15	18-2190	Ammeter	1
16	18-2200	Oil Pressure Gauge	1
17	18-2220	Temperature Gauge	1
18	18-2230	Speedometer	1
19	3254-9	Lockwasher	8
20	18-2210	Fuel Gauge	1
*	23-8000	Wiring Harness	1
*	3290-336	Locking Strap	1

*Not Illustrated

 ELECTRICAL SCHEMATIC

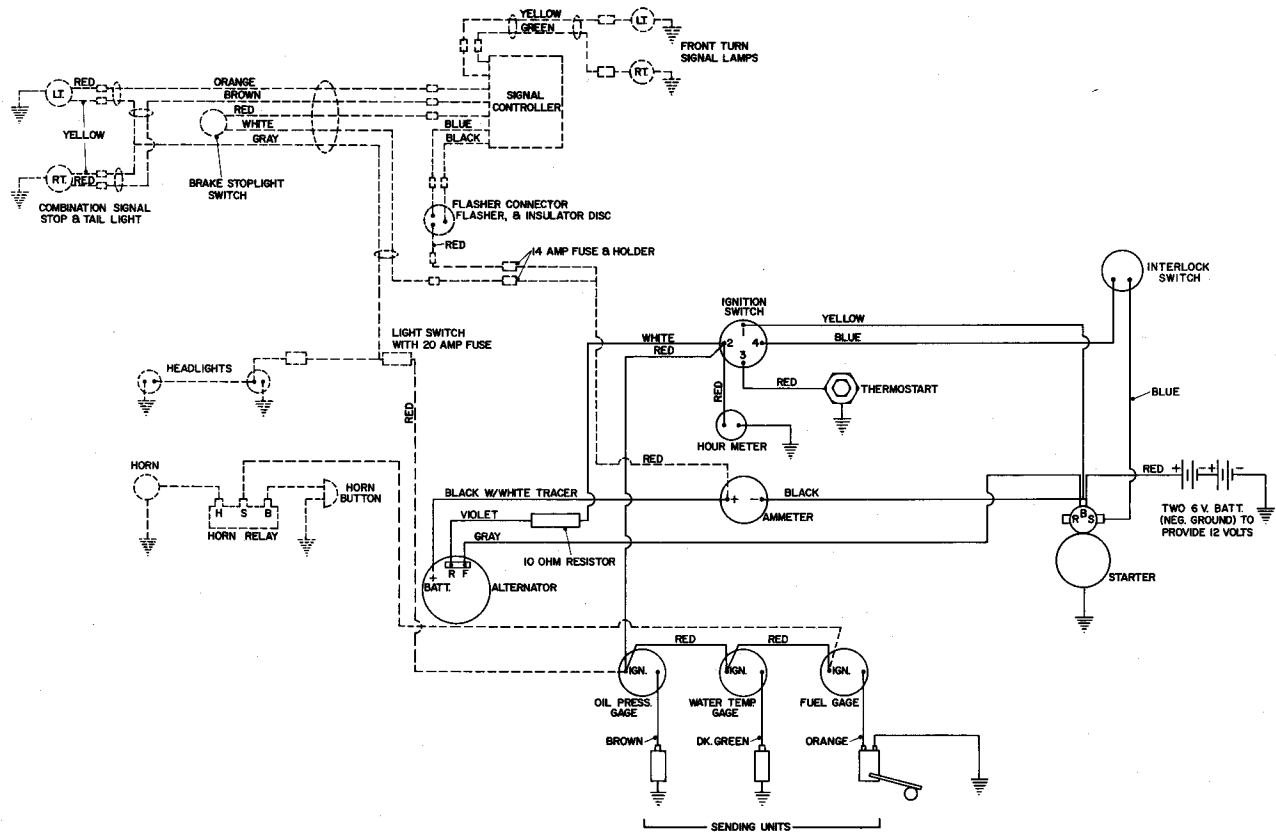


12 VOLT, NEGATIVE GROUND

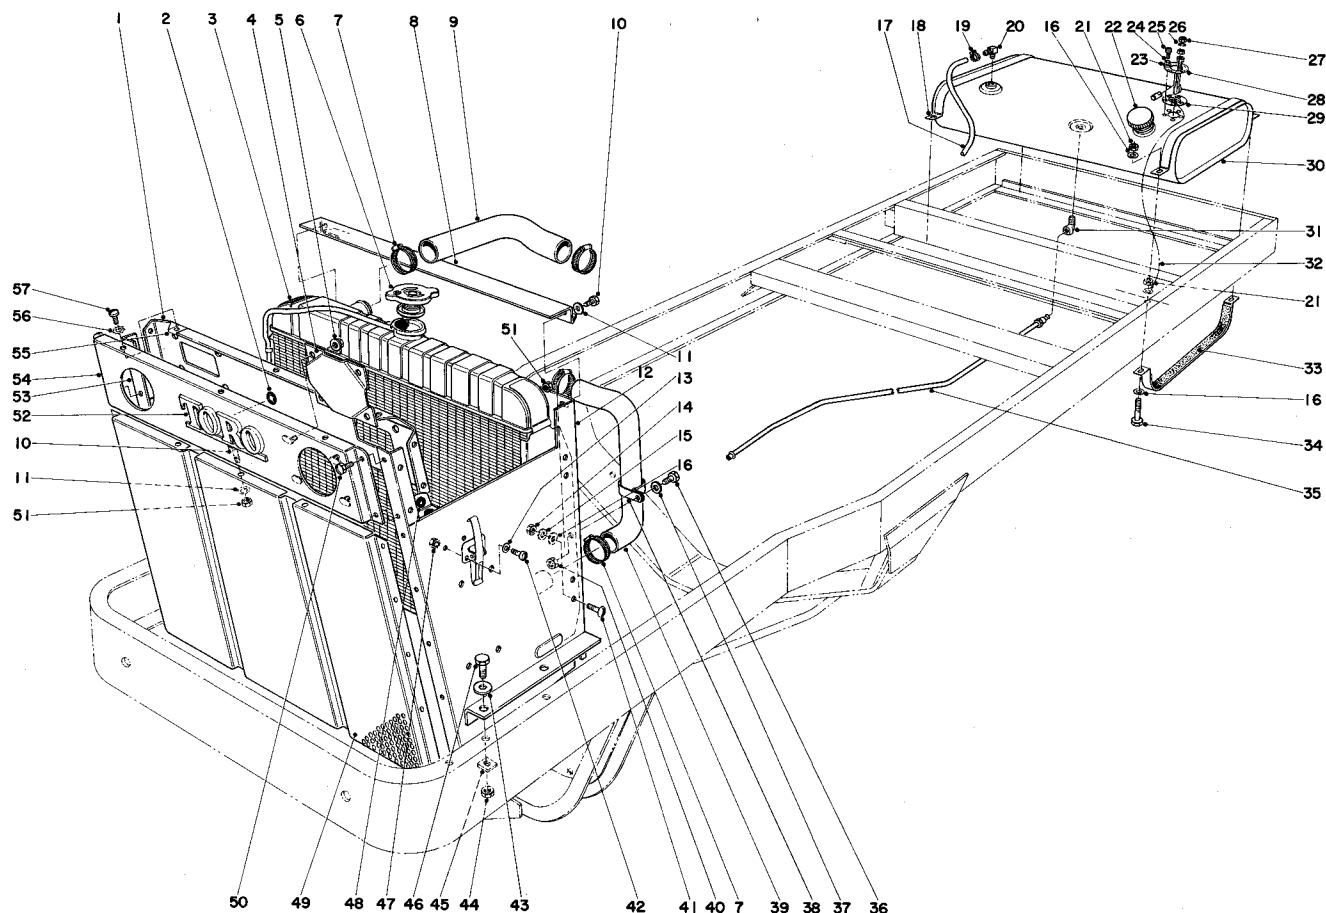 

RADIATOR AND FUEL TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	18-1020	Headlight Cover	1	24	3254-1	Lockwasher	5
2	3290-363	Tinnerman Clip	5	25	3253-17	Machine Screw	5
3	19-3080	Radiator	1	26	3255-17	Lockwasher	1
4	18-4350	Headlight Hole Cover	2	27	3219-14	Nut	1
5	32128-17	Flange Nut	8	28	18-2370	Fuel Sender	1
†6	861042	Radiator Cap (15 P.S.I.)	1	29	18-2380	Gasket	1
7	2412-3	Hose Clamp	4	30	5-9599	Fuel Tank (Incl. Ref. No. 22)	1
8	19-3040	Brace Front Side Plate	1	31	353-420	Fitting	1
9	19-3550	Upper Radiator Hose	1	32	3-3868	Ground Wire	1
10	321-2	Capscrew	7	33	3-3824	Felt Strip	4
11	3256-22	Flat Washer	7	34	3290-319	Machine Screw	4
12	19-3010	Front Side Panel L.H.	1	35	19-3240	Fuel Line	1
13	3253-17	Lockwasher	4	36	323-4	Capscrew	1
14	3217-6	Nut	8	37	3256-24	Flat Washer	1
15	3253-4	Lockwasher	8	38	2412-44	Hose Clamp	1
16	3256-23	Flat Washer	12	39	19-3560	Lower Radiator Hose	1
17	19-3260	Hose — Bleed Off	1	40	32146-2	Nut	1
18	18-1220	Fuel Tank Strap	4	41	32122-14	Machine Screw	8
19	2412-36	Clamp	1	42	3252-2	Screw	4
20	304-75	Fitting	1	43	3256-26	Flat Washer	4
21	32146-5	Locknut	8	44	32146-13	Locknut	4
22	222-8	Gas Cap	1	45	3290-216	Bevel Washer	4
23	237-49	Nylon Washer	5	46	325-6	Capscrew	4

 
†Obtain from your local auto supply store.

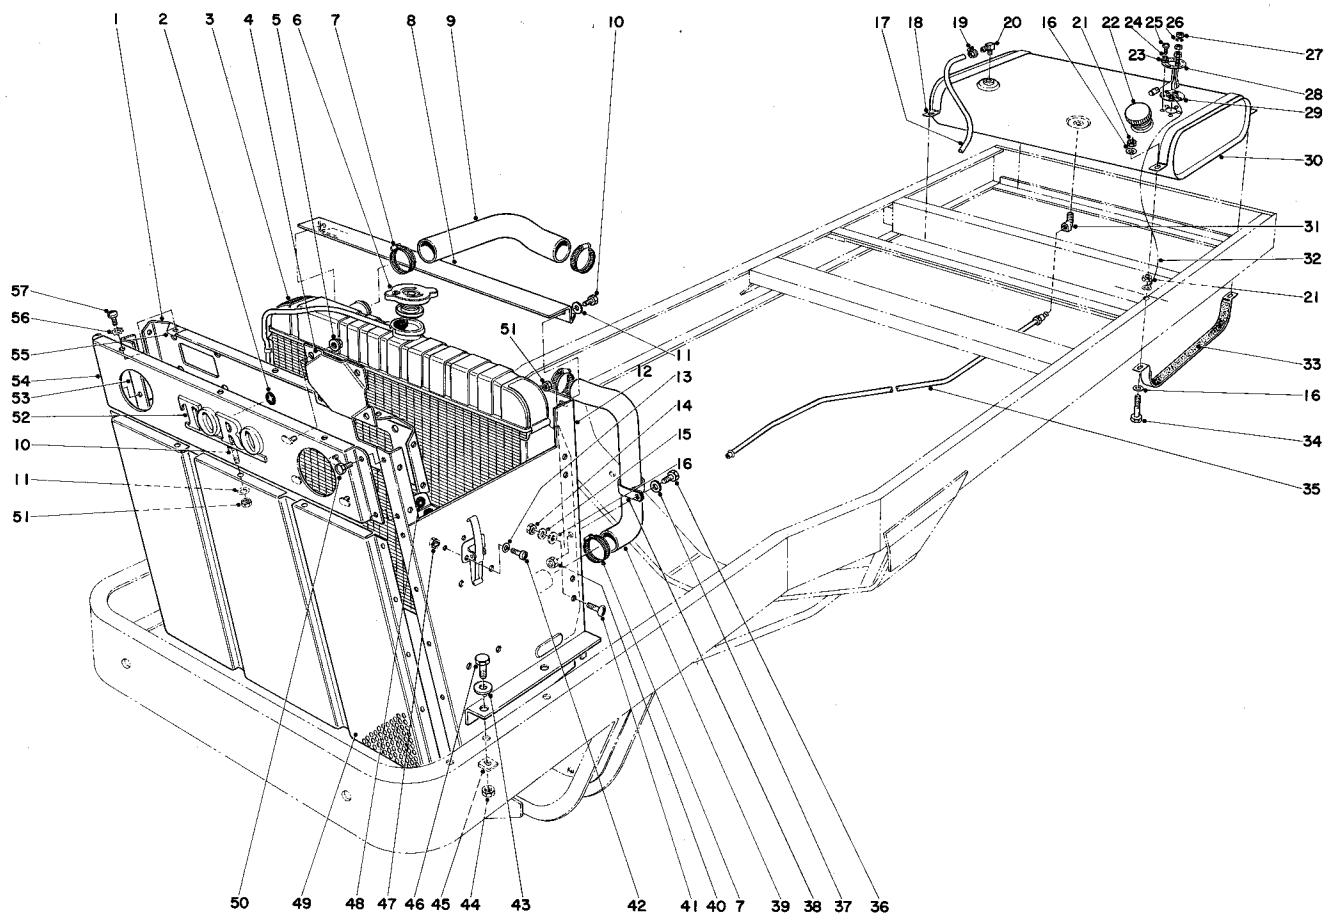

RADIATOR AND FUEL TANK ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	3217-26	Nut	4
48	237-37	Rubber Bumper	4
49	18-0960	Grille	1
50	32140-42	Self-Tapping Screw	14
51	32146-17	Locknut	7
52	25-9650	Toro Emblem	1

Ref. No.	Part No.	Description	No. Used
53	19-2980	Front Side Panel R.H.	1
54	25-9960	Headlight Panel	1
55	3290-192	Tinnerman Clip	7
56	3255-7	Washer	7
57	3290-145	Screw	7

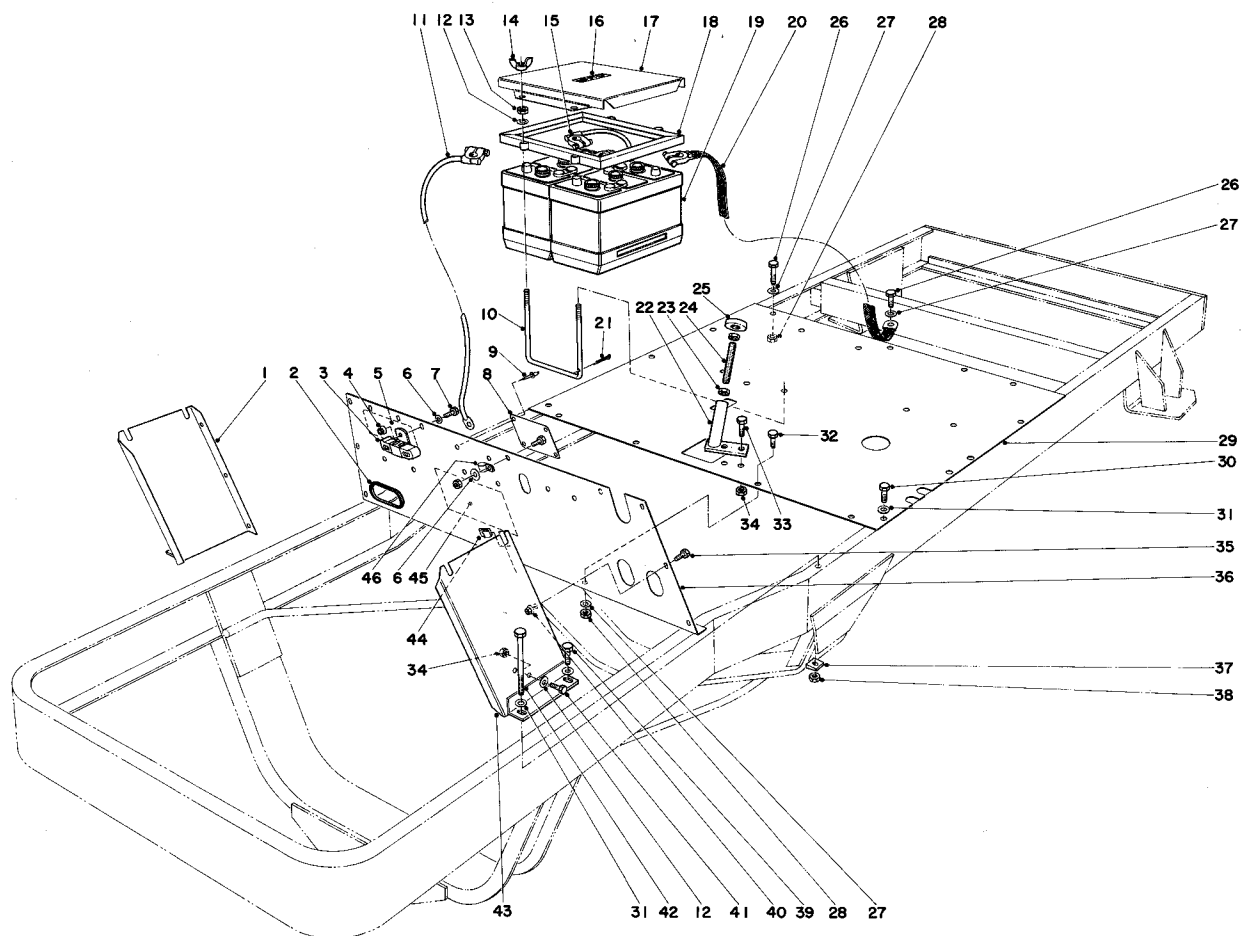 


TOE BOARD AND BATTERY ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-0800	Rear Side Plate R.H.	1
2	18-2310	Grommet	1
3	18-2680	Resistor (10 ohm)	1
4	32146-17	Locknut	1
5	19-2920	Name Plate	1
6	3256-22	Flat Washer	2
7	321-4	Capscrew	1
8	18-3200	Instruction Plate	1
9	3290-56	Pop Rivet	6
10	19-3180	U-Bolt	2
11	19-3220	Cable (Hot)	1
12	3256-23	Flat Washer	6
13	3217-6	Nut	4
14	32103-2	Wing Nut	4
15	19-3210	Cable - Jumper	1
16	3-5582	Decal	1
17	19-3520	Battery Cover	1
18	19-3140	Hold Down	1
*19		Battery SAE Size 1M4 (6 Volt)	2
20	19-3200	Ground Cable	1
21	3272-6	Cotter Pin	2
22	10-3150	Foot Rest	1
23	3219-2	Jam Nut	2

Ref. No.	Part No.	Description	No. Used
24	5-2973	Rod	1
25	5-2967	Button	1
26	323-5	Capscrew	8
27	3256-24	Flat Washer	10
28	32146-2	Locknut	10
29	19-3110	Floor Plate	1
30	32104-6	Self-Tapping Screw	6
31	3256-26	Flat Washer	4
32	325-5	Capscrew	2
33	322-3	Capscrew	2
34	32146-5	Locknut	4
35	3290-321	Capscrew	9
36	18-0850	Toe Board	1
37	3290-216	Bevel Washer	3
38	32146-13	Locknut	4
39	325-9	Capscrew	3
40	32128-17	Flanged Locknut	9
41	322-2	Capscrew	2
42	325-3	Capscrew	1
43	18-0790	Rear Side Plate L.H.	1
44	218-214	Tinnerman Clip	1
45	19-8560	Starting Instructions	1
46	2412-10	Clamp	1

 
*Obtain Locally

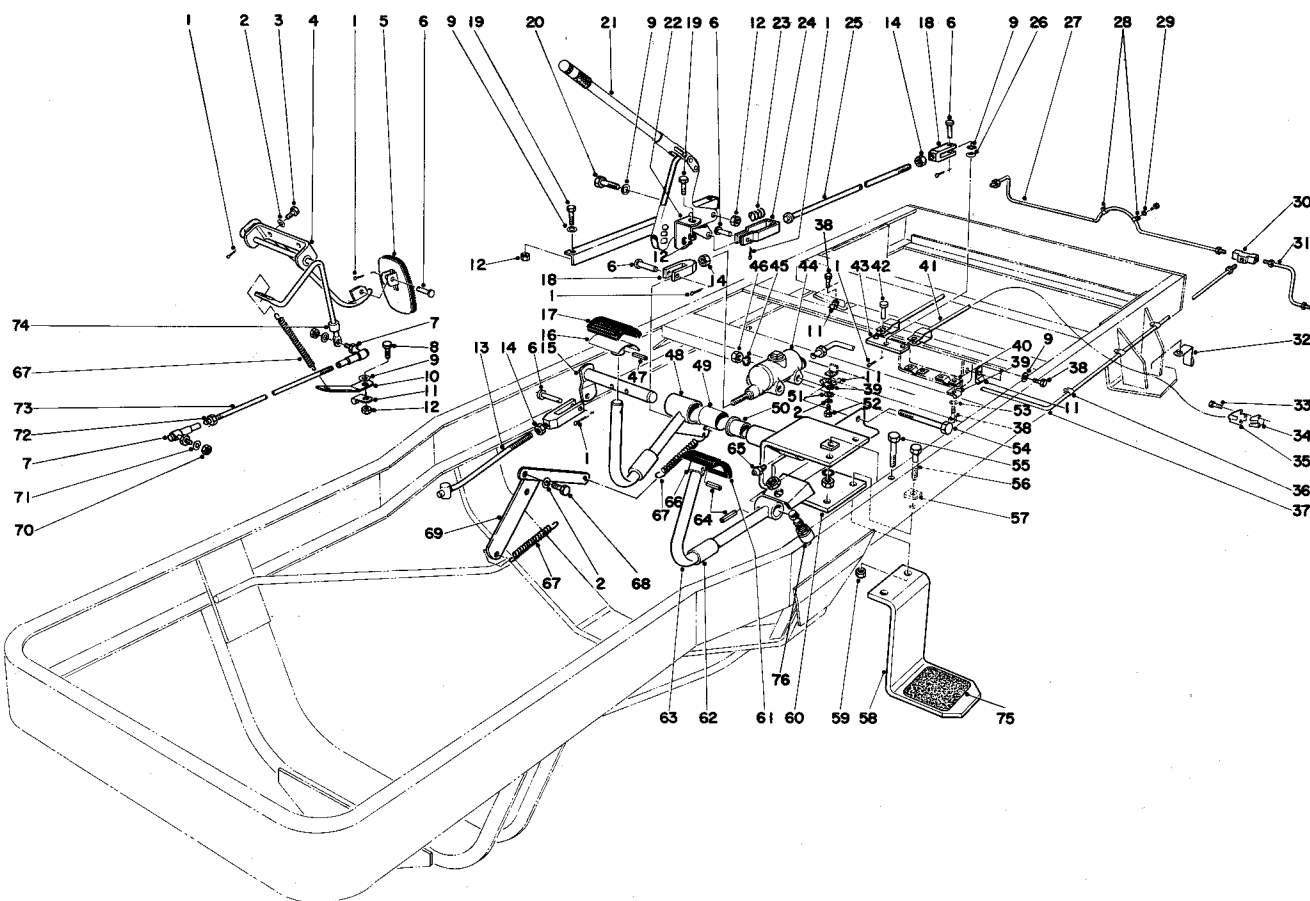

BRAKE, CLUTCH, THROTTLE CONTROLS

Ref. No.	Part No.	Description	No. Used
1	3272-6	Cotter Pin	6
2	3253-4	Lockwasher	5
3	32104-32	Self-Tapping Screw	2
4	19-2950	Foot Throttle	1
5	10-2670	Accelerator Pedal	1
6	283-2	Clevis Pin	5
7	18-1720	Ball Joint Assembly	2
8	323-5	Capscrew	1
9	3256-24	Flat Washer	6
10	18-2740	Throttle Spring Bracket	1
11	2412-10	Clamp	4
12	32146-2	Locknut	5
13	19-3090	Clutch Link	1
14	3220-3	Jam Nut	3
15	18-1160	Pedal Shaft	1
16	10-0670	Pedal	1
17	7-3900	Brake Pad	1
18	282-1	Clevis	2
19	325-5	Capscrew	3
20	323-7	Capscrew	2
21	19-3120	Parking Brake	1
22	18-3260	Parking Brake Bracket	1
23	3-1768	Compression Spring	1


Ref. No.	Part No.	Description	No. Used
24	3-5300	Front Clevis	1
25	3-1772	Brake Rod	1
26	3290-211	Spring Washer	1
27	3-3690	Brake Tube Assy. (Long)	1
28	3-3075	Clip	2
29	3254-6	Lockwasher	2
30	304-2	Tee	1
31	3-3680	Brake Tube Assy. (Short)	1
32	19-6110	Support Brake Line	2
33	32104-32	Self-Tapping Screw	4
34	19-5900	Felt Seal	2
35	19-5880	Conduit Cap	2
36	212-93	Clip Wire	3
37	18-1180	Brake Tubing Assembly	1
38	32104-6	Self-Tapping Screw	6
39	18-2970	Fuel Line Clip	2
40	215-23	Clamp	2
41	19-6020	Cable Assembly	2
42	283-1	Yoke Pin	2
43	3-3137	Plate Equalizer	1
44	215-17	Master Cylinder	1
45	3253-6	Lockwasher	2
46	3219-4	Nut	2

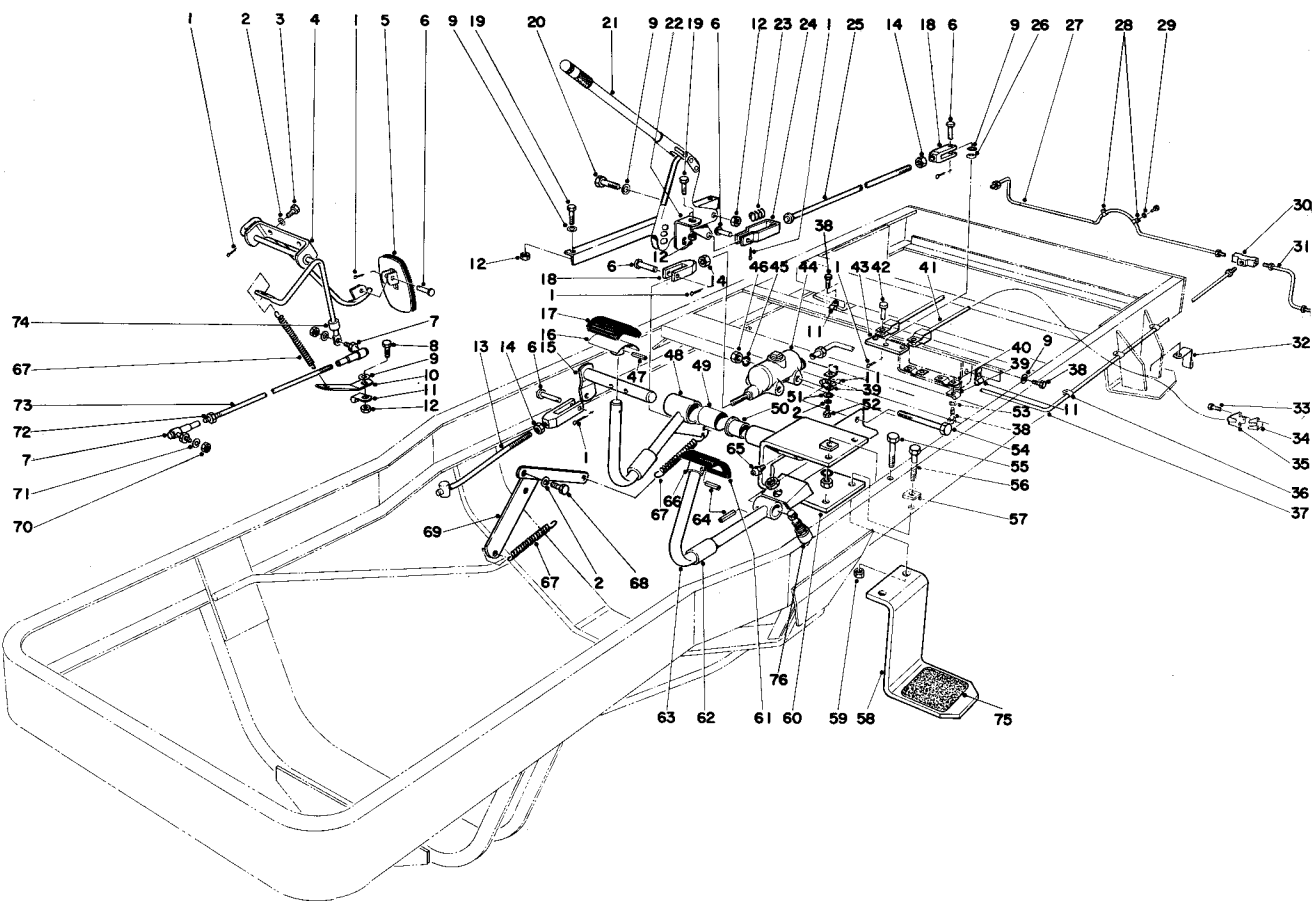 

BRAKE, CLUTCH, THROTTLE CONTROLS (Continued)

Ref. No.	Part No.	Description	No. Used
47	32121-34	Pin Retaining	2
48	3-8760	Brake Pedal (Incl. Ref. No. 49)	1
49	256-143	Bushing	1
50	256-10	Bushing	2
51	3256-23	Flat Washer	1
52	322-2	Capscrew	1
53	3253-21	Lockwasher	4
54	3212-14	Capscrew	2
55	325-6	Capscrew	2
56	325-7	Capscrew	2
57	3290-216	Bevel Washer	4
58	3-3112	Step	1
59	32146-13	Locknut	4
60	23-8020	Pedal Shaft Bracket (Incl. Ref. No. 50)	1


Ref. No.	Part No.	Description	No. Used
61	7-3901	Clutch Pad	1
62	3-3107	Rubber Bumper	2
63	3-3750	Clutch Pedal	1
64	32121-34	Roll Pin	2
65	302-5	Grease Fitting	1
66	10-0680	Pedal Pad	1
67	5-1706	Throttle Return Spring	3
68	322-3	Capscrew	2
69	19-3710	Return Spring Bracket	1
70	3219-1	Nut	2
71	3253-3	Lockwasher	2
72	3220-1	Jam Nut	2
73	19-3380	Rod - Foot Throttle	1
74	18-2860	Foot Throttle Bumper	1
75	20-5050	Pad Step	1
76	23-8010	Switch Interlock	1

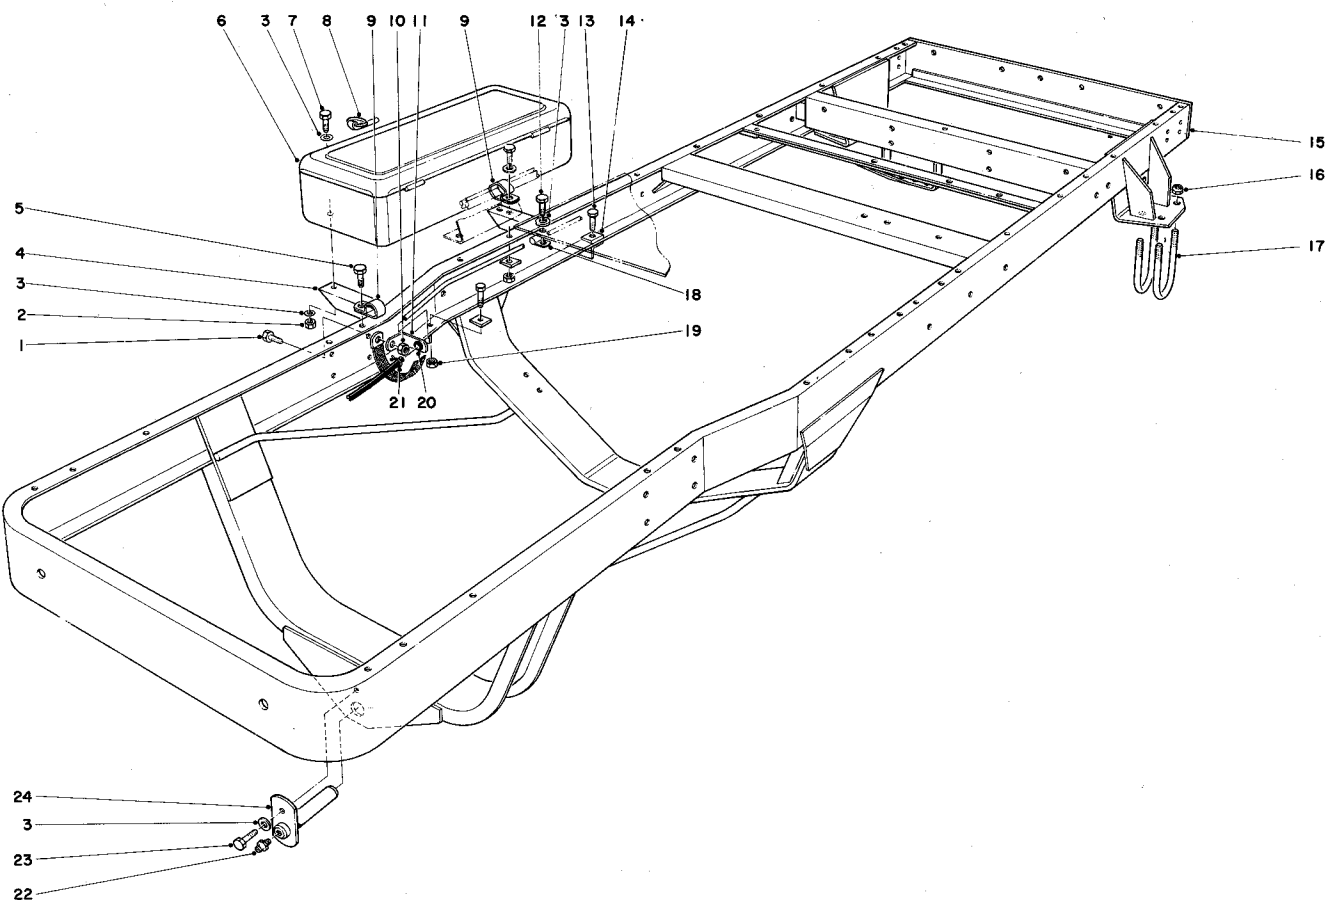 

FRAME AND TOOL BOX ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	325-4	Capscrew	1
2	32146-2	Locknut	4
3	3256-24	Flat Washer	9
4	5-2248	Box Support	2
5	32144-13	Capscrew	1
6	5-2250	Tool Box	1
7	323-6	Capscrew	4
8	3290-234	Lynch Pin	1
9	304-61	Clamp	2
10	32146-13	Locknut	1
11	18-2730	Support Fuel Line	1
12	323-5	Capscrew	1


Ref. No.	Part No.	Description	No. Used
13	325-6	Capscrew	2
14	3290-216	Bevel Washer	2
15	18-0340	Frame	1
16	3296-24	Locknut	8
17	18-1300	U-Bolt	4
18	18-2970	Clip Fuel Line	1
19	32146-13	Locknut	2
20	237-73	Grommet	1
21	2412-6	Hose Clamp	1
22	302-2	Grease Fitting	1
23	32104-6	Screw	1
24	3-3760	Pivot Pin	1

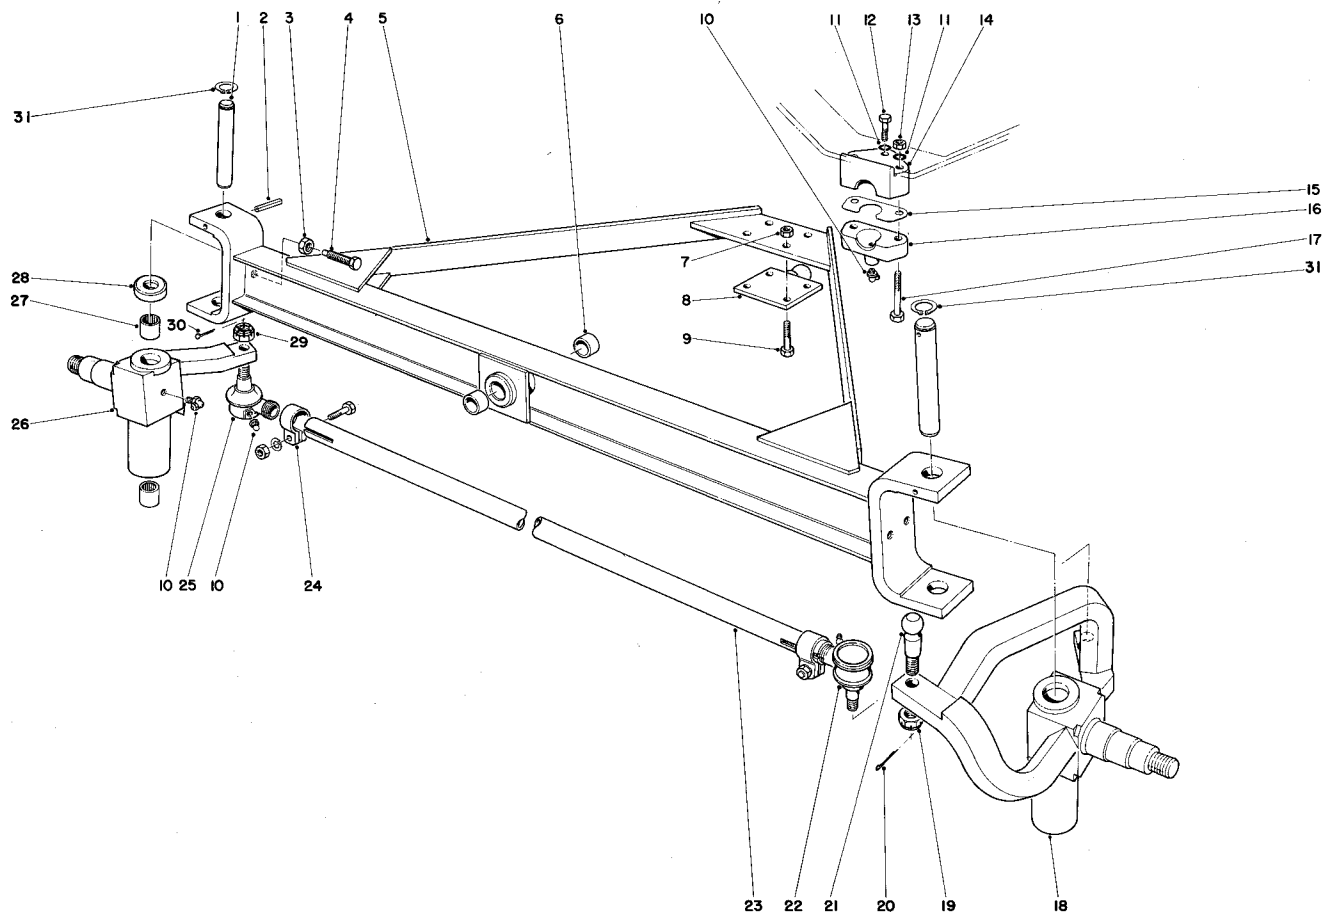 

FRONT AXLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	24-6900	Spindle Pin	2
2	32121-34	Roll Pin	4
3	3218-5	Jam Nut	3
4	32102-14	Set Screw	3
5	26-2320	Front Axle	1
6	256-126	Bushing	2
7	32146-13	Locknut	4
8	12-0360	Pivot Block	1
9	325-7	Capscrew	4
10	302-33	Grease Fitting	3
11	3253-8	Lockwasher	3
12	327-4	Capscrew	4
13	3219-6	Nut	2
14	3-2968	Lower Ball Socket	1
15	3-3825	Shim	A/R
16	3-2967	Upper Ball Socket	1


Ref. No.	Part No.	Description	No. Used
17	3214-13	Cap screw	2
18	23-5300	Spindle L.H.	1
19	32136-3	Slotted Nut	1
20	3272-7	Cotter Pin	1
21	5-2966	Ball Stud	1
22	2116-3	Ball Joint L.H.	1
23	3-3710	Tie Rod Assembly (Incl. Ref. #22, 24, 10, 25)	1
24	2412-7	End Clamp	2
25	2116-4	Ball Joint R.H.	1
26	20-9900	Spindle R.H.	1
27	252-52	Needle Bearing	4
28	251-32	Thrust Bearing	2
29	32136-2	Slotted Nut	2
30	3272-17	Cotter Pin	1
31	32151-36	Retaining Ring	2

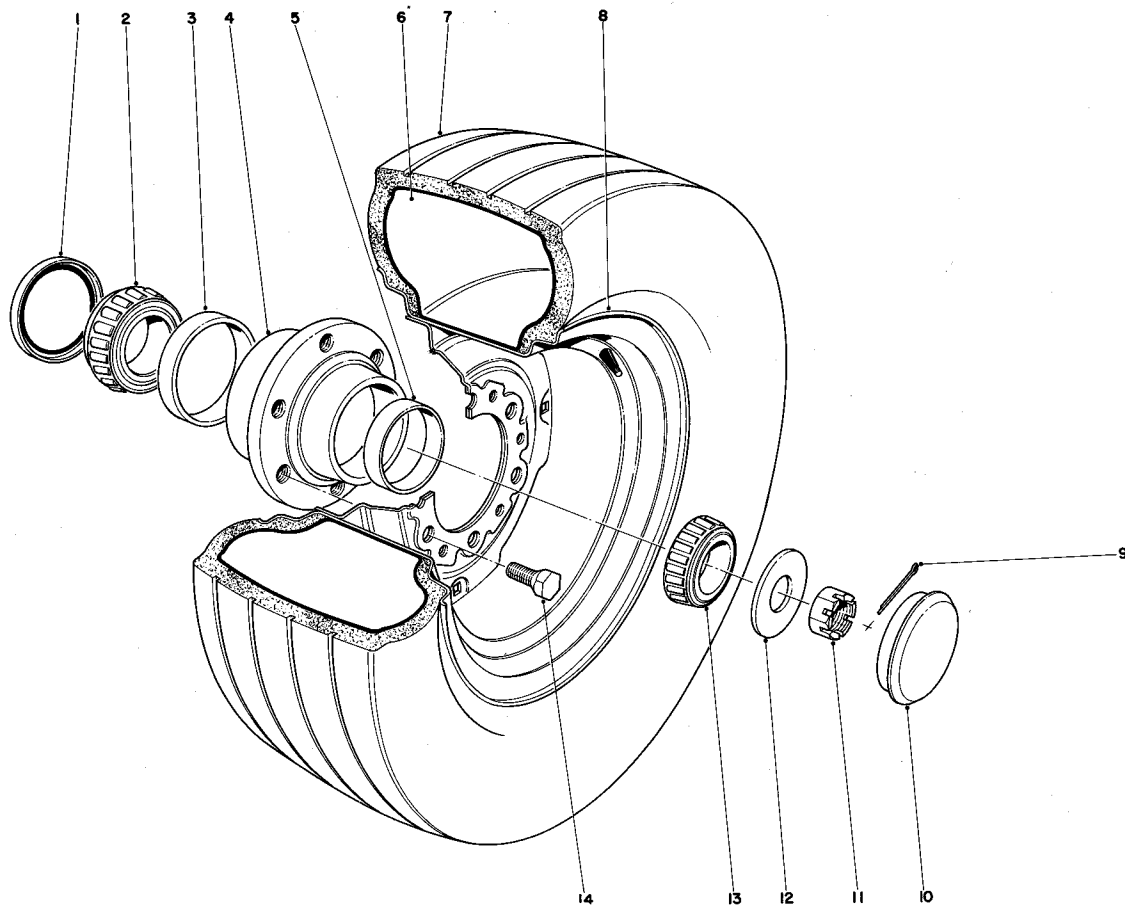 

FRONT WHEELS AND RIMS 6:70x15 — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	253-100	Grease Seal	2
2	254-75	Inner Bearing Cone	2
3	254-76	Inner Bearing Cup	2
4	217-26	Wheel Hub (Incl. Ref. No. 1-3, 5, 10, 13)	2
5	254-20	Outer Bearing Cup	2
6	232-17	Tube 6.70 x 15	2
7	231-54	Tire 6.70 x 15, 4-ply	2

Ref. No.	Part No.	Description	No. Used
8	217-27	Wheel (15")	2
9	3272-23	Cotter Pin	2
10	217-33	Hub Cap	2
11	32136-1	Slotted Hex Nut	2
12	3256-9	Washer	2
13	254-42	Outer Bearing Cone	2
14	217-34	Wheel Bolt	12

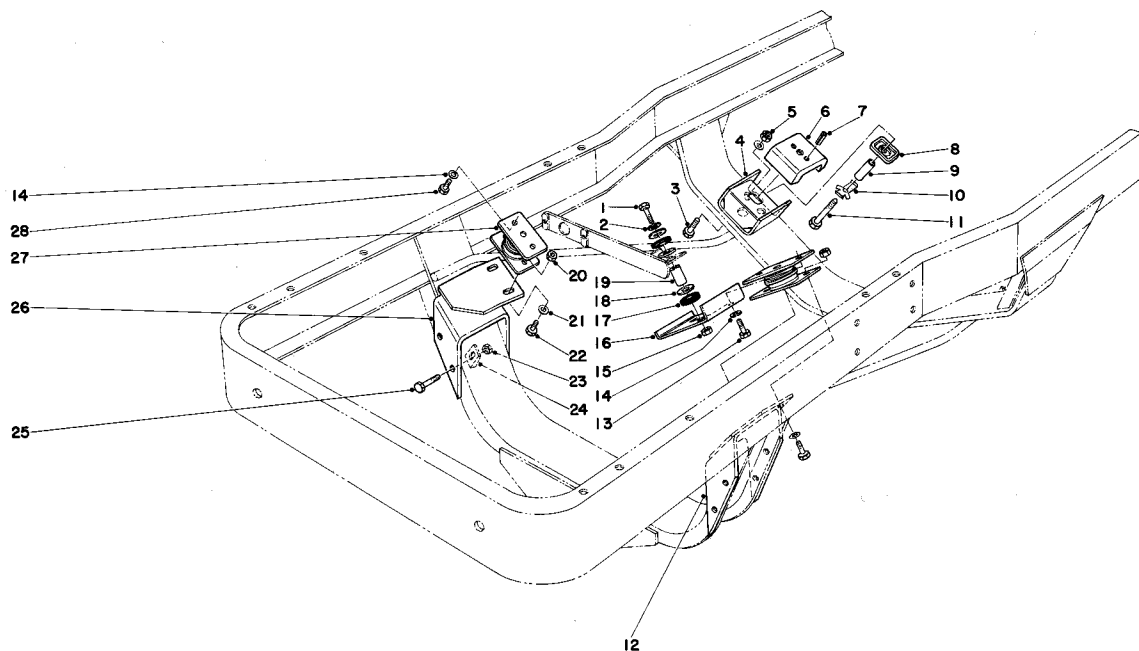 


ENGINE MOUNTS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	324-23	Capscrew	1
2	3256-25	Flat Washer	1
3	3213-3	Capscrew	4
4	19-3490	Engine Mount Rear	2
5	32128-15	Flange Nut	4
6	18-0050	Upper Mount	2
7	32121-46	Roll Pin	2
8	18-0070	Lower Mount	2
9	18-0060	Spacer	2
10	18-0080	Lock	2
11	325-14	Capscrew	2
12	19-3340	Front Engine Mount L.H.	1
13	3211-4	Capscrew	2
14	3253-21	Lockwasher	4

Ref. No.	Part No.	Description	No. Used
15	3296-48	Locknut	1
16	19-3540	Plate - Torque Arm	1
17	3-3461	Washer Rubber	2
18	3256-27	Flat Washer	3
19	19-3970	Spacer	1
20	32146-2	Locknut	4
21	3256-24	Flat Washer	4
22	323-6	Capscrew	4
23	32146-13	Locknut	8
24	3290-216	Bevel Washer	8
25	325-6	Capscrew	8
26	19-3300	Front Engine Mount R.H.	1
†27		Front Engine Mount	2
28	3211-2	Capscrew	2

 
†Obtain from your local Perkins Dealer

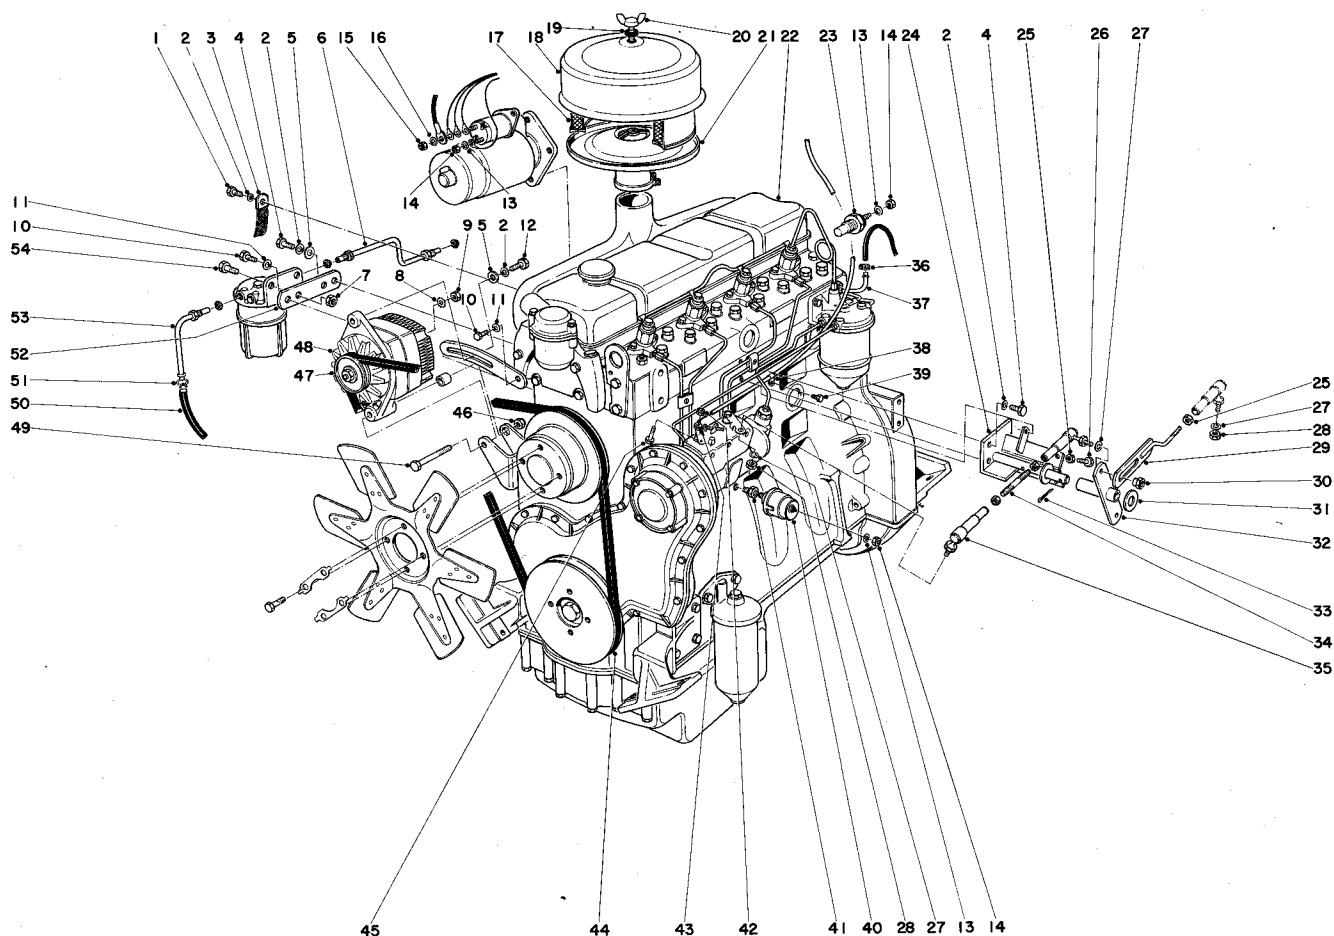

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3210-2	Capscrew	1
2	3253-4	Lockwasher	5
3	18-2770	Cable Ground	1
4	3210-3	Capscrew	3
5	3256-23	Flat Washer	2
6	19-3750	Fuel Line	1
7	32146-2	Locknut	2
8	3255-10	Lockwasher	1
9	3217-28	Nut	1
10	3211-2	Capscrew	2
11	3253-21	Lockwasher	2
12	322-5	Capscrew	1
13	3255-17	Lockwasher	3
14	3219-14	Nut	3
15	3218-3	Jam Nut	1
16	3255-9	Lockwasher	1
17	226-11	Cartridge	1
18	226-12	Air Cleaner Cover	1
19	226-10	Gasket	1
20	226-13	Wing Bolt	1
21	226-16	Air Cleaner Base	1
22		Perkins Engine (Model 4-236)	1
23	18-1750	Sending Unit - Water Temp	1


Ref. No.	Part No.	Description	No. Used
24	19-3760	Pivot Shaft	1
25	3220-1	Jam Nut	5
26	329-4	Capscrew	2
27	3253-3	Lockwasher	3
28	3219-1	Nut	2
29	19-3400	Slide - Hand Throttle	1
30	19-3430	Nut Special	1
31	3256-26	Flat Washer	2
32	19-3820	Pivot Arm	1
33	3272-11	Cotter Pin	2
34	19-3850	Rod-Pivot Arm to Inj. Pump	1
35	18-1720	Ball Joint Assembly	3
36	2412-36	Clamp	1
37	19-3390	Adapter Fuel Bleed Off	1
38	2412-31	Clamp	1
39	32140-32	Screw	1
40	18-1760	Sending Unit - Oil Pressure	1
41	18-2650	Adapter	1
42	3296-12	Locknut	1
43	3217-6	Nut	1
44	19-3480	V-Belt	1
45	3290-134	Machine Screw	1
46	32146-12	Locknut	1

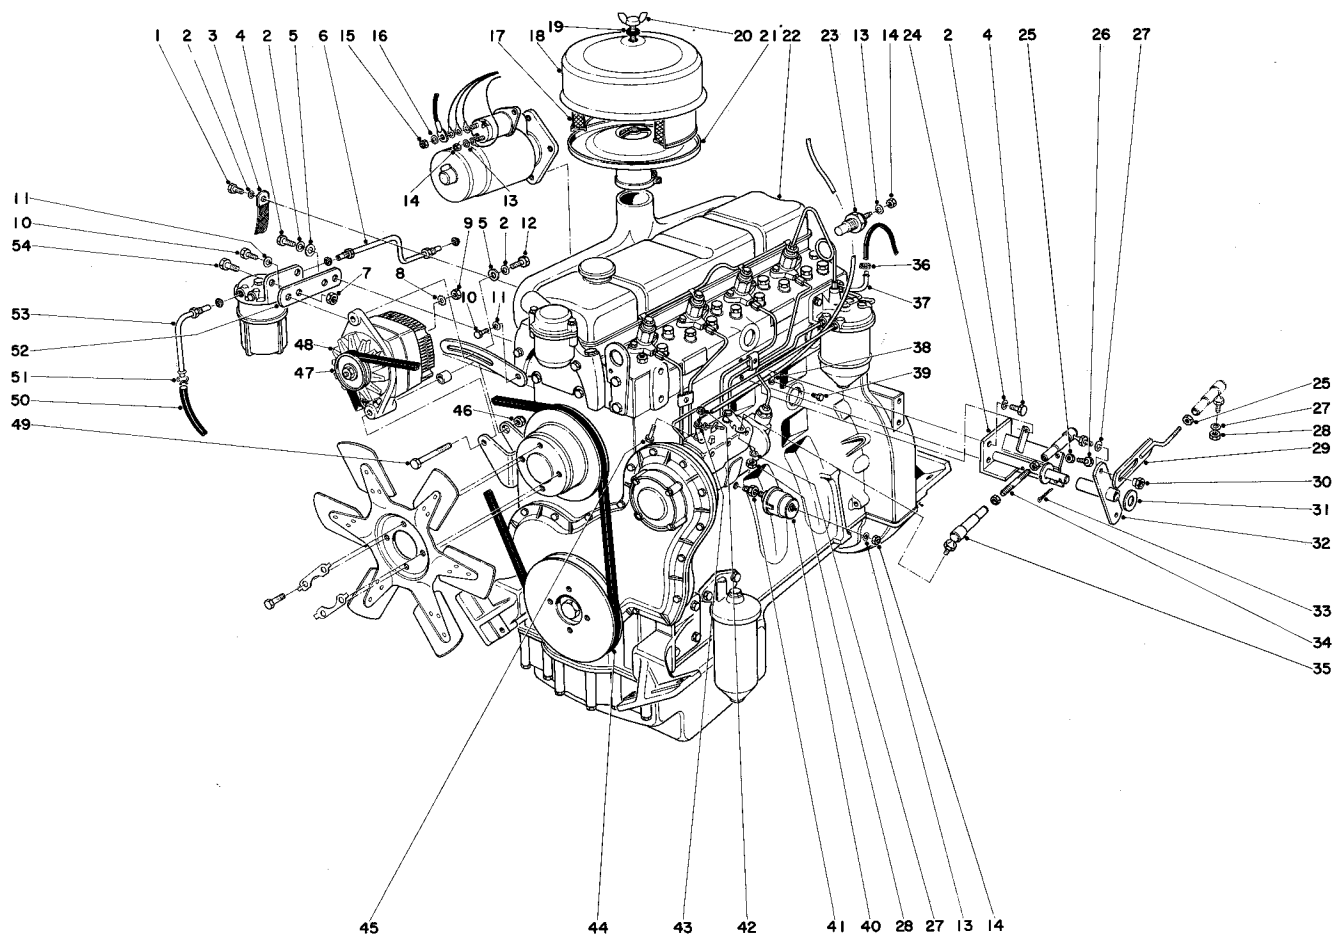 

ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	19-3470	Pulley	1
48	18-1600	Fan Pulley	1
49	3211-15	Capscrew	1
50	19-3250	Hose - Line to Filter	1

Ref. No.	Part No.	Description	No. Used
51	2412-6	Clamp Hose	1
52	19-3680	Mount - Water Trap	1
53	19-3740	Tube Hose to Water Trap	1
54	323-6	Capscrew	2

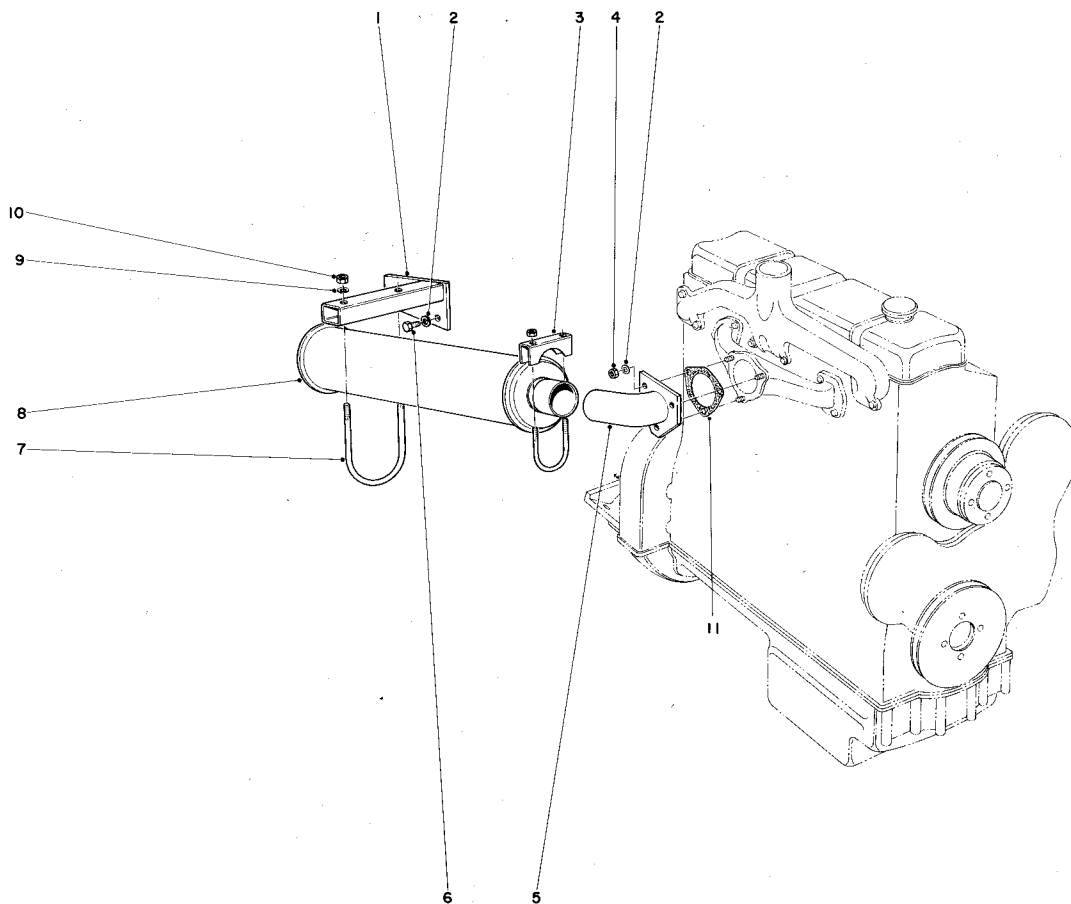 


ENGINE EXHAUST ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	19-3870	Muffler Support	1
2	3253-21	Lockwasher	5
3	20-4840	Clamp - Muffler	1
4	3219-3	Nut	3
5	19-8510	Exhaust Elbow	1
6	323-5	Capscrew	2

Ref. No.	Part No.	Description	No. Used
7	19-7440	U-Bolt	1
8	19-3860	Muffler	1
9	3256-23	Flat Washer	2
10	32146-5	Lockwasher	2
†11		Gasket	1

 †Obtain from local Perkins Dealer.

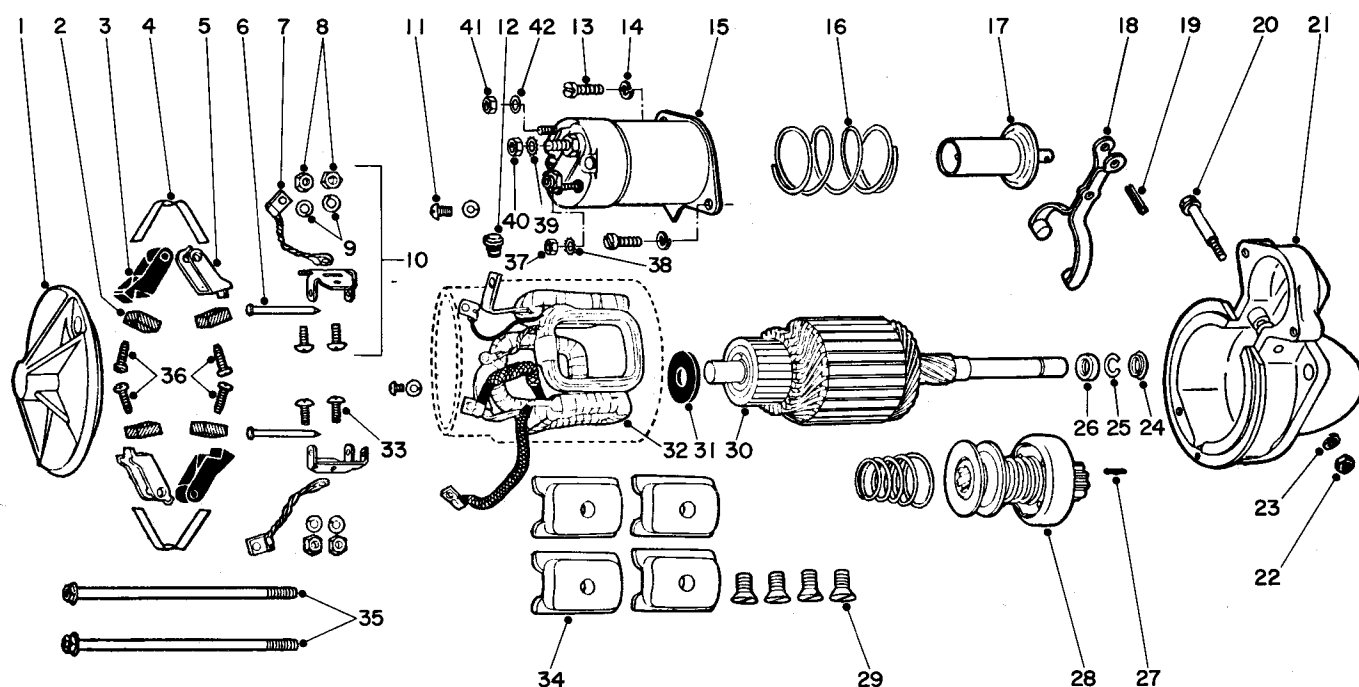


STARTER MOTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	1940385	Frame	1
2	1946434	Brushes	4
3	1926618	Holder (Insulation)	2
4	1926622	Springs	2
5	1940477	Holder (Ground)	2
6	1938058	Brush Holder Pin	2
7	1960864	Lead (Ground)	2
8	120361	Brush Holder Nut	4
9	453435	Lockwasher	4
10	1928015	Support Package	2
11	453468	Screw	1
12	1955946	Grommet	1
13	132255	Screw	2
14	9421423	Lockwasher	2
15	1114356	Switch	1
16	1958679	Spring Plunger	1
17	1941113	Plunger	1
18	1951567	Shift Lever	1
19	455106	Lever Pin	1
20	1932197	Lever Stud	1
21	1965225	Drive Housing (Incl. Bushing)	1
22	1926640	Nut	1

Ref. No.	Part No.	Description	No. Used
23	9421424	Lockwasher	1
24	1838568	Thrust Collar	1
25	1928022	Retainer Ring	1
26	1928021	Collar Stop	1
27	809593	Dowel Pin	1
28	1941157	Drive Assembly	1
29	1913960	Screw	4
30	1950417	Armature	1
31	1914842	Leather Washer	1
32	1955951	Coil Assembly	1
33	274738	Screw	4
34	1887021	Pole Shoe	4
35	1960908	Bolt	2
36	274875	Screw	4
†37	3217-25	Nut	1
†38	3255-20	Washer - Shakeproof	1
†39	3255-9	Washer - Shakeproof	1
†40	3218-3	Jam Nut	1
†41	3219-14	Nut	1
†42	3255-17	Lockwasher	1
*	19-3460	Starter Motor Complete (Delco-Remy No. 1107580)	1

*Not Illustrated

 †Obtain from your local TORO distributor. Obtain other parts from your local Delco-Remy dealer.

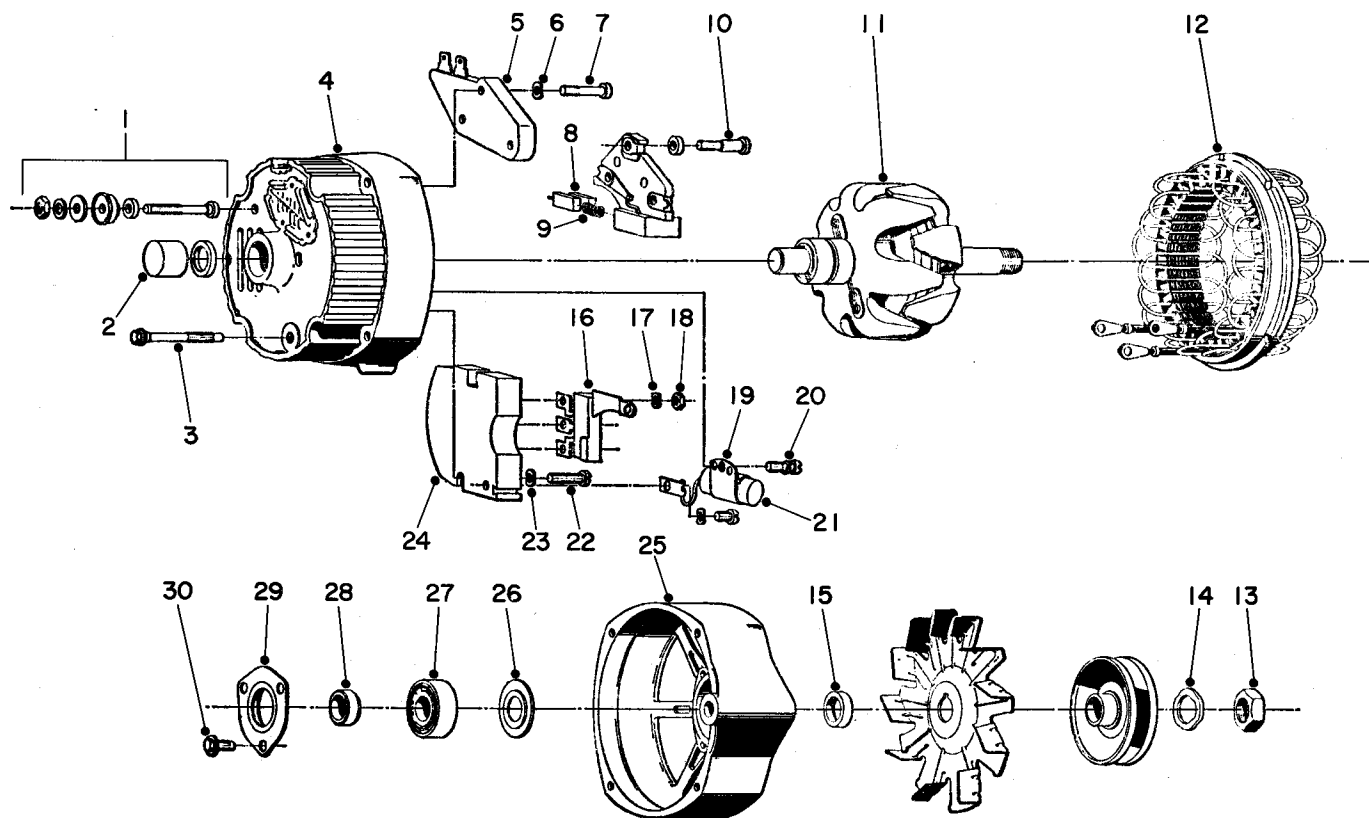


ALTERNATOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	1846900	Terminal Package	1
2	7451931	Bearing	1
3	1956975	Bolt	4
4	1846523	Frame	1
5	1116387	Regulator	1
6	1847933	Lockwasher	3
7	1971519	Screw	3
8	1852002	Brush and Holder	1
9	1964117	Spring	1
10	1846864	Screw	3
11	1971990	Rotor	1
12	1971986	Stator	1
13	1915172	Nut	1
14	1941978	Lockwasher	1
15	1959991	Collar Outside	1
16	1971528	Diode	1

Ref. No.	Part No.	Description	No. Used
17	1847933	Lockwasher	3
18	453434	Nut	3
19	1869573	Bracket	1
20	1851612	Screw and Lockwasher	1
21	801824	Capacitor	1
22	1970145	Screw	1
23	1847933	Lockwasher	1
24	1852209	Rectifier	1
25	1970525	Frame	1
26	800832	Slinger	1
27	908019	Bearing	1
28	1963139	Collar (Inside)	1
29	1971993	Bearing Retainer	1
30	1965104	Screw	3
*	18-1590	Alternator Complete	1

 
*Obtain from local Toro Distributor
Obtain all others parts from your local Delco-Remy Dealer.

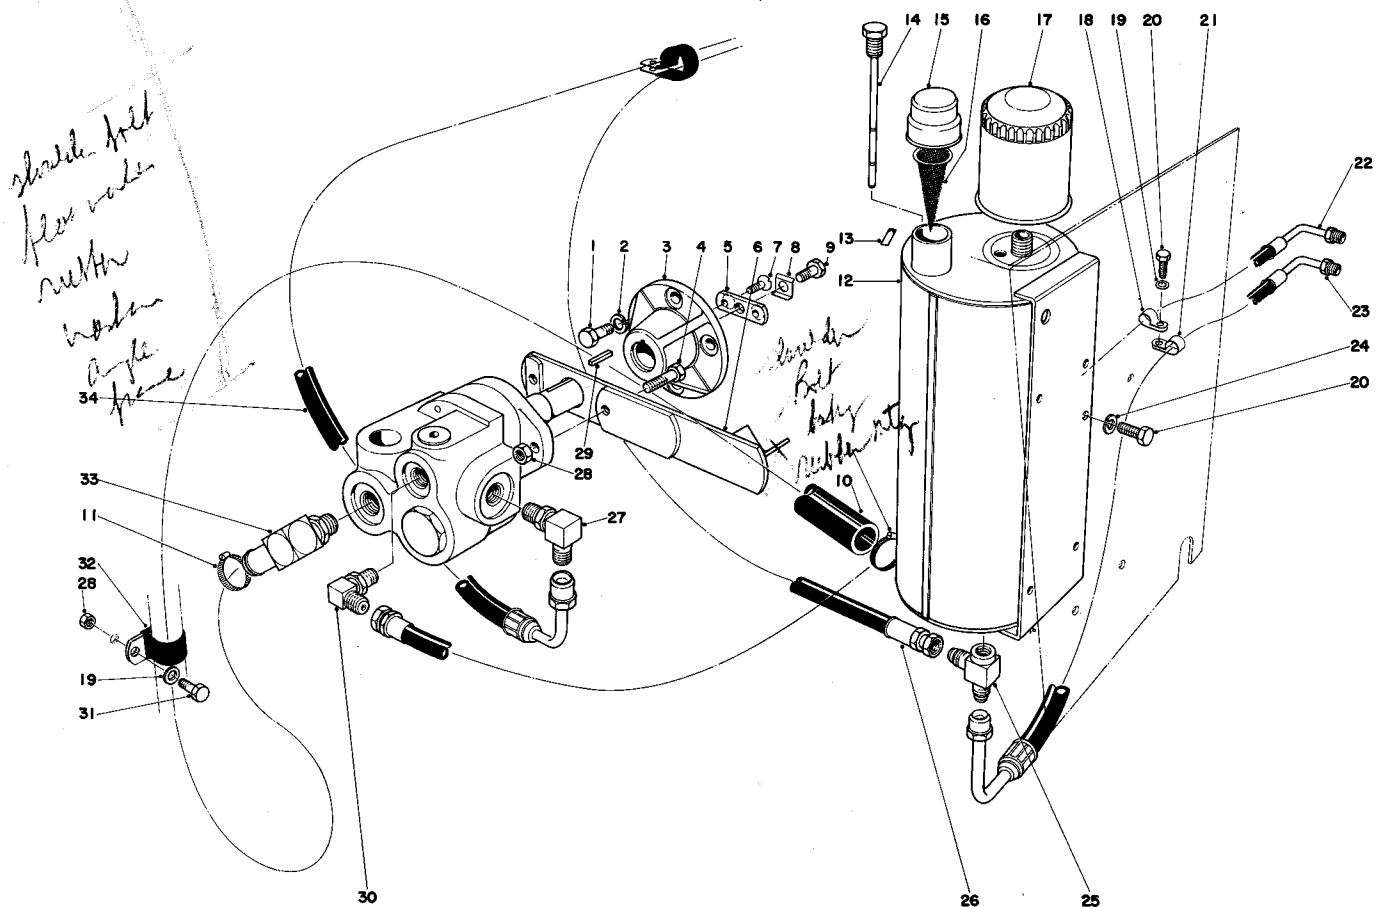

HYDRAULIC PUMP AND RESERVOIR

Ref. No.	Part No.	Description	No. Used
1	3212-6	Capscrew	4
2	3253-6	Lockwasher	4
3	23-9830	Hub-Hydraulic Pump	1
4	323-19	Capscrew	2
5	23-9810	Retainer	1
6	23-8080	Torque Arm	1
7	32108-21	Flat Head Machine Screw	2
8	23-9800	Clip Retainer	1
9	323-6	Capscrew	1
10	19-3050	Suction Hose	1
11	2412-3	Hose Clamp	2
12	18-2250	Hydraulic Reservoir	1
13	3-1553	Decal	1
14	18-2980	Dipstick	1
15	353-119	Filler Cap	1
16	3-2197	Filler Screen	1
17	18-4360	Oil Filter (AC No. PF-28)	1
18	2412-4	Clamp	1
19	3256-24	Flat Washer	2
	23-8420	Pump	

Ref. No.	Part No.	Description	No. Used
20	32104-6	Screw Self Tapping	5
21	2412-41	Clamp	1
22	23-8130	Hose Assembly Power Steering Return	1
23	23-8150	Hose Assembly Power Steering Pressure	1
24	3253-21	Lockwasher	4
25	353-468	Fitting	1
26	19-4010	Hose - Valve to Reservoir Return	1
27	353-370	90° Elbow	1
28	32146-2	Locknut	3
29	3-9668	Key	1
30	353-371	90° Elbow	1
31	323-4	Capscrew	1
32	304-61	Clamp	1
33	23-8910	90° Elbow	1
34	23-8140	Hose - Pump to Valve, Pressure	1

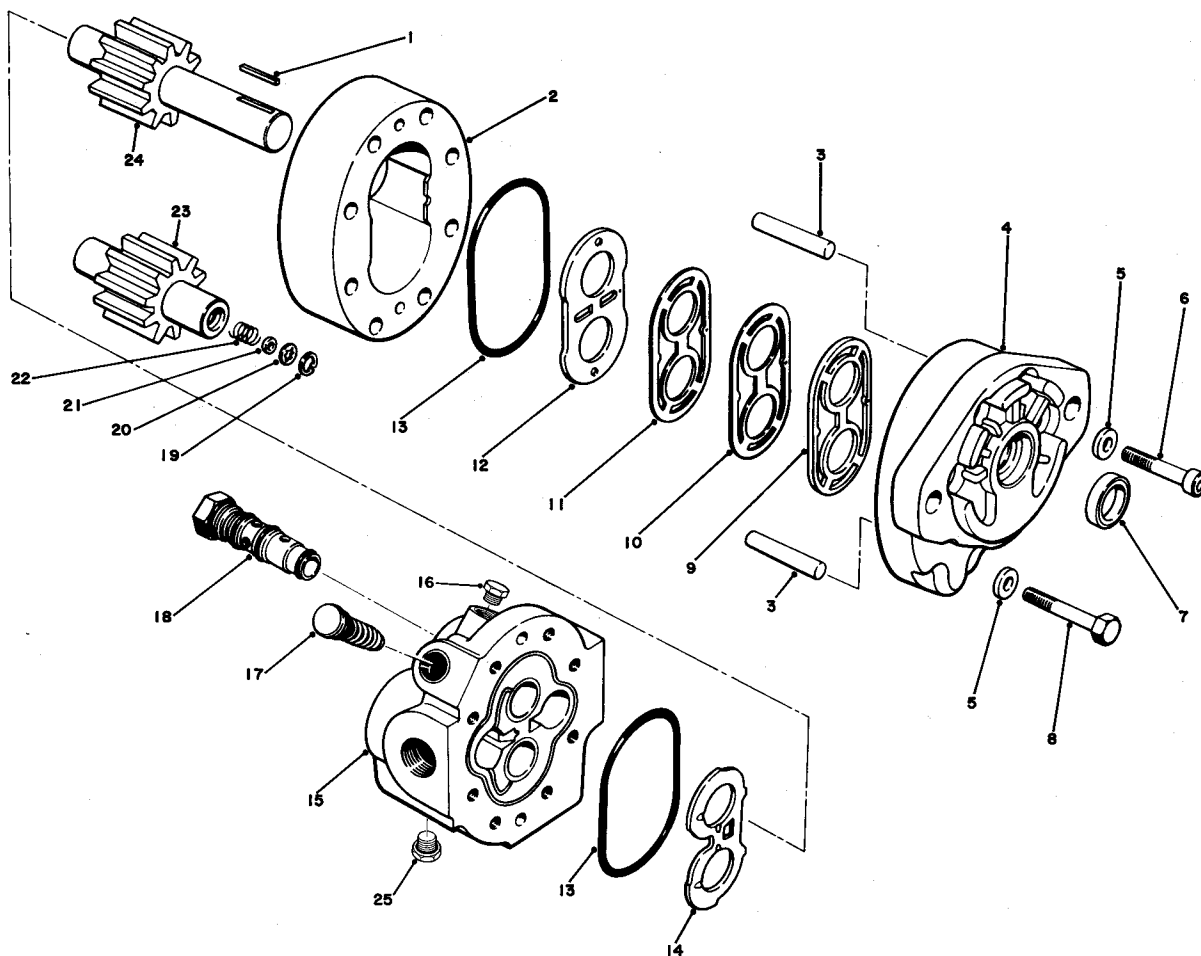 


HYDRAULIC PUMP ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3-9668	Key	1
2	23-8310	Center Section	1
3	23-8300	Dowel Pin	2
4	23-8320	Front Cover	1
5	23-8180	Washer	8
6	23-8190	Capscrew Socket Head	2
7	23-8340	Rotary Seal	1
8	23-8370	Capscrew	6
9	23-8410	V-Seal	1
10	23-8400	Gasket	1
11	23-8390	Heat Shield	1
12	23-8380	Wear Plate	1
13	23-8360	O-Ring	2
14	23-8290	Thrust Plate	1

Ref. No.	Part No.	Description	No. Used
15	23-8240	Back Cover	1
16	23-8260	Plug	1
17	23-8270	Relief Valve	1
18	23-8250	Flow Divider	1
19		Snap Ring	1
20		Ring	1
21		Plate	1
22		Spring	1
23	23-8200	Driven Gear (Incl. Ref. # 19 thru 22)	1
24	23-8220	Drive Gear	1
25	23-8280	Plug	1
*	24-9460	Repair Kit (Incl. Ref. # 7 & 9-14)	1
*	23-8420	Hydraulic Pump Assy. Complete	1

 *Not Illustrated

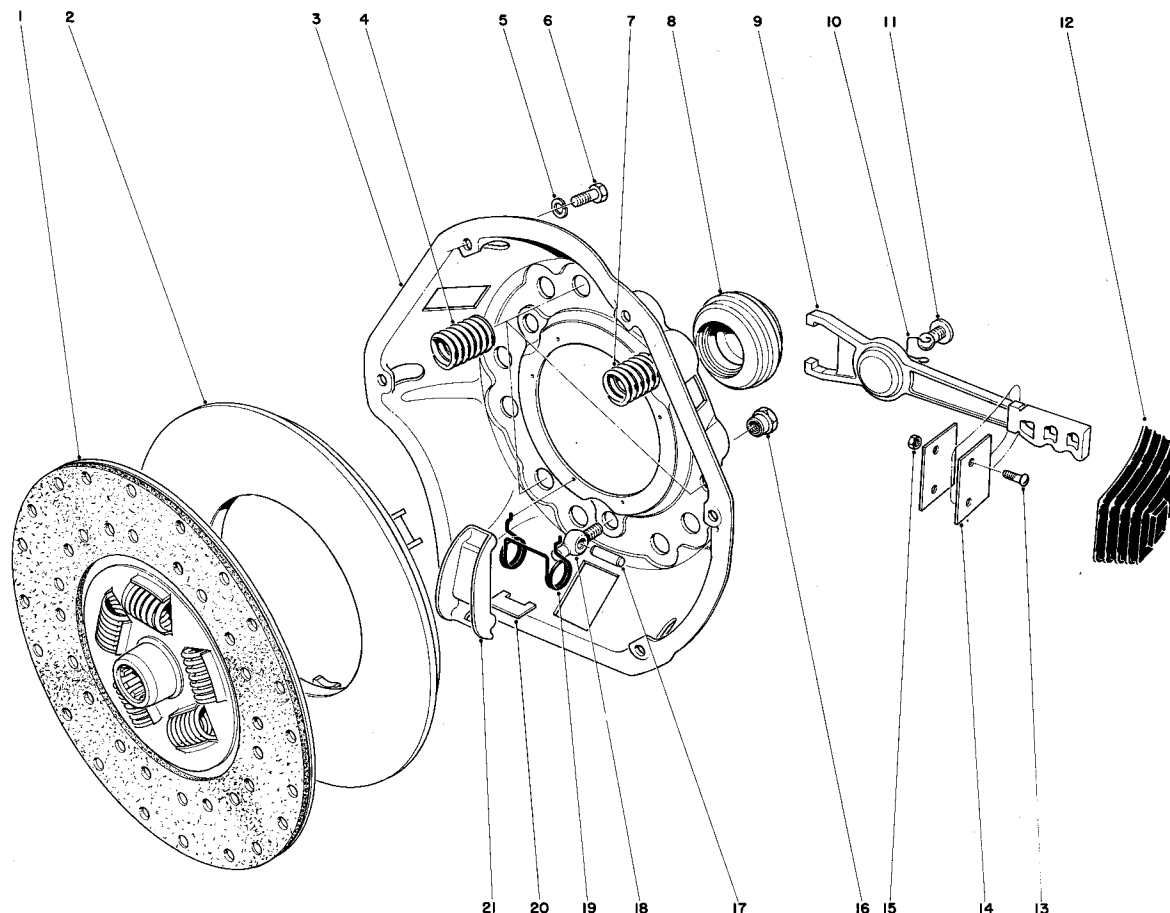


CLUTCH ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	19-3570	Clutch Plate	1
2	19-4700	Pressure Plate	1
3	19-4650	Cover	1
4	19-4710	Spring (Orange)	6
5	3253-21	Lockwasher	6
6	5-1533	Capscrew	6
7	19-4720	Spring (Yellow)	3
8	19-3590	Clutch Release Bearing	1
9	19-3620	Fork Assy. (Incl. Ref. No. 10)	1
10	19-3640	Ball Retainer Spring	1
11	19-3650	Stud - Clutch Fork Ball	1

Ref. No.	Part No.	Description	No. Used
12	19-3660	Boot	1
13	3251-4	Machine Screw	2
14	19-3600	Cover - Flywheel Housing	2
15	3296-12	Locknut	2
16	19-4660	Nut	3
17	19-4680	Pin	3
18	19-4670	Stud	3
19	19-4640	Release Finger Spring	3
20	19-4690	Lift Strut	3
21	19-4630	Release Finger	3
*	20-0450	Clutch Assembly Complete	1

 *Not Illustrated

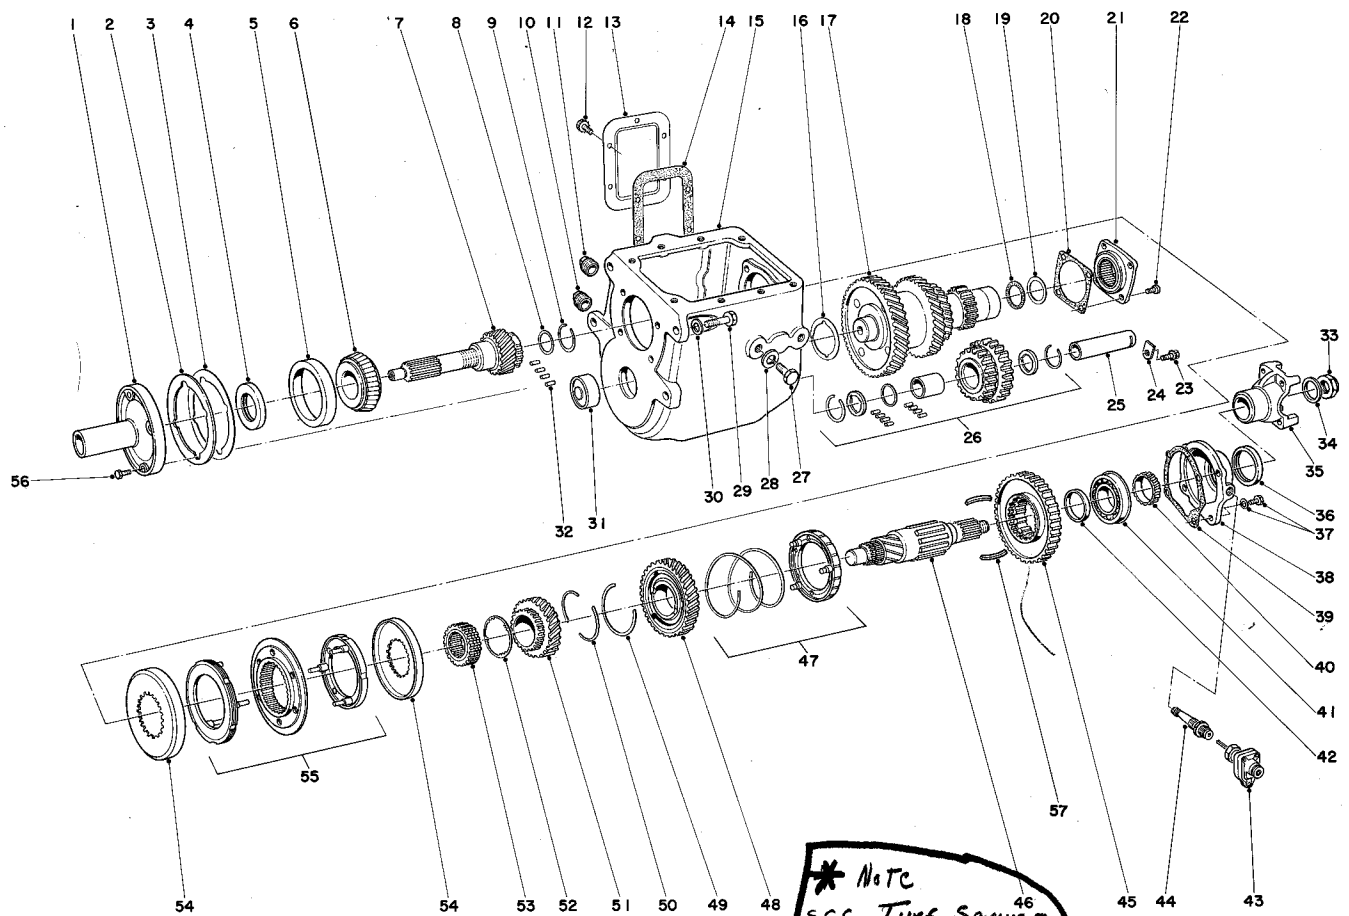

*** Note**
SEE Turf Service
Bulletin #136 TID 378

TRANSMISSION ASSEMBLY For more PARTS STKCD BY TORO See INSIDE


Ref. No.	Part No.	Description	No. Used
1	3934251	Bearing Retainer	1
2	647068	Shim (.007 Thick)	A/R
**	647069	Shim (.010 Thick)	A/R
**	647070	Shim (.020 Thick)	A/R
3	3934250	Gasket	2
4	3785207	Oil Seal	1
5	7451208	Bearing Cup	1
6	7451207	Bearing Cone	1
7	2463173	Main Drive Gear	1
8	2462241	Washer	1
9	2462242	Snap Ring	1
10	3787240	Magnetic Drain Plug	1
11	444592	Filler Plug	2
12	423351	Screw & Lockwasher Ass't.	6
13	301436	PTO Cover	1
14	301457	Gasket	1
15	2462232	Transmission Case	1
16	2462215	Thrust Washer	1
17	2462214	Cluster Gear	1
18	2462216	Bearing Race	1
19	9415534	Rear Bearing	1
20	2462217	Gasket	1
21	2462253	Rear Gear Rtnr. (Incl. Ndle Brg.)	1
22	18-3830	Screw	4
23	423351	Screw & Lockwasher Ass'y.	1
24	2462219	Lock Plate	1
25	2462218	Idle Gear Shaft	1
26	672766	Reverse Idler Gear Ass'y.	1
27	179898	Plug	2
28	103324	Lockwasher	2

Ref. No.	Part No.	Description	No. Used
29*	325-6	Capscrew	4
30*	3253-7	Lockwasher	4
31	9428720	Front Bearing	1
32	457067	Roller Bearing	14
33	2238966	Nut	1
34	2492330	Washer	1
35	2495291	Yoke	1
36	2434156	Oil Seal	1
37*	18-3870	Screw & Lockwasher Ass'y.	4
38	2358775	Bearing Retainer	1
39	3727149	Gasket	1
40*	18-3670	Speedometer Gear	1
41	457178	Bearing Assembly	1
42	2462251	Spacer	1
43*	18-1850	Speedometer Drive Joint	1
44*	18-3160	Speedometer Drive Gear	1
45	3900993	Low Speed Gear (Incl. Ref. #57)	1
46	2463175	Main Shaft	1
47	2462243	Ring and Pin Assembly	1
48	2462249	2nd Speed Gear	1
49	2462246	Snap Ring	1
50	3727142	Split Ring	1
51	2462250	3rd Speed Gear	1
52	9423953	Thrust Bearing	1
53	2489860	Clutch Gear	1
54*	18-3460	Outer Stop Ring	1
55*	18-3470	Synchromesh Assembly	1
56	2367357	Screw	4
57	18-3940	Spring-Low Speed Gear Spline	2
*	18-1840	Transmission Complete	1

*Order from Toro.

All other parts obtain from your local GM, Chevrolet Dealer.

 ** Not Illustrated

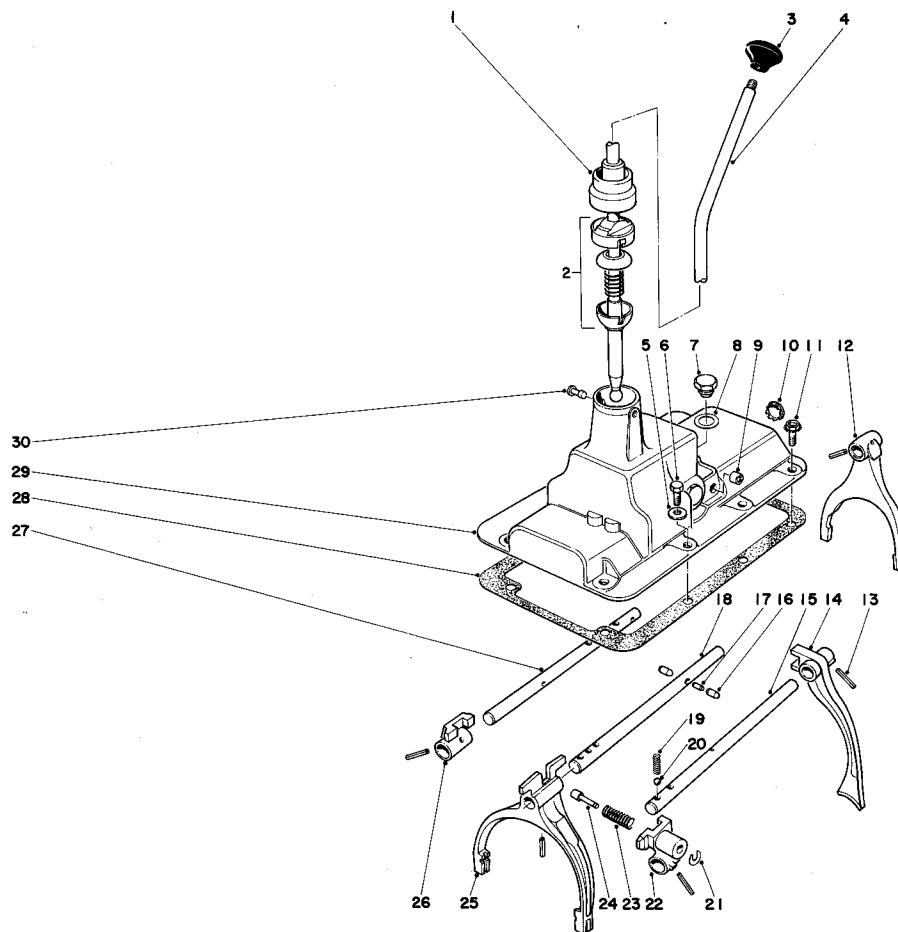


SHIFT LEVER AND FORK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-1910	Boot Shift Lever	1
2*	18-1800	Shift Lever Mounting Kit	1
3*	233-10	Gearshift Knob	1
4*	18-1860	Gearshift Lever	1
5	6023050	Washer	2
6	3727166	Screw	2
7	3906448	Plug	2
8	3906462	Gasket	2
9	9421743	Plug	1
10	142656	Plug	3
11*	323-5	Screw & Lockwasher Assembly	6
12	6023050	Fork, 2nd & Low Shift (Incl. Bushing)	1
13	2462226	Lock Pin	5
14	2462224	Fork, Reverse Shift	1
15	3912387	Reverse Shift Rail	1
16	2462228	Plunger	2

Ref. No.	Part No.	Description	No. Used
17	2462229	Pin	1
18	3979463	Shift Rail, 3rd and Direct	1
19	2462227	Spring	3
20	147500	Poppet Ball	3
21	3727182	Washer	1
22	2462253	Reverse Shift Lug	1
23	2344765	Spring	1
24	2462260	Plunger	1
25	2462261	Fork, 3rd and Direct (Incl. Bushing)	1
26	2462225	Lug, 2nd and Low	1
27	2462220	Shift Rail, Low and 2nd	1
28	2462210	Gasket	1
29	3979462	Case Cover	1
30	3921024	Trunnion	2
**	2462206	Lug and Plunger Assembly (Incl. Ref. No. 21, 22, 23, 24)	1

*Order from Toro.

 
**Not Illustrated

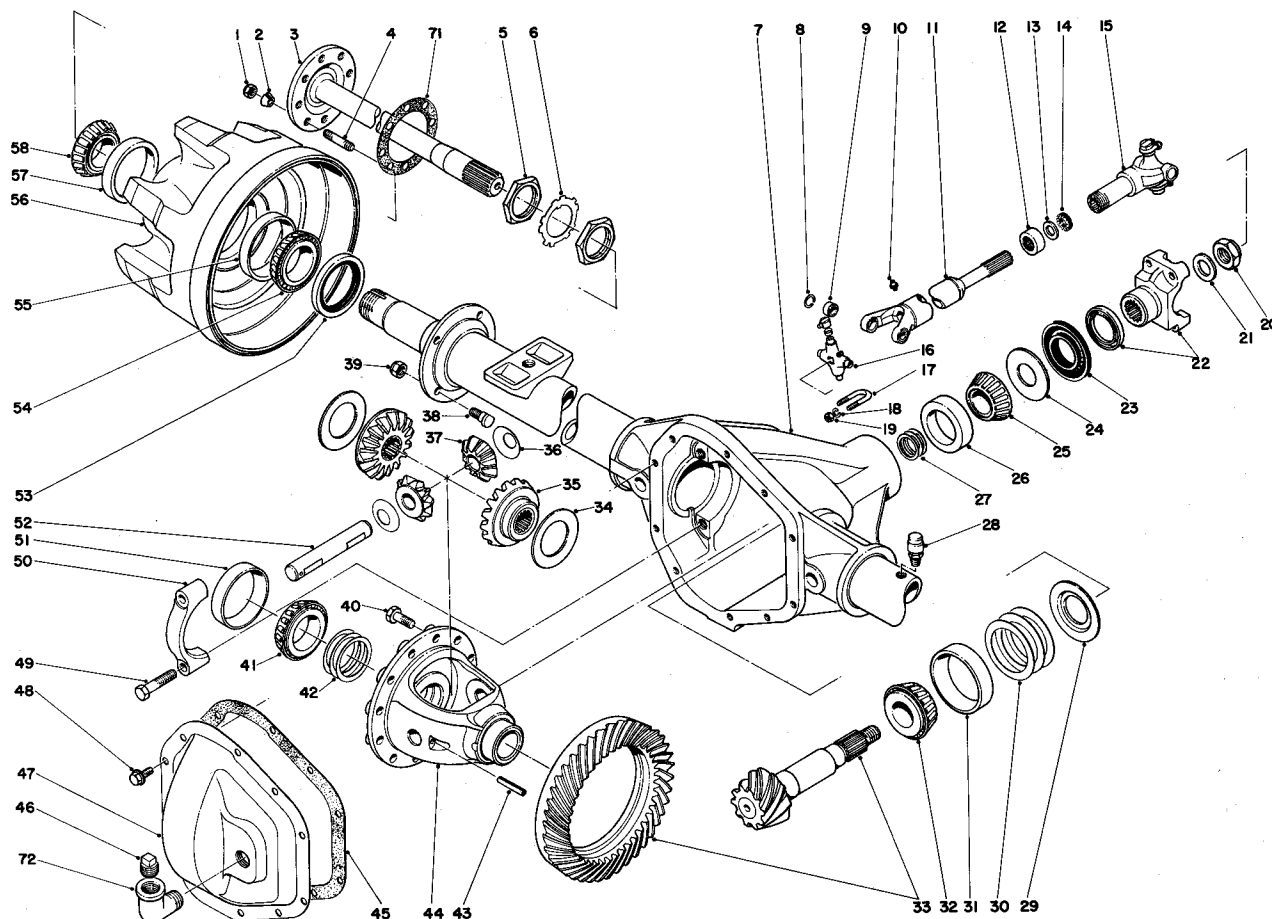

REAR AXLE AND DRIVE LINE

Ref. No.	Part No.	Description	No. Used
1	3296-7	Lock Nut	16
2	19-6810	Stud Adapter	16
3	19-6710	Shaft Axle	2
4	19-6010	Stud	16
5	19-6820	Nut - Spindle	4
6	19-6840	Lock - Spindle Nut	2
7		Case Assembly - Differential	1
8	18-4650	Retaining Ring	8
9		Bearing Assembly	8
10	18-4690	Grease Fitting	1
11	19-4100	Shaft Assembly	1
12	18-4730	Retainer Cap	1
13	18-4710	Washer	1
14	18-4700	Felt Dust Seal	1
15	18-4680	Slip Yoke	1
16		Cross Journal	2
17	214-229	U-Bolt	4
18	3253-21	Lockwasher	8
19	32146-12	Nut	8
20	18-9360	Nut Pinion	1
21	18-9370	Washer Pinion Nut	1
22	19-6700	End Yoke Assembly	1
23	18-9390	Seal - Pinion	1
24	18-9400	Slinger - Pinion Bearing	1
25	18-9410	Bearing Cone	1

Ref. No.	Part No.	Description	No. Used
26	18-9420	Bearing Cup	1
27	18-9430	Shim Pinion Bearing .003	A/R
	18-9440	Shim Pinion Bearing .005	A/R
	18-9450	Shim Pinion Bearing .010	A/R
	18-9460	Shim Pinion Bearing .030	A/R
28	19-6780	Breather	1
29	19-6690	Baffle - Pinion Bearing	1
30	18-9310	Shim Adjusting .003	A/R
	18-9320	Shim Adjusting .005	A/R
	18-9330	Shim Adjusting .010	A/R
31	18-9300	Bearing Cup Inner	1
32	18-9290	Bearing Cone Inner	1
33		Gear Drive & Pinion Set	1
34	19-6640	Thrust Washer	1
35	19-6600	Gear Differential	2
36	19-6650	Thrust Washer	2
37	19-6610	Pinion Gear	2
38	19-6830	Brake Flange Bolt	8
39	3296-19	Lock Nut	8
40	18-9340	Bolt - Drive Gear	12
41	18-9220	Bearing Cone	2
42	18-9230	Shim - Bearing .003	A/R
	18-9240	Shim - Bearing .005	A/R
	18-9250	Shim - Bearing .010	A/R
	18-9260	Shim - Bearing .030	A/R

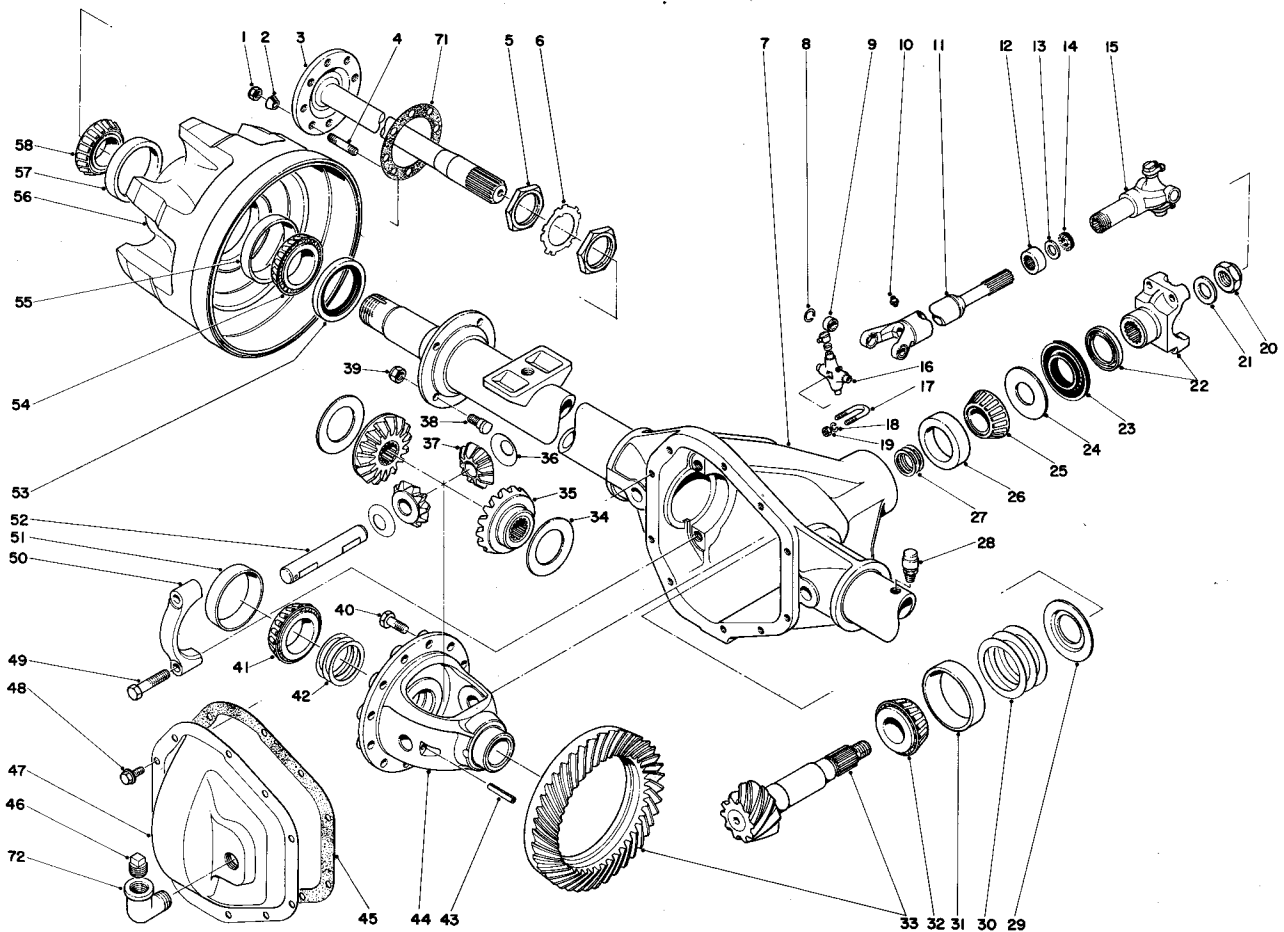 


REAR AXLE AND DRIVE LINE (Continued)

Ref. No.	Part No.	Description	No. Used
43	19-6630	Lock - Differential	1
44	19-6590	Case - Differential	1
45	18-9190	Gasket - Carrier Cover	1
46	19-7090	Pipe Plug	1
47	19-7080	Gear Carrier Cover	1
48	18-9200	Bolt Carrier Cover	10
49	325-9	Bolt - Bearing Cup	4
50	18-9150	Cap Differential Bearing	2
51	18-9210	Bearing Cup	2
52	19-6620	Shaft Differential	1
53	253-128	Oil Seal	2
54	254-98	Bearing Cone	2
55	254-100	Bearing Cup	2
56	18-8930	Rear Wheel	2
57	254-99	Bearing Cup	2
58	254-101	Bearing Cone	2
*59	19-7410	Kit Differential & Pinion Shim (Incl. Ref. Nos. 27, 29 & 42)	1
*60	19-7380	Kit Differential Shim (Incl. Ref. No. 42)	1
*61	19-7100	Kit Differential Bearing (Incl. Ref. No. 41 & 51)	1
*62	19-7120	Kit Inner Pinion Bearing (Incl. Ref. Nos. 31 & 32)	1

Ref. No.	Part No.	Description	No. Used
*63	19-7110	Kit Outer Pinion Bearing (Incl. Ref. Nos. 25 & 26)	1
*64	19-6770	Kit Differential Gear & Pinion (Incl. Ref. Nos. 35 & 37)	1
*65	19-7070	Kit Gear Carrier Cover (Incl. Ref. Nos. 45 thru 48)	1
*66	19-6580	Case Assy. Differential (Incl. Ref. Nos. 7, 43, 34-36, 37 & 52)	1
*67	19-6750	Gear & Pinion Assembly Drive (Incl. Ref. Nos. 20 & 33)	1
*68	19-6740	Kit - Differential Case Assembly (Incl. Ref. Nos. 40, 45, 60, 61 & 66)	1
*69	19-7140	Kit - Drive Gear & Pinion Assy. (Incl. Ref. Nos. 21, 23, 24, 29, 40, 45, 59, 62, 63 & 67)	1
*70	19-6760	Kit - Differential Parts (Incl. Ref. Nos. 34 thru 37, 40, 43, 45 & 52)	1
*	18-8700	Journal & Bearing Kit (Incl. Ref. Nos. 9 & 16)	1
*	19-6570	Rear Axle Assembly Complete	1
71	24-8660	Gasket Drive Flange	2
72	2811-8	Street Elbow	1

 
*Not Illustrated

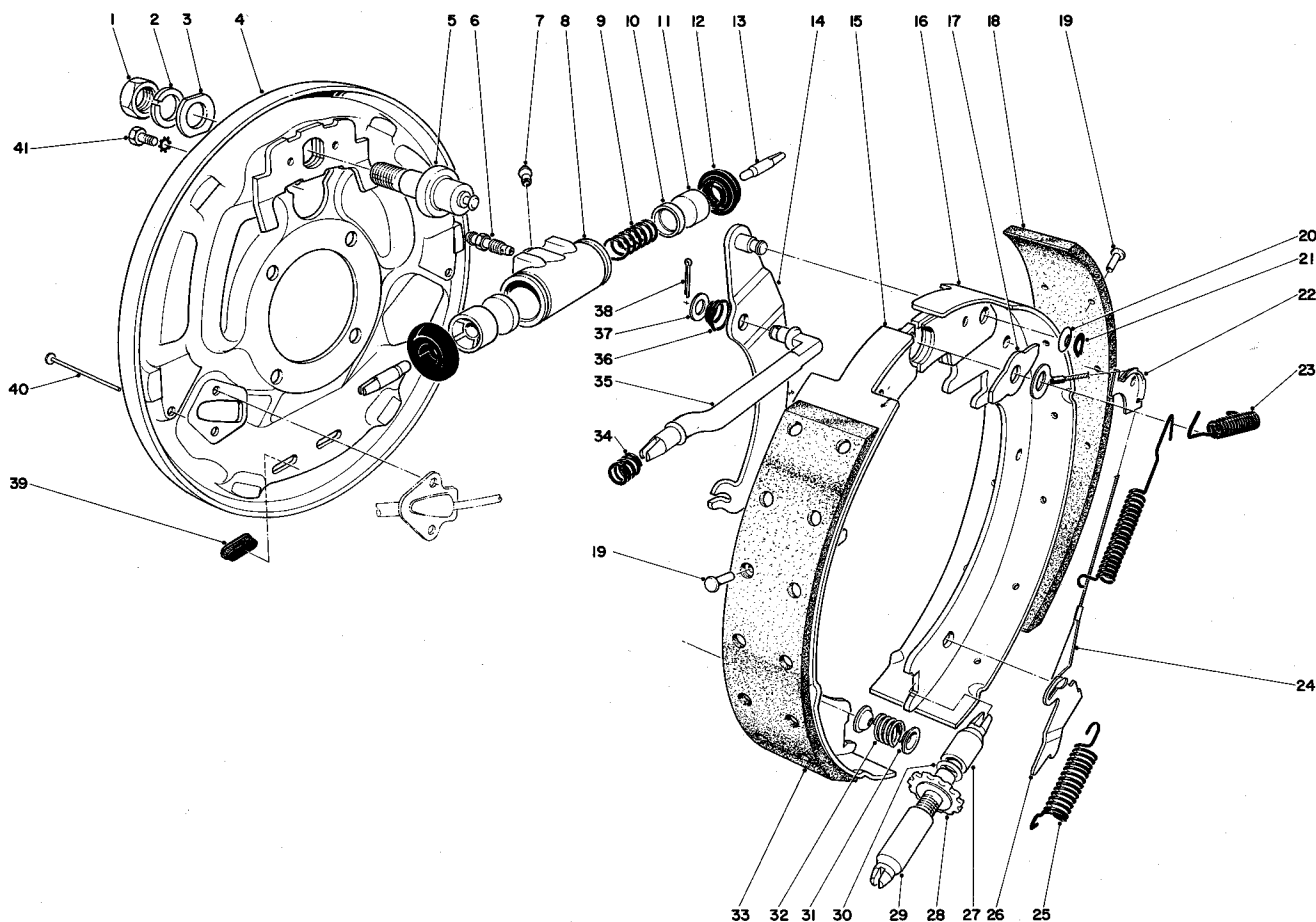

BRAKE ASSEMBLY (13 x 2 1/2)
(USED ON UNITS WITH SERIAL NO. 30400 & UP)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	19-6150	Nut	2	*	19-6330	Lever-Auto Adj. R.H.	1
2	19-6160	Lockwasher	2	27	19-6340	Socket Adj. Screw	2
3	19-6170	Washer Special	2	28	19-6370	Adj. Screw L.H.	1
4	19-7220	Backing Plate Assembly L.H.	1	*	19-6530	Adj. Screw R.H.	1
*	19-7320	Backing Plate Assembly R.H.	1	29	19-6360	Pivot Nut Adj. Screw L.H.	1
5	19-6270	Anchor Pin	2	*	19-6520	Pivot Nut Adj. Screw R.H.	1
6	19-6460	Bleeder Screw	2	30	19-6350	Washer Adj. Screw	2
7	19-6450	Tube Seat Inlet	2	31	19-6390	Cup-Shoe Hold Down Spring	8
8	19-6440	Body L.H.	1	32	19-6410	Spring-Shoe Hold Down	4
*	19-6540	Body R.H.	1	33	19-7340	Lining Drilled - Primary	2
9		Spring	2	34	19-6430	Spring-Strut to Shoe	2
10		Cup	4	35	19-6230	Strut-Parking Brake	2
11		Piston	4	36	19-6250	Spring Strut	2
12		Boot	4	37	19-6240	Washer Strut	2
13	19-6180	Connecting Link	4	38	19-6220	Cotter Pin	2
14	19-7270	Parking Brake Lever Assy. L.H.	1	39	19-6320	Cover-Brake Adj. Hole	4
*	19-7460	Parking Brake Lever Assy. R.H.	1	40	19-6400	Pin-Shoe Hold Down Spring	4
15	19-7300	Brake Shoe Lining Assy.-Prim.	2	41	19-6420	Screw & Lockwasher Assembly	4
16	19-7230	Brake Shoe Lining Assy.-Second.	2	*	19-7310	Wheel Cylinder Assy L.H. (Incl. Items 6-13)	1
17	19-6260	Plate Shoe Guide	2	*	19-7350	Wheel Cylinder Assy. R.H. (Incl. Items 6-13)	1
18	19-7240	Lining-Drilled - Secondary	2	*	19-7290	Adj. Screw L.H. (Incl. Ref. Nos. 27-30)	1
19	19-7250	Rivet-Tubular Brass	24	*	19-7330	Adj. Screw R.H. (Incl. Ref. Nos. 27-30)	1
20	19-6210	Spring Washer	2	*	19-6140	Rear Brake Complete L.H.	1
21	19-6200	Retainer	2	*	19-6510	Rear Brake Complete R.H.	1
22	19-6280	Cable-Guide	2	*	26-2550	Piston & Seal Kit (Incl. Ref. 9-12)	2
23	19-6190	Spring-Anchor to Shoe	4				
24	19-7280	Cable & Fitting Assembly	2				
25	19-6380	Spring-Auto Adj. Lever	2				
26	19-7450	Lever-Auto Adj. L.H.	1				

 *Not Illustrated

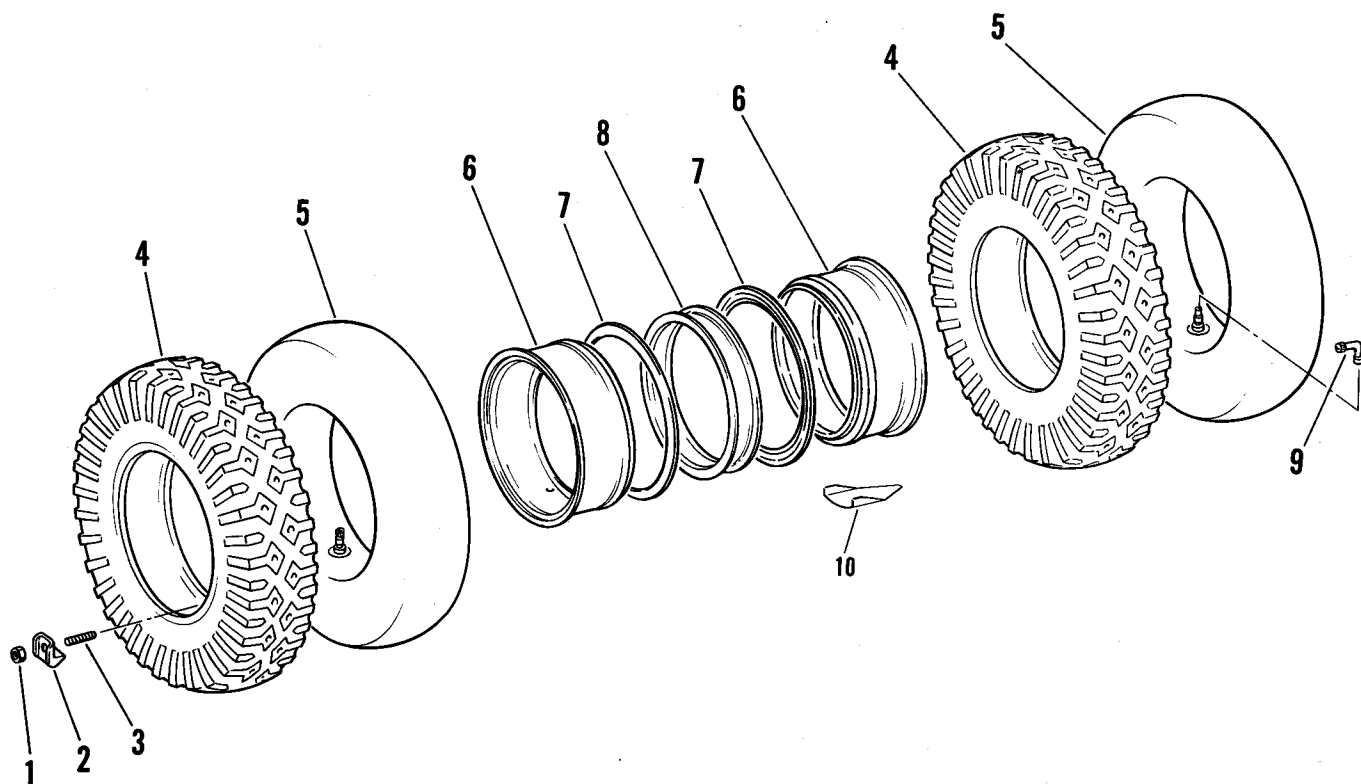


Assembly
REAR TIRES AND RIMS 7:50 x 16 — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	217-30	Nut, Rim Retaining	12
2	24-5650	Wedge Clamp	12
3	217-28	Stud	12
4	231-5	Tire, Rear 7:50 x 16	4
5	232-13	Inner Tube	4

Ref. No.	Part No.	Description	No. Used
6	217-36	Rim	4
7	217-37	Ring, Retaining	4
8	11-4860	Spacing Band	2
9	217-16	Valve Extension	2
10	12-2590	Shim	6
*	231-58	Tire, Rear 9:50 x 16	4

 *Optional

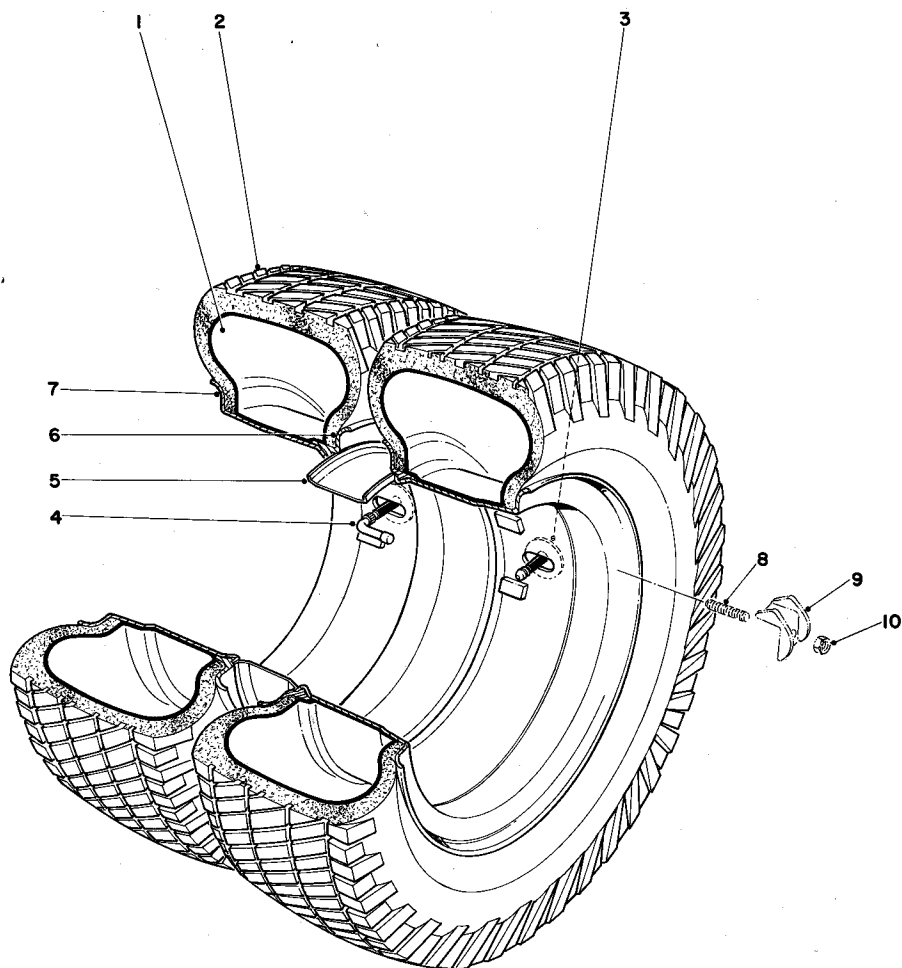


REAR TIRES AND RIMS 8:00x16 — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1-	232-13	Tube	4
2-	231-70	Tire & Tube	4
3	3256-8	Bridge Washer	4
4	217-16	Valve Extension	2
5	11-4880	Spacer Band	2

Ref. No.	Part No.	Description	No. Used
6	217-100	Rim Ring	4
7-	11-4810	Rim	4
8	217-28	Stud	12
9	24-5650	Wedge Clamp	12
10	217-30	Nut	12
*	231-58	Rear Tire 9.50 x 16	4

 
*Optional

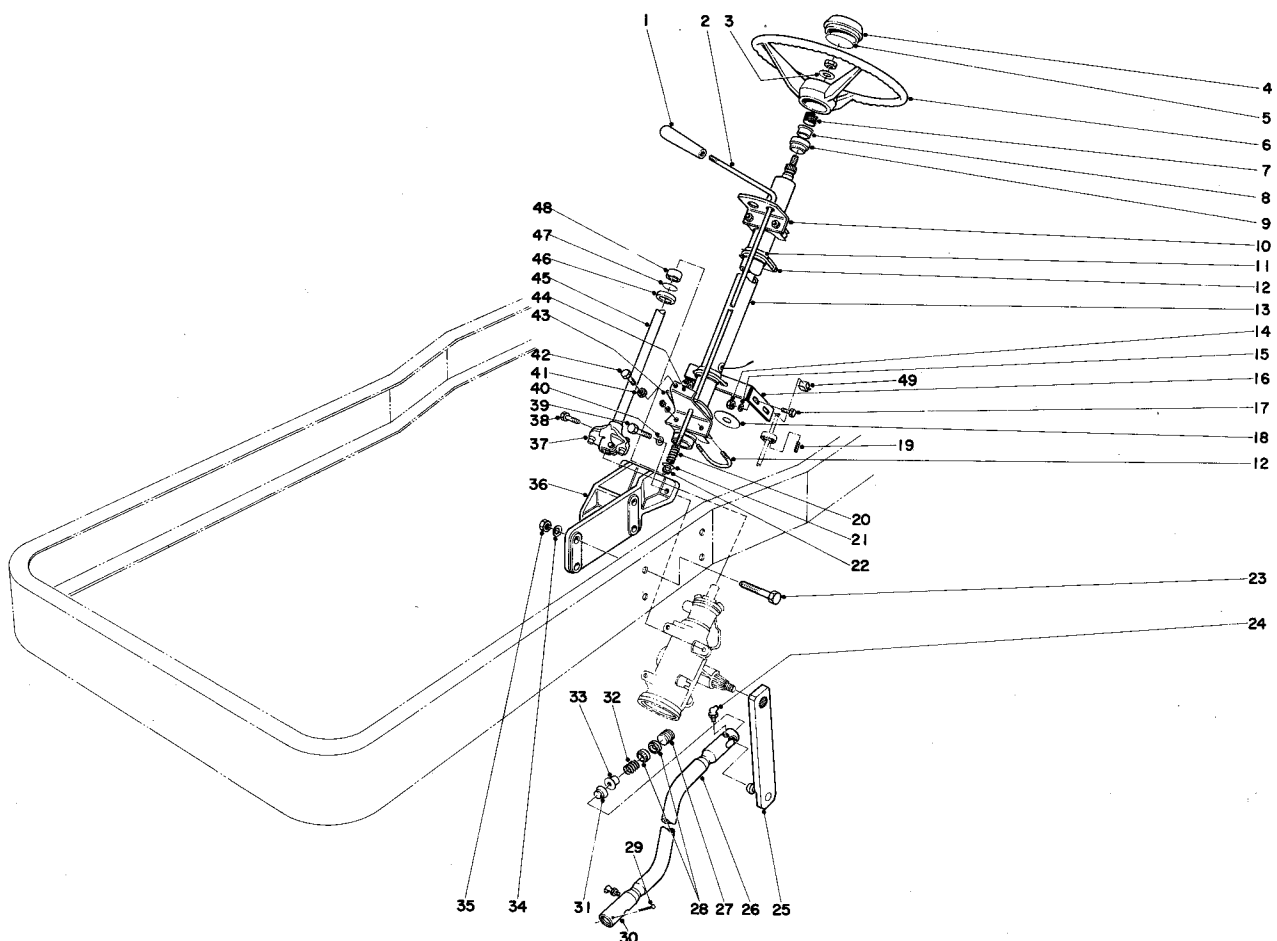

STEERING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	18-2640	Handle	1
2	18-2710	Lever - Handle Throttle	1
3	18-3130	Washer	1
4	18-2140	Steering Wheel Cap	1
5	18-3170	Decal	1
6	18-2110	Steering Wheel	1
7	18-3120	Spring	1
8	18-3110	Spring Seat	1
9	18-3030	Bearing Assembly	1
10	18-2480	Support - Throttle Lever	1
11	18-1310	Saddle	8
12	18-2130	Clamp	4
13	18-3150	Steering Column Jacket Assy.	1
*	18-3050	Steering Shaft & Jacket Assy.	1
14	32146-5	Locknut	2
15	3256-23	Flat Washer	2
16	18-0830	Steering Column Support	1
17	322-2	Capscrew	2
18	3-3258	Friction Disc	1
19	32121-2	Roll Pin	2
20	3-8596	Spring Compression	1
21	3256-25	Flat Washer	1
22	3296-7	Locknut	1
23	327-10	Capscrew	4
24	302-33	Grease Fitting	2
25	18-2070	Pitman Arm	1

Ref. No.	Part No.	Description	No. Used
26	18-0330	Drag Link Tube	1
27	2116-5	End Plug	2
28	2116-6	Spherical Seat	4
29	3272-15	Cotter Pin	2
30	18-0320	Drag Link (Incl. Ref. 24 & 26-33)	1
31	2116-8	Inner Plug	2
32	2116-7	Spring	2
33	2116-11	Spring Seat	2
34	3253-8	Lockwasher	4
35	3217-11	Nut	4
36	19-3290	Engine & Power Steering Mount	1
37	18-3010	Flange Assembly	1
38	18-3100	Bolt	1
39	324-6	Capscrew	3
40	3253-26	Lockwasher	3
41	3218-1	Jam Nut	1
42	321-4	Capscrew	1
43	18-2440	Friction Plate	1
44	18-2470	Bracket Friction Plate	1
45	18-3090	Steering Shaft Assembly	1
46	18-3070	Bearing Seal Retainer	1
47	18-3080	Seal	1
48	18-3060	Bushing	1
49	218-214	Tinnerman Clip	1

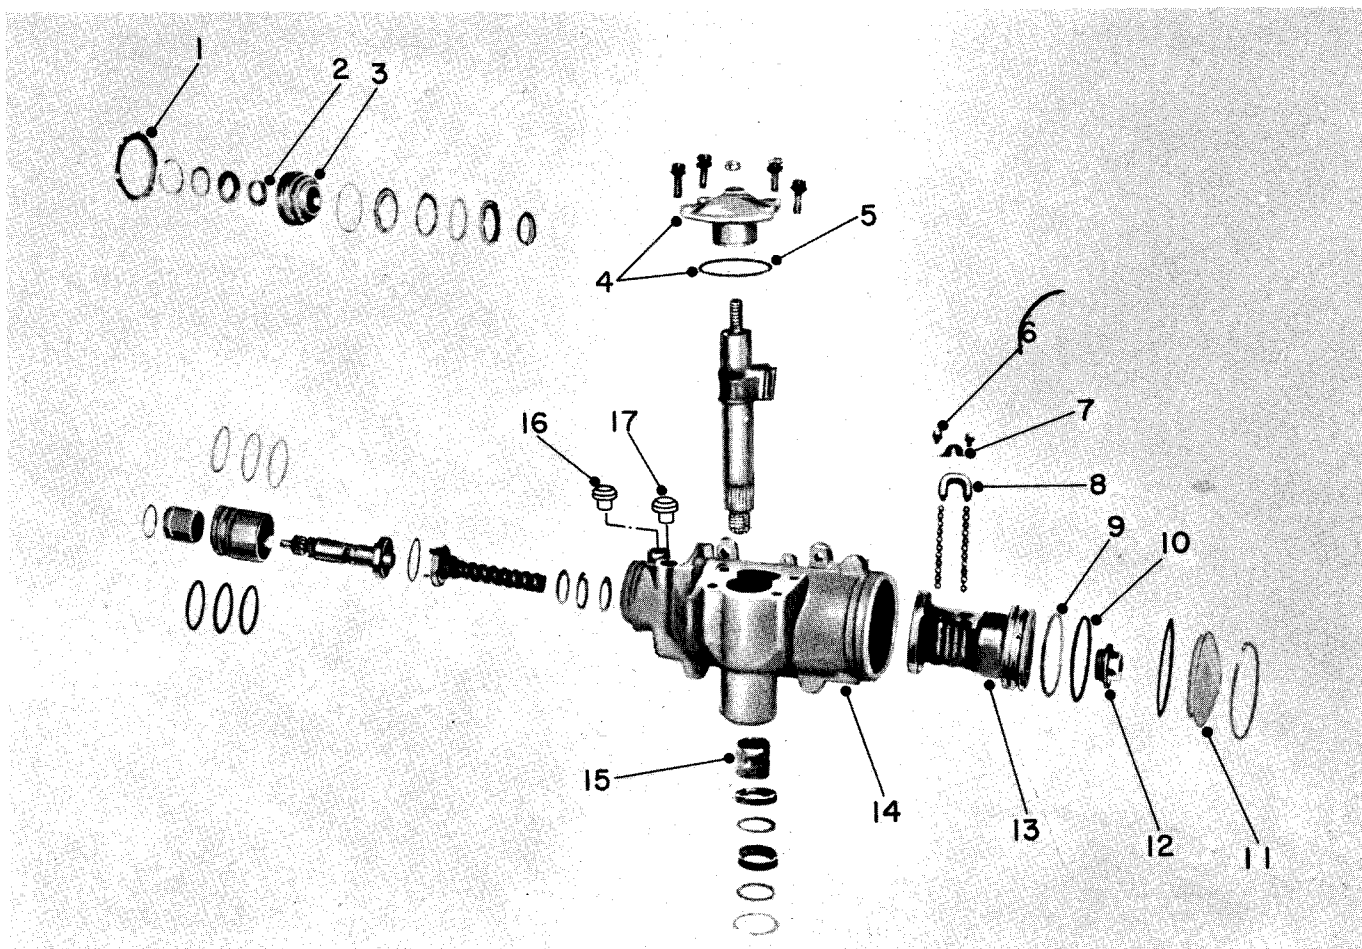 


STEERING GEAR

Ref. No.	Part No.	Description	No. Used
1	18-4320	Locknut	1
2	18-4240	Bearing Assembly	1
3	18-4230	Plug Assembly	1
	18-4240	Bearing Assembly	1
		Bearing Assembly Roller Thrust	1
		Plug Adjuster	1
		Race, Thrust Bearing	1
		Race, Thrust Bearing	1
		Retainer, Bearing	1
		Ring, Retaining	1
		Seal, "O" Ring	1
		Seal, Stub Shaft	1
		Seal, Stub Shaft Dust	1
		Spacer, Thrust Bearing	1
4	18-4170	Cover Assembly	1
		Bushing	1
		Cover	1
5	18-4180	Seal	1
6	18-4260	Capscrew & Lockwasher	2
7	18-4270	Clamp	1
8	18-4280	Guide, Ball Return	2
9	18-4290	Ring, Rack Piston	1
10	18-4300	"O" Ring Seal	1
11	18-4330	Plug, Housing End	1
12	18-4340	Plug, Rack Piston End	1
13	18-4250	Rack, Piston, Nut Assembly	1
	18-4260	Capscrew & Lockwasher	2
		Pin & Worm Assembly	1
		Dowel Pin	1
		Steering Worm	1
		Ball	11
	18-4270	Clamp	1

Ref. No.	Part No.	Description	No. Used
	18-4280	Ball Return Guide	2
		Rack, Piston Nut	1
	18-4290	Ring, Rack Piston	1
	18-4300	Seal	1
14	18-4190	Housing Assembly	1
		Ball	1
	18-4200	Bearing, Pitman Shaft	1
		Bearing	1
	18-4210	Connector, Inverted Flare	1
	18-4220	Connector, Inverted Flare	1
		Housing	1
15	18-4200	Bearing, Pitman Shaft	1
16	18-4220	Connector, Inverted Flare	1
17	18-4210	Connector, Inverted Flare	1
*	18-4310	Valve Assembly	1
		Body Assembly	1
		Dowel Pin	1
		Sleeve	2
		Torsion Bar	1
		Cap	1
		Dowel Pin	1
		Bearing Assembly	1
		Pin	1
		Shaft, Stub	1
		Ring	3
		"O" Ring Seal	1
		"O" Ring Seal	3
		"O" Ring Seal	1
		"O" Ring Seal	1
		Sleeve, Torsion Bar	1
		Spool, Valve	1
		Dowel Pin	1

 *Not Illustrated

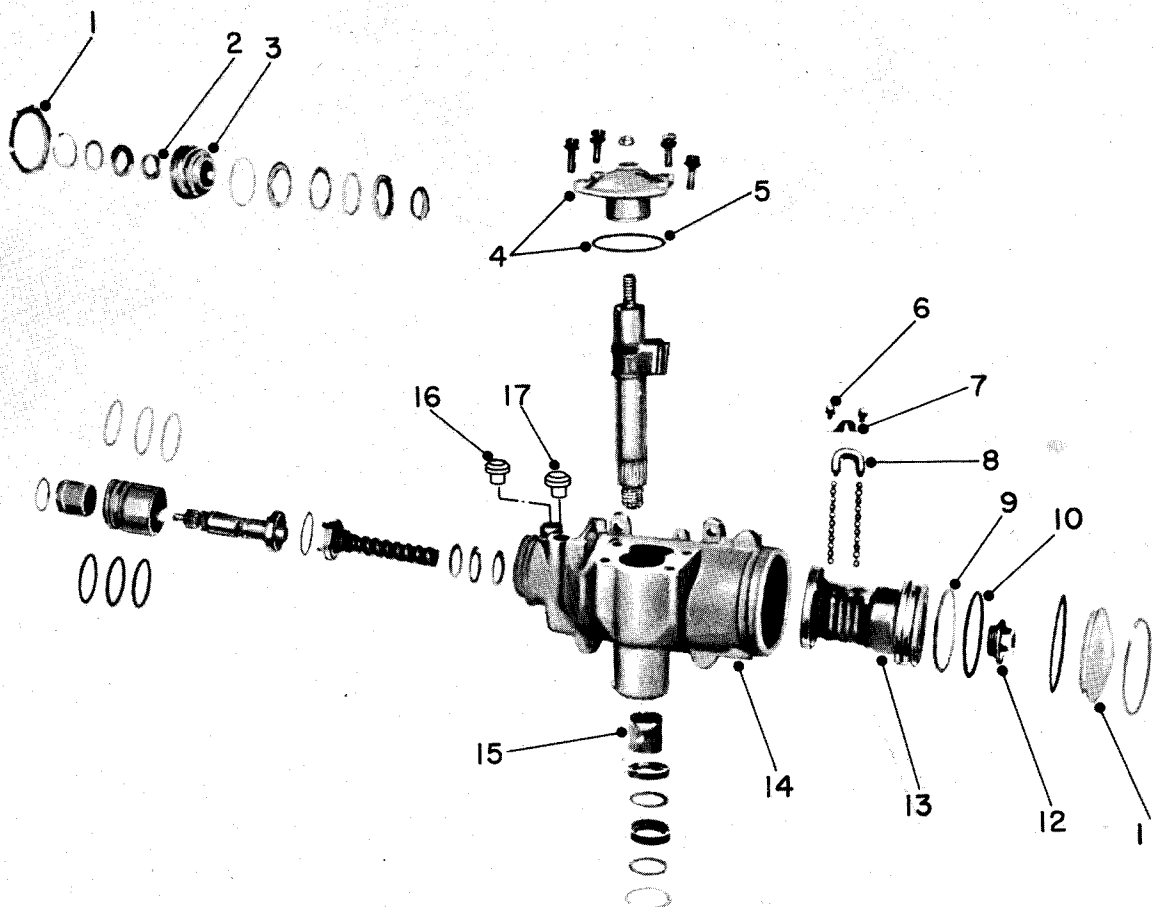


STEERING GEAR (Continued)

Ref. No.	Part No.	Description	No. Used
*	18-5140	Bearing Service Kit — Thrust Bearing Ass'y. — Roller Thrust Race — Thrust Bearing Race — Thrust Bearing Retainer — Bearing Spacer	A/R 1 1 1 1 1
*	18-5150	Seal Service Kit — Adj. Plug Seal, Stub Shaft Seal, "O" Ring Seal, Stub Shaft Dust Retaining Ring	A/R 1 1 1 1
*	18-2050	Steering Gear Complete	1
*	18-5160	Seal Service Kit — Pitman Shaft Ring Retaining Seal, Pitman Shaft Seal, Pitman Shaft Bolt Hex Hd. Washer Seal Back-Up	A/R 1 1 1 2 2
*	18-5170	Seal-Service Kit — Valve Ring Ring, Valve Body Seal, O-Ring Seal, O-Ring Seal, O-Ring Seal, O-Ring Seal, O-Ring	A/R 3 3 1 1 1 1
*	18-5180	Bearing Service Kit — Thrust Bearing Ass'y — Roller Thrust Race, Thrust Bearing	A/R 1 2
*	18-5190	Ball Service Kit, Recirculating Ball Ball, Chrome Alloy	A/R 12 12
*	18-5200	Seal Service Kit, O-Ring	A/R

Ref. No.	Part No.	Description	No. Used
		Seal, O-Ring Seal, O-Ring Seal, Side Cover (O-Ring) Seal, Housing End Plug Seal, O-Ring Seal Housing End Plug Seal, O-Ring Seal, O-Ring Seal, O-Ring Seal, O-Ring	1 1 1 1 1 1 1 1 1 1
*	18-5210	Seal Service Kit Master Nut, Lash Adjuster Ring, End Plug Retainer Seal, O-Ring Ring, Retaining Ring, Retaining Ring, Retaining Ring, Valve Body Seal, O-Ring Seal, O-Ring Seal, O-Ring Bolt Hex Hd. Seal, Housing End Plug Seal, Housing End Plug Seal, O-Ring Seal, O-Ring Seal, O-Ring Seal, Pitman Shaft Seal, Pitman Shaft Seal, Stub Shaft Seal, Stub Shaft Dust Washer Seal Rack-up	A/R 1 1 1 1 1 1 1 3 1 1 3 4 1 1 1 1 1 1 1 1 1 2

 *Not Illustrated

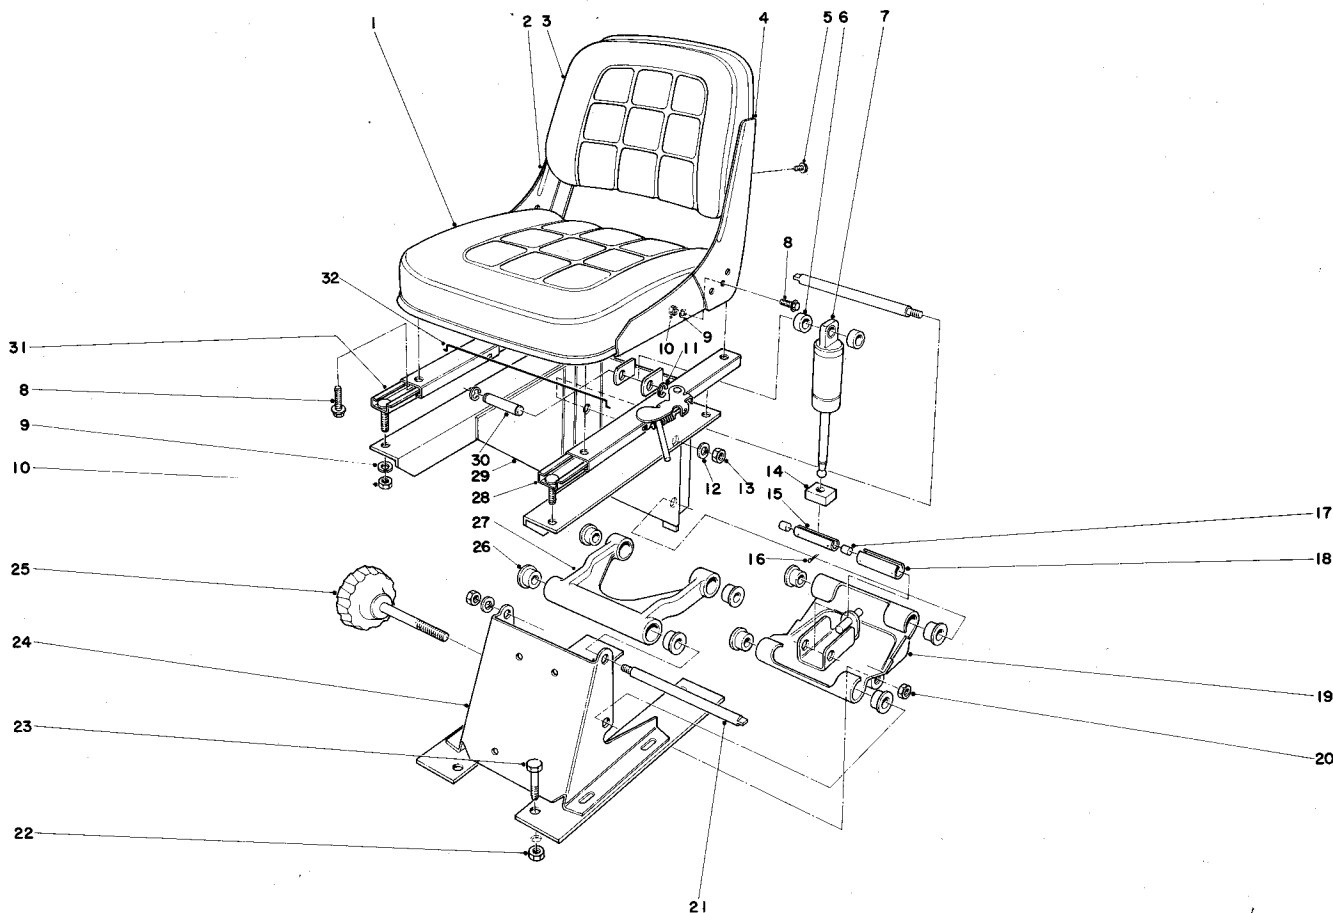


SEAT ASSEMBLY

31-4880 Seat arm w/slide
31-4930 Suspension only

Ref. No.	Part No.	Description	No. Used
1	351-59	Seat Cushion	1
2	351-64	Rail R.H.	1
3	351-60	Backrest	1
4	351-65	Rail L.H.	1
5	3234-5	Hex Flange Screw	4
6	351-44	Spacer	2
7	351-42	Gas Spring	1
8	3234-5	Flange Screw	2
9	3253-4	Lockwasher	6
10	3217-6	Nut	6
11	32120-18	Retaining Ring	2
12	3254-6	Lockwasher	4
13	32146-6	Nut	4
14	351-46	Bumper	1
15	351-45	Pivot	1
16	3272-7	Cotter Pin	3

Ref. No.	Part No.	Description	No. Used
17	351-69	Spacer	2
18	351-66	Pivot Sleeve	1
19	351-73	Adj. Link	1
20	3296-39	Nut	1
21	351-40	Step Bolt	4
22	32146-2	Locknut	4
23	323-7	Capscrew	4
24	351-71	Base	1
25	351-47	Adjustment Screw	1
26	351-48	Bushing	4
27	351-74	Arm Assembly (Incl. Ref. 26)	1
28	351-63	Adjuster L.H.	1
29	351-72	Carriage Assembly	1
30	351-43	Pivot Pin	1
31	351-62	Adjuster R.H.	1
32	351-61	Connecting Rod	1

 
*Not Illustrated

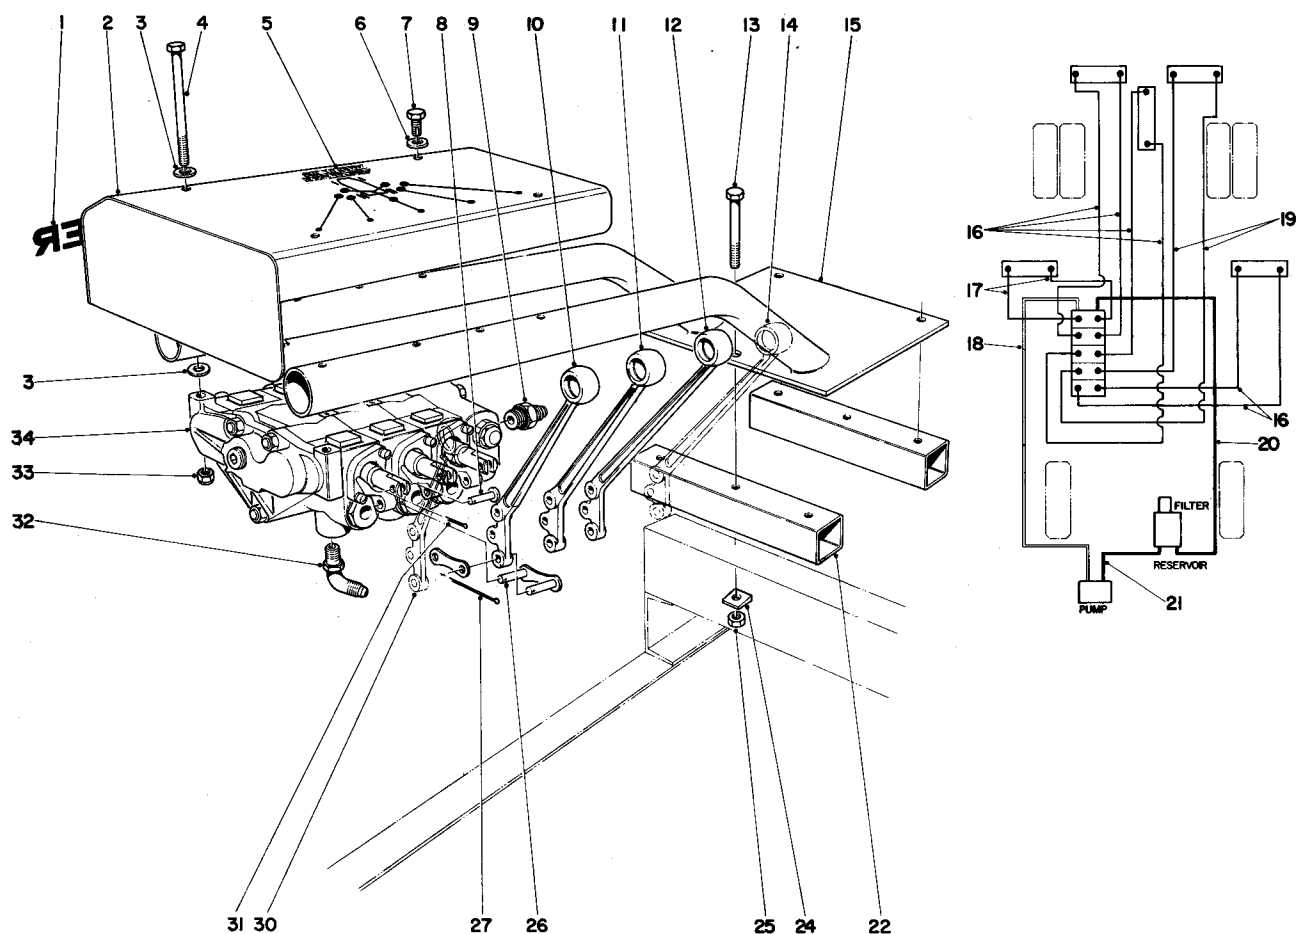

VALVE BANK — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	19-2270	Decal	1
2	5-6600	Valve Cover	1
3	3256-23	Washer	6
4	322-29	Capscrew	3
5	5-8080	Decal	1
6	3256-24	Washer	1
7	32104-6	Self-Tapping Screw	1
8	353-322	Pin	5
9	353-433	Straight Swivel — Female	2
10	5-7840	Modified Lever	1
11	353-323	Lever	1
12	5-7830	Modified Lever	1
13	325-13	Capscrew	3
14	5-7860	Modified Lever	1
15	11-4750	Valve Stand	1
16	5-0200	Hydraulic Hose (77")	6

Ref. No.	Part No.	Description	No. Used
17	5-0220	Hydraulic Hose (46")	2
18	19-3990	High Pressure Hose	1
19	5-0230	Hydraulic Hose (102")	2
20	19-4010	Low Pressure Hose	1
21	19-3050	Suction Hose	1
22	3-0166	Spacer Tube	2
24	3290-216	Bevel Washer	3
25	32146-13	Locknut	3
26	353-319	Connecting Link	5
27	353-320	Cotter Pin	5
30	5-7850	Modified Lever	1
31	353-321	Cotter Pin	5
32	353-212	Male Elbow	10
33	3296-29	Locknut	3
34	26-0610	Complete Valve Bank Assy.	1

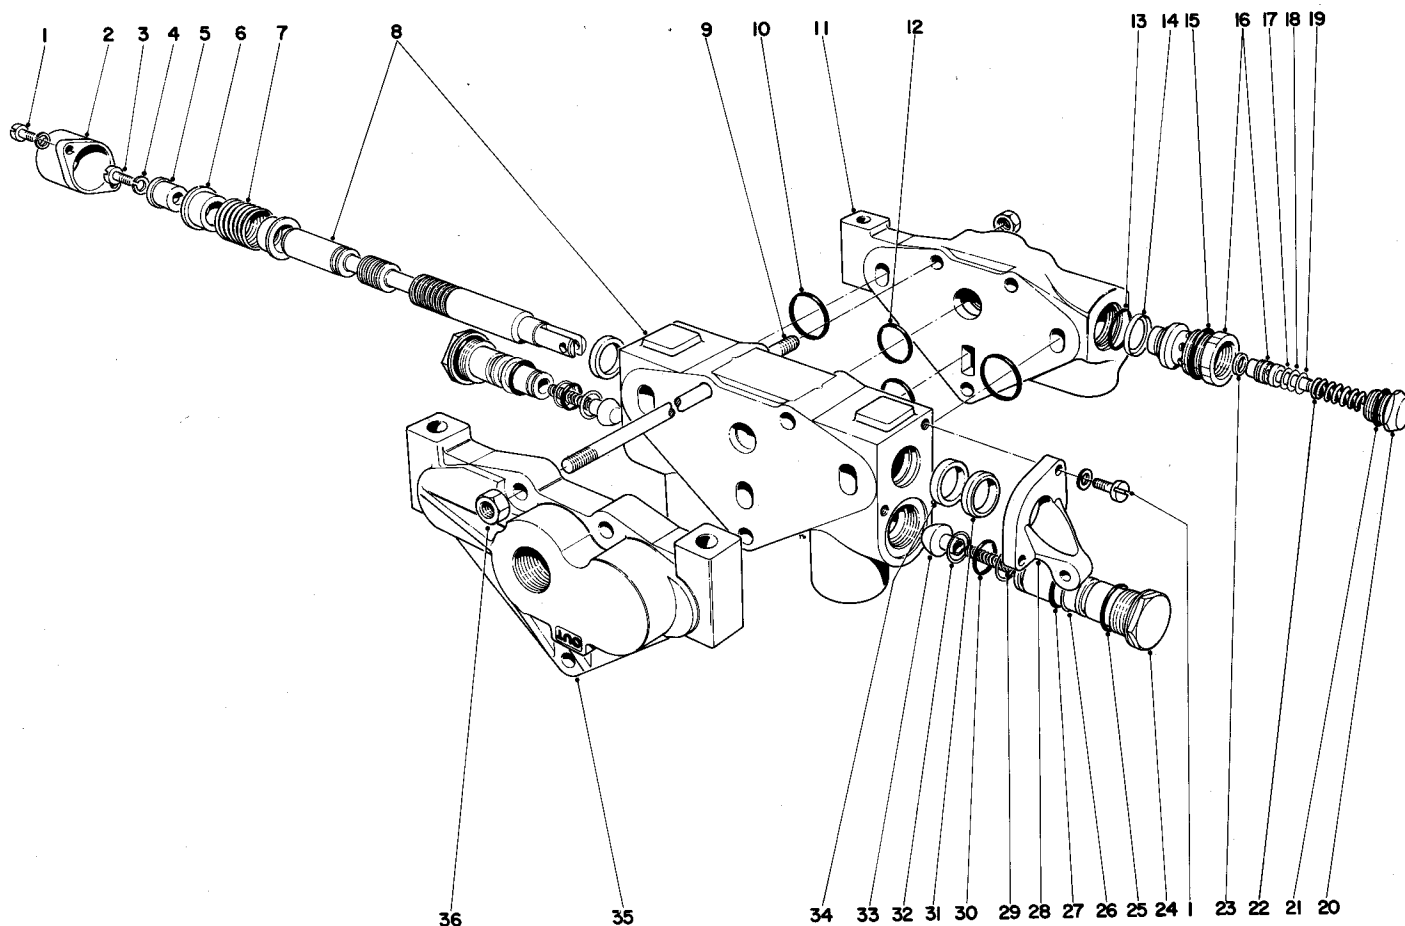 


HYDRAULIC VALVE ASSEMBLY — Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Wash. Assy.	20
2	353-310	Bonnet	5
3	353-312	Screw	5
4	353-314	Washer	5
5	353-313	Spool Collar	5
6	353-311	Stop Collar	10
7	353-309	Spring	5
8	353-317	Housing & Spool Assy.	5
9	353-342	Stud	1
10	353-339	Section Seal	12
11	353-337	End Cover	1
12	353-340	Sect. Seal, Pressure	12
13	353-399	O-Ring	1
14	353-391	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-336	Rel. Body & Rel. Poppet Assy. (Incl. Ref. #23)	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1

Ref. No.	Part No.	Description	No. Used
19	353-330	Shim (.010)	1
20	353-334	Cap, Relief Valve	1
21	353-308	O-Ring Cylinder Port Plug	1
22	353-333	Spring	1
23	353-392	Piston Ring	1
24	353-307	Lift Check Plug	10
25	353-308	O-Ring Cylinder Port	10
26	353-306	Back-Up Washer Cover	10
27	353-305	O-Ring Check	10
28	353-324	Handle Bracket	5
29	353-304	Lift Check Spring	10
30	353-302	O-Ring, Check Plug Seal (Inner)	10
31	353-318	Secondary Spool Wiper Seal	5
32	353-303	Back-Up Washer (Inner)	20
33	353-301	Lift Check Poppet	10
34	353-316	Spool Seal	10
35	353-338	End Cover	1
36	353-343	Locknut	6
*	5-8060	Valve Section Complete (Incl. Ref. Nos. 1-8 & 24-34)	5

 
*Not Illustrated

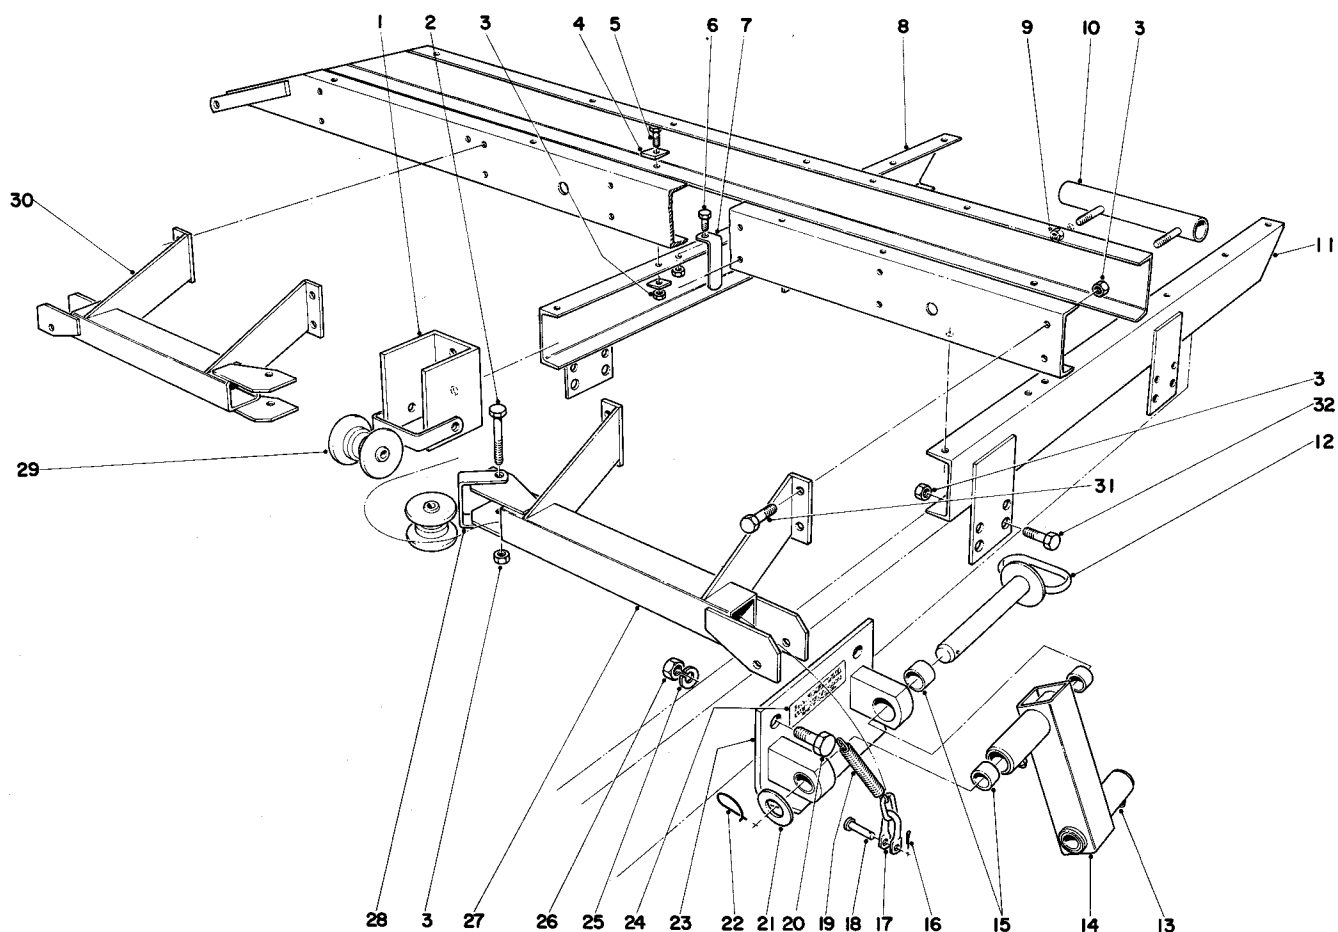

MAIN FRAME ASSEMBLY — Front Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	3-0112	Sheave Bracket	1
2	325-18	Capscrew	5
3	32146-13	Locknut	27
4	3290-216	Bevel Washer	8
5	325-8	Capscrew	8
6	325-5	Capscrew	2
7	3-0236	Hose Clip	2
8	3-4608	Channel R.H.	1
9	32146-6	Locknut	4
10	3-4250	Tube	2
11	3-4606	Channel L.H.	1
12	3-0152	Pin	2
13	302-5	Grease Fitting	4
14	5-1996	Front Arm (Incl. Ref. No. 15)	2
15	3-0348	Bushing	12
16	3272-10	Cotter Pin	2

Ref. No.	Part No.	Description	No. Used
17	5-2942	Shackle	2
18	283-6	Clevis Pin	2
19	5-1706	Spring	2
20	327-5	Capscrew	4
21	3256-30	Washer	2
22	5-3126	Spring Pin	2
23	5-1998	Bracket (Incl. Ref. No. 15)	2
24	5-5041	Decal	1
25	3253-8	Lockwasher	4
26	3217-11	Nut	4
27	3-6690	Tube L.H.	1
28	3-0136	Chain Keeper	5
29	3-2196	Sheave	5
30	3-6680	Tube R.H.	1
31	325-6	Capscrew	8
32	325-7	Capscrew	10

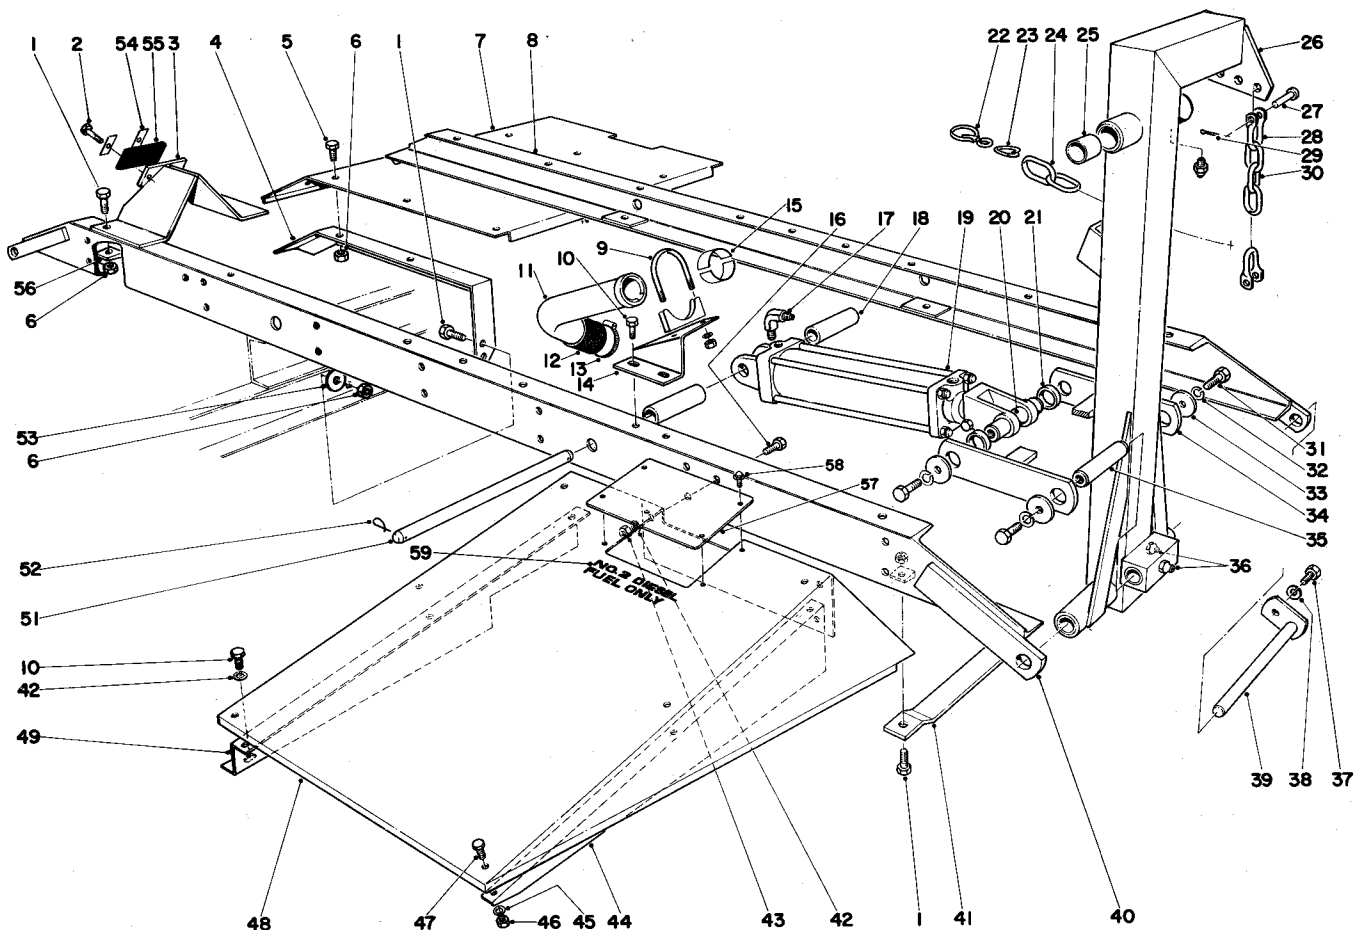 


MAIN FRAME ASSEMBLY — Front Center Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	18
2	3290-319	Machine Screw	4
3	11-5630	Stop Arm	2
4	3-6520	Bracket	4
5	325-3	Capscrew	16
6	32146-13	Locknut	36
7	3-4596	Mudguard R.H.	1
*	3-4597	Mudguard L.H.	1
8	11-4100	Front Cross Channel, Rear	1
9	18-8590	Clamp	1
10	32104-6	Self-Tapping Screw	6
11	18-2410	Fill Tube	1
12	18-2790	Extension Hose	1
13	2412-42	Hose Clamp	2
14	18-2420	Fill Tube Bracket	1
15	18-8600	Saddle	2
16	323-6	Capscrew	6
17	5-6560	Elbow (78)	4
18	20-4390	Tube Spacer	4
19	22-7530	Cylinder 12"	2
20	3-0128	Shaft	4
21	3256-30	Washer	4
22	286-3	Snap Hook	4

Ref. No.	Part No.	Description	No. Used
23	287-2	Cold Shut	4
24	3-1365	Safety Chain (15 Links)	2
25	3-0348	Bushing	16
26	19-6130	Lift Arm L.H. No. 6 (Incl. Ref. No. 25)	1
*	19-6120	Lift Arm R.H. No. 7 (Incl. Ref. No. 25)	1
27	283-10	Pin	4
28	5-2942	Shackle	4
29	3272-10	Cotter Pin	4
30	3-4636	Lift Chain (7 Links)	2
31	3211-4	Screw	8
32	3253-5	Lockwasher	8
33	5-1720	Washer	8
34	23-2610	Link	2
35	3-0128	Shaft	4
36	302-5	Grease Fitting	6
37	322-3	Capscrew	2
38	3254-4	Lockwasher	2
39	8-0390	Bail Lift Pin	2
40	11-5610	Front Cross Channel, Front	1
41	20-4440	Cylinder Rest	2
42	3256-24	Lockwasher	10

 *Not Illustrated

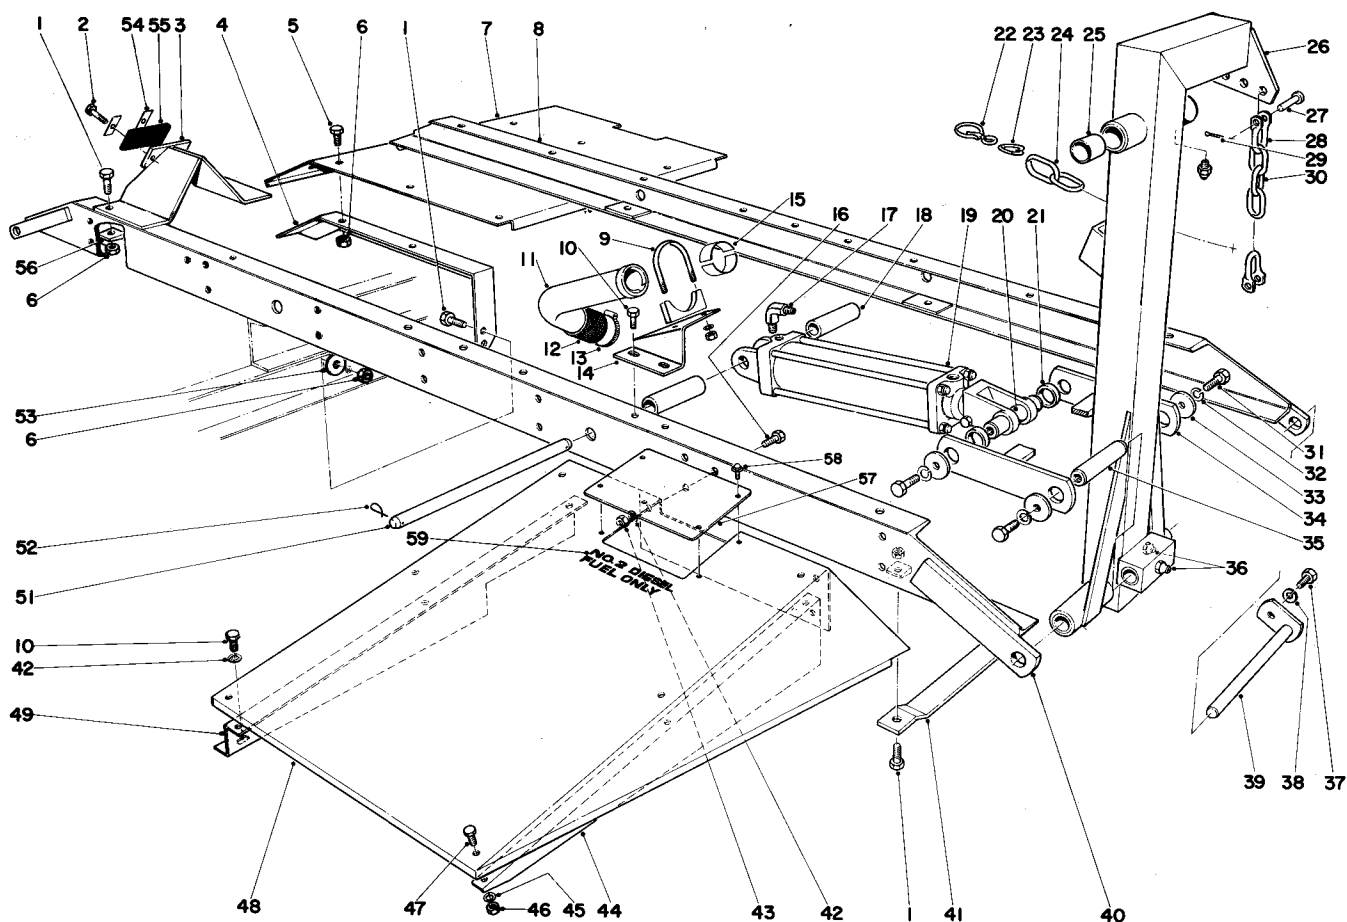


MAIN FRAME ASSEMBLY — Front Center Parkmaster 7 (Continued)

Ref. No.	Part No.	Description	No. Used
43	32146-2	Nut	6
44	5-2262	Fender Brace	2
45	3253-4	Lockwasher	12
46	3217-6	Nut	12
47	322-2	Capscrew	12
48	21-5480	Fender L.H.	1
*	21-5490	Fender R.H.	1
49	5-2263	Fender Mount L.H.	1
*	5-2264	Fender Mount R.H.	1

Ref. No.	Part No.	Description	No. Used
51	3-0144	Shaft	2
52	5-3126	Spring Pin	4
53	3-1615	Spacer	2
54	11-5270	Washer Bumper	4
55	11-4590	Bumper Pad	2
56	3290-216	Bevel Washer	20
57	21-5610	Cover	2
58	32104-77	Self Tapping Screw	8
59	19-3700	Decal - Diesel Fuel	1

 
*Not Illustrated

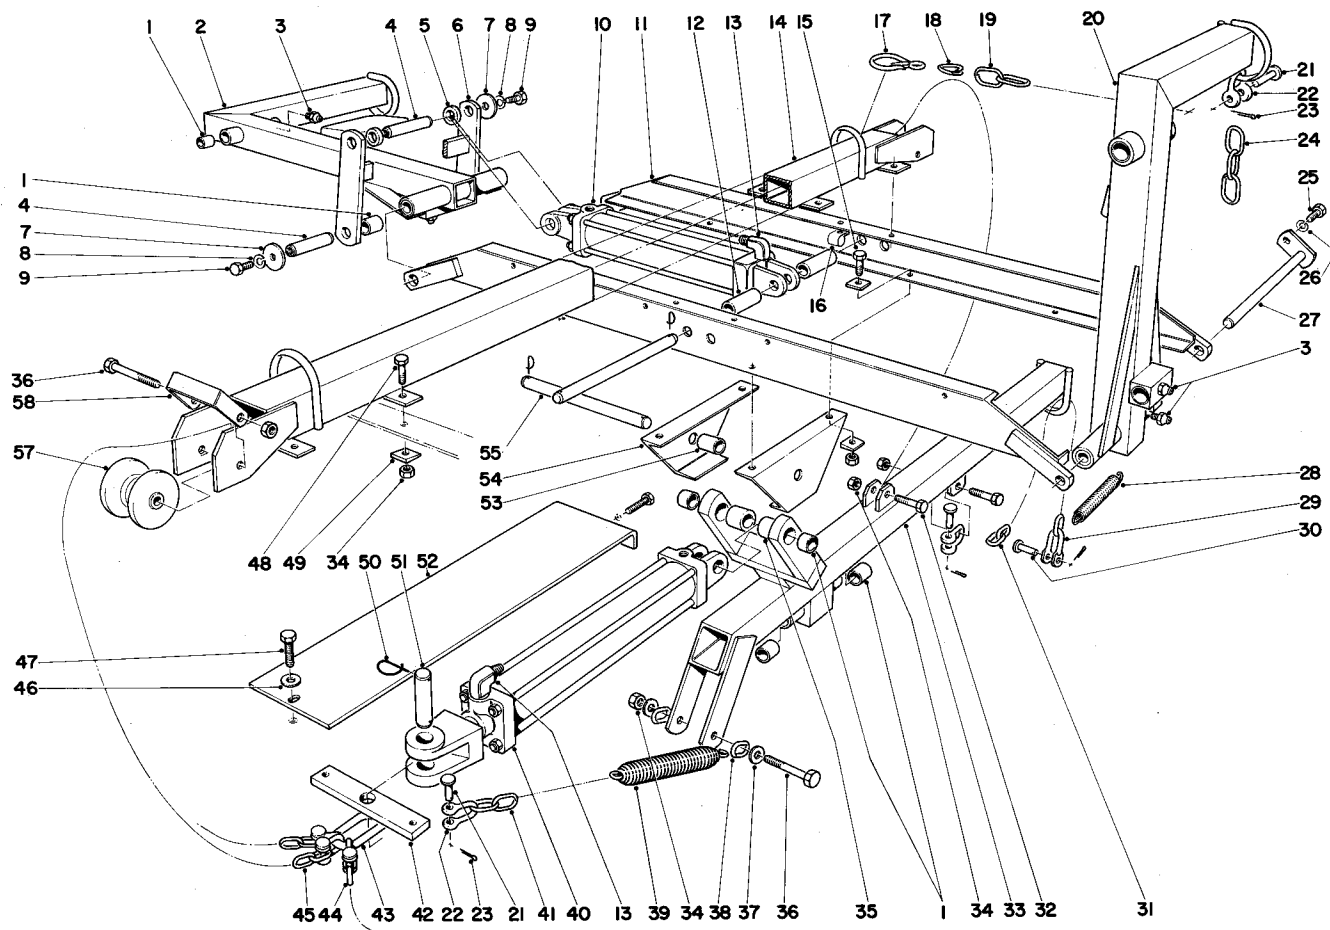

MAIN FRAME ASSEMBLY — Rear Parkmaster 7

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	36
2	10-1940	Short Arm R.H. (Incl. Ref. No. 1)	1
3	302-5	Grease Fitting	6
4	3-0128	Shaft	4
5	3256-30	Washer	4
6	23-2610	Link	2
7	5-1720	Washer	8
8	3253-5	Lockwasher	8
9	3211-4	Capscrew	8
10	22-7520	Cylinder 10"	2
11	8-1280	Rear Cross Channel	2
12	20-4390	Tube Spacer	4
13	5-6560	Elbow (78)	4
14	3-0105	Channel Brace	1
15	325-7	Capscrew	4
16	304-61	Hose Clamp	1
17	286-3	Snap Hook	4
18	287-2	Cold Shut	4
19	3-1365	Safety Chain (15 Links)	4
20	10-1970	Short Arm L.H. (Incl. Ref. No. 1)	1
21	283-10	Pin	7


Ref. No.	Part No.	Description	No. Used
22	8-0280	Yoke	7
23	3272-10	Cotter Pin	10
24	3-4636	Chain (7 Links)	2
25	322-3	Capscrew	2
26	3253-4	Lockwasher	2
27	8-0390	Bail Lift Pin	2
28	5-1706	Spring	3
29	5-2942	Shackle	3
30	283-6	Clevis Pin	3
31	3-1364	Chain (36 Links)	1
32	325-9	Capscrew	2
33	3-0224	Rear Lift Arm	1
34	32146-13	Locknut	13
35	20-4420	Spacer	2
36	325-18	Capscrew	3
37	3256-26	Washer	2
38	2830-8	Link	2
39	5-0743	Spring	2
40	22-7530	Cylinder 12"	1
41	3-0295	Chain (22 Links)	2
42	3-0288	Link	1
43	3-0326	Ring	1
44	5-5130	Chain (59 Links)	2

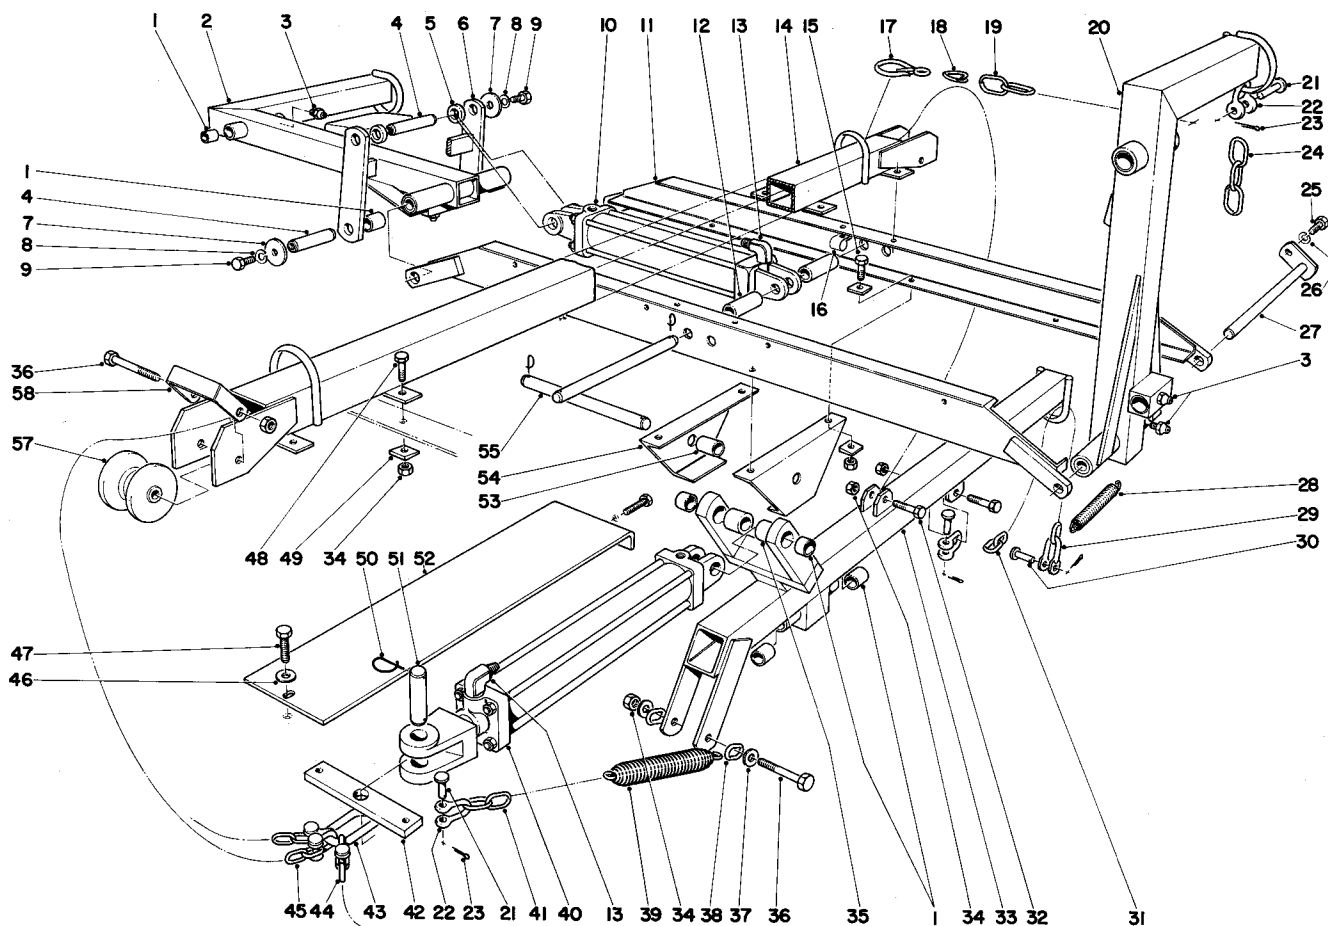 

MAIN FRAME ASSEMBLY — Rear Parkmaster 7 (Continued)

Ref. No.	Part No.	Description	No. Used
45	3-4602	Chain (90 Links)	1
46	3256-24	Flatwasher	1
47	32104-6	Screw	2
48	325-7	Capscrew	6
49	3290-216	Bevel Washer	10
50	5-3126	Spring Pin	8
51	24-9510	Pin	1


Ref. No.	Part No.	Description	No. Used
52	18-2620	Plate	1
53	3-0145	Spacer	2
54	3-0146	Channel	2
55	3-0144	Shaft	3
57	3-2196	Sheave	2
58	3-0136	Chain Keeper	2

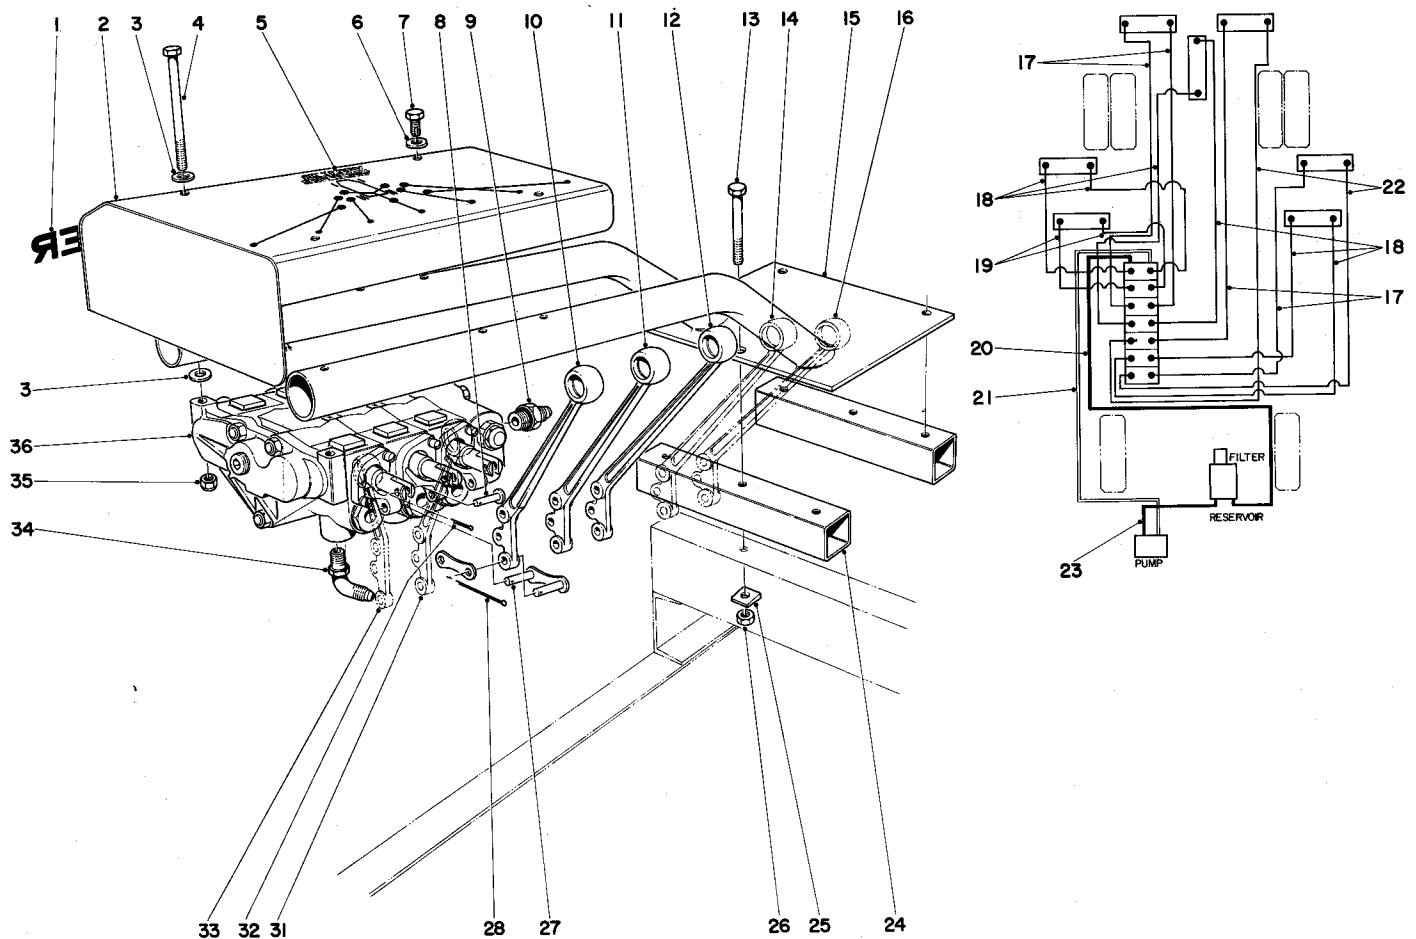 

VALVE BANK — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	19-2280	Decal	1
2	11-4730	Valve Cover	1
3	3256-23	Washer	6
4	322-29	Capscrew	3
5	11-4770	Decal	1
6	3256-24	Washer	1
7	32104-6	Self-Tapping Screw	1
8	353-322	Pin	7
9	353-433	Straight Swivel	2
10	5-7840	Lever Modified	1
11	353-323	Lever	1
12	5-7830	Lever Modified	1
13	325-13	Capscrew	3
14	5-7860	Lever Modified	1
15	11-4750	Valve Stand	1
16	11-4780	Lever Modified	1
17	5-0230	Hydraulic Hose 102"	4

Ref. No.	Part No.	Description	No. Used
18	5-0200	Hydraulic Hose 77"	6
19	5-0220	Hydraulic Hose 46"	2
20	19-4010	Low Pressure Hose	1
21	19-3990	High Pressure Hose	1
22	5-0210	Hydraulic Hose 116"	2
23	19-3050	Suction Hose	1
24	3-0166	Tube Spacer	2
25	3290-216	Bevel Washer	3
26	32146-13	Locknut	3
27	353-319	Connecting Link	7
28	353-320	Cotter Pin	7
31	5-7850	Modified Lever	1
32	353-321	Cotter Pin	7
33	11-4790	Modified Lever	1
34	353-212	Male Elbow	14
35	32146-5	Locknut	3
36	26-0620	Complete Valve Bank Assy.	1

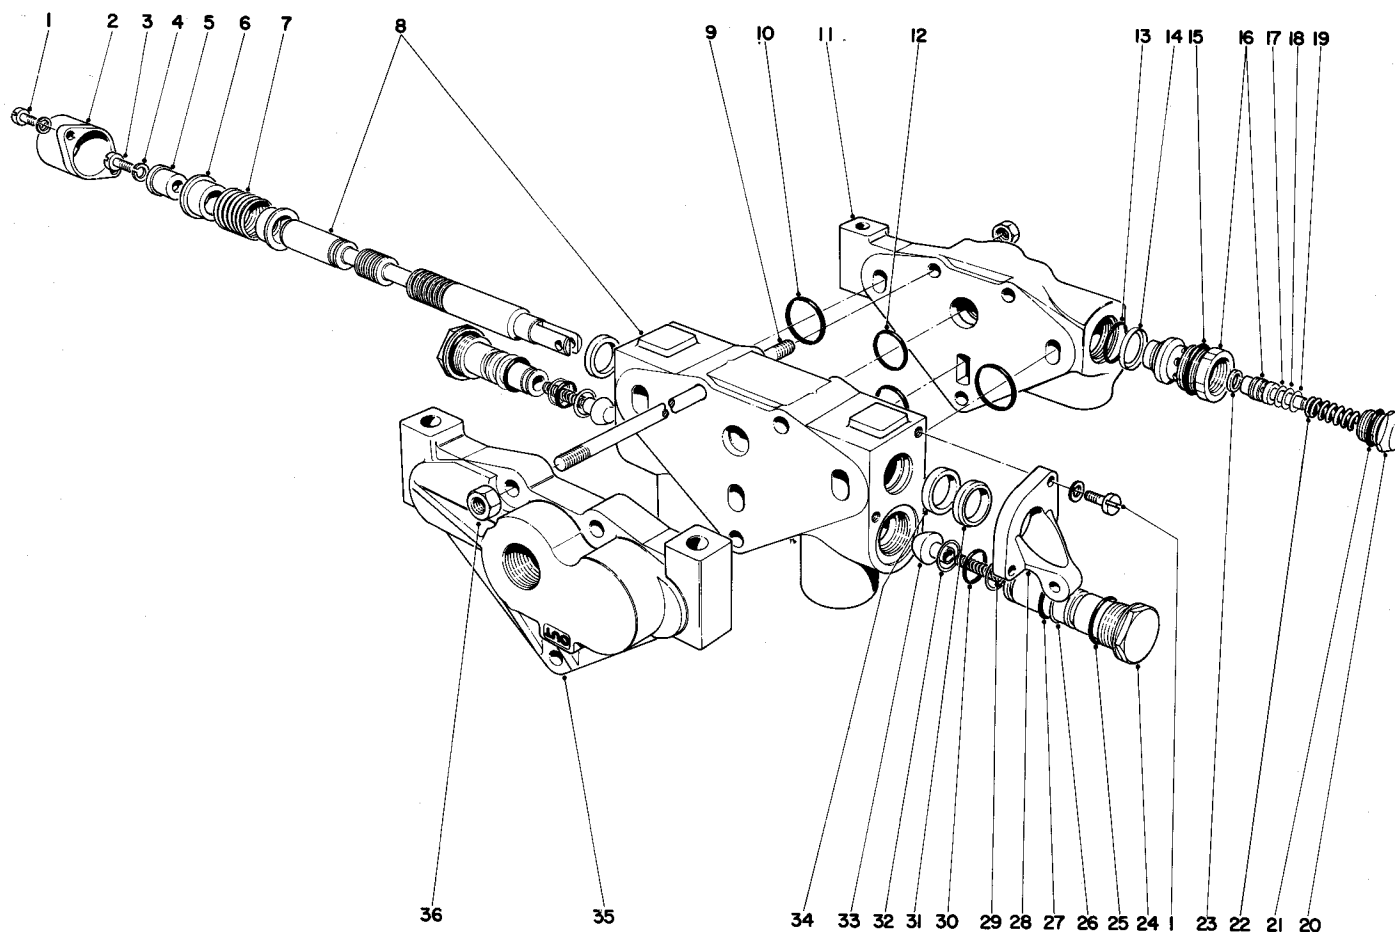 


HYDRAULIC VALVE ASSEMBLY — Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	353-315	Screw & Washer Assy.	28
2	353-310	Bonnet	7
3	353-312	Screw	7
4	353-314	Washer	7
5	353-313	Spool Collar	7
6	353-311	Stop Collar	14
7	353-309	Spring	7
8	353-317	Housing & Spool Assy.	7
9	353-395	Stud	3
10	353-339	Section Seal	16
11	353-337	End Cover	1
12	353-340	Section Seal, Pressure	16
13	353-399	O-Ring	1
14	353-391	Seal, Back Up	1
15	353-331	O-Ring Seal	1
16	353-336	Rel. Body & Rel. Poppet Assy. (Incl. Ref. No. 23)	1
17	353-328	Shim (.040)	1
18	353-329	Shim (.020)	1
19	353-330	Shim (.010)	1

Ref. No.	Part No.	Description	No. Used
20	353-334	Cap, Relief Valve	1
21	353-308	O-Ring Cylinder Port Plug	1
22	353-398	Spring	1
23	353-392	Piston Ring	1
24	353-307	Lift Check Plug	14
25	353-308	O-Ring Cylinder Port	14
26	353-306	Back-Up Washer Cover	14
27	353-305	O-Ring Check	14
28	353-324	Handle Bracket	7
29	353-304	Lift Check Spring	14
30	353-302	O-Ring, Check Plug Seal (Inner)	14
31	353-318	Secondary Spool Wiper Seal	7
32	353-303	Back-Up Washer (Inner)	28
33	353-301	Lift Check Poppet	14
34	353-316	Spool Seal	14
35	353-338	End Cover	1
36	353-343	Locknut	6
*	5-8060	Valve Section Complete (Incl. Ref. Nos. 1-8 & 24-34)	7

 
*Not Illustrated

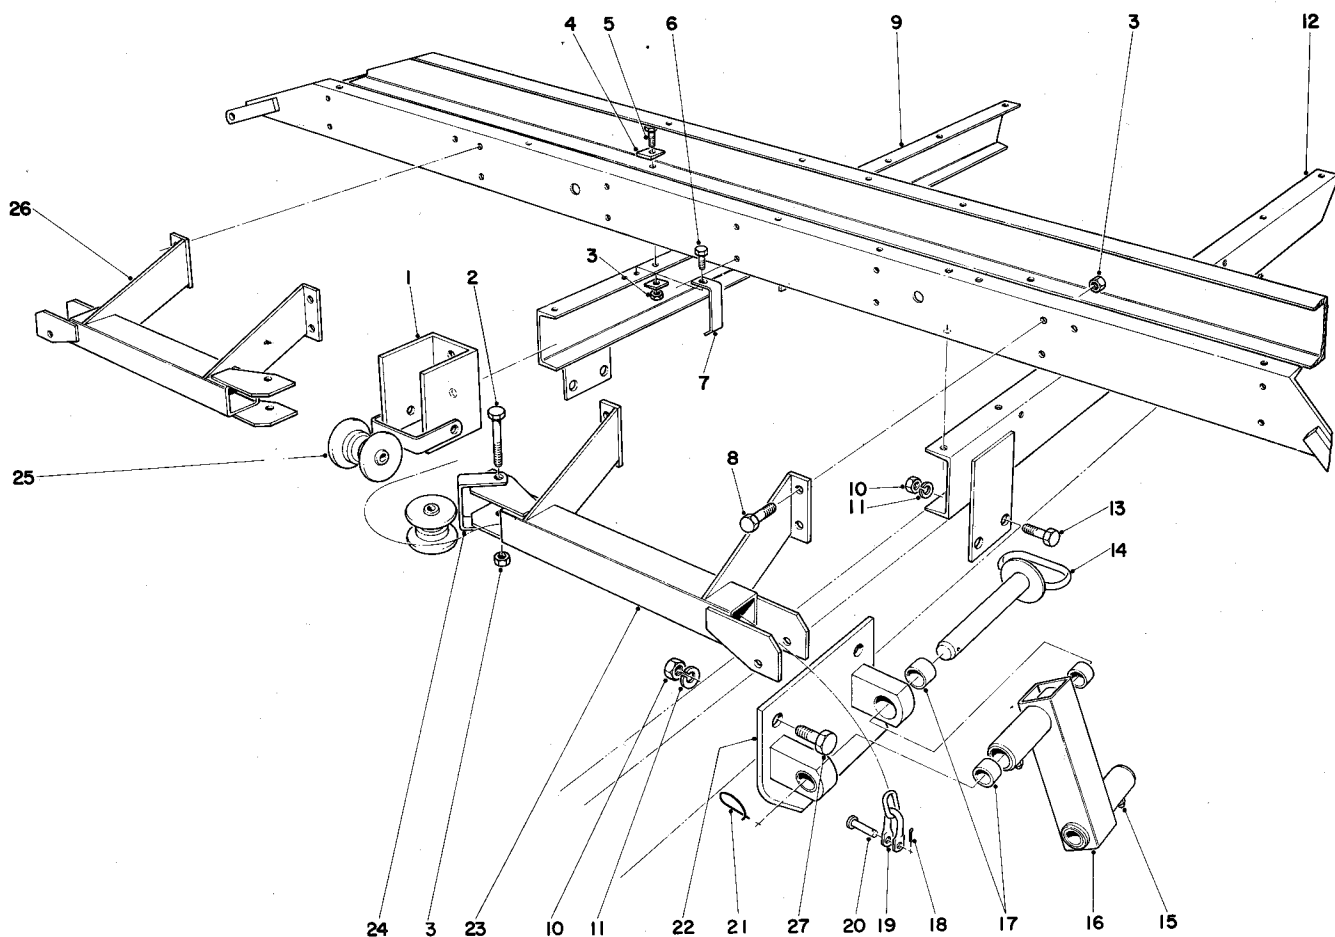

MAIN FRAME ASSEMBLY — Front Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3-0112	Sheave Bracket	1
2	325-18	Capscrew	5
3	32146-13	Locknut	23
4	3290-216	Bevel Washer	16
5	325-8	Capscrew	8
6	32104-6	Self-Tapping Screw	2
7	11-4630	Hose Retainer	2
8	325-5	Capscrew	10
9	11-3980	Side Channel R.H.	1
10	3217-11	Nut	12
11	3253-8	Lockwasher	12
12	11-4000	Side Channel L.H.	1
13	327-4	Capscrew	8
14	3-0152	Pin	2

Ref. No.	Part No.	Description	No. Used
15	302-5	Grease Fitting	4
16	5-1996	Lift Arm Nos. 2 & 3 (Incl. Ref. No. 17)	2
17	3-0348	Bushing	8
18	3272-10	Cotter Pin	2
19	5-2942	Long Shackle	2
20	283-10	Pin	2
21	5-3126	Spring Pin	2
22	5-1998	Bracket	2
23	3-6690	Tube L.H.	1
24	3-0136	Chain Keeper	5
25	3-2196	Sheave	5
26	3-6680	Tube R.H.	1
27	327-5	Capscrew	4

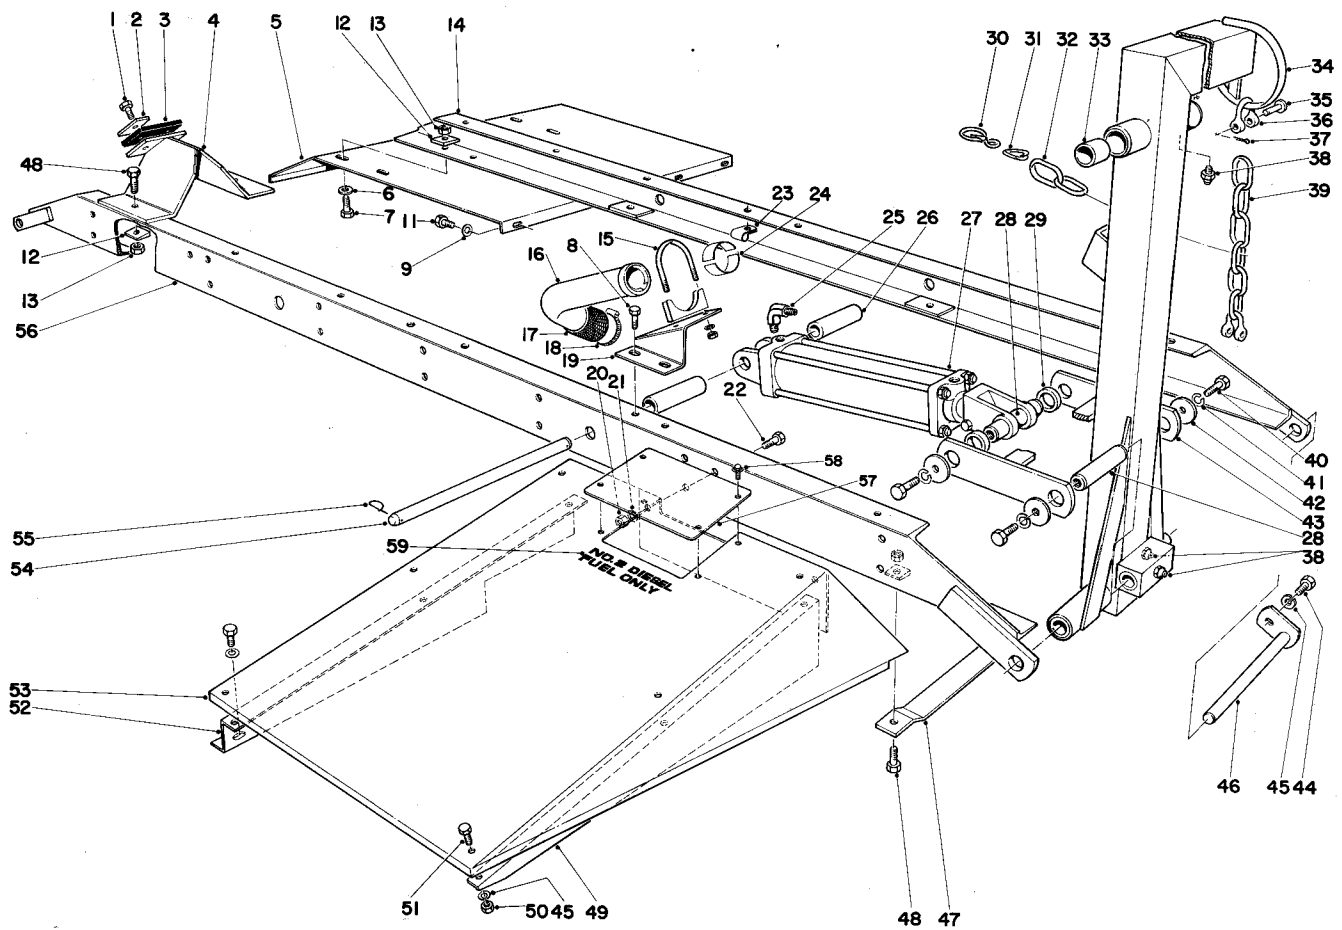 


MAIN FRAME ASSEMBLY — Front Center Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3290-319	Machine Screw	4
2	11-5270	Bumper Washer	4
3	11-4590	Bumper Pad	4
4	11-5630	Stop	2
5	11-4620	Fender R.H.	1
*	11-4610	Fender L.H.	1
6	3256-26	Washer	4
7	325-5	Capscrew	4
8	32104-6	Self-Tapping Screw	2
9	3256-24	Washer	8
11	32104-98	Self-Tapping Screw	8
12	3290-216	Bevel Washer	12
13	32146-13	Locknut	12
14	11-4100	Rear Cross Channel	1
15	18-8590	Fuel Tank Extension Clamp	1
16	18-2410	Fill Tube	1
17	18-2790	Extension Hose	1
18	2412-42	Hose Clamp	2
19	18-2420	Fill Tube Bracket	1
20	32146-2	Nut	6
21	3256-24	Lockwasher	6
22	323-6	Capscrew	6
23	304-61	Hose Clamp	1

*Not Illustrated

Ref. No.	Part No.	Description	No. Used
24	18-8600	Saddle	2
25	5-6560	Elbow (No. 78)	4
26	20-4390	Spacer Tube	4
27	22-7530	Cylinder 12"	2
28	3-0128	Shaft	4
29	3256-30	Washer	4
30	286-3	Safety Hook	4
31	287-2	Cold Shut	4
32	3-1365	Chain (15 Links)	2
33	3-0348	Bushing	8
34	11-4220	Lift Arm (No. 6)	
		(Incl. Ref. No. 33)	1
*	11-4250	Lift Arm (No. 7)	
		(Incl. Ref. No. 33)	1
35	283-10	Pin	4
36	8-0280	Short Shackle	4
37	3272-10	Cotter Pin	4
38	302-5	Grease Fitting	6
39	11-4260	Lift Chain (6 Links)	2
40	3211-2	Capscrew	8
41	3253-5	Lockwasher	8
42	5-1720	Washer	8
43	23-2610	Link	2

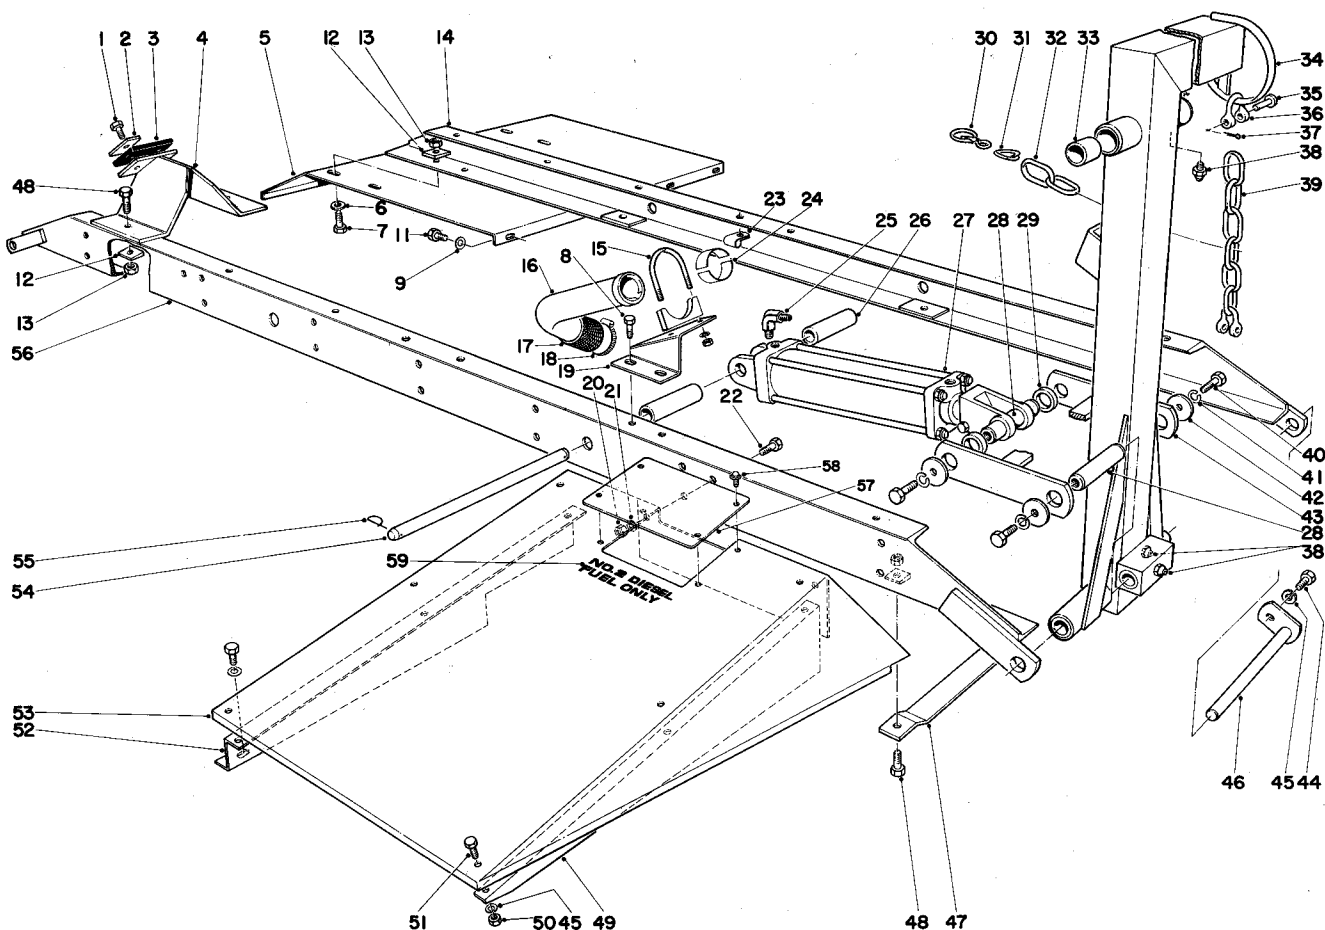 


MAIN FRAME ASSEMBLY — Front Center Parkmaster 9 (Continued)

Ref. No.	Part No.	Description	No. Used
44	322-3	Capscrew	2
45	3253-4	Lockwasher	14
46	8-0390	Lift Bail Pin	2
47	20-4440	Cylinder Rest	2
48	325-6	Capscrew	8
49	5-2262	Fender Brace	2
50	3217-6	Nut	12
51	322-2	Capscrew	12
52	5-2263	Fender Mount L.H.	1

Ref. No.	Part No.	Description	No. Used
*	5-2264	Fender Mount R.H.	1
53	21-5480	Fender L.H.	1
*	21-5490	Fender R.H.	1
54	3-0144	Shaft	2
55	5-3126	Spring Pin	4
56	11-5610	Front Cross Channel (Front Pos.)	1
57	21-5610	Cover Fender	2
58	32104-77	Self Tapping Screw	8
59	19-3700	Decal Diesel Fuel	1

 *Not Illustrated

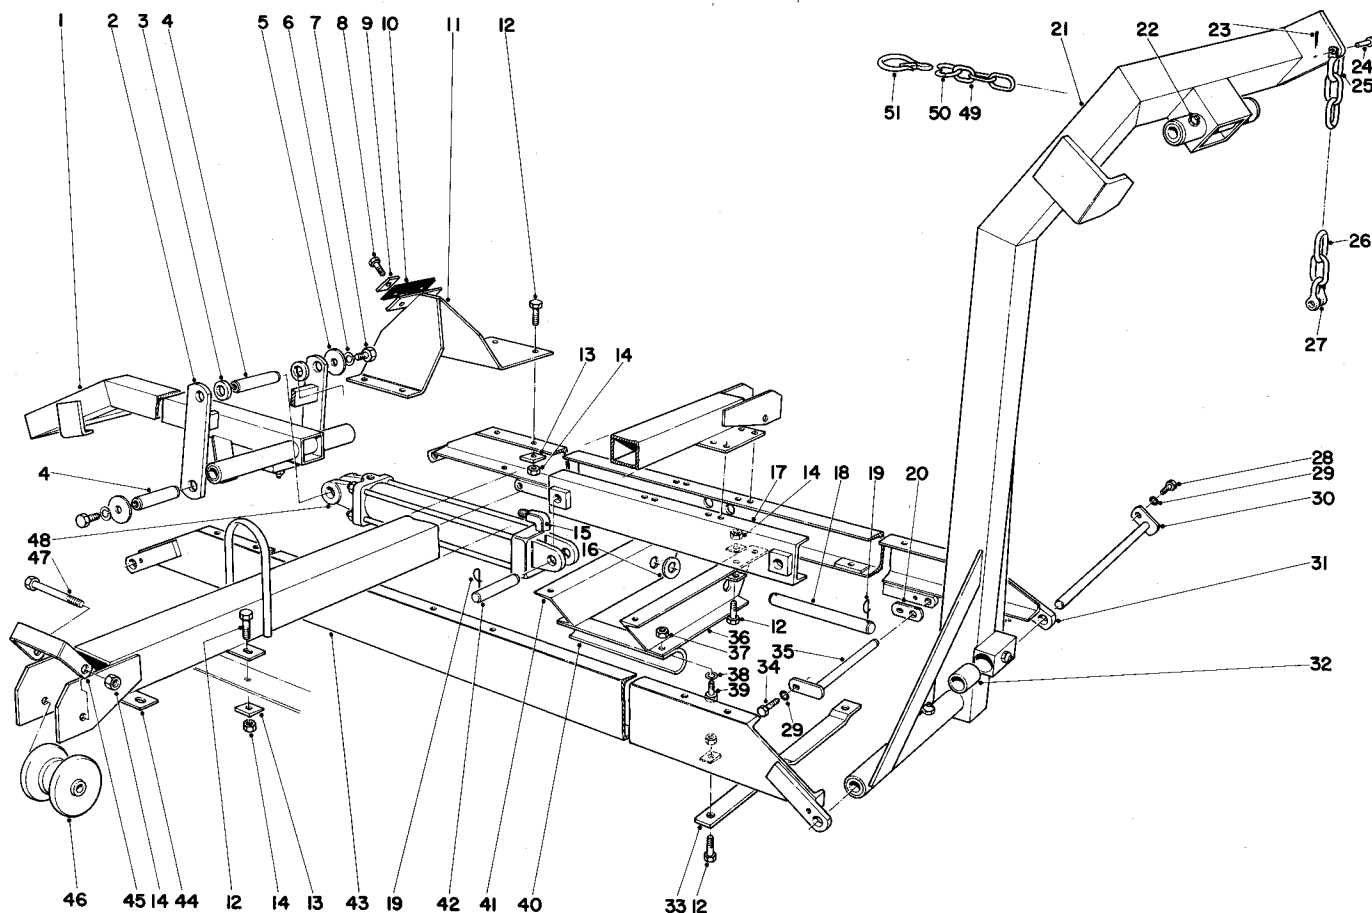


MAIN FRAME ASSEMBLY — Rear Center Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	11-4280	Lift Arm No. 9 (Incl. Ref. No. 32)	1
2	23-2620	Link	2
3	3256-30	Washer	4
4	11-4490	Shaft	4
5	5-1720	Washer	8
6	3253-5	Lockwasher	8
7	3211-2	Capscrew	8
8	3290-319	Machine Screw	4
9	11-5270	Washer, Bumper	4
10	11-4590	Pad, Bumper	2-6
11	11-4540	Stop, R. H.	1
*	11-4580	Stop, L. H.	1
12	325-6	Capscrew	32
13	3290-216	Bevel Washer	38
14	32146-13	Locknut	34
15	11-9800	Elbow (55)	4
16	3256-30	Washer	2
17	11-4440	Mount, Cylinder	1
18	3-0144	Shaft	1
19	5-3126	Pin, Spring	6
20	8-0410	Tab, Lift Arm	2
21	11-4270	Lift Arm No. 8 (Incl. Ref. No. 32)	1
22	302-5	Grease Fitting	6
23	3272-10	Cotter Pin	4
24	283-10	Pin	4
25	5-2942	Shackle	2
26	3-4636	Lift Chain (7 Links)	2

Ref. No.	Part No.	Description	No. Used
27	8-0280	Shackle	2
28	322-3	Capscrew	2
29	3253-4	Lockwasher	4
30	11-4380	Lift Pin	2
31	11-4060	Center Cross Channel, Rear Position	1
32	3-0348	Bushing	16
33	20-4430	Rest, Cylinder	2
34	322-5	Capscrew	2
35	8-0390	Pin, Bail Lift	2
36	11-4160	Channel, L. H.	1
37	32146-2	Locknut	2
38	3256-24	Washer	2
39	323-6	Capscrew	2
40	11-4170	Chain Guide	1
41	11-4150	Channel, R. H.	1
42	24-9510	Pin	2
43	11-4080	Front Cross Channel, Rear Position	1
44	11-4120	Channel Brace	1
45	3-0136	Chain, Keeper	2
46	3-2196	Sheave	2
47	325-18	Capscrew	2
48	22-7530	Cylinder 12"	2
49	11-4710	Safety Chain	1
50	287-2	Cold Shut	2
51	286-3	Snap Hook	2

 
* Not Illustrated

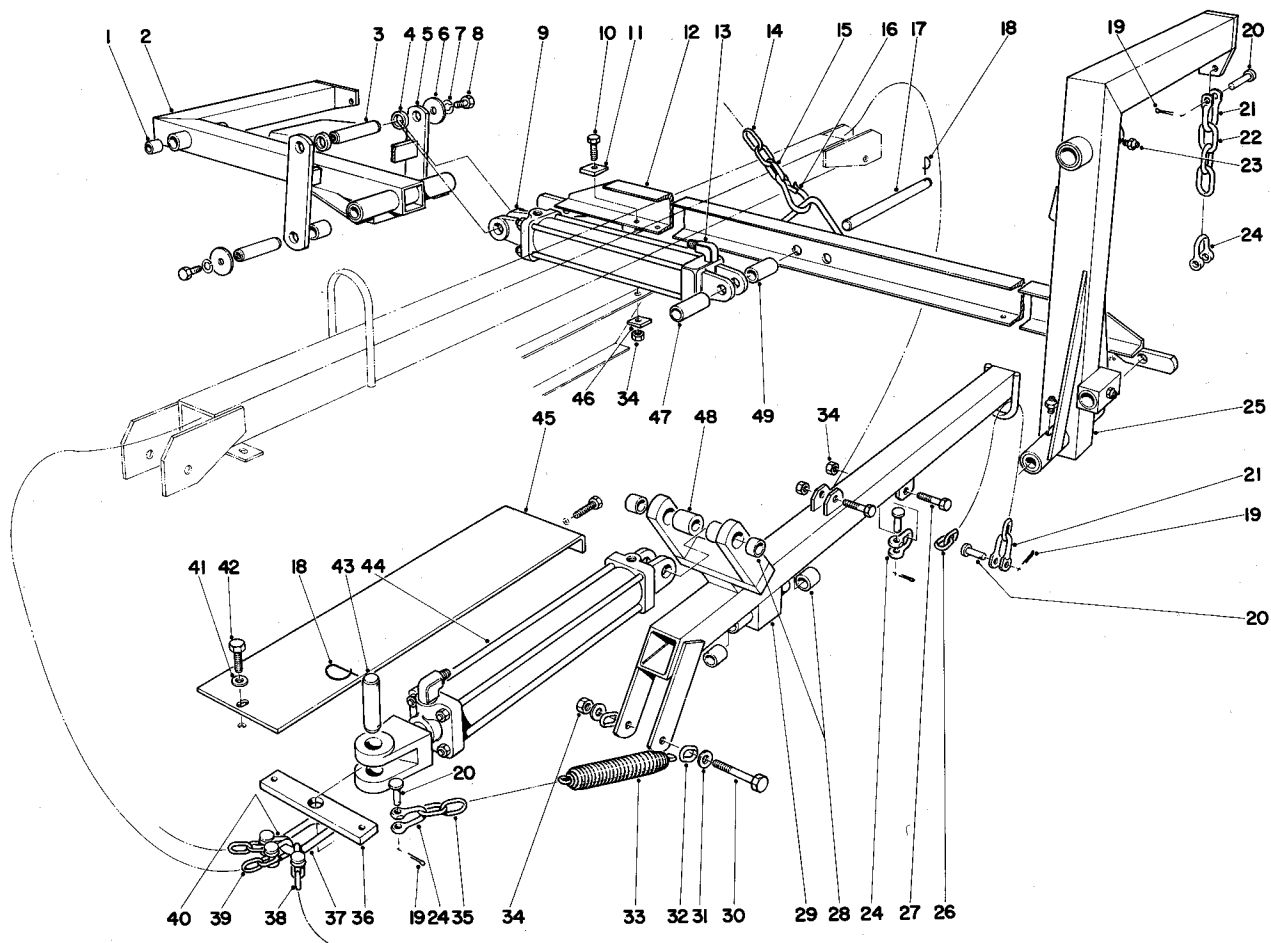

MAIN FRAME ASSEMBLY — Rear Parkmaster 9

Ref. No.	Part No.	Description	No. Used
1	3-0348	Bushing	16
2	11-4210	Lift Arm (No. 5) (Incl. Ref. No. 1)	1
3	3-0128	Shaft	4
4	3256-30	Washer	4
5	23-2610	Link	2
6	5-1720	Washer	8
7	3253-5	Lockwasher	8
8	3211-2	Capscrew	8
9	22-7520	Cylinder 10"	2
10	325-11	Capscrew	2
11	11-4920	Bevel Washer	2
12	11-5210	Rear Cross Channel (Rear Pos.)	1
13	5-6560	Elbow (No. 78)	6
14	11-4710	Safety Chain (35 Links)	1
15	287-2	Cold Shut	2
16	286-3	Snap Hook	2
17	3-0144	Shaft	2
18	5-3126	Spring Pin	6
19	3272-10	Cotter Pin	11
20	283-10	Pin	11
21	5-2942	Shackle (Long)	3
22	12-0400	Lift Chain (9 Links)	2
23	302-5	Grease Fitting	7
24	8-0280	Short Shackle	5

Ref. No.	Part No.	Description	No. Used
25	11-4180	Lift Arm (Incl. Ref. No. 4)	1
26	11-6020	Lift Chain (28 Links)	1
27	325-9	Capscrew	2
28	3-0348	Bushing	4
29	11-5670	Rear Lift Arm 1 (Incl. Ref. No. 28)	1
30	325-17	Capscrew	1
31	3256-26	Washer	2
32	2830-8	Link	2
33	5-0743	Spring	2
34	32146-13	Locknut	5
35	3-0295	Chain (22 Links)	2
36	3-0288	Link	1
37	3-0326	Ring	1
38	11-4530	Lift Chain (52 Links)	2
39	11-4520	Rear Mower Chain (77 Links)	1
40	8-0280	Chain Shackle	2
41	3256-24	Washer	1
42	32104-6	Self-Tapping Screw	2
43	24-9510	Pin	1
44	22-7530	Cylinder 12"	1
45	18-2620	Plate	1
46	3290-216	Bevel Washer	2
47	20-4400	Spacer	2
48	20-4360	Spacer	2
49	20-4410	Spacer	2

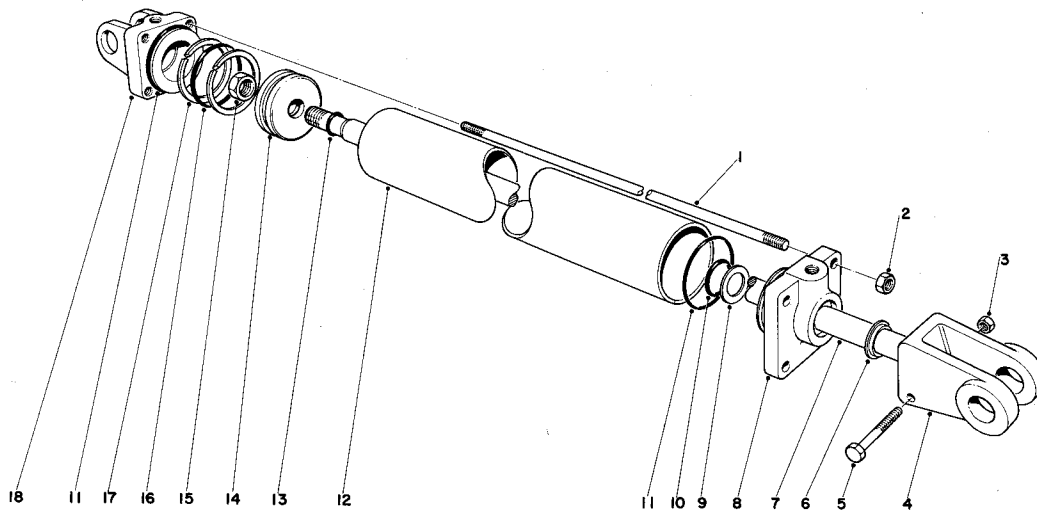 


10" AND 12" CYLINDERS — Parkmaster 7 and 9

Ref. No.	Part No.	Description	No. Used
1	22-8670	Tie Rod 10"	4
*	22-8710	Tie Rod 12"	4
2	3217-9	Nut	4
3	32146-5	Locknut	1
4	22-8680	Clevis Assembly	1
5	322-11	Capscrew	1
6	22-8660	Wiper Ring Seal	1
7	22-8610	Piston Rod 10"	1
*	22-8690	Piston Rod 12"	1
8	22-8630	Head	1
9	22-8650	Back-Up Washer	1

Ref. No.	Part No.	Description	No. Used
10	22-8640	"O" Ring Seal	1
11	22-8550	"O" Ring Seal	2
12	22-8620	Barrel 10"	1
*	22-8700	Barrel 12"	1
13	22-8600	"O" Ring Seal	1
14	22-8590	Piston	1
15	22-8560	Locknut	1
16	22-8570	"O" Ring Seal	1
17	22-8580	Back Up Washer	2
18	22-8540	Butt-End Cap	1
*	22-8720	Seal Kit	1

 * Not Illustrated

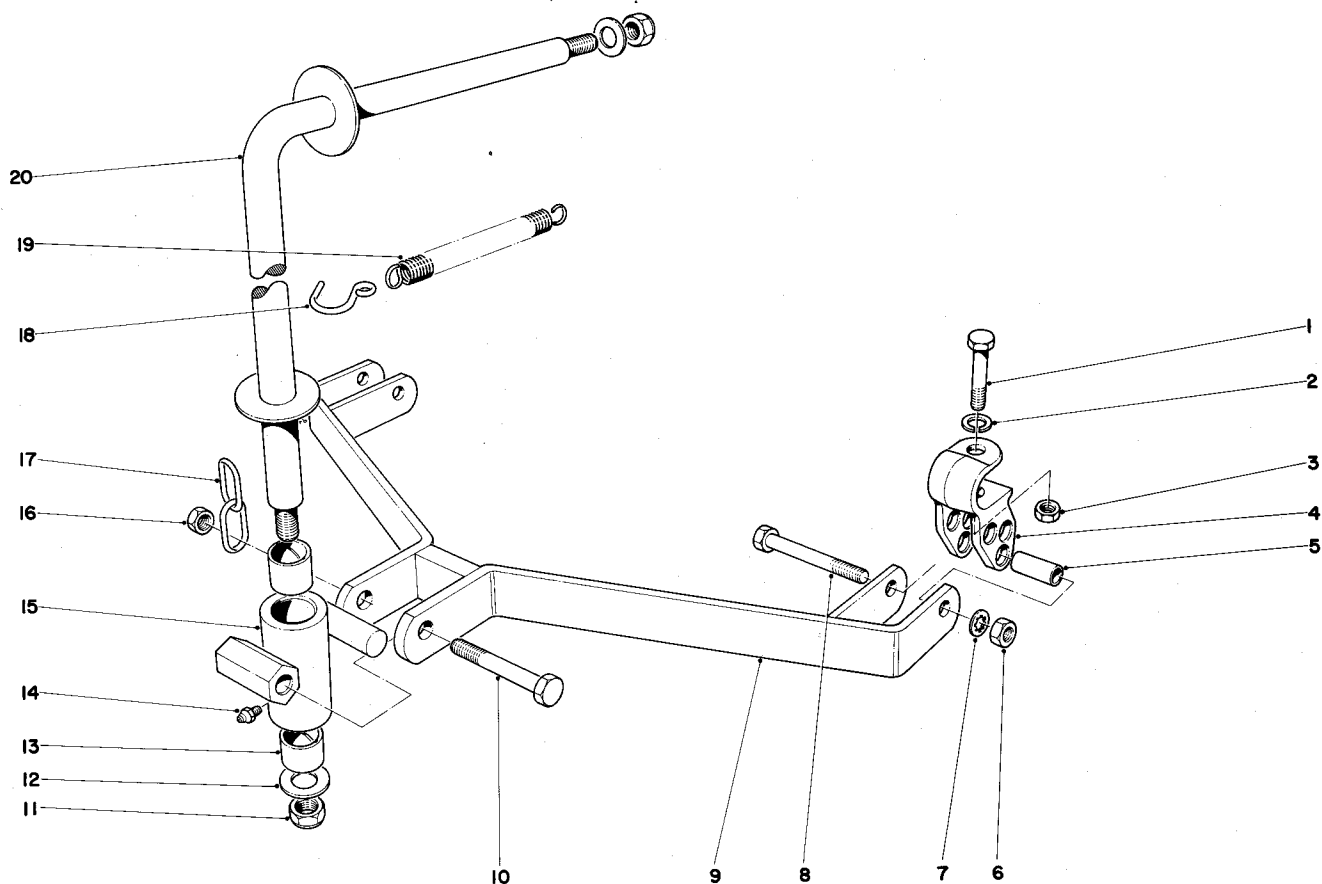

DRAWBAR ASSEMBLY — Parkmaster 7 and 9


Ref. No.	Part No.	Description	No. Used	
			7-Un.	9-Un.
1	324-10	Capscrew	14	18
2	3253-6	Lockwasher	14	18
3	3217-8	Nut	14	18
4	5-1090	Clamp, Drawbar	14	18
5	5-1091	Spacer	14	18
6	3217-9	Nut	14	18
7	3254-4	Lockwasher	14	18
8	325-14	Capscrew	14	18
9	3-9280	Drawbar	7	9
10	325-17	Capscrew	7	9
11	3296-50	Locknut	14	18
12	3-8448	Washer	14	18
13	3-0348	Bushing	14	18
14	302-5	Grease Fitting	7	9

Ref. No.	Part No.	Description	No. Used	
			7-Un.	9-Un.
15	1-6559	Housing (Incl. Ref. No. 13)	7	9
16	32146-13	Locknut	7	9
17	3-0293	Chain	4	6
18	3-2198	S-Hook	4	7
19	5-1706	Spring	7	9
20	3-6530	Bail, Lift	7	—
*	3-1571	Bail, Lift	—	9
**	32127-9	Locknut	4	
**	2-6690	Spacer	4	
**	3-7700	Chain Bracket	2	
**	3-4977	Chain 12 Links	2	
**	3-4986	Rod	2	

NOTE: When used on 9 unit, item No. 9 to be rotated 180 degrees.

*Not Illustrated.

 **Not illustrated — for attaching Roughmaster Mowers in No. 6 and 7 position.

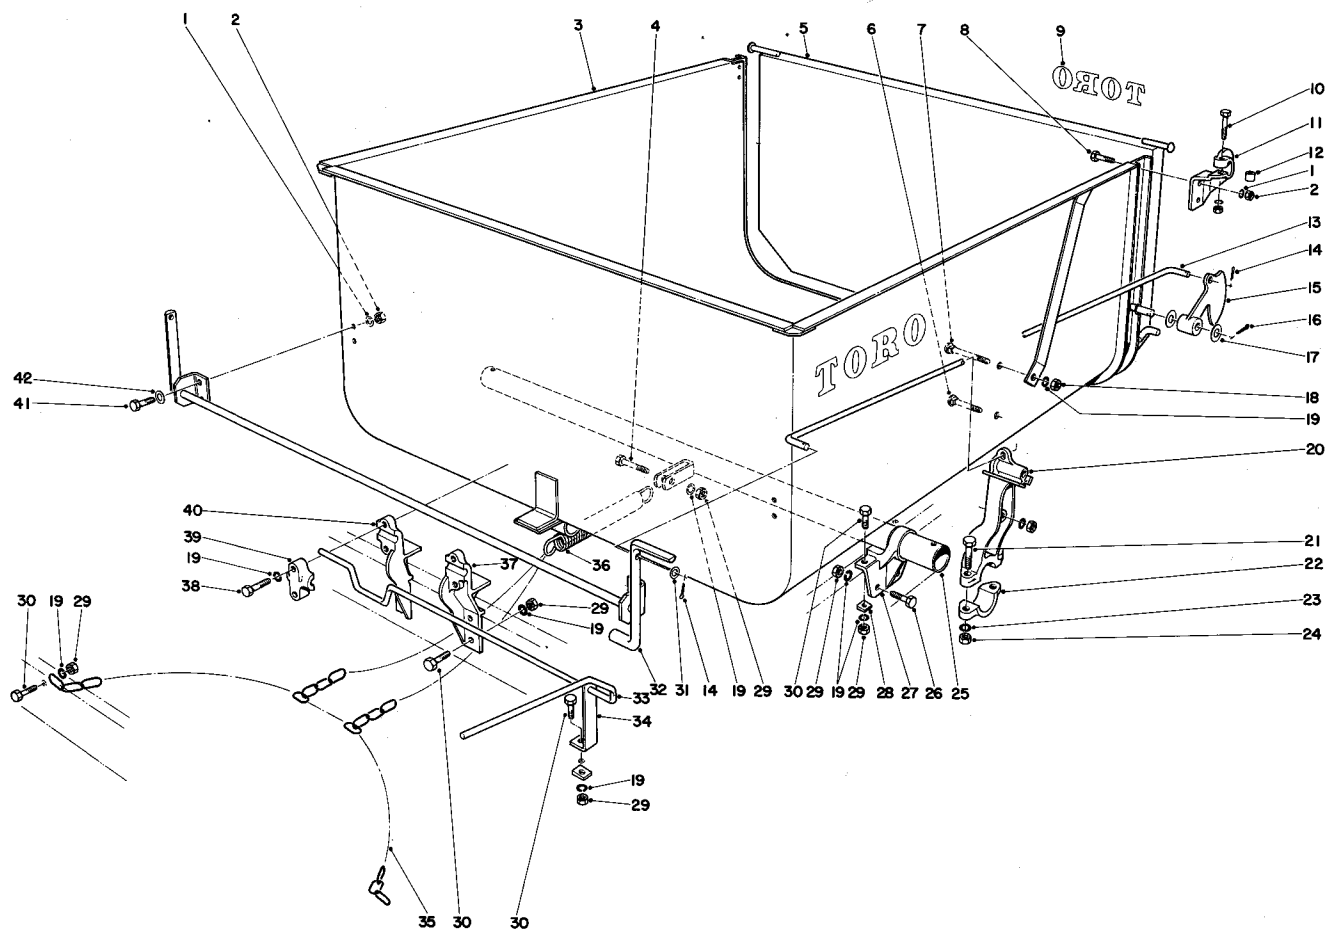


DUMP BOX KIT No. 2-2219

Ref. No.	Part No.	Description	No. Used
1	3253-4	Lockwasher	10
2	3219-2	Nut	10
3	5-3197	Dump Box	1
4	3213-4	Capscrew	1
5	5-3208	End Gate	1
6	3233-4	Carriage Bolt	2
7	3233-7	Carriage Bolt	2
8	3210-5	Capscrew	4
9	3-0704	Decal	3
10	3210-11	Capscrew	2
11	5-3223	End Gate Hanger L.H.	1
*	5-3224	End Gate Hanger R.H.	1
12	5-3225	Spacer	2
13	5-3214	Gate Latch Rod	2
14	3272-16	Cotter Pin	4
15	5-3188	Gate Latch	2
16	3272-21	Cotter Pin	2
17	5-3222	Washer	2
18	3217-9	Nut	4
19	3253-7	Lockwasher	24
20	5-3183	Box Support	2
21	3214-9	Capscrew	4

Ref. No.	Part No.	Description	No. Used
22	5-3184	Box Support Cap	2
23	3253-8	Lockwasher	4
24	3219-6	Nut	4
25	5-3193	Support Pipe	1
26	3213-2	Capscrew	4
27	5-3182	Box Support Bracket	2
28	3290-216	Bevel Washer	5
29	3219-5	Nut	16
30	3213-3	Capscrew	11
31	3256-5	Washer	2
32	5-3215	Latch Lever	1
33	5-3196	Lock Lever	1
34	5-3220	Lock Lever Bracket	1
35	5-3185	Snubber Assembly	1
36	5-3221	Spring	1
37	5-3191	Lock Lever Support L.H.	1
38	325-7	Capscrew	4
39	5-3192	Lock Lever Support Cap	2
40	5-3190	Lock Lever Support R.H.	1
41	3210-4	Capscrew	4
42	5-1183	Washer	4

 *Not Illustrated

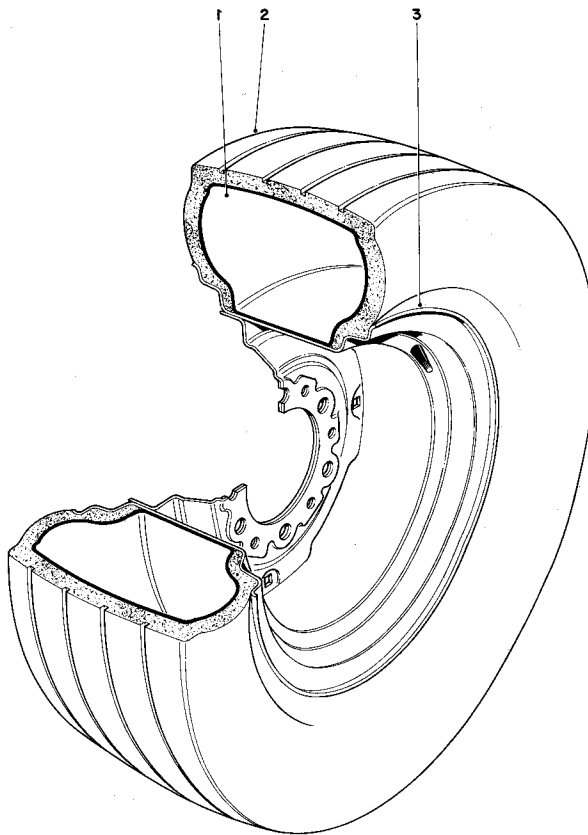


FRONT WHEEL AND RIM KIT No. 10-2560 — 9:50x14 ***Parkmaster 9**

Ref. No.	Part No.	Description	No. Used
1	232-29	Tube 9.50 x 14, 4-ply	2
2	231-62	Tire 9.50 x 14, 4-ply	2

Ref. No.	Part No.	Description	No. Used
3	10-0720	Wheel (14")	2

 *Optional for other units.

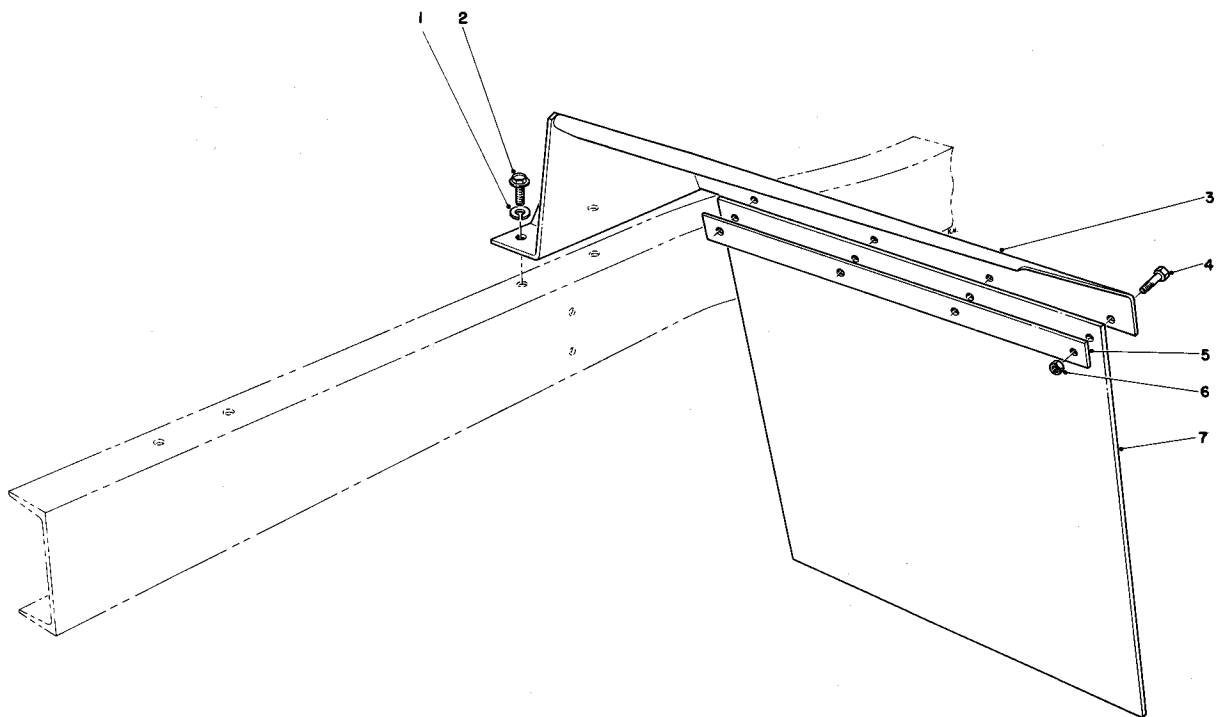


FRONT FENDER KIT No. 18-2910

Ref. No.	Part No.	Description	No. Used
1	3253-7	Lockwasher	4
2	32144-13	Thread Forming Capscrew	4
3	10-2780	Fender L.H.	1
*	10-2770	Fender R.H.	1

Ref. No.	Part No.	Description	No. Used
4	323-6	Capscrew	8
5	10-2820	Backing Flap	2
6	32146-2	Nut	8
7	10-2810	Flap	2

 
*Not Illustrated

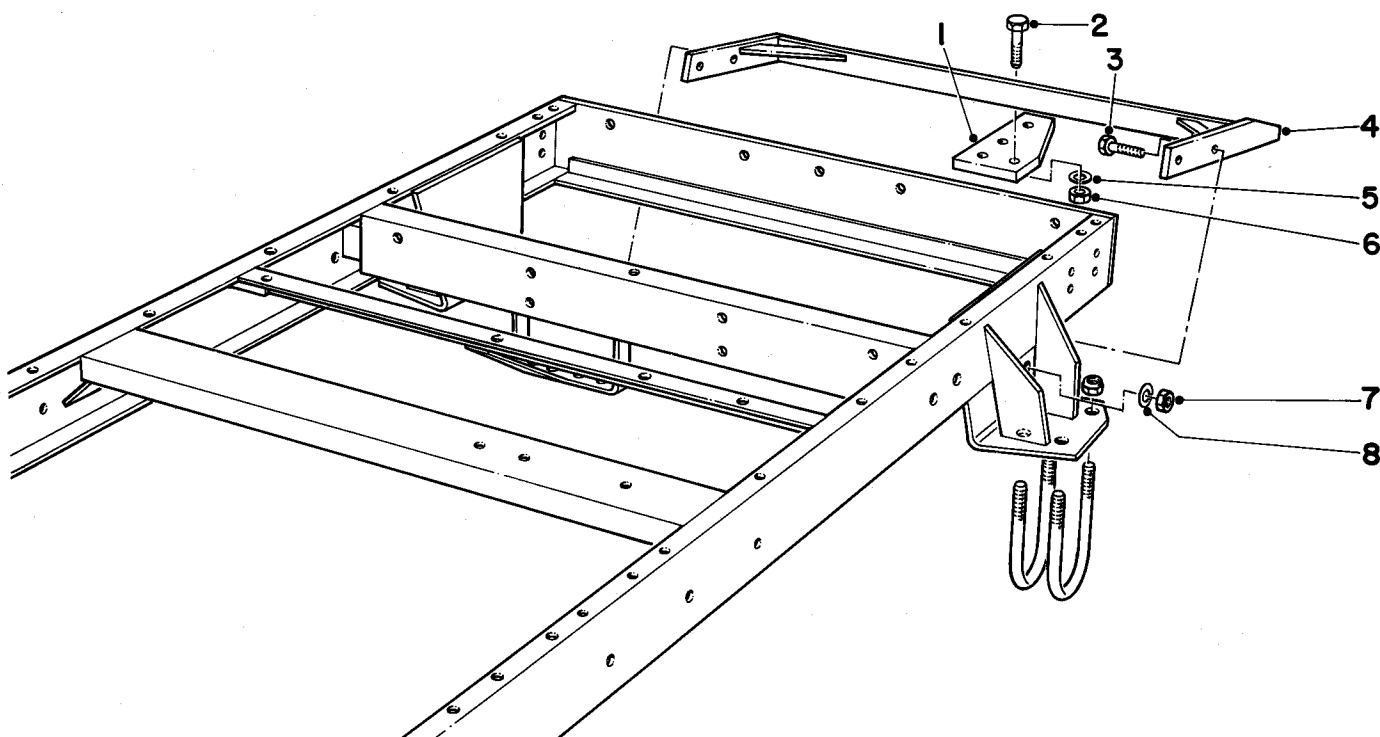

DRAWBAR KIT — 18-2940

Ref. No.	Part No.	Description	No. Used
1	3-3218	Hitch	1
2	328-2	Capscrew	2
3	327-5	Capscrew	4
4	18-2260	Drawbar	1

Ref. No.	Part No.	Description	No. Used
5	3253-9	Lockwasher	2
6	3217-12	Nut	2
7	3217-11	Nut	4
8	3253-8	Lockwasher	4

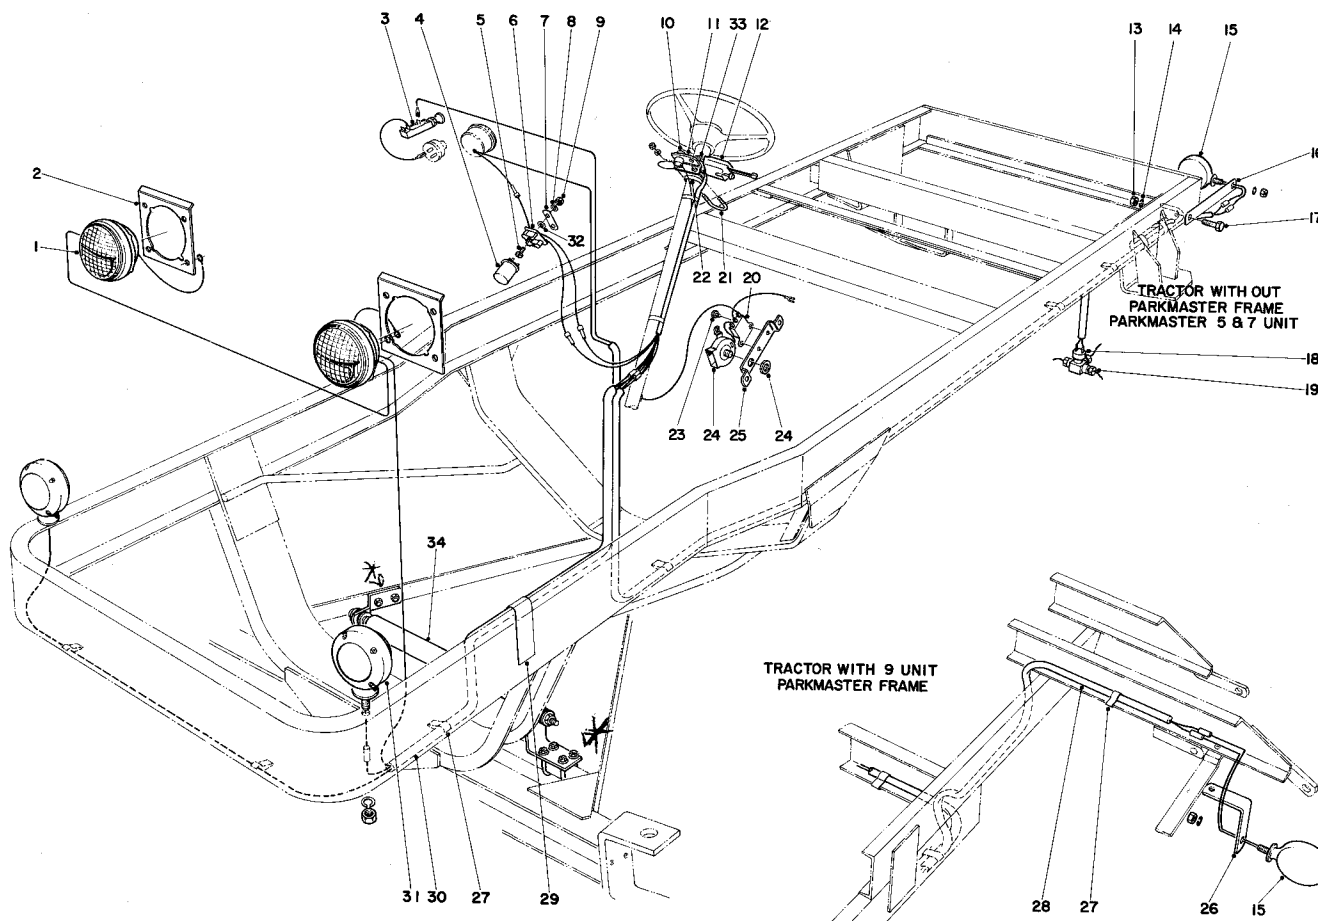 


LIGHT KIT No. 26-2140

Ref. No.	Part No.	Description	No. Used
1	7-1646	Headlight	2
2	18-1010	Headlight Holder	2
3	218-213	Lightswitch	1
4	218-456	Flasher	1
5	3252-2	Screw	1
6	11-6440	Flasher Connector	1
7	18-4370	Flasher Connector Bracket	1
8	3253-12	Lockwasher	1
9	3217-26	Nut	1
10	18-2830	Horn Button	1
11	18-2480	Throttle Lever Support	1
12	11-6400	Signal Controller	1
13	3217-11	Nut	4
14	3253-8	Lockwasher	4
15	11-6390	Tail, Stop & Turn Lights	2
16	3-3402	Bracket	2
17	327-4	Capscrew	2

Ref. No.	Part No.	Description	No. Used
18	218-242	Stoplight Switch	1
19	218-243	Brake Line Tee	1
20	218-212	Horn Relay	1
21	18-2130	Clamp	1
22	18-1310	Saddle	2
23	32104-77	Self-Tapping Screw	2
24	19-6050	Horn (Incl. Nut)	1
25	18-2820	Horn Mount	1
26	18-8860	Bracket	2
27	212-93	Wire Clip	13
28	18-8580	Wire Harness	1
29	18-8570	Wire Harness Clip	1
30	18-5250	Wire Harness	1
31	11-6250	Fr. Signal Lamps Incl. Fasteners)	2
32	19-2430	Washer Plastic	1
33	2412-3	Hose Clamp	1
34	26-1980	Steering Stabilizer	1

 
lights included

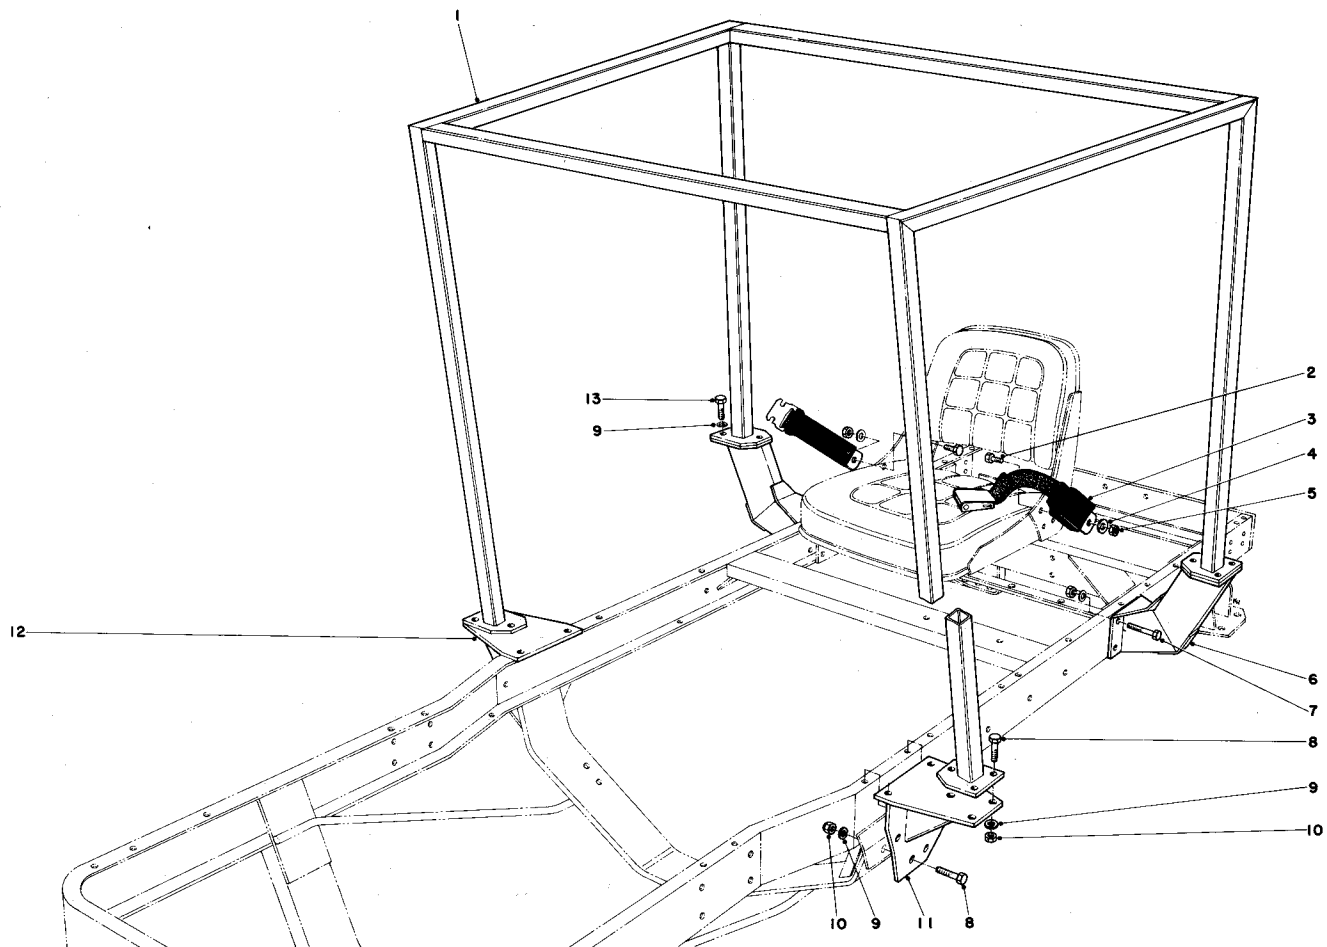

ROLL OVER PROTECTION KIT NO. 77021

Ref. No.	Part No.	Description	No. Used
1	21-4120	Roll Bar Ass'y.	1
2	324-4	Capscrew	2
3	21-4190	Seat Belt	1
4	3256-25	Flatwasher	2
5	3296-48	Locknut	2
6	21-4310	Rear Mount	2
7	325-14	Capscrew	8


Ref. No.	Part No.	Description	No. Used
8	325-9	Capscrew	10
9	3253-7	Lockwasher	24
10	32146-13	Locknut	18
11	21-4390	Front Mount L.H.	1
12	21-4400	Front Mount R.H.	1
13	325-6	Capscrew	6

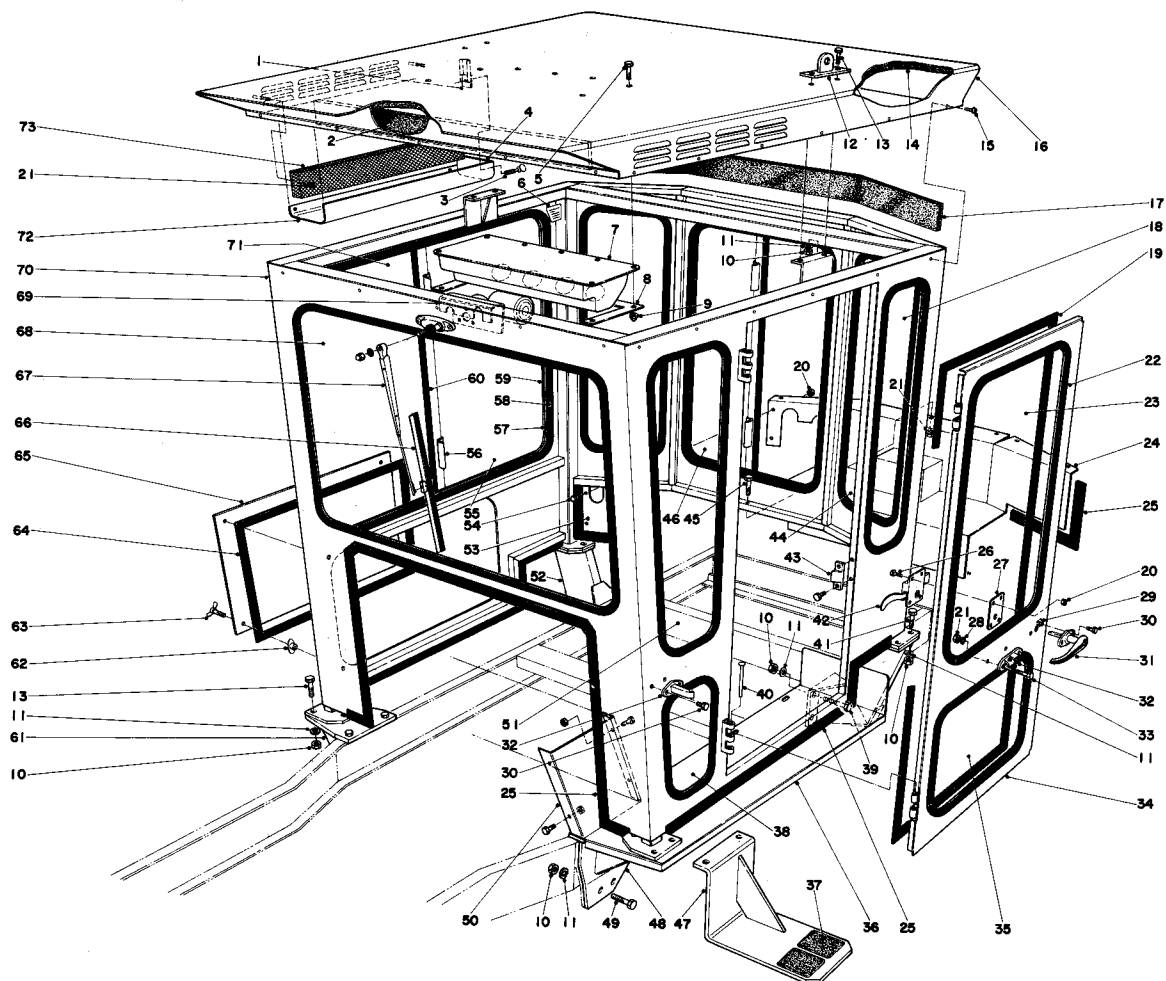 

TRACTOR CAB

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	315176	Filter Retainer Clip	2	24	300537	Rear Seal Panel	1
2	000311	Vinyl Poly	1	25	000354	Hollow Globe Clip On (275" Lg.)	1
3	000229	Wing Bolt	2	26	000205	Machine Screw	4
4	280021-2	Duct Cap R.H.	1	27	315172	Shim, Lock	1
*	280021-1	Duct Cap L.H.	1	28	000089	Lockwasher	2
5	000060	Capscrew	7	29	000202	Weld Nut	2
6	000657	Decal, Emergency Exit	1	30	000204	Bolt	6
7	000551	Pressurizer	1	31	000625	Door Handle	1
8	315175	Pressurizer Retainer	1	32	000721-1	Door Catch (Male)	1
9	000231	Acorn Nut	7	33	000121	Bolt	2
10	000085	Nut	20	34	300553	Door Complete	1
11	000092	Lockwasher	35	35	300565	Glass, Lower Door	1
12	315168	Lifting Eye	2	36	300531-2	Fender L.H.	1
13	000064	Bolt	10	*	300531-1	Fender R.H.	1
14	300554	Vinyl Poly (1" Roof)	1	37	20-5050	Step Pad	2
15	000150	Zip Screw	11	38	300557	Glass, Lower Left	1
16	300550	Roof	1	39	000070	Capscrew	8
17	300574	Vinyl Poly (Roof Rear)	1	40	315151	Pin	2
18	300558	Glass, Left Rear	1	41	000062	Capscrew	6
19	000356	Universal Seal (160" Lg.)	1	42	000648	Door Lock L.H.	1
20	000113	Nut	9	43	000631	Lock Striker	1
21	000078	Nut	13	44	300559	Glass, Rear Corner	2
22	000336	Window Rubber	AR	45	000060	Capscrew	7
23	300564	Glass, Upper Door	1	46	300560	Glass, Rear Slider	2

 * Not Illustrated

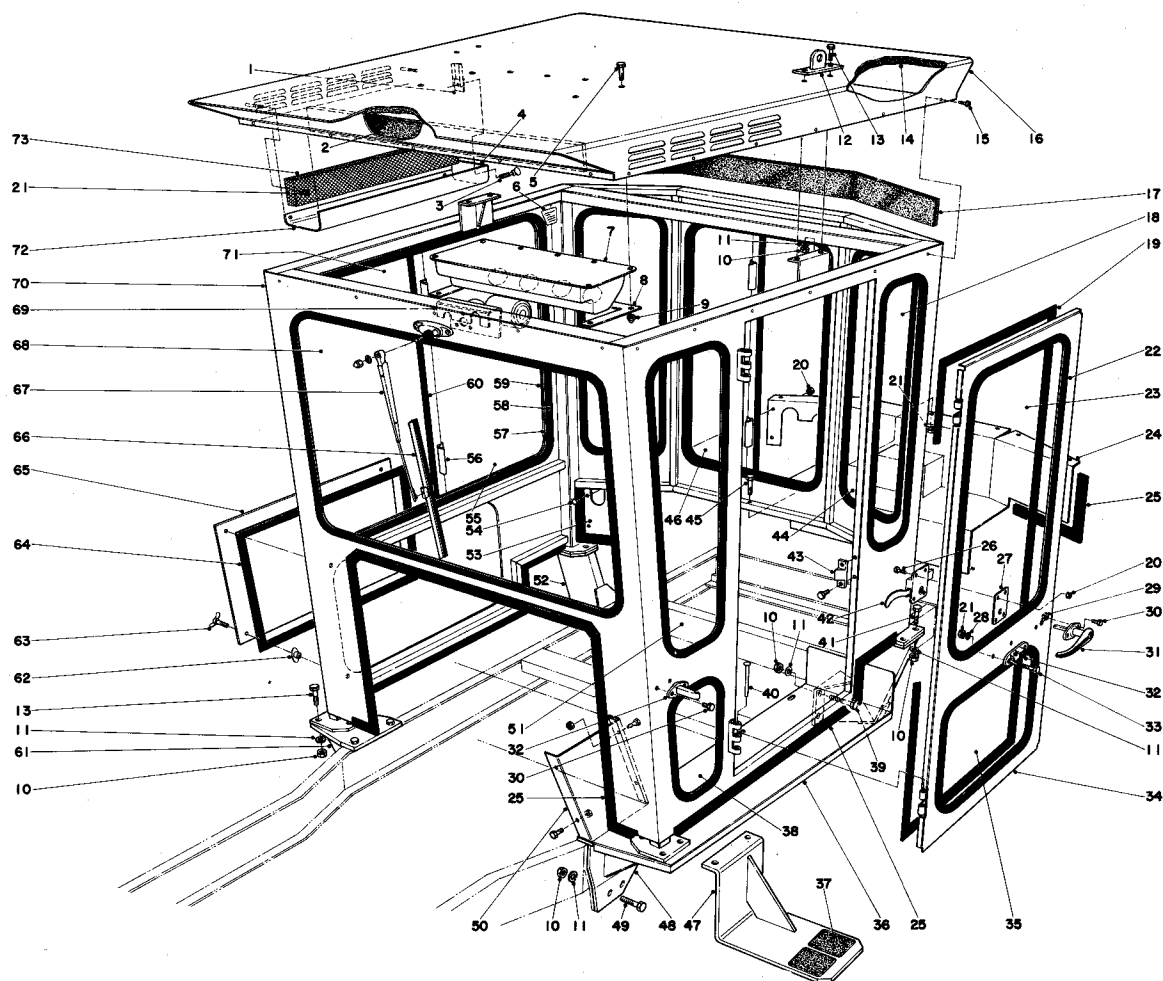

TRACTOR CAB (Continued)

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
47	300569	Step	1	60	000320	Rigid Slider Channel (70" Lg.)	2
48	300506-1	Front Mount L.H.	1	61	300506-2	Front Mount R.H.	1
49	000066	Capscrew	4	62	000178	Flat Receptacle	4
50	300548-1	Filler Cowl L.H.	1	63	000177	Wing Bolt	4
*	300548-2	Filler Cowl R.H.	1	64	000356	Universal Seal (104" Lg.)	1
51	300556	Glass, Upper Left	1	65	300572	Side Panel	1
52	300514	Rear Mounts	2	66	000541	Wiper Blade 22"	1
53	300538	Sealed Panel	1	67	000544	Wiper Blade Arm 20"	1
54	000111	Machine Screw	5	68	300555	Glass, Front	1
55	300563	Glass, Rear Right Slider	1	69	000542	Wiper Motor Ass'y.	1
56	000717	Window Handle	4	70	300545	Cab	1
57	000338	Blank Spacer (125" Lg.)	2	71	300562	Front Glass, Right Slider	1
58	000306	Flexible Channel (250" Lg.)	2	72	280022	Duct Body	2
59	000339	Slider Glass Channel (250" Lg.)	2	73	000552	Filter	2

*Not Illustrated Note: Order all Repair Parts from: Palm Industries, Box 680, Litchfield, MN 55355

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The tractor has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is located on right side of toe board. In any correspondence concerning the tractor, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information.

1. Model and serial number of the tractor.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

THE TORO PROMISE

It is Toro's policy to design and produce TORO products to provide our customers with a high level of performance and durability in normal operation. Our products, however, are produced in high volume, and it is inevitable that occasionally a unit will reach a customer with a defect in materials or workmanship which causes the unit to fall below the normal high

level of TORO performance. Invariably, such a defect will be noticed in an institutional product within one year after purchase. Recognizing this possibility, Toro has established a simple guarantee policy and procedure that is intended to assure customer satisfaction. This guarantee statement is as follows:

The Toro Promise

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following periods from the date of purchase apply:

Institutional Products 1 year

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any institutional product to a TORO Distributor.

Should the customer feel that a product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any TORO Distributor, but preferably the distributor from whom you purchased the product.
2. Bring the product and your original sales slip, or other evidence of purchase date, to the distributor.
3. The servicing distributor will inspect the unit,

advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to the customer.

If for any reason the customer is dissatisfied with the distributor's analysis of the defect or the service he performs, he can contact us. Write:

**TORO "Customer Care" Department
8111 Lyndale Avenue South
Bloomington, Minnesota 55420**