




142-5462

SPREADER ACCESSORY

Model No. 142-5462—Serial No. 408644346 and Up

Picture below may not reflect actual product.

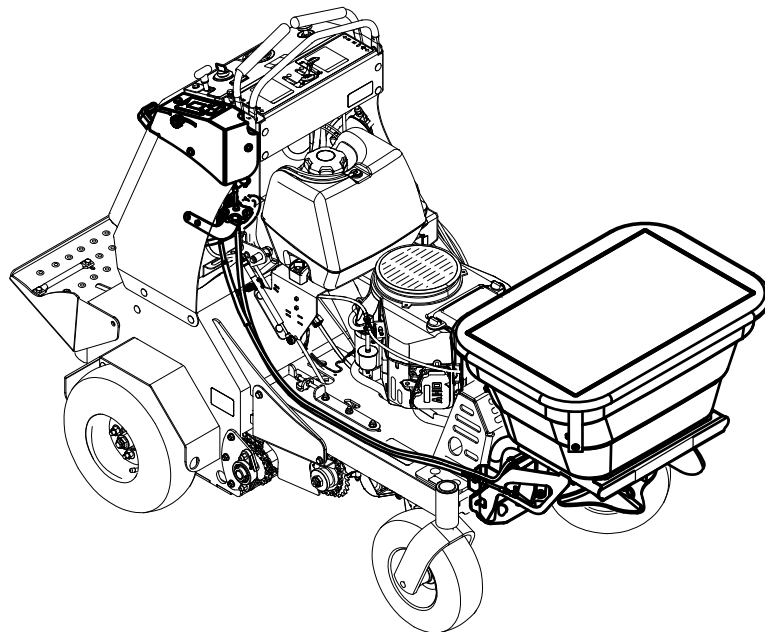

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Spreader Assembly 4

Spreader Hopper 6

Spreader Controller Assembly 8

Spreader Assembly

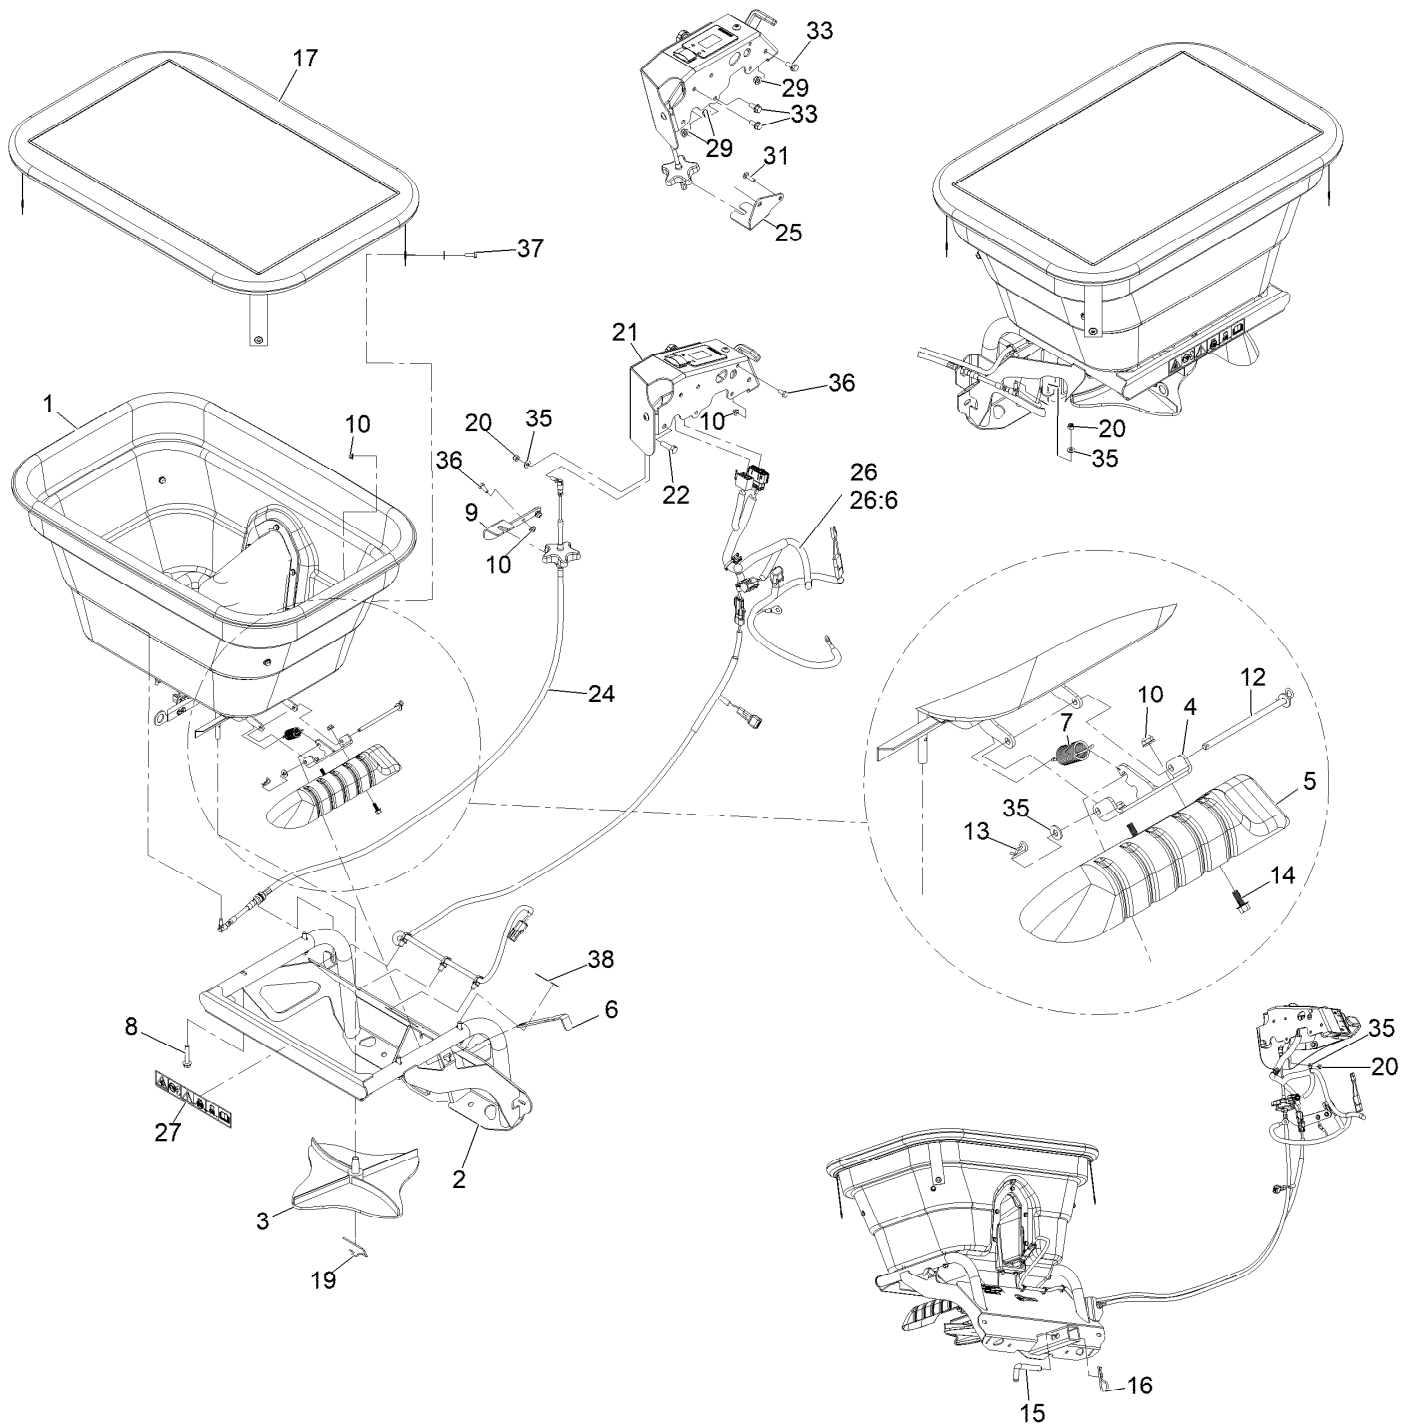


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Asy-Spreader Hopper ●	19	126-1246	1	Clip-Spinner
2	135-0193-03	1	Spreader Hopper Frame ASM	20	3296-3	2	Nut-Nyloc 1/4-28
3	126-0858	1	Spinner-Spreader	21		1	Spreader Controller ASM ●
4	135-1514-03	1	Bracket-Deflector	22	323-7	1	Screw-HH 3/8-16 X 1 1/4
5	126-8623	1	Deflector	24	135-0841	1	Cable-Push, Pull
6	126-8625	1	Strap-Engagement	25	135-0857-03	1	Bracket-Cable
7	92-7305	1	Spring-Extension	26	135-0700	1	Harness
8	94-5780	4	Screw-HWH	26:6	135-0878	1	Connector
9	126-8634-03	1	Bracket-Cable	27	126-4994	1	Decal-Down, Tie
10	104-7201	2	Nut-Nyloc 1/4-20 Flg	29	104-8300	3	Nut-Nyloc 5/16-18 Flg
12	126-8636	1	Pin-Pivot	31	3229-2	1	Bolt-Carriage 1/4-20 X 1
13	1-806003	2	Hairpin-Cotter	33	3234-47	3	Screw-HH Flg 5/16-18 X 3/4
14	99-6810	2	Screw-HH 1/4-20 X 5/8	35	3256-22	4	Washer-1/4 SAE
15	126-8637	1	Pin-Hitch	36	321-3	3	Screw-HH 1/4-20 X 5/8
16	3290-256	1	Pin-Hair	37	32105-15	4	Screw-Machine 1/4-20 X 3/4
17	126-2815	1	Cover-Hopper	38	133-8061	1	Decal-Warning

● Not serviced separately


Spreader Hopper

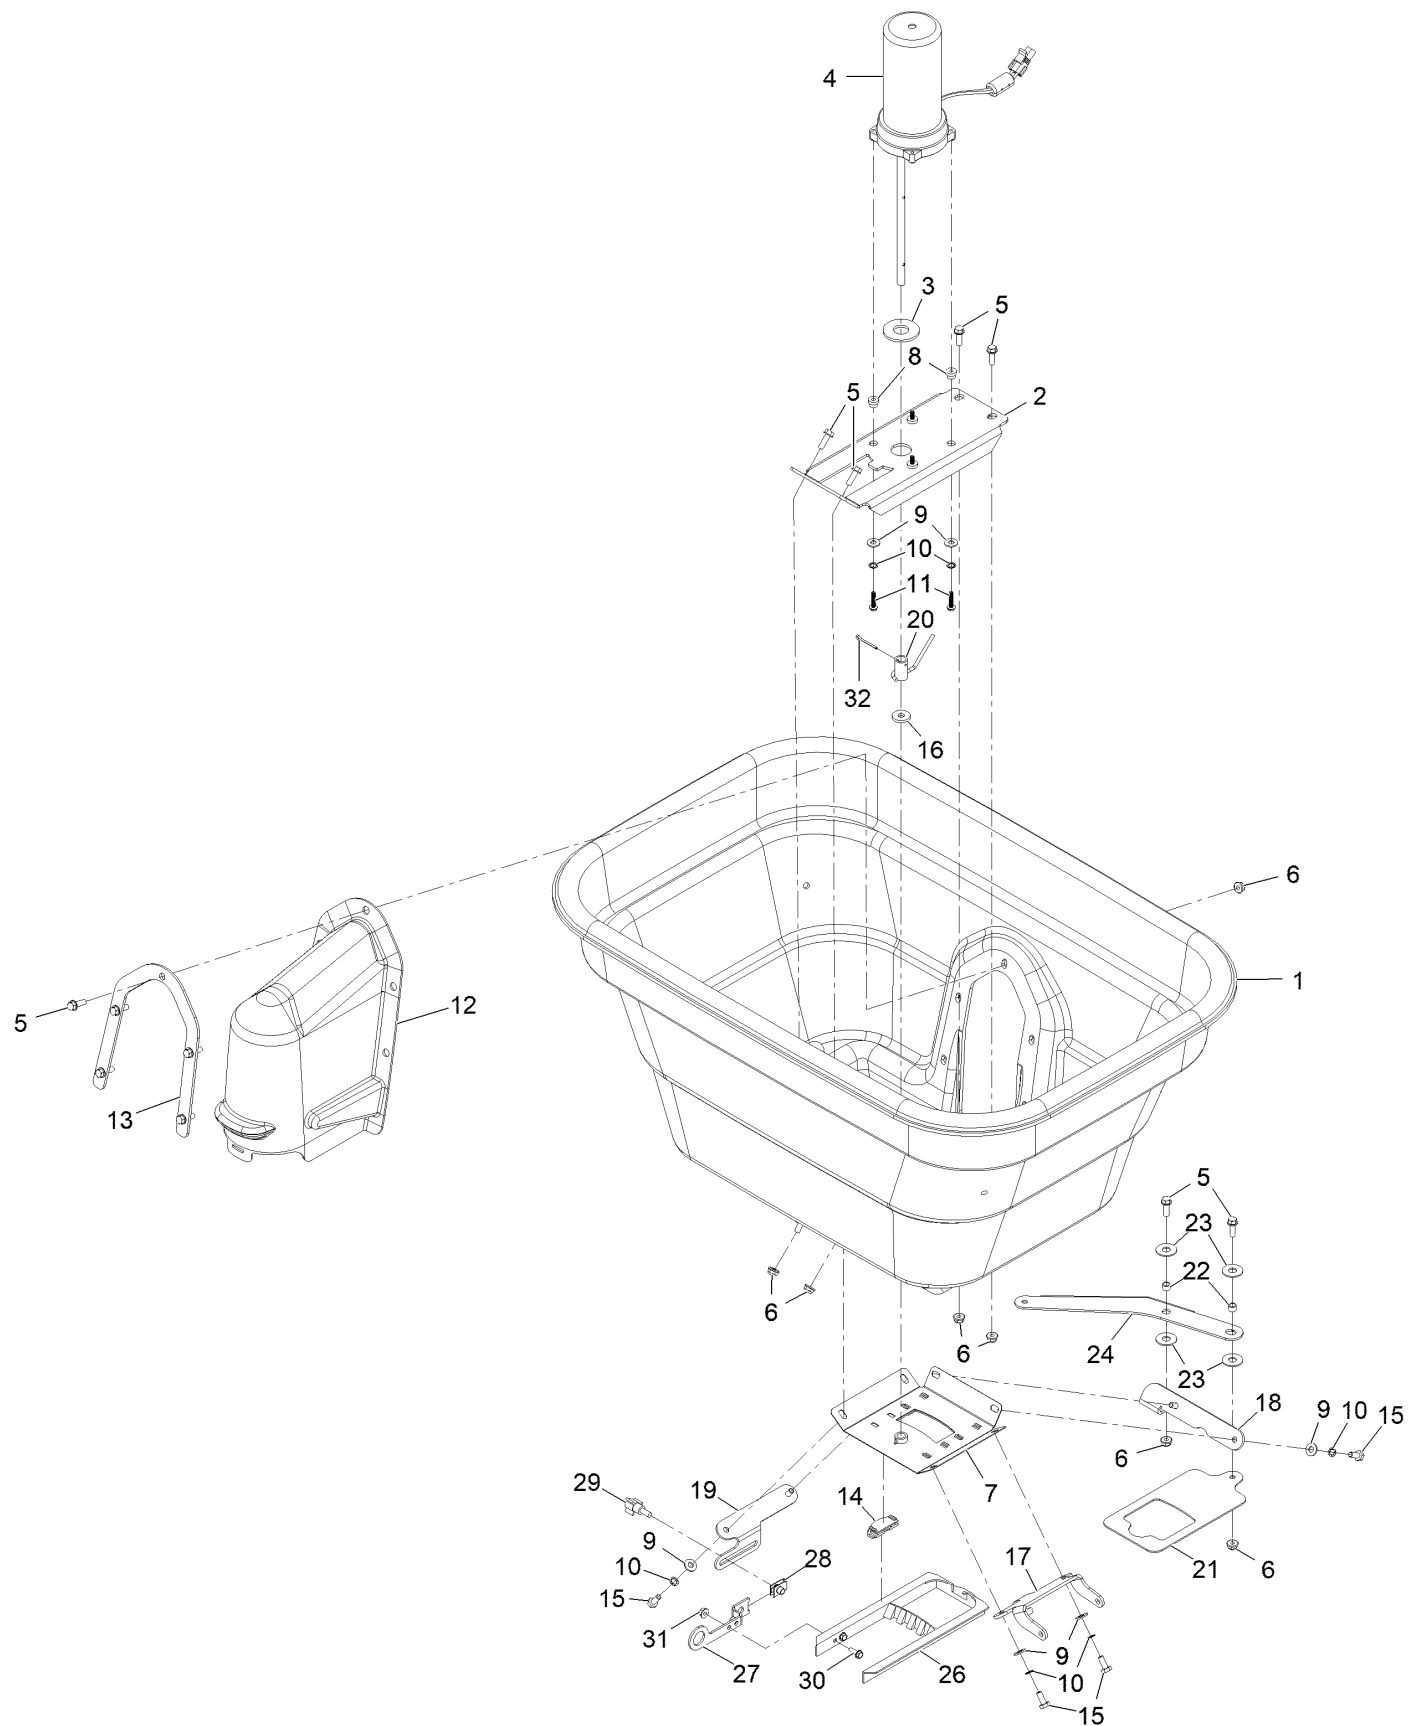

Spreader Hopper (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2734	1	Hopper-Spreader, 175 Lb	17	126-8622-03	1	Mount-Deflector
2	126-8616-03	1	Mount-Motor	18	135-0697-03	1	Mount-Gate, Pivot
3	83-2400	1	Spacer	19	135-0701-03	1	Mount-Gate, Pivot
4	126-0379	1	Motor-Spreader	20	135-0714	1	Weld-Agitator
5	32105-15	12	Screw-Machine 1/4-20 X 3/4	21	135-0696-03	1	Gate-Spreader, Seed
6	104-7201	12	Nut-Nyloc 1/4-20 Flg	22	126-3684	2	Spacer
7	126-8620	1	Gate-Bearing	23	93-1633	4	Washer
8	135-3989	4	Spacer-Flanged	24	135-0698-03	1	Arm-Engagement
9	3256-22	10	Washer-1/4 SAE	26	126-0991	1	Diffuser
10	363-8641	10	Washer-Lock, Int	27	135-0702-03	1	Bracket-Accuway, Slide
11	739001	4	Screw-SHWH 10-32 X 7/8	28	107069	1	Nut-Retainer-Panel 1/4-20
12	126-1348	1	Cover-Motor	29	233-70	1	Knob-Star, Three
13	126-8621-03	1	Support-Cover	30	32105-23	2	Screw
14	126-0990	4	Guide-Rate, Gate	31	32128-17	2	Nut-Flange #10-24 Top Lock
15	321-3	6	Screw-HH 1/4-20 X 5/8	32	3272-7	1	Pin-Cotter
16	126-1252	1	Washer-Felt				

Spreader Controller Assembly

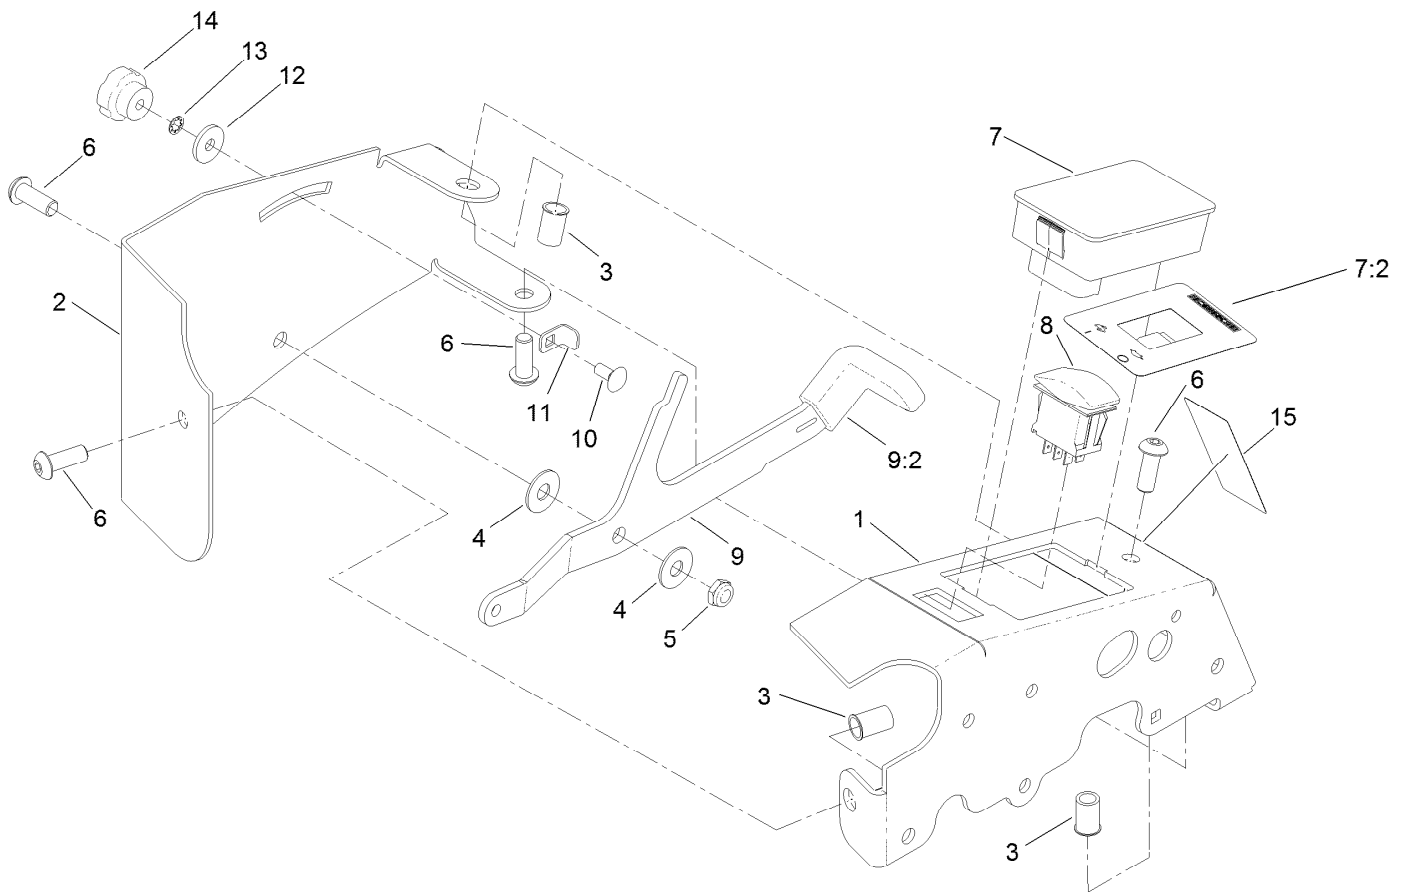

Spreader Controller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-0735-03	1	Bracket-Mount	9	135-1389	1	Handle
2	135-0736-03	1	Cover-Controller, Spreader	9:2	135-0858	1	Grip-Control, Lever
3	32148-10	3	Nut-Clinch	10	3229-11	1	Screw-CARR
4	93-1633	2	Washer	11	135-0800	1	Bracket-Gate, Set
5	3296-59	1	Nut-Lock, NI	12	66-2921	1	Washer-Friction
6	3274-94	4	Screw-HSBH	13	363-8641	1	Washer-Lock, Int
7	135-1872	1	Spreader Control Module ASM	14	233-67	1	Knob-Chute
7:2	135-0739	1	Decal-Speed, Impeller	15	135-0990	1	Decal-Control, Spread
8	100-1535	1	Switch-Rocker, (On)-Off-(On)				

Notes:

Notes:

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____



Z Turf Equipment is part of the Exmark® family of products.
©2021 Exmark Mfg. Co., Inc. All Rights Reserved. Printed in the USA.
415 Industrial Row • Beatrice, NE 68310 • (402) 223-6375 • Fax (402) 223-5489

www.zturfequipment.com

