




Z-AERATE™

24 INCH MODEL

Model No. ZA3624—Serial No. 411294212 and Up

Picture below may not reflect actual product.

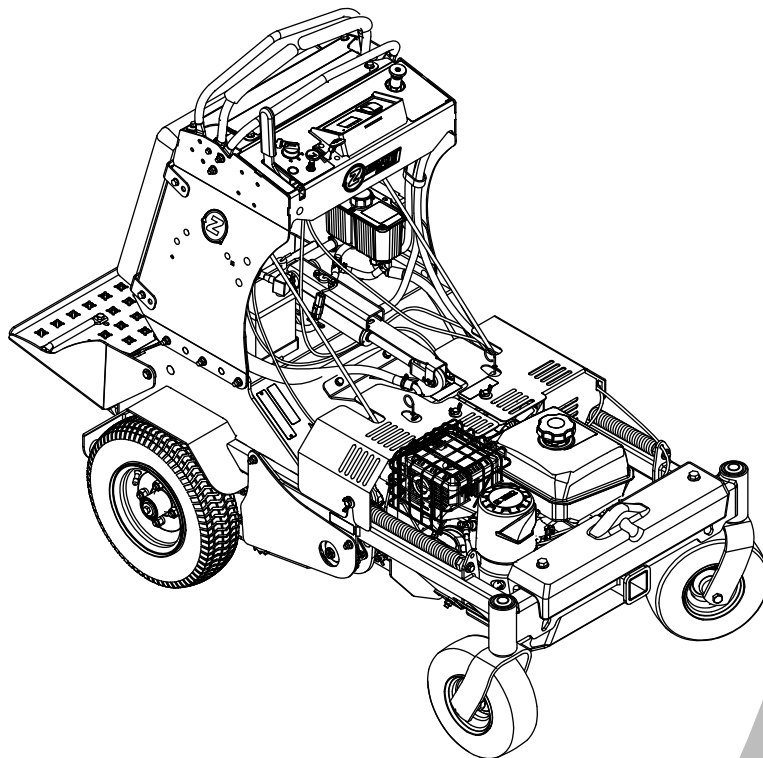

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity


In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

Main Frame Assembly	4
Main Frame W/Decals Assembly	6
Caster Wheel Assembly	8
Tower Assembly	10
Tower Assembly W/Decals	12
Motion Controls	14
LH Motion Control Linkage Assembly	16
RH Motion Control Linkage Assembly	18
Tine Assembly	20
LH Tine Wheel Assembly	22
RH Tine Wheel Assembly	24
Auxiliary Hydraulic Assembly	26
Manifold Assembly No. 126-9321	28
Ground Drive Assembly	30
Wheel and Tire Assembly	32
Idler Arm Assembly No. 126-9116	34
Engine Assembly	36
Electrical Assembly	38
Wire Harness Assembly No. 126-9535	40

Main Frame Assembly

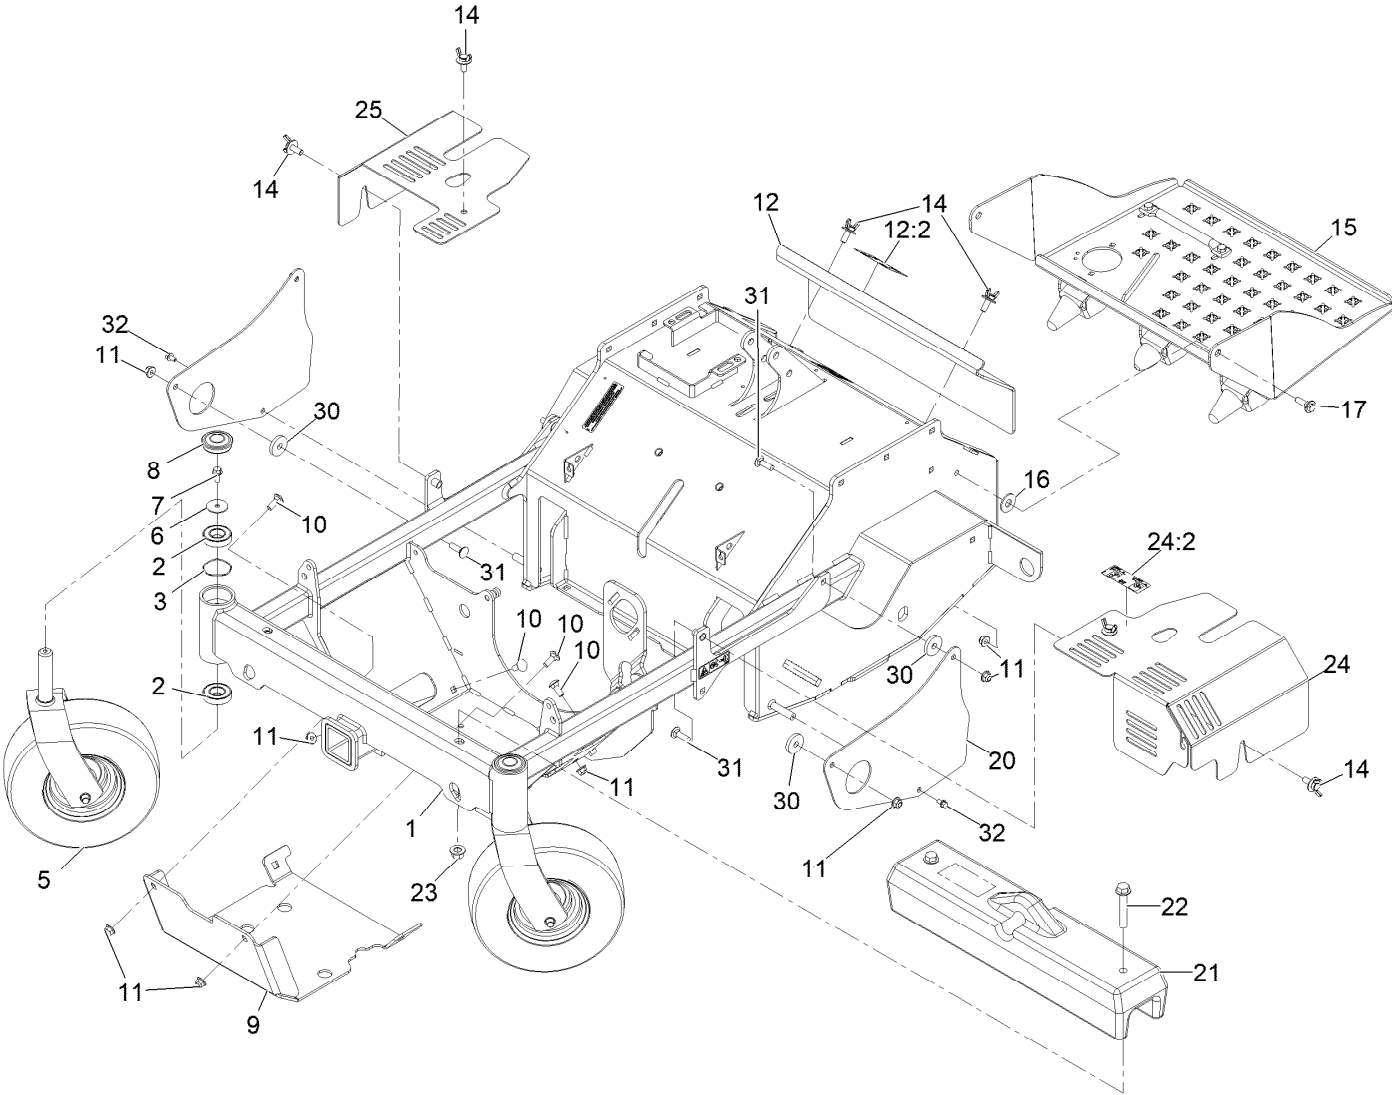


Main Frame Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-4432	1	Main Frame ASM	15	126-9135	1	Platform ASM
2	109-3678	4	Bearing-Ball	16	3256-6	2	Washer
3	126-5897	2	Spring	17	614672	2	Screw-Shoulder 3/8-16 X 1.295
5		2	Front Caster ASM ●	20	135-5138-01	2	Guard-Chain
6	3256-68	2	Washer-Flat	21	142-4436	1	Weight-Front
7	3234-5	2	Screw-HH Flg 5/16-18 X 3/4	22	3234-40	2	Screw-HF
8	116-4348	2	Cap-Grease	23	99-5107	2	Nut-Lock 1/2-13
9	126-8726-03	1	Guard-Engine	24	135-3270	1	Hydro-Cover
10	3231-2	4	Bolt-Carriage 3/8-16 X 1	24:2	135-3183	1	Decal-Release, Drive
11	104-8301	10	Nut-Nyloc 3/8-16 Flg	25	135-0822-03	1	Cover-Hydro
12	142-4435	1	Access Cover ASM	30	1-543610	4	Washer
12:2	121-6163	1	Decal-Operation, Tine Ground (CE)	31	3231-25	4	Bolt-Carriage 3/8-16 X 1 1/4
14	135-4629	6	Screw-Sems (3/8-16 X 1)	32	3234-13	2	Screw-HH Flg 1/4-20 X 1/2

● Not serviced separately

Main Frame W/Decals Assembly

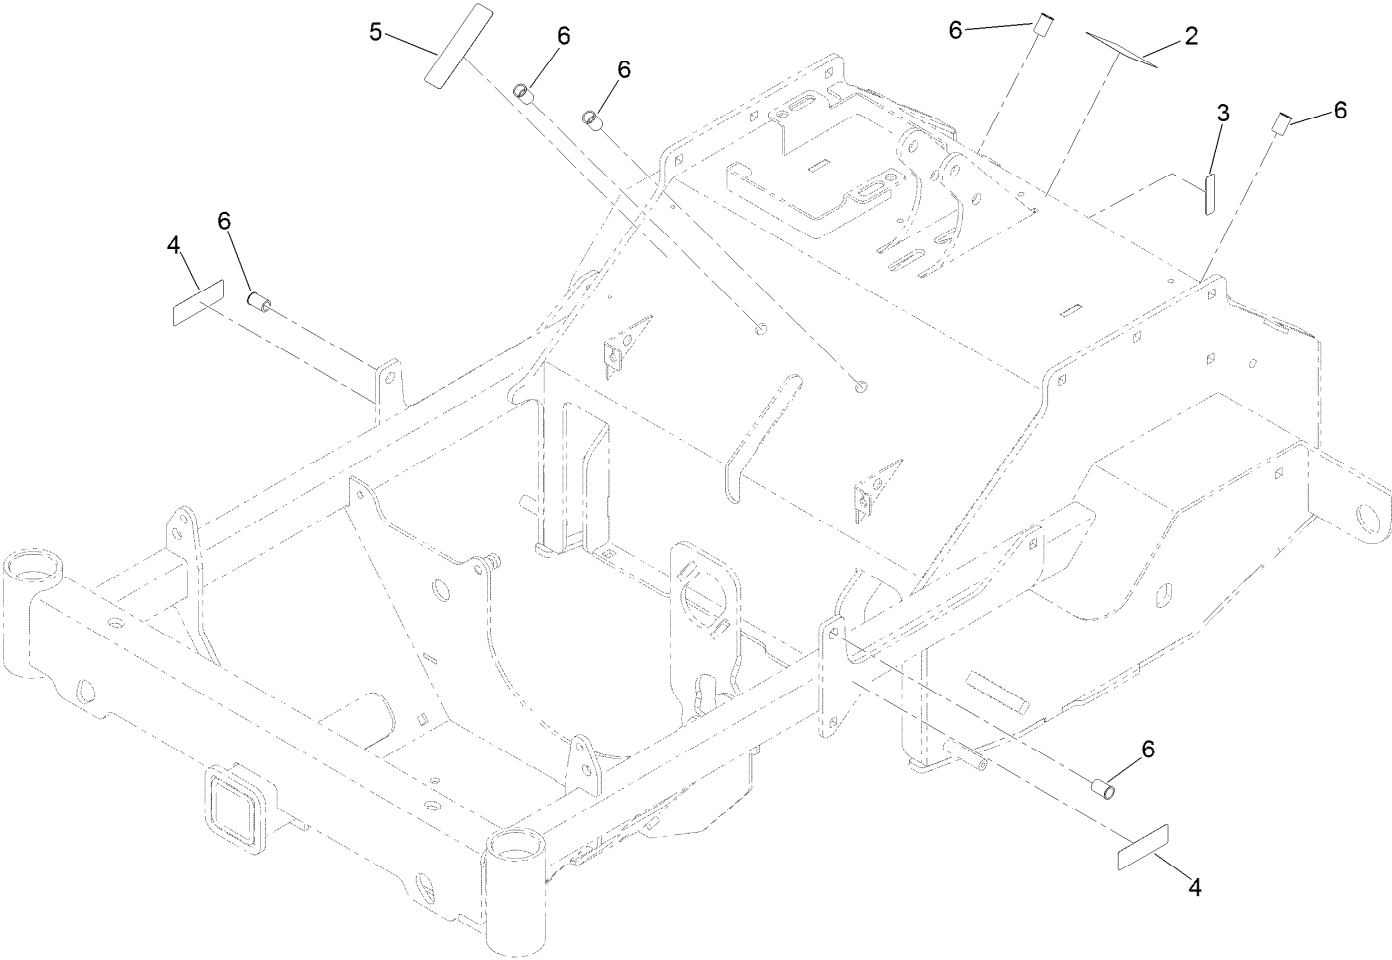


Main Frame W/Decals Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	121-6150	1	Decal-Warning
3	120-9570	1	Decal-Warning
4	121-6161	2	Decal-Danger

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	133-8062	1	Decal-Arrestor, Spark
6	32148-10	6	Nut-Clinch

Caster Wheel Assembly

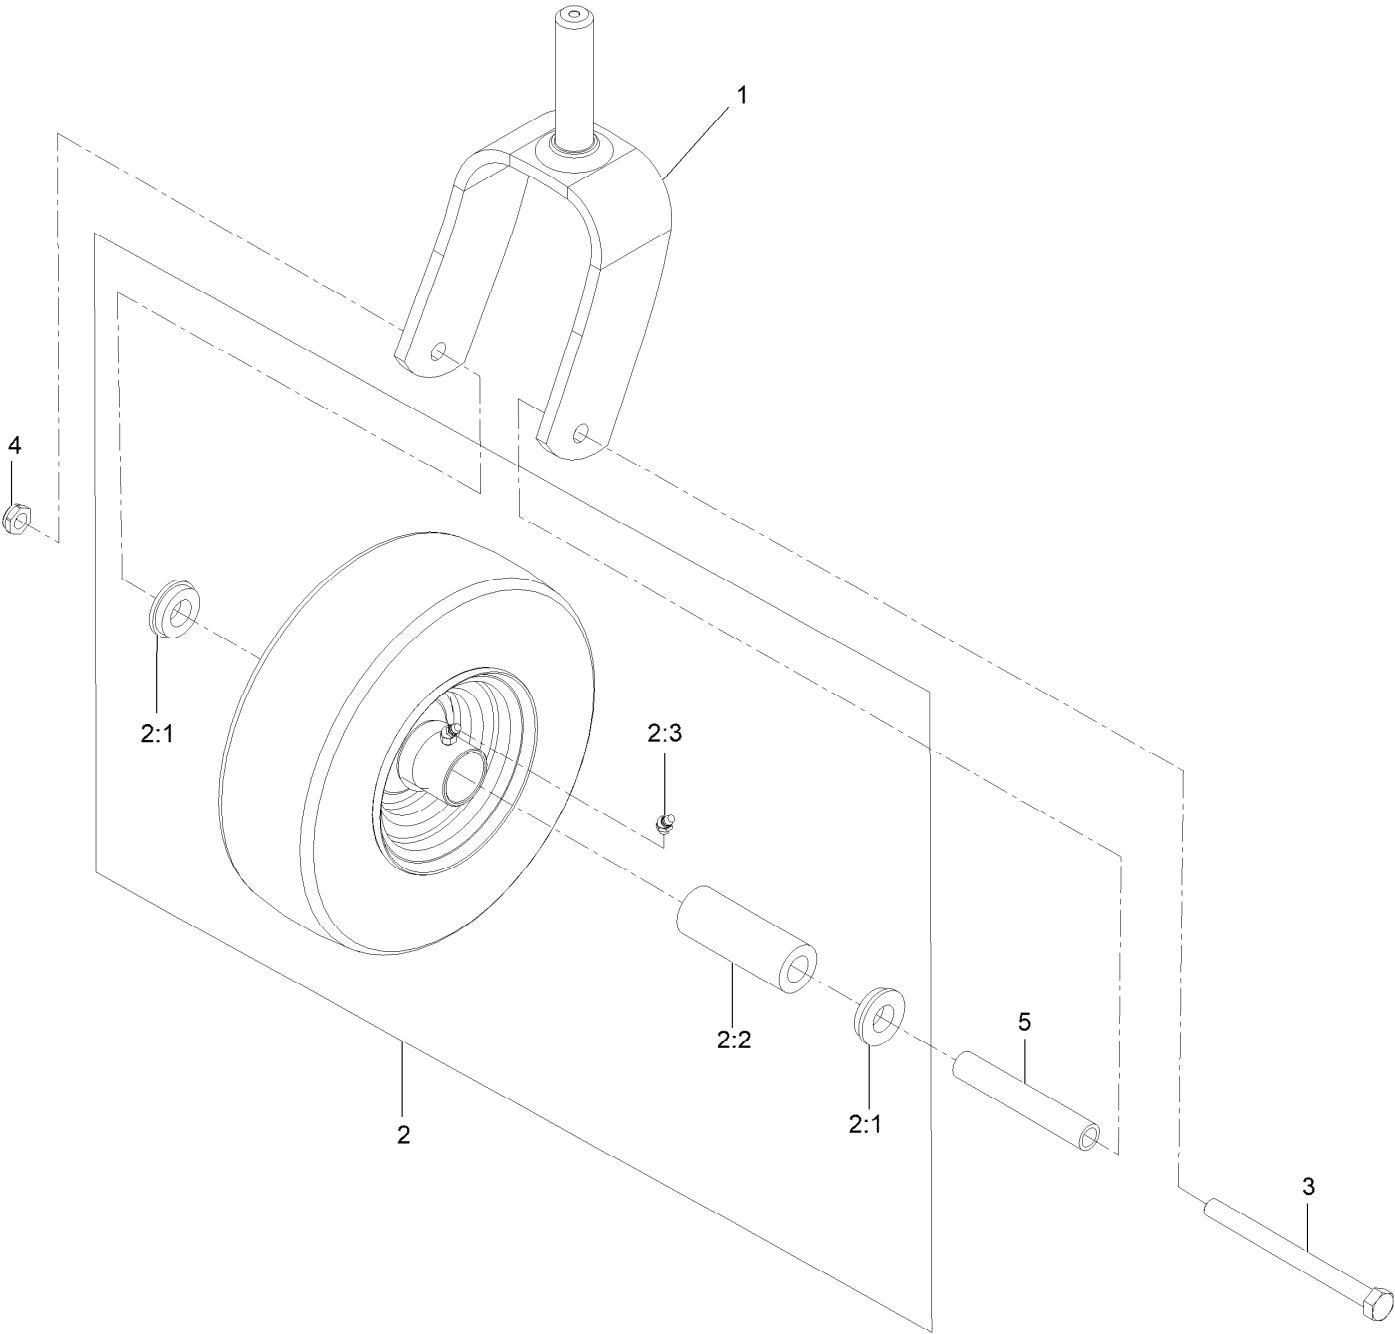


Caster Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-1354-01	1	Fork-Caster
2	142-4434	1	Wheel And Tire ASM
2:1	1-513810	2	Bushing
2:2	1-513809	1	Bearing

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2:3	302-61	1	Fitting-Grease
3	325-20	1	Screw-HH 1/2-13 X 6
4	3296-45	1	Nut-Nyloc 1/2-13 Thin
5	1-513547	1	Spacer

Tower Assembly

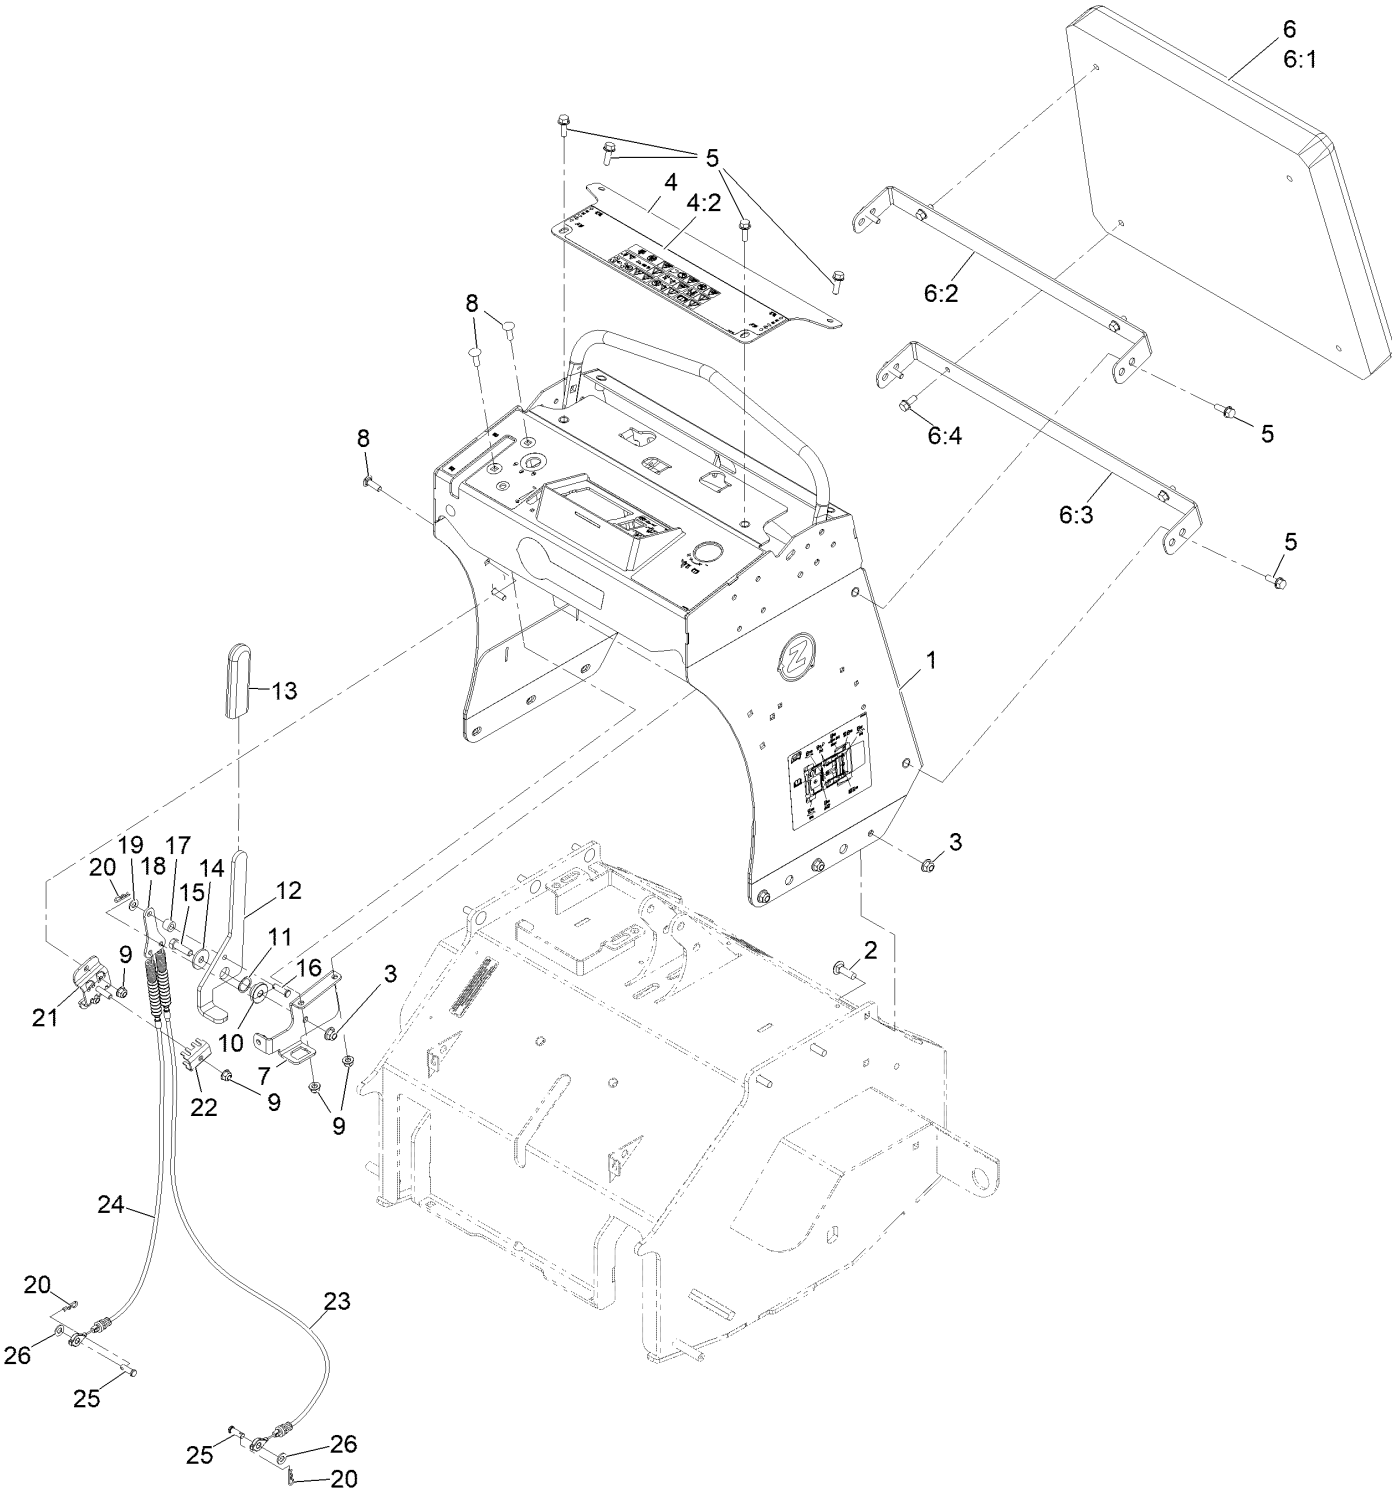


Tower Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-4437	1	Control Tower ASM	11	119-4164	1	Washer-Wave
2	3231-25	6	Bolt-Carriage 3/8-16 X 1 1/4	12	135-1715	1	Handle-Brake
3	104-8301	7	Nut-Nyloc 3/8-16 Flg	13	1-633268	1	Grip-Lever
4	135-1695	1	Control Panel ASM	14	2844	1	Washer
4:2	135-2014	1	Decal-Warning	15	323-7	1	Screw-HH 3/8-16 X 1 1/4
5	3234-29	8	Screw-HH Flg 5/16-18 X 1	16	283-61	1	Pin-Yoke
6		1	Cushion ASM ●	17	114-8549	1	Bushing
6:1	135-1693	1	Cushion-Grey	18	132-1188	1	Yoke-Cable
6:2	135-1712-03	1	Bracket-Pad, Upper	19	93-6079	1	Spacer-Nylon
6:3	135-1713-03	1	Bracket-Pad, Lower	20	3290-307	3	Pin-Cotter
6:4	98-9940	4	Screw-HHF	21	132-7582	1	Mount-Cable, Brake
7	135-1714-03	1	Bracket-Pivot, Brake	22	132-1187	1	Clamp-Cable
8	3230-22	5	Bolt-Carriage 5/16-18 X 1 Sp	23	135-0081	1	Cable-Brake, LH
9	104-8300	6	Nut-Nyloc 5/16-18 Flg	24	135-0082	1	Cable-Brake, RH
10	126-5989	1	Pivot-Flange	25	283-75	2	Pin-Clevis 5/16 X 3/4
				26	3256-23	2	Washer-5/16 SAE

● Not serviced separately

Tower Assembly W/Decals

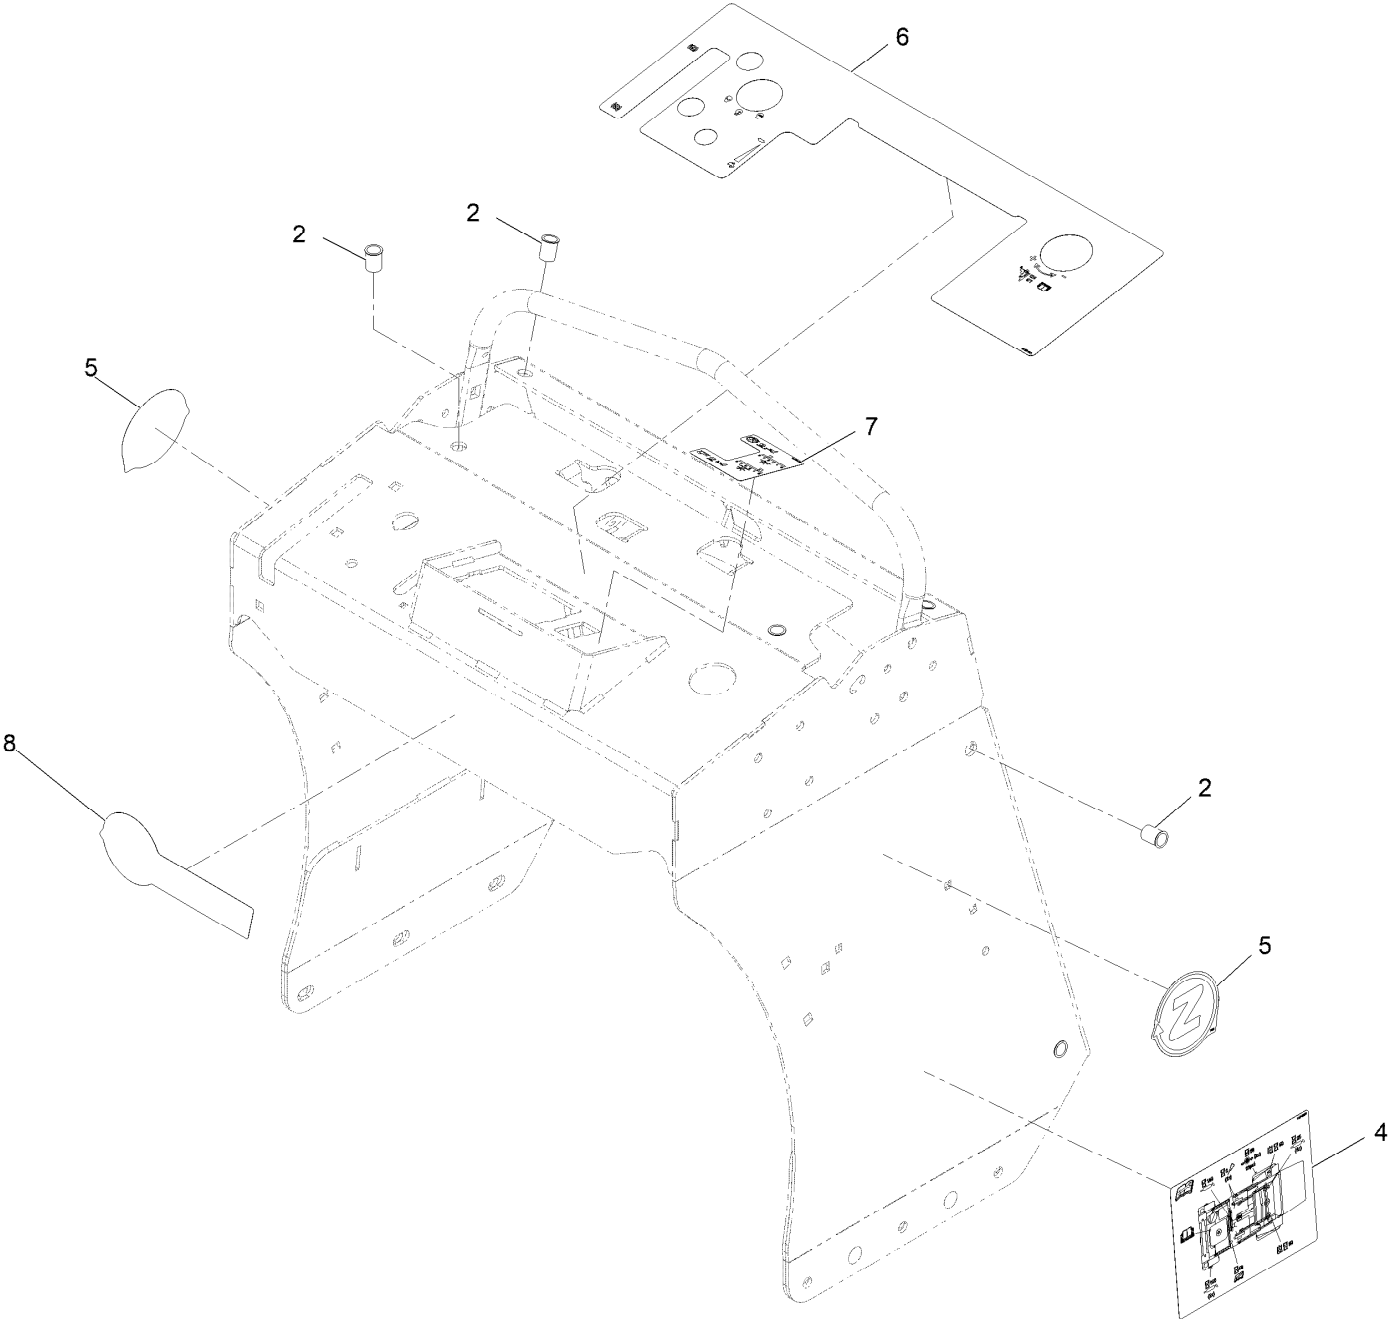


Tower Assembly W/Decals (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	32148-7	8	Nut-Clinch
4	135-3685	1	Decal-Aid, Service
5	142-3051	2	Decal-Z-Logo

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	135-2013	1	Decal-Panel, Control
7	135-2016	1	Decal-Control, Tine
8	142-5676	1	Decal-Z-Aerate 24 Logo

Motion Controls

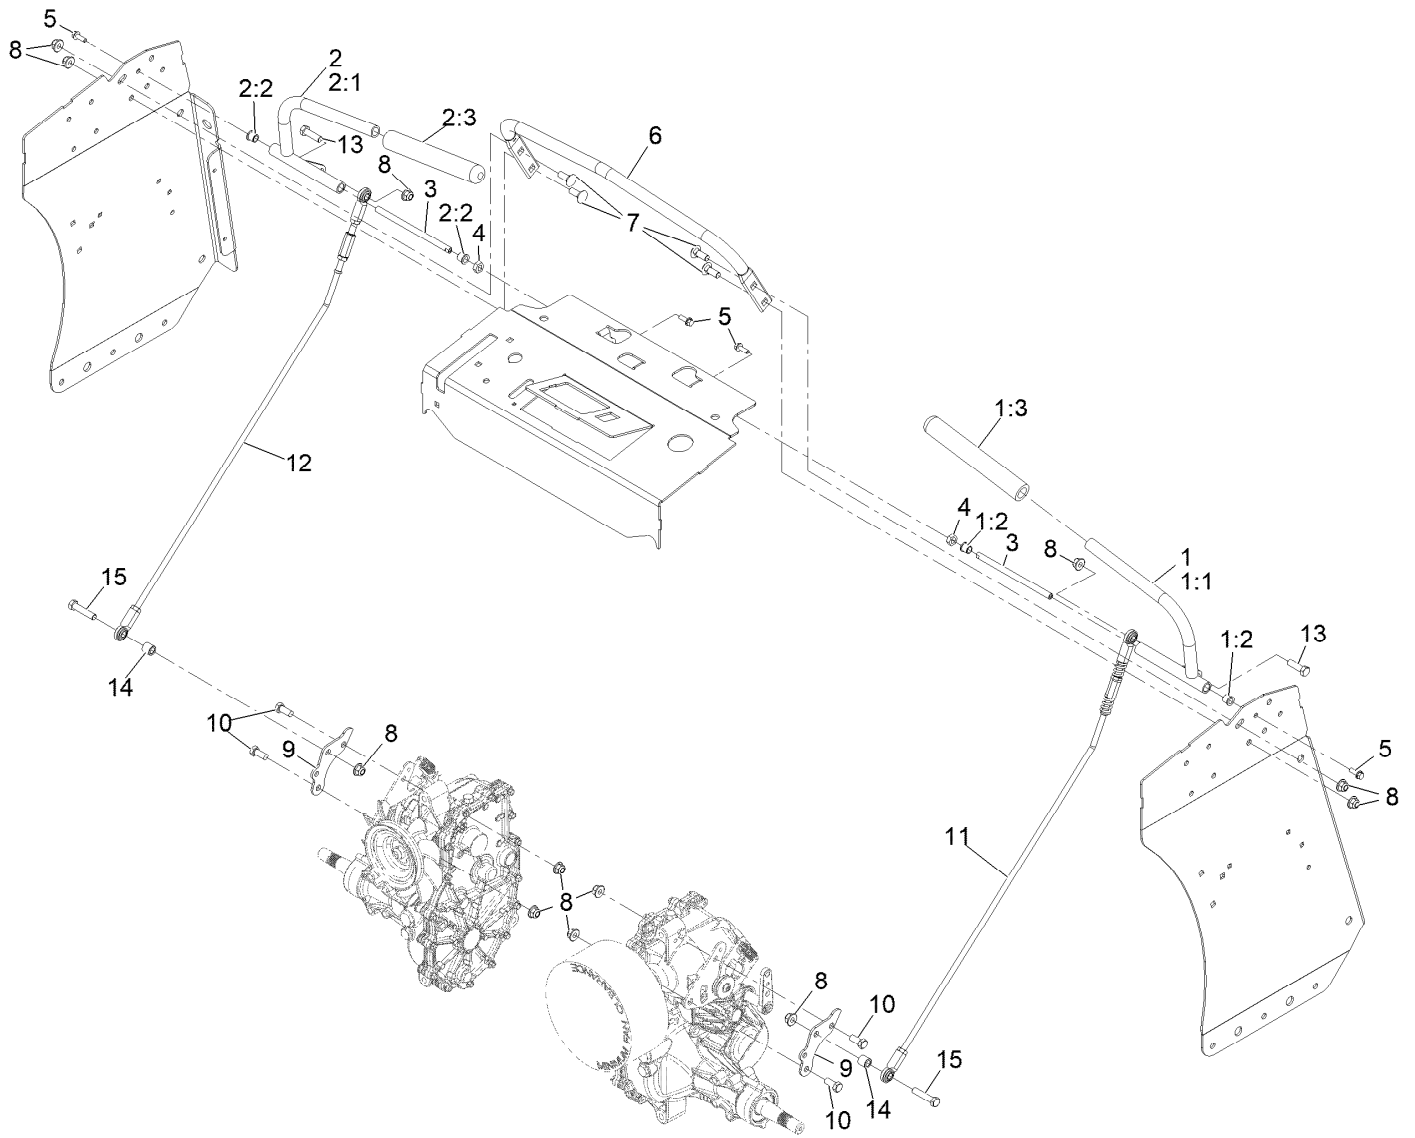


Motion Controls (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	LH Motion Handle ASM ●	6	135-1557-01	1	Bar-Reference
1:1	135-1575-03	1	Handle-Control, LH	7	3231-2	4	Bolt-Carriage 3/8-16 X 1
1:2	103-9928	2	Bearing	8	104-8301	12	Nut-Nyloc 3/8-16 Flg
1:3	103-8153	1	Grip-Lever, Control	9	135-0305	2	Arm-Motion
2		1	RH Motion Handle ASM ●	10	323-5	4	Screw-HH 3/8-16 X 7/8
2:1	135-1576-03	1	Handle-Control, RH	11		1	LH Motion Linkage ASM ●
2:2	103-9928	2	Bearing	12		1	RH Motion Linkage ASM ●
2:3	103-8153	1	Grip-Lever, Control	13	323-7	2	Screw-HH 3/8-16 X 1 1/4
3	116-4978	2	Shaft-Pivot, Motion Control	14	126-9682	2	Spacer
4	116-4198	2	Spacer-Shaft, Drive Lever	15	323-9	2	Screw-HH 3/8-16 X 1 3/4
5	117-8304	4	Screw-Hex Flange 1/4-20 X 3/4				

● Not serviced separately

LH Motion Control Linkage Assembly

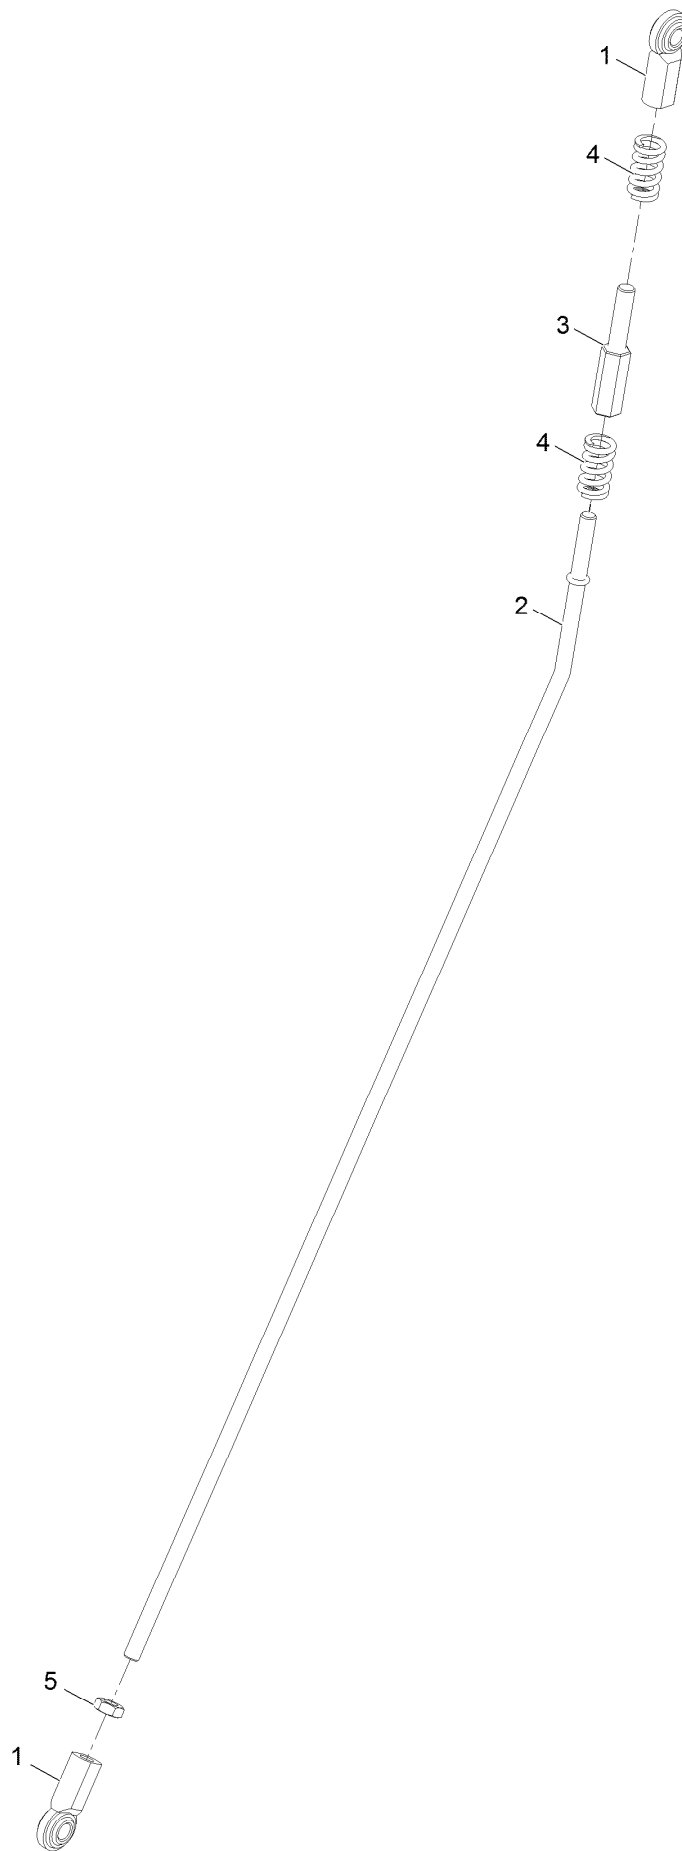


LH Motion Control Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0608	2	Balljoint
2	135-1579	1	Linkage-Motion
3	116-4755	1	Rod-Adjustment

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	116-7560	2	Spring-Compression
5	3220-3	1	Nut-Jam 3/8-24


RH Motion Control Linkage Assembly

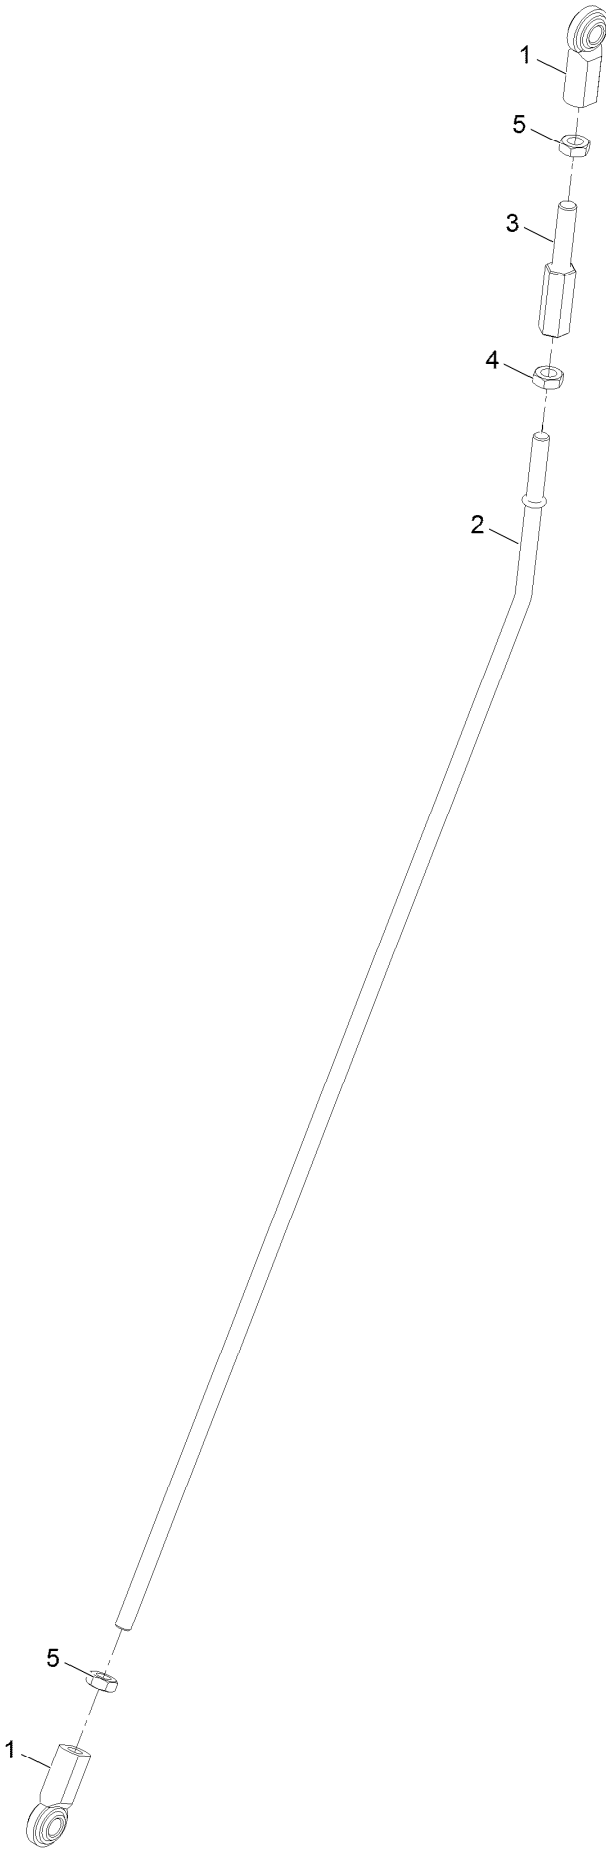

RH Motion Control Linkage Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	103-0608	2	Balljoint	4	3220-16	1	Nut-Jam 3/8-24 LH
2	135-1579	1	Linkage-Motion	5	3220-3	2	Nut-Jam 3/8-24
3	116-4755	1	Rod-Adjustment				


Tine Assembly

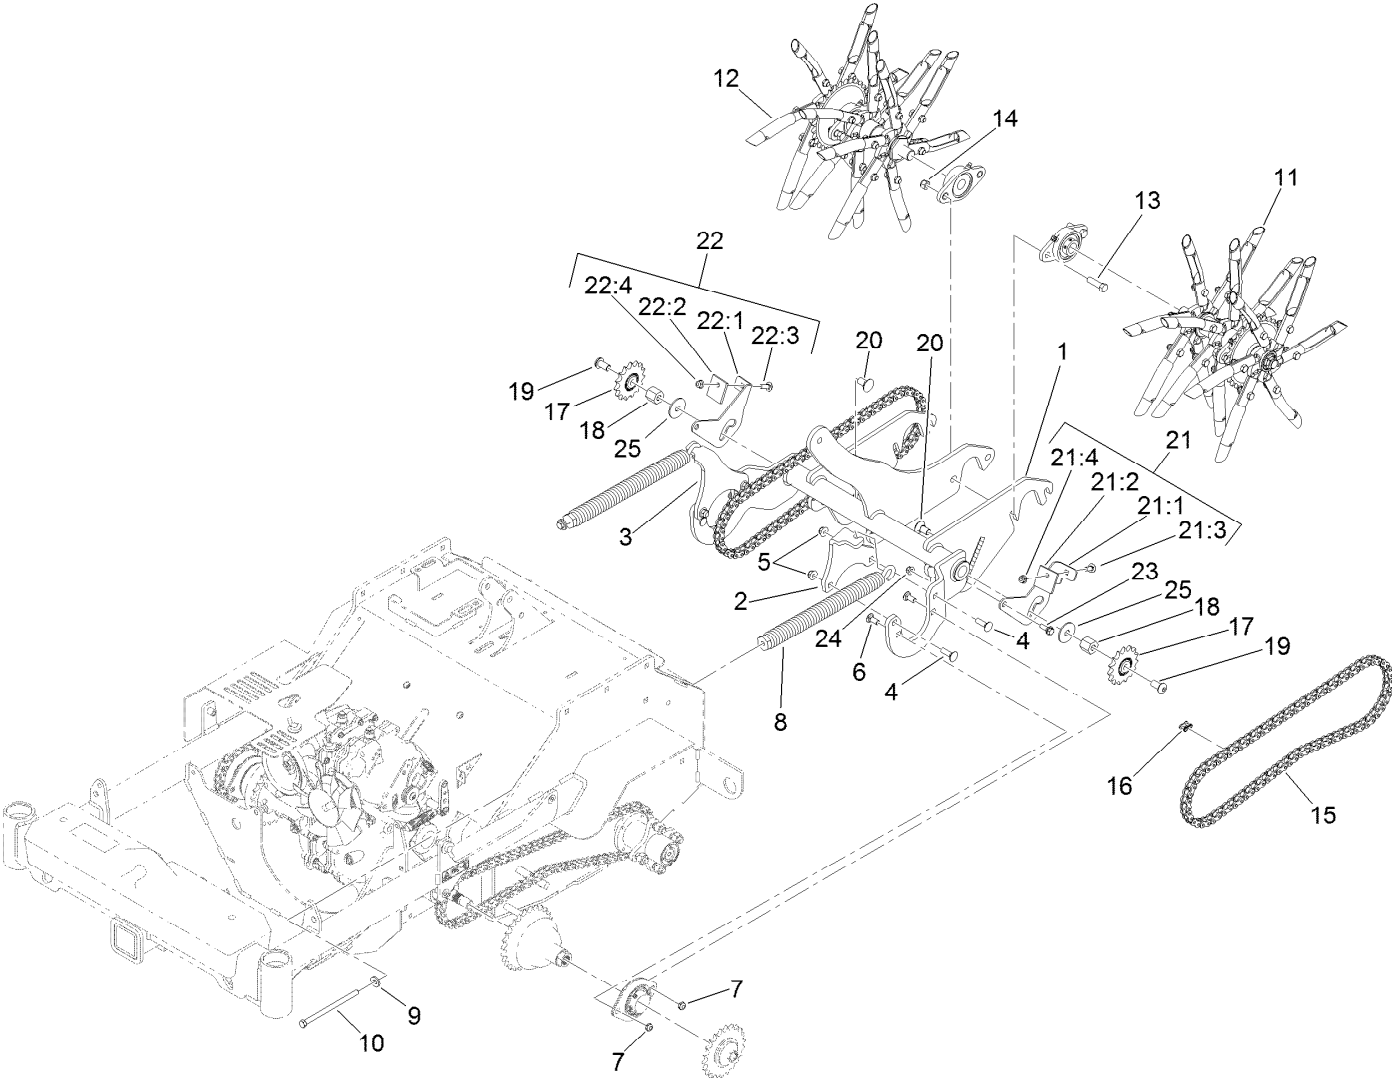

Tine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-0810-03	1	Lift-Tine	19	99-8446	2	Screw- Pan Socket Head
2	135-1060-03	1	Arm-Spring, LH	20	3233-9	2	Screw-CARR
3	135-1061-03	1	Arm-Spring, RH	21	135-2405	1	LH Debris Deflector ASM
4	3231-25	4	Bolt-CARR	21:1	135-2325	1	Bracket-Deflector, Debris (LH)
5	104-8301	4	Nut-HF, NI	21:2	135-2403	1	Deflector-Debris
6	3231-12	4	Bolt-CARR	21:3	3230-10	1	Bolt-CARR
7	3296-59	4	Nut-Lock, NI	21:4	104-8300	1	Nut-HF, NI
8	116-0000	2	Spring-Extension	22	135-2404	1	RH Debris Deflector ASM
9	98-5975	2	Washer-Belleville	22:1	135-2406	1	Bracket-Deflector, Debris (RH)
10	323-58	2	Bolt-TAP, HH	22:2	135-2403	1	Deflector-Debris
11	126-9550	1	LH Tine Wheel ASM	22:3	3230-10	1	Bolt-CARR
12	126-9551	1	RH Tine Wheel ASM	22:4	104-8300	1	Nut-HF, NI
13	324-6	2	Screw-HH	23	27-0410	2	Screw-Shoulder
14	126-9780	2	Nut-Lock	24	104-8300	2	Nut-HF, NI
15	135-1100	2	Chain-Roller	25	120-3856	2	Washer-Flat
16	116-6897	2	Link-Connecting				
17	126-9108	2	Sprocket-Idler, 15T				
18	135-2242	2	Spacer				


LH Tine Wheel Assembly

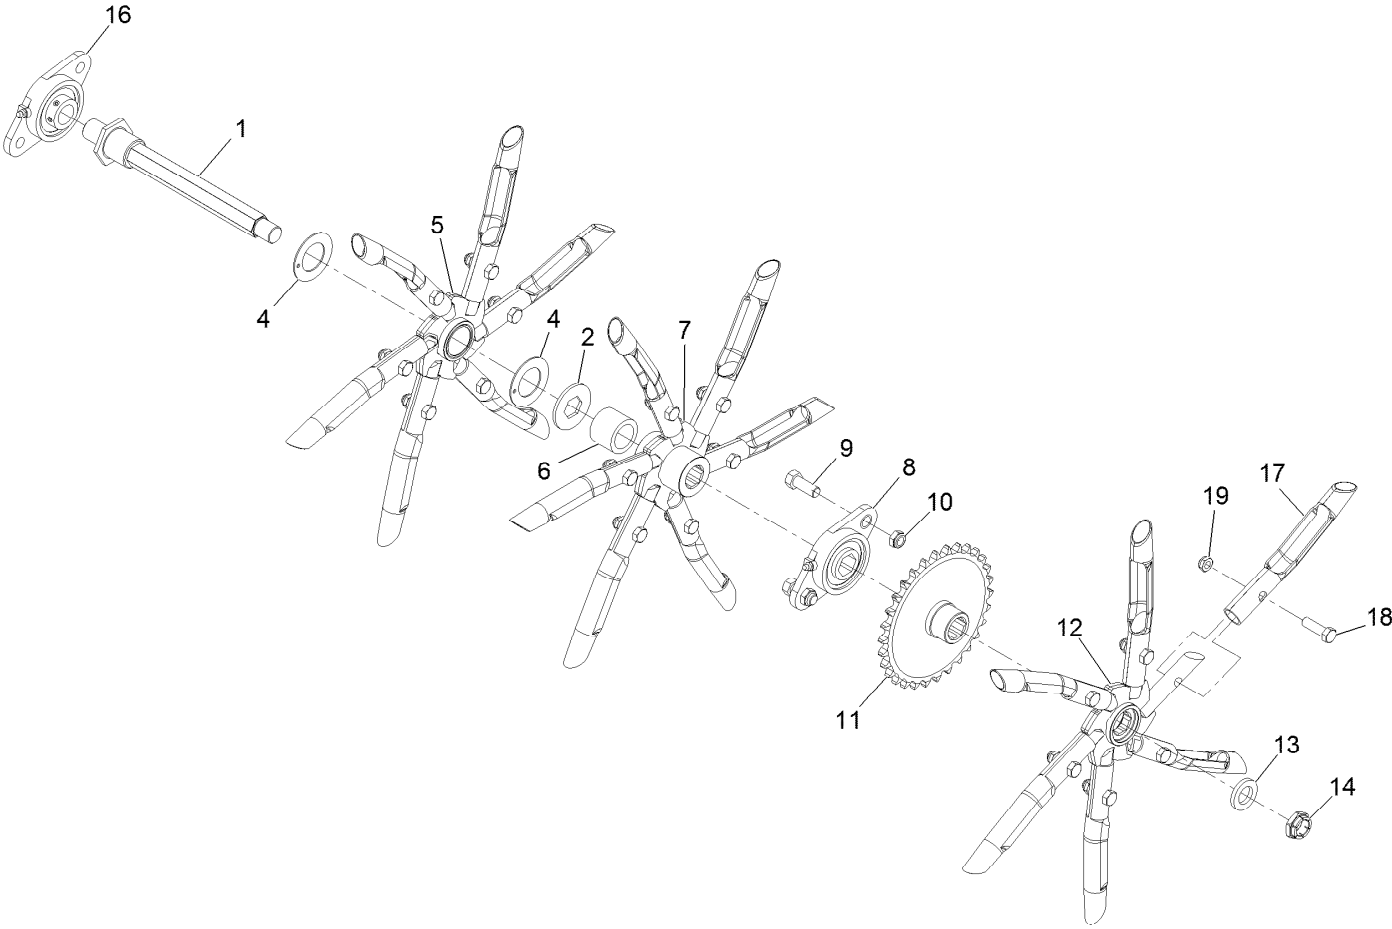

LH Tine Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-2980	1	Tine Shaft ASM	11	126-9624	1	Sprocket ASM
2	135-2977	1	Keeper-Tine, Floating	12	126-9630	1	Driven Spyder ASM
4	126-9619	2	Washer-Thrust	13	135-0502	1	Washer-Spacer
5	126-9540	1	Floating Spyder ASM	14	135-1528	1	Nut-Lock
6	126-9715	1	Spacer-Tine	16	126-9704	1	Bearing-Round Bore
7	126-9625	1	Driven Spyder ASM	17	126-2143	18	Tine-Coring (3/4 Inch)
8	126-9705	1	Bearing-Hex Bore	18	323-7	18	Screw-HH 3/8-16 X 1 1/4
9	126-9822	2	Screw-HH	19	3296-59	18	Nut-Nyloc 3/8-16 Thin
10	126-9780	2	Nut-Lock				


RH Tine Wheel Assembly

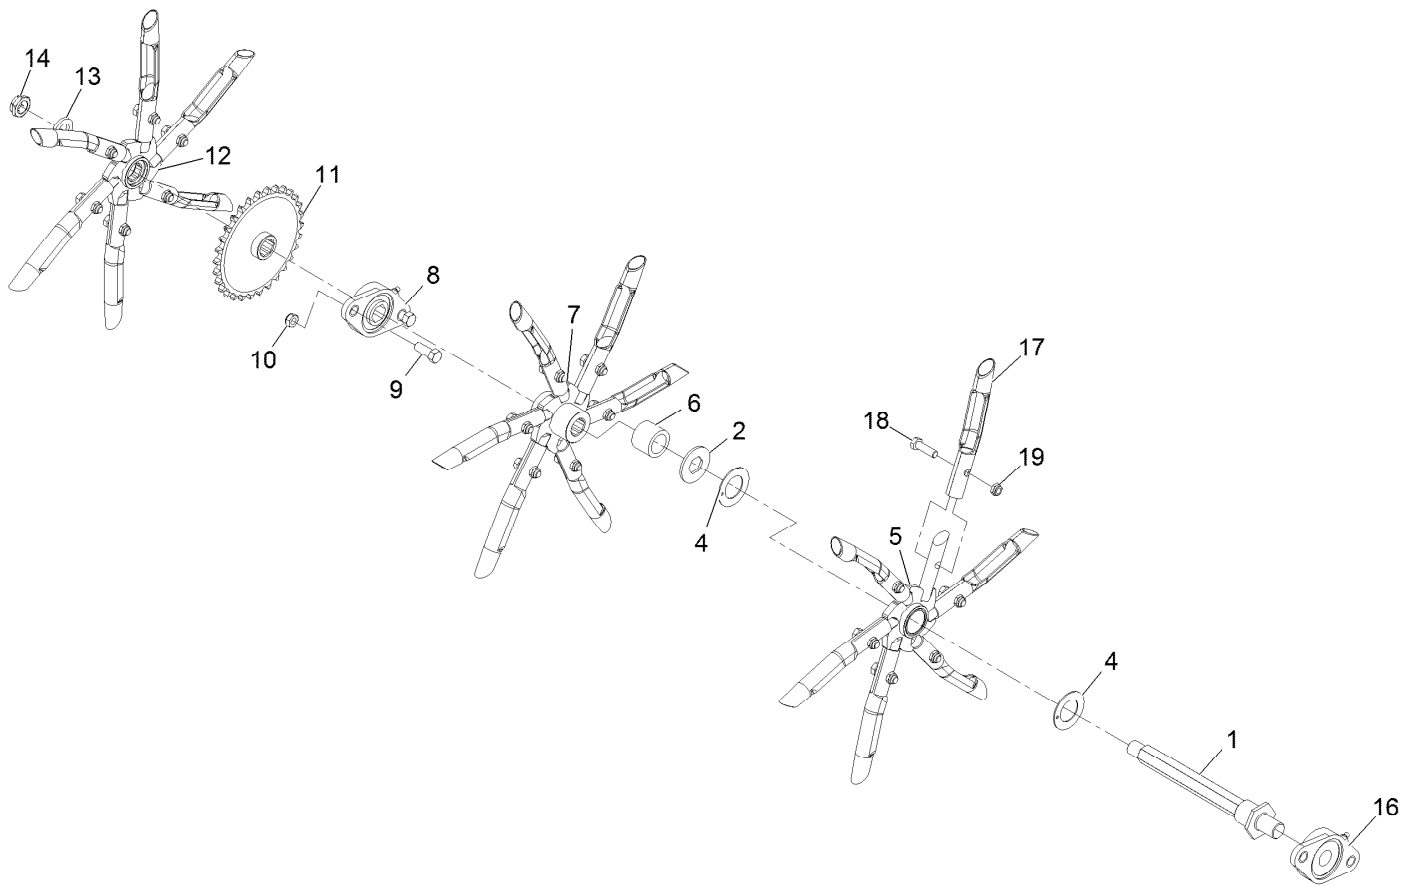

RH Tine Wheel Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-2980	1	Tine Shaft ASM	11	126-9624	1	Sprocket ASM
2	135-2977	1	Keeper-Tine, Floating	12	126-9630	1	Driven Spyder ASM
4	126-9619	2	Washer-Thrust	13	135-0502	1	Washer-Spacer
5	126-9540	1	Floating Spyder ASM	14	135-1528	1	Nut-Lock
6	126-9715	1	Spacer-Tine	16	126-9704	1	Bearing-Round Bore
7	126-9625	1	Driven Spyder ASM	17	126-2143	18	Tine-Coring (3/4 Inch)
8	126-9705	1	Bearing-Hex Bore	18	323-7	18	Screw-HH 3/8-16 X 1 1/4
9	126-9822	2	Screw-HH	19	3296-59	18	Nut-Nyloc 3/8-16 Thin
10	126-9780	2	Nut-Lock				

Auxiliary Hydraulic Assembly

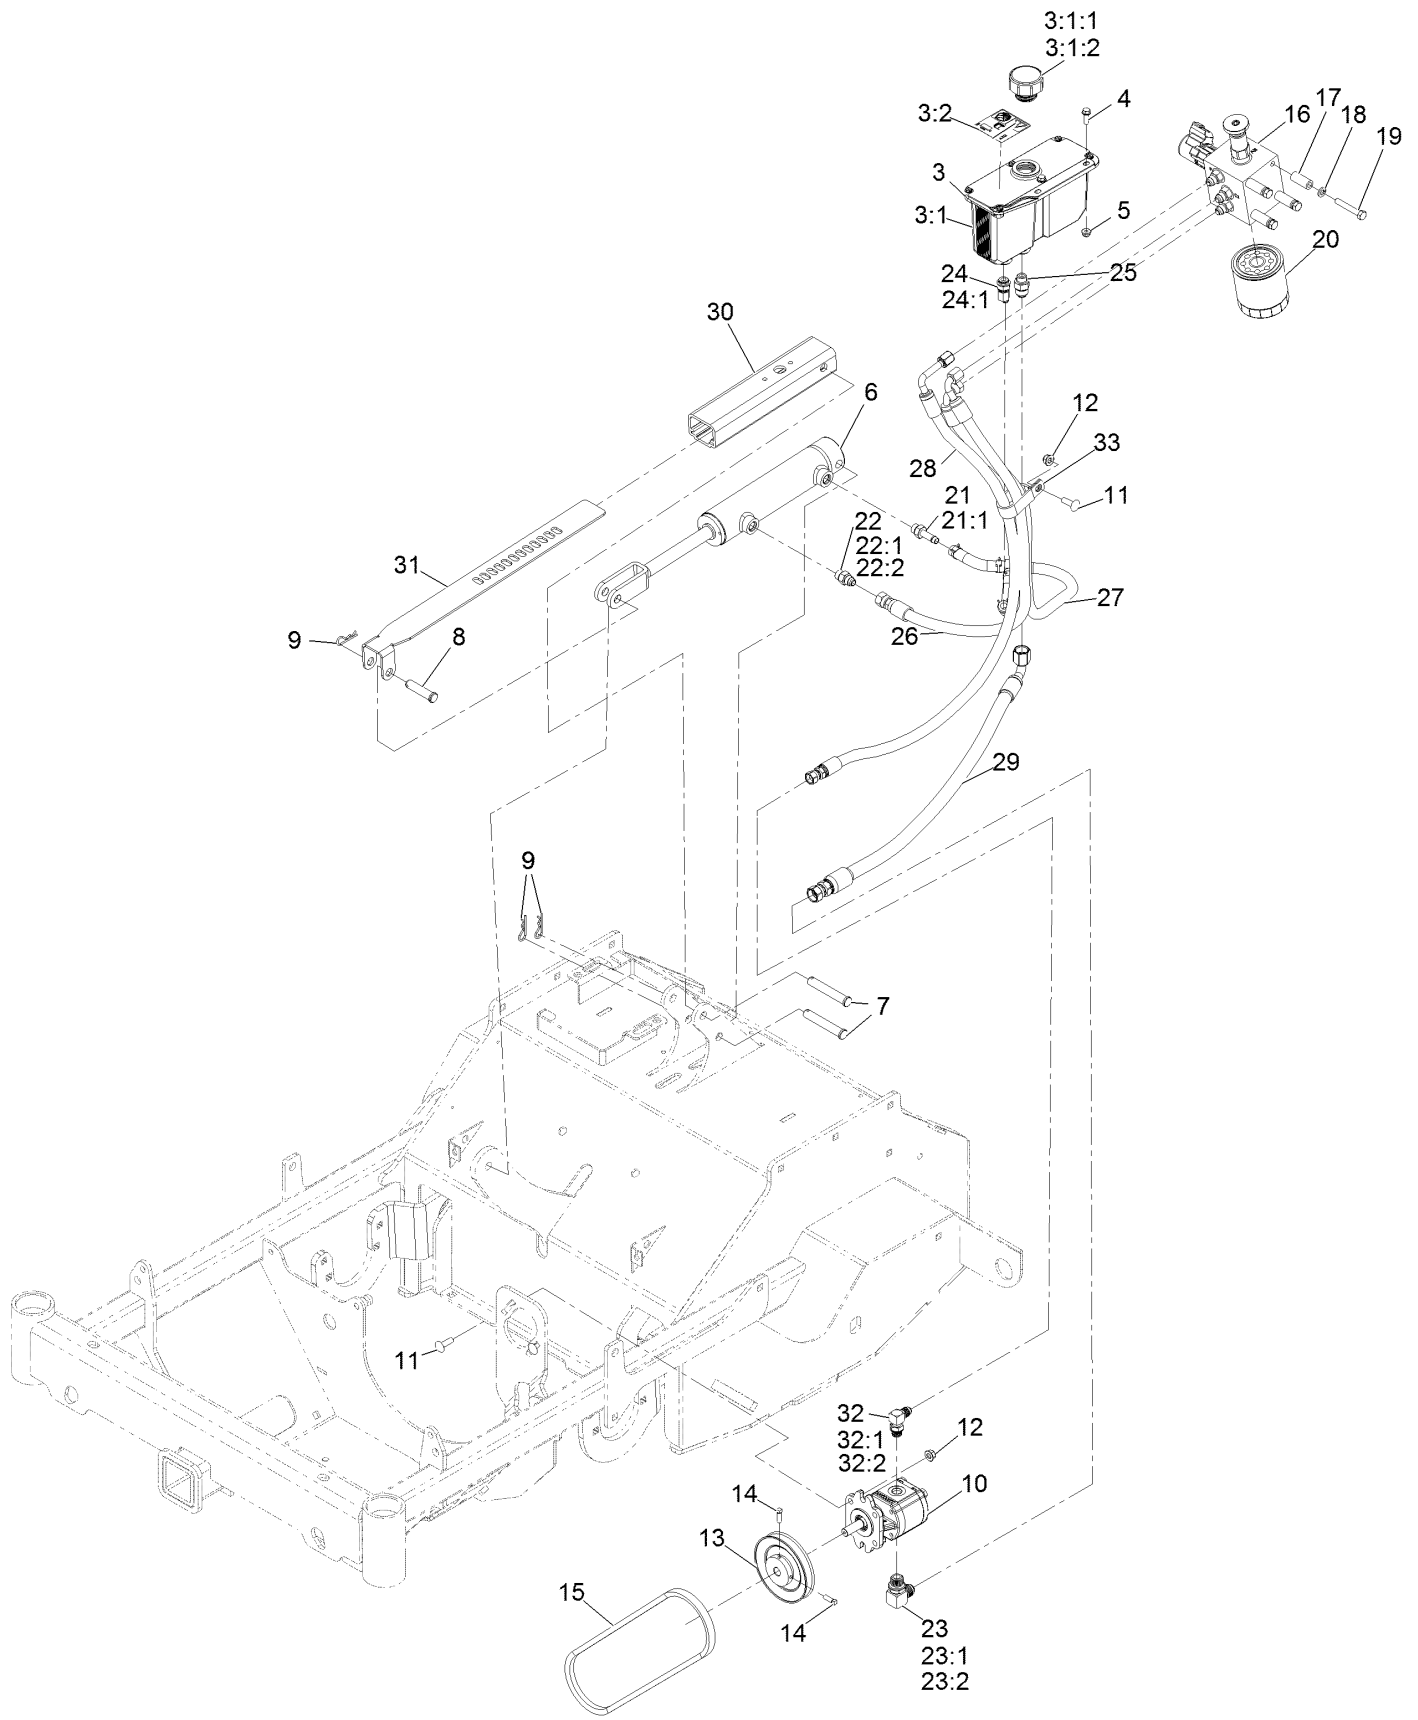


Auxiliary Hydraulic Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	116-2066	1	Reservoir ASM	21	103-1912	1	Adapter-Straight
3:1		1	Reservoir-HYD ●	21:1	237-42	1	O-Ring
3:1:1	103-1948	1	Cap-Reservoir, HYD	22	103-2156	1	Adapter-Straight
3:1:2	103-1949	1	Gasket-Cap	22:1	1-603921	1	O-Ring-SAE #6
3:2	115-4212	1	Decal-Warning	22:2	103-1020	1	O-Ring-37 Flare #6
4	32105-15	2	Screw-Machine 1/4-20 X 3/4	23	103-2153	1	Elbow-90°
5	104-7201	2	Nut-Nyloc 1/4-20 Flg	23:1	1-603920	1	O-Ring-SAE #8
6	126-9861	1	Cylinder-Hydraulic	23:2	1-603992	1	O-Ring-37 Flare #8
7	283-55	2	Pin-Clevis	24	103-1807	1	Fitting-Barbed, 45 DEG
8	42195	1	Pin-Clevis	24:1	237-42	1	O-Ring
9	3290-467	3	Pin-Hair	25	126-9952	1	Fitting-STR
10	126-9796	1	Pump-Hydraulic	26	126-9468	1	Hydraulic Hose ASM
11	3230-22	3	Bolt-Carriage 5/16-18 X 1 Sp	27	126-9469	1	Hydraulic Hose ASM
12	104-8300	3	Nut-Nyloc 5/16-18 Flg	28	126-9470	1	Hydraulic Hose ASM
13	116-6667	1	Pulley	29	126-9471	1	Hydraulic Hose ASM
14	3241-6	2	Screw-SQH	30	135-1224	1	Housing-Depth Control
15	126-9803	1	Belt-V	31	135-1385	1	Bracket-Depth Control
16	126-9321	1	Manifold ASM	32	103-2155	1	Adapter-90°
17	103-0384	4	Spacer	32:1	1-603921	1	O-Ring-SAE #6
18	3253-4	4	Washer-Lock 5/16	32:2	103-1020	1	O-Ring-37 Flare #6
19	322-10	4	Screw-HH 5/16-18 X 2	33	2412-137	1	Clamp-R, Double
20	109-4180	1	Element, Oil Filter				

● Not serviced separately


Manifold Assembly No. 126-9321

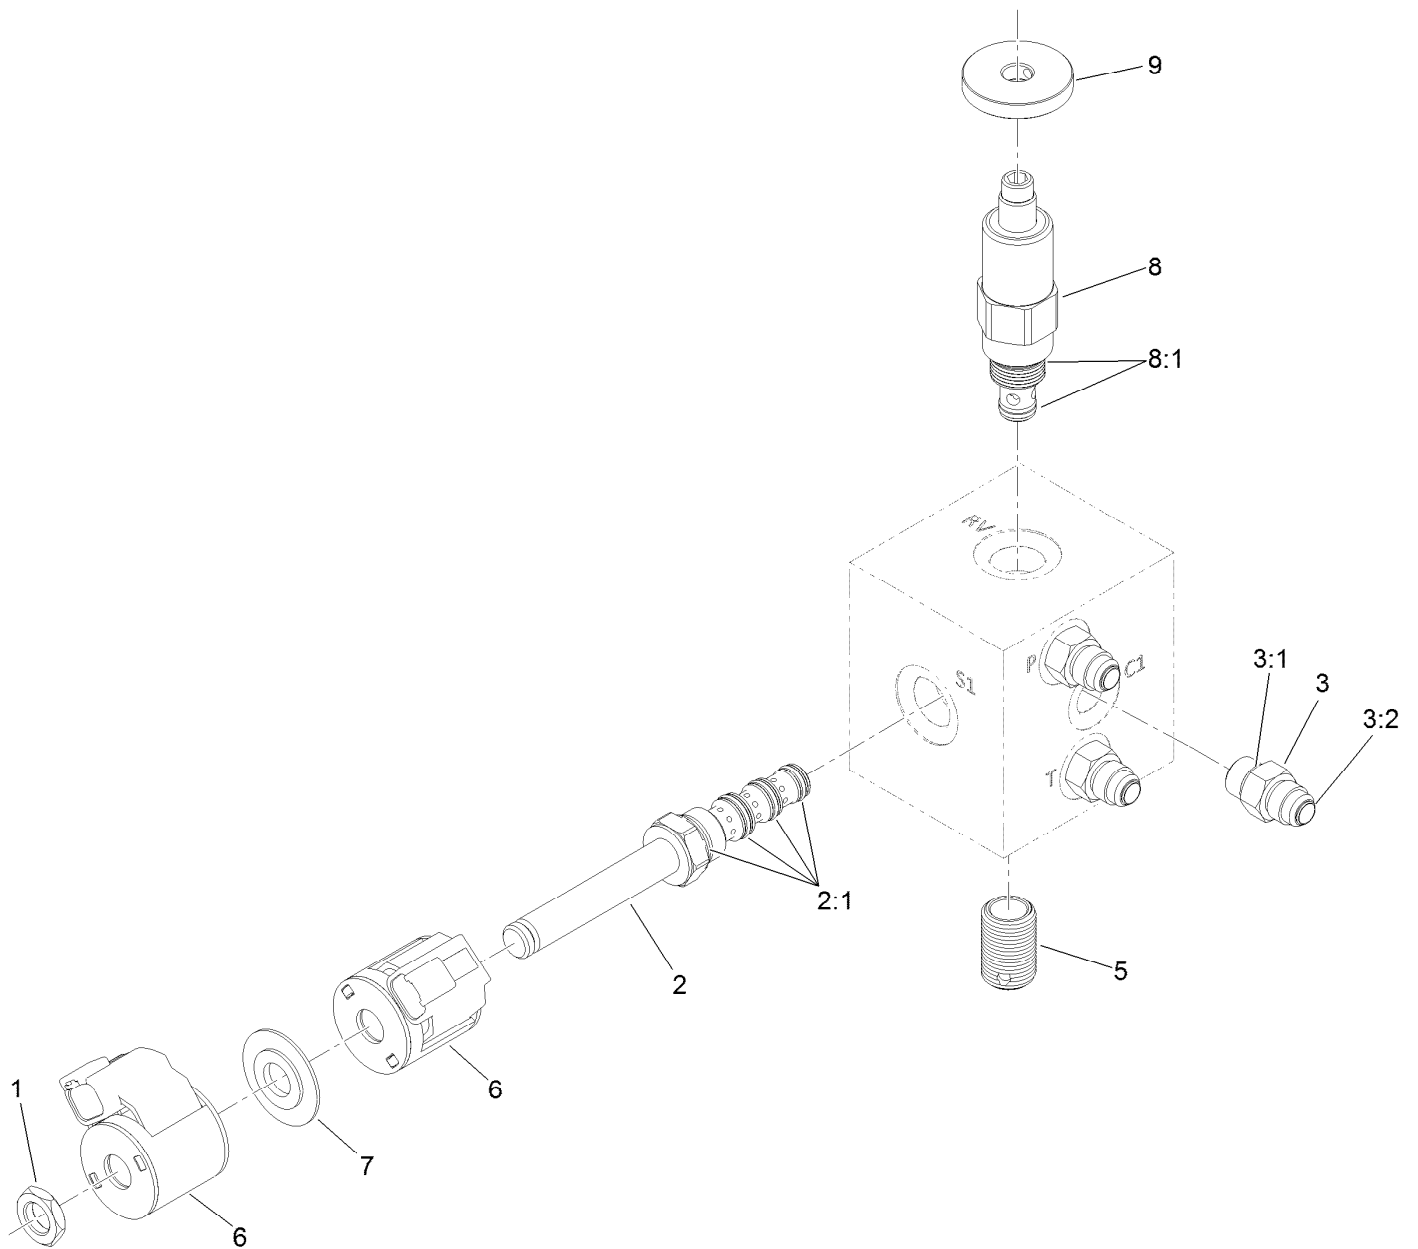

Manifold Assembly No. 126-9321 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-2634	1	Nut-Coil	5	127-3885	1	Nipple-Filter
2	126-9379	1	Valve-Solenoid	6	112-0197	2	E Coil-12V DC
2:1	112-6520	1	Seal Kit	7	120-2586	1	Spacer-Coil
3	103-2156	3	Fitting-Straight	8	135-1855	1	Valve-Relief, Poppet Type
3:1	1-603921	1	O-Ring	8:1	126-9388	1	Seal Kit
3:2	103-1020	1	O-Ring	9	116-9396	1	Knob (1.5 DIA)


Ground Drive Assembly

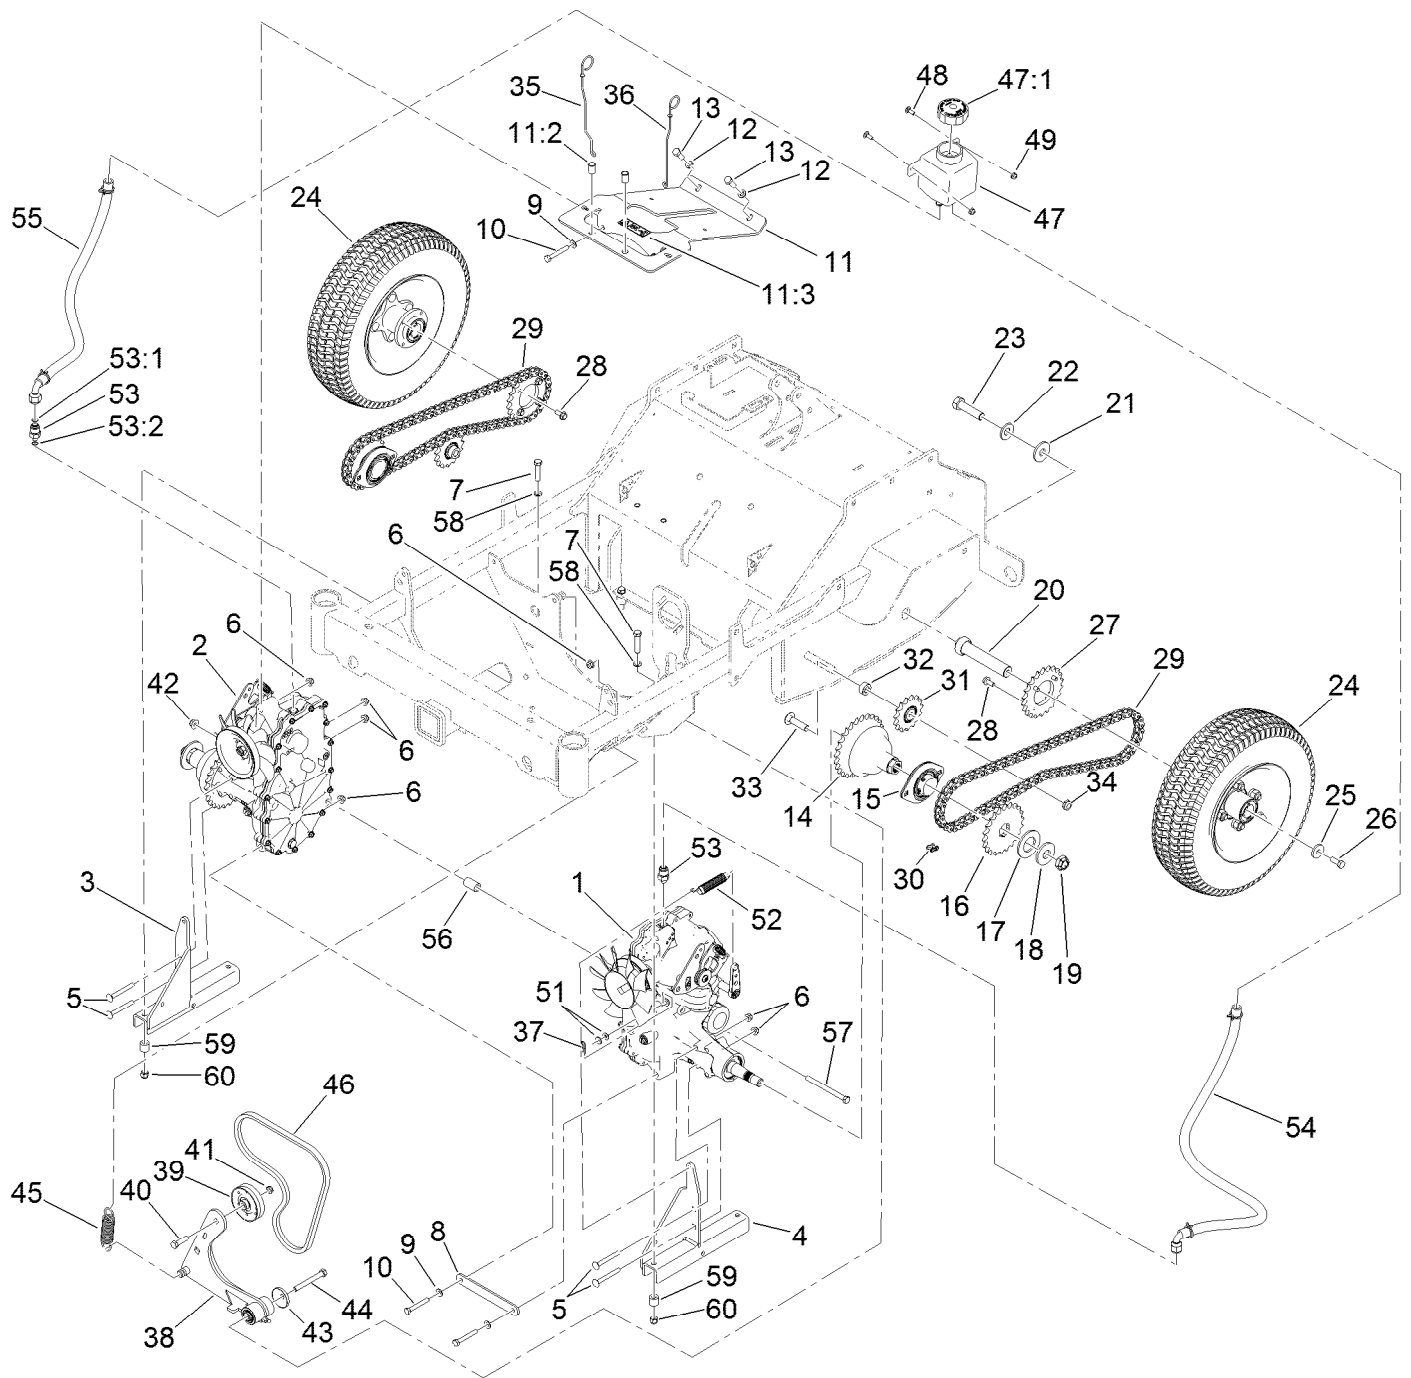

Ground Drive Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-6970	1	Hydro-Zt3100, LH	31	126-9108	2	Sprocket-Idler, 15T
2	142-6971	1	Hydro-Zt3100, RH	32	126-9498	2	Spacer
3	135-2004-03	1	Mount-Hydro, RH	33	3233-4	2	Screw-CARR
4	135-2006-03	1	Mount-Hydro, LH	34	3296-45	2	Nut-Hex
5	3230-9	4	Screw-CARR	35	135-0683	1	Rod-Bypass, LH
6	104-8300	8	Nut-HF, NI	36	135-0685	1	Rod-Bypass, RH
7	323-52	4	Screw-HH	37	3290-307	2	Pin-Cotter
8	126-9092-03	1	Crossmember-Transmission	38	126-9116	1	Idler Arm ASM
9	1-303334	4	Washer-Spring	39	116-9715	1	Pulley-Idler
10	132-3838	4	Screw-HH	40	323-29	1	Screw-HH
11	135-2497	1	Support-Cover	41	3296-59	2	Nut-Lock, NI
11:2	32148-10	2	Nut-Clinch	42	104-8301	1	Nut-HF, NI
11:3	121-6161	1	Decal-Danger	43	103-2916	1	Guard-Top
12	3253-21	2	Washer-Lock	44	323-20	1	Screw-HH
13	323-6	2	Screw-HH	45	1-603402	1	Spring-Extension
14	135-0537	2	Hub-Bell	46	126-9834	1	Belt-V, Cogged
15	135-1056	2	Bearing-Flanged	47	109-2250	1	Tank-HYD
16	135-0347	2	Sprocket	47:1	109-3320	1	Cap-Reservoir, HYD
17	135-0360	2	Washer-Spacer	48	3229-1	2	Screw-CARR
18	26-1990	2	Washer-Belleville	49	104-7201	2	Nut-HF, NI
19	116-2839	2	Nut-Lock	51	119-8952	4	Washer
20	135-1895	2	Axle-Wheel, Drive	52	109-7124	2	Spring-Extension
21	135-1894	2	Washer-Spacer	53	135-3138	2	Fitting-Straight
22	125-1736	2	Washer-Belleville	53:1	237-78	1	O-Ring
23	327-7	2	Screw-HH	53:2	1-603992	1	O-Ring
24	142-4438	2	Wheel And Tire ASM	54	135-0061	1	Hose ASM
25	53-6380	3	Washer-Flat	55	135-0062	1	Hose ASM
26	3235-22	2	Screw-HH, Lock	56	135-0124	1	Spacer
27	126-9075	2	Sprocket	57	323-23	1	Screw-HH
28	98-9940	8	Screw-HHF	58	106-5592	4	Spacer-Brake, Parking
29	135-1100	2	Chain-Roller	59	98-8895	4	Spacer
30	116-6897	2	Link-Connecting	60	112-0236	4	Nut-Lock

Wheel and Tire Assembly

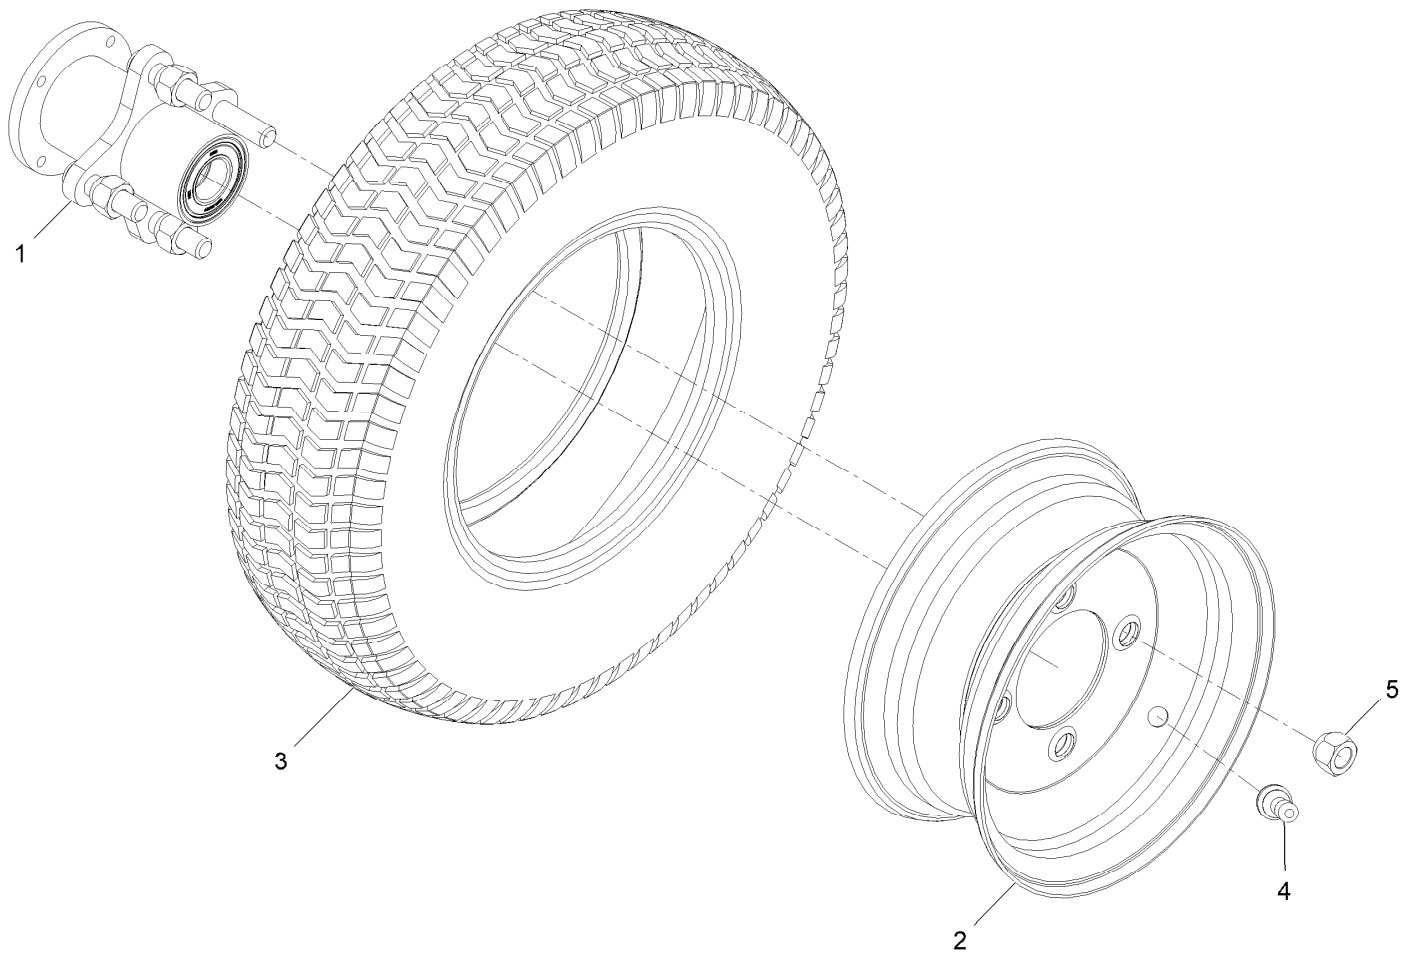


Wheel and Tire Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Wheel Hub ASM ●	4	232-27	1	Stem-Valve
2		1	Rim ●	5	242-50	4	Nut-Lug
3		1	Tire ●				

● Not serviced separately

Idler Arm Assembly No. 126-9116

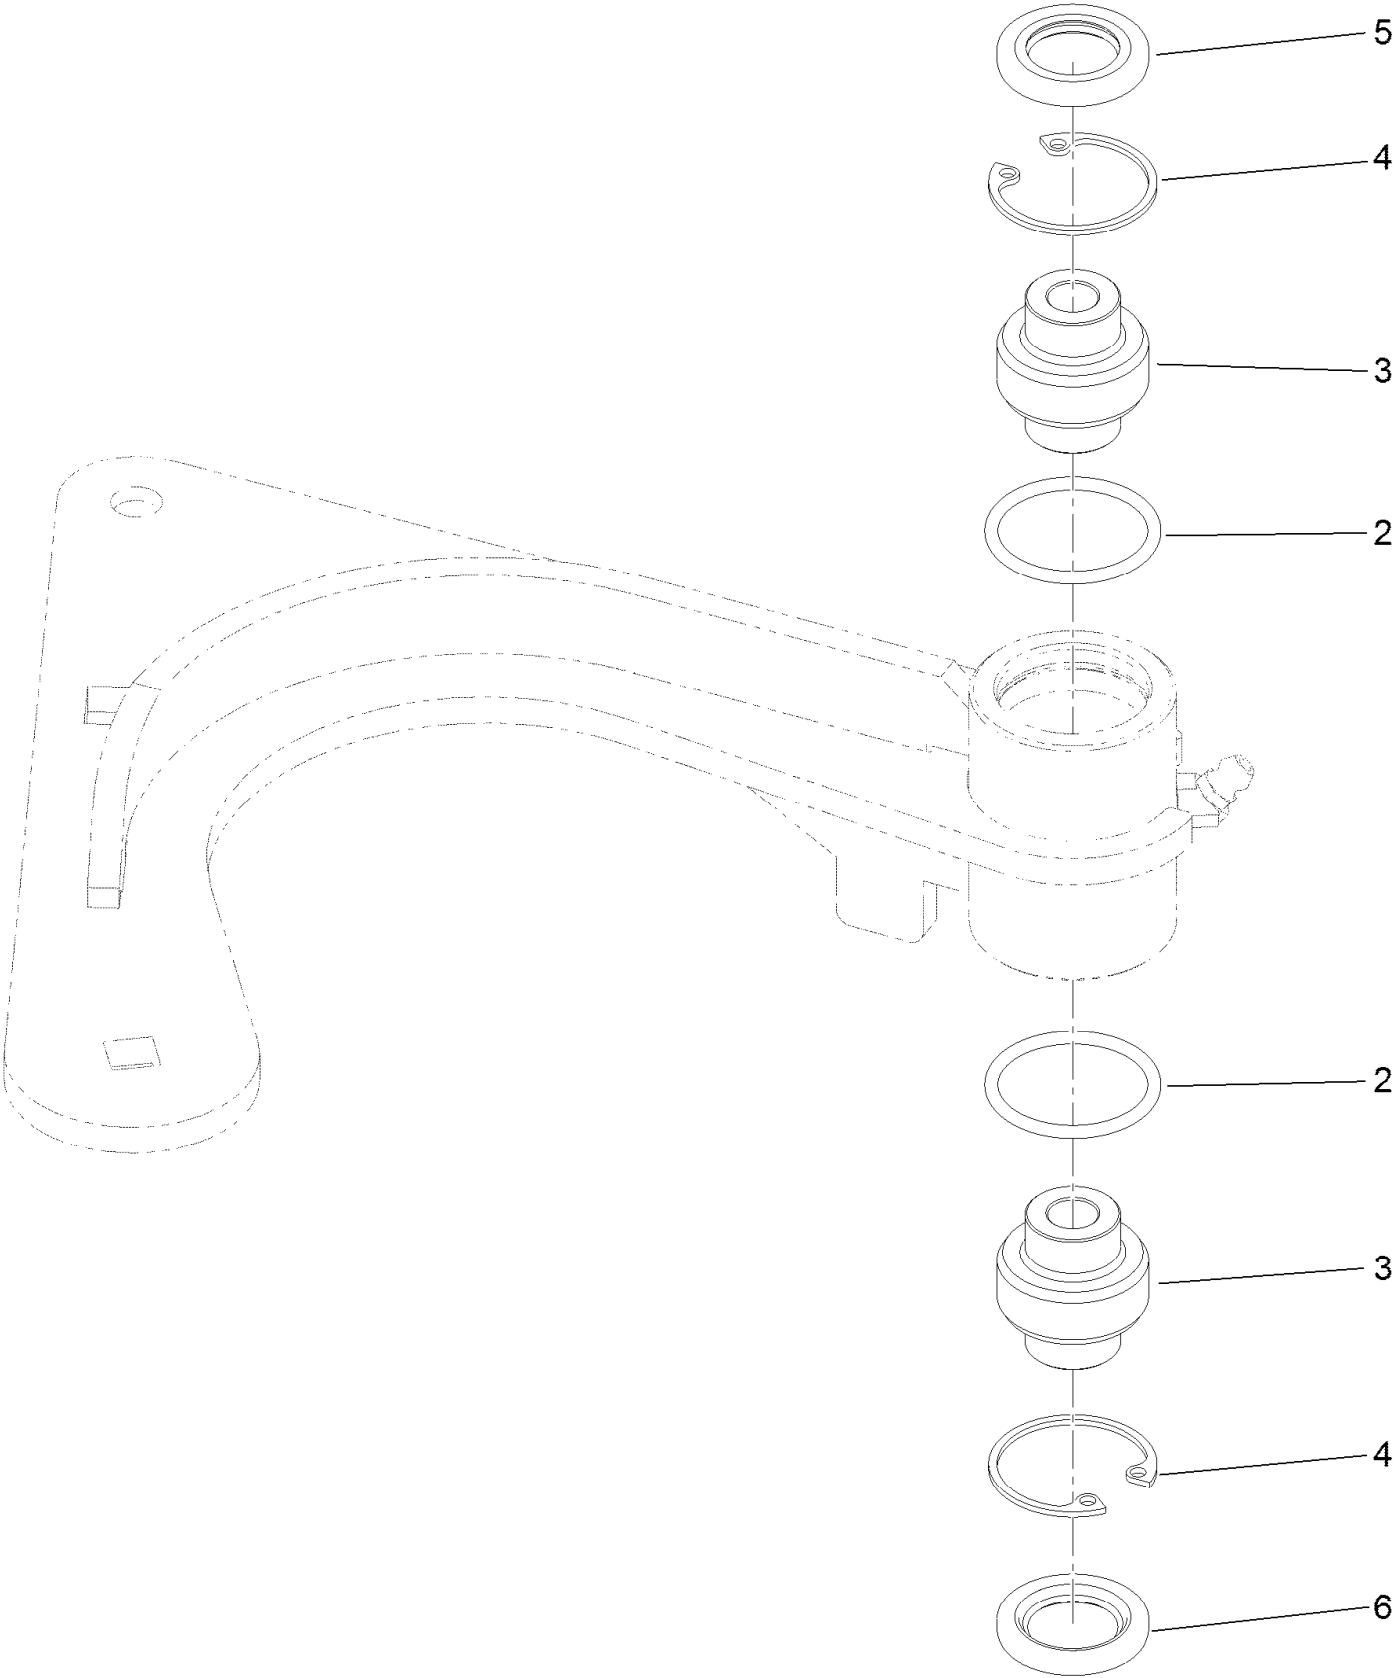


Idler Arm Assembly No. 126-9116 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	106-7159	2	O-Ring
3	103-3504	2	Bearing-Spherical
4	32120-10	2	Ring-Snap

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
5	103-3505	1	Seal-Lip, Double
6	103-3506	1	Seal-Lip, Single


Engine Assembly

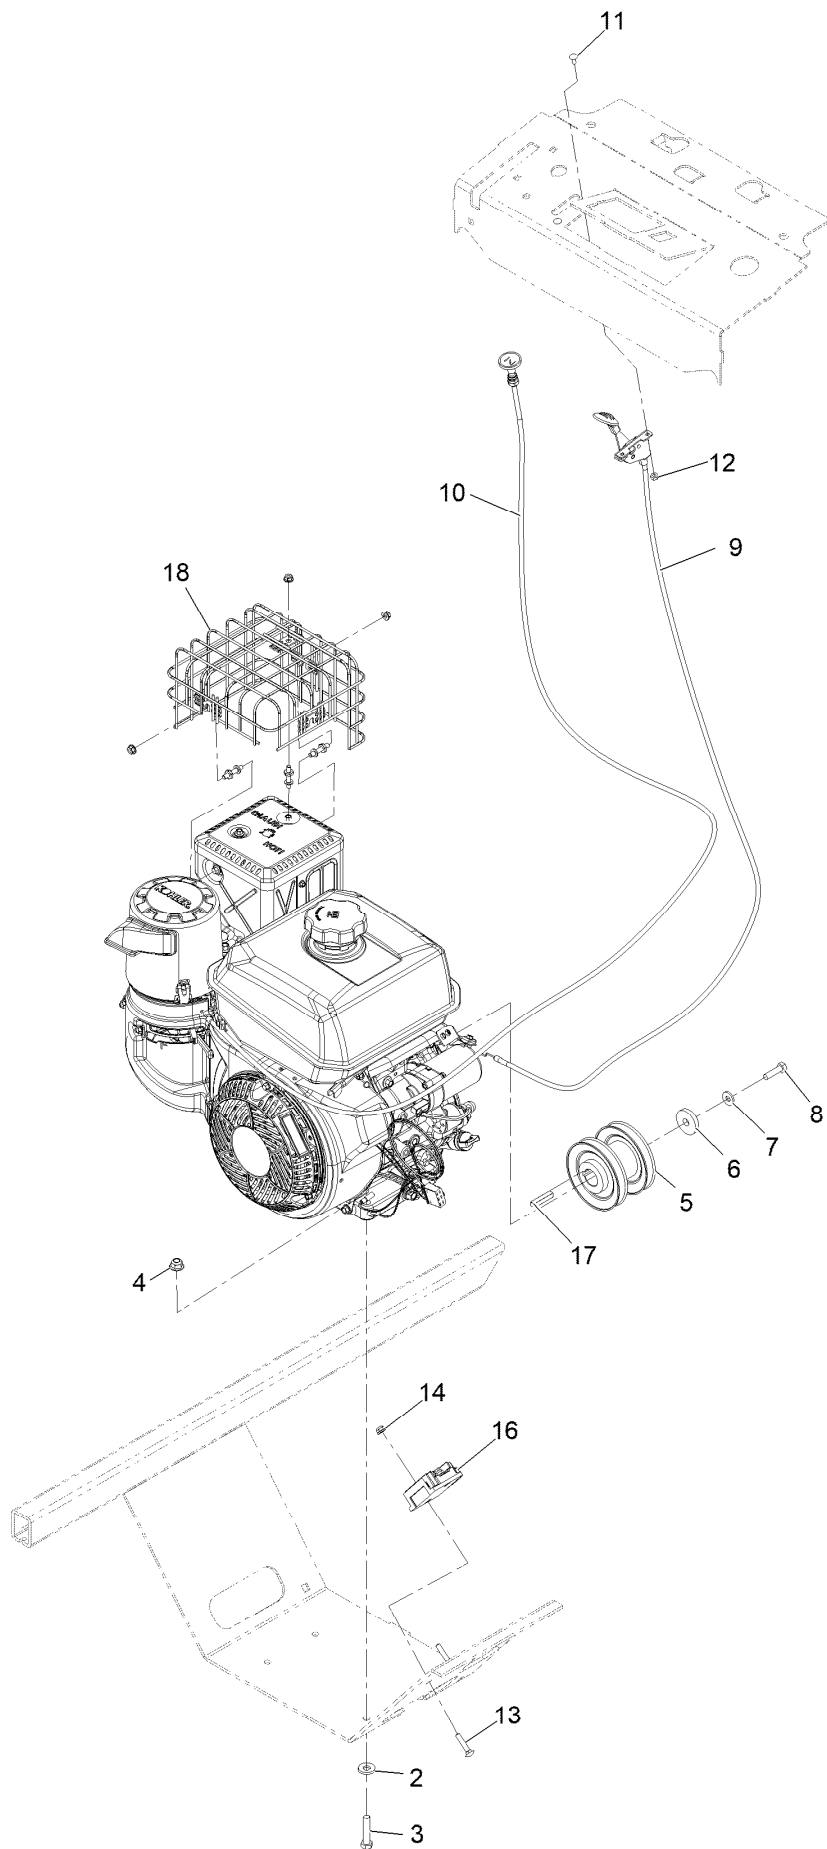

Engine Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	98-5975	4	Washer-Spring Disc 3/8	10	135-2133	1	Cable-Choke, Push/Pull
3	323-9	4	Screw-HH 3/8-16 X 1 3/4	11	1-807513	2	Bolt-Carriage #10-24 X 1/2
4	104-8301	4	Nut-Nyloc 3/8-16 Flg	12	3296-2	2	Nut-Nyloc #10-24
5	126-9142	1	Pulley	13	3229-3	2	Bolt-Carriage 1/4-20 X 1 1/4
6	1-543610	1	Washer	14	104-7201	2	Nut-Nyloc 1/4-20 Flg
7	1-303334	1	Washer-Spring Disc 5/16	16	126-9904	1	Regulator
8	33114-030	1	Screw-HH M8-1.25 X 30Mm	17	135-3980	1	Key-Square, 7Mm
9	109-3958	1	Control-Throttle	18	135-3366	1	Kit-Muffler Birdcage


Electrical Assembly

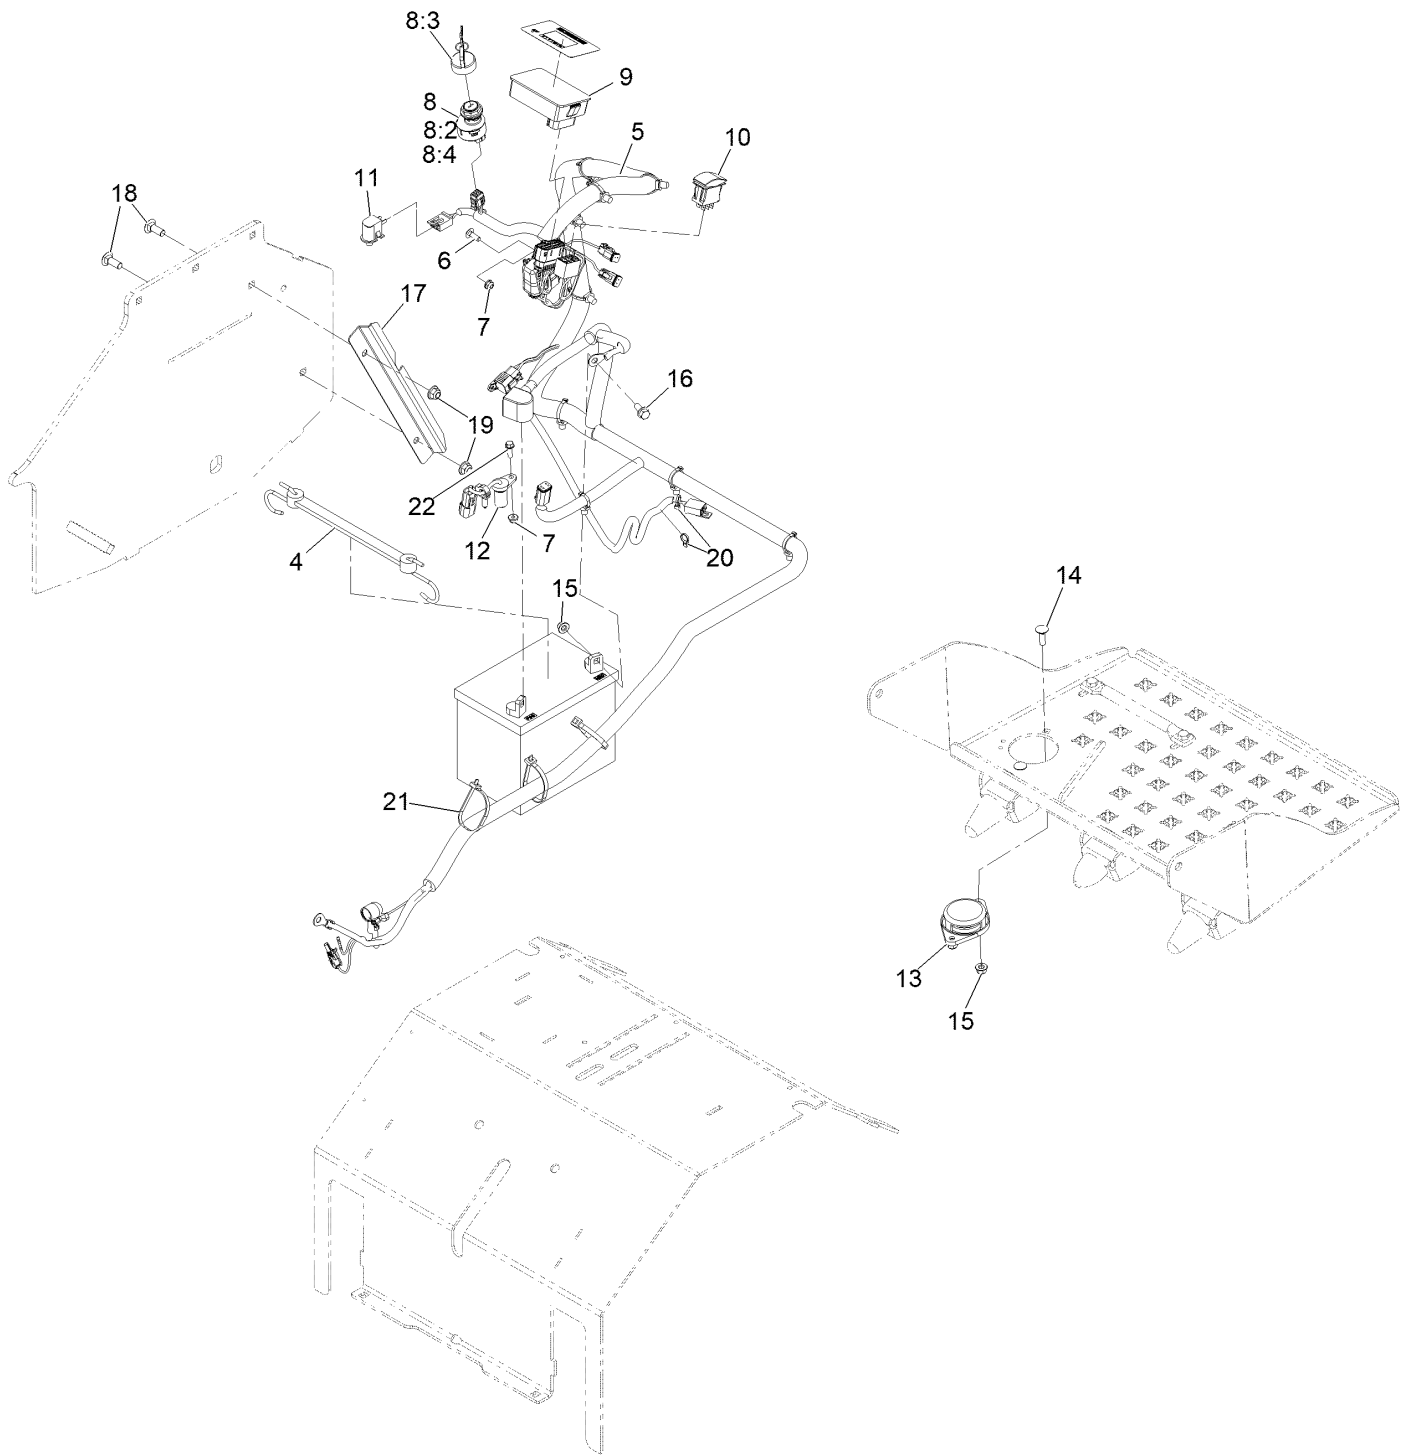

Electrical Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
4	104-2466	1	Holddown-Battery	12	135-0101	1	Sensor-Quadrature
5	126-9535	1	Harness-Wire	13	92-6282	1	Switch-Seat
6	3229-1	1	Bolt-Carriage 1/4-20 X 3/4	14	3230-2	2	Bolt-Carriage 5/16-18 X 1
7	104-7201	2	Nut-Nyloc 1/4-20 Flg	15	104-8300	4	Nut-Nyloc 5/16-18 Flg
8	126-6285	1	Ignition Switch ASM	16	3234-5	2	Screw-HH Flg 5/16-18 X 3/4
8:2	108-8660	1	Nut-Mounting	17	126-9701-03	1	Guard-Harness
8:3	106-5270	1	Ignition Key Set	18	3231-2	2	Bolt-Carriage 3/8-16 X 1
8:4	108-8659	1	Washer-Backup	19	104-8301	2	Nut-Nyloc 3/8-16 Flg
9	135-2500	1	Hour Meter ASM	20	1-303287	2	Tie-Cable 5 1/2 (Small)
10	100-1535	1	Switch-Rocker, (On)-Off-(On)	21	3290-378	3	Tie-Cable
11	82-2190	1	Switch	22	32105-15	1	Screw-Machine 1/4-20 X 3/4

Wire Harness Assembly No. 126-9535

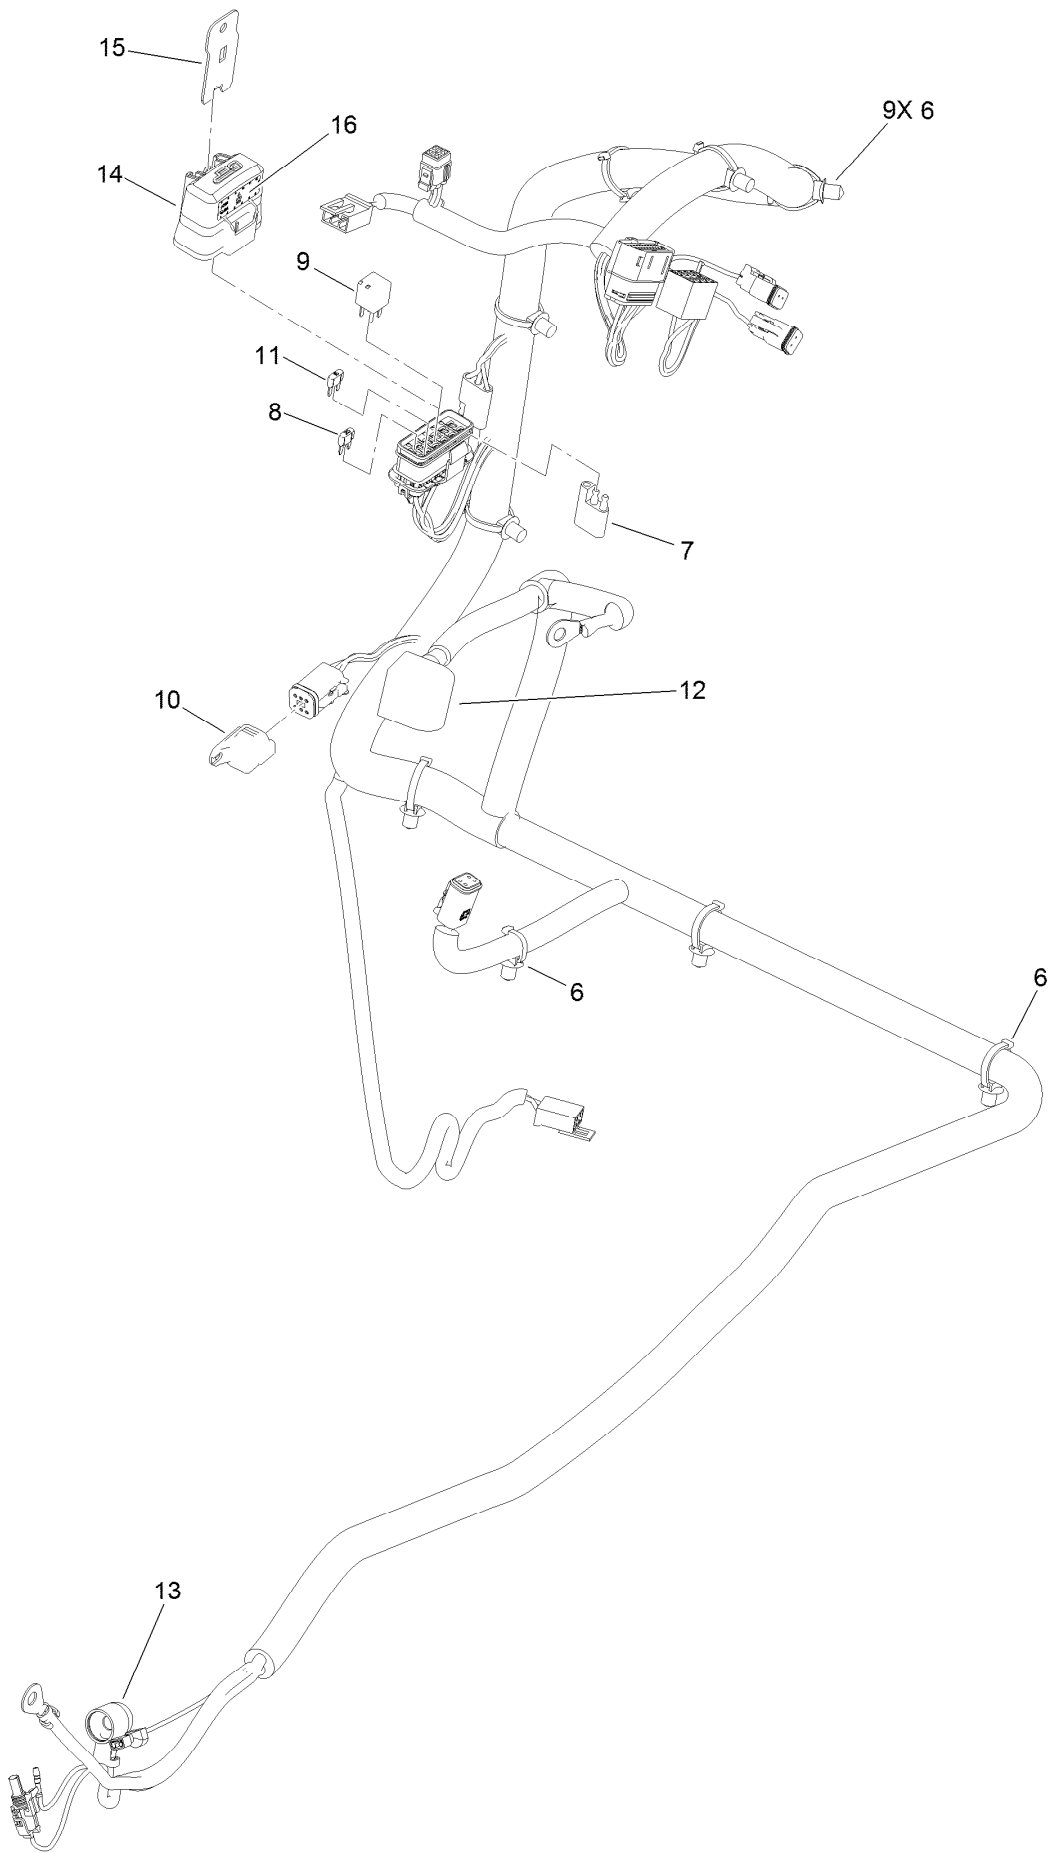

Wire Harness Assembly No. 126-9535 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
6	32180-030	9	Clip-Tie
7	32180-197	1	Cap-Plug
8	121-8868	1	Fuse-Mini Blade, 20 Amp
9	126-3991	1	Relay-Micro
10	32180-156	1	Cap-Plug, 6 Way
11	121-8867	1	Fuse-Mini Blade, 15 Amp

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
12	126-8876	1	Insulator-Battery
13	1-543393	1	Insulator-Solenoid
14	32180-176	1	Cover-Block, Fuse
15	32180-177	1	Clip-Mounting
16	126-7875	1	Decal-Fuse

Notes:

Notes:

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____



Z Turf Equipment is part of the Exmark® family of products.
©2021 Exmark Mfg. Co., Inc. All Rights Reserved. Printed in the USA.
415 Industrial Row • Beatrice, NE 68310 • (402) 223-6375 • Fax (402) 223-5489

www.zturfequipment.com

