




142-5462

SPREADER ATTACHMENT

Model No. 142-5462—Serial No. 411294212 and Up

Picture below may not reflect actual product.

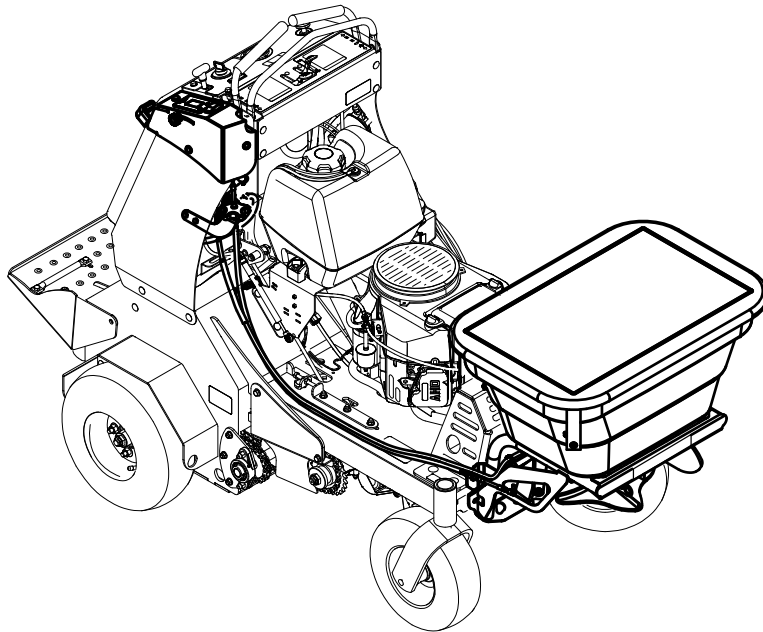

Parts Manual

Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.


Contents

Spreader Assembly 4

Spreader Hopper Assembly 6

Spreader Controller Assembly 8

Spreader Assembly

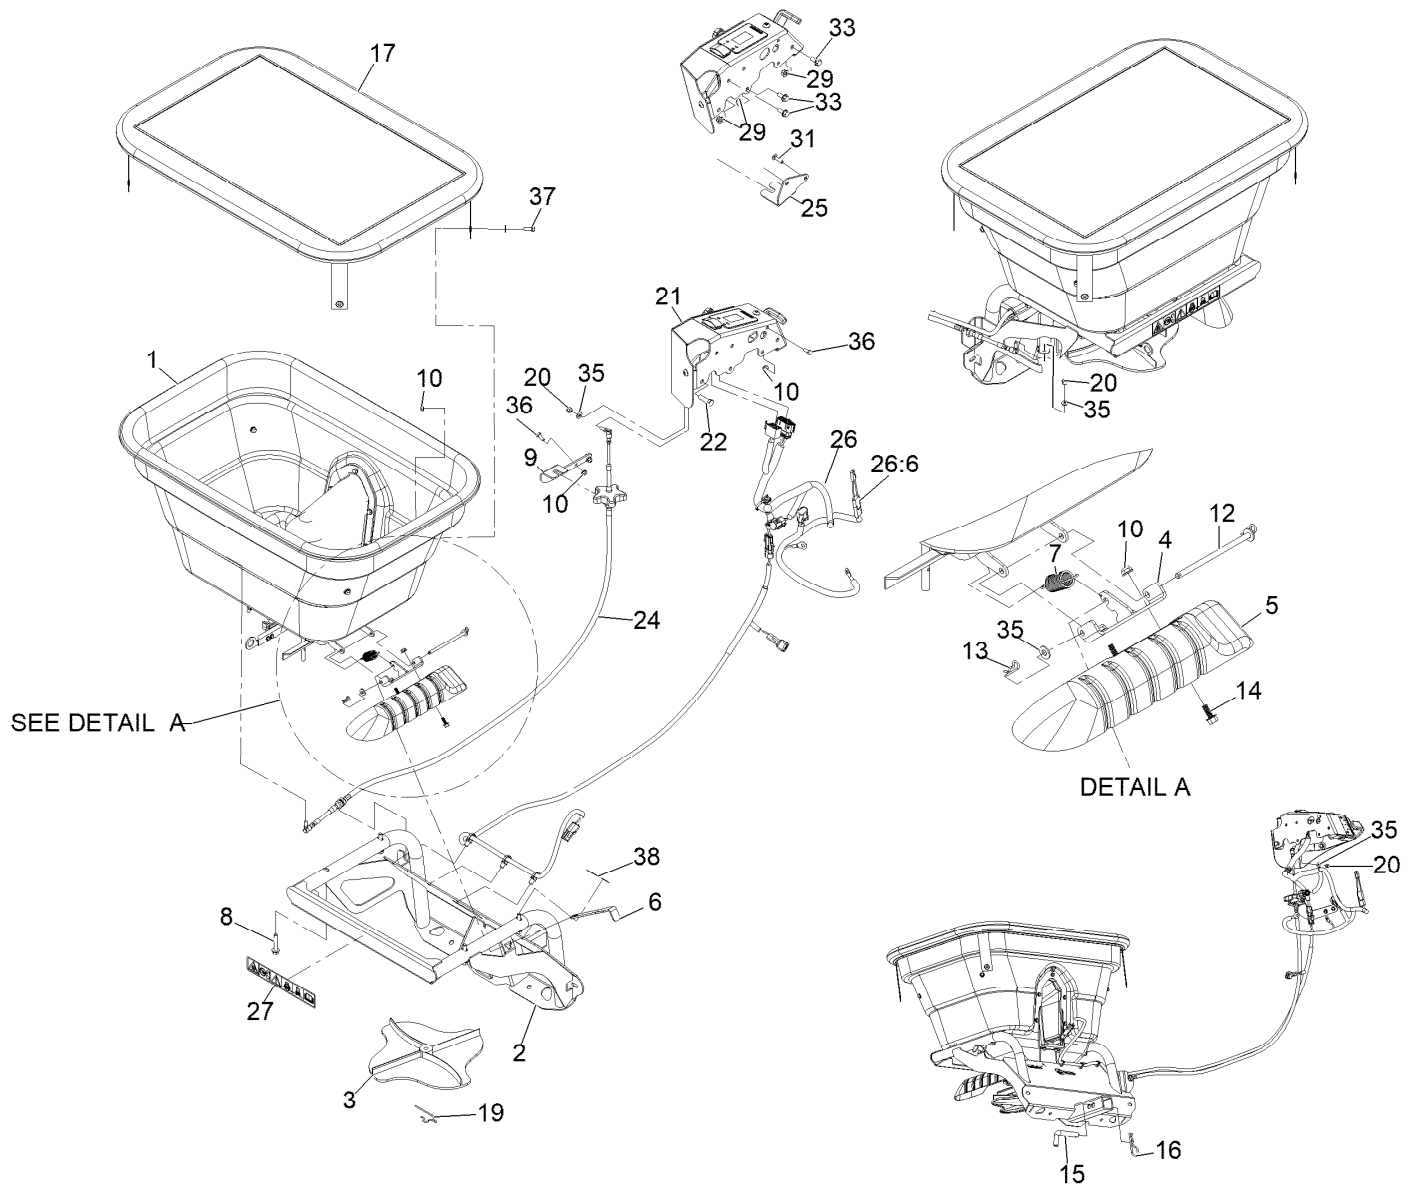


Spreader Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1		1	Asy-Spreader Hopper (Exmark)●	17	126-2815	1	Cover-Hopper
2	135-0193-03	1	Spreader Hopper Frame ASM	19	142-3541	1	Clip-Spinner
3	142-3506	1	Spinner-Spreader	20	3296-3	2	Nut-Nyloc 1/4-28
4	135-1514-03	1	Bracket-Deflector	21		1	Spreader Controller ASM●
5	126-8623	1	Deflector	22	323-7	1	Screw-HH 3/8-16 X 1 1/4
6	126-8625	1	Strap-Engagement	24	135-0841	1	Cable-Push, Pull
7	92-7305	1	Spring-Extension	25	135-0857-03	1	Bracket-Cable
8	94-5780	4	Screw-HWH	26	135-0700	1	Harness
9	126-8634-03	1	Bracket-Cable	26:6	135-0878	1	Connector
10	104-7201	2	Nut-Nyloc 1/4-20 Flg	27	126-4994	1	Decal-Down, Tie
12	126-8636	1	Pin-Pivot	29	104-8300	3	Nut-Nyloc 5/16-18 Flg
13	1-806003	2	Hairpin-Cotter	31	3229-2	1	Bolt-Carriage 1/4-20 X 1
14	99-6810	2	Screw-HH 1/4-20 X 5/8	33	3234-47	3	Screw-HH Flg 5/16-18 X 3/4
15	126-8637	1	Pin-Hitch	35	3256-22	4	Washer-1/4 SAE
16	3290-256	1	Pin-Hair	36	321-3	3	Screw-HH 1/4-20 X 5/8
				37	32105-15	4	Screw-Machine 1/4-20 X 3/4
				38	133-8061	1	Decal-Warning

● Not serviced separately


Spreader Hopper Assembly

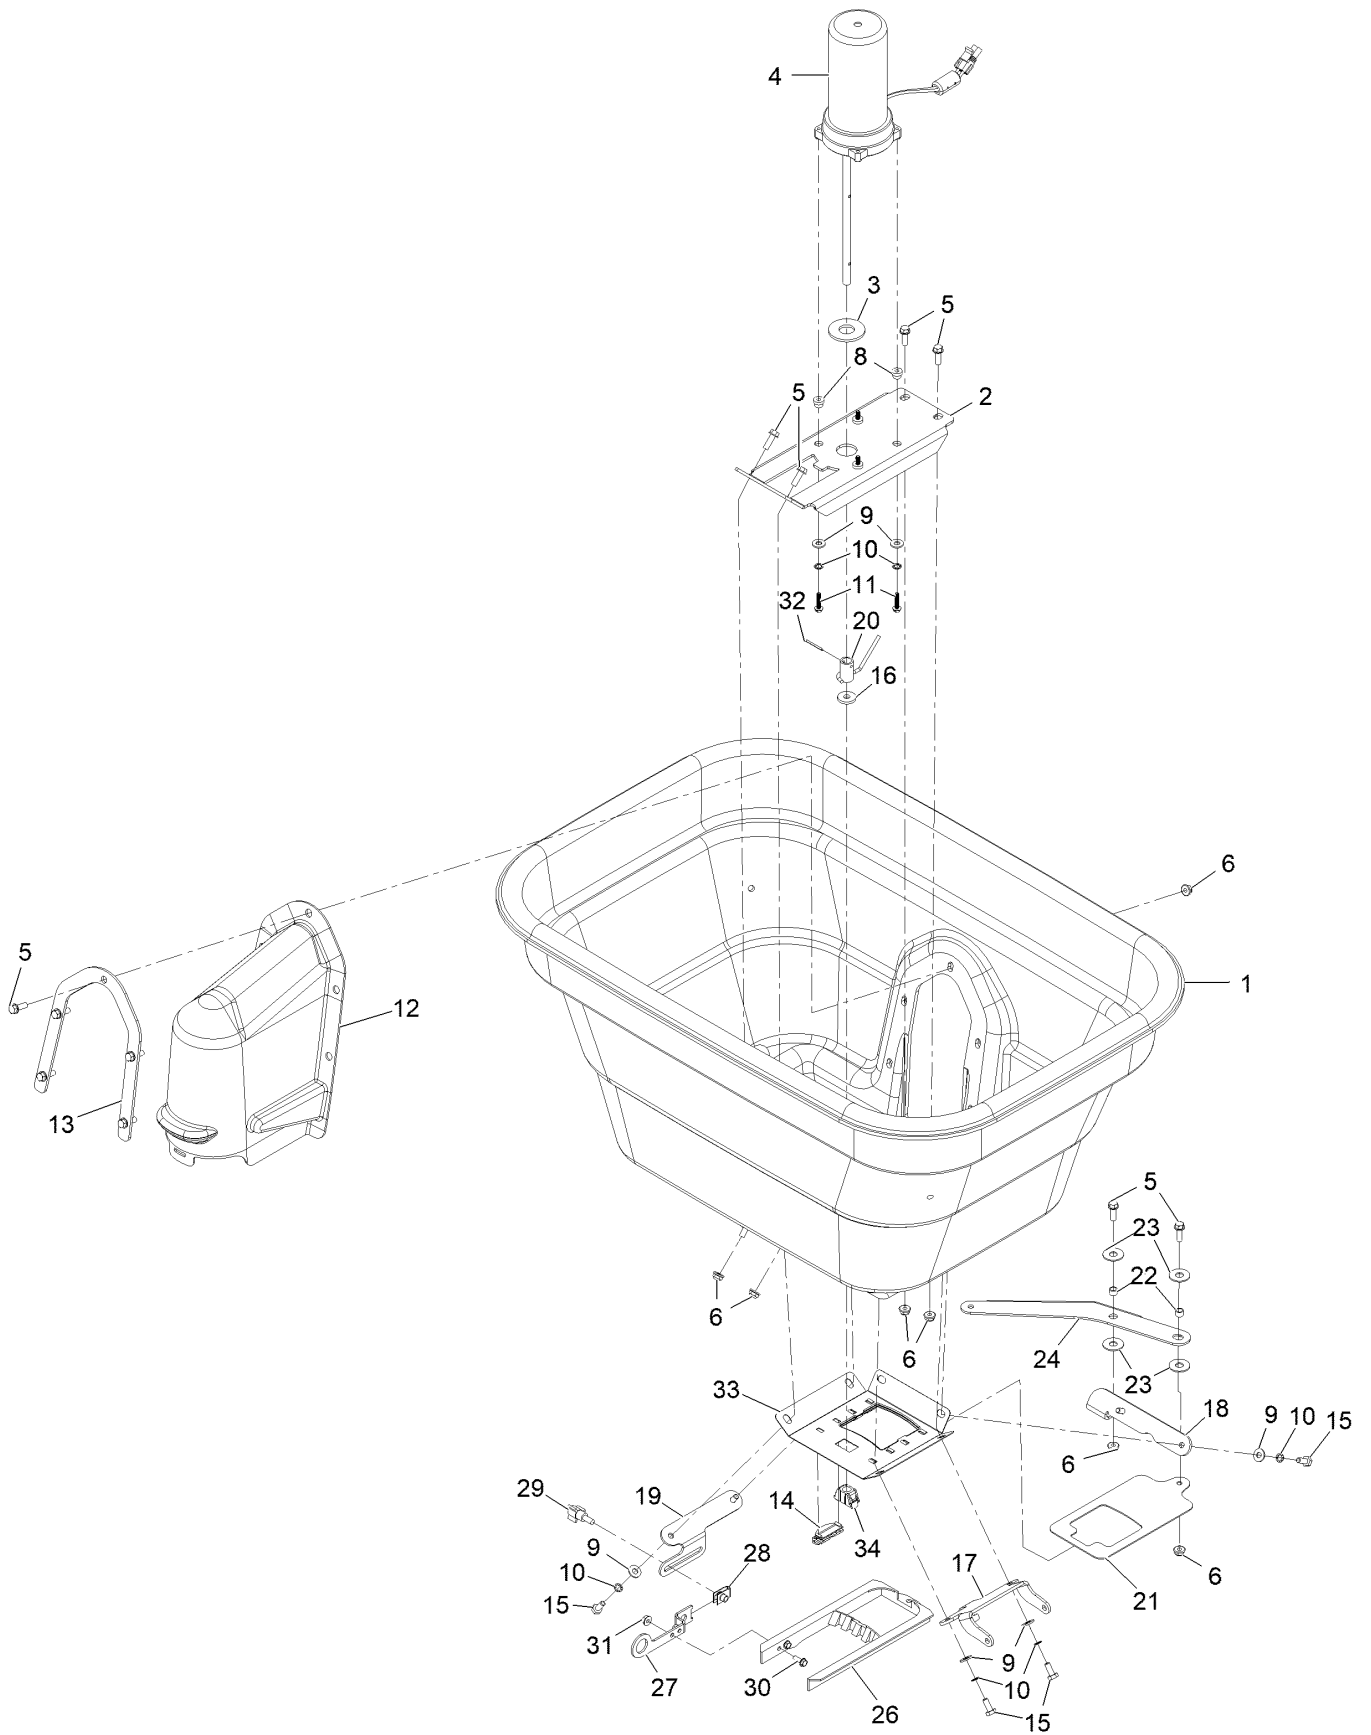

Spreader Hopper Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	142-2734	1	Hopper-Spreader, 175 Lb	18	135-0697-03	1	Mount-Gate, Pivot
2	126-8616-03	1	Mount-Motor	19	135-0701-03	1	Mount-Gate, Pivot
3	83-2400	1	Spacer	20	135-0714	1	Weld-Agitator
4	126-0379	1	Motor-Spreader	21	142-7644	1	Gate-Spreader Seed
5	32105-15	12	Screw-Machine 1/4-20 X 3/4	22	126-3684	2	Spacer
6	104-7201	12	Nut-Nyloc 1/4-20 Flg	23	93-1633	4	Washer
8	135-3989	4	Spacer-Flanged	24	135-0698-03	1	Arm-Engagement
9	3256-22	10	Washer-1/4 SAE	26	142-7460	1	Diffuser-Accessory
10	363-8641	10	Washer-Lock, Int	27	135-0702-03	1	Bracket-Accuway, Slide
11	739001	4	Screw-SHWH 10-32 X 7/8	28	107069	1	Nut-Retainer-Panel 1/4-20
12	126-1348	1	Cover-Motor	29	233-70	1	Knob-Star, Three
13	126-8621-03	1	Support-Cover	30	32105-23	2	Screw
14	142-3316	4	Guide-Rate, Gate	31	32128-17	2	Nut-Flange #10-24 Top Lock
15	321-3	6	Screw-HH 1/4-20 X 5/8	32	3272-7	1	Pin-Cotter
16	142-3665	1	Washer-Felt	33	142-7645	1	Bottom-Mulch
17	126-8622-03	1	Mount-Deflector	34	142-4042	1	Hopper Bottom Bearing

Spreader Controller Assembly

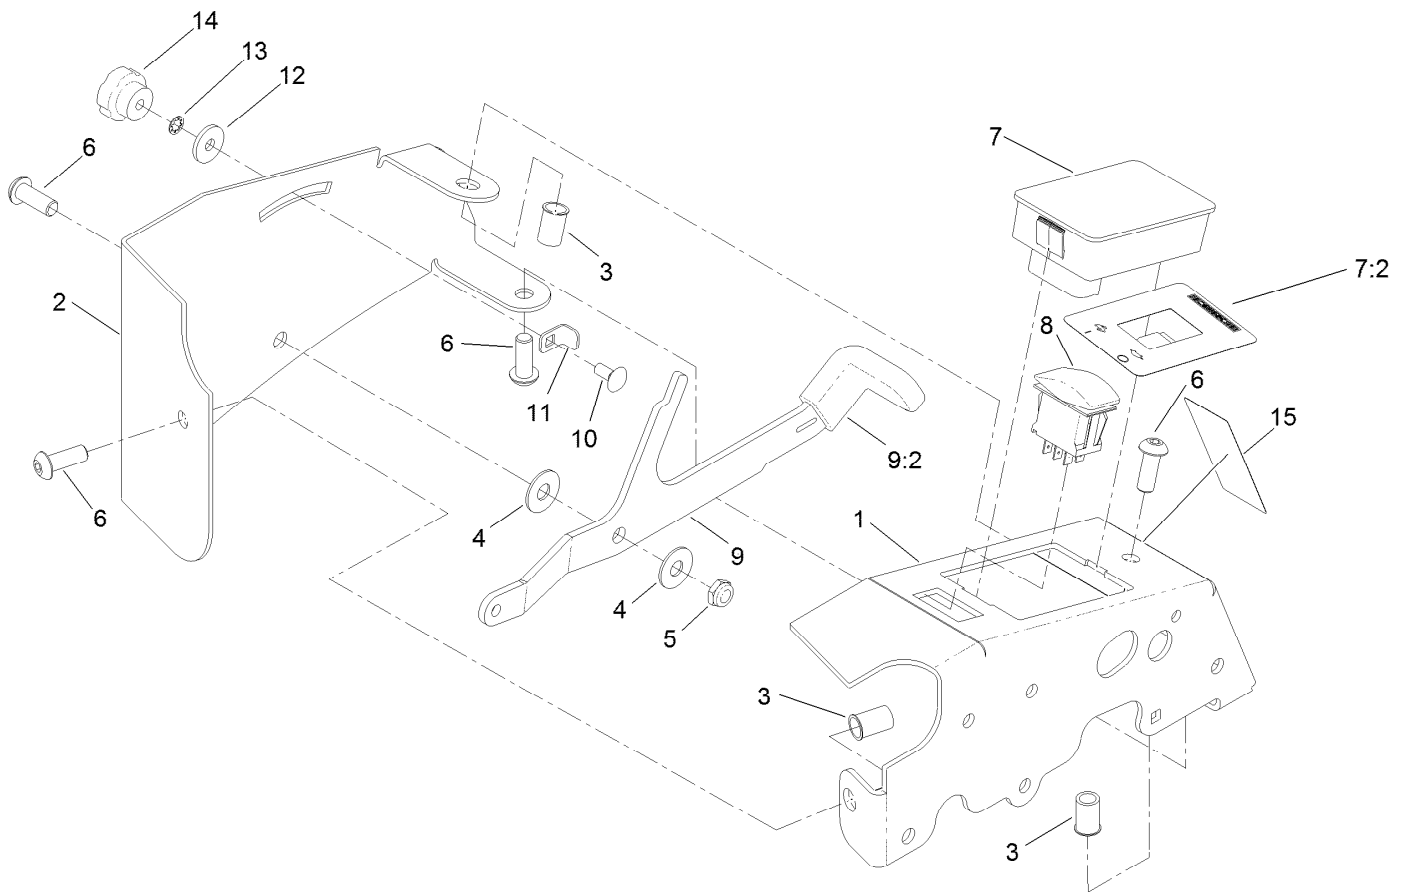

Spreader Controller Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	135-0735-03	1	Bracket-Mount	9	135-1389	1	Handle
2	135-0736-03	1	Cover-Controller, Spreader	9:2	135-0858	1	Grip-Control, Lever
3	32148-10	3	Nut-Clinch	10	3229-11	1	Screw-CARR
4	93-1633	2	Washer	11	135-0800	1	Bracket-Gate, Set
5	3296-59	1	Nut-Lock, NI	12	66-2921	1	Washer-Friction
6	3274-94	4	Screw-HSBH	13	363-8641	1	Washer-Lock, Int
7	135-1872	1	Spreader Control Module ASM	14	233-67	1	Knob-Chute
7:2	135-0739	1	Decal-Speed, Impeller	15	135-0990	1	Decal-Control, Spread
8	100-1535	1	Switch-Rocker, (On)-Off-(On)				

Notes:

Notes:

Place Model No. and Serial No.
Label Here (Included in the Literature
Pack) or Fill in Below

Model No. _____

Serial No. _____

Date Purchased _____

Engine Model No. and Spec. No. _____

Engine Serial No. (E/No) _____



Z Turf Equipment is part of the Exmark® family of products.
©2021 Exmark Mfg. Co., Inc. All Rights Reserved. Printed in the USA.
415 Industrial Row • Beatrice, NE 68310 • (402) 223-6375 • Fax (402) 223-5489

www.zturfequipment.com

