 


TORO®

MODEL NO. 30774 — 60001 thru 70001 & UP
 MODEL NO. 30720 — 60001 thru 70001 & UP

PARTS CATALOG

72" GROUNDMASTER

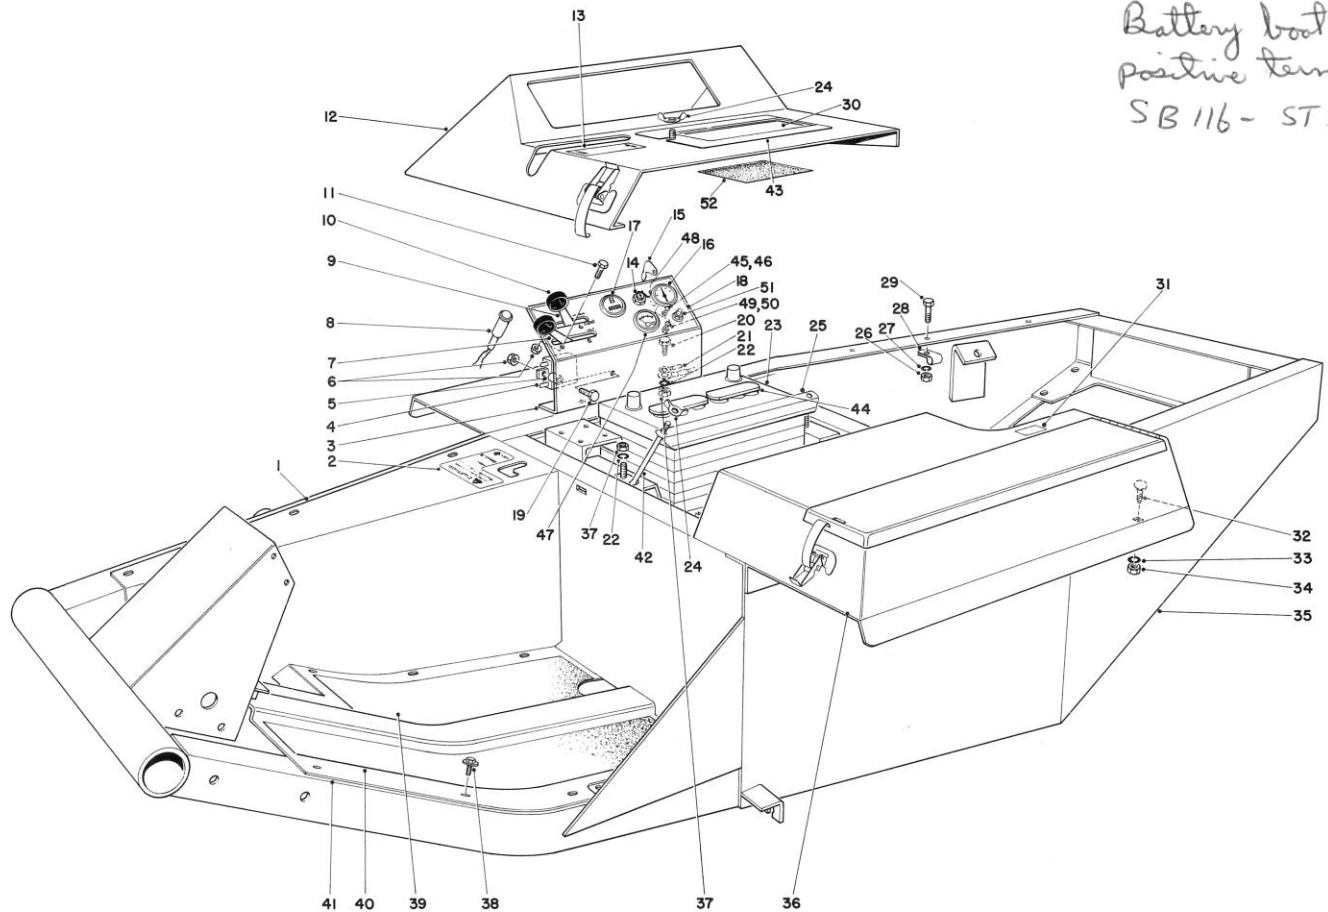

MAIN FRAME

Ref. No.	Part No.	Description	No. Used
1	21-2660	Foot Rest	1
2	21-3920	Decal-Caution	1
3	26-6760	Instrument Panel	1
4	22-7820	Buzzer Assembly	1
5	22-7810	Spacer	1
6	32128-17	Flange Locknut	5
7	21-2200	Throttle Control	1
8	21-9970	Warning Light	1
9	21-2210	Choke Control	1
10	233-35	Knob	2
11	3290-134	Hex. Hd. Machine Screw	4
12	24-5670	Instrument Cover	1
13	21-3950	Decal — Engage — Disengage	1
14	12-8140	Key Switch	1

Ref. No.	Part No.	Description	No. Used
15	218-412	Key	1
16	18-2190	Ammeter	1
17	12-9990	Hour Meter	1
18	26-6730	Decal — Instrument Panel	1
19	3290-360	Hex. Hd. Machine Screw	1
20	322-3	Capscrew	2
21	21-2370	Wire — Hour Meter Ground	1
22	3253-4	Lockwasher	4
23	13-6480	Battery	1
24	32103-2	Wing Nut	3
25	24-6420	Hold Down Battery	2
26	3217-7	Nut	1
27	3253-21	Lockwasher	1
28	2412-4	Clamp	1


Copyright August 1976 by

The Toro Company

Minneapolis, Minnesota 55420 U.S.A.

Price \$1.00


#47 has a long wire as a part of it.

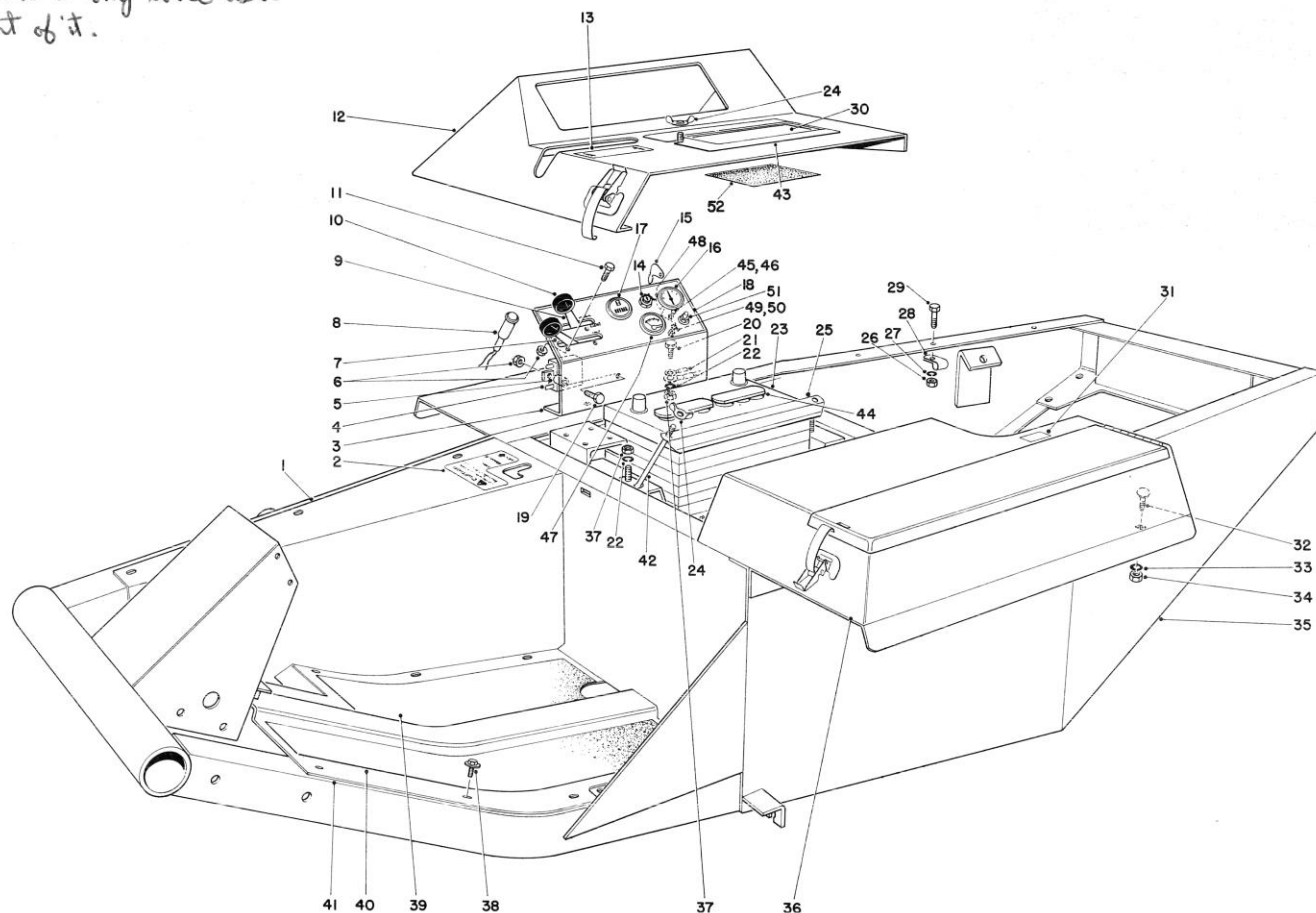 

MAIN FRAME (Continued)

Ref. No.	Part No.	Description	No. Used
29	323-6	Capscrew	1
30	26-7000	Decal — Starting Instructions	1
31	18-7040	Decal Gas	1
32	3229-10	Carriage Bolt	5
33	3253-3	Lockwasher	5
34	3217-5	Nut	5
35	23-1310	Frame	1
36	23-2060	Tool Box	1
37	3217-6	Nut	4
38	32144-10	Self Tapping Screw	11
39	21-2770	Pad — Foot Rest R.H.	1
40	21-2760	Pad — Foot Rest L.H.	1
26-7400 Overheat protection Kit Parts Breakdown ST 348			


Ref. No.	Part No.	Description	No. Used
41	23-5220	Floor Plate	1
42	24-6390	Stud Battery Hold Down	2
43	24-9740	Cover Battery Access	1
44	239-19	Vent Cap	6
45	3254-9	Lockwasher	2
46	3217-29	Nut	2
47	26-6750	Engine Temp. Switch Gage	1
48	26-4390	Clamp	1
49	26-4380	Lockwasher	2
50	26-4370	Nut	2
51	26-6740	Reset Relay	1
52	27-0110	Battery Cover Insulation	1

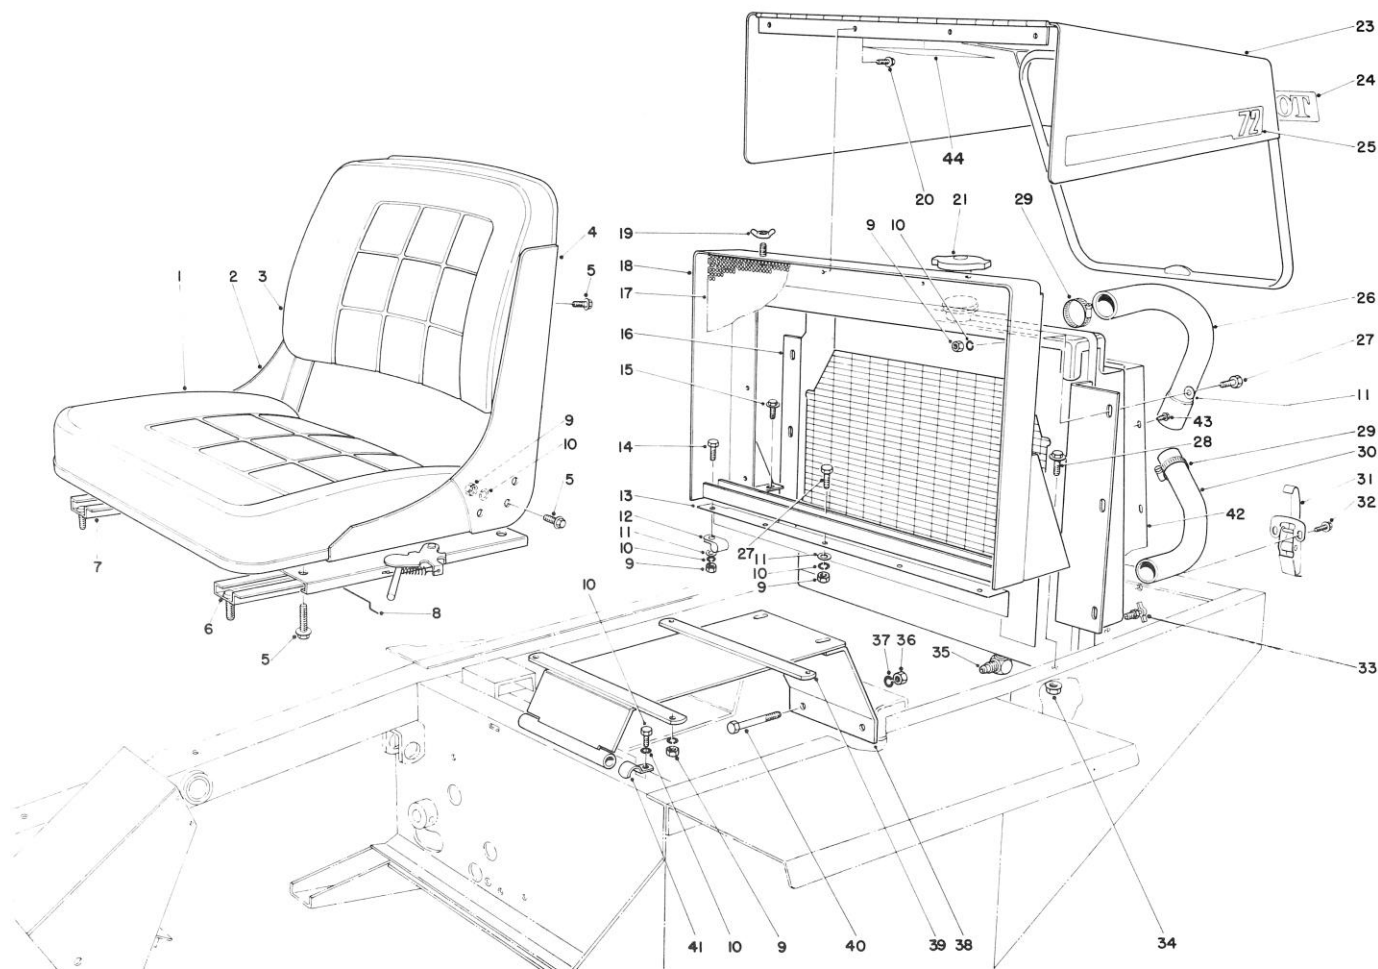 

SEAT, RADIATOR AND HOOD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	351-59	Seat Cushion	1
2	351-64	Rail R.H.	1
3	351-60	Backrest	1
4	351-65	Rail L.H.	1
5	3234-5	Hex Flange Screw	14
6	351-63	Adjuster L.H.	1
7	351-62	Adjuster R.H.	1
8	351-61	Connecting Rod	1
9	3217-6	Nut	17
10	3253-4	Lockwasher	19
11	3256-23	Flat Washer	11
12	2412-4	Clamp	1
13	23-1760	Sealing Plate — Grille	1
14	322-5	Capscrew	3
15	11-0590	Capscrew Self Tapping	2
16	26-0410	Radiator	1
17	23-1770	Grille	1
18	23-1700	Radiator Support	1
19	32103-2	Wing Nut	2
20	32144-10	Self Tapping Screw	4
21	18-2660	Radiator Pressure Cap	1


Ref. No.	Part No.	Description	No. Used
23	23-2150	Hood	1
24	18-2180	Decal Toro	1
25	27-3220	Decal Groundsmaster 72	2
26	26-9890	Upper Hose	1
27	322-3	Capscrew	10
28	3234-1	Screw Hex Flange	2
29	2412-3	Hose Clamp	2
30	26-9900	Lower Hose	1
31	249-21	Clamp — Hook	1
32	32140-43	Sems Screw	2
33	304-46	Drain Cock	1
34	32128-19	Flange Locking Nut	2
35	353-548	Elbow	2
36	3217-7	Nut	2
37	3253-21	Lockwasher	2
38	24-5630	Seat Support Bracket	1
39	24-5600	Seat Support	1
40	323-12	Capscrew	2
41	10-9240	Seat Clamp	2
42	26-0310	Radiator Shroud	1
43	32104-16	Screw	8
44	26-7530	Decal	1

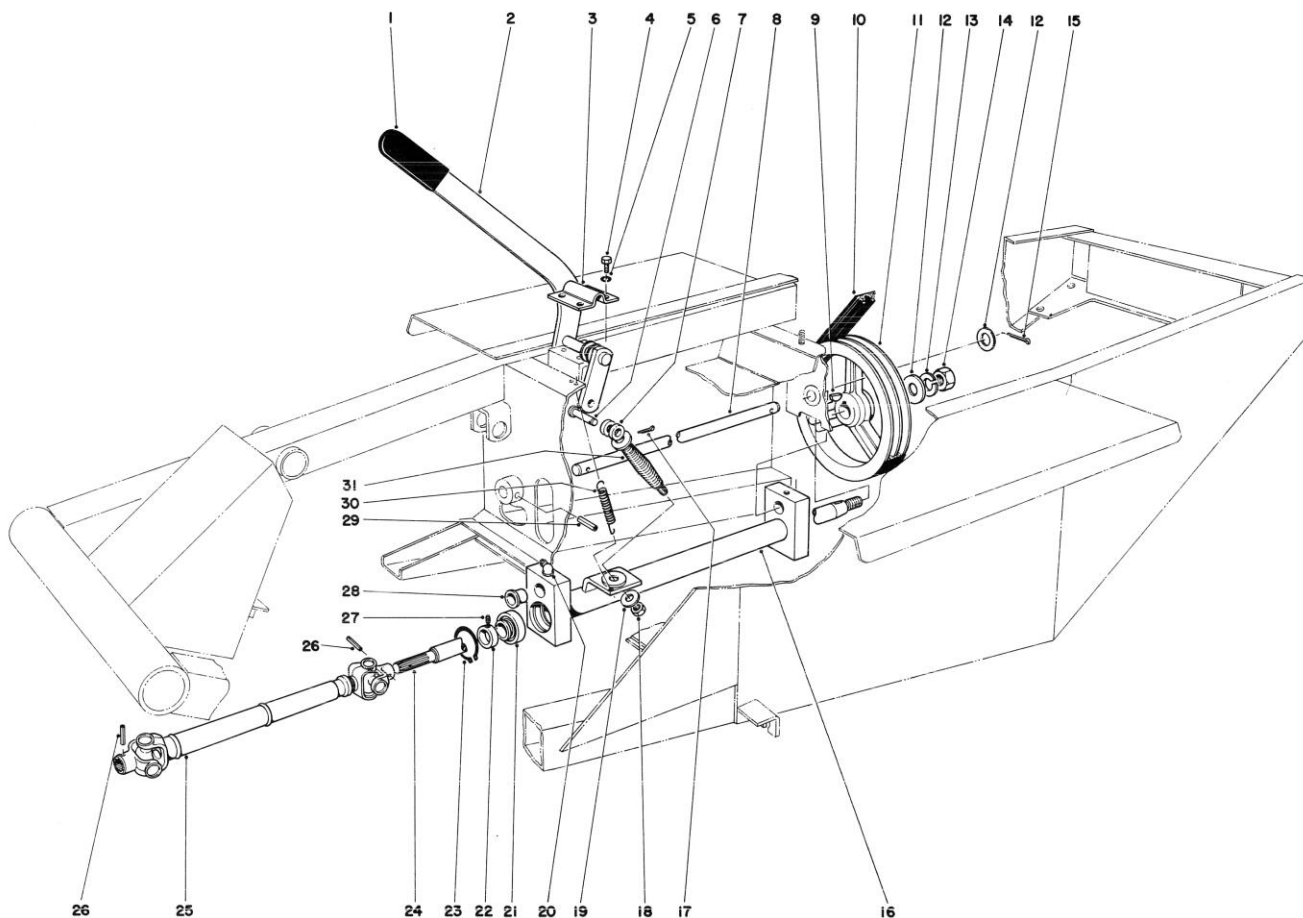 

POWER TAKE OFF ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	21-1880	Grip Handle	1
2	21-1550	Lever P.T.O.	1
3	21-1600	Clamp P.T.O.	1
4	32104-6	Self Tapping Screw	4
5	3253-21	Lockwasher	4
6	283-2	Clevis Pin	1
7	21-2080	Yoke End	1
8	23-2020	Shaft – Pivot P.T.O	1
9	3257-5	Woodruff Key	1
10	23-1820	V-Belt	1
11	21-0230	Pulley P.T.O	1
12	3256-28	Flat Washer	2
13	3254-7	Lockwasher	1
14	3219-7	Full Nut	1
15	3272-22	Cotter Pin	1
16	23-1980	Pivot P.T.O. (Incl. Ref. #28)	1

Ref. No.	Part No.	Description	No. Used
17	3272-10	Cotter Pin	1
18	3296-26	Lock Nut	1
19	3256-36	Flat Washer	1
20	302-10	Grease Fitting	2
21	251-252	Ball Bearing (Incl. Ref.#22&27)	2
22	251-234	Lock Collar (Inc. Ref. #27)	2
23	32120-22	Snap Ring	2
24	23-2010	Shaft P.T.O.	1
25	21-3090	Universal Joint	1
26	32121-34	Roll Pin	2
27	3245-1	Set Screw	2
28	256-136	Bushing	2
29	32121-9	Roll Pin	1
30	21-1830	Spring Tension	1
31	21-0400	Spring Compression	1

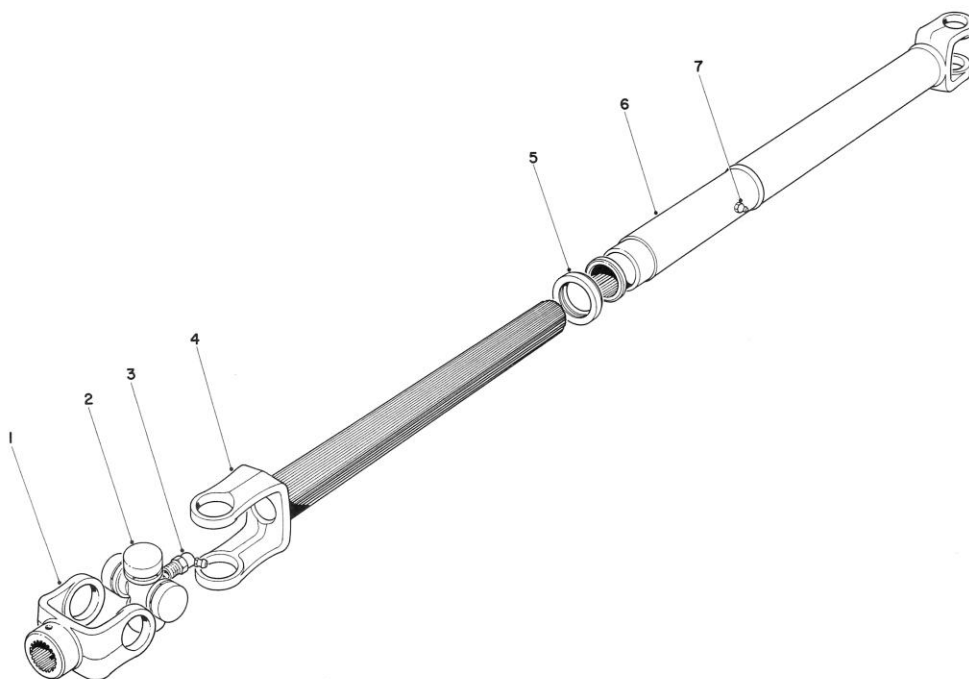 

DRIVE SHAFT ASSEMBLY — 21-3090


Ref. No.	Part No.	Description	No. Used
1	21-5960	End Yoke	2
2	21-5970	U-Joint Kit	2
3	21-5980	Grease Fitting	2
4	21-6030	Slip Yoke Shaft	1

Ref. No.	Part No.	Description	No. Used
5	21-5990	Dust Cap Assembly	1
6	21-6020	Slip Yoke Tube	1
7	21-6010	Grease Fitting	1



Ref. No.	Part No.	Description	No. Used
23	3272-10	Cotter Pin	2
24	3217-7	Nut	4
25	3-7243	Spring Extension	2
26	283-30	Clevis Pin	2
27	21-0140	Socket Assy.	3
28	3220-5	Jam Nut	3
29	21-3380	Brake Cable L.H.	1
*	21-3370	Brake Cable R.H.	1
30	21-2150	Tube Front Steering	1
31	3231-21	Carriage Bolt	2
32	323-13	Capscrew	2
33	21-3170	Brake Mount	1
34	321-2	Capscrew	1
35	3253-3	Lockwasher	1
36	21-2570	Brake Pivot Pin	1
37	3272-7	Cotter Pin	2
38	21-3320	Brake Latch Shaft	1
39	256-10	Bushing	4
40	21-3260	Brake Pedal L.H.	1
41	21-3220	Brake Pedal R.H.	1
42	302-5	Grease Fitting	2

 
6

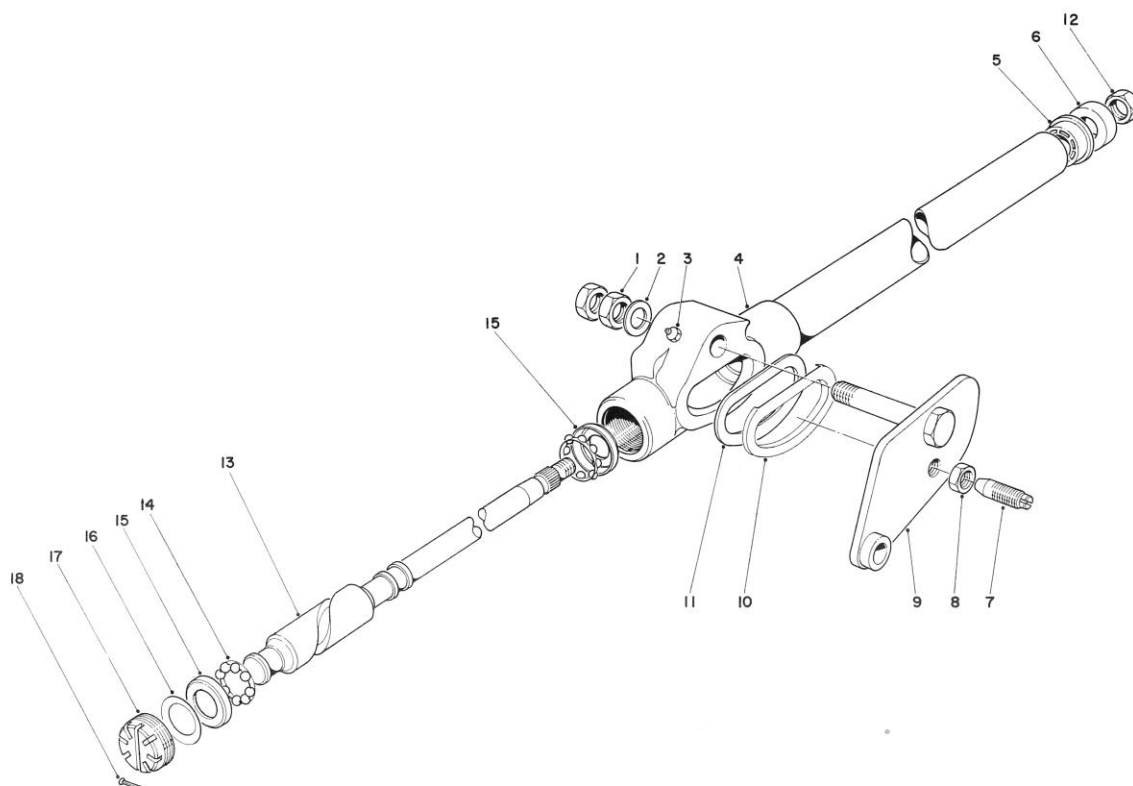

STEERING GEAR ASSEMBLY — 22-6380

Ref. No.	Part No.	Description	No. Used
1	3220-7	Jam Nut	2
2	22-8310	Washer	1
3	302-16	Grease Fitting	1
4	22-8290	Housing & Jacket Tube Assy.	1
5	21-9270	Column Bearing	1
6	21-9260	Dust Cover	1
7	22-8300	Lever Stud	1
8	3219-10	Jam Nut	1
9	22-8280	Steering Lever & Bolt Assembly	1

Ref. No.	Part No.	Description	No. Used
10	22-8470	Seal Retainer	1
11	22-8460	Seal	1
12	3220-6	Jam Nut	1
13	21-9280	Cam & Tube Assembly	1
14	21-9170	Retainer & Ball Assembly	2
15	21-9160	Ball Cup	2
16	21-9150	Belleville Washer	1
17	21-9130	Adjusting Plug	1
18	3272-9	Cotter Pin	1

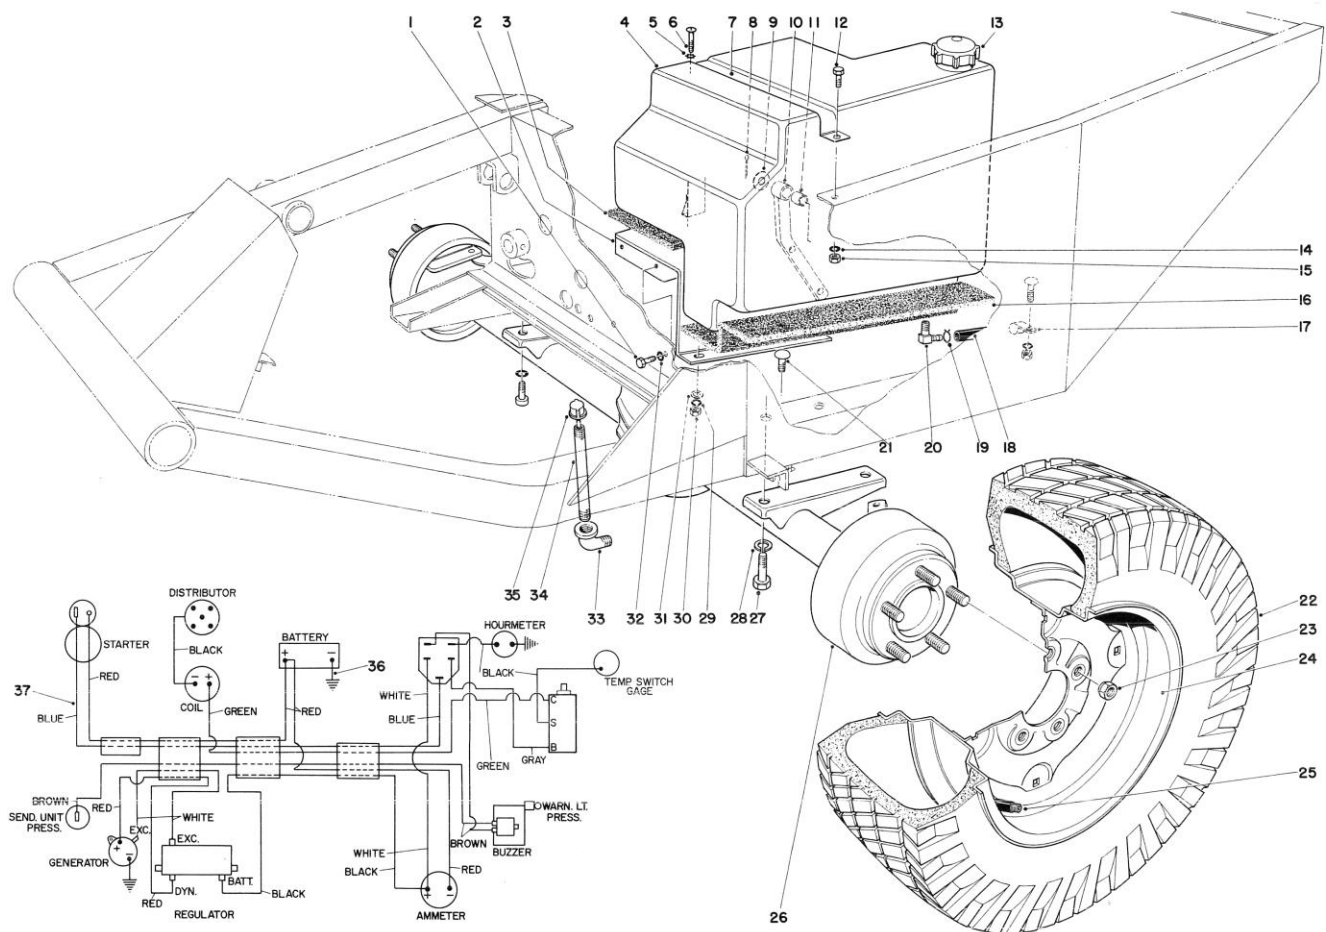 


FRONT AXLE AND GAS TANK ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-4	Capscrew	2
2	23-2100	Gas Tank Base	1
3	21-3600	Foam Tank Support	1
4	21-3620	Gas Tank (Inc. Ref. #20)	1
5	3255-7	Washer	1
6	3258-19	Machine Screw Rd. Hd.	1
7	21-3630	Strap Gas Tank	1
8	3272-13	Cotter Pin	1
9	10-8110	Washer Thrust	1
10	23-2080	Steering Link (Inc. Ref. #11)	1
11	256-237	Bushing	1
12	321-4	Capscrew	1
13	10-7950	Gas Cap	1
14	3253-3	Lockwasher	1
15	3217-5	Nut	1
16	21-3610	Foam — Tank Support	1
17	2412-41	Clamp	1
18	23-2140	Fuel Line	1
19	2412-6	Clamp	1

Ref. No.	Part No.	Description	No. Used
20	353-536	Elbow	1
21	3230-2	Carriage Bolt	3
22	231-41	Tire	2
23	23-7270	Wheel Nut	10
24	217-105	Rim	2
25	232-27	Valve Stem	2
26	28-0720	Axle	1
27	324-5	Capscrew	4
28	3253-6	Lockwasher	4
29	3253-4	Lockwasher	3
30	3217-6	Nut	3
31	3256-23	Flat Washer	2
32	3253-21	Lockwasher	2
33	2811-9	Street Elbow	1
34	289-37	Pipe Nipple	1
35	23-5180	Dipstick	1
36	218-219	Ground Cable	1
37	26-6840	Wire Harness	1
*	231-90	Tube	2

 *Not Illustrated

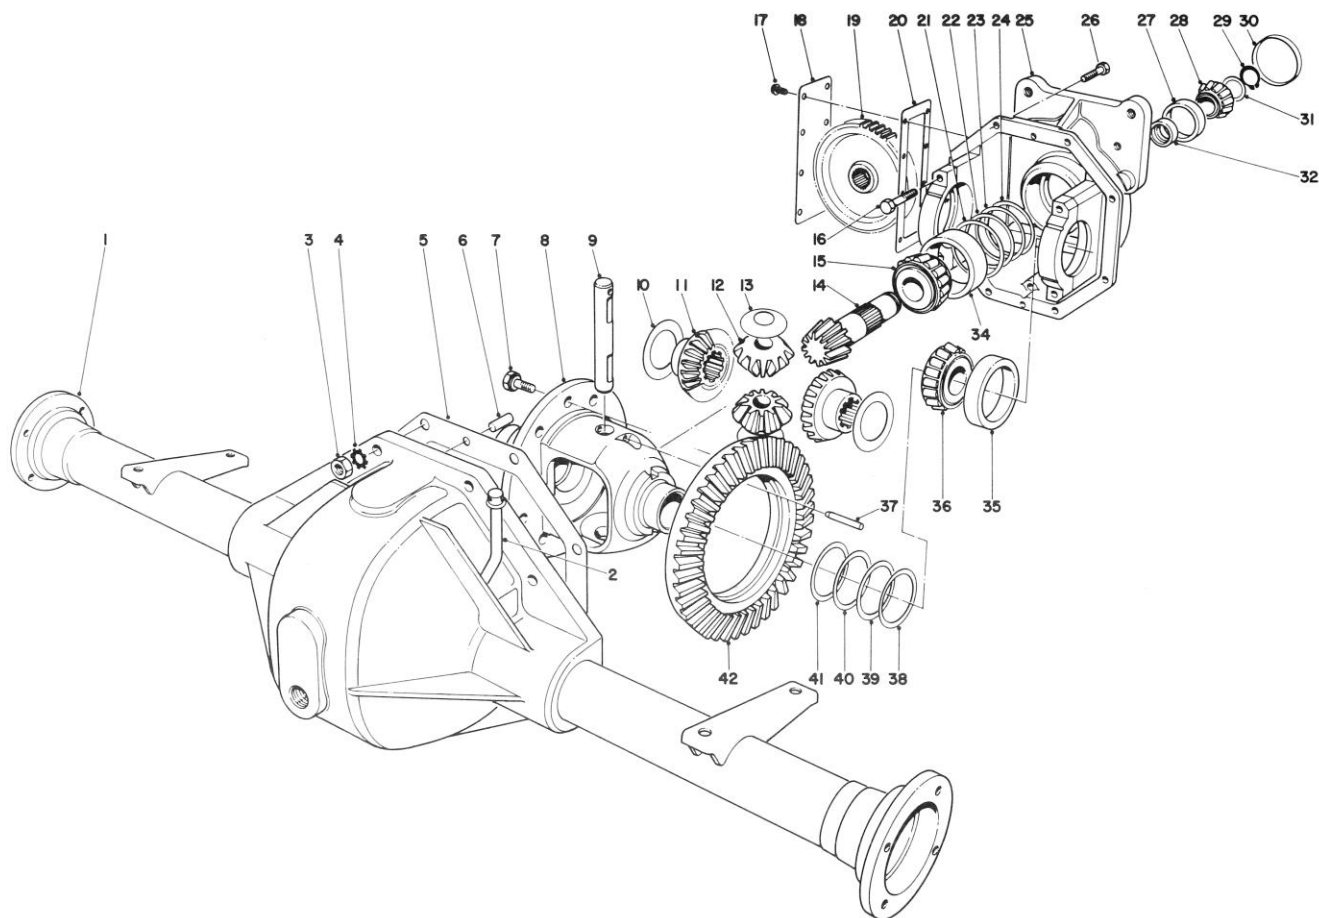


DIFFERENTIAL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	24-8820	Lower Housing & Tube Ass'y	1
2	21-8230	Vent Tube Assembly	1
3	3219-2	Nut	8
4	3255-8	Lockwasher	8
5	21-8280	Housing Gasket	1
6	21-8270	Dowel Pin	2
7	21-7770	Drive Gear Screw	10
8	21-7670	Differential Case	1
9	21-7700	Pinion Mate Shaft	1
10	21-7720	Thrust Washer	2
11	24-8790	Differential Bevel Side Gear	2
12	21-7690	Pinion Gear	2
13	21-7730	Thrust Washer	2
14		Drive Pinion (Incl. with Ref.#42)	1
15	21-8080	Tapered Roller Bearing Cone	1
16	324-23	Capscrew	4
17	12-5450	Thread Forming Screw	8
18	21-7830	Gear Cover	1
19	21-8150	Spur Gear	1
20	21-7820	Gasket - Gear Cover	1
21	21-8030	Pin Bearing Shim .003	A/R
22	21-8040	Pin Bearing Shim .005	A/R
23	21-8050	Pin Bearing Shim .010	A/R
24	21-8060	Pin Bearing Shim .030	A/R
25	28-0640	Upper Housing Assembly	1
26	28-0660	Capscrew	8
27	21-8390	Bearing Cup	1
28	21-8010	Bearing Cone	1

Ref. No.	Part No.	Description	No. Used
29	32120-32	Retaining Ring	1
30	21-7850	Cup Plug	1
31	21-7870	Pin Bearing Shim Front (.031)	A/R
*	21-7880	Pin Bearing Shim Front (.033)	A/R
*	21-7890	Pin Bearing Shim Front (.035)	A/R
*	21-7900	Pin Bearing Shim Front (.037)	A/R
*	21-7910	Pin Bearing Shim Front (.039)	A/R
*	21-7920	Pin Bearing Shim Front (.041)	A/R
*	21-7930	Pin Bearing Shim Front (.043)	A/R
*	21-7940	Pin Bearing Shim Front (.045)	A/R
*	21-7950	Pin Bearing Shim Front (.047)	A/R
*	21-7960	Pin Bearing Shim Front (.049)	A/R
*	21-7970	Pin Bearing Shim Front (.051)	A/R
*	21-7980	Pin Bearing Shim Front (.053)	A/R
*	21-7990	Pin Bearing Shim Front (.055)	A/R
*	21-8000	Pin Bearing Shim Front (.057)	A/R
32	21-8020	Front Pinion Bearing Spacer	1
34	21-8070	Tapered Roller Bearing Cup	1
35	254-66	Cup - Tapered Bearing	2
36	254-65	Cone - Tapered Bearing	2
37	21-7710	Roll Pin	1
38	21-8090	Differential Adjust. Shim .003	A/R
39	21-8100	Differential Adjust. Shim .005	A/R
40	21-8110	Differential Adjust. Shim .010	A/R
41	21-8120	Differential Adjust. Shim .030	A/R
42		Ring Gear	1
*	21-7740	Gear & Pinion Assembly (Incl. Ref. # 14 & 42)	1

 
*Not Illustrated

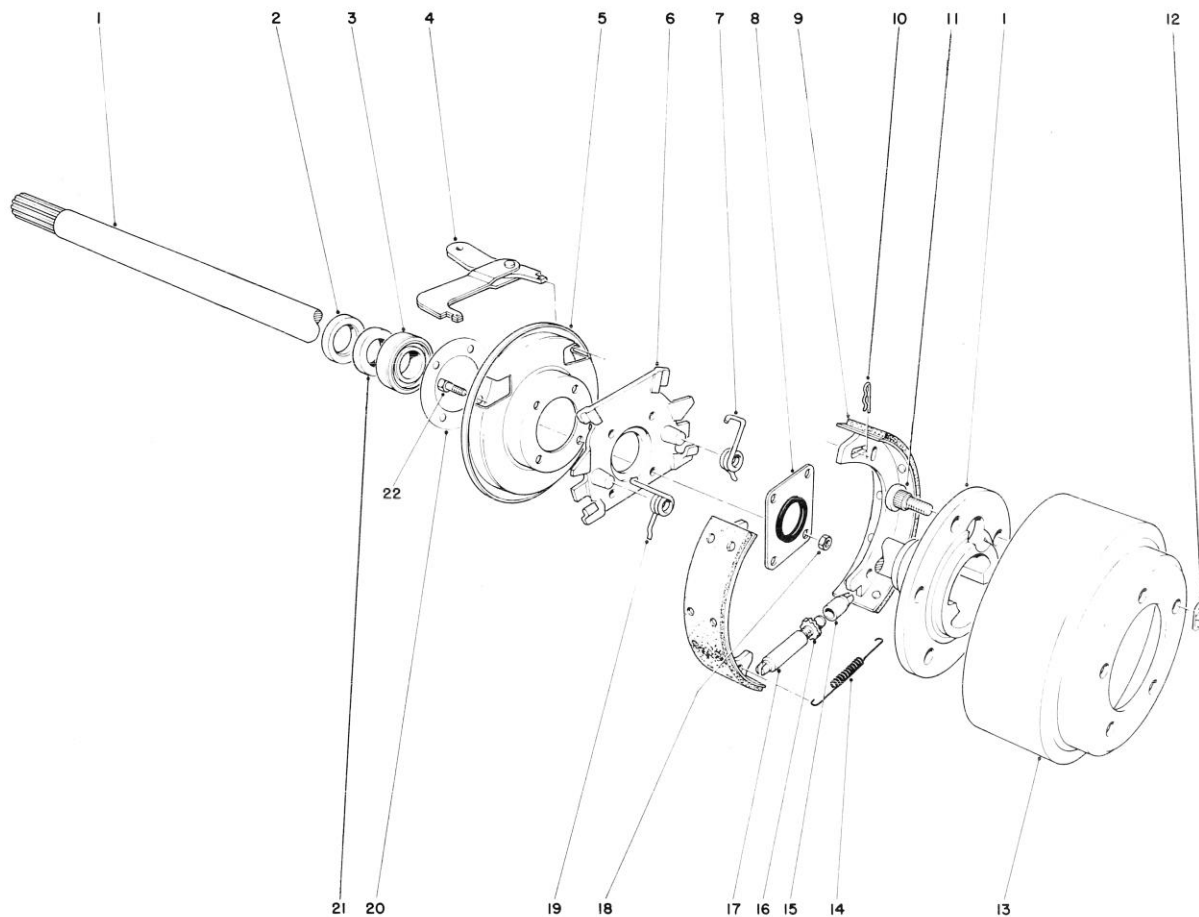

BRAKE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	28-0650	Axle Shaft Flanged	2
2	21-8330	Oil Seal	2
3	21-8180	Bearing — Tapered Roller	2
4	24-9180	Strut & Lever Parking Brake	2
5	21-9450	Dust Shield	2
6	21-9410	Torque Spider	2
7	21-9430	Spring — Shoe Return R.H.	2
8	28-0670	Oil Seal	2
9	21-9470	Shoe & Lining Ass'y (2 Shoes)	2
10	21-9460	Retainer — Parking Brake Lever	4
11	242-34	Axle Flange Stud	10

Ref. No.	Part No.	Description	No. Used
12	21-8360	Clip — Retaining	2
13	28-0680	Brake Drum	2
14	21-9440	Spring — Adjusting Screw	2
15	21-9390	Socket — Adjusting Screw	2
16	21-9370	Adjusting Screw	2
17	21-9380	Pivot Nut	2
18	32152-5	Locknut	8
19	21-9420	Spring — Shoe Return L.H.	2
20	21-8320	Gasket Wheel Bearing	2
21	24-8840	Ring Wheel Bearing	2
22	28-0660	Capscrew	8

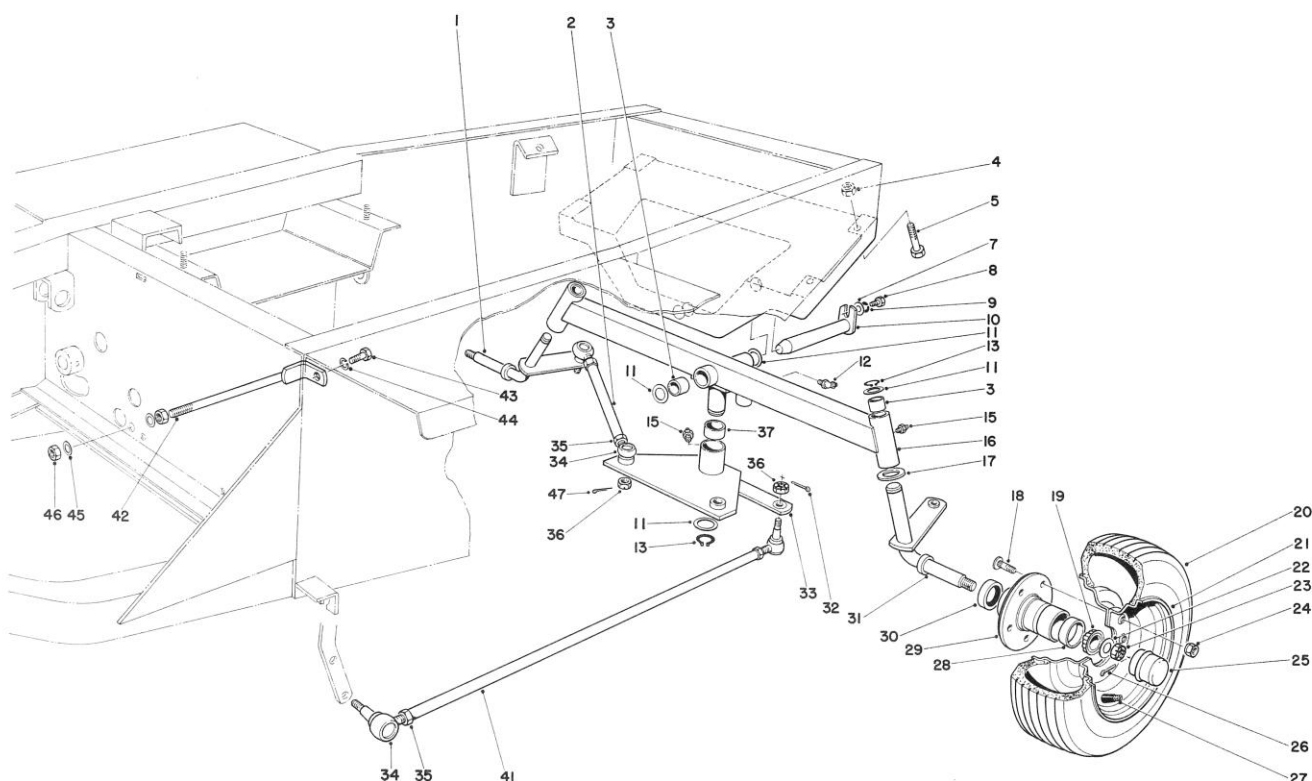 


REAR AXLE AND WHEEL ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	21-1930	Spindle Assembly R.H.	1
2	21-2000	Tie Rod	2
3	3-0348	Bushing	6
4	32128-23	Flange Nut	4
5	325-7	Capscrew	4
7	3256-23	Flat Washer	1
8	322-3	Capscrew	1
9	3253-4	Lockwasher	1
10	23-1540	Rear Axle Pin	1
11	10-8110	Thrust Washer	5
12	302-11	Grease Fitting	1
13	32151-36	Ring — Retaining	3
15	302-5	Grease Fitting	3
16	23-1480	Rear Axle (Incl. Ref. # 3)	1
17	256-121	Thrust Bushing	2
18	10-6830	Drive Stud	10
19	254-94	Bearing Cone	4
20	231-43	Tire	2
21	217-106	Rim	2
22	3256-28	Washer	2
23	32136-5	Nut Slotted	2
24	242-50	Wheel Nut	10
25	241-119	Dust Cap	2

Ref. No.	Part No.	Description	No. Used
26	3272-13	Cotter Pin	2
27	232-31	Valve Stem	2
28	254-72	Bearing Cup	4
29	21-2820	Wheel Hub (Incl. Ref. #18 & 28)	2
30	253-129	Seal	2
31	21-1980	Spindle Assembly L.H.	1
32	3272-6	Cotter Pin	2
33	23-1510	Rear Steering Pivot (Incl. Ref. # 37)	1
34	21-0140	Socket R.H. Thread	3
*	21-0150	Socket L.H. Thread	3
35	3220-5	Jam Nut R.H. Thread	3
*	3220-12	Jam Nut L.H. Thread	3
36	32136-4	Slotted Nut	6
37	256-242	Bushing	2
41	21-2100	Tube Rear	1
42	24-9830	Axle Support	1
43	323-6	Capscrew	1
44	3253-21	Lockwasher	1
45	3256-6	Washer	2
46	3217-9	Nut	2
47	3272-11	Cotter Pin	4
*	231-91	Tube	2

 *Not Illustrated

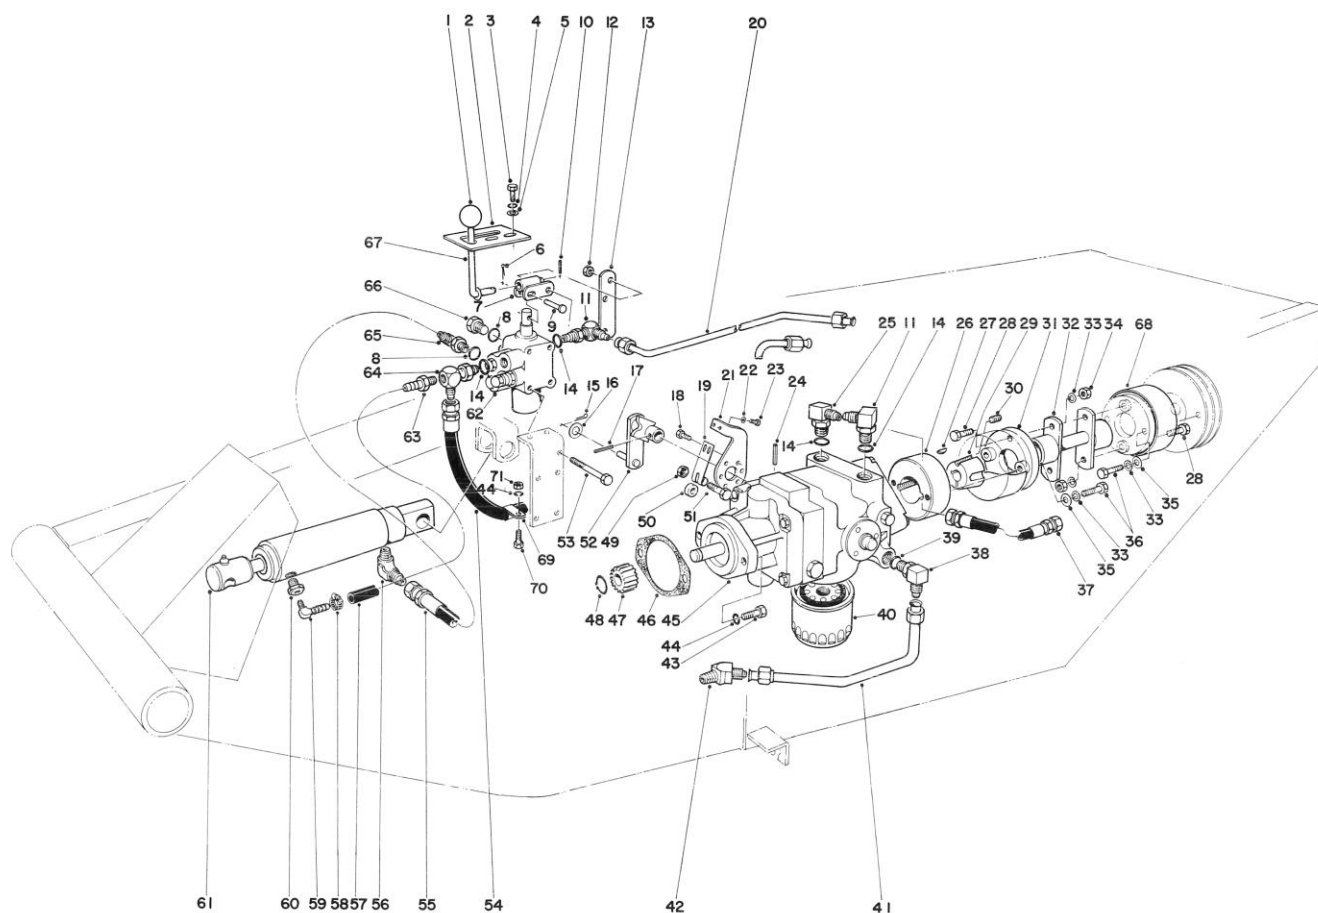


HYDROSTATIC TRANSMISSION AND VALVE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-21	Knob	1
2	21-8640	Latch-Valve Lever	1
3	321-4	Capscrew	2
4	3253-3	Lockwasher	2
5	3256-22	Flat Washer	2
6	3272-6	Cotter Pin	1
7	21-8590	Valve Lever Link	1
8	237-78	O-Ring	2
9	283-17	Pin	1
10	32121-73	Slotted Spring Pin	1
11	353-374	Fitting 90° Elbow	2
12	3296-42	Nut	5
13	21-9010	Pivot Mount-Valve Lever	1
14	237-42	O-Ring	4
15	3272-10	Cotter Pin	1
16	3256-6	Flat Washer	1
17	32121-24	Roll Pin	1
18	32104-42	Self Tapping Screw	3
19	22-7400	Leaf Spring	1
20	23-1880	Tube Pressure Line	1
21	22-7410	Pump Plate	1
22	3256-51	Washer	2
23	32140-40	Hex Hd. Machine Screw	2
24	32121-6	Roll Pin	1

Ref. No.	Part No.	Description	No. Used
25	353-511	Elbow	1
26	23-1830	Hub-Transmission Drive	1
27	3257-32	Woodruff Key	1
28	322-9	Capscrew	4
29	23-1840	Bushing Taper Lock	1
30	3247-4	Setscrews	2
31	24-0080	Coupling — Flexible	2
32	23-8920	Drive Coupling	1
33	3253-4	Lockwasher	8
34	3217-6	Nut	4
35	3256-23	Washer	4
36	322-10	Capscrew	4
37	23-3850	Hose Cooler to Pump	1
38	353-370	Elbow	1
39	237-80	O-Ring	1
40	23-2300	Oil Filter	1
41	23-1900	Tube Assembly Axle to Pump	1
42	353-535	Elbow	1
43	323-7	Capscrew	2
44	3253-21	Lockwasher	3
45	22-4760	Transmission — Inline (Incl. Ref. #27 & 47)	1
46	23-1800	Gasket — Transmission	1
47	23-4810	Gear	1

#19 new spring 28-9580 painted John Deere yellow
new shot-peened spring to increase life

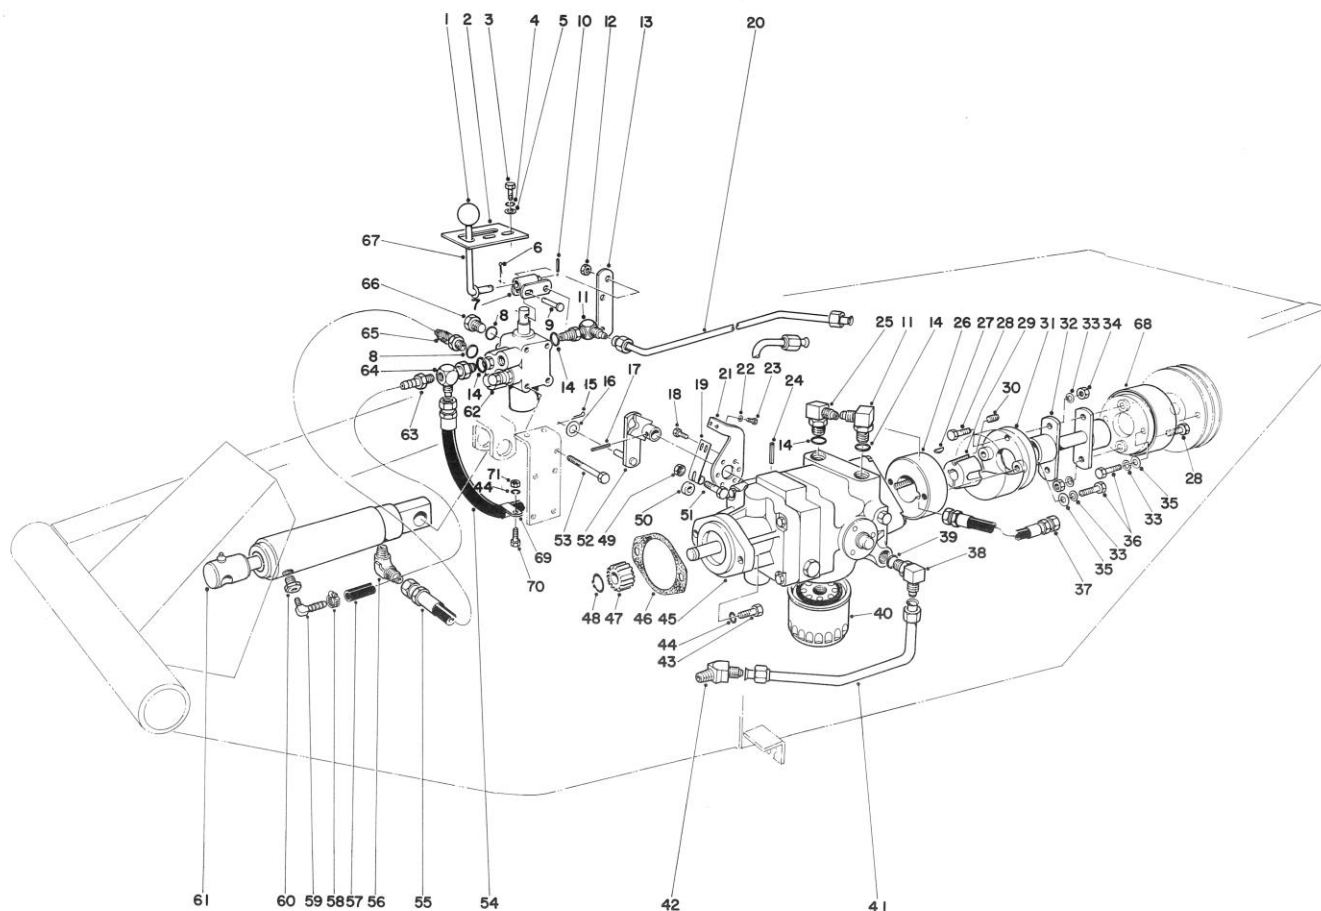 

HYDROSTATIC TRANSMISSION & VALVE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
48	32120-72	Snap Ring	1
49	3296-29	Locknut	1
50	251-259	Bearing	1
51	322-17	Hex Hd. Capscrew	1
52	23-2200	Pump Lever	1
53	321-23	Capscrew	5
54	26-2380	Hose Valve to Cooler	1
55	21-8580	Hose-Valve to Cylinder	1
56	5-6560	Elbow .078 Orifice	1
57	6-1190	Hose	1
58	2412-36	Hose Clamp	2
59	304-75	Barb 90° Fitting	1

Ref. No.	Part No.	Description	No. Used
60	304-97	Reducer Bushing	1
61	21-0390	Hydraulic Cylinder	1
62	21-8550	Valve-Hydraulic Control	1
63	304-73	Barb Straight Fitting	1
64	21-4940	Fitting Assembly	1
65	353-375	Fitting 90° Elbow	1
66	353-512	Plug	1
67	21-8620	Valve Lever	1
68	24-6160	Retainer Coupling	2
69	2412-4	Clamp	1
70	323-6	Capscrew	1
71	3217-7	Nut	1

Right side of machine
Bypass valve (Towing)

(HOLDS BEARING IN CASE)
LARGE SNAP RING 32120-11
SMALL SNAP RING 32120-15
(HOLDS BEARING ON SHAFT)

700-800
Implement
relief
valve

acceleration Valves


Charge relief
valve
70-150 PSI

charge pump
ENGINE
END

TRANSMISSION ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32120-8	Retaining Ring	1
2	251-263	Ball Bearing	1
3	323-13	Capscrew	4
4	25-2360	Motor Housing	1
5	25-2600	Cylinder Block Kit	2
6	25-2650	Check Valve Plug	2
7	237-86	O-Ring	4
8	25-2640	Valve Spring	2
9	25-2490	Ball	3
10	25-2400	Gasket	2
11	25-3180	Check Valve Kit (Incl. Ref. #6-10)	1
12	285-17	Pipe Plug	6
13	237-22	O-Ring	1
14	25-2630	Back Up Ring	1
15	25-2620	By Pass Valve	1
16	25-2610	Accel. Valve Spring	1

Ref. No.	Part No.	Description	No. Used
17	25-2410	Accel. Valve Assembly	1
18	237-79	O-Ring	2
19	353-550	Hex. Hd. Plug	2
20	25-2590	Pump Shaft	1
21	3257-32	Woodruff Key	1
22	25-2520	Pump Housing	1
23	252-82	Needle Bearing	2
24	25-3210	Lip Seal	2
25	25-2510	Flat Washer	2
26	25-2580	Trunnion Shaft	1
27	32151-46	Retaining Ring	2
28	25-2460	Hex. Hd. Plug	2
29	25-2470	Shim Pack	2
30	25-2570	Valve Spring	1
31	25-2560	Relief Valve Cone	1
32	353-551	Hex. Hd. Plug	1
33	237-80	O-Ring	1

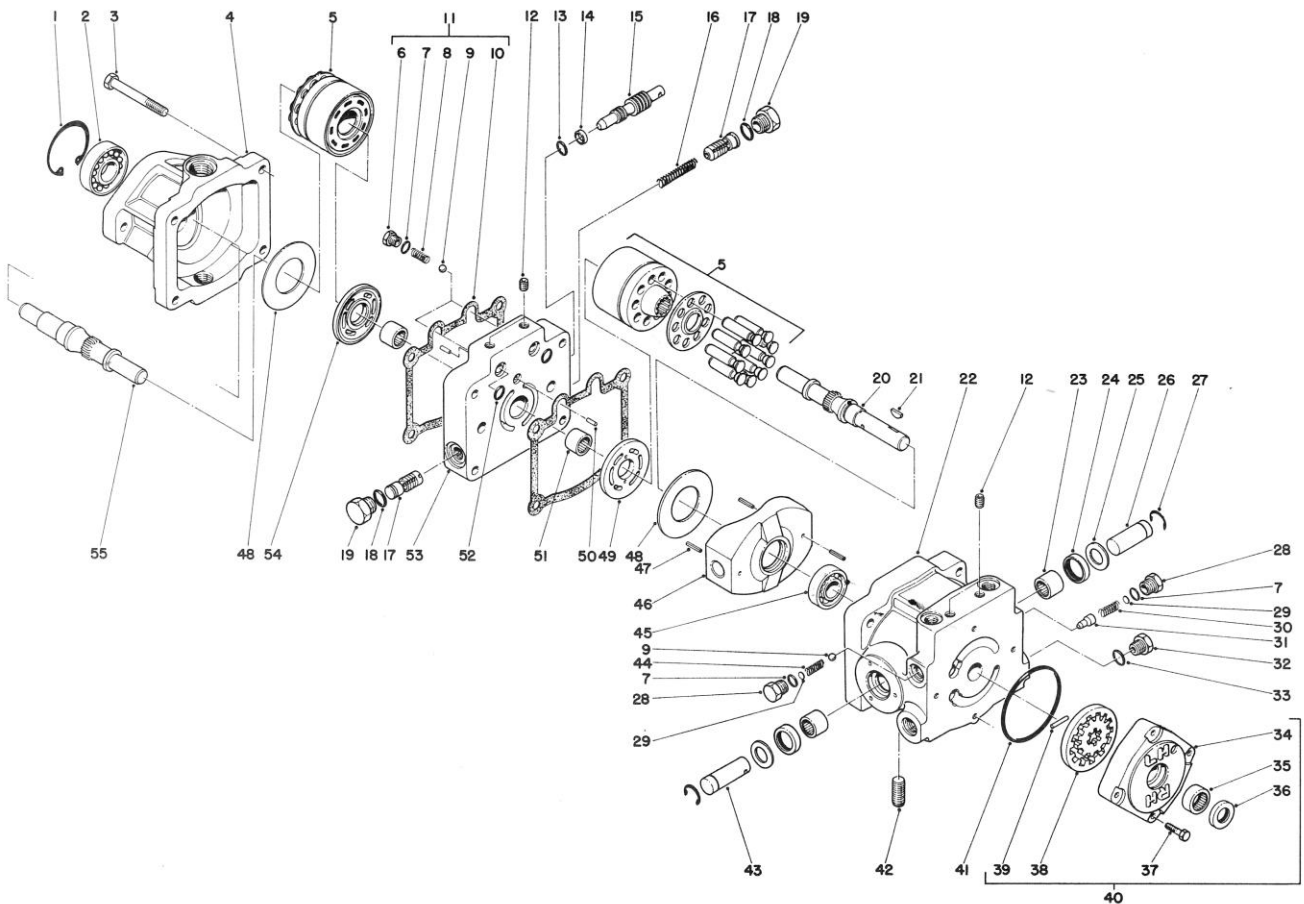 


TRANSMISSION ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
34	25-2550	Charge Pump Housing	1
35	252-87	Needle Bearing	1
36	253-44	Lip Seal	1
37	322-4	Hex. Hd. Capscrew	4
38	25-2540	Gerator Assembly	1
39	25-2530	Headless Straight Pin	1
40	25-3190	Charge Pump	
		(Incl. Ref. #34-39)	1
41	237-95	O-Ring	1
42	25-2660	Filter Union	1
43	25-2500	Trunnion Shaft	1
44	25-2480	Valve Spring	1

Ref. No.	Part No.	Description	No. Used
45	251-8	Ball Bearing	1
46	25-2450	Variable Swashplate	1
47	32121-91	Coil Spring Pin	3
48	25-2380	Thrust Plate	2
49	25-2440	Pump Valve Plate	1
50	25-2430	Dowel Pin	2
51	25-3300	Needle Bearing	2
52	237-30	O-Ring	2
53	25-2420	Center Section	1
54	25-2390	Motor Valve Plate	1
55	25-2370	Motor Shaft	1
*	26-4410	Transmission Rebuilt	1

 *Not Illustrated

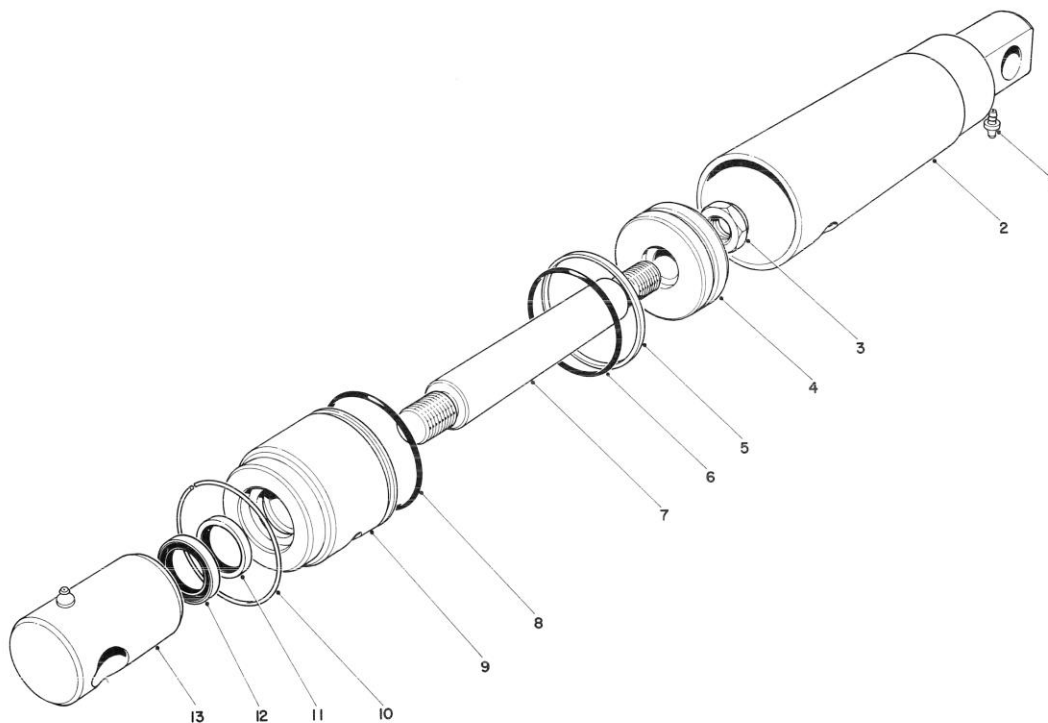

HYDRAULIC CYLINDER ASSEMBLY — 21-0390


Ref. No.	Part No.	Description	No. Used
1	302-22	Grease Fitting	2
2	21-9040	Barrel Assembly	1
3	3296-15	Locknut	1
4	21-9080	Piston	1
5		Slipper Ring	1
6		O-Ring	1
7	21-9030	Piston Rod	1
8		O-Ring	1

Ref. No.	Part No.	Description	No. Used
9	21-9070	Bearing	1
10		Lock Ring	1
11		Seal	1
12		Seal Wiper	1
13	21-9060	Rod End	1
*	21-9100	Seal Repair Kit (Incl. Ref. 5-6, 8 & 10-12)	1
# //		<i>Rod seal - can cause leakage- deck drops</i>	

*Not Illustrated

#4

 
Ball check will
trap fluid to hold
deck up in transport

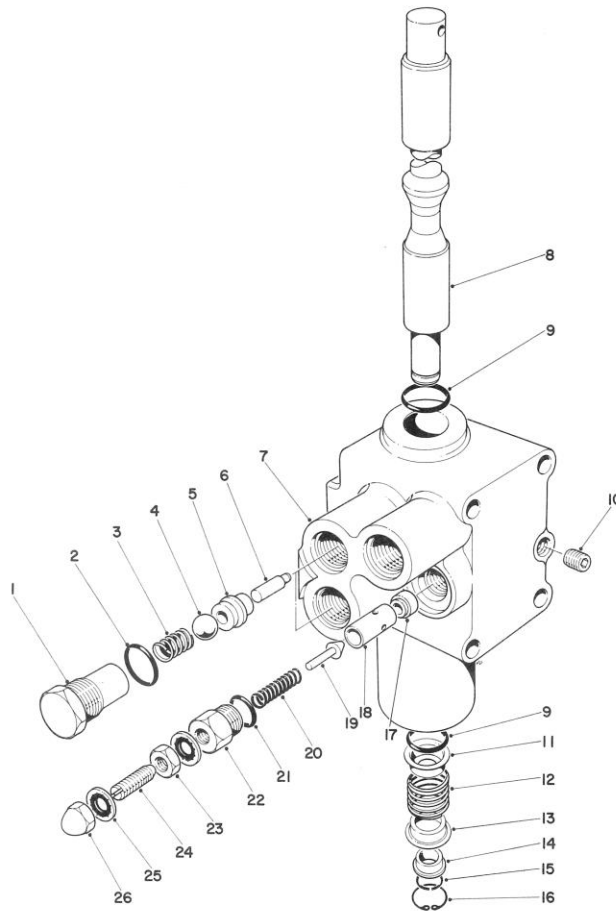

CONTROL VALVE — 21-8550

Ref. No.	Part No.	Description	No. Used
1	22-8330	Plug	2
2	237-42	O-Ring	2
3	22-8340	Spring	2
4	22-8350	Ball	2
5	22-8370	Seat — Check Valve	2
6	22-8360	Pin — Cam	2
7	22-8320	Body	1
8	22-8420	Spool	1
9	22-8500	O-Ring	2
10	22-8510	Plug	1
11	22-8380	Spring Retainer	1
12	22-8410	Spring	1
13	22-8390	Spring Retainer	1
14	22-8400	Spacer Float	1

Ref. No.	Part No.	Description	No. Used
15	22-8480	Snap Ring Spool	1
16	22-8490	Snap Ring	1
17	22-8430	Seat Rel. Valve Short	1
	22-8440	Relief Valve Assembly Adj. Type (Incl. Ref. # 18-26)	1
18		Guide	1
19		Plunger	1
20		Spring	1
21		O-Ring	1
22		Cap R/V Adjustment	1
23		Jam Nut	1
24		Set Screw	1
25		Stat-O-Seal	2
26		Acorn Nut	1

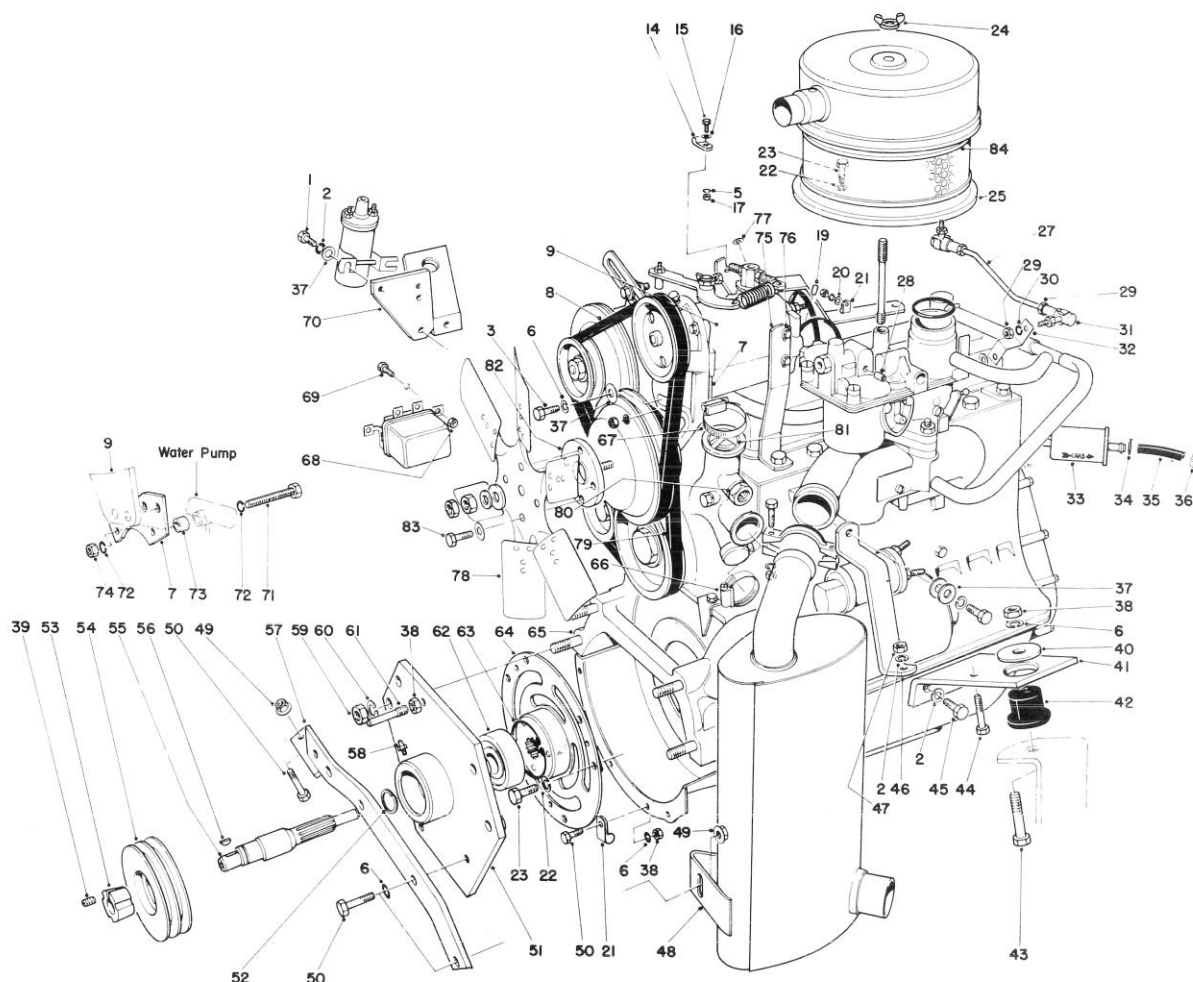 


ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	322-3	Capscrew	2
2	3253-4	Lockwasher	9
3	3211-5	Capscrew	2
6	3253-21	Lockwasher	7
7	25-8310	Bracket	1
8	25-8340	Drive Belt	1
9	25-7640	Mechanical Governor	1
14	2412-31	Clamp — Bodine	1
15	321-4	Capscrew	1
16	3256-22	Flat Washer	1
17	3217-5	Nut	1
19	21-5800	Closure (Dist.)	1
20	3256-23	Flat Washer	2
21	2412-41	Clamp	2
22	21-0340	Lockwasher	7
23	21-0330	Metric Capscrew	7
24	32103-12	Wing Nut	1
25	21-2220	Base Air Cleaner	1
26	21-2240	Stud Air Cleaner	1
27	25-9280	Throttle Rod	1
28	3290-386	Closure (Carb)	1
29	3219-14	Nut	4

Ref. No.	Part No.	Description	No. Used
30	3253-12	Lockwasher	2
31	21-5640	Ball Joint	2
32	21-5620	Lever Carburetor	1
33	18-1520	Gas Filter	1
34	2412-6	Clamp	2
35	18-2400	Hose — Fuel Line	1
36	2412-36	Clamp	1
37	3256-3	Flat Washer	6
38	3217-7	Nut	6
39	3247-4	Setscrew	2
40	3-3391	Washer	2
41	21-2300	Engine Mount	1
42	21-0130	Mount Rubber	2
43	323-11	Capscrew	2
44	322-6	Capscrew	1
45	21-0350	Metric Capscrew	6
46	21-2310	Bracket Engine Mount	1
47	3217-6	Full Nut	1
48	23-1850	Muffler	1
*	24-8610	Muffler Spark Arrestor	1
*	2112-9	Clamp	1
49	32128-19	Flange Nut	3

 * Not Illustrated, Optional Equipment

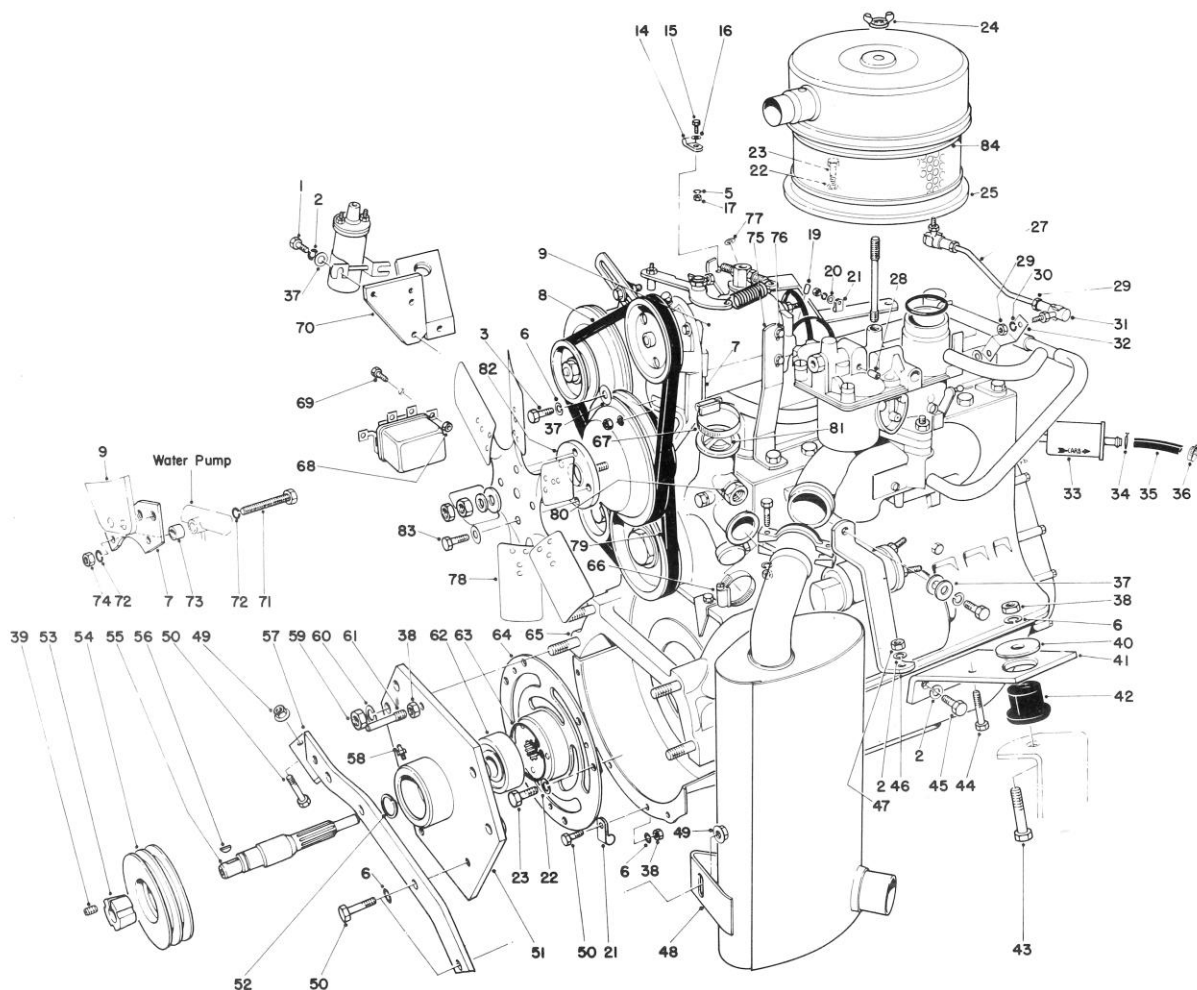


ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
50	323-6	Capscrew	5
51	23-1570	Bearing Mount	1
52	32120-69	Snap Ring	1
53	23-1640	Bushing — Taper Lock	1
54	23-1630	Pulley Drive	1
55	23-1620	Output Shaft — Engine	1
56	3257-5	Woodruff Key	1
57	23-1650	Front Engine Support	1
58	302-5	Grease Fitting	1
59	21-0360	Metric Nut	4
60	21-0370	Lockwasher	4
61	21-1820	Stud — Belt Retainer	3
62	251-261	Bearing	1
63	32120-22	Snap Ring	1
64	21-2260	Engine Adapter Drive	1
65	21-0050	Engine	1
66	2412-3	Hose Clamp	1
67	2412-42	Hose Clamp	1
68	32128-17	Flange Nut	2

Ref. No.	Part No.	Description	No. Used
69	3290-134	Hex Hd. Machine Screw	2
70	21-2320	Engine Mount	1
71	24-2560	Screw	1
72	3253-3	Lockwasher	2
73	24-2490	Spacer	1
74	21-5920	Nut	1
75	25-8320	Bracket Support	1
76	12-3270	Screw Thread Forming	2
77	3256-2	Washer Flat	1
78	27-0370	Fan	1
79	26-6660	Lower Fan Drive Belt	1
80	26-6690	Temperature Gage Adapter	1
81	26-5650	Thermostat	1
†	21-0050	Engine Continental Model No. R-839-46 complete except for items 1 - 84.	1
82	27-0390	Spacer	1
83	27-0400	Capscrew	4
84	27-7410	Sealing Ring	1

 
†Order from Engine Manufacturer

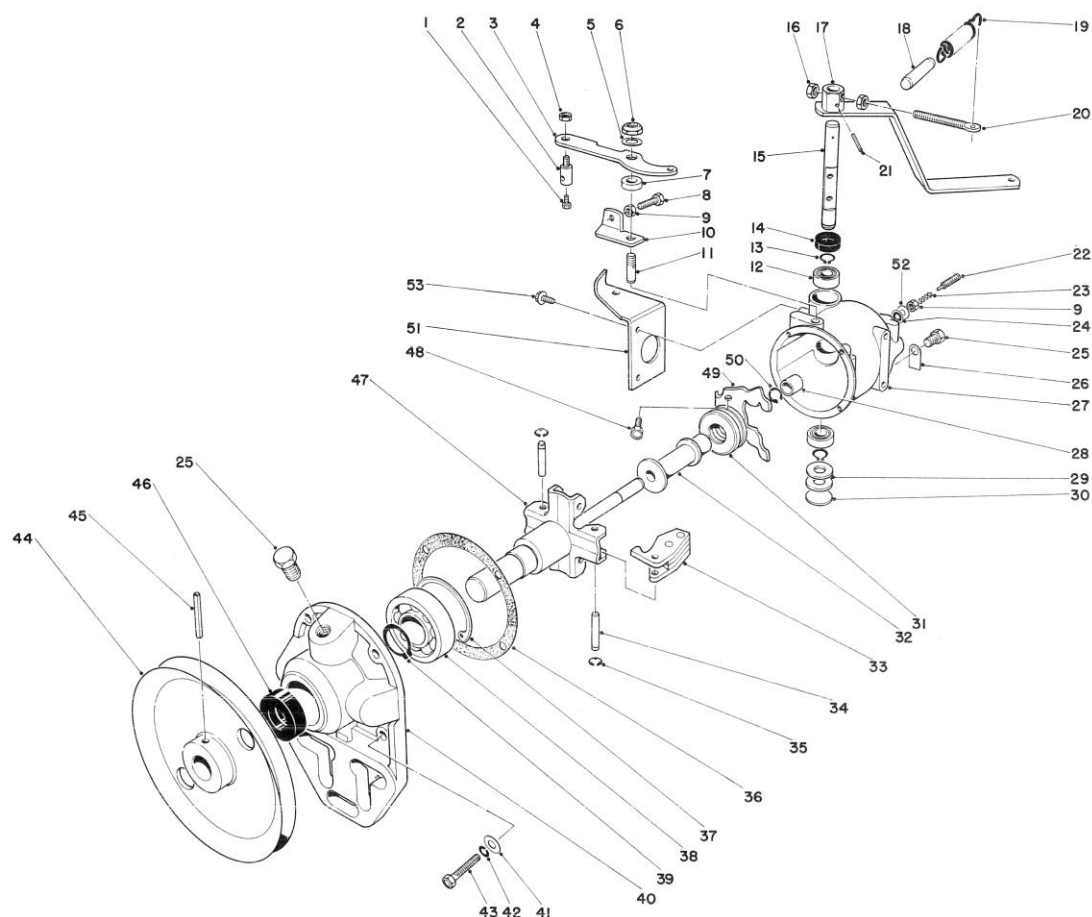

GOVERNOR ASSEMBLY — 25-7640

Ref. No.	Part No.	Description	No. Used
1	25-8640	Machine Screw	1
2	25-9090	Swivel	1
3	25-9040	Speed Change Lever	1
4	3296-13	Locknut	1
5	25-9110	Washer	1
6	25-8620	Locknut	1
7	25-9010	Spacer	1
8	329-4	Machine Screw	1
9	3219-1	Hex Nut	1
10	25-8940	Stop Bracket	1
11	25-9000	Stud	1
12	25-8600	Bearing	2
13	25-8500	Snap Ring	2
14	25-8550	Oil Seal	1
15	25-8990	Rocker Shaft	1
16	3219-2	Hex Nut	2
17	25-8900	Throttle Lever Assembly	1
18	25-9020	Forced Idle Plug	1
19	25-9050	Spring	1
20	25-8910	Eyescrew	1
21	32121-23	Roll Pin	1
22	25-8920	Bumper Screw	1
23	25-9060	Spring — Bumper	1
24	25-8560	Sealing Washer	1
25	25-8590	Pipe Plug	2
26	25-9080	Oil Level Tag	1
27	25-8930	Body	1


Ref. No.	Part No.	Description	No. Used
28	25-8610	Bushing	1
29	25-9100	Washer	2
30	25-8630	Welch Plug	1
31	25-8580	Thrust Bearing	1
32	25-8960	Thrust Sleeve	1
33	25-8880	Weight Assembly	2
34	25-9030	Weight Pin	2
35	25-8520	"E" Ring	2
36	25-9070	Gasket	1
37	25-8530	Snap Ring	1
38	251-6	Bearing	1
39	25-8510	Snap Ring	1
40	25-8980	Flange	1
41	3256-14	Flat Washer	4
42	3253-17	Lockwasher	4
43	3290-332	Machine Screw	4
44	25-8970	Pulley	1
45	32121-16	Roll Pin	1
46	25-8570	Oil Seal	1
47	25-8890	Spider & Shaft Assembly	1
48	25-9160	Machine Screw	2
49	25-8950	Yoke	1
50	25-8540	Snap Ring	1
51	25-8440	Bracket	1
52	26-7260	Shim Washer	1
53	12-3270	Self Tapping Screw	2

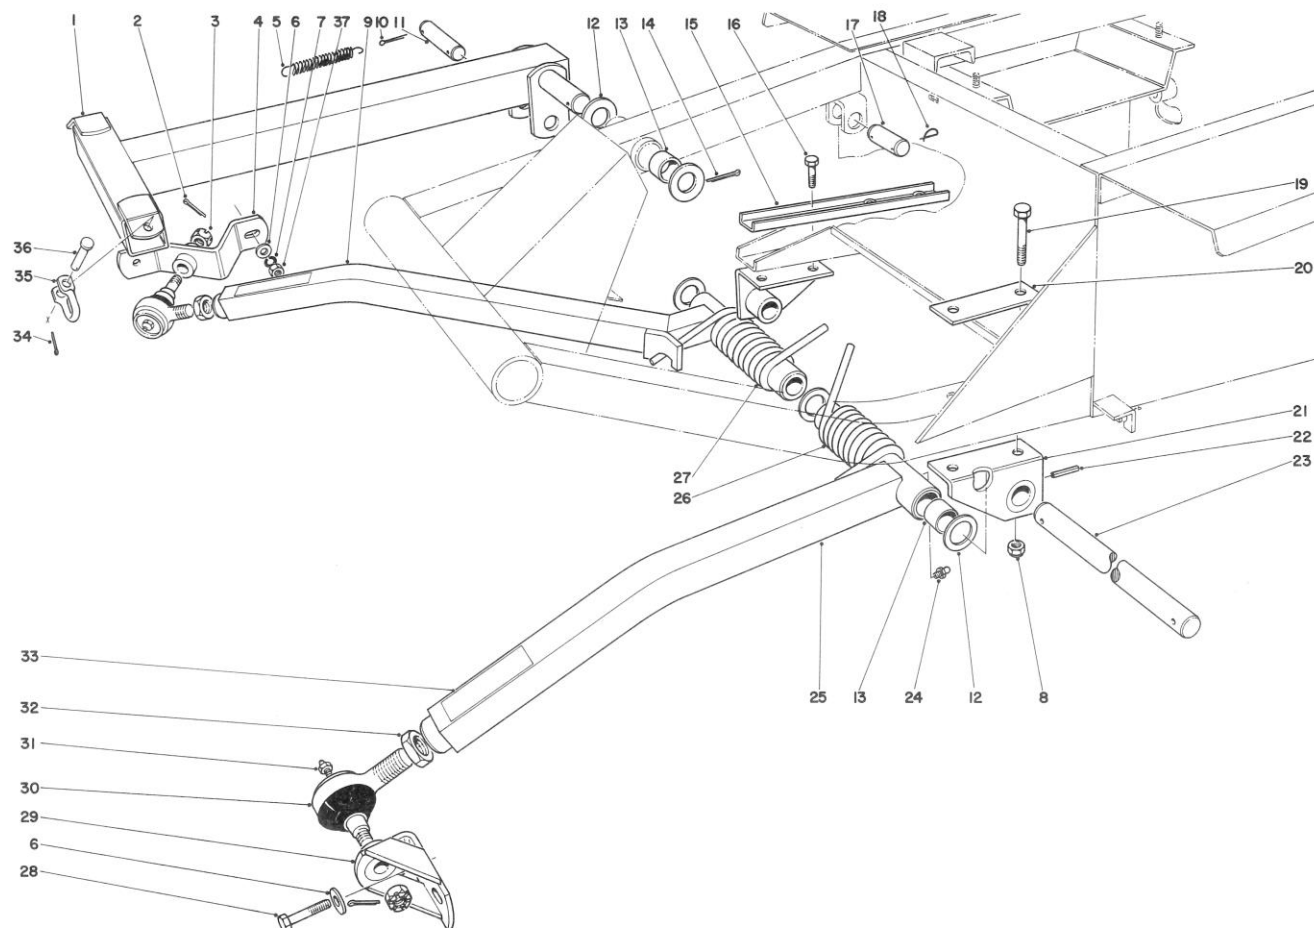 

PUSH ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	21-3100	Lift Arm	1
2	3272-11	Cotter Pin	2
3	32136-2	Nut	2
4	21-3020	Ball Joint Mount R.H.	1
5	21-1830	Spring	1
6	3256-25	Flat Washer	3
7	3253-6	Lockwasher	2
8	3296-48	Nut	4
9	21-2910	Push Arm R.H. (Incl. Ref. #13 & 24)	1
10	3272-24	Cotter Pin	1
11	24-9510	Pin	1
12	5-1754	Countershaft Washer	5
13	256-126	Bushing	6
14	3272-33	Cotter Pin	1
15	23-1950	Support Reinforcement	1
16	324-5	Capscrew	2
17	3-7292	Pin	1
18	5-3126	Spring Pin	3

Ref. No.	Part No.	Description	No. Used
19	324-12	Capscrew	2
20	21-3750	Plate Support	1
21	21-2860	Push Arm Bracket	2
22	32121-84	Roll Pin	2
23	21-2990	Shaft Pivot	1
24	302-33	Grease Fitting	2
25	21-2960	Push Arm L.H. (Incl. Ref. #13 & 24)	1
26	21-2900	Spring Torsion L.H.	1
27	21-2890	Spring Torsion R.H.	1
28	324-6	Capscrew	2
29	21-3050	Ball Joint Mount L.H.	1
30	21-0160	Ball Joint	2
31	302-2	Grease Fitting	2
32	21-3000	Jam Nut	2
33	21-3970	Decal Warning	2
34	3272-10	Cotter Pin	2
35	5-2942	Shackle	2
36	283-10	Pin	2
37	3217-8	Nut	2

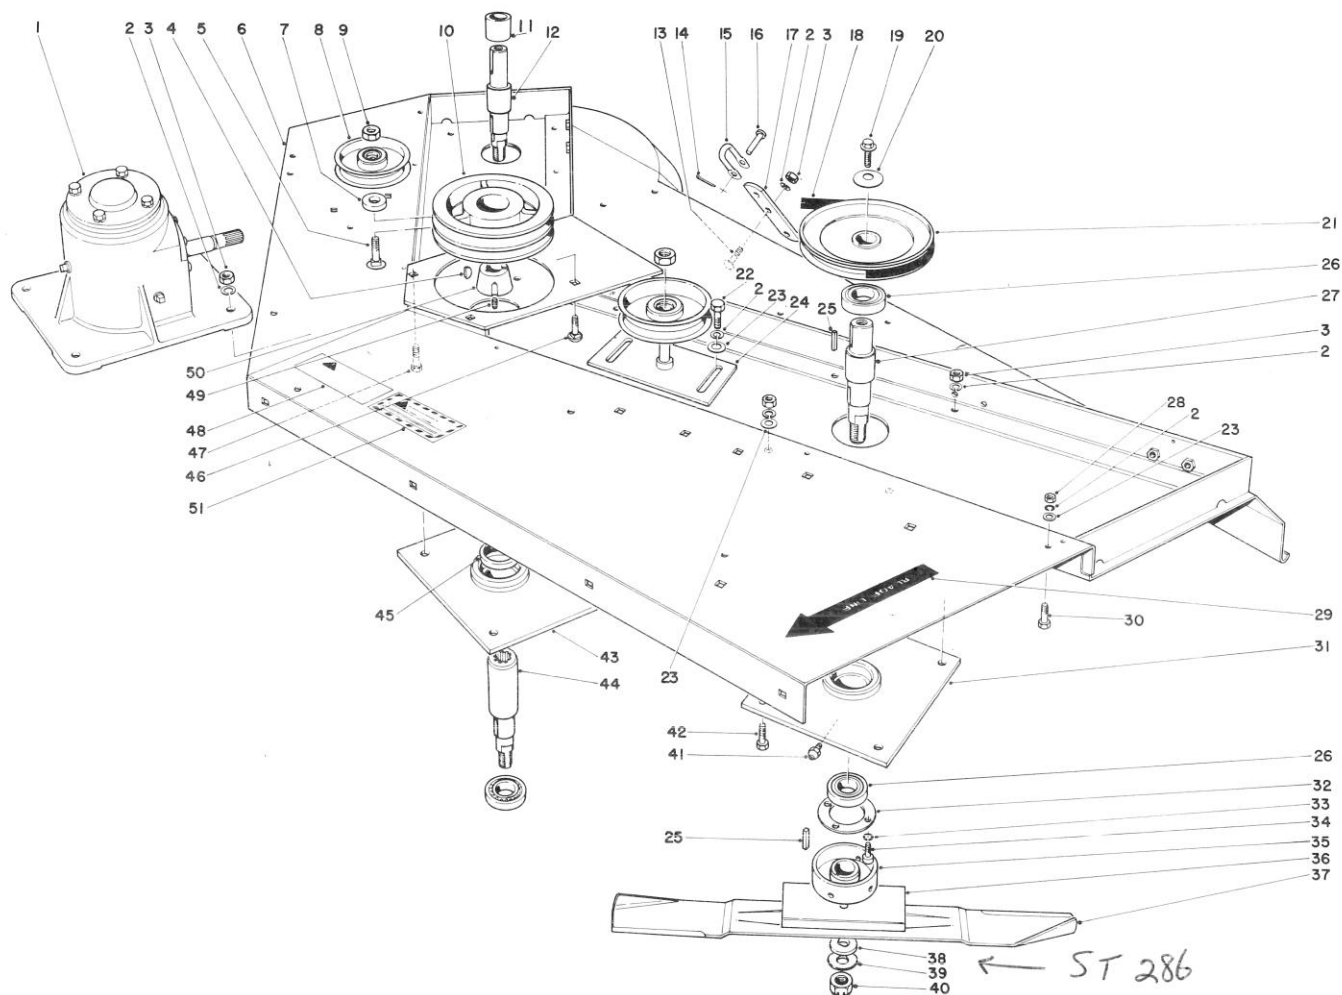 


CUTTER DECK AND SPINDLE SHAFT ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	21-0010	Gear Box Assembly	1
2	3253-21	Lockwasher	23
3	3217-7	Full Nut	18
4	3257-5	Key Woodruff	1
5	3233-14	Carriage Bolt	1
6	21-0500	Cutter Deck	1
7	21-3720	Spacer Idler Pulley	1
8	27-0190	Idler Pulley	2
9	32146-13	Nut	2
10	21-0770	Pulley Deck	1
11	21-0860	Spacer — Pulley	1
12	23-2360	Spindle Shaft R.H.	1
13	3231-28	Carriage Bolt	2
14	3272-10	Cotter Pin	2
15	5-2942	Shackle	2
16	283-10	Pin	2
17	21-3770	Lift Strap — Rear Deck	1
18	21-0890	V - Belt	2
19	3234-6	Screw Hex Flange	2
20	21-0640	Waher Shakeproof	2
21	21-3990	Pulley	2
22	323-5	Capscrew	2
23	3256-24	Plain Washer	11
24	21-3660	Idler Base	1
25	21-0830	Key Spindle	5
26	251-257	Bearing	5

Ref. No.	Part No.	Description	No. Used
27	23-2390	Spindle Shaft L.H.	1
28	3296-39	Nut	3
29	21-3960	Decal Blade Line	1
30	323-6	Capscrew	3
31	21-0740	Spindle Housing — Ends	2
32	21-0820	Retainer Bearing	3
33	3253-3	Lockwasher	12
34	3274-15	Hex Socket Capscrew	12
35	21-0790	End Cap Spindle	3
36	23-2400	Retainer Blade	3
37	23-2410	Blade	3
38	21-0930	Washer Special	3
39	22-8520	Belleville Washer	3
40	17-0980	Nut Special	3
41	302-51	Grease Fitting	3
42	323-18	Capscrew	12
43	21-0650	Spindle Housing — Center	1
44	23-2380	Spline Shaft	1
45	253-133	Oil Seal	1
46	3231-4	Carriage Bolt	3
47	323-8	Capscrew	1
48	21-3940	Decal Caution	1
49	3247-4	Set Screw	2
50	21-0880	Bushing Taper Lock	1
51	25-0440	Decal Warning	1
*	6-7569	Turf Kit	1

 
*Not Illustrated

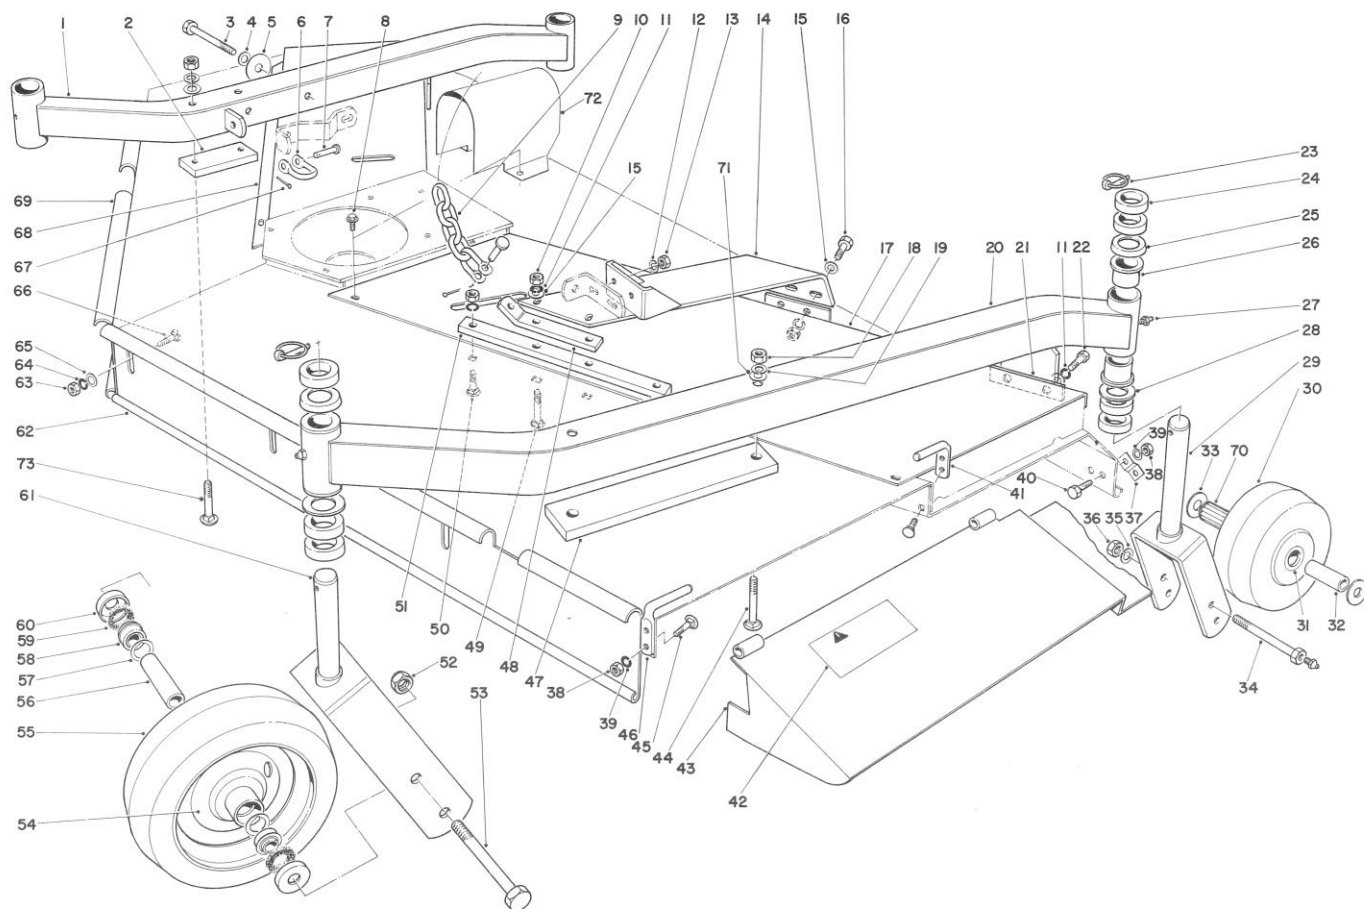

CUTTING UNIT CASTOR WHEEL AND DEFLECTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	25-4110	Castor Arm R.H. (Incl. Ref.#26)	1
2	21-0960	Spacer — Castor Arm R.H.	1
3	324-12	Capscrew	2
4	3256-25	Flat Washer	2
5	3256-5	Flat Washer	2
6	5-2942	Shackle	2
7	283-10	Pin	2
8	32104-82	Screw Self-Tapping	12
9	21-3160	Lift Chain	3
10	3217-7	Full Nut	6
11	3253-21	Lockwasher	10
12	3253-6	Lockwasher	2
13	3217-8	Nut	2
14	21-1040	Ball Joint Mount	1
15	3256-24	Plain Washer	8
16	323-18	Capscrew	2
17	21-0720	Cover — Deck L.H.	1
18	3217-9	Nut	4
19	3253-7	Lockwasher	4
20	25-4100	Castor Arm L.H. (Incl. Ref.#26)	1
21	21-0480	Spacer Cover	3
22	323-7	Capscrew	4
23	3290-243	Pin	4

Ref. No.	Part No.	Description	No. Used
24	3-6783	Spacer	14
25	3-6782	Slinger	4
26	256-150	Bushing	8
27	302-5	Grease Zerk	4
28	3-6781	Washer	4
29	21-1000	Castor Fork Rear	2
30	21-3860	Wheel Castor	2
31	21-3840	Bearing Retainer Sealed	4
32	21-1030	Spanner Bushing	2
33	3256-44	Thrust Washer	4
34	21-3870	Axle	2
35	3254-4	Lockwasher	2
36	3220-5	Nut	2
37	21-3790	Strap Deflector	1
38	3217-5	Full Nut	6
39	3253-3	Lockwasher	6
40	321-3	Capscrew	2
41	21-3820	Pivot Pin — Deflector Rear	1
42	21-3910	Decal — Caution — Deflector Chute	1
43	21-3730	Deflector Chute	1
44	3233-12	Carriage Bolt	2
45	3229-1	Carriage Bolt	4

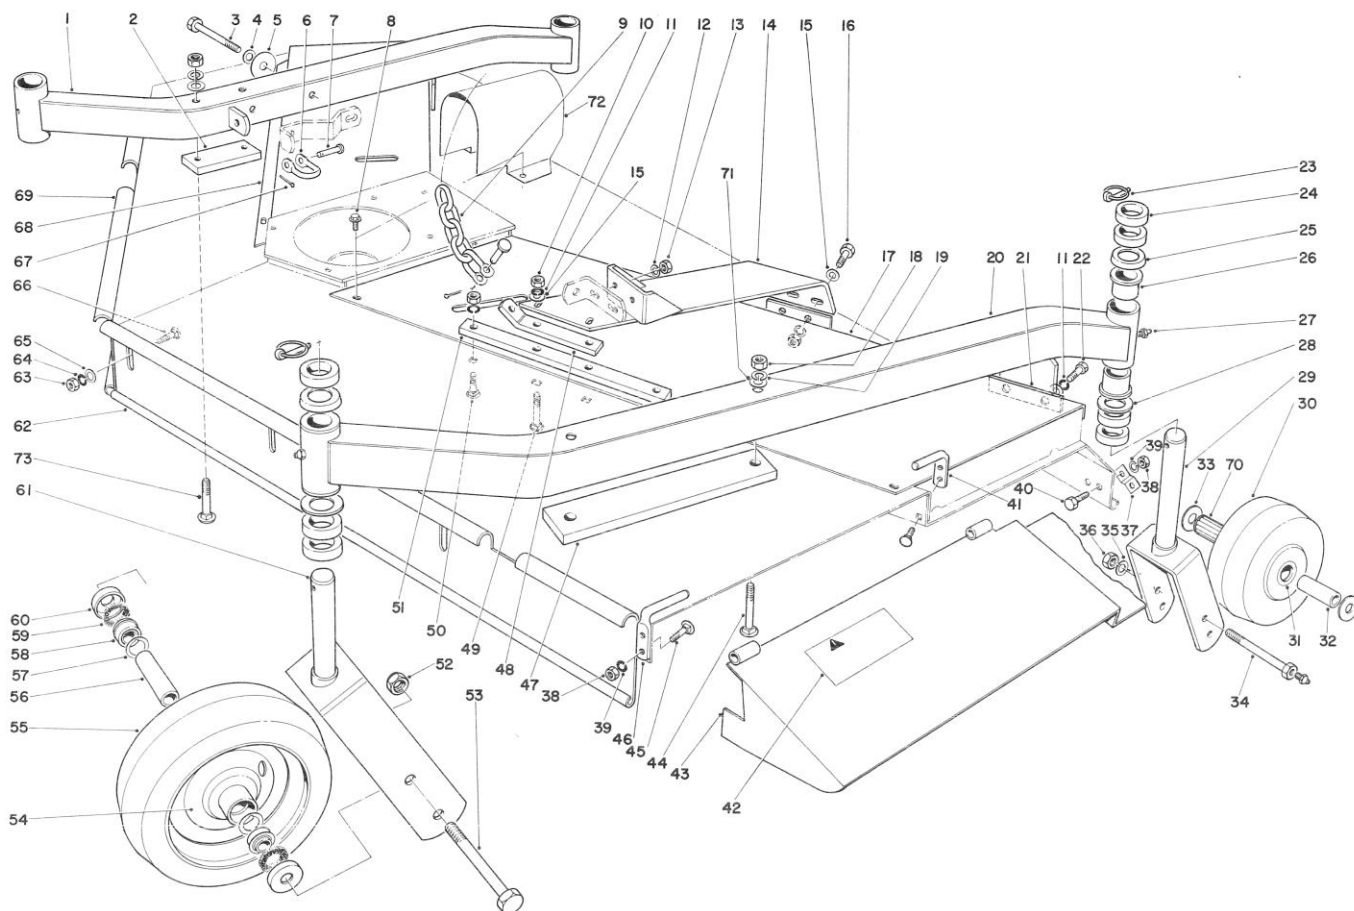 


CUTTING UNIT CASTOR WHEEL AND DEFLECTOR ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
46	21-3830	Pivot Pin Deflector — Front	1
47	21-0970	Spacer — Castor Arm L.H.	1
48	21-1080	Lift Strap L.H.	1
49	3231-29	Carriage Bolt	2
50	3231-28	Carriage Bolt	2
51	21-1070	Spacer — Ball Joint Support	1
52	3296-45	Nut	2
53	325-21	Capscrew	2
54	3-0139	Wheel & Tire	2
55	3-6774	Tire	2
56	3-6776	Spacer	2
57	3-6775	Washer	4
58	251-181	Bearing	4
59	3-6777	Felt Washer	4
60	3-6778	Axle Slinger	4

Ref. No.	Part No.	Description	No. Used
61	21-0980	Castor Fork	2
62	21-0710	Front Shield L.H.	1
63	3217-6	Full Nut	8
64	3253-4	Lockwasher	8
65	3256-3	Plain Washer	8
66	3230-1	Carriage Bolt	8
67	3272-10	Cotter Pin	2
68	21-0730	Cover — Deck R.H.	1
69	21-0700	Front Shield R.H.	1
70	21-3850	Roller Bearing	2
71	3256-6	Washer	4
72	21-9960	Shield	1
73	3233-15	Carriage Bolt	2

 
* Not Illustrated

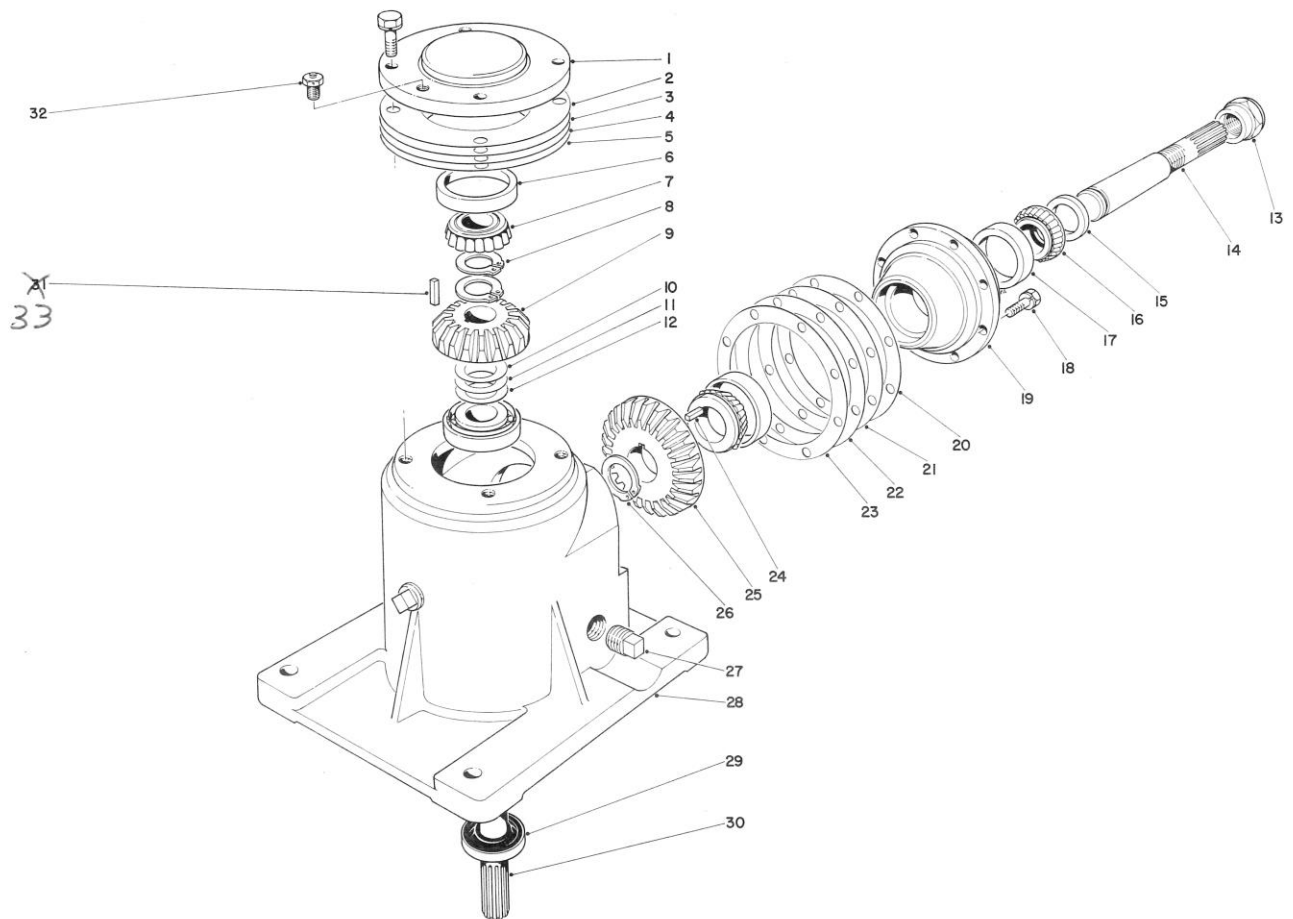

GEAR CASE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	25-7490	Cap	1
2	21-6210	Gasket .002 Thick	A/R
3	21-6200	Gasket .003 Thick	A/R
4	21-6190	Gasket .005 Thick	A/R
5	21-6180	Gasket .015 Thick	A/R
6	21-6120	Bearing Cup	2
7	21-6110	Bearing Cone	2
8	21-6170	Retaining Ring	2
9	21-6090	Pinion 20 Teeth	1
10	21-6150	Shim .002 Thick	A/R
11	21-6140	Shim .005 Thick	A/R
12	21-6130	Shim .010 Thick	A/R
13	22-4970	Sealing Nut	1
14	21-6340	Input Shaft	1
15	21-6310	Seal	1
16	254-94	Bearing Cone	2
17	254-72	Bearing Cup	2


Ref. No.	Part No.	Description	No. Used
18	32140-96	Sems Capscrew	12
19	21-6370	Hub	1
20	21-6300	Gasket .002 Thick	A/R
21	21-6290	Gasket .003 Thick	A/R
22	21-6280	Gasket .005 Thick	A/R
23	21-6270	Gasket .015 Thick	A/R
24	21-6060	Square Key	1
25	21-6100	Gear 29 Teeth	1
26	21-6050	Retaining Ring	1
27	281-2	Pipe Plug	2
28	25-7500	Housing	1
29	21-6080	Seal	1
30	21-6070	Output Shaft	1
32	302-34	Breather	1
33	21-6240	Square Key	1

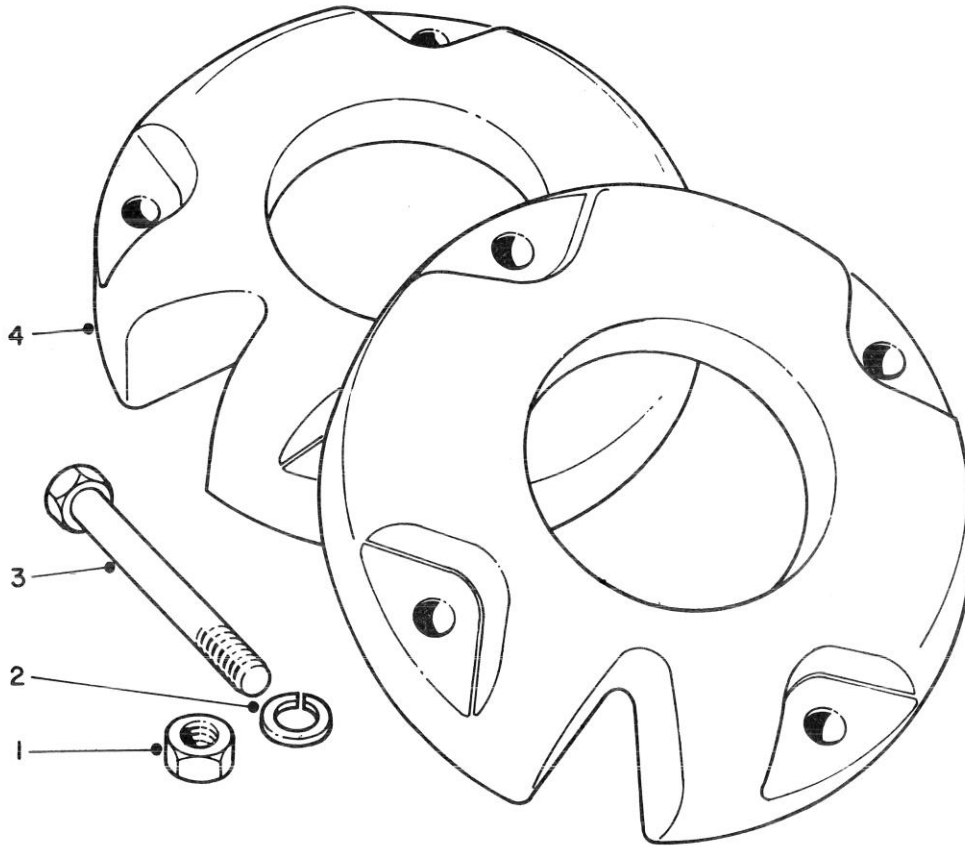 

WHEEL WEIGHTS Model No. 11-0440 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3218-5	Nut	8
2	3253-7	Lockwasher	8


Ref. No.	Part No.	Description	No. Used
3	325-26	Capscrew	8
4	7-2111	Wheel Weight	2

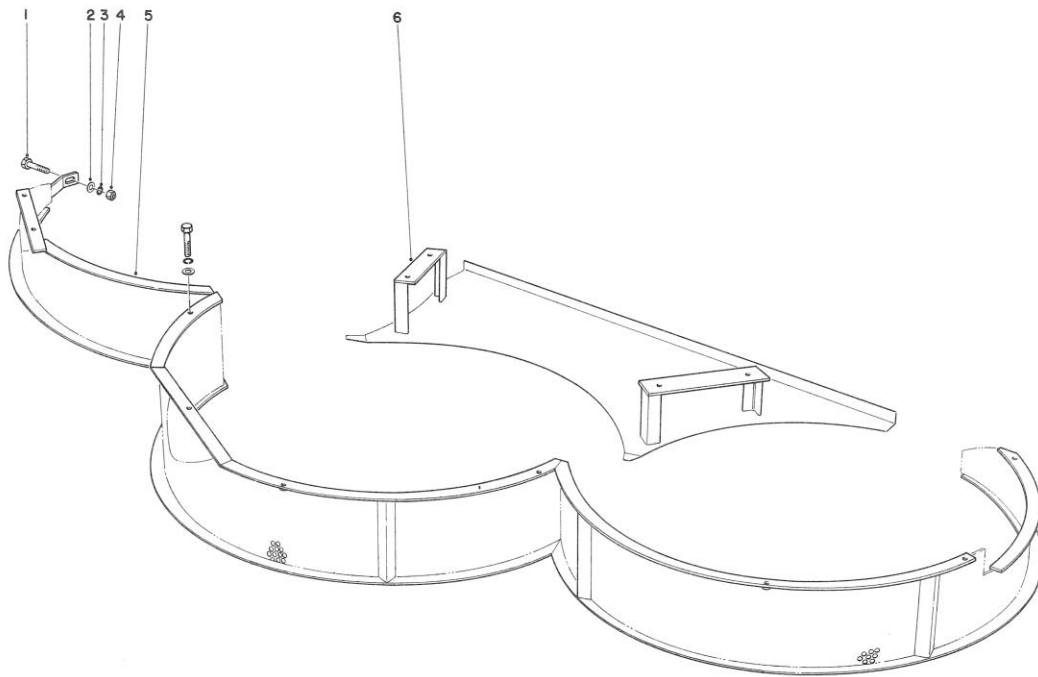 

MULCHER KIT Model No. 30730 (Optional)

Ref. No.	Part No.	Description	No. Used
1	323-6	Capscrew	14
2	3256-24	Flat Washer	14
3	3253-21	Lockwasher	14


Ref. No.	Part No.	Description	No. Used
4	3296-39	Nut	14
5	23-4010	Mulcher Screen	1
6	23-4190	Bottom Rear Shield	1

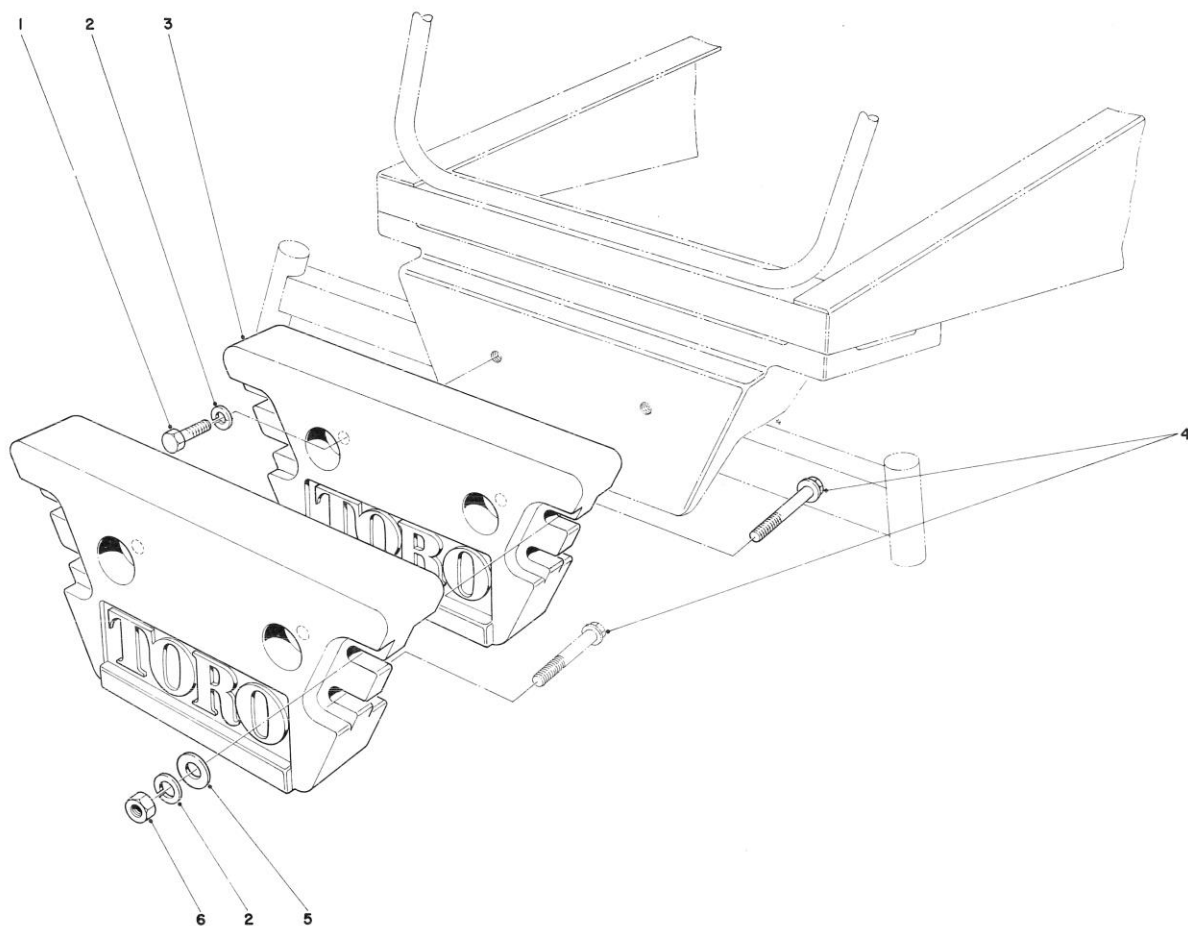 

REAR WEIGHT KIT Model No. 24-5780 (Optional)

Ref. No.	Part No.	Description	No. Used
1	325-6	Capscrew	2
2	3253-7	Lockwasher	6
3	24-5790	Rear Weight	2


Ref. No.	Part No.	Description	No. Used
4	325-14	Capscrew	4
5	3256-26	Flat Washer	8
6	3217-9	Nut	4

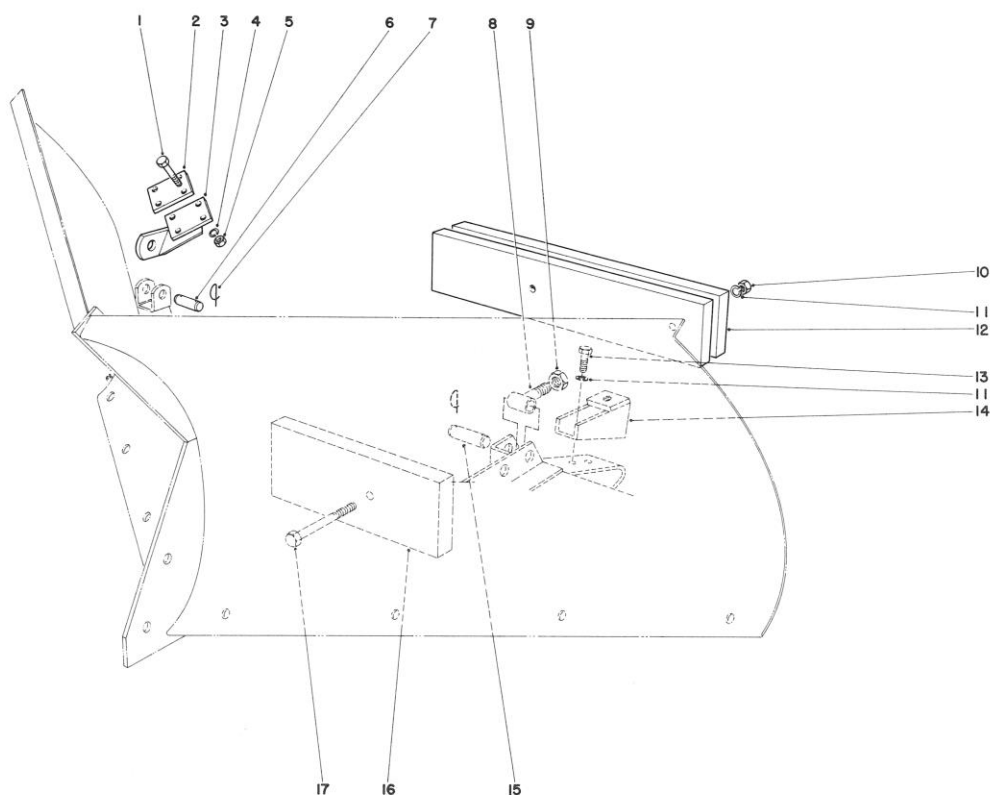 

V-PLOW INSTALLATION KIT Model No. 30757 (Optional)

Ref. No.	Part No.	Description	No. Used
1	323-14	Capscrew	4
2	24-2690	Clamp Plate	1
3	24-2680	Push Arm Bracket	1
4	3253-21	Lockwasher	4
5	3217-7	Nut	4
6	5-3505	Pin	1
7	5-3126	Spring Pin	4
8	23-9930	Push Pin	1

Ref. No.	Part No.	Description	No. Used
9	21-3000	Jam Nut	1
10	3217-9	Nut	2
11	3253-7	Lockwasher	4
12	24-2660	Outside Weight	2
13	325-4	Capscrew	2
14	24-2630	Stop	1
15	25-1350	Pin	1
16	24-2670	Inside Weight	2
17	325-22	Capscrew	2

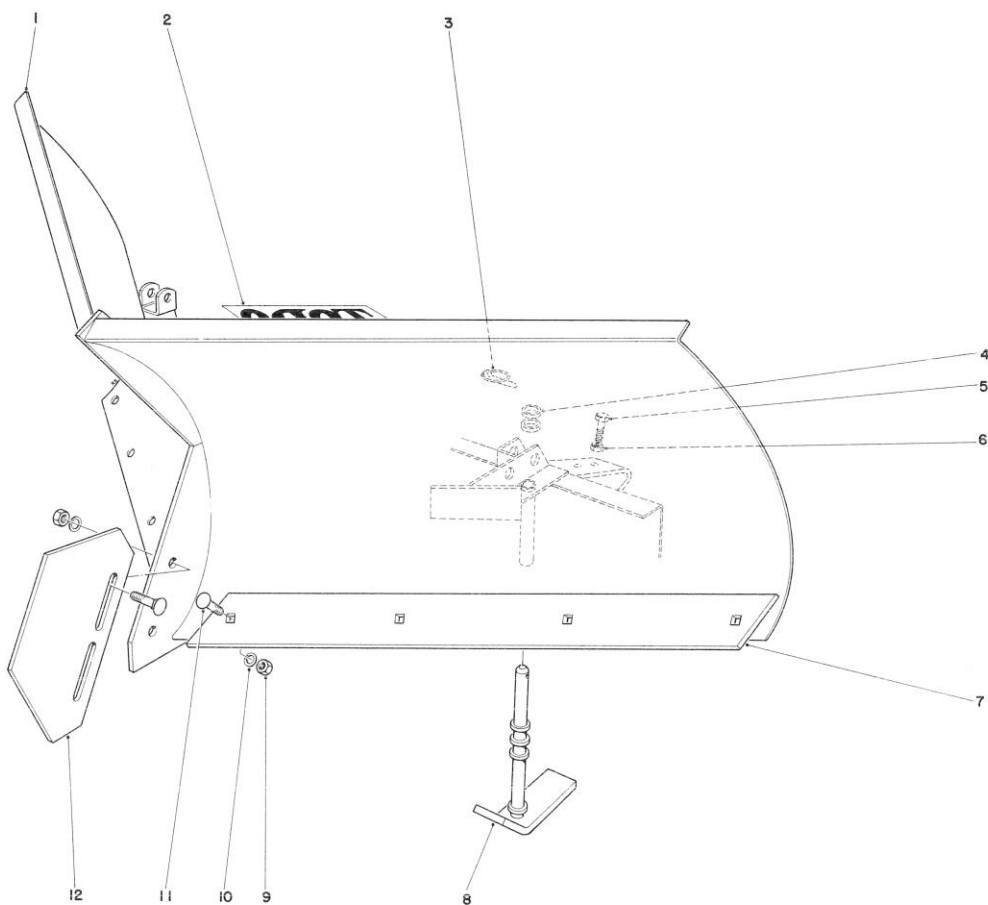 


V-PLOW Model No. 30750 (Optional)

Ref. No.	Part No.	Description	No. Used
1	23-9960	V-Plow	1
2	18-2180	Decal	1
3	3290-243	Lynch Pin	2
4	20-4370	Spacer Tubes	10
5	325-6	Capscrew	1
6	3218-5	Jam Nut	1
7	24-5570	Scraper Blade	2

Ref. No.	Part No.	Description	No. Used
8	24-5540	Skid	2
9	3217-9	Nut	10
10	3253-7	Lockwasher	10
11	3233-2	Carriage Bolt	10
12	24-5530	Nose Skid	1
*	11-0390	Chains (1 Pair)	1

 
*Not Illustrated

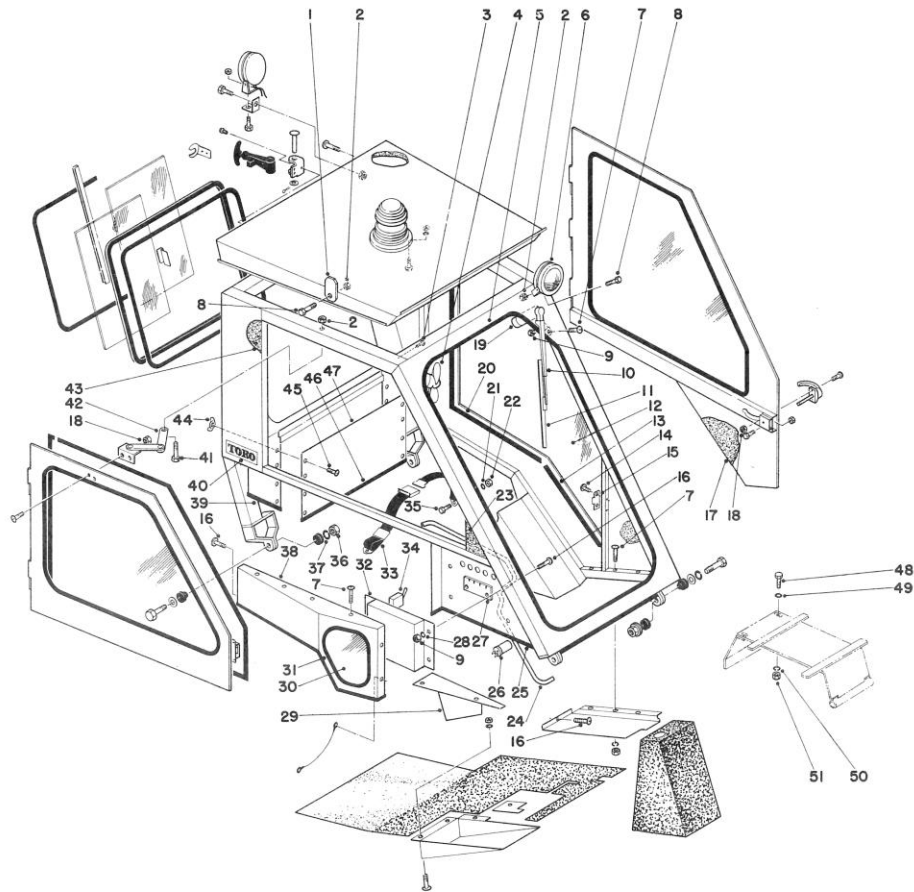

CAB WITH ROLL OVER PROTECTION KIT NO. 30734 (Optional)

Ref. No.	Part No.	Description	No. Used
1	25-4550	Lifting Bar	2
2	32153-3	Locknut	4
3	32104-60	Self Tapping Screw	3
4	25-4590	Rubber Blade Fan	1
5	25-4670	Front Panel Window Rubber	1
6	25-4250	Headlight	2
7	3251-7	Round Head Machine Screw	8
8	322-3	Capscrew	4
9	3217-26	Nut	17
10	25-4690	Windshield Wiper Arm	1
11	25-4700	Windshield Wiper Blade	1
12	25-4660	Front Panel Window Glass	1
13	25-4750	Door Weather Stripping	1
14	32144-10	Self Tapping Screw	4
15	25-4740	Door & Window Striker	2
16	3251-2	Round Head Machine Screw	10
17	25-4620	Left Door Polyfoam	1
18	32153-4	Locknut	6
19	25-4440	Windshield Wiper Motor	1
20	25-4720	Door Weather Stripping	1


Ref. No.	Part No.	Description	No. Used
21	3256-25	Flat Washer	2
22	3296-48	Locknut	2
23	25-4610	Right Side Corner Seal-Polyfoam	1
24	25-4640	Left Side Sealing Rubber	1
25	25-4640	Right Front Corner Panel Sealing Rubber	1
26	25-4300	Flasher (2 Prong)	1
27	25-4540	Fuse Block	1
28	3253-17	Lockwasher	14
29	25-4400	Right Pocket Holder	1
30	25-4580	Right Side Bolt-on Window Glass	1
31	25-4670	Right Side Bolt-on Rubber	1
32	25-4650	Cover Panel	1
33	21-4190	Seat Belt	1
34	25-4230	Toggle Switch	4
35	324-4	Hex Head Capscrew	2
36	3217-30	Nut	4
37	3253-9	Lockwasher	2
38	25-4460	Right Side Bolt-on Seal	1
39	25-4640	Back Panel Sealing Rubber	1

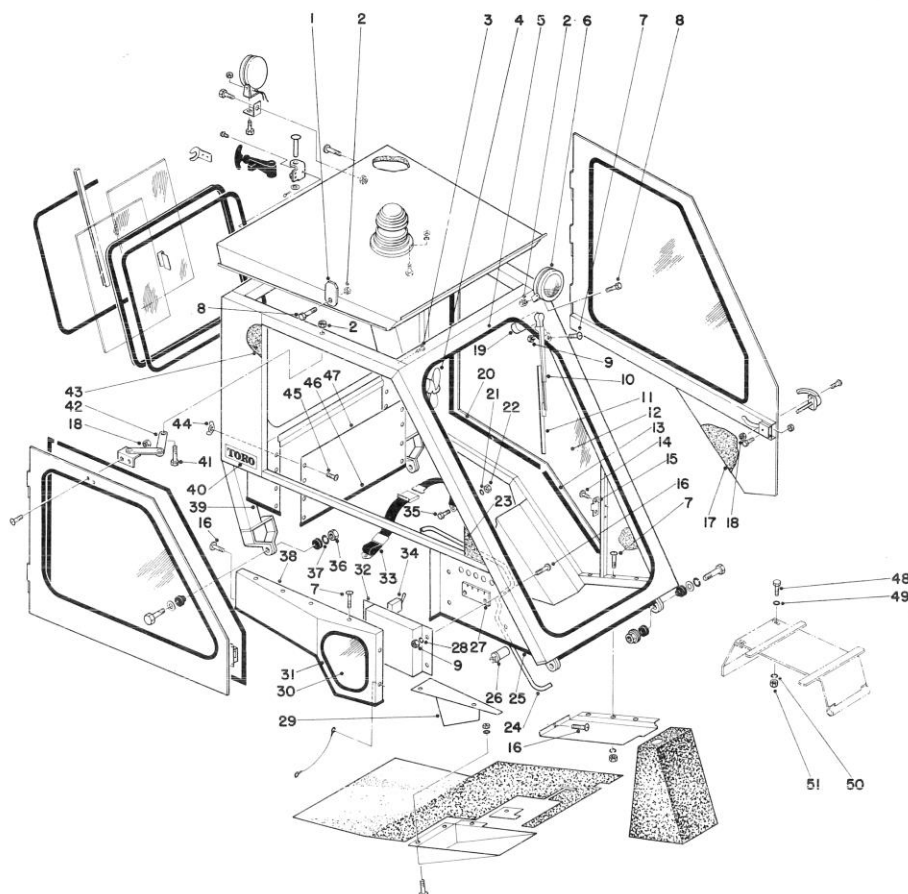 

CAB WITH ROLL OVER PROTECTION (Continued)

Ref. No.	Part No.	Description	No. Used
40	18-2150	Decal-Toro	2
41	322-12	Capscrew	2
42	25-4730	Door & Window Holder	2
43	25-4410	Side Panel Polyfoam (R&L)	2
44	32103-12	Wing Nut	8
45	3290-133	Round Head Machine Screw	8

Ref. No.	Part No.	Description	No. Used
46	25-4640	Back Sealing Rubber	1
47	25-4490	Back Seal Bolt-on	1
48	323-7	Capscrew	2
49	3256-3	Washer	2
50	3253-21	Lockwasher	2
51	3217-7	Nut	2

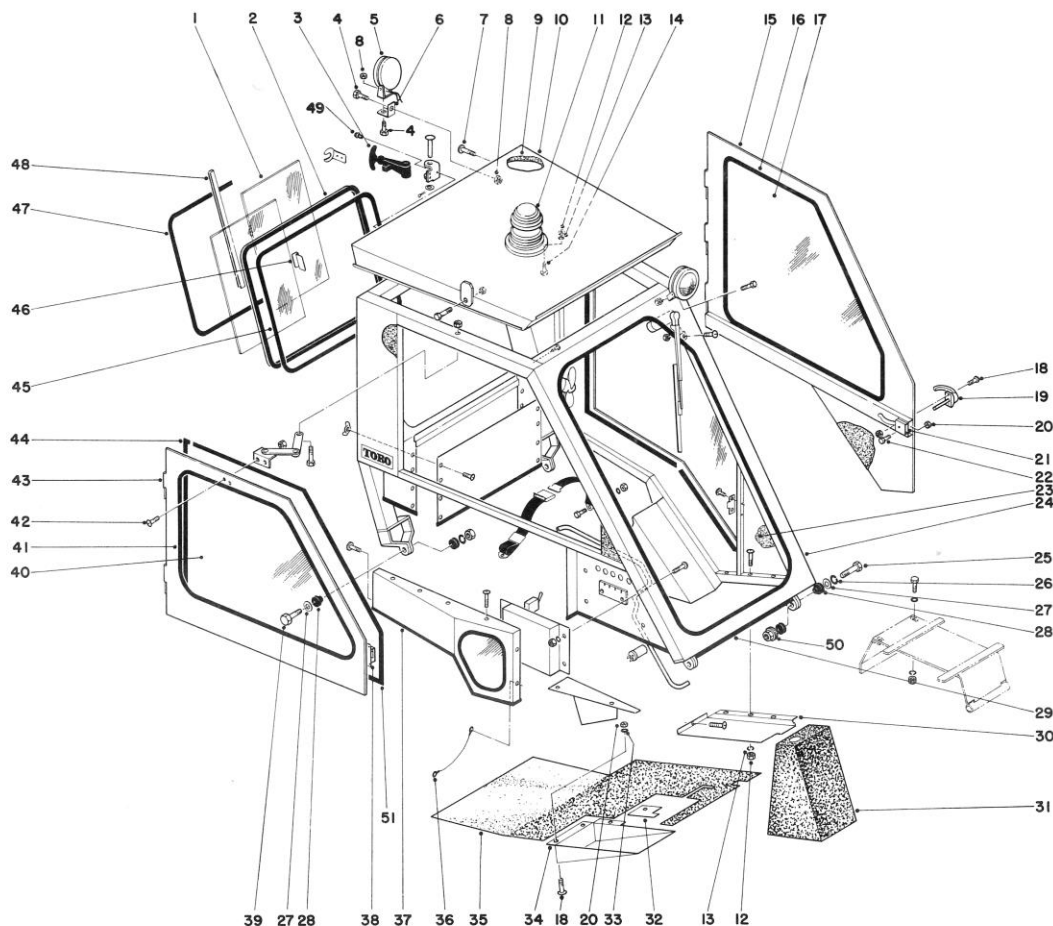 



CAB WITH ROLL OVER PROTECTION

Ref. No.	Part No.	Description	No. Used
1	25-4360	Back Glass	2
2	25-4380	Back Combination Channel	1
3	25-5500	Hood Latch	1
4	322-3	Capscrew	4
5	25-4240	Rear Working Light	1
6	25-4310	Tail Light Bracket	1
7	32144-10	Self Tapping Screw	6
8	32153-3	Locknut	4
9	25-4710	1" Insulation	1
10	25-4530	Roof Assembly	1
11	25-4220	Flashing Amber Beacon	1
12	3217-26	Nut	6
13	3253-17	Lockwasher	6
14	3251-4	Round Head Machine Screw	3
15	25-4520	Left Door	1
16	25-4670	Left Door Window Rubber	1
17	25-4450	Left Door Window Glass	1
18	3290-133	Round Head Machine Screw	5
19	25-4290	Door Handle-Locking	1
20	32153-4	Locknut	11
21	25-4270	Inside Door Handle-L.H.	1
22	321-3	Capscrew	8
23	25-4630	Left Front Filler-Polyfoam	1
24	25-4470	Cab Frame	1
25	328-20	Capscrew	2
26	3253-9	Lockwasher	2

Ref. No.	Part No.	Description	No. Used
27	3256-8	Flat Washer	4
28	25-4500	Rubber Mount	4
29	25-4640	Front Sealing Rubber	1
30	25-4370	Left Front Corner	1
31	25-4430	Fabric Boot Around Steering	1
32	25-4680	Left Pocket Holder	1
33	3256-22	Flat Washer	3
34	25-4600	Fabric Boot For Foot Pedal	1
35	25-4570	Floor Mat	1
36	25-4560	Ground Wire	1
37	25-4640	Right Side Sealing Rubber	1
38	25-8280	Inside Window Handle-R.H.	1
39	328-22	Hex Head Capscrew	2
40	25-4480	Right Door Window Glass	1
41	25-4670	Right Door Window Rubber	1
42	3258-19	Round Head Machine Screw	4
43	25-4510	Right Door	1
44	25-4720	Door Weather Stripping	1
45	25-4390	Back Combination Rubber	1
46	25-4420	Window Push & Pull Handle	1
47	25-4350	Spacing Rubber	1
48	25-4340	Window Sealing Felt	1
49	32104-60	Self Tapping Screw	5
50	25-8270	Front Mount	2
51	25-4750	Door Weather Stripping	1

Cab used as ground.

  7 wires coming out of harness. We only use 4 of them. Cut the other ones off.

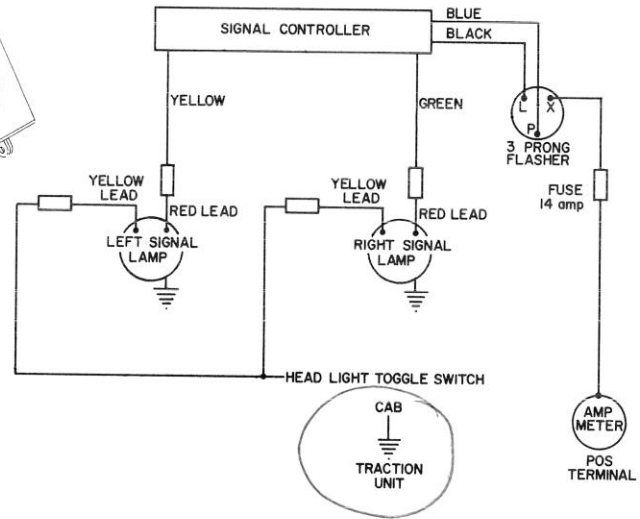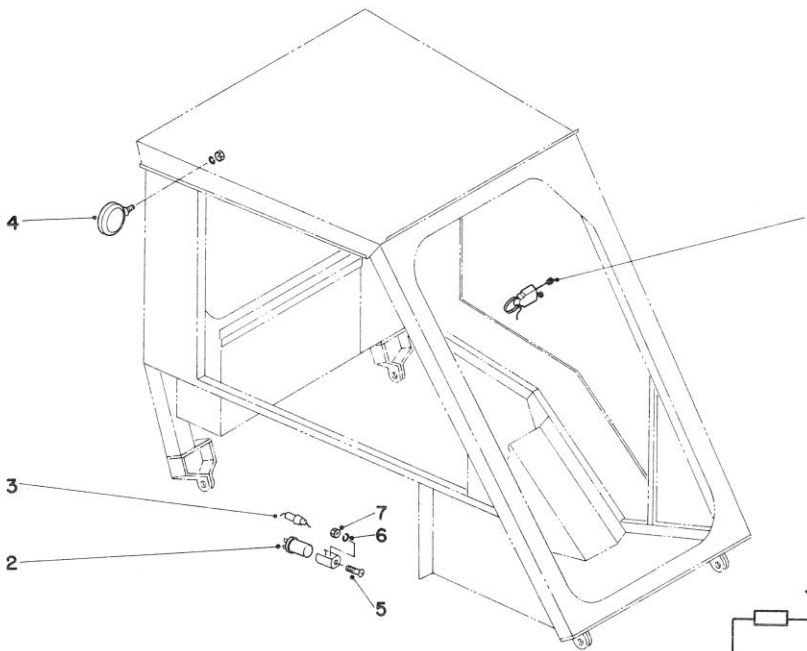


LIGHT KIT FOR CAB KIT NO. 30737 (Optional)

Ref. No.	Part No.	Description	No. Used
1	11-6400	Signal Controller	1
2	218-456	Flasher (3 Prong)	1
3	218-273	Inline Fuse (With 14 Amp Fuse)	1
4	25-4260	Signal & Tail Lights	2
5	3251-2	Round Hd. Machine Screw	1

Ref. No.	Part No.	Description	No. Used
6	3253-17	Lockwasher	1
7	3217-26	Nut	1
*†		40 Ft. Wire	1
*†		Female Receptacle (14 Ga. Wire)	3
*†		Slotted Spade (#6 Stud 14 Ga. Wire)	2

*Not Illustrated

 †Obtain From Your Local Hardware

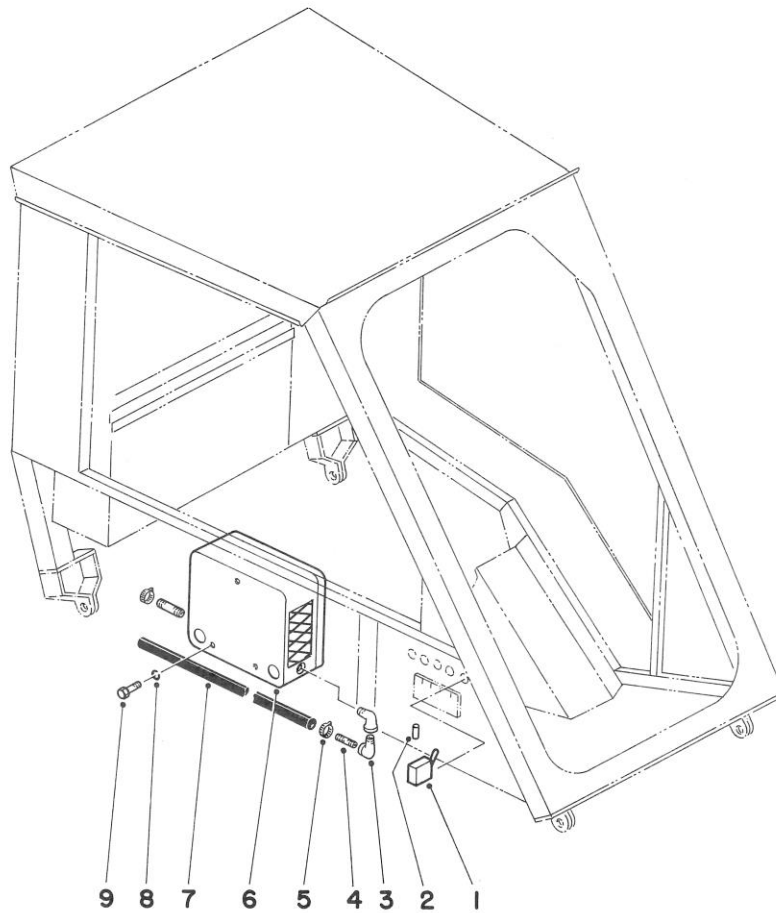


HEATER KIT NO. 30736 (Optional)

Ref. No.	Part No.	Description	No. Used
1	25-4230	Toggle Switch	1
2†		Fuse 20 SFE	1
3†		Street Elbow — 3/8 N.P.T.	2
4†		Hose Barb — 3/8 N.P.T. x 3/4	2
5	2412-34	Hose Clamp	4
6	25-5510	Kyson Special Heater	1
7†		Heater Hose 12 ft 3/4 I.D.	1

Ref. No.	Part No.	Description	No. Used
8	3253-3	Lockwasher	3
9	321-2	Hex Head Capscrew	3
*†		Wire — Heater to Toggle Switch	1
*†		Wire — Toggle Switch to Fuse Block	1
*†		Receptacle Type Terminal to fit .156 pin terminal 16 Ga.	1

*Not Illustrated


 
†Obtain From Your Local Hardware

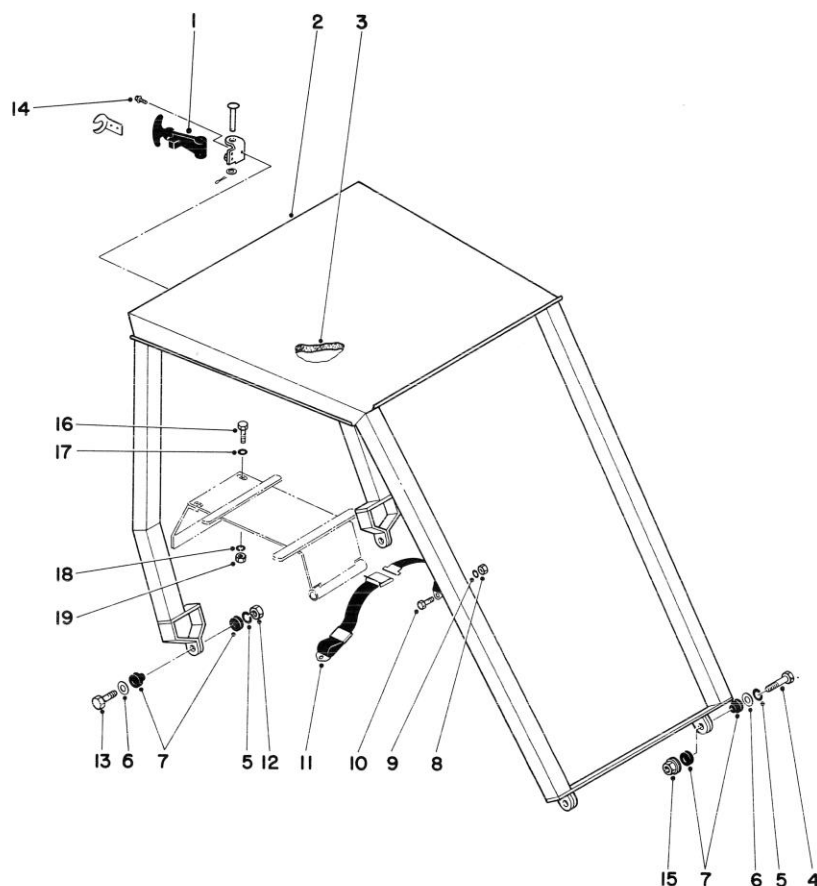

ROLL OVER PROTECTION KIT NO. 30735 (Optional)

Ref. No.	Part No.	Description	No. Used
1	25-5500	Hood Latch	1
2	25-6470	Roll Bar	1
3	25-4710	1" Insulation	1
4	328-8	Hex Head Capscrew	2
5	3253-9	Lockwasher	4
6	3256-8	Washer	4
7	25-4500	Rubber Mount	4
8	3296-48	Locknut	2
9	3256-25	Flatwasher	2
10	324-4	Hex Head Capscrew	2

Ref. No.	Part No.	Description	No. Used
11	21-4190	Seat Belts	1
12	3217-12	Nut	2
13	328-12	Hex Head Capscrew	2
14	32104-60	Hex Head Self-Tapping Screw	5
15	25-8270	Front Mount	2
16	323-7	Hex Head Capscrew	2
17	3256-3	Flatwasher	2
18	3253-21	Lockwasher	2
19	3217-7	Nut	2

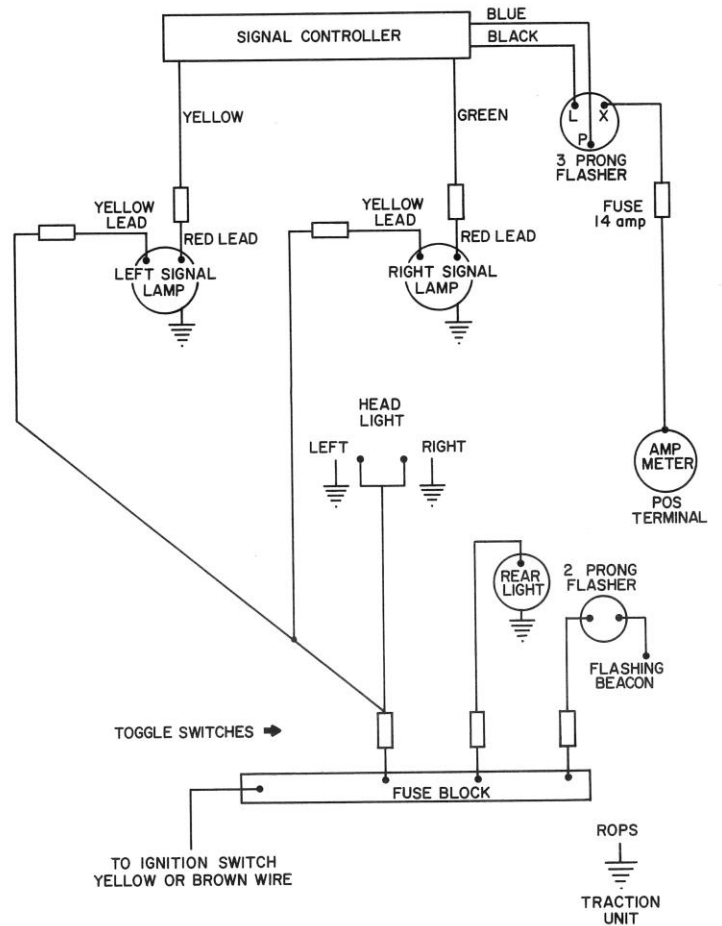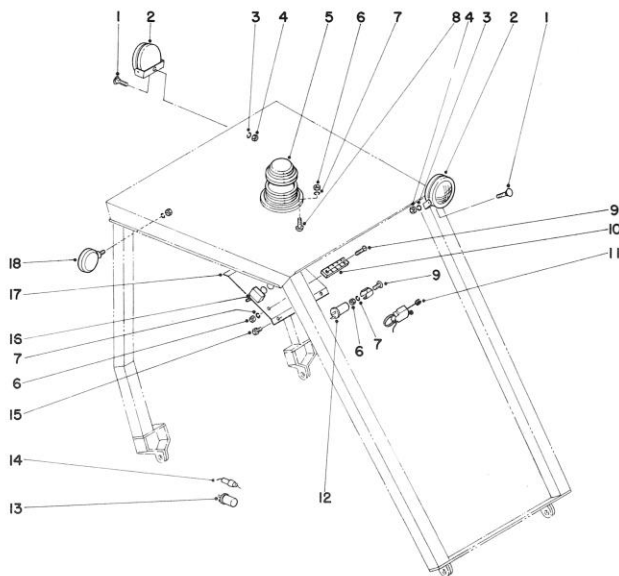  


LIGHT KIT FOR ROLL OVER PROTECTION KIT NO. 30738 (Optional)

Ref. No.	Part No.	Description	No. Used
1	3231-2	Carriage Bolt	3
2	25-4250	Headlight	3
3	3253-21	Lockwasher	3
4	3217-7	Nut	3
5	25-4220	Flashing Amber Beacon	1
6	3217-26	Nut	7
7	3253-17	Lockwasher	7
8	3251-4	Round Head Machine Screw	3
9	3251-2	Round Head Machine Screw	4
10	25-4540	Fuse Block (Includes 4 AGC 6 Fuses)	1
11	11-6400	Signal Controller	1
12	25-4300	Flasher (2 Prong)	1

Ref. No.	Part No.	Description	No. Used
13	218-456	Flasher (3 Prong)	1
14	218-273	Inline Fuse (With 14 Amp Fuse)	1
15	32144-10	Self Tapping Screw	2
16	25-4230	Toggle Switch	4
17	25-4280	Switch Panel	1
18	25-4260	Signal & Tail Lights	2
*†		40 Ft. Wire	1
*†		Eyelet Terminal 1/4 Stud 14 Ga. Wire	2
*†		Female Receptacle .250 x .032 tab 14 Ga. Wire	3
*†		Slotted Spade terminal #6 Stud 14 Ga. Wire	5

*Not Illustrated

 †Obtain From Your Local Hardware

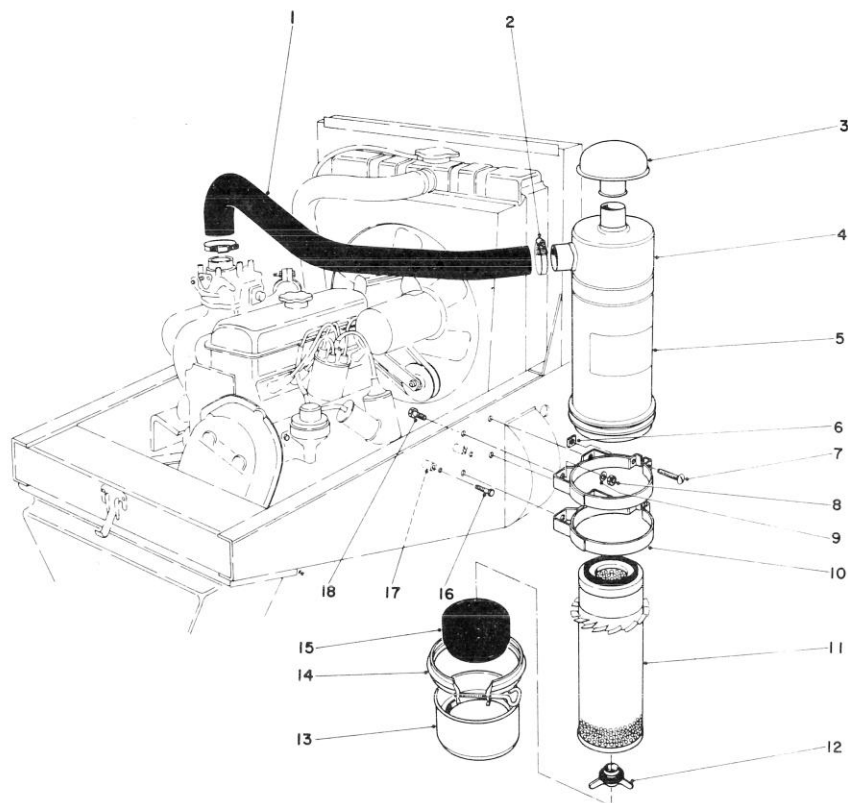

AIR CLEANER KIT No. 27-7090 (Optional)

Ref. No.	Part No.	Description	No. Used
1	27-7200	Hose Air Cleaner	1
2	2412-42	Hose Clamp	2
3	27-7180	Cap Assembly - Air Inlet	1
4	27-7100	Air Cleaner Assembly (Incl. Ref. # 5 & 11 - 15)	1
5	27-7160	Decal - Instructions	1
6	32107-11	Nut	2
7	3258-19	Round Hd. Machine Screw	2
8	3217-6	Full Nut	4
9	3253-4	Lockwasher	4

Ref. No.	Part No.	Description	No. Used
10	27-7170	Band Assembly Mounting (Incl. Ref. # 6 - 7)	2
11	27-7110	Element Assembly	1
12	27-7120	Nut & Gasket Assembly	1
13	27-7150	Cap Assembly	1
14	27-7130	Clamp Assembly	1
15	27-7140	Skirt Baffle	1
16	3290-360	Hex Hd. Machine Screw	2
17	22-7810	Spacer	2
18	322-3	Capscrew	4
*	27-7220	Filter Cleaner	1

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The 72" Groundsmaster has two identification numbers: a model number and a serial number. The two numbers are stamped on a plate which is riveted on main frame located under seat. In any correspondence concerning the 72" Groundsmaster, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Distributor, supply the following information.

1. Model and serial number of the 72" Groundsmaster.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

MAINTENANCE RECORD

[illegible]

The Toro Promise

A One Year Limited Warranty on Turf Products Other Than Walk Rotary Mowers

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Turf Products	1 Year
Hevi-Duty Walk Rotary Mowers	90 Days

The costs of parts and labor are included, but the customer pays the transportation costs on walk rotary mowers.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact your Authorized TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. The TORO Distributor will advise you on the arrangements that can be made to inspect and repair your product.
3. The TORO Distributor will inspect the product and advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the distributor's analysis of the defect or the service performed, you may contact us.

Write:

TORO Turf Products Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Distributor is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This Warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Distributor using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Distributor are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction or non-use.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.