
TORO_®

MODEL NO. 20451-600001 & UP

PARTS CATALOG


21" H.P. GRASSMASTER FINGERTIP

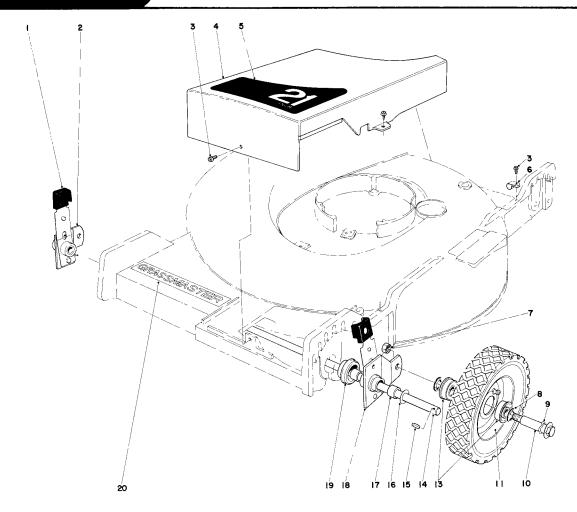

FRONT WHEEL AND PIVOT ARM ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	25-7740	Knob Arm	2
2	25-8190	Pivot Arm (Incl. Ref. #17)	1
3	12-5450	Screw Special	4
4	23-0510	Belt Cover	1
5	23-0870	Decal — Front Housing	1
6	2412-51	Cable Clamp	1
7	32146-12	Locknut	2
8	26-7500	Felt Washer	4
9	3290-393	Wave Washer	2
10	3-2652	Wheel Bolt	2

Ref. No.	Part No.	Description	No. Used
11	26-2960	Wheel & Tire assembly	
		(Incl. Ref. #13)	2
13	251-180	Bearing	4
14	27-0050	Shaft — Pivot Arm	1
15	32₩4-3	Groove Pin	2
16	18-9810	Washer	2
17	256-206	Bushing	4
18	25-8180	Pivot Arm (Incl. Ref. #17)	1
19	23-0380	End Cap	2
20	23-0930	Decal — Grassmaster	1

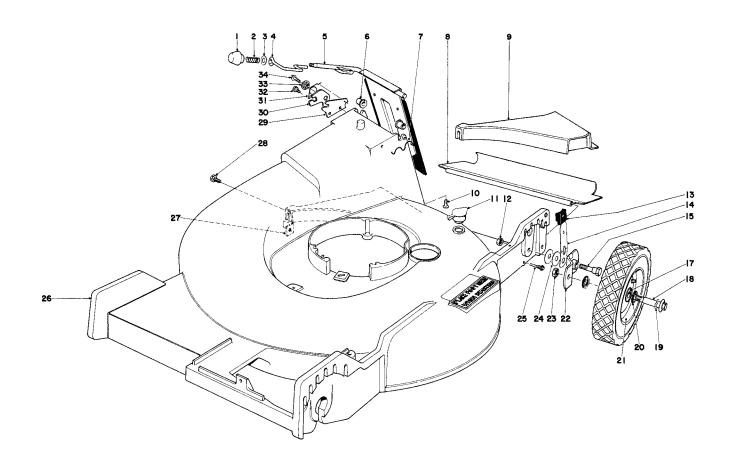


HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	233-37	Knob	1
2	23-0920	Spring — Compression	1
3	23-1120	Washer	1
4	23-0940	Latch Door	1
5	23-0990	Door Handle	1
6	23-0880	Bushing	2
7	23-0200	Door Retainer	1
8	23-0560	Rear Safety Shield	1
9	23-0360	Insert Rear	1
10	32144-17	Screw Flat Hd	2
11	6-4500	Washout Plug	1
12	32146-5	Locknut	2
13	25-7740	Knob Arm	2
14	25-8000	Spring Arm	2
15	25-3440	Pivot Screw	2
17	251-180	Bearing	4
18	3-2652	Wheel Bolt	2
19	3290-393	Wave Washer	2
20	26-7500	Felt Washer	4

Ref. No.	Part No.	Description	No. Used
21	26-2960	Wheel & Tire Assembly	
		(Incl. Ref #17)	2
22	24-7710	Pivot Arm Assembly "A"	1
*	23-9120	Pivot Arm Assembly "B"	1
23	32146-12	Locknut	2
24	5-4460	Pivot Washer	4
25	8-6160	Pivot Screw	2
26	6-4659	Housing	1
27	26-0660	Nut Special	1
28	32104-114	Screw Self Tapping	1
29	23-1040	Latch Plate	1
30	23-1190	Safety Latch	1
31	23-1200	Spring — Torsion	1
32	32104-17	Screw	1
33	23-1180	Latch Spacer	1
34	11-9760	Screw Thread Forming	1
*	26-0730	Loose Parts	1
*	26-9510	Replacement Stud Kit	1


^{*}Not Illustrated

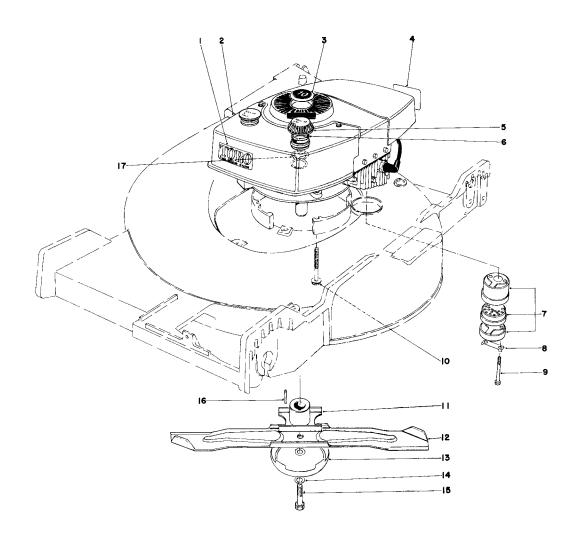

ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	23-1260	Decal - High Torque	1
2	221-516	Engine	1
3	21-4870	Plug — Button	1
4	20-2710	Decal - Maintenance	1
5	20-2860	Gas Cap (Incl. Ref. #6 & 17)	1
6	2210-144	Gasket — Gas Cap	2
7	5-4769	Muffler Assembly (Incl.	
		Ref. #8 & 9)	1
8	3-5094	Locking Clip	1


Ref. No.	Part No.	Description	No. Used
9	321-20	Screw Hex Hd	2
10	11-0580	Screw	3
11	26-0770	Blade Retainer	1
12	26-0880	Blade	1
13	8-4240	Anti-Scalp Cup	1
14	3253-22	Lockwasher	1
15	26-0670	Screw Blade	1
16	3-6857	Key	1
17	2210-143	Baffle - Gas Cap	1
			<u> </u>
İ			
ļ			
ļ			
į			}
1			
L			

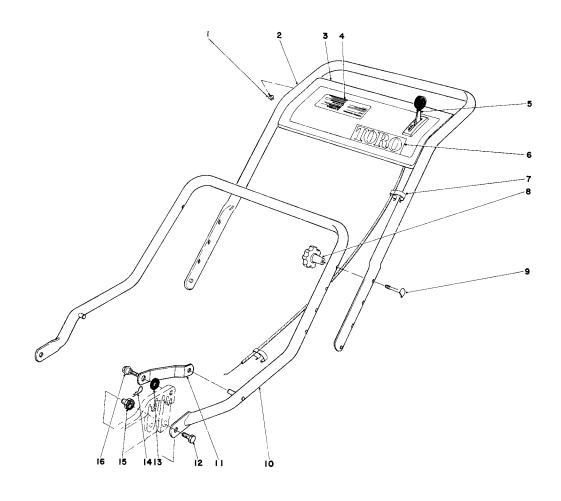

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32104-76	Self Tapping Screw	4
2	23-0580	Upper Handle	1
3	26-3090	Control Plate	1
4	26-3080	Decal — Control Plate	1
5	26-0710	Throttle Control	1
6	20-4690	Decal	1
7	218-465	Clip Conduit	2
8	19-4050	Handle Knob	2 2

Ref. No.	Part No.	Description	No. Used
No. 9 10 11 12 13 14 15 16	6-6330 26-0740 26-0760 322-5 3-3287 3290-255 12-2080 5-2490	Handle Screw Lower Handle Handle Latch Capscrew Spacer Latch Hairpin Cotter Handle Pivot Nut Shoulder Screw	Used 2 1 2 2 2 2 2 2 2 2 2

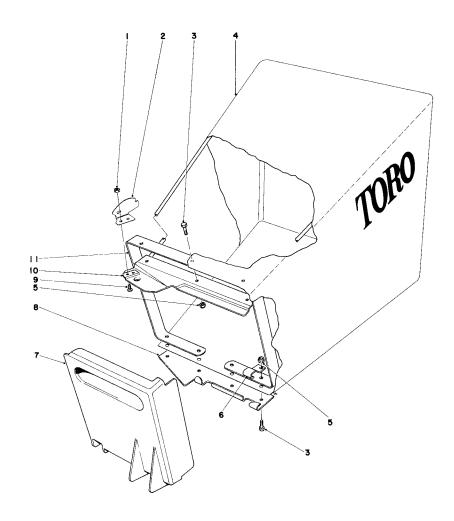


GRASS BAG ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32146-17	Locknut	2
2	23-1060	Latch Bag	1
3	3290-321	Hex Hd. Machine Screw	7
4	6-1389	Grass Bag	1
5	32153-1	Locknut	7
6	23-5100	Support Bracket	1

Ref. No.	Part No.	Description	No. Used
7	23-1140	Bag Door	1
8	23-1150	Door Bracket	1
9	25-3120	Screw	2
10	25-3230	Bag Frame	1
11	23-1110	Bag Support	1
*	6-5689	Grass Bagging Kit	
		(Incl. Ref. 1 thru 11)	1

^{*}Not Illustrated


ENGINE TECUMSEH MODEL NO. TNT 100-10045

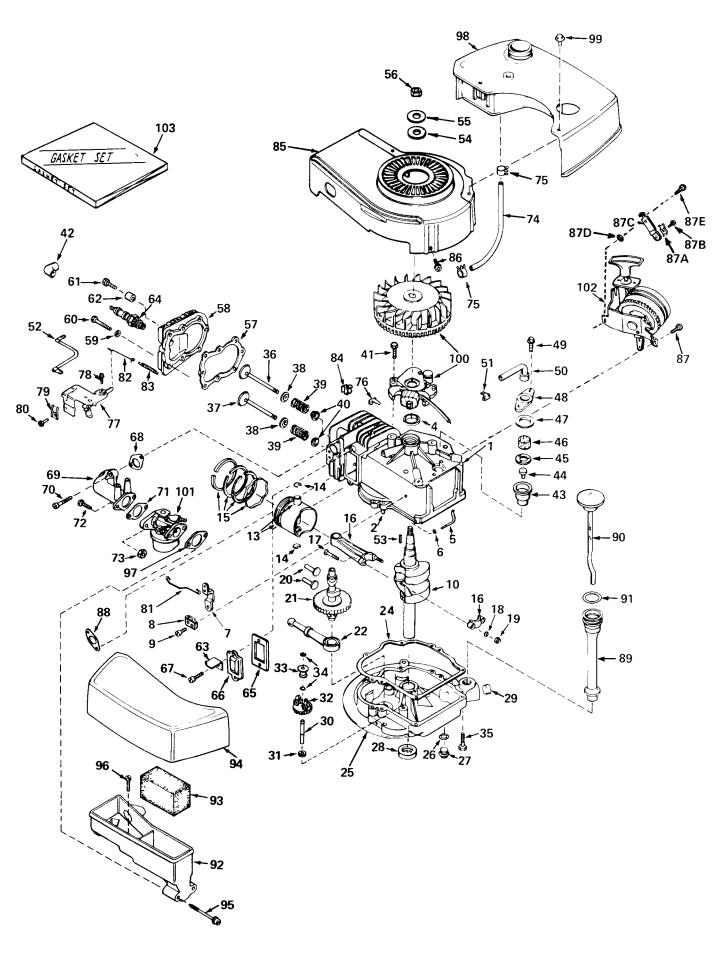

ENGINE TECUMSEH MODEL NO. TNT 100-10045

Ref. No.	Part No.	Description	No. Used	Ref. No.	F
1	33883	Cylinder Assembly (Incl.		53	2
_		Nos. 2, 4 & 87)	1	54	6
2 4	26727	Pin, Dowel	2	55	6
4	29183	Seal, Oil	1	56 57	6
5 6 7	30589	Rod, Governor (Incl. No. 6)	1	58	3
ס	28277	Washer, Flat Lever, Governor	1	59	2
8	32651 31335		i	60	6
9	650548	Clamp, Governor Lever Screw, Hex Slotted Washer Hd.	i	61	6
10	33884	Crankshaft	1	62	3
13	32603	Piston & Pin Assembly (Incl.	'	63	3
13	32003	2 of No. 14) (Std.)	1	64	3
13	32604	Piston & Pin Assembly (Incl.		0.	ľ
	02004	2 of No. 14) (.010 Oversize)	1	65	*
13	32605	Piston & Pin Assembly (Incl.	'	66	3
. •	02000	2 of No. 14) (.020 Oversize)	1 1	67	Ę
14	20381	Ring, Piston Pin Retaining	2	68	,
5	32606	Ring Set, Piston (Std.)	1	69	3
5	32607	Ring Set, Piston (.010 Oversize)	1	70	6
15	32608	Ring Set, Piston (.020 Oversize)	i		
6	30963B	Rod Assembly Connecting		71	3
		(Incl. Nos. 17, 18 & 19)	1	72	6
17	26706	Bolt, Connecting Rod	2	73	
18	20747	Washer, Connecting Rod Bolt	2	74	200000000000000000000000000000000000000
19	27573	Nut, Connecting Rod	2 2 2	75	2
20	27241	Lifter, Valve	2	76	2
21	34014	Camshaft (Mech. Compression		77	3
		Release)	1	78	1
22	29914	Pump Assembly, Oil	1		
24	*26750A	Gasket, Mounting Flange	1	79	1
25	33898	Flange Assembly, Mounting		80	2
		(Incl. Nos. 27 thru 30)	1	81	3
6	*28833	Gasket, Oil Drain Plug	1	82	
27	27244	Plug, Oil Drain	1 1	83	
8	26208	Seal, Oil	1	84	1
29	33885	Plug, Oil Drain	1	85	3
30	30574	Shaft, Mechanical Governor	1	86	(
31	30590A	Washer, Flat	1	87	(
32	30591	Gear Assembly, Governor		87A	1
		[[Incl. No. 31)	1 1	87B	
33	30588A	Spool, Governor	1	87C	
34	29193	Ring, Retaining	2	87D	
35	650488	Screw, Hex Hd. Sems	6	87E	9
36	29314A	Valve, Intake (Std.) (Incl.	1 1	88	١.
20	202155	Nos. 38, 39 & 40)	1	89	;
36	29315B	Valve, Intake (1/32" Oversize)	1	90 91	;
37	202120	(Incl. Nos. 38, 39 & 40)	'	92	:
3/	29313B	Valve, Exhaust (Std.) (Incl. Nos. 38, 39 & 40)	1	93	1:
37	29315B	Valve, Exhaust (1/32" Over-	'	94	:
J/	23313D	size) (Incl. No. 38, 39 & 40)	1 1	95	7
38	31671	Cap, Upper Valve Spring		96	
36 39	31672	Spring, Valve	2 2 2	55	Ι΄
40	31673	Cap, Lower Valve Spring	2	97	-
41	650489	Screw, Hex Hd. Sems	_	98	1:
••	000100	w/Flatwasher	2	99	
42	610118	Cover, Spark Plug	<u>ī</u>		'
43	33731	Body, Breather Tube	1 1	100	1
44	33732	Valve, Check	1		
45	33733	Baffle, Breather	1		
46	33734	Element, Breather	1		
47	*33735	Gasket, Breather	1		
48	33737	Cover, Breather	1		
49	650768	Screw, Hex Hd. w/Conical			
		Washer	2	101	
50	33886	Tube, Breather	1	102	
51	33887	Clip, Breather Tube	1	103	:
52	28468	Wire, Ground	1		


Ref. No.	Part No.	Description	No. Used
No. 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 71 72 73 74 75 79 80 81 82 83 84 85 87 87 88 89 91 92 93 94 95 96 97 98 99 100	27247 650791 650763 650607 *33015 33016 26073 6021 650697 33892 30593 33636 *27234 32755 650128 *30188 33004 650451 *31688 6202 29752 30705 26460 29443 33889 650783 27793 28942 33133 33295 33890 27275 33891 650497 650737 27793 28942 33133 33295 33890 27275 33891 650737 27793 28942 34099 27070 650738 *3081 33894 33896 33897 650762 650764 *33051 33904 28763 610793	Key, Flywheel Washer, Flat Washer, Belleville Nut, Flywheel Gasket, Cylinder Head Head, Cylinder Washer Screw, Hex Hd. Cap Screw, Hex Hd. Cap Spacer Clip, Magneto Wire Plug, Spark (Champion J-8 or equivalent) Gasket, Valve Spring Cover Cover, Valve Spring Box Screw, Fil. Slotted Hd. Sems Gasket, Intake Pipe Pipe, Intake Screw, Fil Flex Hd. Self-Locking Gasket, Carburetor Screw, Hex Hd. Cap Sems Nut & Lockwasher Line, Fuel Clamp, Fuel Line Clip, Fuel Line Control Assembly, Speed Screw, Hex Washer Hd. Thread Forming Sems Clip, Conduit Screw, Slotted Hex Hd. Sems Link, Governor Link, Governor Spring Spring, Governor Clip, Wire Housing, Blower Screw, Flex Pan Hd. Screw, Hex Washer Hd. Taptite Clip, Conduit Screw, Slotted Hex Hd. Sems Bracket Washer Screw, Phil. Hex Hd. Self-Tap Gasket, Exhaust Tube, Oil Filler Dipstick, Oil (Incl. No. 91) "O" Ring Body, Air Cleaner Filter, Air Cover, Hex Washer Hd. Thread Forming Magneto (The complete magneto is not available as an assembly. The magneto no. is shown for reference purposes only. Order component parts individually, as shown in parts list.)	Used 1
101 102 103	631784A 590519 33906	Carburetor (Incl. No. 71) Starter, Sidemount Gasket Set (Incl. items marked *)	1 1

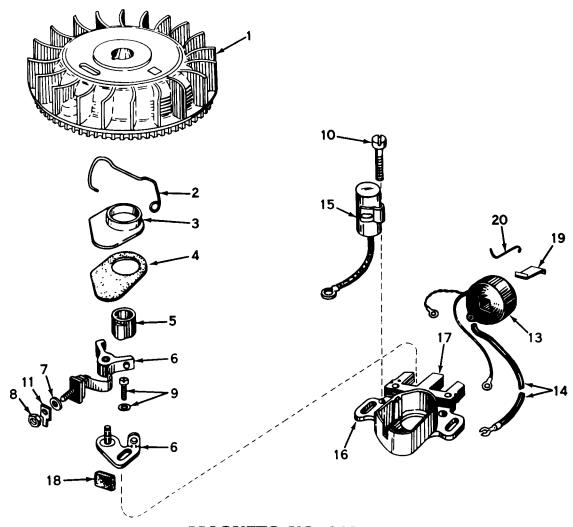

MAGNETO NO. 610793*

Ref. No.	Part No.	Description	No. Used		Ref. No.	Part No.	Description	No. Used
1	610782	Flywheel	1		11	33356	Tab, Ground Terminal	1
2	30551	Spring, Breaker Box Dust Cover	1	,	13	30560A	Coil Assembly (Incl. No. 14)	1 1
3	30550	Cover, Breaker Box Dust	1		14	30554	Wire, Ignition Lead	1
4	32052	Gasket, Dust Cover	1	ļ	15	30548A	Condenser	1
5	30552	Cam, Breaker	1		16	30545	Core & Plate Group	1
6	30547A	Breaker Assembly	1		17	30561A	Stator Assy. (Incl. Nos. 2, 3, 4,	
7	610385	Washer, Terminal	1				6 thru 16, 18, 19 & 20)	1
8	610408	Nut, Terminal	1		18	30549	Felt, Cam Wiper	1
9	29181	Screw & Washer Assy., Breaker	1		19	29629	Spring, Coil Wedge	1
10	610593	Screw, Condenser Fastening	1		20	31311	Clip, Coil Locking	1


^{*}The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.

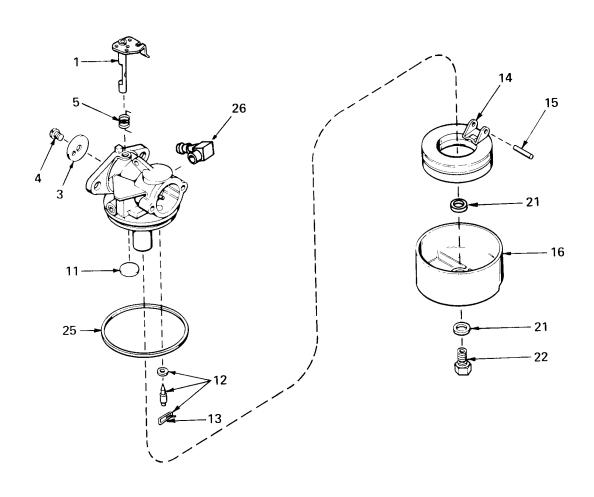

CARBURETOR NO. 631784A

Ref. No.	Part No.	Description	No. Used
1	631615	Shaft & Lever Assy., Throttle	1
3	631616	Shutter, Throttle	1
4	650506	Screw	1
5	630731	Spring, Return	1
11	631027	Plug, Welch	1
12	631021	Inlet Needle, Seat & Clip Assy. (Incl. No. 13)	1
	ļ		
•			

Ref. No.	Part No.	Description	No. Used	
13	631022	Clip, Inlet Needle	1	
14	631023	Float, Carburetor	1	
15	631024	Shaft, Float	1	
16	631700	Bowl, Float	1	
21	631334	Gasket, Bowl-to-body	1	١
22	631935	Nut, Float Bowl	1	
25	631028	Gasket, Bowl-to-body	1	ŀ
26	631807	Fitting, Fuel Inlet	1	ĺ

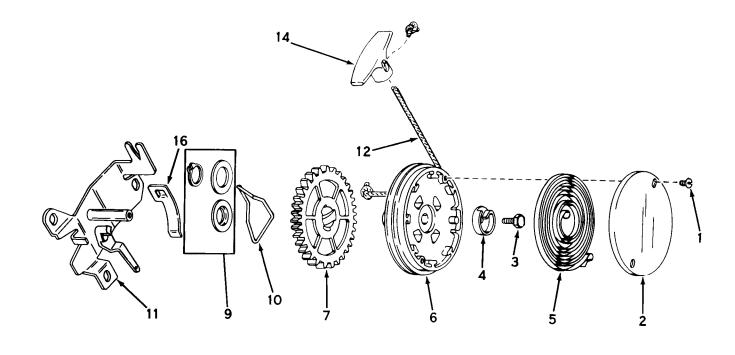

REWIND STARTER NO. 590519

Ref. No.	Part No.	Description	No. Used
1	590477	Screw, Cover	2
2 3	590431	Cover, Spring	1
3	590472	Screw, Hex Washer Hd. Taptite	
		Left Hand Thread	1
4	590432	Hub, Spring	1
5	590433	Spring, Rewind	1
6	590434A	Pulley Assembly (Incl. No. 9)	1
7	590435B	Gear	1
İ			
L			ļ

	Ref. No.	Part No.	Description	No. Used
ĺ	9	590470	Kit, Thrust Washer &	
			Snap Ring	1
Ì	10	590438	Brake	1
	11	590520	Bracket Assembly, Mounting	1
	12	590451A	Rope, Starter (Length 69" and 5/32" Diameter)	1
ļ	14	590452	Handle, Starter	1
	16	590446	Clip, Rope	1
ľ				i
			}	
1				
İ				
l				
				ĺ
				}
۰-		<u>-</u>		

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Mower has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on left side of the mower housing. In any correspondence concerning the mower, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information.

- 1. Model and serial numbers of the mower.
- 2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

THE TORO PROMISE

It is Toro's policy to design and produce TORO products to provide our customers with a high level of performance and durability in normal operation. Our products, however, are produced in high volume, and it is inevitable that occasionally a unit will reach a customer with a defect in materials or workmanship which causes the unit to fall below the normal high

level of TORO performance. Invariably, such a defect will be noticed in a residential product within one year after purchase. Recognizing this possibility, Toro has established a simple guarantee policy and procedure that is intended to assure customer satisfaction. This guarantee statement is as follows:

The Inra Promise

A Full One Year Warranty

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 1 year Residential Products Used Commercially . . . 45 days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should the customer feel that a product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

- Contact any Authorized TORO Service Dealer or Distributor, but preferably the dealer or distributor from whom you purchased the product.
- He will instruct you to either return the product to him, or tell you the name and address of your nearest Authorized TORO Service Dealer or Distributor if the product is to be returned to such a dealer or distributor.
- 3. Bring the product and your original sales slip, or

- other evidence of purchase date, to the service dealer or distributor.
- 4. The servicing dealer or distributor will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to the customer.

If for any reason the customer is dissatisfied with the dealer's or distributor's analysis of the defect or the service he performs, he can contact us. Write:

TORO "Customer Care" Department 8111 Lyndale Avenue South Minneapolis, Minnesota 55420

MAINTENANCE RECORD

Date	Hours Used	Oil Change	Air Cleaner Service	Lubrication	Winter Storage	Spring Service	Spark Plug Gap
·							