




MODEL NO. 44830 - 20101 & UP
MODEL NO. 44831 - 20101 & UP
MODEL NO. 44835 - 40162 & UP

PARTS CATALOG

AEROTHATCH 83/SEEDER 93

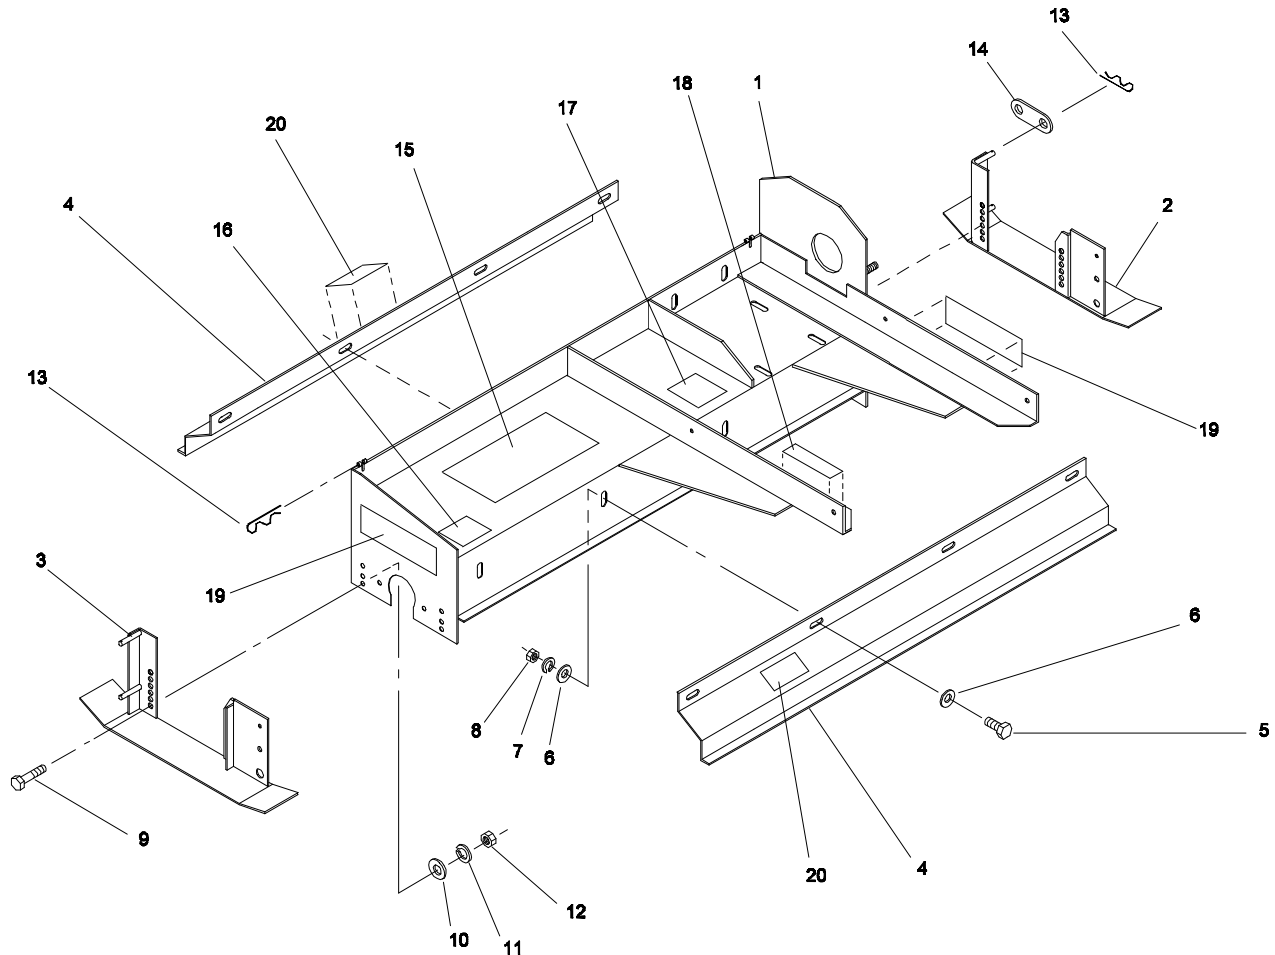


AEROTHATCH 83 - MODEL NO. 44830 & 44831 MAIN FRAME ASSEMBLY

83-001

Ref. No.	Part No.	Description	No. Used
1	83-005-0013	Main Frame	1
2	83-005-1002	Skid Assembly-L.H.	1
3	83-005-0033	Skid Assembly-R.H.	1
4	83-004-0112	Roller Shield	2
5	323-6	Capscrew - Hex Hd.	8
6	3256-4	Flat Washer	16
7	3253-5	Lock Washer	8
8	3217-7	Hex Nut	8
9	325-5	Capscrew - Hex Hd.	4
10	3256-6	Flat Washer	8

Ref. No.	Part No.	Description	No. Used
11	3253-7	Lock Washer	8
12	3217-9	Hex Nut	8
13	01-159-0010	Presto Pin	6
14	93-004-0121	Seed Box Mount	4
15	66-1210	Decal - Toro	1
16	01-506-0430	Decal - Replacement Manual	1
17	01-506-0160	Decal - Important	1
18	01-506-0130	Decal - Danger	1
19	01-506-1010	Decal - Aerothatch 83	2
20	01-506-0340	Decal - Danger	2

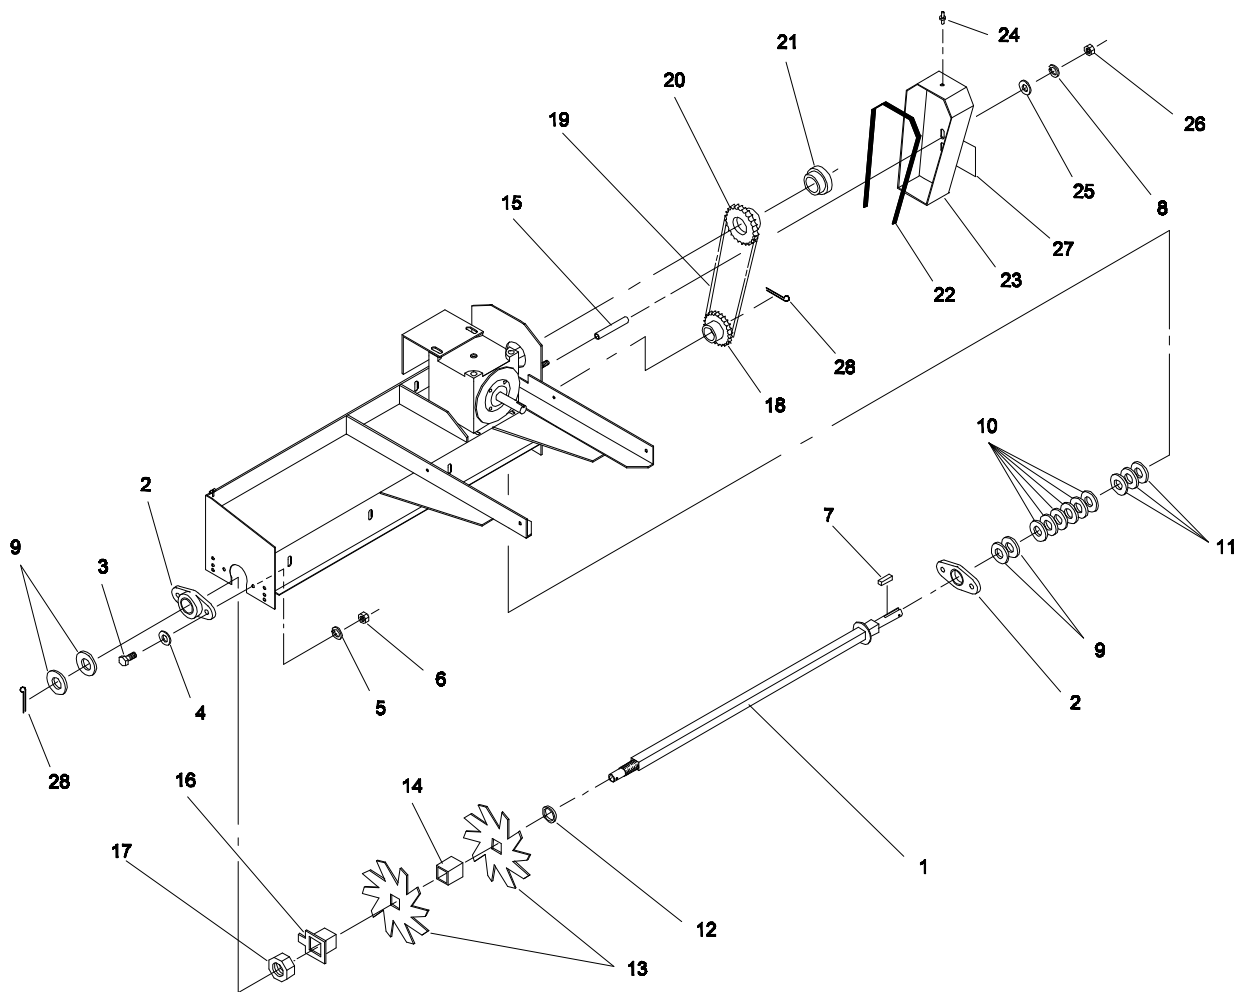


AEROTHATCH 83 - MODEL NO. 44830 (3" Centers) BLADE SHAFT & CHAIN DRIVE ASSEMBLY

83-002

Ref. No.	Part No.	Description	No. Used
1	83-005-0051	Blade Shaft	1
2	01-100-0170	Bearing	2
3	325-6	Capscrew - Hex Hd.	4
4	3256-26	"SAE" Flat Washer	4
5	3253-7	Lock Washer	4
6	3217-9	Hex Nut	4
7	83-004-0431	Key	1
8	3253-5	Lock Washer	2
9	01-168-2018	Machinery Bushing	4(var)
10	01-168-2010	Machinery Bushing	6
11	01-168-2014	Machinery Bushing	3
12	83-004-0531	End Spacer	1
13	01-283-0090	Blade - 12 ga.	16
*	01-283-0120	Blade - 10 ga. (optional)	16
*	01-283-0130	Blade - 7 ga. (optional)	16
14	83-004-0311	Blade Spacer (12 ga. blade)	15
*	83-004-0551	Blade Spacer (10 ga. blade)	15
*	83-004-0561	Blade Spacer (7 ga. blade)	15

Ref. No.	Part No.	Description	No. Used
15	83-004-0871	Guard Spacer	2
16	83-005-1011	Locking Spacer	1
17	01-191-2805	Jam Nut	1
18	01-262-0190	Sprocket	1
19	83-004-0511	Drive Chain	1
*	01-251-0170	Offset Link	1
20	01-262-0060	Sprocket	1
21	01-260-0140	Bushing	1
22	83-004-0601	Guard Seal	1
23	83-005-0062	Chain Guard	1
24	01-215-0050	Grease Zerk	1
25	3256-4	Flat Washer	2
26	3217-7	Hex Nut	2
27	01-506-0050	Decal - Danger	1
28	3272-23	Cotter Pin	2
*	83-002-0022	Blade Shaft Assembly (Incl. Ref. #1,12 - 14,16,17)	1

* Not Illustrated

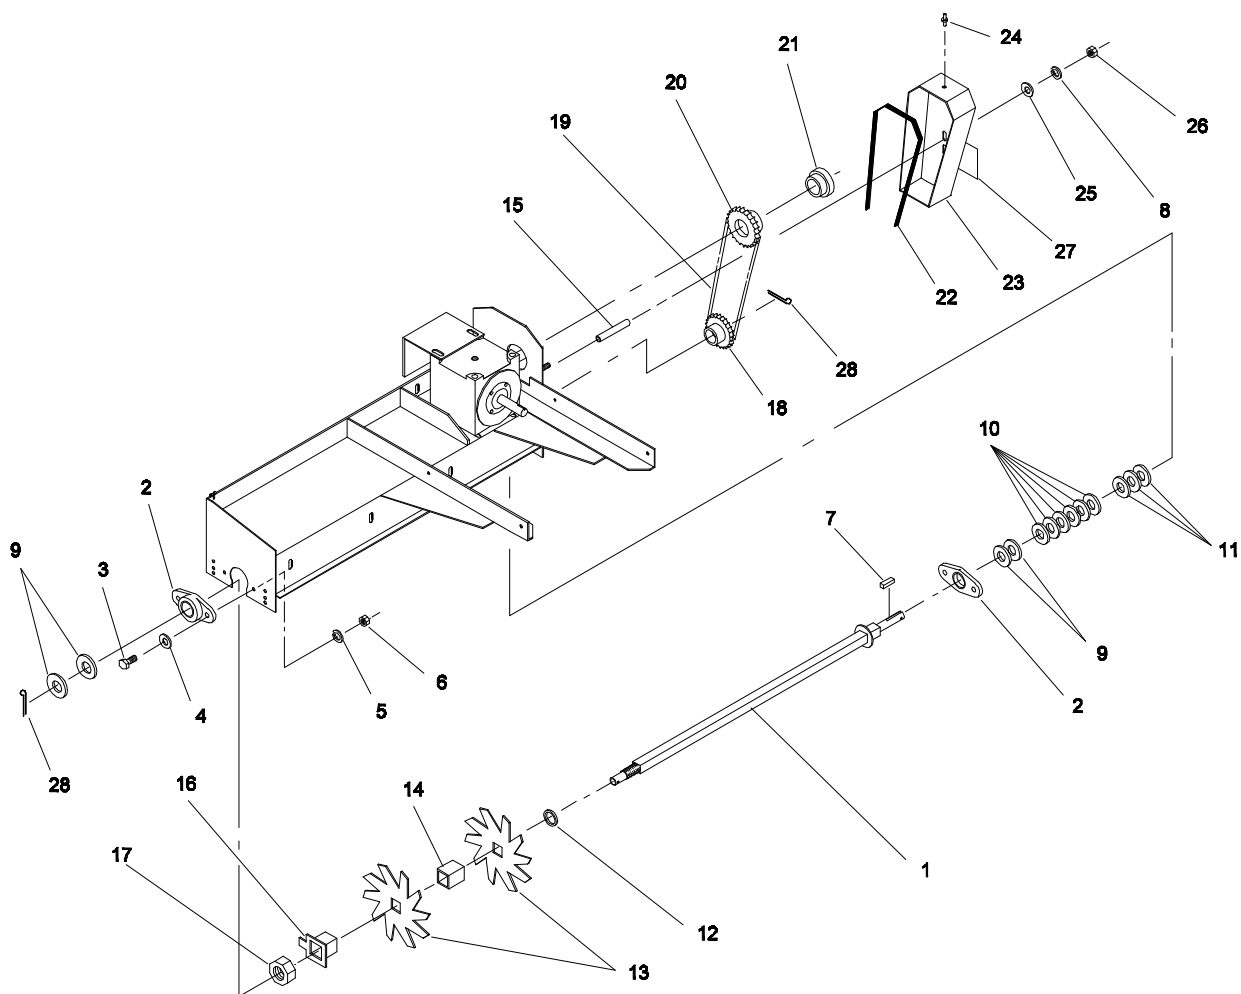


AEROTHATCH 83 - MODEL NO. 44831 (1" Centers) BLADE SHAFT & CHAIN DRIVE ASSEMBLY

83-002

Ref. No.	Part No.	Description	No. Used
1	83-005-0051	Blade Shaft	1
2	01-100-0170	Bearing	2
3	325-6	Capscrew - Hex Hd.	4
4	3256-26	"SAE" Flat Washer	4
5	3253-7	Lock Washer	4
6	3217-9	Hex Nut	4
7	83-004-0431	Key	1
8	3253-5	Lock Washer	2
9	01-168-2018	Machinery Bushing	4(var)
10	01-168-2010	Machinery Bushing	6
11	01-168-2014	Machinery Bushing	3
12	83-004-0531	End Spacer	1
13	01-283-0090	Blade	43
14	83-004-0631	Blade Spacer	42
15	83-004-0871	Guard Spacer	2
16	83-005-1011	Locking Spacer	1

Ref. No.	Part No.	Description	No. Used
17	01-191-2805	Jam Nut	1
18	01-262-0190	Sprocket	1
19	83-004-0511	Drive Chain	1
*	01-251-0170	Offset Link	1
20	01-262-0060	Sprocket	1
21	01-260-0140	Bushing	1
22	83-004-0601	Guard Seal	1
23	83-005-0062	Chain Guard	1
24	01-215-0050	Grease Zerk	1
25	3256-4	Flat Washer	2
26	3217-7	Hex Nut	2
27	01-506-0050	Decal - Danger	1
28	3272-23	Cotter Pin	2
*	83-002-0032	Blade Shaft Assembly (Incl. Ref. #1,12 - 14,16,17)	1

* Not Illustrated

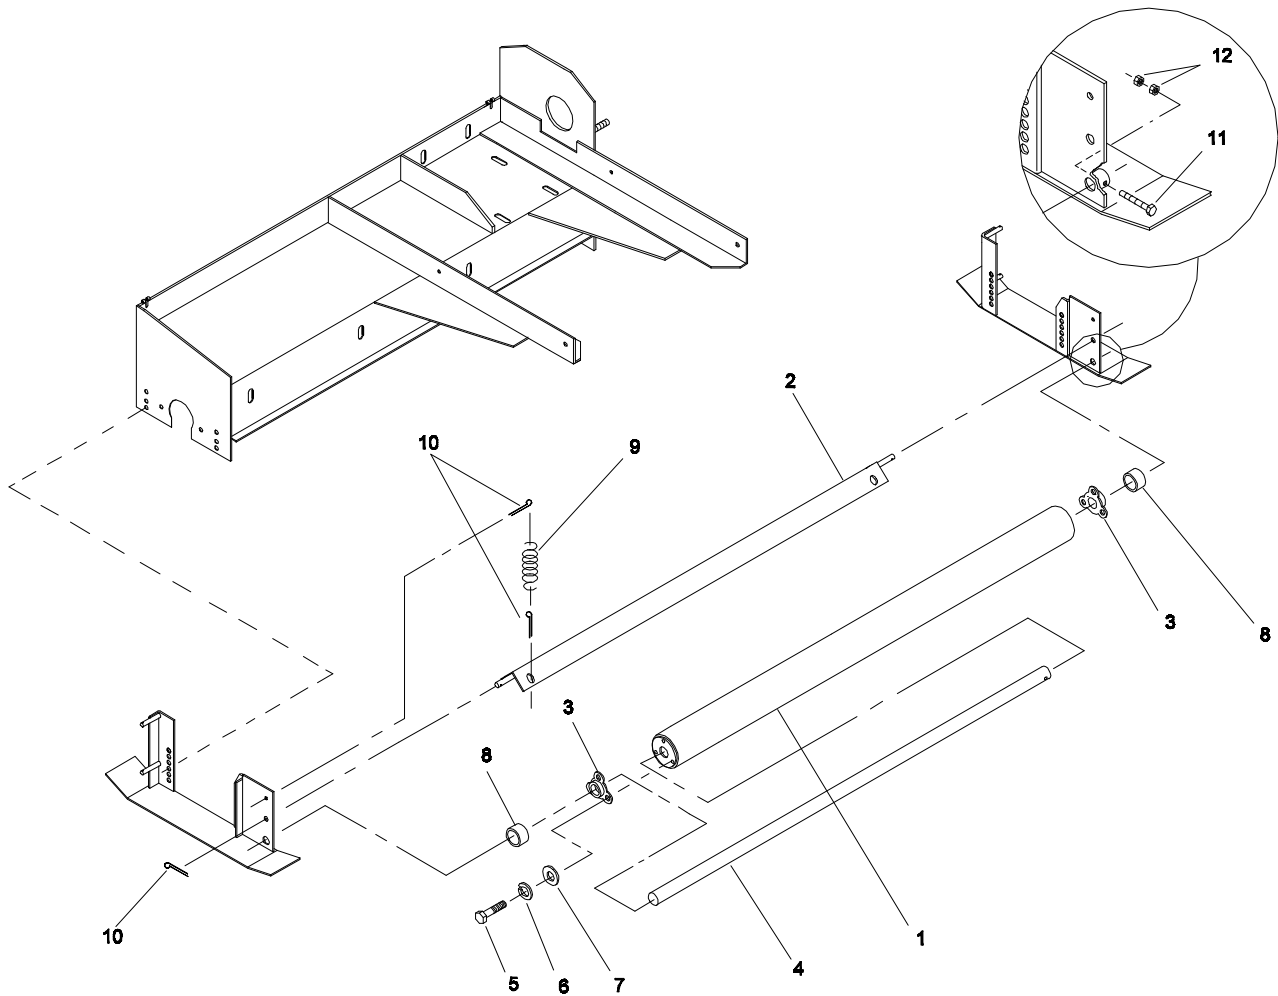


AEROTHATCH 83 - MODEL NO. 44830 & 44831 ROLLER & SCRAPER ASSEMBLY

83-003

Ref. No.	Part No.	Description	No. Used
1	83-005-0042	Roller Assembly	1
2	83-005-0072	Wiper Assembly	1
3	01-100-0260	Bearing	2
4	83-004-0841	Roller Shaft	1
5	322-6	Capscrew - Hex Hd.	6
6	3253-4	Lock Washer	6

Ref. No.	Part No.	Description	No. Used
7	3256-2	Flat Washer	6
8	83-004-0371	Roller Spacer	2
9	01-261-0130	Spring	2
10	01-151-0030	Cotter Pin	6
11	321-11	Capscrew - Hex Hd.	1
12	3217-5	Hex Nut	2

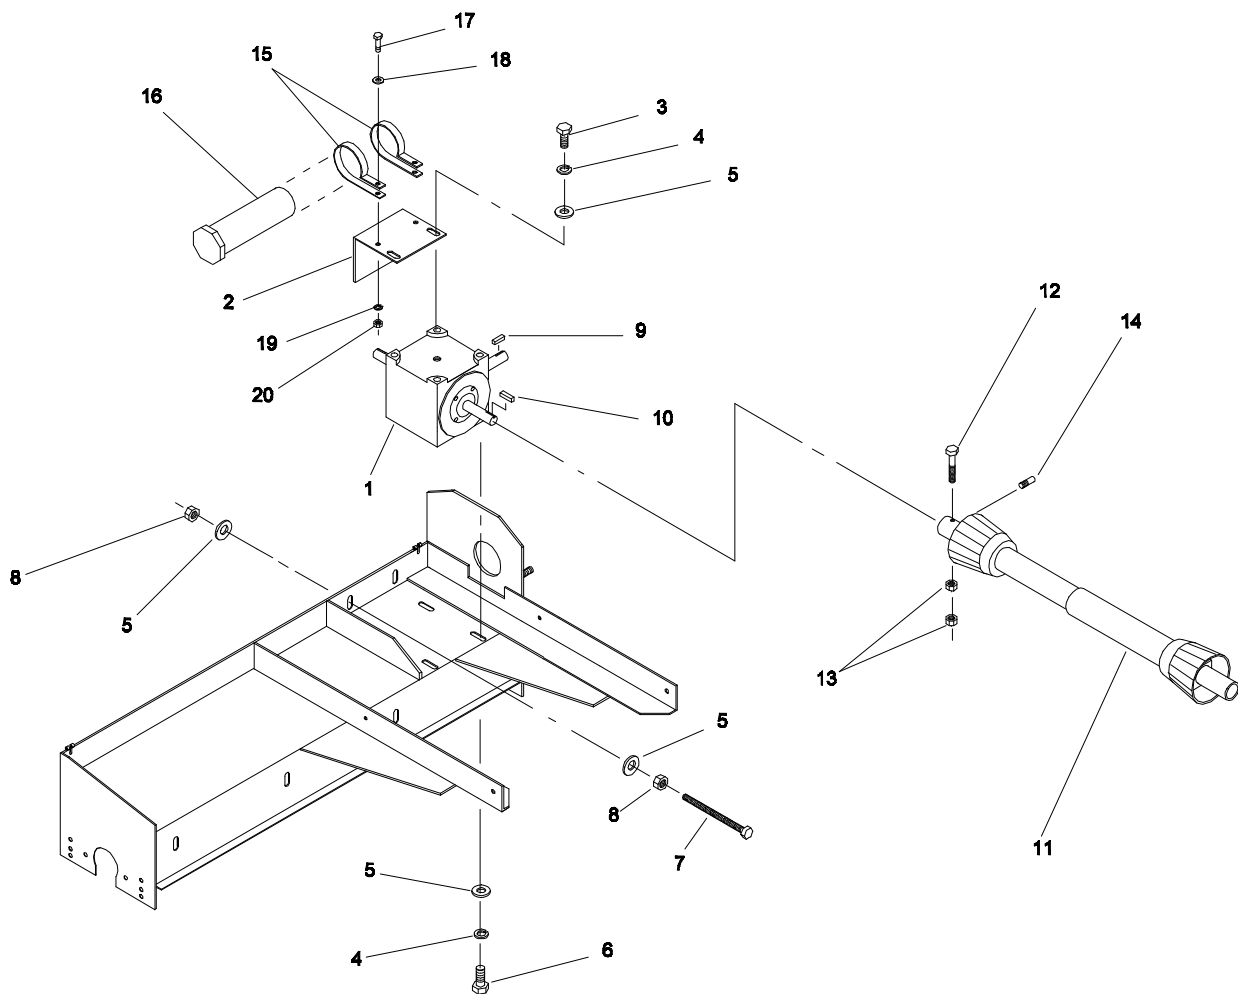


AEROTHATCH 83 - MODEL NO. 44830 & 44831 GEARBOX MOUNTING ASSEMBLY

83-004

Ref. No.	Part No.	Description	No. Used
1	01-267-0020	Gearbox	1
2	83-004-0361	Gearbox Shield	1
3	325-4	Capscrew - Hex Hd.	2
4	3253-7	Lock Washer	6
5	3256-6	Flat Washer	10
6	325-6	Capscrew - Hex Hd.	4
7	01-182-0844	Capscrew - Hex Hd.	2
8	3217-9	Hex Nut	4
9	83-004-0441	Key	1
10	12-004-1331	Key	1

Ref. No.	Part No.	Description	No. Used
11	01-282-0210	PTO Assembly	1
12	322-20	Capscrew - Hex Hd.	1
13	3217-6	Hex Nut	2
14	01-163-0030	Set Screw	1
15	2412-133	R-Clamp	2
16	74-0720	Manual Tube	1
17	321-4	Capscrew - Hex Hd.	2
18	3256-2	Flat Washer	2
19	3253-3	Lock Washer	2
20	3217-5	Hex Nut	2

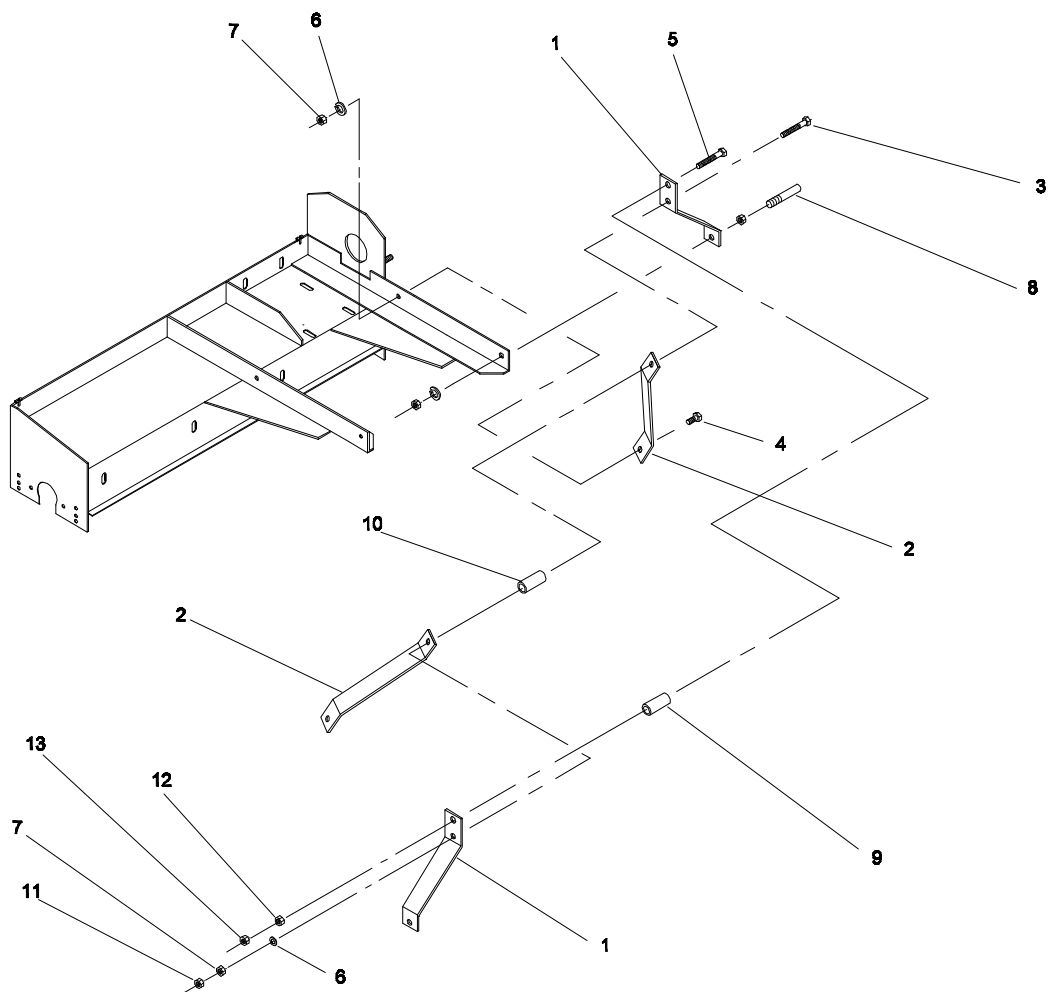


AEROTHATCH 83 - MODEL NO. 44830 & 44831 3 POINT HITCH ASSEMBLY

83-005

Ref. No.	Part No.	Description	No. Used
1	83-004-0291	Arm Hitch Mount	2
2	83-004-0302	Stabilizer Arm	2
3	325-22	Capscrew - Hex Hd.	1
4	325-6	Capscrew - Hex Hd.	2
5	328-12	Capscrew - Hex Hd.	1
6	3253-7	Lock Washer	3
7	3217-9	Hex Nut	3

Ref. No.	Part No.	Description	No. Used
8	01-252-0010	Hitch Pin w/nuts & lock washer	2
9	83-004-0381	Top Spacer	1
10	83-004-0391	Bottom Spacer	1
11	3218-5	Jam Nut	1
12	3217-12	Hex Nut	1
13	3218-7	Jam Nut	1

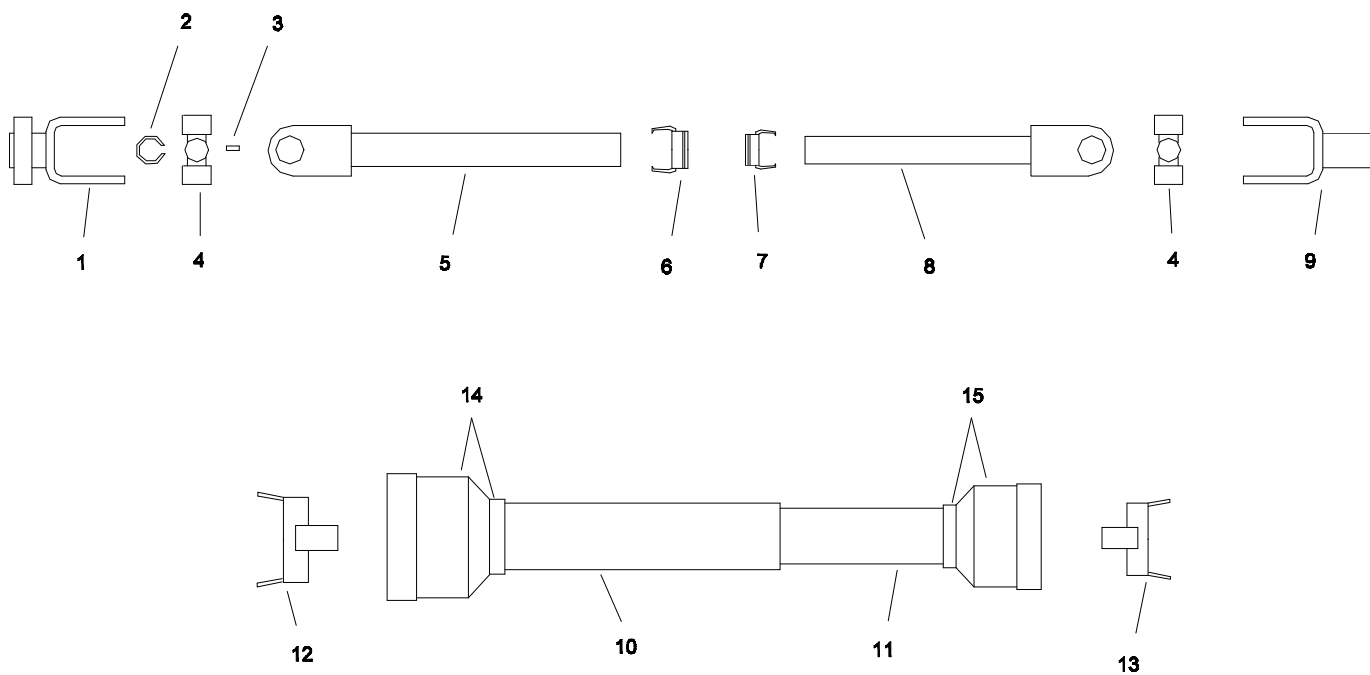


AEROTHATCH 83 - MODEL NO. 44830 & 44831 PTO ASSEMBLY - NO. 01-282-0210

PTO-0210

Ref. No.	Part No.	Description	No. Used
1	01-282-0830	Twist Yoke	1
2	01-282-0310	Snap Ring	8
3	01-282-0320	Grease Fitting	2
4	01-282-0300	Cross & Bearing	2
5	01-282-0330	Outer Yoke-tractor End	1
6	01-282-0260	Shield Bearing-outer	1
7	01-282-0270	Shield Bearing-inner	1
8	01-282-0340	Inner Yoke	1

Ref. No.	Part No.	Description	No. Used
9	01-282-0850	Implement Yoke	1
10	01-282-0410	Outer Tube Shielding	1
11	01-282-0420	Inner Tube Shielding	1
12	01-282-0370	Shield Bearing-tractor End	1
13	01-282-0380	Shield Bearing	1
14	01-282-0390	Outer Tube Cone-tractor End	1
15	01-282-0400	Inner Tube Cone	1

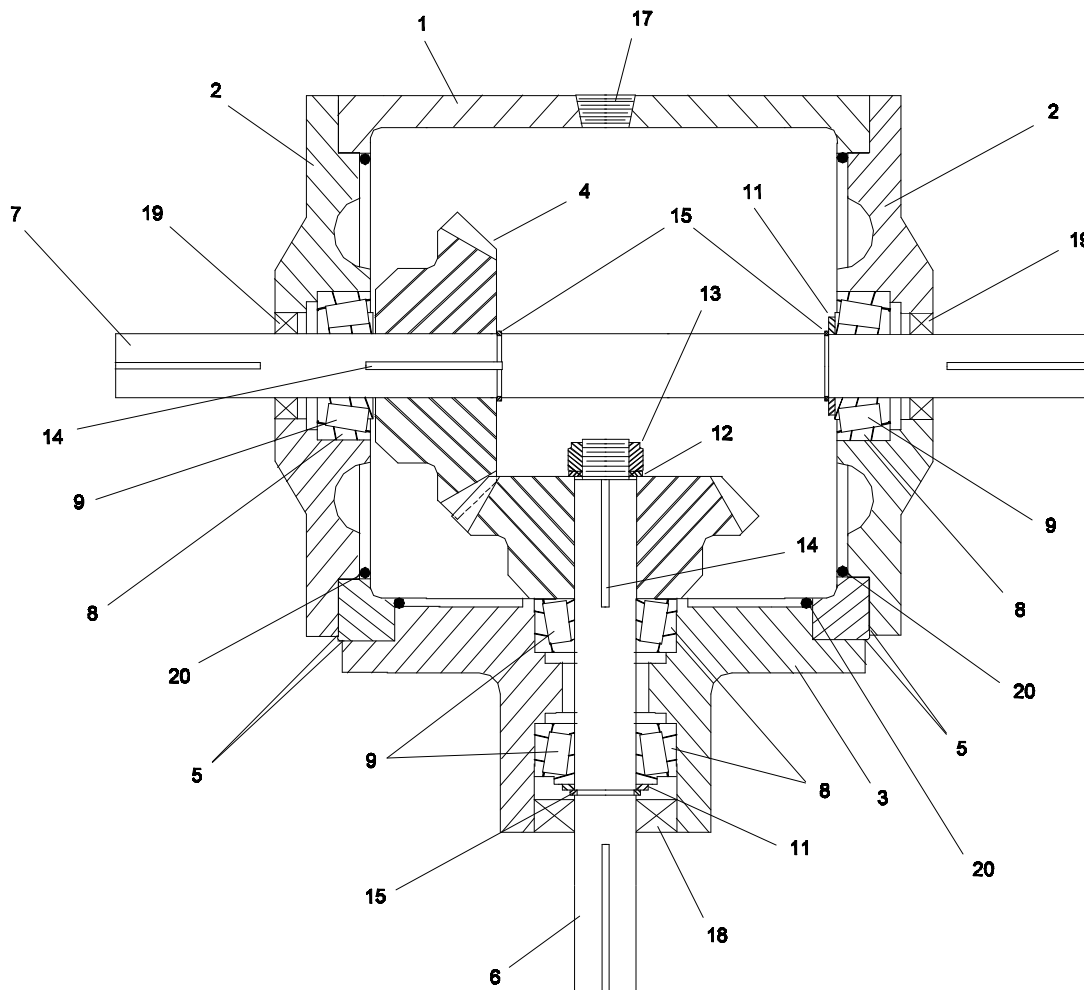


AEROTHATCH 83 - MODEL NO. 44830 & 44831 GEARBOX ASSEMBLY - NO. 01-267-0020

GB-0020

Ref. No.	Part No.	Description	No. Used
1	01-267-0210	Housing	1
2	01-267-0270	Cap - Open	2
3	01-267-0280	Housing - Pinion	1
4	01-267-0180	Gear - Bevel	2
5	01-267-0290	Shim Set (See Note)	Var
6	01-267-0110	Pinion Shaft	1
7	01-267-0120	Cross Shaft	1
8	01-103-0150	Bearing - Cup	4
9	01-102-0140	Bearing - Cone	4
10	323-6	Capscrew - Hex Hd.	18
NOTE: Set includes (1) shim - .002" thick (2) shims - .005" thick			

Ref. No.	Part No.	Description	No. Used
11	01-267-0300	Spacer	2
12	01-267-0310	Washer	1
13	01-192-0210	Nut - Self Locking	1
14	01-267-0320	Key	2
15	01-267-0330	Retaining Ring	3
16	01-267-0130	Seal Kit (Incl. Ref. #5, 13-15, 17-20)	1
17	01-451-0010	Pipe Plug	2
18	01-405-0480	Seal	1
19	01-405-0470	Seal	2
20	92-4607	O-Ring	3

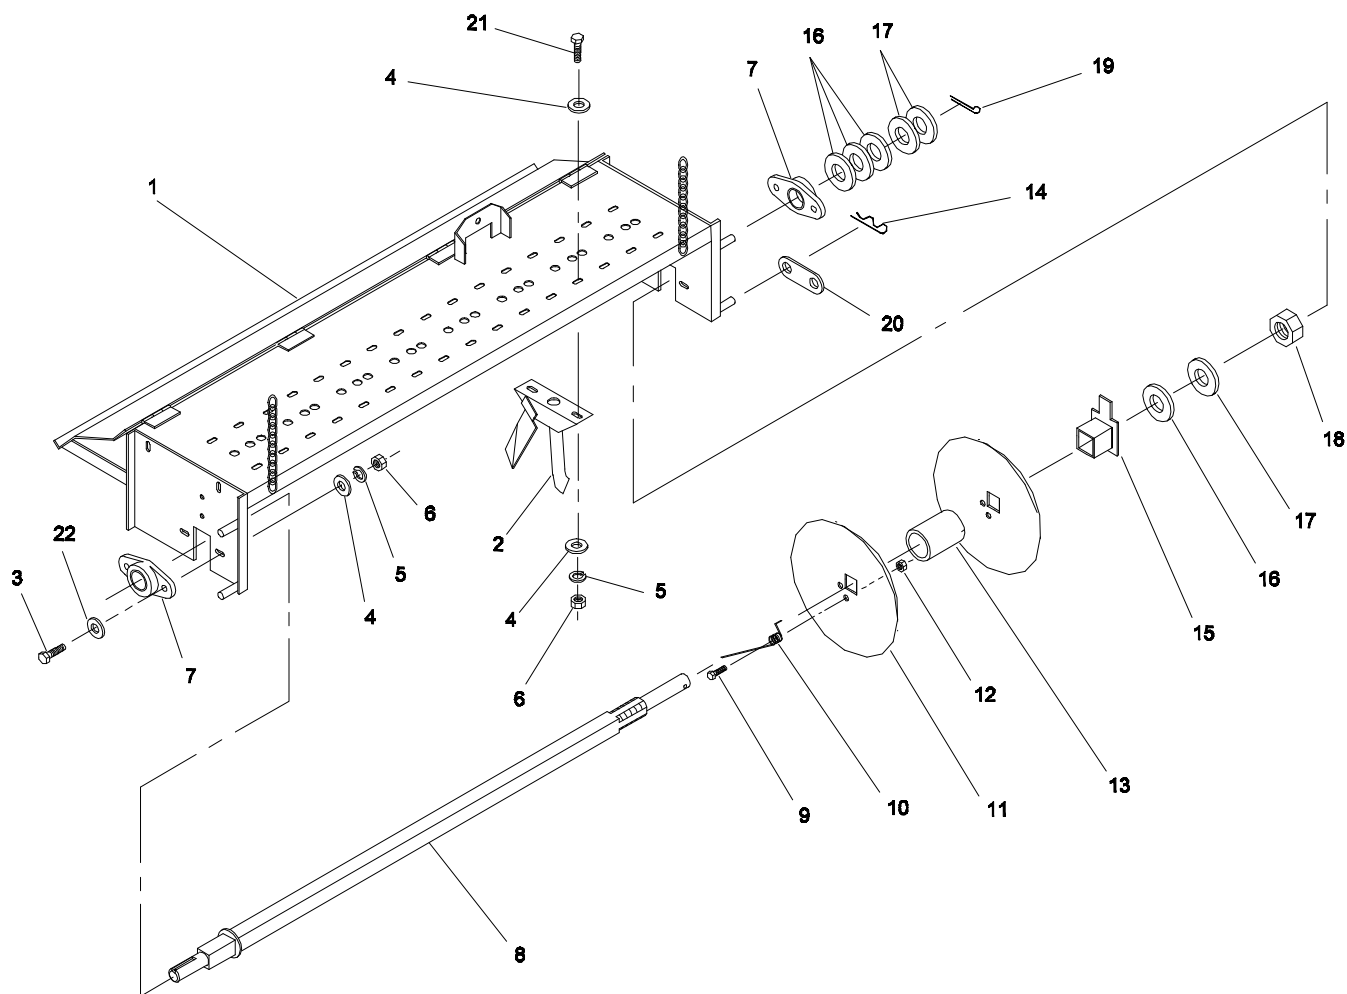


SEEDER 93 - MODEL NO. 44835 DISC FRAME ASSEMBLY

93-001

Ref. No.	Part No.	Description	No. Used
1	93-005-0093	Disc Frame Assembly	1
2	93-005-0073	Seeder Tube Assembly	16
3	323-7	Capscrew - Hex Hd.	4
4	3256-4	Flat Washer	68
5	3253-5	Lock Washer	36
6	3217-7	Hex Nut	36
7	01-100-0160	Bearing	2
8	93-005-0522	Disc Shaft	1
9	323-4	Capscrew - Hex Hd.	16
10	01-261-0140	Wiper Spring	16
11	01-283-0020	Disc	16
12	3296-39	Lock Nut	16
13	93-004-0511	Disc Spacer	15

Ref. No.	Part No.	Description	No. Used
14	01-159-0010	Presto Pin	4
15	93-005-0351	Locking Spacer	1
16	01-168-1614	Machinery Bushing	4(var)
17	01-168-1610	Machinery Bushing	3(var)
18	01-191-2206	Jam Nut	1
19	3272-23	Cotter Pin	1
20	93-004-0121	Seeder Box Mount	4
21	323-6	Capscrew - Hex Hd.	32
22	3256-24	"SAE" Flat Washer	4
*	93-002-0642	Disc Shaft Assembly (Incl. Ref. #8 - 18)	1

* Not Illustrated

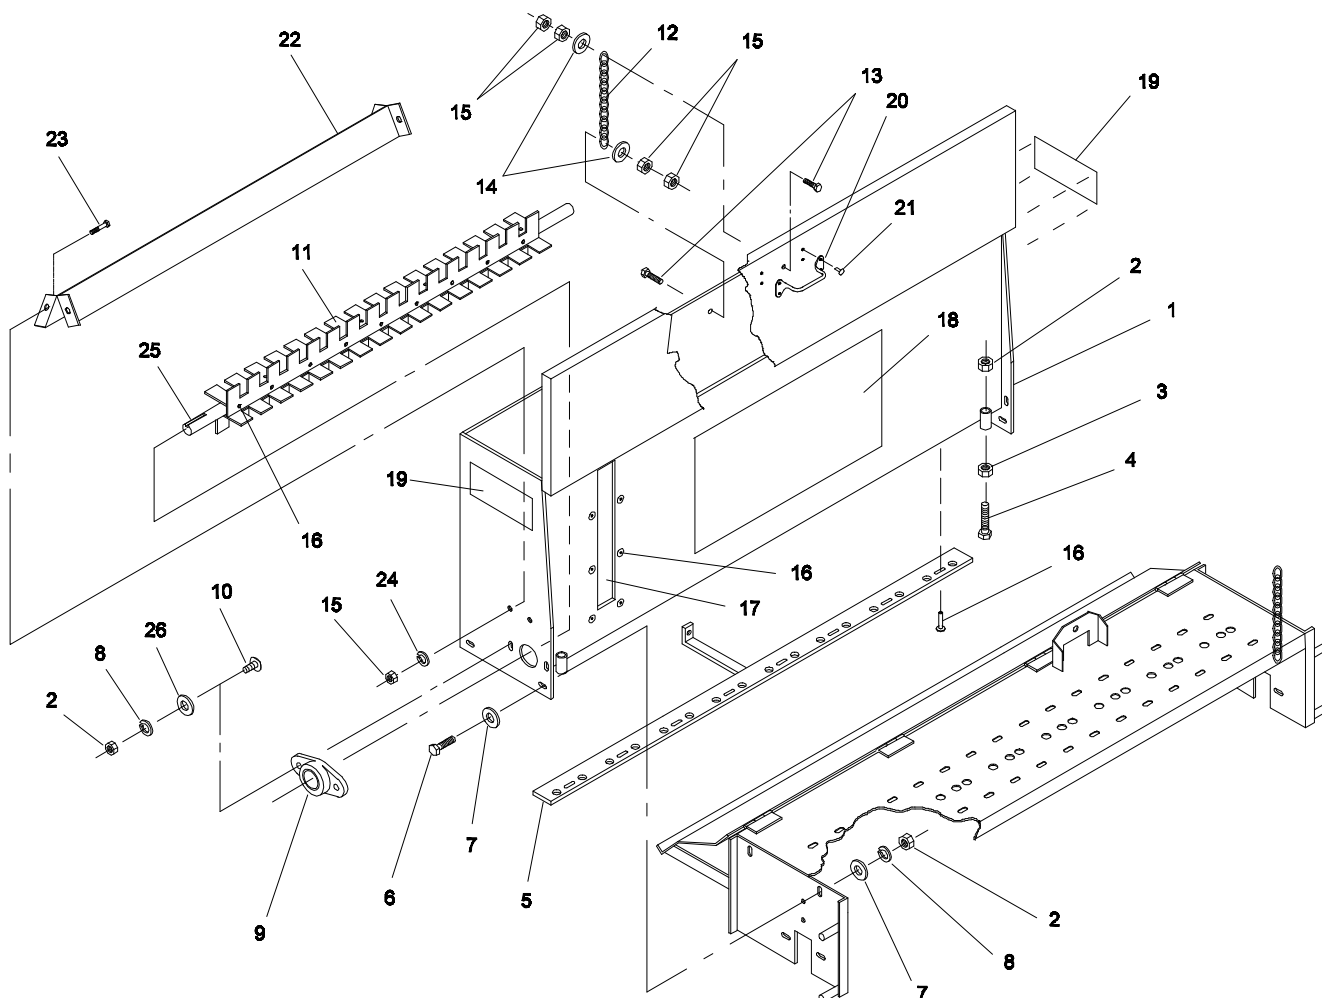


SEEDER 93 - MODEL NO. 44835 SEED BOX ASSEMBLY

93-002

Ref. No.	Part No.	Description	No. Used
1	93-005-0083	Seeder Box	1
2	3217-7	Hex Nut	12
3	3218-3	Jam Nut	4
4	01-182-0620	Capscrew - Hex Hd.	4
5	93-005-0062	Slide Assembly	1
6	323-6	Capscrew - Hex Hd.	4
7	3256-4	Flat Washer	8
8	3253-5	Lock Washer	8
9	01-100-0160	Bearing	2
10	93-004-0941	Bolt - Seeder Brg.	4
11	93-004-0322	Paddle	4
12	93-004-0441	Lid Chain	1
13	321-6	Capscrew - Hex Hd.	2
14	3256-2	Flat Washer	2
15	3217-5	Hex Nut	8
16	01-161-0030	Pop Rivet	84
17	93-004-0831	Peep Hole Cover	1

Ref. No.	Part No.	Description	No. Used
18	67-7920	Decal - Toro	1
19	01-506-1030	Decal - Seeder 93	2
20	01-256-0140	Handle	1
21	01-161-0060	Pop Rivet	4
22	93-004-0681	Seeder Baffle	1
23	321-2	Capscrew - Hex Hd.	4
24	3253-3	Lock Washer	4
25	93-005-0362	Shaft	1
26	3256-24	"SAE" Flat Washer	4
*	93-002-0042	Auger Assembly (Incl. Ref. #11,16, 25)	1
*	93-002-1002	Seeder Box Assembly (Incl. Ref. #1,5,16,17)	1

* Not Illustrated

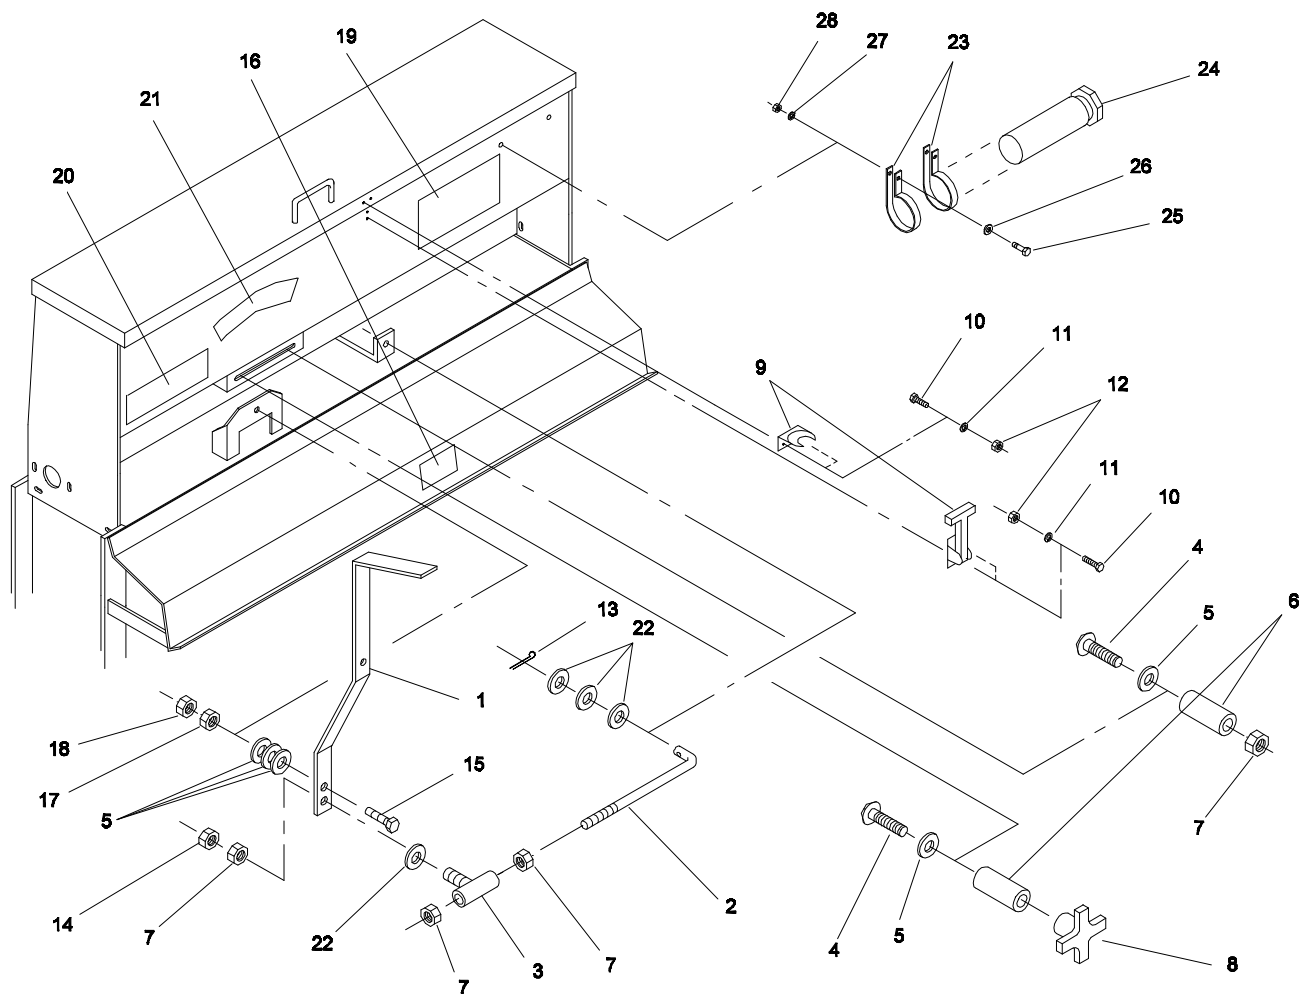


SEEDER 93 - MODEL NO. 44835 SEED BOX ASSEMBLY (Continued)

93-004

Ref. No.	Part No.	Description	No. Used
1	93-005-0811	Seeder Handle	1
2	93-004-0711	Seeder Adjustment Rod	1
3	93-005-0751	Pivot Spacer	1
4	3231-4	Carriage Bolt	2
5	3256-26	"SAE" Flat Washer	5
6	93-004-0761	Adjustment Spacer	2
7	3217-7	Hex Nut	4
8	01-257-0010	Knob	1
9	01-270-1350	Door Latch	1
10	01-158-1210	Capscrew - Slotted Hex Hd.	4
11	3253-2	Lock Washer	4
12	3217-26	Hex Nut	4
13	01-151-0030	Cotter Pin	1
14	3218-3	Jam Nut	1

Ref. No.	Part No.	Description	No. Used
15	325-6	Capscrew - Hex Hd.	1
16	01-506-0340	Decal - Danger	1
17	3217-9	Hex Nut	1
18	3218-5	Jam Nut	1
19	66-1210	Decal - Toro	1
20	01-506-0610	Decal - Flow Setting	1
21	01-506-0140	Decal - Seeder Gauge	1
22	3256-4	Flat Washer	4
23	2412-133	R-Clamp	2
24	74-0720	Manual Tube	1
25	321-4	Capscrew - Hex Hd.	2
26	3256-2	Flat Washer	2
27	3253-3	Lock Washer	2
28	3217-5	Hex Nut	2

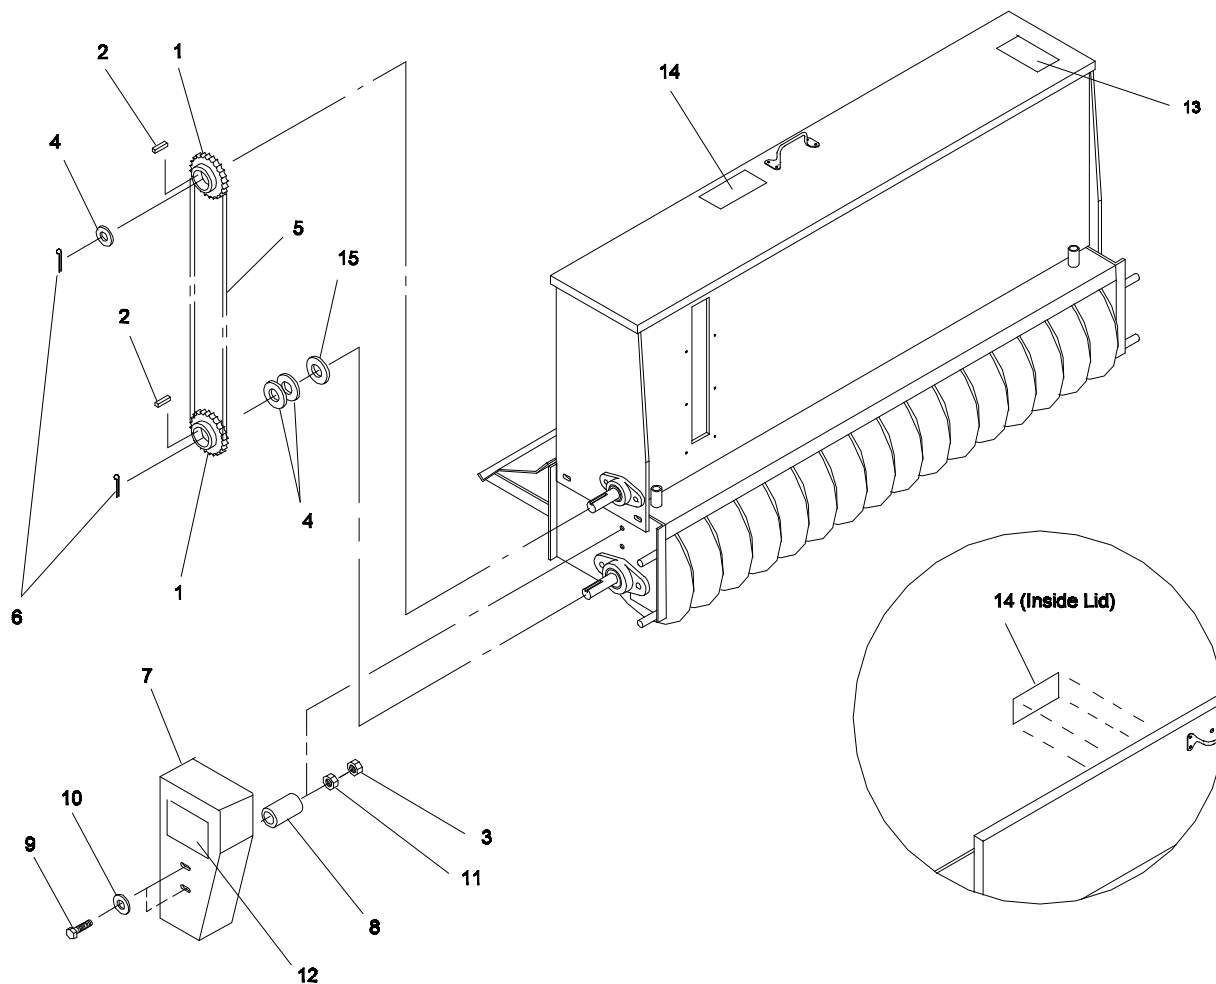


SEEDER 93 - MODEL NO. 44835 CHAIN DRIVE & GUARD ASSEMBLY

93-003

Ref. No.	Part No.	Description	No. Used
1	01-262-0450	Sprocket	2
2	48-004-5071	Key	2
3	3218-3	Jam Nut	2
4	01-168-1610	Machinery Bushing	3(var)
5	93-004-0651	Seeder Chain	1
*	01-251-0080	Offset Link	1
*	01-251-0070	Connecting Link	1
6	3272-23	Cotter Pin	2
7	93-005-0112	Chain Guard	1

Ref. No.	Part No.	Description	No. Used
8	93-004-0881	Guard Spacer	2
9	323-23	Capscrew - Hex Hd.	2
10	3256-4	Flat Washer	2
11	3217-7	Hex Nut	2
12	01-506-0050	Decal - Danger	1
13	01-506-0430	Decal - Replacement Manual	1
14	01-506-0100	Decal - Danger	2
15	01-168-1614	Machinery Bushing	1(var)

* Not Illustrated

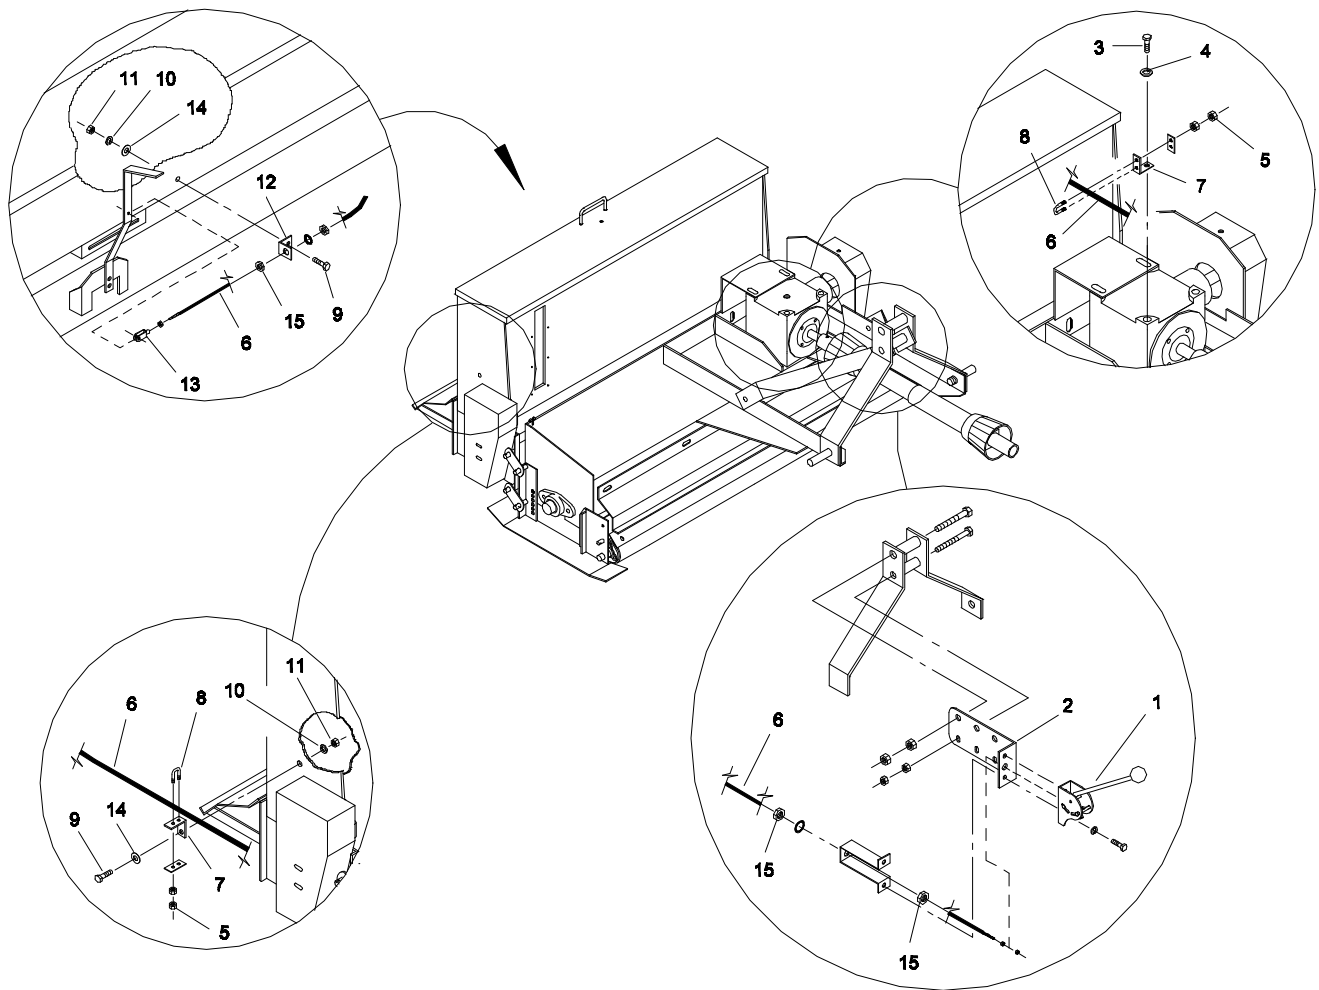

SEEDER 93 - MODEL NO. 44835 REMOTE SEED HANDLE ASSEMBLY

93-005

Ref. No.	Part No.	Description	No. Used
1	01-359-0250	Remote Handle	1
*	01-359-0360	Adapter - Clevis	1
2	93-004-0861	Handle Mount Plate	1
3	325-4	Capscrew - Hex Hd.	1
4	3253-7	Lock Washer	1
5	3217-5	Hex Nut	4
6	01-359-0230	Cable Assembly	1
7	93-004-0851	Cable Bracket	2

Ref. No.	Part No.	Description	No. Used
8	01-170-0040	Cable Bracket w/nuts	2
9	323-6	Capscrew - Hex Hd.	2
10	3253-5	Lock Washer	2
11	3217-7	Hex Nut	2
12	93-004-0841	Rear Cable Bracket	1
13	01-359-0240	Cable Clevis	1
14	3256-4	Flat Washer	2
15	3220-2	Jam Nut	3

* Not Illustrated

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-100-0160	Bearing	10	9	2	01-267-0330	Retaining Ring	8	15	3
01-100-0160	Bearing	9	7	2	01-270-1350	Door Latch	11	9	1
01-100-0170	Bearing	2	2	2	01-282-0210	PTO Assembly	5	11	1
01-100-0170	Bearing	3	2	2	01-282-0260	Shield Bearing-outer	7	6	1
01-100-0260	Bearing	4	3	2	01-282-0270	Shield Bearing-inner	7	7	1
01-102-0140	Bearing - Cone	8	9	4	01-282-0300	Cross & Bearing	7	4	2
01-103-0150	Bearing - Cup	8	8	4	01-282-0310	Snap Ring	7	2	8
01-151-0030	Cotter Pin	11	13	1	01-282-0320	Grease Fitting	7	3	2
01-151-0030	Cotter Pin	4	10	6	01-282-0330	Outer Yoke-tractor End	7	5	1
01-158-1210	Capscrew - Slotted Hex Hd.	11	10	4	01-282-0340	Inner Yoke	7	8	1
01-159-0010	Presto Pin	1	13	6	01-282-0370	Shield Bearing-tractor End	7	12	1
01-159-0010	Presto Pin	9	14	4	01-282-0380	Shield Bearing	7	13	1
01-161-0030	Pop Rivet	10	16	84	01-282-0390	Outer Tube Cone-tractor End	7	14	1
01-161-0060	Pop Rivet	10	21	4	01-282-0400	Inner Tube Cone	7	15	1
01-163-0030	Set Screw	5	14	1	01-282-0410	Outer Tube Shielding	7	10	1
01-168-1610	Machinery Bushing	12	4	3	01-282-0420	Inner Tube Shielding	7	11	1
01-168-1610	Machinery Bushing	9	17	3	01-282-0830	Twist Yoke	7	1	1
01-168-1614	Machinery Bushing	12	15	1	01-282-0850	Implement Yoke	7	9	1
01-168-1614	Machinery Bushing	9	16	4	01-283-0020	Disc	9	11	16
01-168-2010	Machinery Bushing	2	10	6	01-283-0090	Blade	2	13	16
01-168-2010	Machinery Bushing	3	10	6	01-283-0090	Blade	3	13	43
01-168-2014	Machinery Bushing	2	11	3	01-283-0120	Blade	2	*	16
01-168-2014	Machinery Bushing	3	11	3	01-283-0130	Blade	2	*	16
01-168-2018	Machinery Bushing	2	9	4	01-359-0230	Cable Assembly	13	6	1
01-168-2018	Machinery Bushing	3	9	4	01-359-0240	Cable Clevis	13	13	1
01-170-0040	Cable Bracket	13	8	2	01-359-0250	Remote Handle	13	1	1
01-182-0620	Capscrew - Hex Hd.	10	4	4	01-359-0360	Adapter - Clevis	13	*	1
01-182-0844	Capscrew - Hex Hd.	5	7	2	01-405-0470	Seal	8	19	2
01-191-2206	Jam Nut	9	18	1	01-405-0480	Seal	8	18	1
01-191-2805	Jam Nut	2	17	1	01-451-0010	Pipe Plug	8	17	2
01-191-2805	Jam Nut	3	17	1	01-506-0050	Decal - Danger	12	12	1
01-192-0210	Nut - Self Locking	8	13	1	01-506-0050	Decal - Danger	2	27	1
01-215-0050	Grease Zerk	2	24	1	01-506-0050	Decal - Danger	3	27	1
01-215-0050	Grease Zerk	3	24	1	01-506-0100	Decal - Danger	12	14	2
01-251-0070	Connecting Link	12	*	1	01-506-0130	Decal - Danger	1	18	1
01-251-0080	Offset Link	12	*	1	01-506-0140	Decal - Seeder Gauge	11	21	1
01-251-0170	Offset Link	2	*	1	01-506-0160	Decal - Important	1	17	1
01-251-0170	Offset Link	3	*	1	01-506-0340	Decal - Danger	1	20	2
01-252-0010	Hitch Pin	6	8	2	01-506-0340	Decal - Danger	11	16	1
01-256-0140	Handle	10	20	1	01-506-0430	Decal - Replacement Manual	1	16	1
01-257-0010	Knob	11	8	1	01-506-0430	Decal - Replacement Manual	12	13	1
01-260-0140	Bushing	2	21	1	01-506-0610	Decal - Flow Setting	11	20	1
01-260-0140	Bushing	3	21	1	01-506-1010	Decal - Aerothatch 83	1	19	2
01-261-0130	Spring	4	9	2	01-506-1030	Decal - Seeder 93	10	19	2
01-261-0140	Wiper Spring	9	10	16	12-004-1331	Key	5	10	1
01-262-0060	Sprocket	2	20	1	2412-133	R-Clamp	11	23	2
01-262-0060	Sprocket	3	20	1	2412-133	R-Clamp	5	15	2
01-262-0190	Sprocket	2	18	1	321-11	Capscrew - Hex Hd.	4	11	1
01-262-0190	Sprocket	3	18	1	321-2	Capscrew - Hex Hd.	10	23	4
01-262-0450	Sprocket	12	1	2	321-4	Capscrew - Hex Hd.	11	25	2
01-267-0020	Gearbox	5	1	1	321-4	Capscrew - Hex Hd.	5	17	2
01-267-0110	Pinion Shaft	8	6	1	321-6	Capscrew - Hex Hd.	10	13	2
01-267-0120	Cross Shaft	8	7	1	3217-12	Hex Nut	6	12	1
01-267-0130	Seal Kit	8	16	1	3217-26	Hex Nut	11	12	4
01-267-0180	Gear - Bevel	8	4	2	3217-5	Hex Nut	10	15	8
01-267-0210	Housing	8	1	1	3217-5	Hex Nut	11	28	2
01-267-0270	Cap - Open	8	2	2	3217-5	Hex Nut	13	5	4
01-267-0280	Housing - Pinion	8	3	1	3217-5	Hex Nut	4	12	2
01-267-0290	Gasket	8	5	15	3217-5	Hex Nut	5	20	2
01-267-0300	Spacer	8	11	2	3217-6	Hex Nut	5	13	2
01-267-0310	Washer	8	12	1	3217-7	Hex Nut	1	8	8
01-267-0320	Key	8	14	2	3217-7	Hex Nut	10	2	12

* Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
3217-7	Hex Nut	11	7	4	3256-24	"SAE" Flat Washer	9	22	4
3217-7	Hex Nut	12	11	2	3256-26	"SAE" Flat Washer	11	5	5
3217-7	Hex Nut	13	11	2	3256-26	"SAE" Flat Washer	2	4	4
3217-7	Hex Nut	2	26	2	3256-26	"SAE" Flat Washer	3	4	4
3217-7	Hex Nut	3	26	2	3256-4	Flat Washer	1	6	16
3217-7	Hex Nut	9	6	36	3256-4	Flat Washer	10	7	8
3217-9	Hex Nut	1	12	8	3256-4	Flat Washer	11	22	4
3217-9	Hex Nut	11	17	1	3256-4	Flat Washer	12	10	2
3217-9	Hex Nut	2	6	4	3256-4	Flat Washer	13	14	2
3217-9	Hex Nut	3	6	4	3256-4	Flat Washer	2	25	2
3217-9	Hex Nut	5	8	4	3256-4	Flat Washer	3	25	2
3217-9	Hex Nut	6	7	3	3256-4	Flat Washer	9	4	68
3218-3	Jam Nut	10	3	4	3256-6	Flat Washer	1	10	8
3218-3	Jam Nut	11	14	1	3256-6	Flat Washer	5	5	10
3218-3	Jam Nut	12	3	2	3272-23	Cotter Pin	12	6	2
3218-5	Jam Nut	11	18	1	3272-23	Cotter Pin	2	11	2
3218-5	Jam Nut	6	11	1	3272-23	Cotter Pin	3	11	2
3218-7	Jam Nut	6	13	1	3272-23	Cotter Pin	9	19	1
322-20	Capscrew - Hex Hd.	5	12	1	328-12	Capscrew - Hex Hd.	6	5	1
322-6	Capscrew - Hex Hd.	4	5	6	3296-39	Lock Nut	9	12	16
3220-2	Jam Nut	13	15	3	48-004-5071	Key	12	2	2
323-23	Capscrew - Hex Hd.	12	9	2	66-1210	Decal - Toro	1	15	1
323-4	Capscrew - Hex Hd.	9	9	16	66-1210	Decal - Toro	11	19	1
323-6	Capscrew - Hex Hd.	1	5	8	67-7920	Decal - Toro	10	18	1
323-6	Capscrew - Hex Hd.	10	6	4	74-0720	Manual Tube	11	24	1
323-6	Capscrew - Hex Hd.	13	9	2	74-0720	Manual Tube	5	16	1
323-6	Capscrew - Hex Hd.	8	10	18	83-002-0022	Blade Shaft Assembly	2	*	1
323-6	Capscrew - Hex Hd.	9	21	32	83-002-0032	Blade Shaft Assembly	3	*	1
323-7	Capscrew - Hex Hd.	9	3	4	83-004-0112	Roller Shield	1	4	2
3231-4	Carriage Bolt	11	4	2	83-004-0291	Arm Hitch Mount	6	1	2
325-22	Capscrew - Hex Hd.	6	3	1	83-004-0302	Stabilizer Arm	6	2	2
325-4	Capscrew - Hex Hd.	13	3	1	83-004-0311	Blade Spacer	2	14	15
325-4	Capscrew - Hex Hd.	5	3	2	83-004-0361	Gearbox Shield	5	2	1
325-5	Capscrew - Hex Hd.	1	9	4	83-004-0371	Roller Spacer	4	8	2
325-6	Capscrew - Hex Hd.	11	15	1	83-004-0381	Top Spacer	6	9	1
325-6	Capscrew - Hex Hd.	2	3	4	83-004-0391	Bottom Spacer	6	10	1
325-6	Capscrew - Hex Hd.	3	3	4	83-004-0431	Key	2	7	1
325-6	Capscrew - Hex Hd.	5	6	4	83-004-0431	Key	3	7	1
325-6	Capscrew - Hex Hd.	6	4	2	83-004-0441	Key	5	9	1
3253-2	Lock Washer	11	11	4	83-004-0511	Drive Chain	2	19	1
3253-3	Lock Washer	10	24	4	83-004-0511	Drive Chain	3	19	1
3253-3	Lock Washer	11	27	2	83-004-0531	End Spacer	2	12	1
3253-3	Lock Washer	5	19	2	83-004-0531	End Spacer	3	12	1
3253-4	Lock Washer	4	6	6	83-004-0551	Blade Spacer	2	*	15
3253-5	Lock Washer	1	7	8	83-004-0561	Blade Spacer	2	*	15
3253-5	Lock Washer	10	8	8	83-004-0601	Guard Seal	2	22	1
3253-5	Lock Washer	13	10	2	83-004-0601	Guard Seal	3	22	1
3253-5	Lock Washer	2	8	2	83-004-0631	Blade Spacer	3	14	42
3253-5	Lock Washer	3	8	2	83-004-0841	Roller Shaft	4	4	1
3253-5	Lock Washer	9	5	36	83-004-0871	Guard Spacer	2	15	2
3253-7	Lock Washer	1	11	8	83-004-0871	Guard Spacer	3	15	2
3253-7	Lock Washer	13	4	1	83-005-0013	Main Frame	1	1	1
3253-7	Lock Washer	2	5	4	83-005-0033	Skid Assembly-R.H.	1	3	1
3253-7	Lock Washer	3	5	4	83-005-0042	Roller Assembly	4	1	1
3253-7	Lock Washer	5	4	6	83-005-0051	Blade Shaft	2	1	1
3253-7	Lock Washer	6	6	3	83-005-0051	Blade Shaft	3	1	1
3256-2	Flat Washer	10	14	2	83-005-0062	Chain Guard	2	23	1
3256-2	Flat Washer	11	26	2	83-005-0062	Chain Guard	3	23	1
3256-2	Flat Washer	4	7	6	83-005-0072	Wiper Assembly	4	2	1
3256-2	Flat Washer	5	18	2	83-005-1002	Skid Assembly-L.H.	1	2	1
3256-24	"SAE" Flat Washer	10	26	4	83-005-1011	Locking Spacer	2	16	1

* Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
83-005-1011	Locking Spacer	3	16	1	93-004-0841	Rear Cable Bracket	13	12	1
92-4607	O-Ring	8	20	3	93-004-0851	Cable Bracket	13	7	2
93-002-0042	Auger Assembly	10	*	1	93-004-0861	Handle Mount Plate	13	2	1
93-002-0642	Disc Shaft Assembly	9	*	1	93-004-0881	Guard Spacer	12	8	2
93-002-1002	Seeder Box Assembly	10	*	1	93-004-0941	Bolt - Seeder Brg.	10	10	4
93-004-0121	Seed Box Mount	1	14	4	93-005-0062	Slide Assembly	10	5	1
93-004-0121	Seeder Box Mount	9	20	4	93-005-0073	Seeder Tube Assembly	9	2	16
93-004-0322	Paddle	10	11	4	93-005-0083	Seeder Box	10	1	1
93-004-0441	Lid Chain	10	12	1	93-005-0093	Disc Frame Assembly	9	1	1
93-004-0511	Disc Spacer	9	13	15	93-005-0112	Chain Guard	12	7	1
93-004-0651	Seeder Chain	12	5	1	93-005-0351	Locking Spacer	9	15	1
93-004-0681	Seeder Baffle	10	22	1	93-005-0362	Shaft	10	25	1
93-004-0711	Seeder Adjustment Rod	11	2	1	93-005-0522	Disc Shaft	9	8	1
93-004-0761	Adjustment Spacer	11	6	2	93-005-0751	Pivot Spacer	11	3	1
93-004-0831	Peep Hole Cover	10	17	1	93-005-0811	Seeder Handle	11	1	1

* Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The Aerothatch 83 and Seeder 93 have two identification numbers; a model number and a serial number. The numbers on the Aerathatch 83 is stamped on a plate which is located by the gearbox. The Seeder 93 plate is located on top of the seed hooper. In any correspondence concerning the Aerothatch or Seeder, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the unit.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
<u>AEROTHATCH 83</u>		<u>SEEDER 93</u>	
Main Frame Assembly	1	Disc Frame Assembly	9
Blade Shaft & Chain Drive Assembly-Model 44830	2	Seed Box Assembly	10 - 11
Blade Shaft & Chain Drive Assembly-Model 44831	3	Chain Drive & Guard Assembly	12
Roller & Scraper Assembly	4	Remote Seed Handle Assembly	13
Gearbox Mounting Assembly	5	Part Number Index	14 - 16
3 Point Hitch Assembly	6		
PTO Assembly No. 01-282-0210	7		
Gearbox Assembly No. 01-267-0020	8		

NOTES

NOTES

MAINTENANCE RECORD

[illegible]