




MODEL NO. 44520 - 20101 & UP

PARTS CATALOG

DEBRIS BLOWER 2613

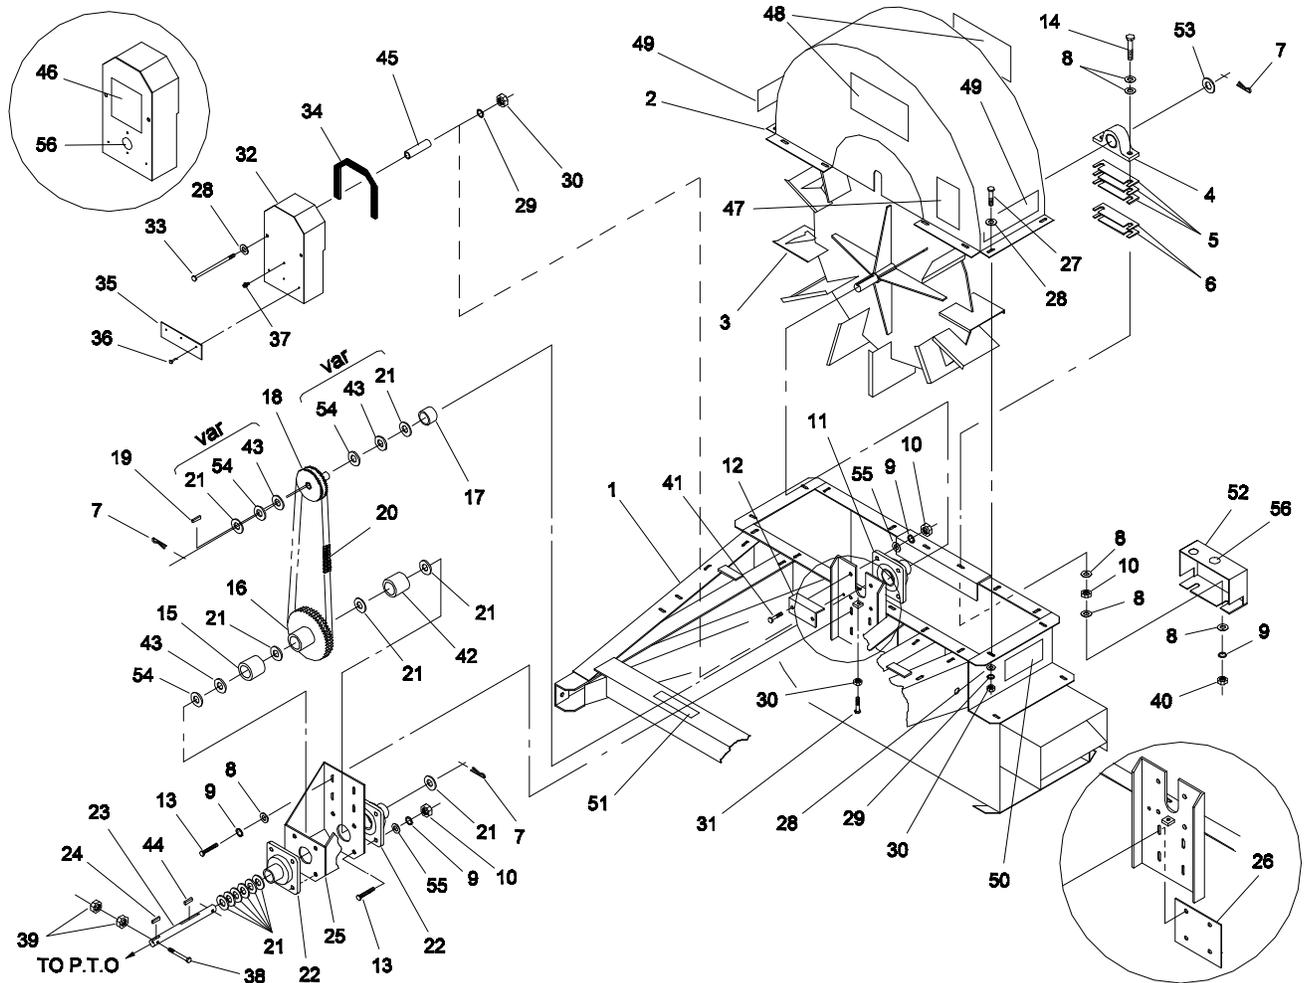


BLOWER ASSEMBLY

61-001

Ref. No.	Part No.	Description	No. Used
1	61-005-0073	Hitch & Lower Housing	1
2	61-005-0121	Fan Housing	1
3	61-005-0061	Fan Assembly	1
4	01-113-0070	Bearing	1
5	61-004-1351	Bearing Shim	3(var)
6	61-004-1361	Bearing Shim	2(var)
7	3272-25	Cotter Pin	3
8	3256-6	Flat Washer	14
9	3253-7	Lock Washer	18
10	3217-9	Hex Nut	14
11	01-100-0200	Bearing	1
12	61-004-0381	Dust Shield	1
13	325-6	Capscrew - Hex Hd.	12
14	325-12	Capscrew - Hex Hd.	2
15	61-004-0391	Drive Spacer	1
16	01-262-0330	Sprocket	1
17	61-004-1371	Outside Drive Spacer	1

Ref. No.	Part No.	Description	No. Used
18	01-262-0340	Sprocket	1
19	61-004-0461	Key	1
20	61-004-0371	Fan Chain, #D50	1
*	01-251-0110	Offset Link, #D50	1
21	01-168-2010	Machinery Bushing	12(var)
22	01-100-0180	Bearing	2
23	61-004-0471	Lower Drive Shaft	1
24	66-004-3211	Key	1
25	61-005-0131	Drive Housing	1
26	61-004-1191	Back Plate	1
27	323-6	Capscrew - Hex Hd.	12
28	3256-4	Flat Washer	26
29	3253-5	Lock Washer	14
30	3217-7	Hex Nut	15
31	01-182-0616	Capscrew - Hex Hd.	1
32	61-005-0141	Chain Guard	1
33	01-178-0642	Capscrew - Hex Hd.	2

* Not Illustrated

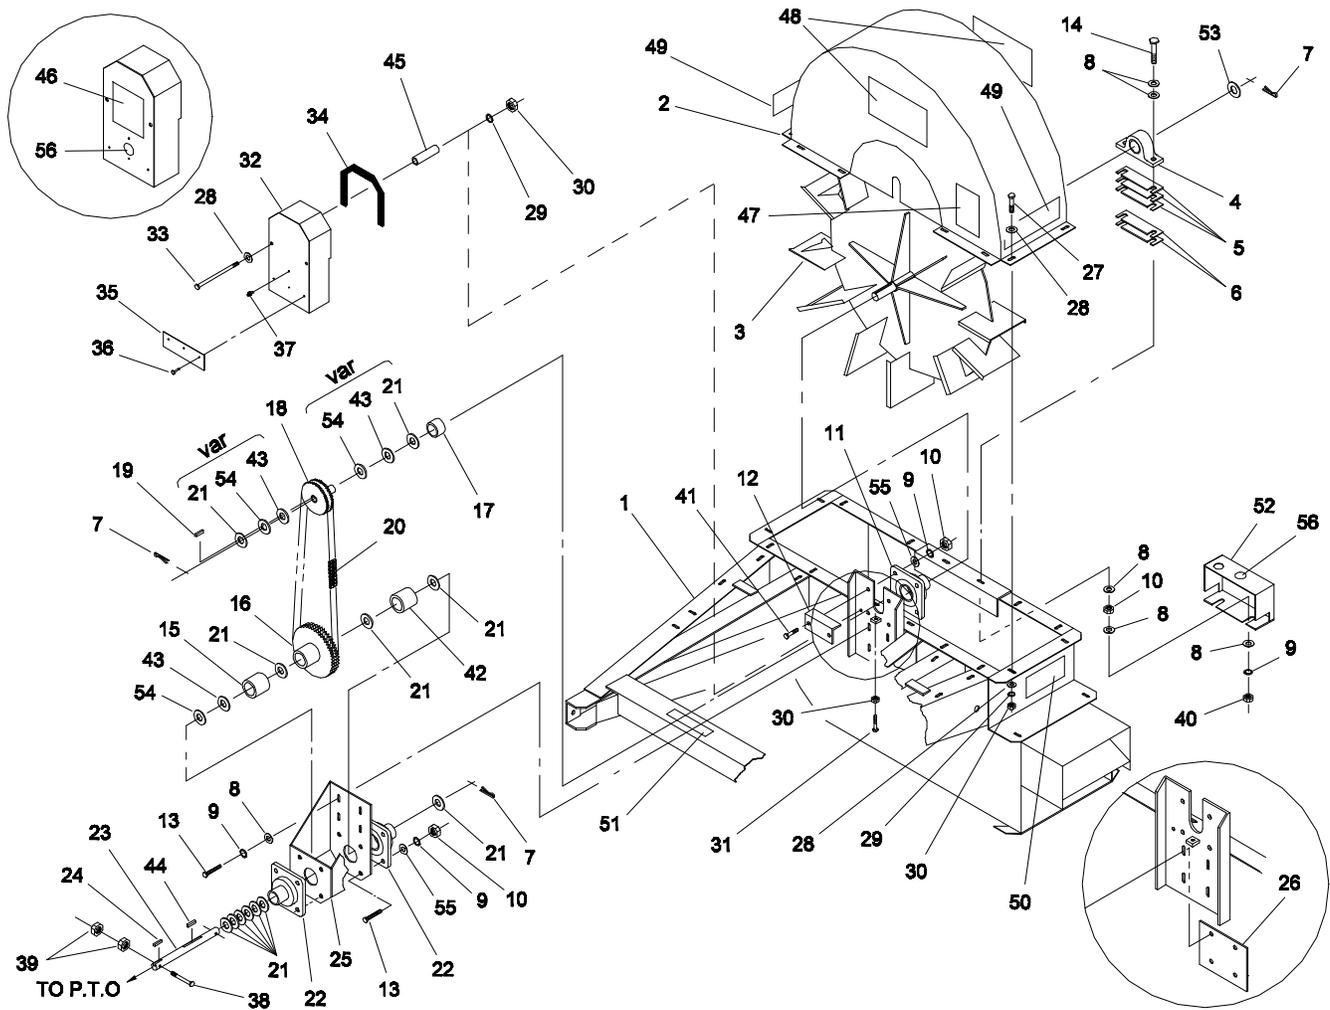


BLOWER ASSEMBLY (Continued)

61-001

Ref. No.	Part No.	Description	No. Used
34	61-004-0361	Gasket	1
35	61-004-0911	Gear Box Guard Belting	1
36	01-161-0020	Pop Rivet	3
37	01-215-0050	Grease Zerk	1
38	322-20	Capscrew - Hex Hd.	1
39	3217-6	Hex Nut	2
40	3218-5	Jam Nut	2
41	325-7	Capscrew - Hex Hd.	4
42	61-004-1031	Inside Drive Spacer	1
43	01-168-2018	Machinery Bushing	3(var)
44	61-004-1041	Key	1
45	61-004-1061	Guard Spacer	2
46	01-506-0050	Decal - Danger	1
47	01-506-0160	Decal - Important	1

Ref. No.	Part No.	Description	No. Used
48	66-1210	Decal - Toro	2
49	01-506-0830	Decal - Debris Blower 2613	2
50	01-506-0110	Decal - Warning	1
51	01-506-0130	Decal - Danger	1
52	61-005-1201	Bearing Cover	1
53	01-168-2410	Machinery Bushing	1
54	01-168-2014	Machinery Bushing	3(var)
55	3256-26	"SAE" Flat Washer	8
56	58-6520	Decal - Grease	2
*	01-282-2220	PTO	1
*	01-163-0030	Set Screw (PTO)	1

* Not Illustrated

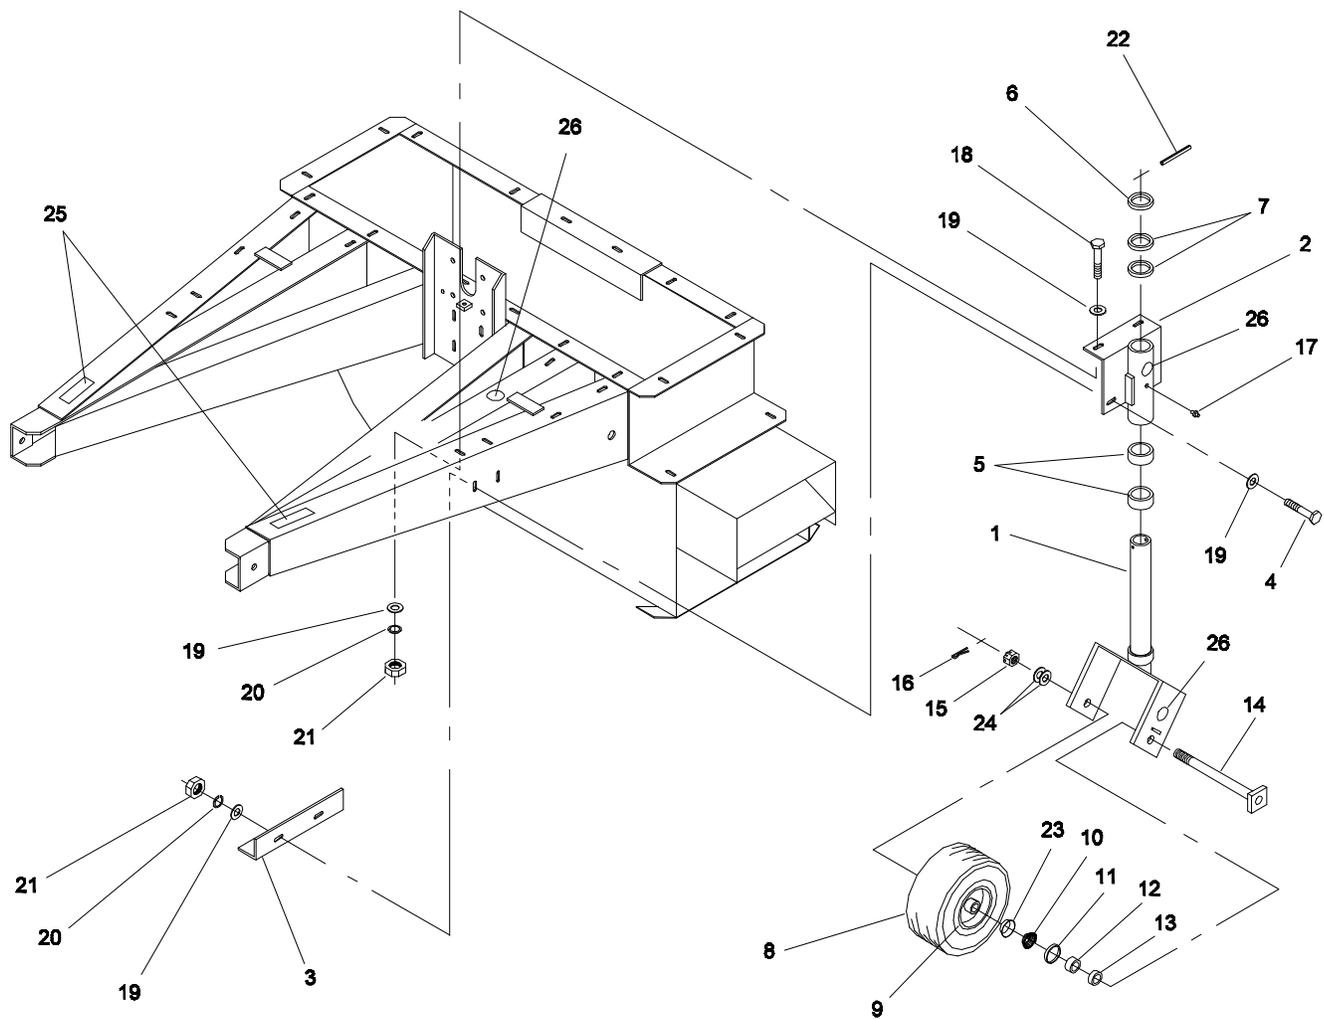


WHEEL MOUNT ASSEMBLY

61-002

Ref. No.	Part No.	Description	No. Used
1	61-005-0051	Wheel Yoke Assembly	2
2	61-005-0041	Wheel Pivot Assembly	2
3	61-004-0501	Backing Plate	2
4	323-8	Capscrew - Hex Hd.	4
5	61-004-0491	Yoke Spacer	4
6	01-168-3014	Machinery Bushing	2(var)
7	01-168-3010	Machinery Bushing	4(var)
8	01-269-0250	Tire	2
9	01-269-0260	Wheel	2
10	254-78	Bearing	4
11	01-405-0320	Seal	4
12	01-269-0060	Spacer	4
13	61-004-0951	Wheel Spacer	4

Ref. No.	Part No.	Description	No. Used
14	61-005-0151	Axle	2
15	01-190-1210	Castle Nut	2
16	3272-22	Cotter Pin	2
17	01-215-0050	Grease Zerk	2
18	323-7	Capscrew - Hex Hd.	4
19	3256-4	Flat Washer	12
20	3253-5	Lock Washer	8
21	3217-7	Hex Nut	8
22	32121-10	Roll Pin	2
23	01-103-0130	Bearing Race	4
24	01-168-1214	Machinery Bushing	4
25	75-5190	Decal - No Riders	2
26	58-6520	Decal - Grease	5

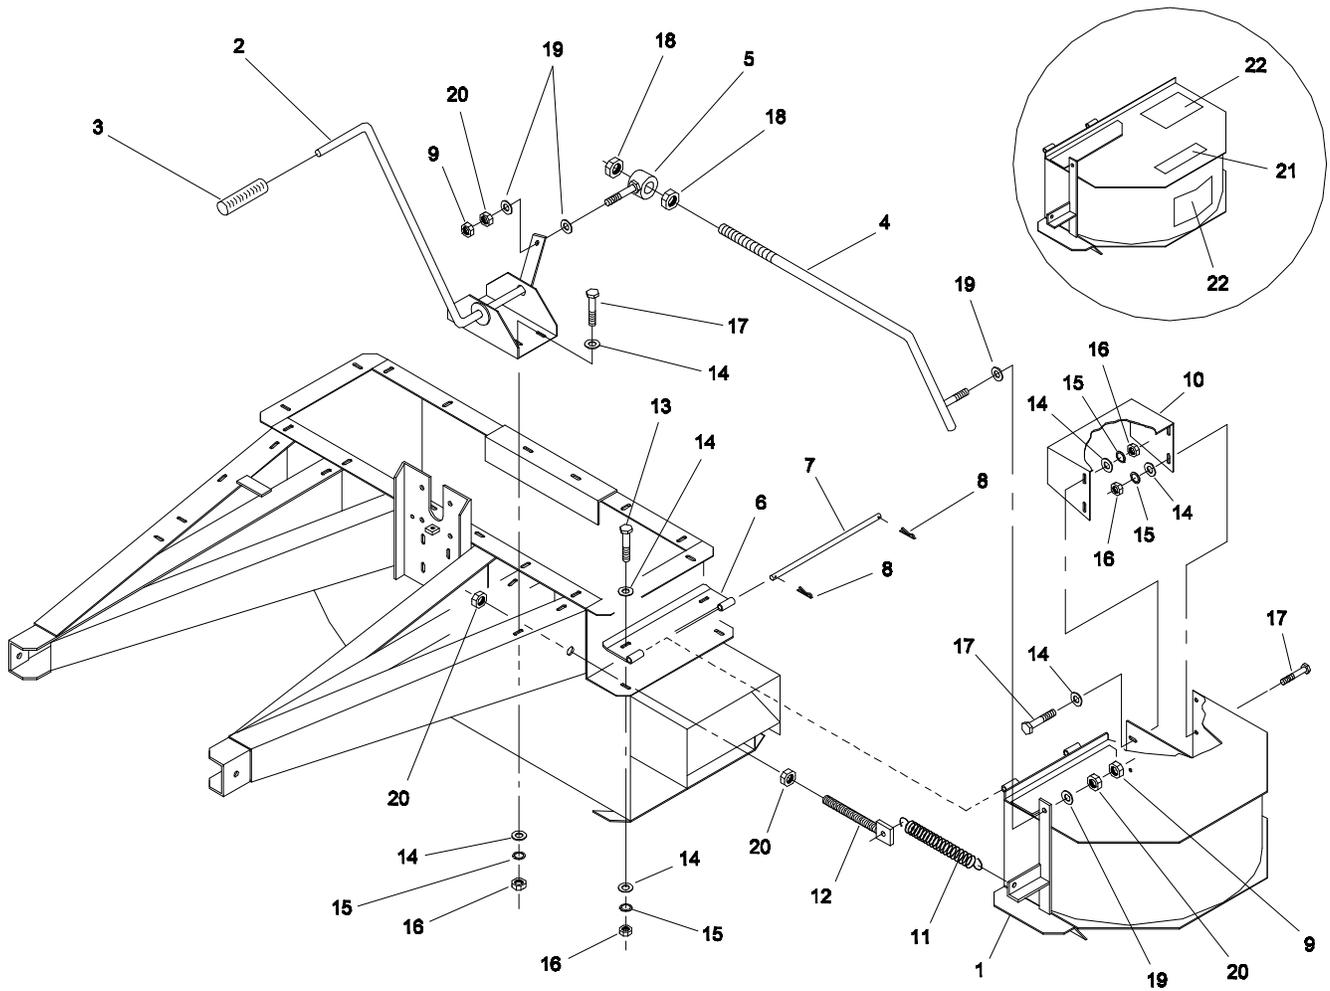


DEFLECTOR KIT - MODEL NO. 44521

61-003

Ref. No.	Part No.	Description	No. Used
1	61-005-0112	Air Reverse Housing	1
2	61-005-0101	Lift Handle Assembly	1
3	01-259-0010	Handle Grip	1
4	61-005-0091	Lift Arm Assembly	1
5	48-005-0591	Reel Lift Tube	1
6	61-005-0031	Hinge Assembly	1
7	61-004-0801	Hinge Pin	1
8	3272-48	Cotter Pin	2
9	3218-5	Jam Nut	2
10	61-004-0791	Reverse Air Deflector	1
11	01-261-0340	Spring	1

Ref. No.	Part No.	Description	No. Used
12	61-005-0991	Spring Bracket Assembly	1
13	323-7	Capscrew - Hex Hd.	2
14	3256-4	Flat Washer	16
15	3253-5	Lock Washer	9
16	3217-7	Hex Nut	9
17	323-6	Capscrew - Hex Hd.	7
18	3217-11	Hex Nut	2
19	3256-6	Flat Washer	4
20	3217-9	Hex Nut	4
21	75-5190	Decal - No Riders	1
22	01-506-0110	Decal - Warning	2

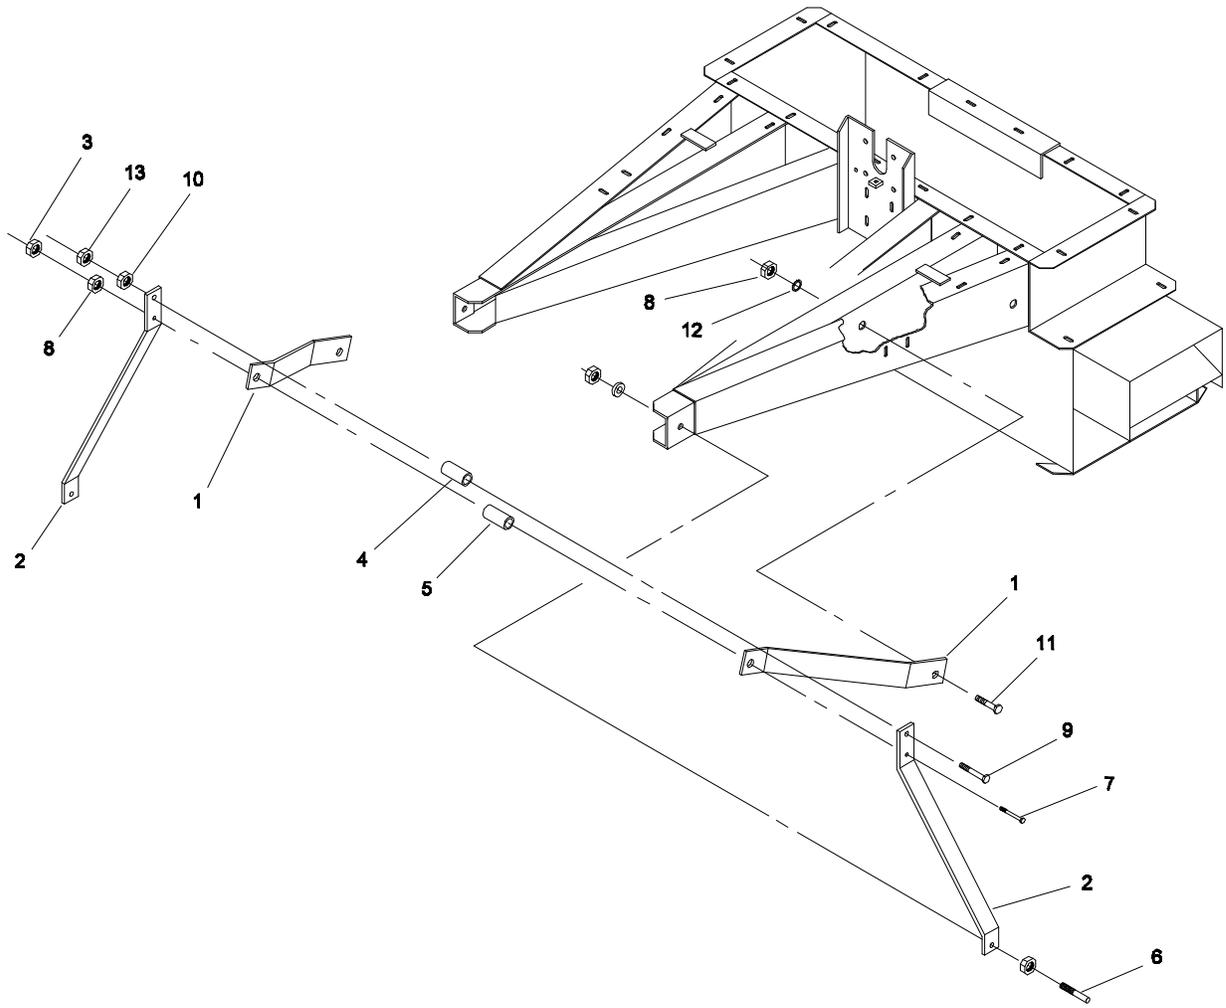


HITCH ASSEMBLY

61-004

Ref. No.	Part No.	Description	No. Used
1	61-004-0251	Hitch Brace	2
2	83-004-0291	Hitch Arm	2
3	3218-5	Jam Nut	1
4	83-004-0381	Upper Spacer	1
5	83-004-0391	Lower Spacer	1
6	01-252-0010	Hitch Pin	2
7	325-19	Capscrew - Hex Hd.	1

Ref. No.	Part No.	Description	No. Used
8	3217-9	Hex Nut	3
9	328-9	Capscrew - Hex Hd.	1
10	3217-12	Hex Nut	1
11	325-6	Capscrew - Hex Hd.	2
12	3253-7	Lock Washer	2
13	3218-7	Jam Nut	1

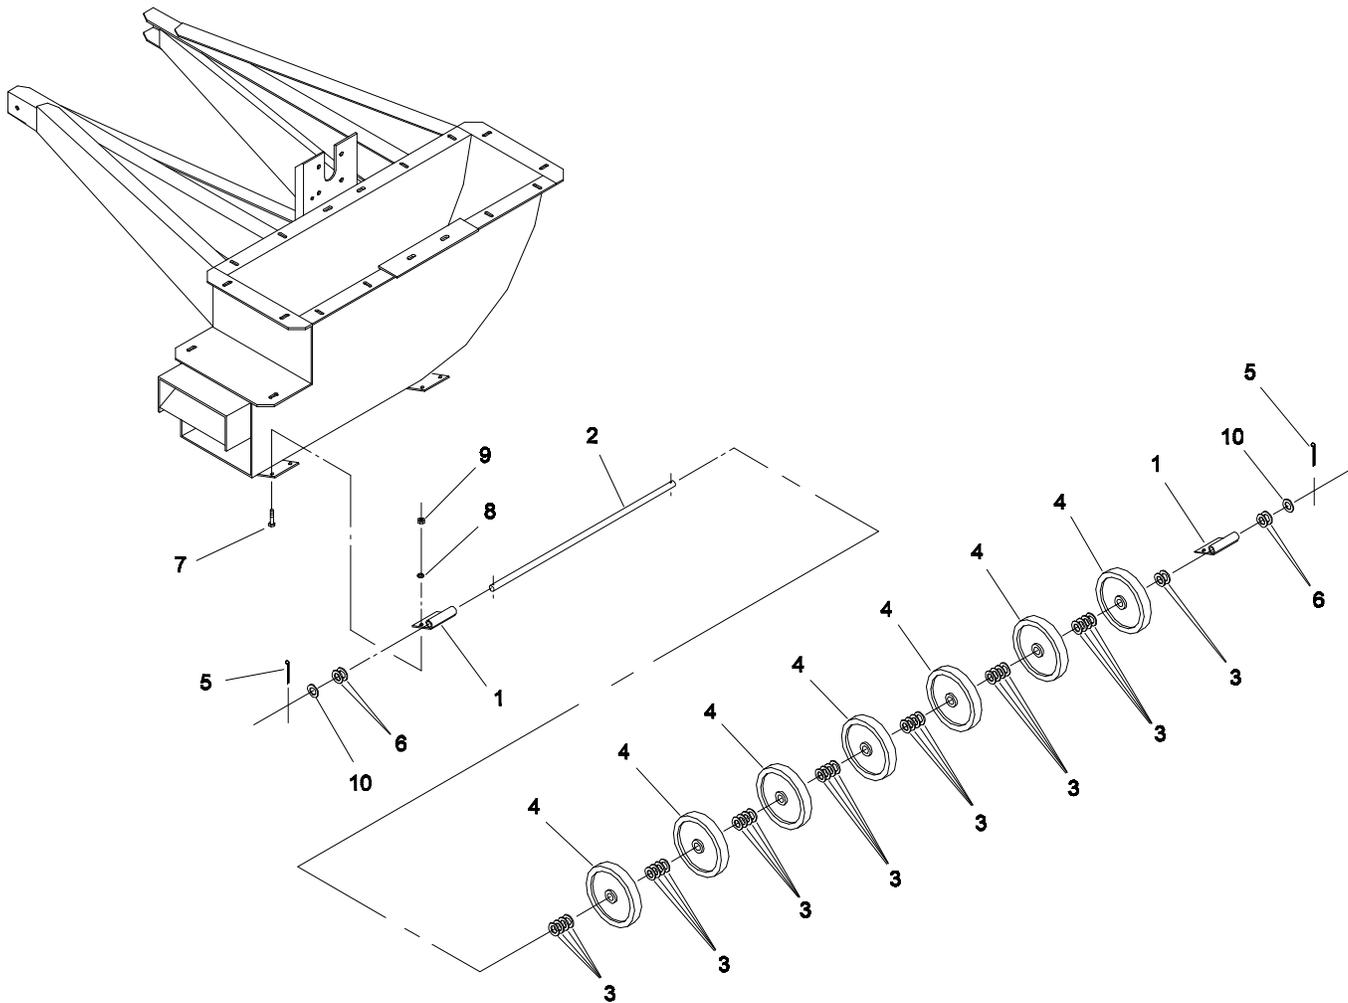


ROLLER ASSEMBLY

61-005

Ref. No.	Part No.	Description	No. Used
1	61-005-1111	Roller Bracket	2
2	61-004-1091	Roller Axle	1
3	01-168-1210	Machinery Bushing	30
4	01-269-0800	Wheel	7
*	01-269-1570	Plastic Bushing	7
5	3272-22	Cotter Pin	2

Ref. No.	Part No.	Description	No. Used
6	01-168-1214	Machinery Bushing	4(var)
7	323-7	Capscrew - Hex Hd.	4
8	3253-5	Lock Washer	4
9	3217-7	Hex Nut	4
10	01-168-1218	Machinery Bushing	2(var)

* Not Illustrated

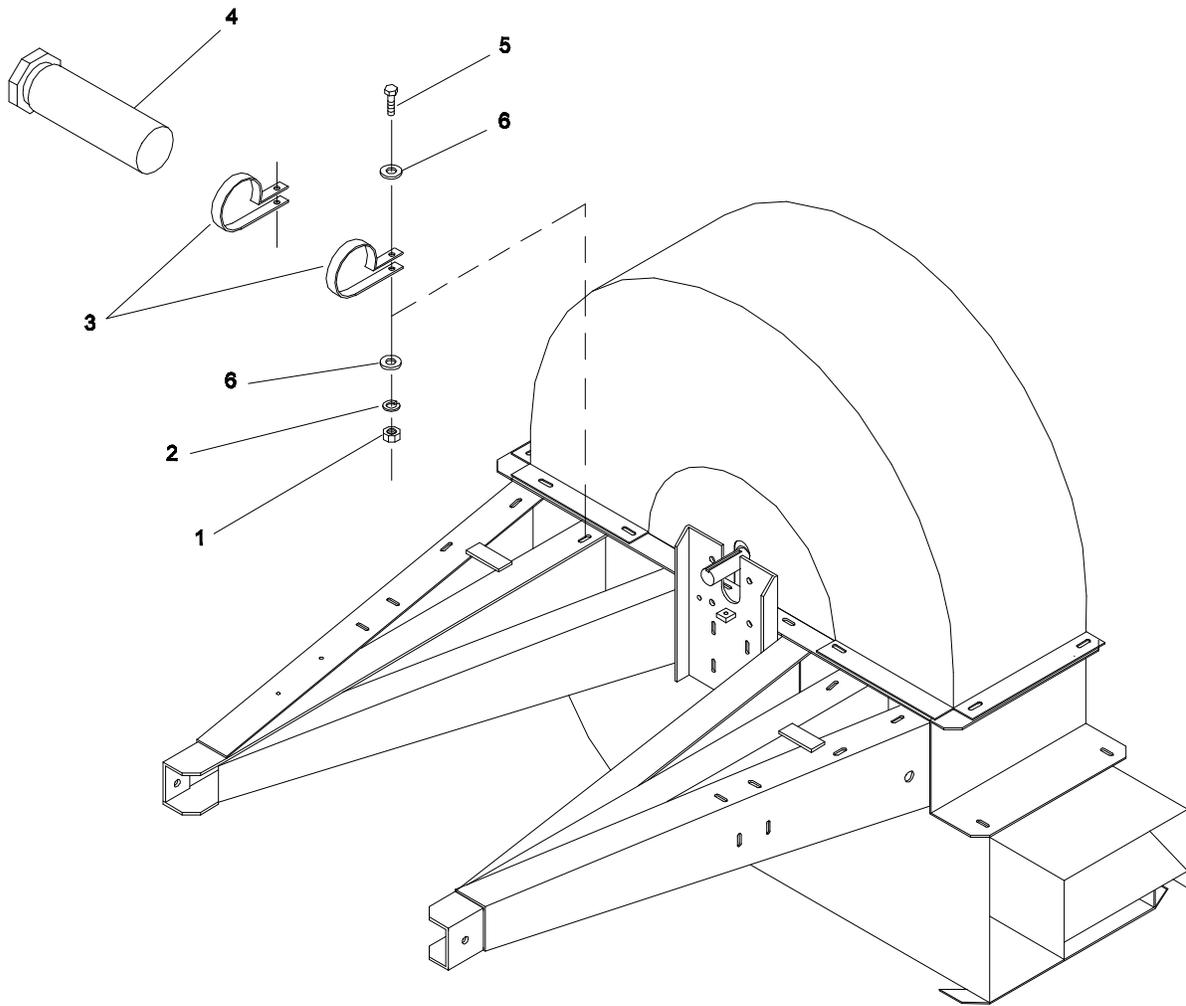


MANUAL TUBE

61-006

Ref. No.	Part No.	Description	No. Used
1	3217-5	Hex Nut	2
2	3253-3	Lock Washer	2
3	2412-133	R-Clamps	2
4	74-0720	Manual Tube	1

Ref. No.	Part No.	Description	No. Used
5	321-4	Capscrew - Hex Hd.	2
6	3256-2	Flat Washer	4

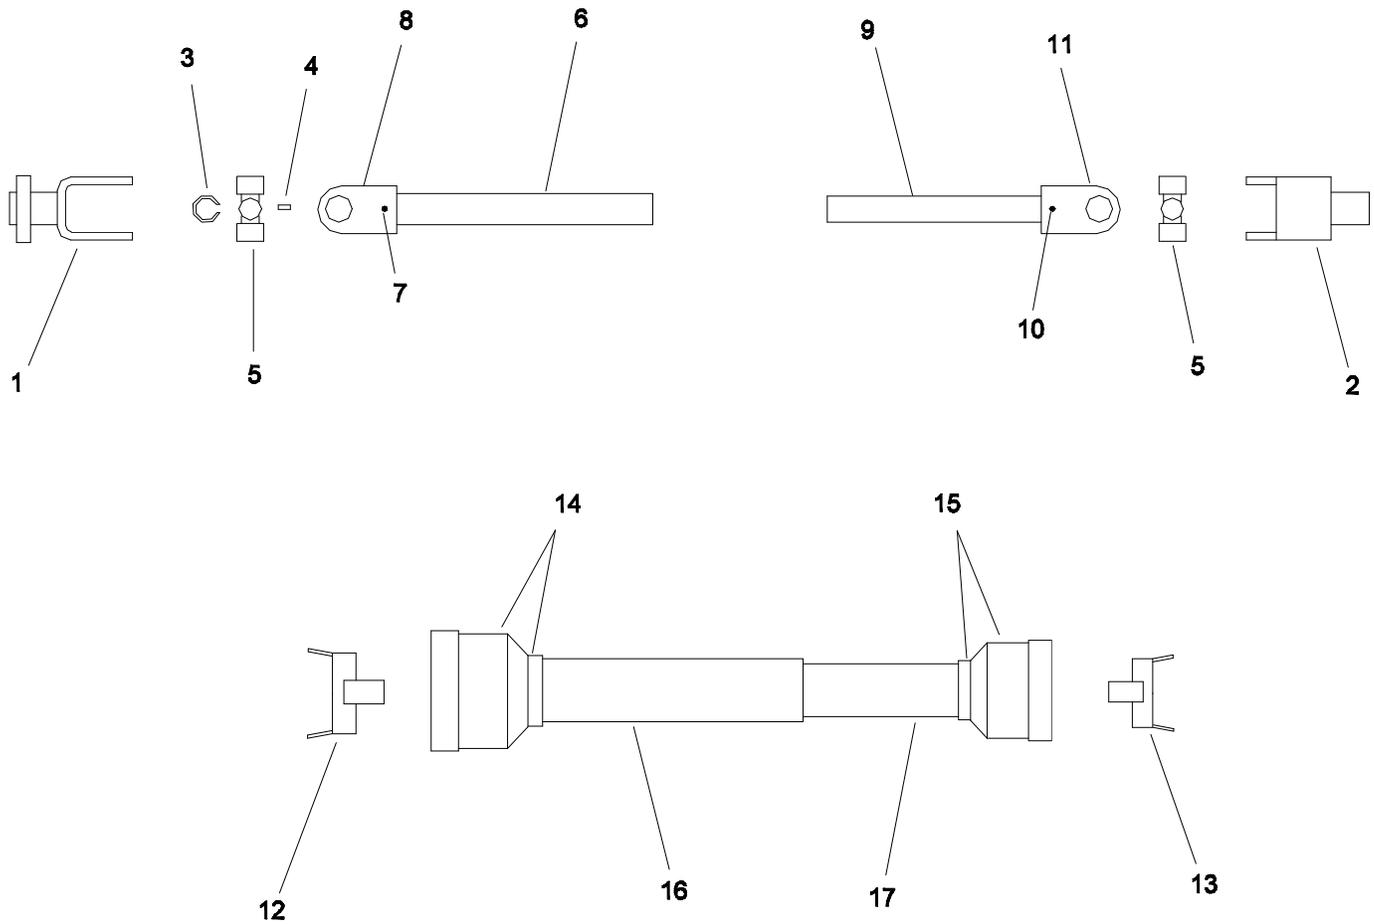

PTO ASSEMBLY - NO. 01-282-2220

PTO-2220

Ref. No.	Part No.	Description	No. Used
1	01-282-2240	Twist Yoke	1
2	01-282-2280	Ratchet Torque Limiter	1
3	01-282-2250	Snap Ring	8
4	01-282-0320	Grease Fitting	2
5	01-282-0300	Cross & Bearing	2
6	01-282-2070	Cm Cardan Tube (female)	1
7	01-282-2060	Flexible Pin	1
8	01-282-2050	Outer Tube Yoke	1
9	01-282-2080	Cm Cardan Tube (male)	1

Ref. No.	Part No.	Description	No. Used
10	01-282-2090	Flexible Pin	1
11	01-282-2100	Inner Tube Yoke	1
12	01-282-0370	Outer Bearing	1
13	01-282-0380	Inner Bearing	1
14	01-282-0390	Outer Cone	1
15	01-282-0400	Inner Cone	1
16	01-282-0520	Outer Safety Tube	1
17	01-282-0530	Inner Safety Tube	1

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-100-0180	Bearing	1	22	2	3217-12	Hex Nut	5	10	1
01-100-0200	Bearing	1	11	1	3217-5	Hex Nut	7	1	2
01-103-0130	Bearing Race	3	23	4	3217-6	Hex Nut	2	39	2
01-113-0070	Bearing	1	4	1	3217-7	Hex Nut	1	30	15
01-161-0030	Pop Rivet	2	36	3	3217-7	Hex Nut	3	21	8
01-163-0030	Set Screw	2	*	1	3217-7	Hex Nut	4	16	9
01-168-1210	Machinery Bushing	6	3	30	3217-7	Hex Nut	6	9	4
01-168-1214	Machinery Bushing	3	24	4	3217-9	Hex Nut	1	10	14
01-168-1214	Machinery Bushing	6	6	4	3217-9	Hex Nut	4	20	4
01-168-1218	Machinery Bushing	6	10	2	3217-9	Hex Nut	5	8	3
01-168-2010	Machinery Bushing	1	21	12	3218-5	Jam Nut	2	40	2
01-168-2014	Machinery Bushing	2	54	3	3218-5	Jam Nut	4	9	2
01-168-2018	Machinery Bushing	2	43	3	3218-5	Jam Nut	5	3	1
01-168-2410	Machinery Bushing	2	53	1	3218-7	Jam Nut	5	13	1
01-168-3010	Machinery Bushing	3	7	4	322-20	Capscrew - Hex Hd.	2	38	1
01-168-3014	Machinery Bushing	3	6	2	323-6	Capscrew - Hex Hd.	1	27	12
01-178-0642	Capscrew - Hex Hd.	1	33	2	323-6	Capscrew - Hex Hd.	4	17	7
01-182-0616	Capscrew - Hex Hd.	1	31	1	323-7	Capscrew - Hex Hd.	3	18	4
01-190-1210	Castle Nut	3	15	2	323-7	Capscrew - Hex Hd.	4	13	2
01-215-0050	Grease Zerk	2	37	1	323-7	Capscrew - Hex Hd.	6	7	4
01-215-0050	Grease Zerk	3	17	2	323-8	Capscrew - Hex Hd.	3	4	4
01-251-0110	Offset Link	1	*	1	325-12	Capscrew - Hex Hd.	1	14	2
01-252-0010	Hitch Pin	5	6	2	325-19	Capscrew - Hex Hd.	5	7	1
01-259-0010	Handle Grip	4	3	1	325-6	Capscrew - Hex Hd.	1	13	12
01-261-0340	Spring	4	11	1	325-6	Capscrew - Hex Hd.	5	11	2
01-262-0330	Sprocket	1	16	1	325-7	Capscrew - Hex Hd.	2	41	4
01-262-0340	Sprocket	1	18	1	3253-3	Lock Washer	7	2	2
01-269-0060	Spacer	3	12	4	3253-5	Lock Washer	1	29	14
01-269-0250	Tire	3	8	2	3253-5	Lock Washer	3	20	8
01-269-0260	Wheel	3	9	2	3253-5	Lock Washer	4	15	9
01-269-0800	Wheel	6	4	7	3253-5	Lock Washer	6	8	4
01-269-1570	Plastic Bushing	6	*	7	3253-7	Lock Washer	1	9	18
01-282-0300	Cross & Bearing	8	5	2	3253-7	Lock Washer	5	12	2
01-282-0320	Grease Fitting	8	4	2	3256-2	Flat Washer	7	6	4
01-282-0370	Outer Bearing	8	12	1	3256-26	"SAE" Flat Washer	2	55	8
01-282-0380	Inner Bearing	8	13	1	3256-4	Flat Washer	1	28	26
01-282-0390	Outer Cone	8	14	1	3256-4	Flat Washer	3	19	12
01-282-0400	Inner Cone	8	15	1	3256-4	Flat Washer	4	14	16
01-282-0520	Outer Safety Tube	8	16	1	3256-6	Flat Washer	1	8	14
01-282-0530	Inner Safety Tube	8	17	1	3256-6	Flat Washer	4	19	4
01-282-2050	Outer Tube Yoke	8	8	1	3272-22	Cotter Pin	3	16	2
01-282-2060	Flexible Pin	8	7	1	3272-22	Cotter Pin	6	5	2
01-282-2070	Cm Cardan Tube	8	6	1	3272-25	Cotter Pin	1	7	3
01-282-2080	Cm Cardan Tube	8	9	1	3272-48	Cotter Pin	4	8	2
01-282-2090	Flexible Pin	8	10	1	328-9	Capscrew - Hex Hd.	5	9	1
01-282-2100	Inner Tube Yoke	8	11	1	48-005-0591	Reel Lift Tube	4	5	1
01-282-2220	PTO	2	*	1	58-6520	Decal - Grease	2	56	2
01-282-2240	Twist Yoke	8	1	1	58-6520	Decal - Grease	3	26	5
01-282-2250	Snap Ring	8	3	8	61-004-0251	Hitch Brace	5	1	2
01-282-2280	Ratchet Torque Limiter	8	2	1	61-004-0361	Gasket	2	34	1
01-405-0320	Seal	3	11	4	61-004-0371	Fan Chain	1	20	1
01-506-0050	Decal - Danger	2	46	1	61-004-0381	Dust Shield	1	12	1
01-506-0110	Decal - Warning	2	50	1	61-004-0391	Drive Spacer	1	15	1
01-506-0110	Decal - Warning	4	22	2	61-004-0461	Key	1	19	1
01-506-0130	Decal - Danger	2	51	1	61-004-0471	Lower Drive Shaft	1	23	1
01-506-0160	Decal - Important	2	47	1	61-004-0491	Yoke Spacer	3	5	4
01-506-0830	Decal - Debris Blower 2613	2	49	2	61-004-0501	Backing Plate	3	3	2
2412-133	R-Clamps	7	3	2	61-004-0791	Reverse Air Deflector	4	10	1
254-78	Bearing	3	10	4	61-004-0801	Hinge Pin	4	7	1
321-4	Capscrew - Hex Hd.	7	5	2	61-004-0911	Gear Box Guard Belting	2	35	1
32121-10	Roll Pin	3	22	2	61-004-0951	Wheel Spacer	3	13	4
3217-11	Hex Nut	4	18	2	61-004-1031	Inside Drive Spacer	2	42	1

* Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
61-004-1041	Key	2	44	1	61-005-0121	Fan Housing	1	2	1
61-004-1061	Guard Spacer	2	45	2	61-005-0131	Drive Housing	1	25	1
61-004-1091	Roller Axle	6	2	1	61-005-0141	Chain Guard	1	32	1
61-004-1191	Back Plate	1	26	2	61-005-0151	Axle	3	14	2
61-004-1351	Bearing Shim	1	5	3	61-005-0991	Spring Bracket Assembly	4	12	1
61-004-1361	Bearing Shim	1	6	2	61-005-1111	Roller Bracket	6	1	2
61-004-1371	Outside Drive Spacer	1	17	1	61-005-1201	Bearing Cover	2	52	1
61-005-0031	Hinge Assembly	4	6	1	66-004-3211	Key	1	24	1
61-005-0041	Wheel Pivot Assembly	3	2	2	66-1210	Decal - Toro	2	48	2
61-005-0051	Wheel Yoke Assembly	3	1	2	74-0720	Manual Tube	7	4	1
61-005-0061	Fan Assembly	1	3	1	75-5190	Decal - No Riders	3	25	2
61-005-0073	Hitch & Lower Housing	1	1	1	75-5190	Decal - No Riders	4	21	1
61-005-0091	Lift Arm Assembly	4	4	1	83-004-0291	Hitch Arm	5	2	2
61-005-0101	Lift Handle Assembly	4	2	1	83-004-0381	Upper Spacer	5	4	1
61-005-0112	Air Reverse Housing	4	1	1	83-004-0391	Lower Spacer	5	5	1

* Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The Debris Blower 2613 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the hitch arm. In any correspondence concerning the Debris Blower 2613, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the unit.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Blower Assembly	1 - 2	Roller Assembly	6
Wheel Mount Assembly	3	Manual Tube	7
Deflector Kit - Model No. 44521	4	PTO Assembly No. 01-282-2220	8
Hitch Assembly	5	Part Number Index	9 - 10

