




MODEL NO. 44522 - 20101 & UP

PARTS CATALOG

DEBRIS BLOWER 2673

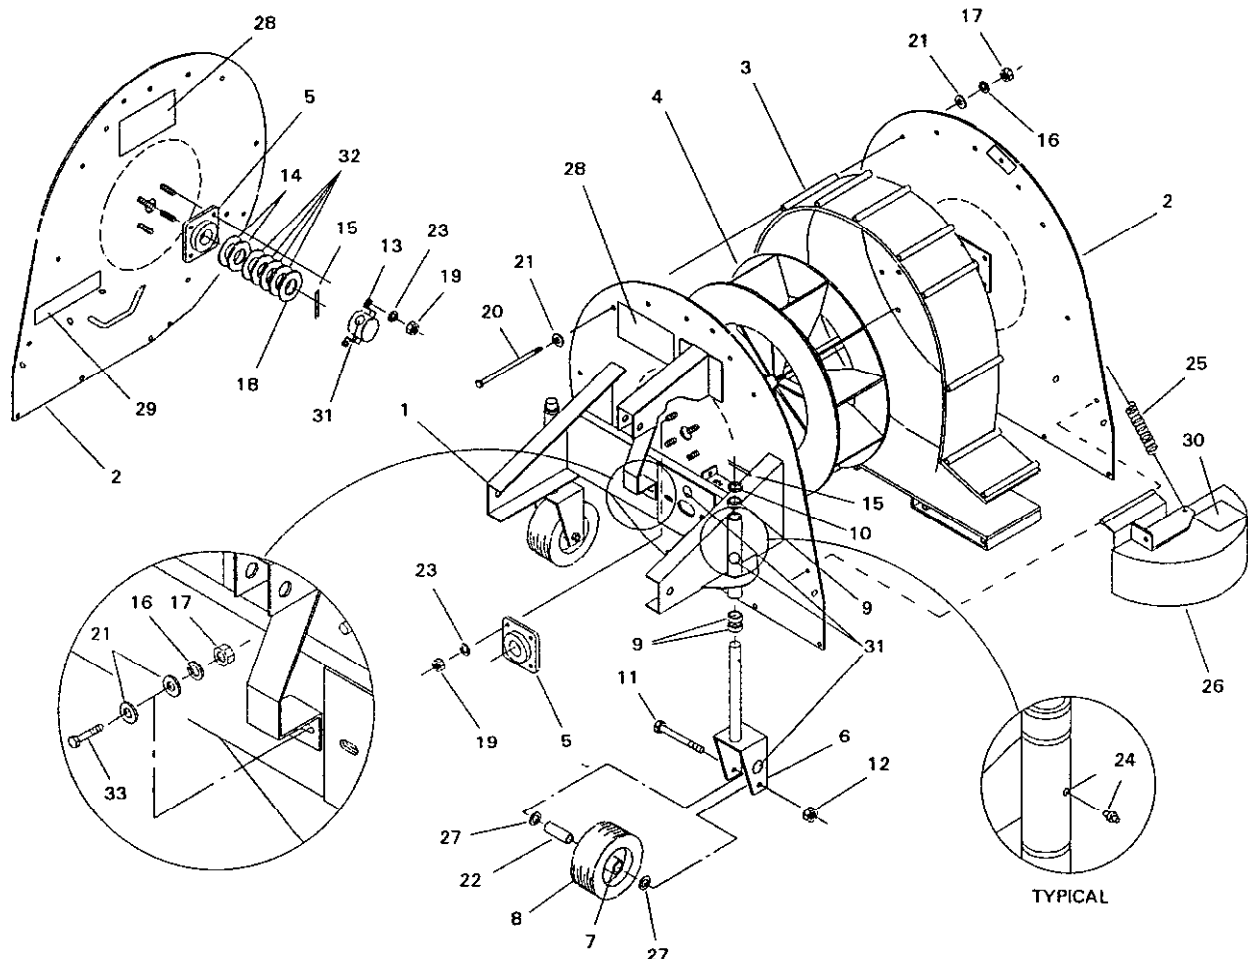

BLOWER ASSEMBLY

2673-001


Ref. No.	Part No.	Description	No. Used
1	67-005-1873	Front Plate	1
2	67-005-1922	Back Plate	1
3	67-005-0102	Ring Weldment	1
4	67-005-0062	Fan Blower	1
5	01-100-0180	Bearing	2
6	67-005-1912	Wheel Yoke	2
7	01-269-0730	Wheel	2
*	01-111-0050	Bearing	4
8	01-269-0710	Tire	2
*	01-269-0720	Tube Only	2
9	67-004-1831	Wheel Pivot Spacer	6
10	01-168-1614	Machinery Bushing	2(var)
11	01-158-1260	Capscrew - Hex Hd.	2
12	01-189-0813	Lock Nut	2
13	67-005-0181	Fan Shaft Guard	1
14	01-168-2014	Machinery Bushing	2(var)

Ref. No.	Part No.	Description	No. Used
15	3272-25	Cotter Pin	3
16	3253-5	Lock Washer	17
17	3217-7	Hex Nut	17
18	01-168-2018	Machinery Bushing	1(var)
19	3217-9	Hex Nut	6
20	323-24	Capscrew - Hex Hd.	16
21	3256-4	Flat Washer	34
22	01-269-1200	Axle Bushing	2
23	3253-7	Lock Washer	6
24	01-215-0050	Grease Fitting	2
25	01-261-0340	Spring	1
26	67-005-1882	Deflector, Full	1
27	01-168-1210	Machinery Bushing	4
28	01-506-0500	Decal - Toro	2
29	01-506-0850	Decal - Debris Blower 2673	1
30	01-506-0110	Decal - Warning	1

*Not Illustrated

© The TORO Company - 1995

All Rights Reserved

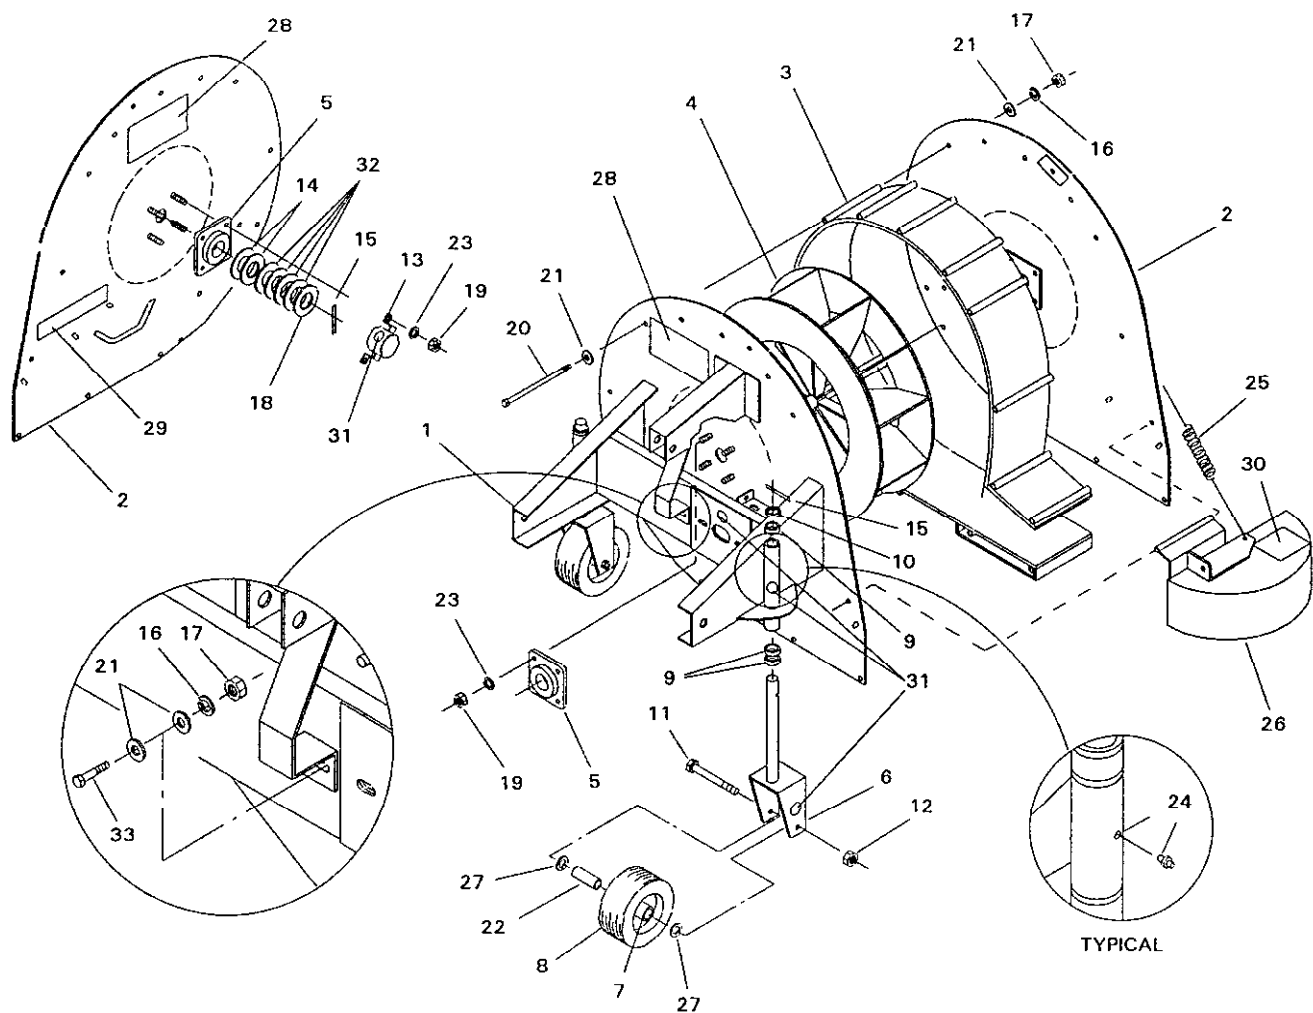


BLOWER ASSEMBLY (Continued)

2673-001

Ref. No.	Part No.	Description	No. Used
31	01-506-0550	Decal - Grease	6
32	01-168-2010	Machinery Bushing	4

Ref. No.	Part No.	Description	No. Used
33	323-7	Capscrew - Hex Hd.	1

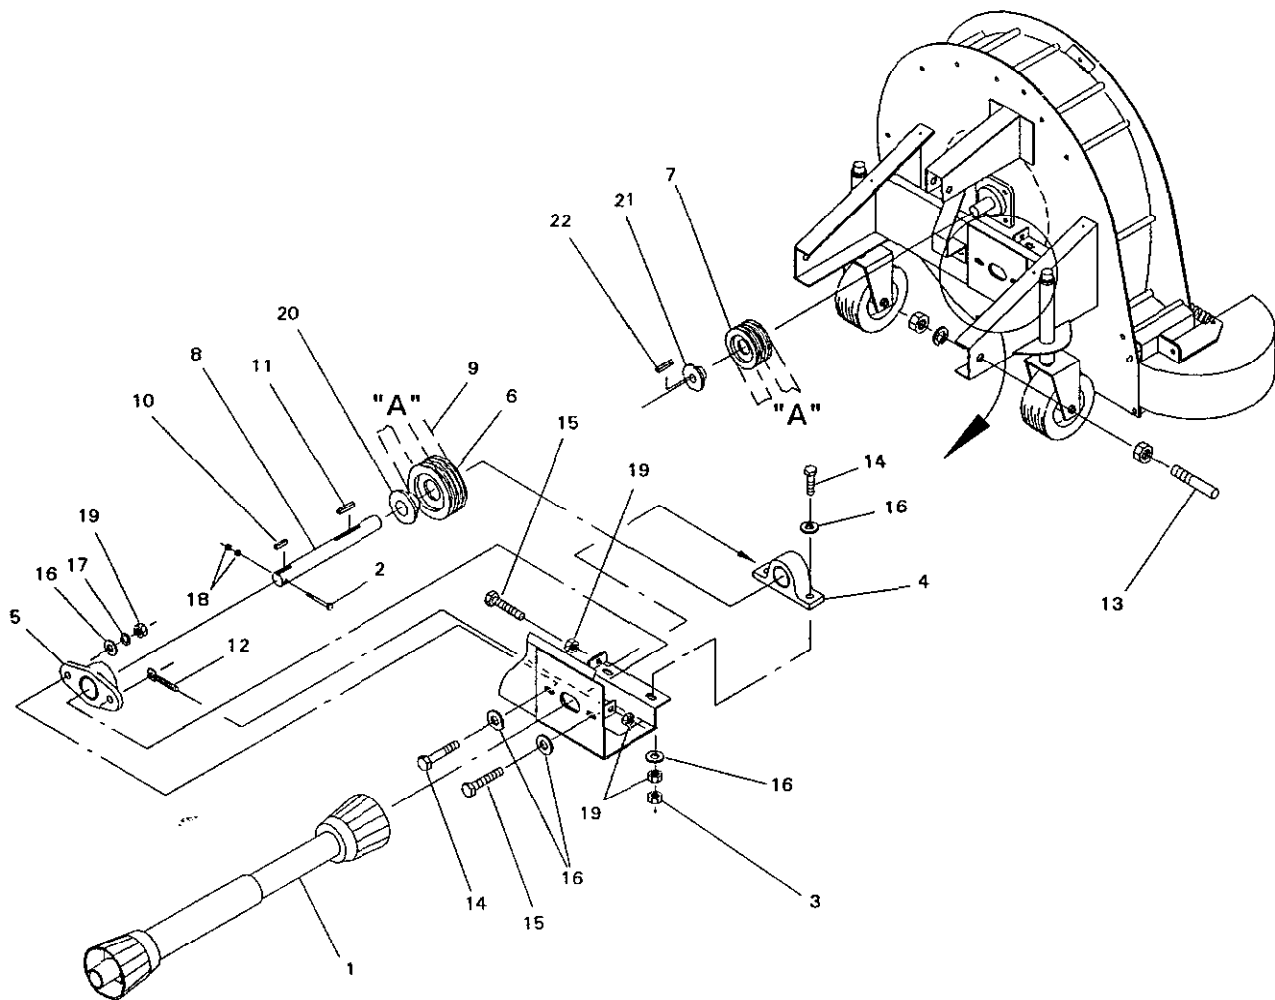


DRIVE SYSTEM

2673-002

Ref. No.	Part No.	Description	No. Used
1	01-282-0640	PTO Assembly	1
2	322-20	Capscrew - Hex Hd.	1
3	3218-5	Jam Nut	2
4	01-113-0020	Bearing	1
5	01-100-0170	Bearing	1
6	01-260-1070	Sheave	1
7	01-260-1050	Sheave	1
8	67-004-1931	PTO Shaft	1
9	01-264-0030	Belt	4
10	61-004-0461	Key	1
11	66-004-3211	Key	1

Ref. No.	Part No.	Description	No. Used
12	67-005-1891	Front Bearing Adjustment	1
13	01-252-0010	Hitch Pin w/nuts & washer	2
14	325-8	Capscrew - Hex Hd.	3
15	01-182-0816	Capscrew - Hex Hd.	2
16	3256-6	Flat Washer	14
17	3253-7	Lock Washer	2
18	3217-6	Hex Nut	2
19	3217-9	Hex Nut	8
20	01-260-0290	Bushing	1
21	01-260-0240	Bushing	1
22	82-004-1171	Key	1

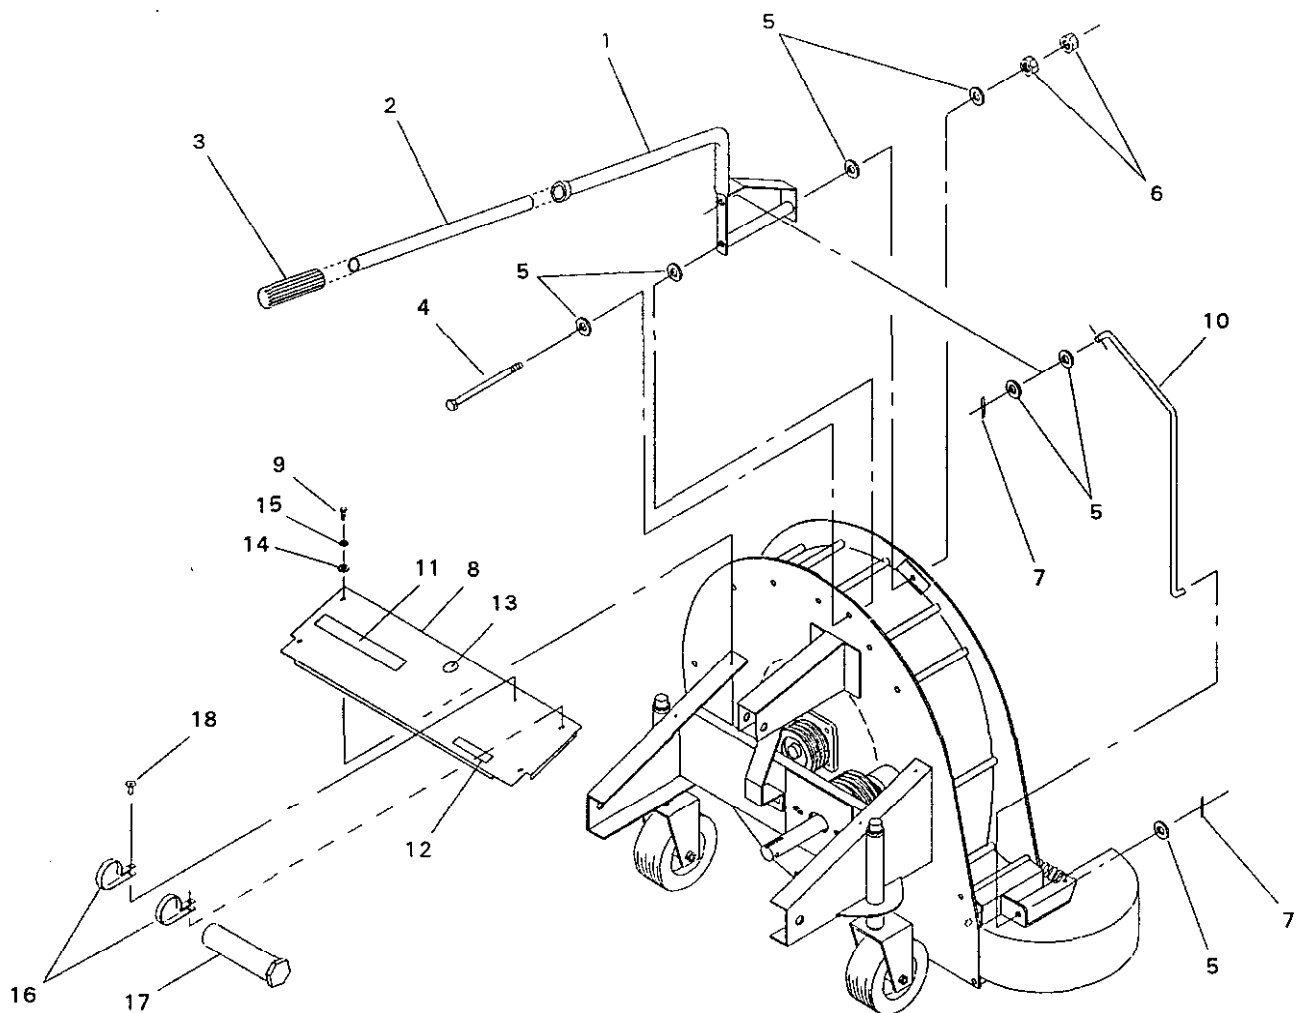

BELT GUARD & HANDLE ASSEMBLY

2673-003

Ref. No.	Part No.	Description	No. Used
1	67-005-1901	Deflector Handle	1
2	67-004-1851	Deflector Handle Rod	1
3	01-259-0020	Handle Grip	1
4	01-178-0870	Capscrew - Hex Hd.	1
5	3256-6	Flat Washer	7
6	3217-9	Hex Nut	2
7	3272-11	Cotter Pin	2
8	67-004-1691	Belt Guard	1
9	01-182-0406	Capscrew - Hex Hd.	4

Ref. No.	Part No.	Description	No. Used
10	67-004-0451	Deflector Linkage Rod	1
11	01-506-0850	Decal - Debris Blower 2673	1
12	01-506-0130	Decal - Danger	1
13	01-506-0550	Decal - Grease	1
14	3256-2	Flat Washer	4
15	3253-3	Lock Washer	4
16	2412-133	R-Clamp	2
17	74-0720	Manual Tube	1
18	01-161-0030	Pop Rivet	1

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-100-0170	Bearing	3	5	1	3217-7	Hex Nut	1	17	17
01-100-0180	Bearing	1	5	2	3217-9	Hex Nut	1	19	6
01-111-0050	Bearing	1	*	4	3217-9	Hex Nut	3	19	8
01-113-0020	Bearing	3	4	1	3217-9	Hex Nut	4	6	2
01-158-1260	Capscrew - Hex Hd.	1	11	2	3218-5	Jam Nut	3	3	2
01-161-0030	Pop Rivet	4	18	1	322-20	Capscrew - Hex Hd.	3	2	1
01-168-1210	Machinery Bushing	2	27	4	323-24	Capscrew - Hex Hd.	1	20	16
01-168-1614	Machinery Bushing	1	10	2	323-7	Capscrew - Hex Hd.	2	33	1
01-168-2010	Machinery Bushing	2	32	4	325-8	Capscrew - Hex Hd.	3	14	3
01-168-2014	Machinery Bushing	1	14	2	3253-3	Lock Washer	4	15	4
01-168-2018	Machinery Bushing	1	18	1	3253-5	Lock Washer	1	16	17
01-178-0870	Capscrew - Hex Hd.	4	4	1	3253-7	Lock Washer	1	23	6
01-182-0406	Capscrew - Hex Hd.	4	9	4	3253-7	Lock Washer	3	17	2
01-182-0816	Capscrew - Hex Hd.	3	15	2	3256-2	Flat Washer	4	14	4
01-189-0813	Lock Nut	1	12	2	3256-4	Flat Washer	1	21	34
01-215-0050	Grease Fitting	1	24	2	3256-6	Flat Washer	3	16	14
01-252-0010	Hitch Pin	3	13	2	3256-6	Flat Washer	4	5	7
01-259-0020	Handle Grip	4	3	1	3272-11	Cotter Pin	4	7	2
01-260-0240	Bushing	3	21	1	3272-25	Cotter Pin	1	15	3
01-260-0290	Bushing	3	20	1	61-004-0461	Key	3	10	1
01-260-1050	Sheave	3	7	1	66-004-3211	Key	3	11	1
01-260-1070	Sheave	3	6	1	67-004-0451	Deflector Linkage Rod	4	10	1
01-261-0340	Spring	1	25	1	67-004-1691	Belt Guard	4	8	1
01-264-0030	Belt	3	9	4	67-004-1831	Wheel Pivot Spacer	1	9	6
01-269-0710	Tire	1	8	2	67-004-1851	Deflector Handle Rod	4	2	1
01-269-0720	Tube	1	*	2	67-004-1931	PTO Shaft	3	8	1
01-269-0730	Wheel	1	7	2	67-005-0062	Fan Blower	1	4	1
01-269-1200	Axle Bushing	1	22	2	67-005-0102	Ring Weldment	1	3	1
01-282-0640	PTO Assembly	3	1	1	67-005-0181	Fan Shaft Guard	1	13	1
01-506-0110	Decal - Warning	2	30	1	67-005-1873	Front Plate	1	1	1
01-506-0130	Decal - Danger	4	12	1	67-005-1882	Deflector	1	26	1
01-506-0500	Decal - Toro	2	28	2	67-005-1891	Front Bearing Adjustment	3	12	1
01-506-0550	Decal - Grease	2	31	6	67-005-1901	Deflector Handle	4	1	1
01-506-0550	Decal - Grease	4	13	1	67-005-1912	Wheel Yoke	1	6	2
01-506-0850	Decal - Debris Blower 2673	2	29	1	67-005-1922	Back Plate	1	2	1
01-506-0850	Decal - Debris Blower 2673	4	11	1	74-0720	Manual Tube	4	17	1
2412-133	R-Clamp	4	16	2	82-004-1171	Key	3	22	1
3217-6	Hex Nut	3	18	2					

*Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The Debris Blower 2673 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the blower housing. In any correspondence concerning the Debris Blower 2673, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the unit.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Blower Assembly	1 - 2	Belt Guard & Handle Assembly	4
Drive Assembly	3	Part Number Index	5

NOTES



MAINTENANCE RECORD

[illegible]