




MODEL NO. 44522 - 50121 & UP

PARTS CATALOG

DEBRIS BLOWER 2673

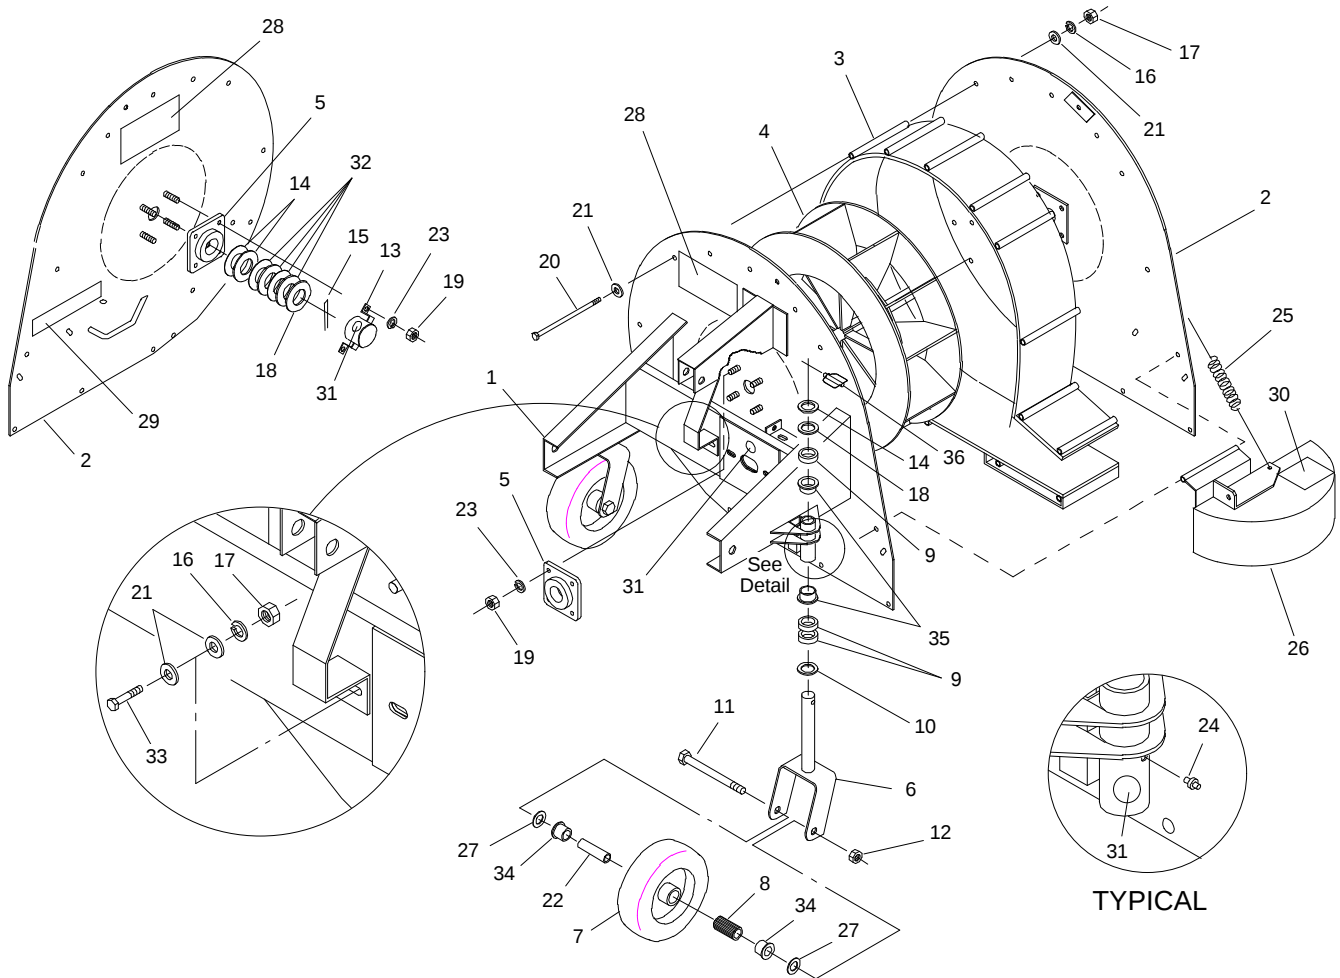


BLOWER ASSEMBLY

2673-001

Ref. No.	Part No.	Description	No. Used
1	67-005-2804	Front Plate	1
2	67-005-1922	Back Plate	1
3	67-005-0102	Ring Weldment	1
4	67-005-0062	Fan Blower	1
5	01-100-0180	Bearing	2
6	26-1530	Fork - Front Castor	2
7	92-1655	Wheel - Castor	2
8	83-4740	Bearing - Roller	2
9	63-0070	Spacer	6
10	3-6781	Thrust Washer	2
11	325-22	Cap screw - Hex Hd.	2
12	32128-23	Flange Lock Nut	2
13	67-005-0181	Fan Shaft Guard	1
14	01-168-2014	Machinery Bushing	4(var)
15	3272-25	Cotter Pin	1

Ref. No.	Part No.	Description	No. Used
16	3253-5	Lock Washer	17
17	3217-7	Hex Nut	17
18	01-168-2018	Machinery Bushing	3(var)
19	3217-9	Hex Nut	6
20	323-24	Cap screw - Hex Hd.	16
21	3256-4	Flat Washer	34
22	62-4340	Spanner	2
23	3253-7	Lock Washer	8
24	01-215-0050	Grease Fitting	2
25	01-261-0340	Spring	1
26	67-005-1882	Deflector, Full	1
27	3256-6	Flat Washer	4
28	01-506-0500	Decal - Toro	2
29	01-506-0850	Decal - Debris Blower 2673	1
30	01-506-0110	Decal - Warning	1

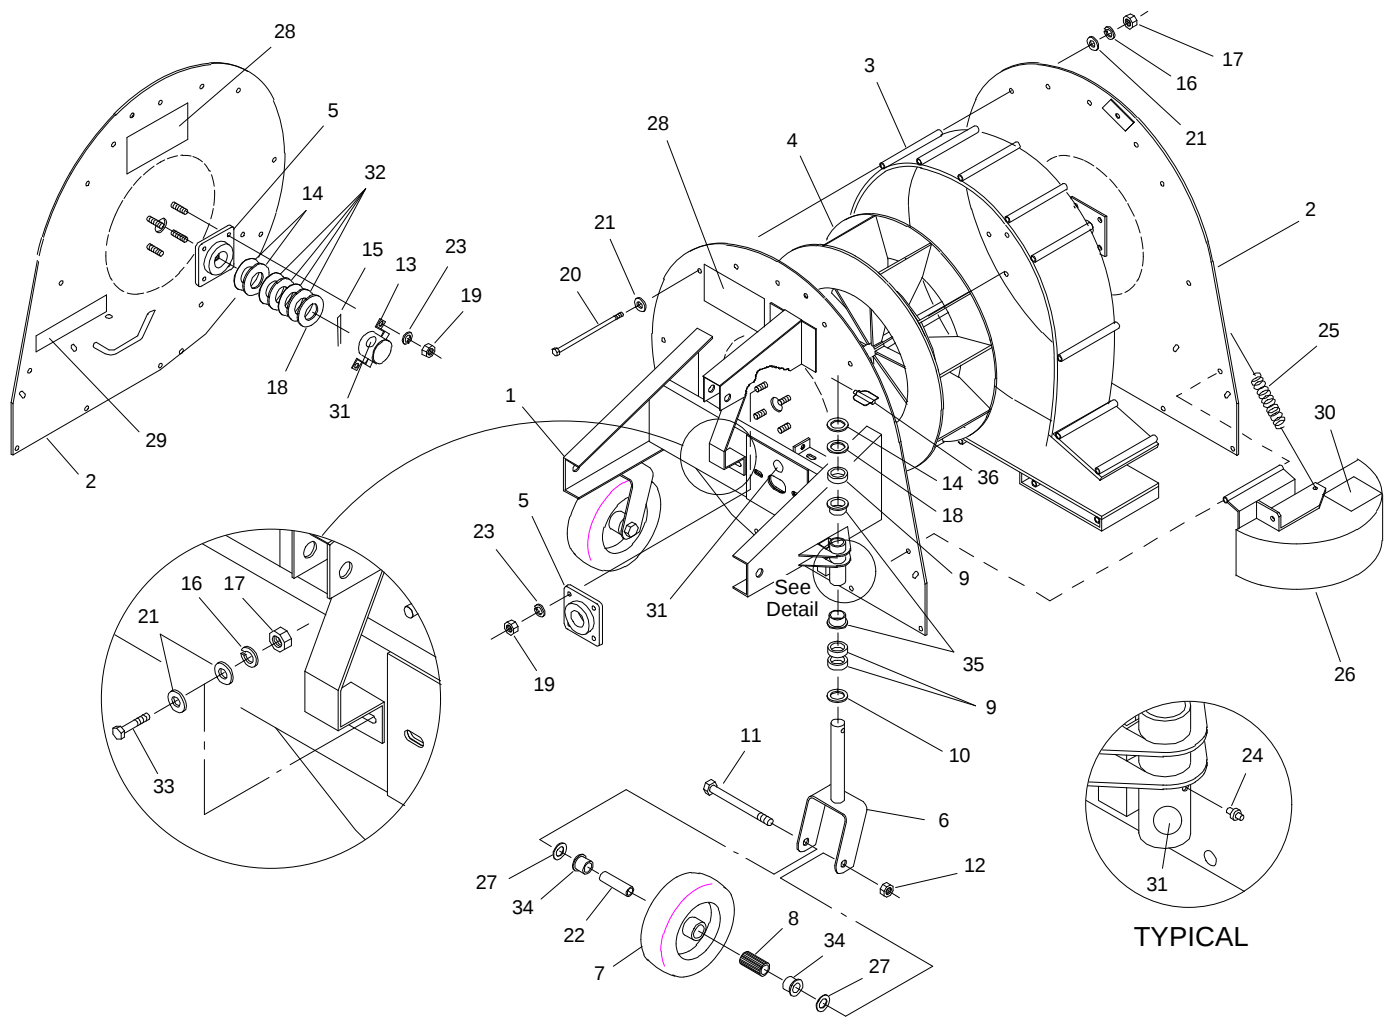


BLOWER ASSEMBLY

2673-001

Ref. No.	Part No.	Description	No. Used
31	01-506-0550	Decal - Grease	4
32	01-168-2010	Machinery Bushing	4
33	323-7	Capscrew - Hex Hd.	1

Ref. No.	Part No.	Description	No. Used
34	62-5580	Bushing	4
35	94-1291	Bushing - Special	4
36	3290-384	Pin - Lynch	2

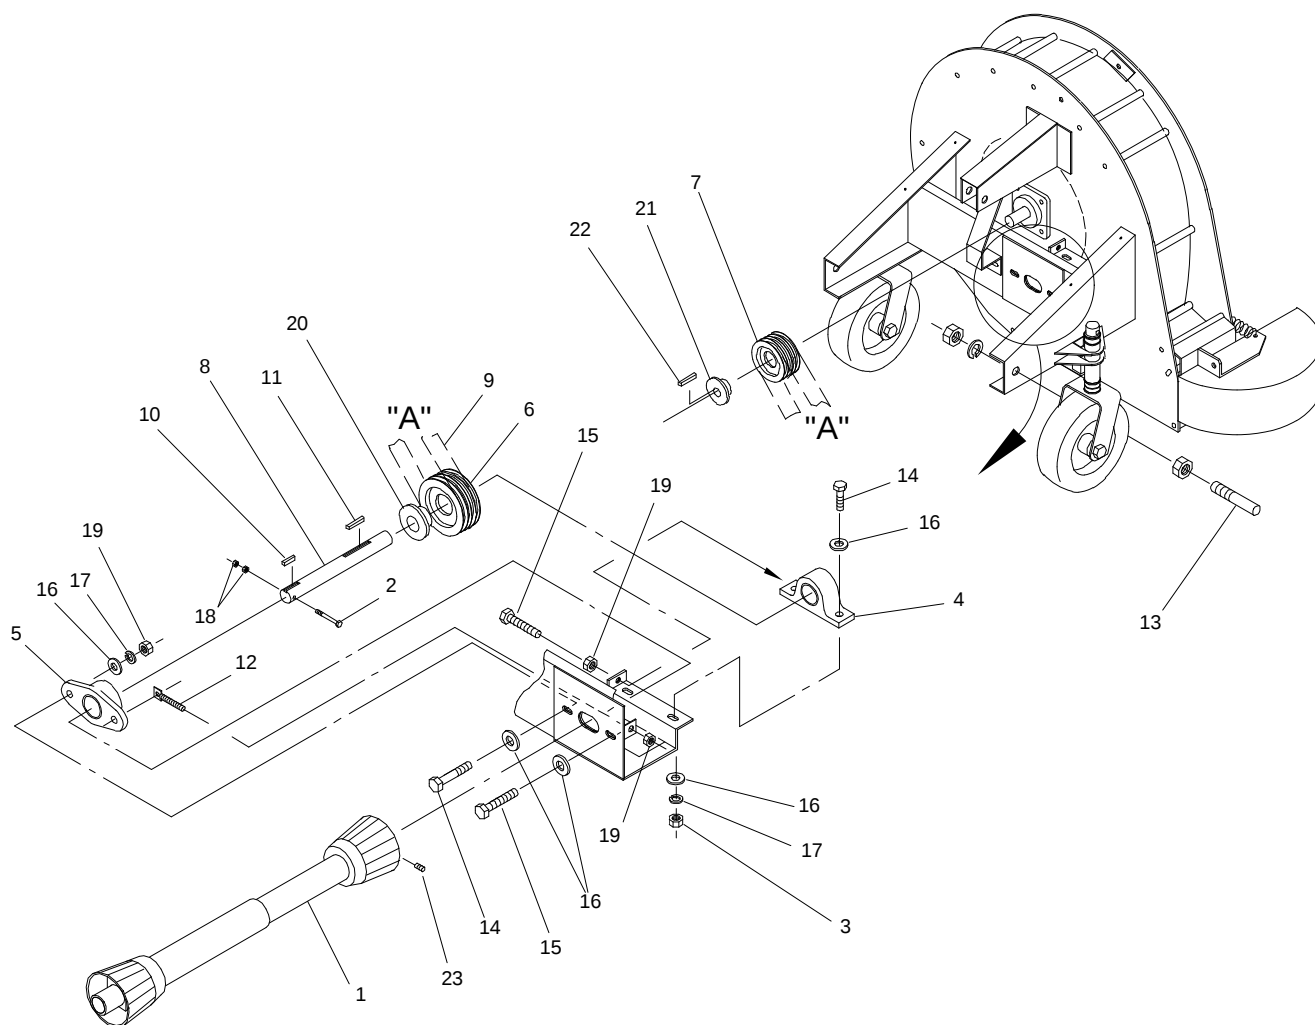


DRIVE SYSTEM

2673-002

Ref. No.	Part No.	Description	No. Used
1	01-282-0640	PTO Assembly	1
2	322-20	Capscrew - Hex Hd.	1
3	3218-5	Jam Nut	2
4	01-113-0020	Bearing	1
5	01-100-0170	Bearing	1
6	01-260-1070	Sheave	1
7	01-260-1050	Sheave	1
8	67-004-1931	PTO Shaft	1
9	01-264-0030	Belt	4
10	61-004-0461	Key	1
11	66-004-3211	Key	1
12	67-005-1891	Front Bearing Adjustment	1

Ref. No.	Part No.	Description	No. Used
13	01-252-0010	Hitch Pin w/nuts & washer	2
14	325-8	Capscrew - Hex Hd.	3
15	01-182-0816	Capscrew - Hex Hd.	2
16	3256-6	Flat Washer	14
17	3253-7	Lock Washer	4
18	3217-6	Hex Nut	2
19	3217-9	Hex Nut	4
20	01-260-0290	Bushing	1
21	01-260-0240	Bushing	1
22	82-004-1171	Key	1
23	01-163-0030	Set Screw	1

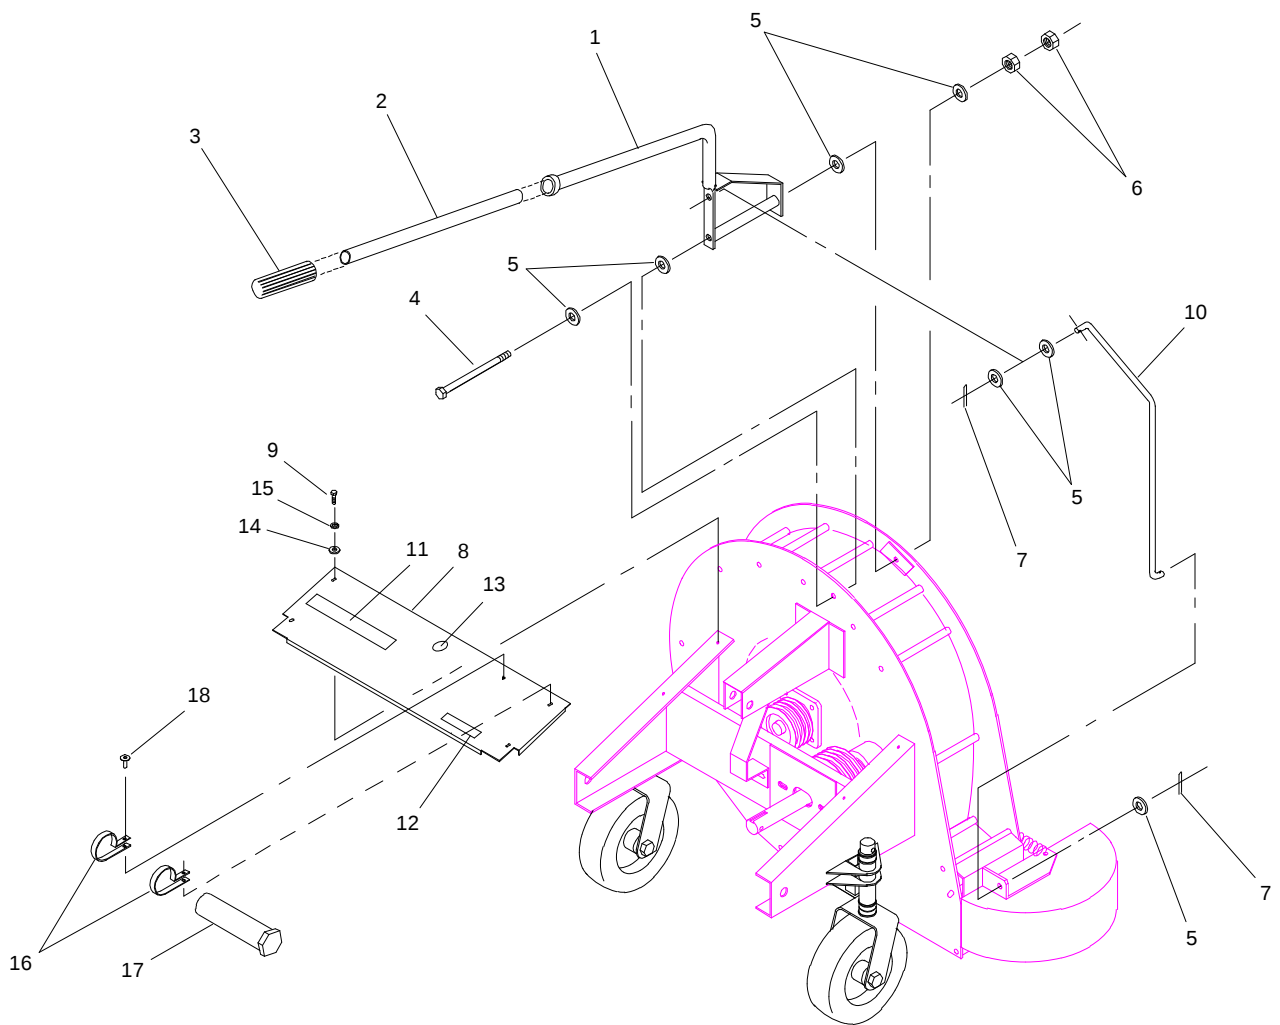

BELT GUARD & HANDLE ASSEMBLY

2673-003

Ref. No.	Part No.	Description	No. Used
1	67-005-1901	Deflector Handle	1
2	67-004-1851	Deflector Handle Rod	1
3	01-259-0020	Handle Grip	1
4	01-178-0872	Capscrew - Hex Hd.	1
5	3256-6	Flat Washer	7
6	3217-9	Hex Nut	2
7	3272-11	Cotter Pin	2
8	67-004-1691	Belt Guard	1
9	01-182-0406	Capscrew -Hex Hd.	4

Ref. No.	Part No.	Description	No. Used
10	67-004-0451	Deflector Linkage Rod	1
11	01-506-0850	Decal - Debris Blower 2673	1
12	01-506-0130	Decal - Danger	1
13	01-506-0550	Decal - Grease	1
14	3256-2	Flat Washer	4
15	3253-3	Lock Washer	4
16	2412-133	R-Clamp	2
17	74-0720	Manual Tube	1
18	01-161-0030	Pop Rivet	1

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-100-0170	Bearing	3	5	1	323-24	Capscrew - Hex Hd.	1	20	16
01-100-0180	Bearing	1	5	2	323-7	Capscrew - Hex Hd.	2	33	1
01-113-0020	Bearing	3	4	1	325-22	Capscrew - Hex Hd.	1	11	2
01-161-0030	Pop Rivet	4	18	1	325-8	Capscrew - Hex Hd.	3	14	3
01-163-0030	Set Screw	3	23	1	3253-3	Lock Washer	4	15	4
01-168-2010	Machinery Bushing	2	32	4	3253-5	Lock Washer	1	16	17
01-168-2014	Machinery Bushing	1	14	4	3253-7	Lock Washer	1	23	8
01-168-2018	Machinery Bushing	1	18	3	3253-7	Lock Washer	3	17	4
01-178-0872	Capscrew - Hex Hd.	4	4	1	3256-2	Flat Washer	4	14	4
01-182-0406	Capscrew - Hex Hd.	4	9	4	3256-4	Flat Washer	1	21	34
01-182-0816	Capscrew - Hex Hd.	3	15	2	3256-6	Flat Washer	2	27	4
01-215-0050	Grease Fitting	1	24	2	3256-6	Flat Washer	3	16	14
01-252-0010	Hitch Pin	3	13	2	3256-6	Flat Washer	4	5	7
01-259-0020	Handle Grip	4	3	1	3272-11	Cotter Pin	4	7	2
01-260-0240	Bushing	3	21	1	3272-25	Cotter Pin	1	15	1
01-260-0290	Bushing	3	20	1	3290-384	Pin - Lynch	2	36	2
01-260-1050	Sheave	3	7	1	61-004-0461	Key	3	10	1
01-260-1070	Sheave	3	6	1	62-4340	Spanner	1	22	2
01-261-0340	Spring	1	25	1	62-5580	Bushing	2	34	4
01-264-0030	Belt	3	9	4	63-0070	Spacer	1	9	6
01-282-0640	PTO Assembly	3	1	1	66-004-3211	Key	3	11	1
01-506-0110	Decal - Warning	2	30	1	67-004-0451	Deflector Linkage Rod	4	10	1
01-506-0130	Decal - Danger	4	12	1	67-004-1691	Belt Guard	4	8	1
01-506-0500	Decal - Toro	2	28	2	67-004-1851	Deflector Handle Rod	4	2	1
01-506-0550	Decal - Grease	2	31	4	67-004-1931	PTO Shaft	3	8	1
01-506-0550	Decal - Grease	4	13	1	67-005-0062	Fan Blower	1	4	1
01-506-0850	Decal - Debris Blower 2673	2	29	1	67-005-0102	Ring Weldment	1	3	1
01-506-0850	Decal - Debris Blower 2673	4	11	1	67-005-0181	Fan Shaft Guard	1	13	1
2412-133	R-Clamp	4	16	2	67-005-1882	Deflector	1	26	1
26-1530	Fork - Front Castor	1	6	2	67-005-1891	Front Bearing Adjustment	3	12	1
3-6781	Thrust Washer	1	10	2	67-005-1901	Deflector Handle	4	1	1
32128-23	Flange Lock Nut	1	12	2	67-005-1922	Back Plate	1	2	1
3217-6	Hex Nut	3	18	2	67-005-2804	Front Plate	1	1	1
3217-7	Hex Nut	1	17	17	74-0720	Manual Tube	4	17	1
3217-9	Hex Nut	1	19	6	82-004-1171	Key	3	22	1
3217-9	Hex Nut	3	19	4	83-4740	Bearing - Roller	1	8	2
3217-9	Hex Nut	4	6	2	92-1655	Wheel - Castor	1	7	2
3218-5	Jam Nut	3	3	2	94-1291	Bushing - Special	2	35	4
322-20	Capscrew - Hex Hd.	3	2	1					

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The Debris Blower 2673 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the blower housing. In any correspondence concerning the Debris Blower 2673, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the unit.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Blower Assembly	1 - 2	Belt Guard & Handle Assembly	4
Drive Assembly	3	Part Number Index	5

NOTES

MAINTENANCE RECORD

[illegible]