




MODEL NO. 44510 - 20101 & UP
MODEL NO. 44515 - 20101 & UP

PARTS CATALOG

DEBRIS LOADER 3100

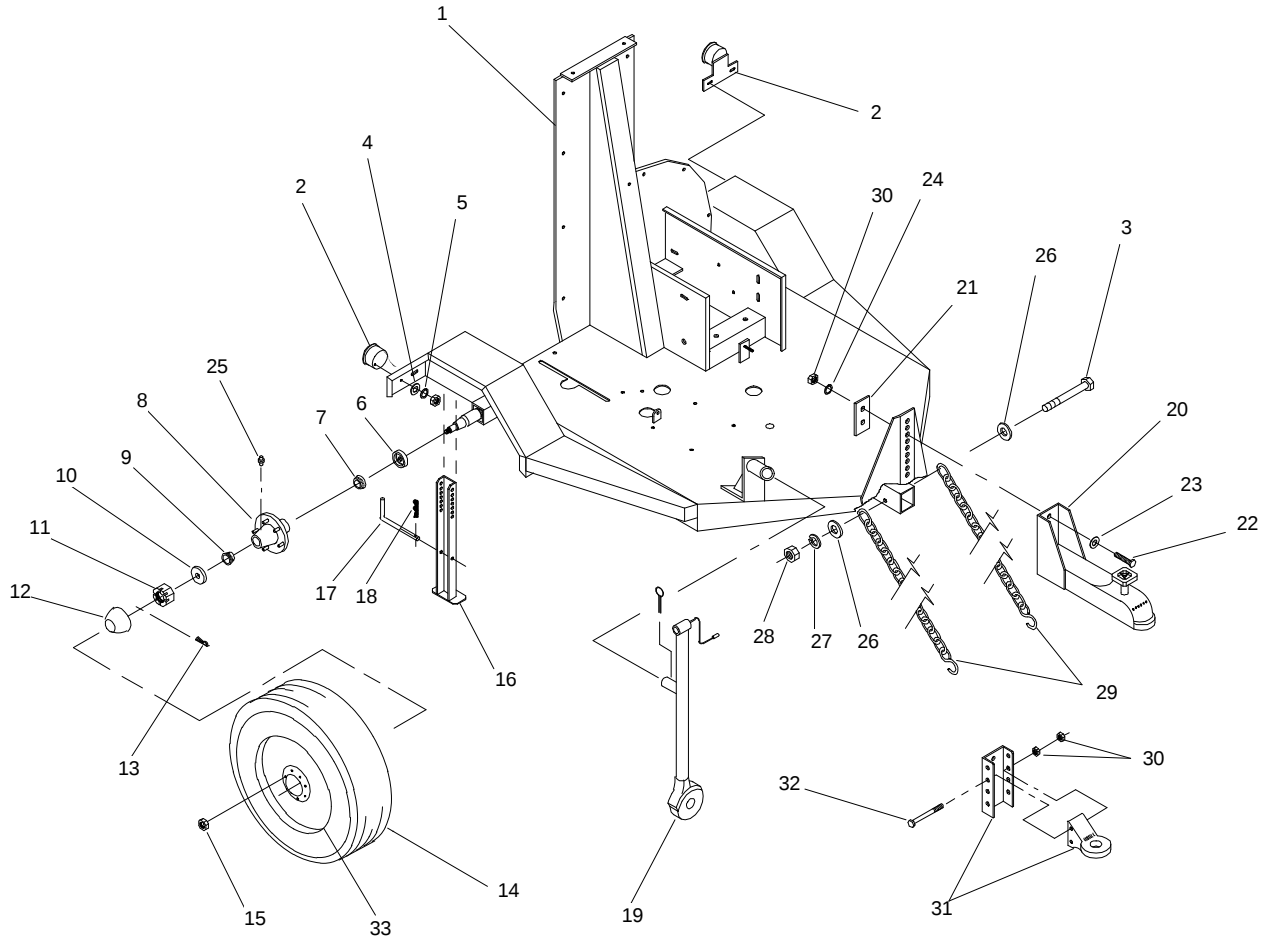


MAIN FRAME ASSEMBLY

31-001

Ref. No.	Part No.	Description	No. Used
1	31-005-0143	Main Frame	1
2	01-607-0240	Tail Light	1
*	28-004-0601	Wire Clamp	2
*	01-286-0430	Wire Cotton Cover	1
3	323-15	Capscrew - Hex Hd.	1
4	3256-2	Flat Washer	4
5	3253-3	Lock Washer	4
6	01-405-0370	Seal	2
7	01-102-0050	Bearing, inner	2
8	01-269-0140	Hub, complete	2
9	01-102-0070	Bearing, outer	2
10	3256-28	"SAE" Flat Washer	2
11	01-190-1216	Castle Nut	2
12	01-286-0040	Dust Cap	2
13	3272-13	Cotter Pin	2
14	01-269-1560	Tire	2
15	01-269-0300	Lug Nut	10
16	31-005-0072	Jack Stand	1

Ref. No.	Part No.	Description	No. Used
17	31-004-0931	Jack Stand Pin	1
18	01-159-0040	Presto Pin	1
19	31-005-0261	Jack w/caster	1
20	31-005-0172	Hitch	1
21	31-004-1321	Hitch Brace	1
22	327-6	Capscrew - Hex Hd.	2
23	3256-7	Flat Washer	2
24	3253-8	Lock Washer	2
25	01-215-0050	Grease Zerk	2
26	3256-4	Flat Washer	2
27	3253-5	Lock Washer	1
28	3217-7	Hex Nut	1
29	01-251-0360	Safety Chain w/hook	2
30	3217-11	Hex Nut	6
31	02-276-0100	Pintle Hitch (optional)	1
32	327-11	Capscrew - Hex Hd.	2
33	01-269-1550	Wheel	2

* Not Illustrated

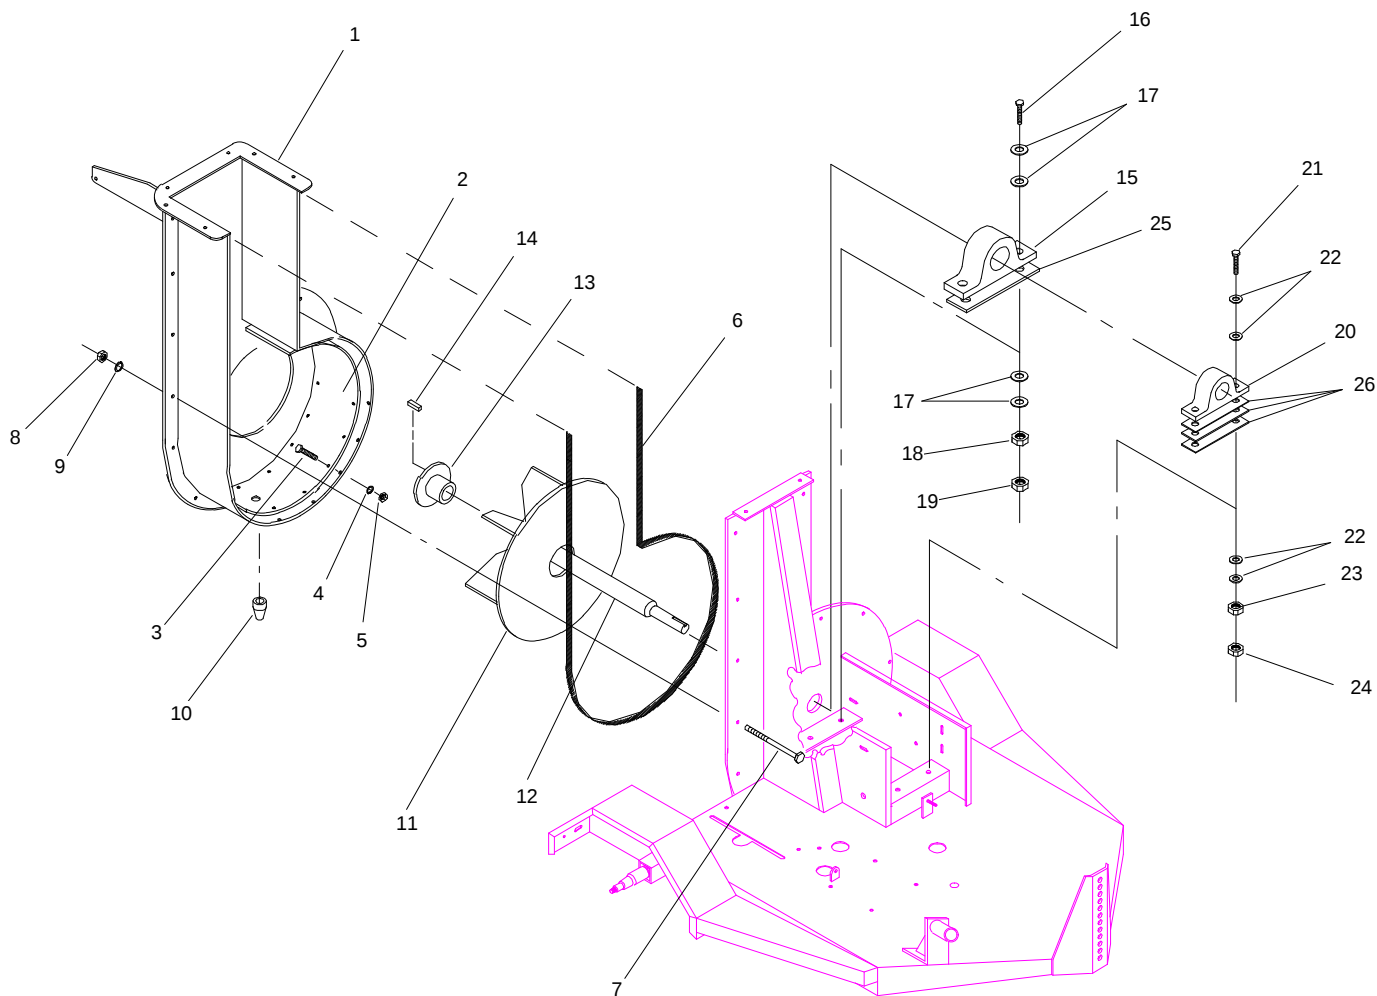


FAN HOUSING ASSEMBLY

31-002

Ref. No.	Part No.	Description	No. Used
1	31-005-0122	Fan Housing	1
2	31-004-1061	Fan Housing Liner	1
3	01-158-1510	Capscrew - Buttonhead	17
4	3253-2	Lock Washer	17
5	01-188-0324	Hex Nut	17
6	41-004-3621	Housing Wrapper Seal	1
7	323-24	Capscrew - Hex Hd.	15
8	3217-7	Hex Nut	15
9	3253-5	Lock Washer	15
10	01-451-0050	Pipe Plug	1
11	41-005-4842	Impeller	1
12	31-004-0302	Impeller Shaft	1
13	01-260-1440	Bushing	1

Ref. No.	Part No.	Description	No. Used
14	41-004-5261	Key	1
15	01-113-0160	Bearing	1
16	327-9	Capscrew - Hex Hd.	2
17	3256-7	Flat Washer	8
18	3217-11	Hex Nut	2
19	3218-6	Jam Nut	2
20	01-113-0020	Bearing	1
21	325-10	Capscrew - Hex Hd.	2
22	3256-6	Flat Washer	8
23	3217-9	Hex Nut	2
24	3218-5	Jam Nut	2
25	31-004-1031	Shim - Long	1(var)
26	31-004-1021	Bearing Shim	3(var)

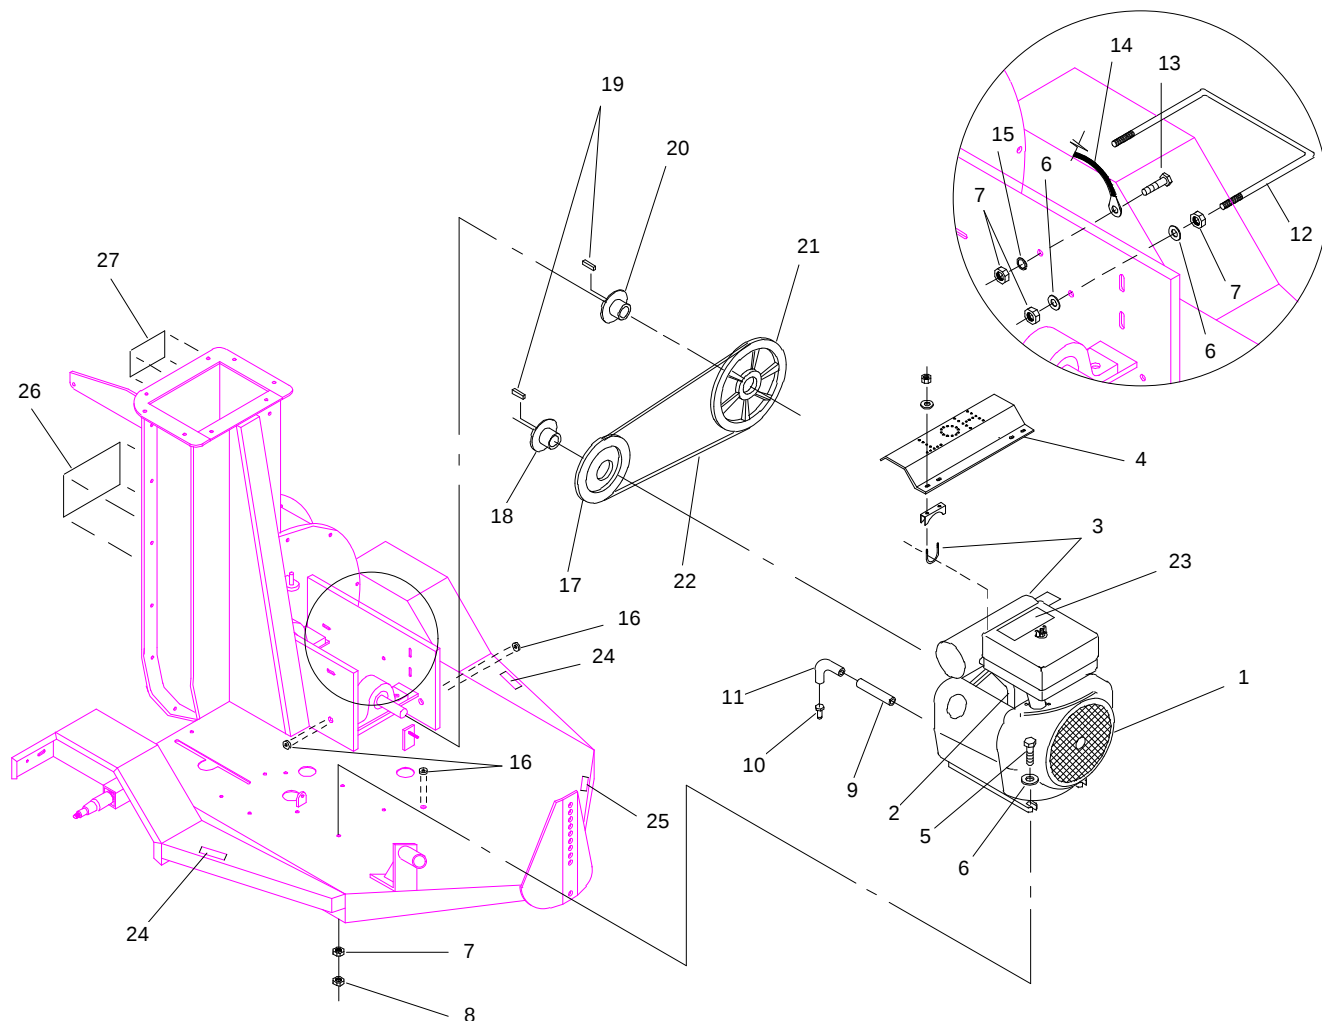


DRIVE SYSTEM - MODEL 44510/20HP

31-003

Ref. No.	Part No.	Description	No. Used
1	01-270-1370	Engine	1
2	01-273-0250	Muffler Tube Kit (includes tubes, bolts & gaskets)	1
3	01-273-0240	Muffler Kit, (includes clamps & muffler)	1
4	48-004-5651	Muffler Guard	1
5	323-9	Capscrew - Hex Hd.	4
6	3256-4	Flat Washer	8
7	3217-7	Hex Nut	9
8	3218-3	Jam Nut	4
9	01-456-0040	Pipe Nipple	1
10	01-451-0020	Pipe Plug	1
11	01-455-0030	Pipe Elbow	1
12	48-004-3831	Battery Hold Down	1
13	323-6	Capscrew - Hex Hd.	1

Ref. No.	Part No.	Description	No. Used
14	01-600-0050	Battery Cable (neg)	1
*	01-600-0030	Battery Cable (pos)	1
15	3253-5	Lock Washer	1
16	01-127-0040	Grommet	3
17	01-260-0030	Sheave	1
18	01-260-0780	Bushing	1
19	82-004-1171	Key	2
20	01-260-0790	Bushing	1
21	01-260-0700	Sheave	1
22	01-264-0650	Belt	1
23	01-506-0030	Decal - Danger	1
24	75-5190	Decal - No Riders	2
25	01-506-0430	Decal - Replacement Manual	1
26	01-506-0510	Decal - Toro	1
27	01-506-0290	Decal - Danger	1

* Not Illustrated

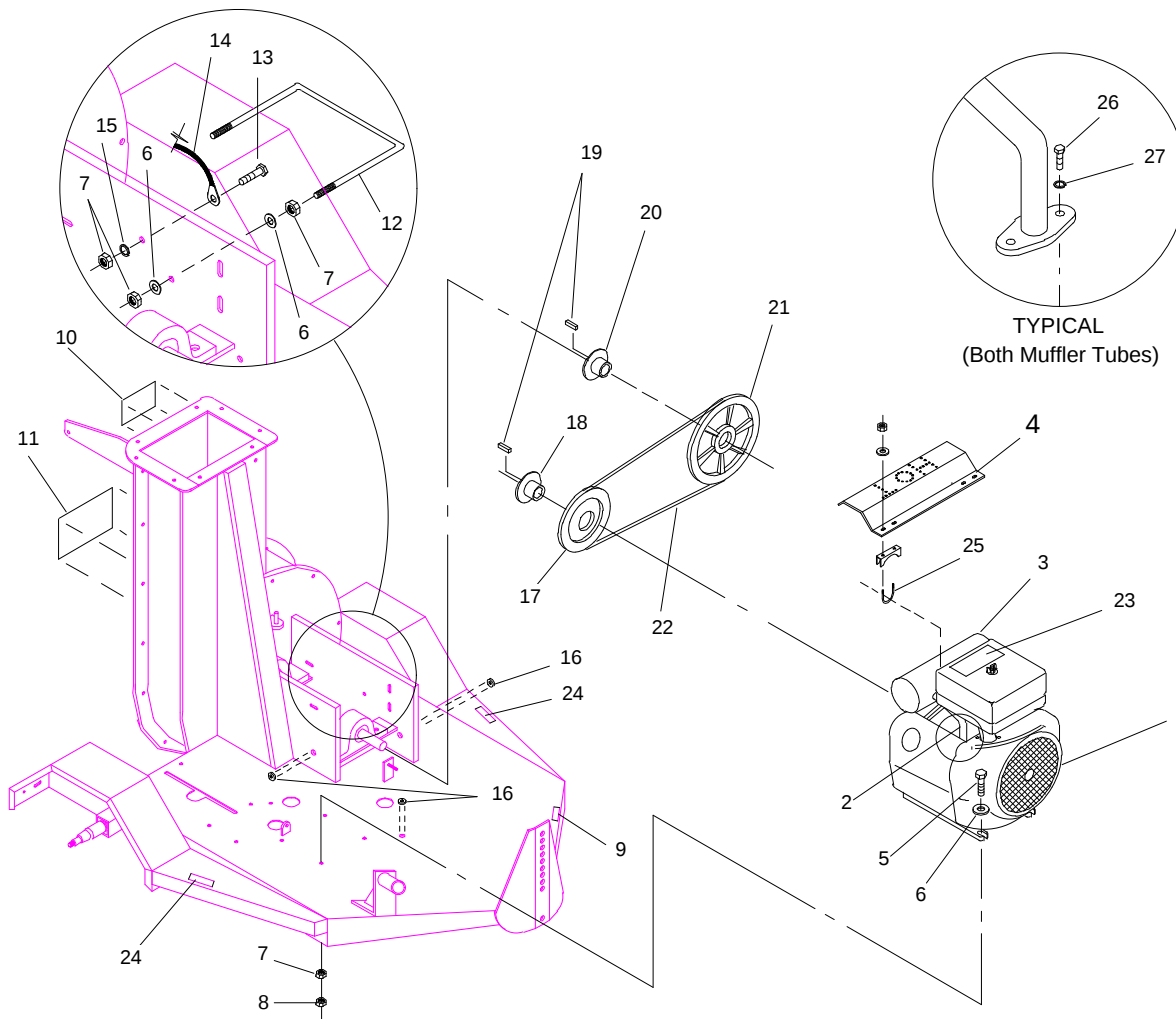


DRIVE SYSTEM - MODEL 44515/24HP

31-008

Ref. No.	Part No.	Description	No. Used
1	01-270-2260	Engine	1
2	01-273-0280	Muffler Tube - long	1
*	01-273-0270	Muffler Tube - short	1
3	01-273-0260	Muffler	1
4	54-004-1401	Muffler Guard	1
5	323-9	Capscrew - Hex Hd.	4
6	3256-4	Flat Washer	8
7	3217-7	Hex Nut	9
8	3218-3	Jam Nut	4
9	01-506-0430	Decal - Replacement Manual	1
10	01-506-0290	Decal - Danger	1
11	01-506-0510	Decal - Toro	1
12	48-004-3831	Battery Hold Down	1
13	323-6	Capscrew - Hex Hd.	1

Ref. No.	Part No.	Description	No. Used
14	01-600-0050	Battery Cable (neg)	1
*	01-600-0190	Battery Cable (pos)	1
15	3253-5	Lock Washer	1
16	01-127-0040	Grommet	3
17	01-260-0030	Sheave	1
18	01-260-0780	Bushing	1
19	82-004-1171	Key	2
20	01-260-0790	Bushing	1
21	01-260-0700	Sheave	1
22	01-264-0650	Belt	1
23	01-506-0030	Decal - Danger	1
24	75-5190	Decal - No Riders	2
25	01-170-0150	Muffler Clamp	2
26	322-5	Capscrew - Hex Hd.	4
27	3253-4	Lock Washer	4


* Not Illustrated

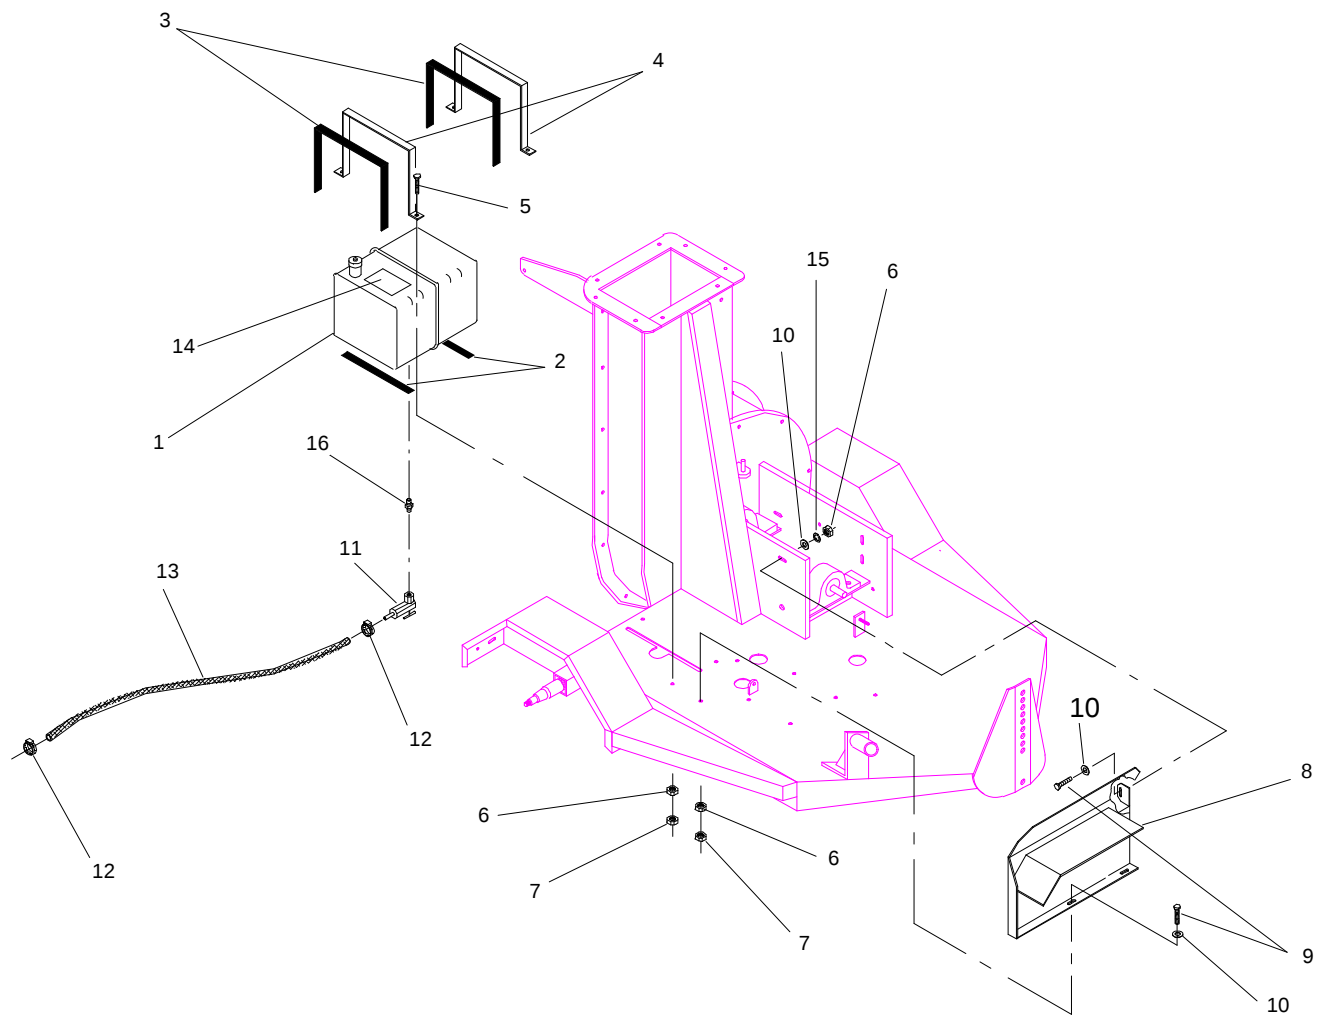

GAS TANK & GUARD ASSEMBLY - MODEL 44510/20HP 31-004

Ref. No.	Part No.	Description	No. Used
1	01-280-0010	Gas Tank	1
2	66-004-3341	Gas Tank Rubber Mount	2
3	66-004-3351	Gas Tank Rubber Mount	2
4	66-004-2391	Gas Tank Mounting Strap	2
5	323-8	Capscrew - Hex Hd.	4
6	3217-7	Hex Nut	7
7	3218-3	Jam Nut	6
8	31-005-0112	Gas Tank Guard	1


Ref. No.	Part No.	Description	No. Used
9	323-6	Capscrew - Hex Hd.	3
10	3256-4	Flat Washer	4
11	01-280-0090	Fuel Shutoff	1
12	01-202-0030	Hose Clamps	2
13	31-004-0721	Gas Line	1
14	01-506-0460	Decal - Gas	1
15	3253-5	Lock Washer	1
16	01-201-0540	Fitting	1

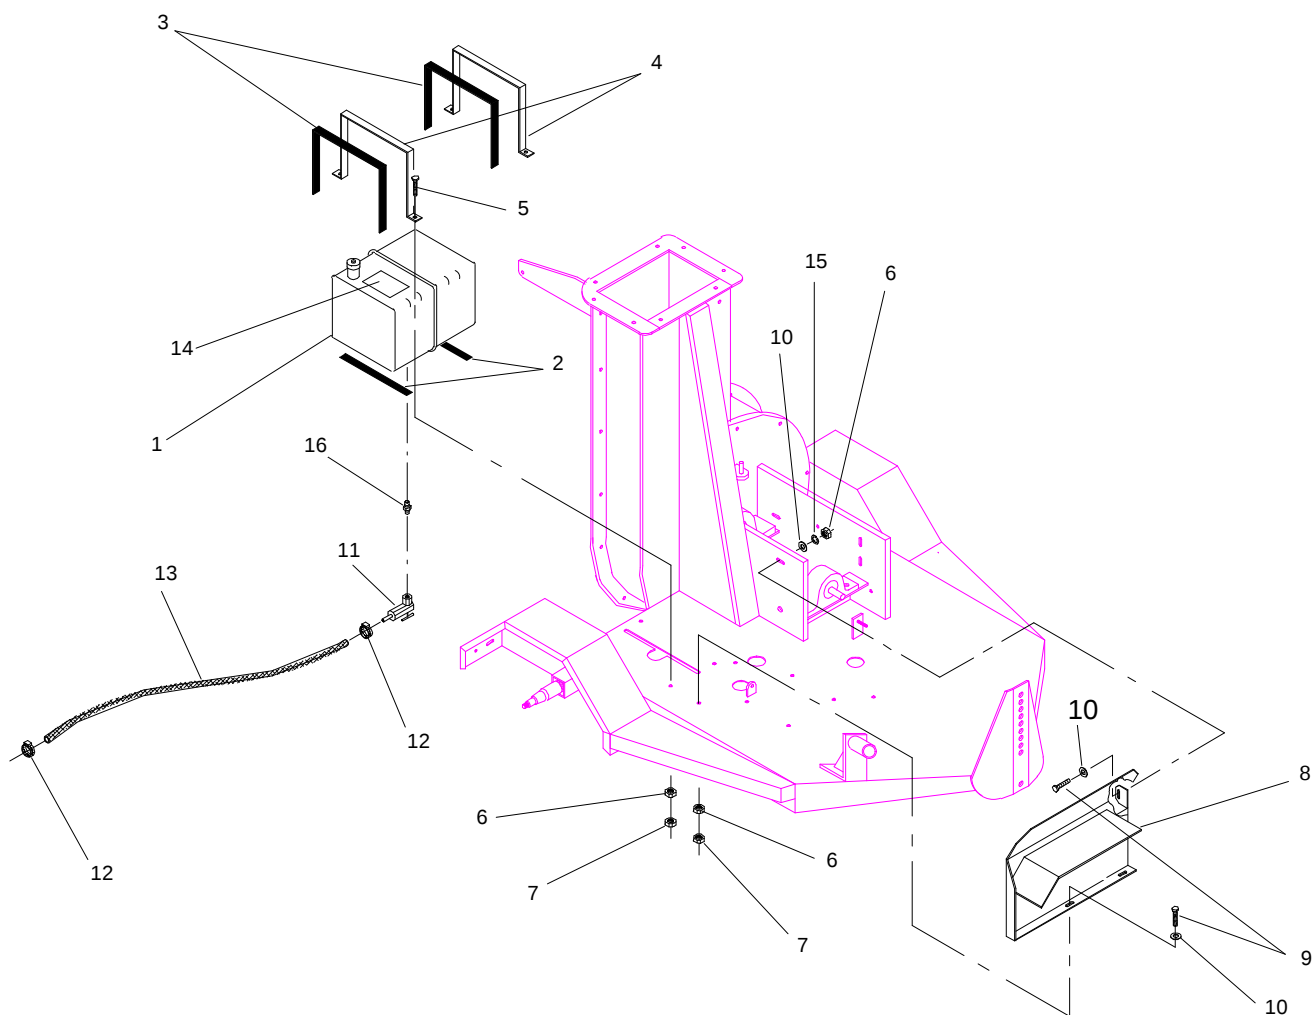

GAS TANK & GUARD ASSEMBLY - MODEL 44515/24HP 31-004A

Ref. No.	Part No.	Description	No. Used
1	01-280-0010	Gas Tank	1
2	66-004-3341	Gas Tank Rubber Mount	2
3	66-004-3351	Gas Tank Rubber Mount	2
4	66-004-2391	Gas Tank Mounting Strap	2
5	323-8	Capscrew - Hex Hd.	4
6	3217-7	Hex Nut	7
7	3218-3	Jam Nut	6
8	31-005-0201	Gas Tank Guard	1

Ref. No.	Part No.	Description	No. Used
9	323-6	Capscrew - Hex Hd.	3
10	3256-4	Flat Washer	4
11	01-280-0090	Fuel Shutoff	1
12	01-202-0030	Hose Clamps	2
13	31-004-0721	Gas Line	1
14	01-506-0460	Decal - Gas	1
15	3253-5	Lock Washer	1
16	01-201-0540	Fitting	1

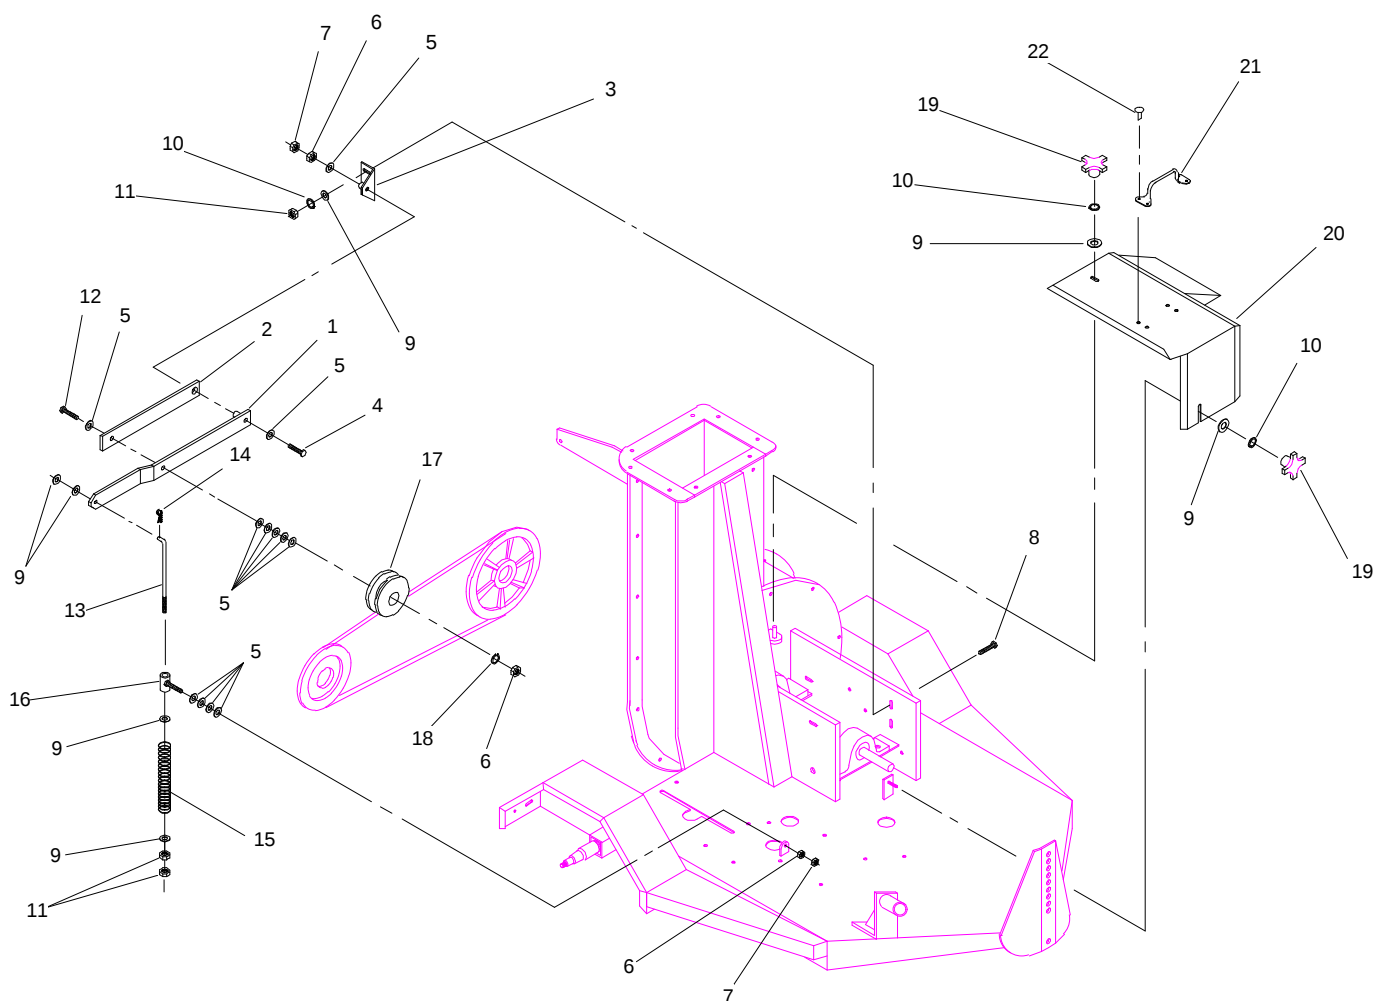


IDLER ASSEMBLY - MODEL 44510/20HP

31-005

Ref. No.	Part No.	Description	No. Used
1	31-005-0062	Idler Arm	1
2	31-004-0791	Idler Arm Side	1
3	31-005-0082	Idler Bracket	1
4	325-17	Capscrew - Hex Hd.	1
5	3256-6	Flat Washer	12(var)
6	3217-9	Hex Nut	3
7	3218-5	Jam Nut	2
8	323-6	Capscrew - Hex Hd.	2
9	3256-4	Flat Washer	8
10	3253-5	Lock Washer	4
11	3217-7	Hex Nut	4

Ref. No.	Part No.	Description	No. Used
12	325-11	Capscrew - Hex Hd.	1
13	31-004-0911	Spring Rod	1
14	3272-11	Cotter Pin	1
15	01-261-0300	Spring	1
16	31-005-0181	Idler Pivot	1
17	01-268-0090	Idler Pulley	1
18	3253-7	Lock Washer	1
19	01-257-0010	Knob	2
20	31-005-0132	Guard	1
21	01-256-0140	Handle	1
22	01-161-0060	Pop Rivet	4

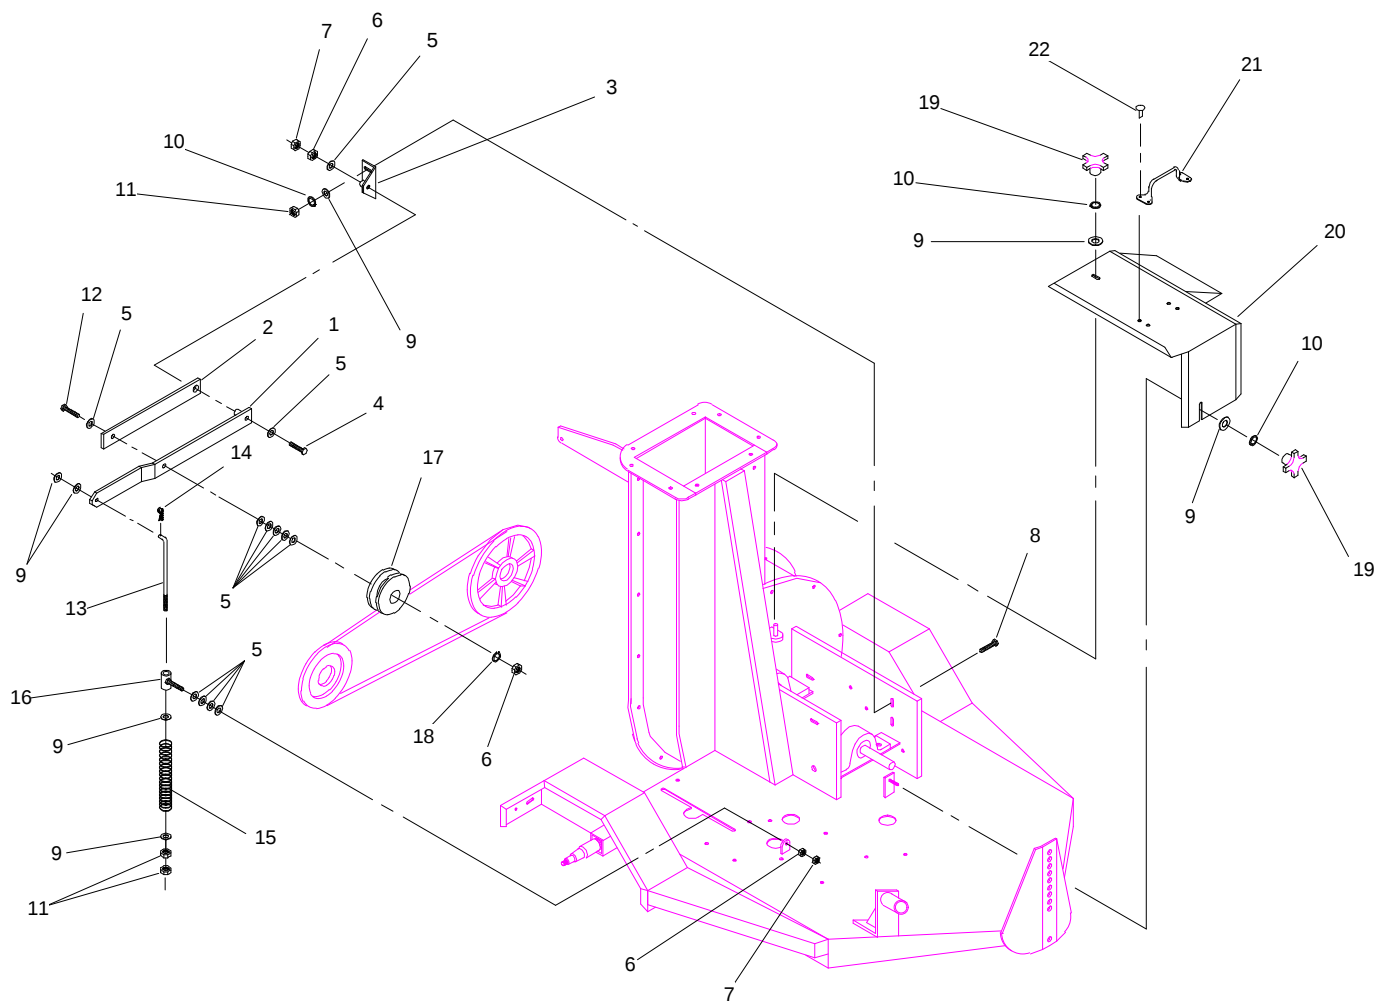


IDLER ASSEMBLY - MODEL 44515/24HP

31-005A

Ref. No.	Part No.	Description	No. Used
1	31-005-0062	Idler Arm	1
2	31-004-0791	Idler Arm Side	1
3	31-005-0082	Idler Bracket	1
4	325-17	Capscrew - Hex Hd.	1
5	3256-6	Flat Washer	12(var)
6	3217-9	Hex Nut	3
7	3218-5	Jam Nut	2
8	323-6	Capscrew - Hex Hd.	2
9	3256-4	Flat Washer	8
10	3253-5	Lock Washer	4
11	3217-7	Hex Nut	4

Ref. No.	Part No.	Description	No. Used
12	325-11	Capscrew - Hex Hd.	1
13	93-004-0711	Spring Rod	1
14	3272-11	Cotter Pin	1
15	01-261-0300	Spring	1
16	31-005-0181	Idler Pivot	1
17	01-268-0090	Idler Pulley	1
18	3253-7	Lock Washer	1
19	01-257-0010	Knob	2
20	31-005-0132	Guard	1
21	01-256-0140	Handle	1
22	01-161-0060	Pop Rivet	4

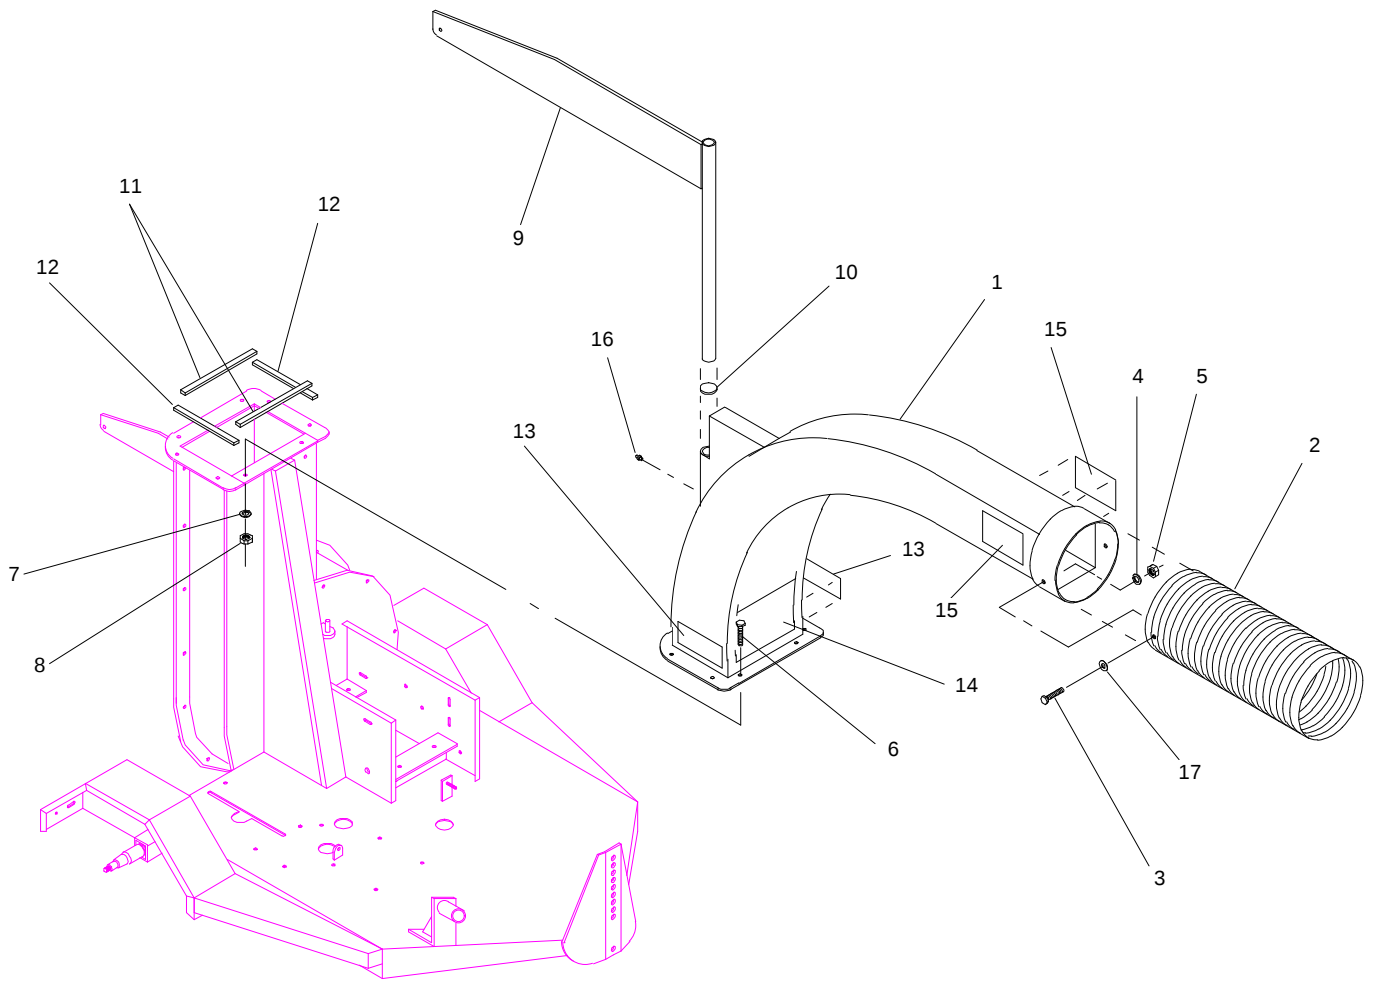


DISCHARGE CHUTE

31-006

Ref. No.	Part No.	Description	No. Used
1	31-005-0152	Chute	1
2	01-205-0240	Hose (discharge)	1
3	321-6	Capscrew - Hex Hd.	2
4	3253-3	Lock Washer	2
5	3217-5	Hex Nut	2
6	323-7	Capscrew - Hex Hd.	8
7	3253-5	Lock Washer	8
8	3217-7	Hex Nut	8
9	31-005-0102	Boom Arm	1

Ref. No.	Part No.	Description	No. Used
10	31-004-0591	Boom Pivot Washer	1
11	31-004-0731	Foam Seal	2
12	31-004-1011	Foam Seal	2
13	01-506-0840	Decal - Debris Loader 3100	2
14	01-506-0510	Decal - Toro	1
15	01-506-0300	Decal - Danger	2
16	01-215-0050	Grease Zerk	1
17	3256-2	Flat Washer	2

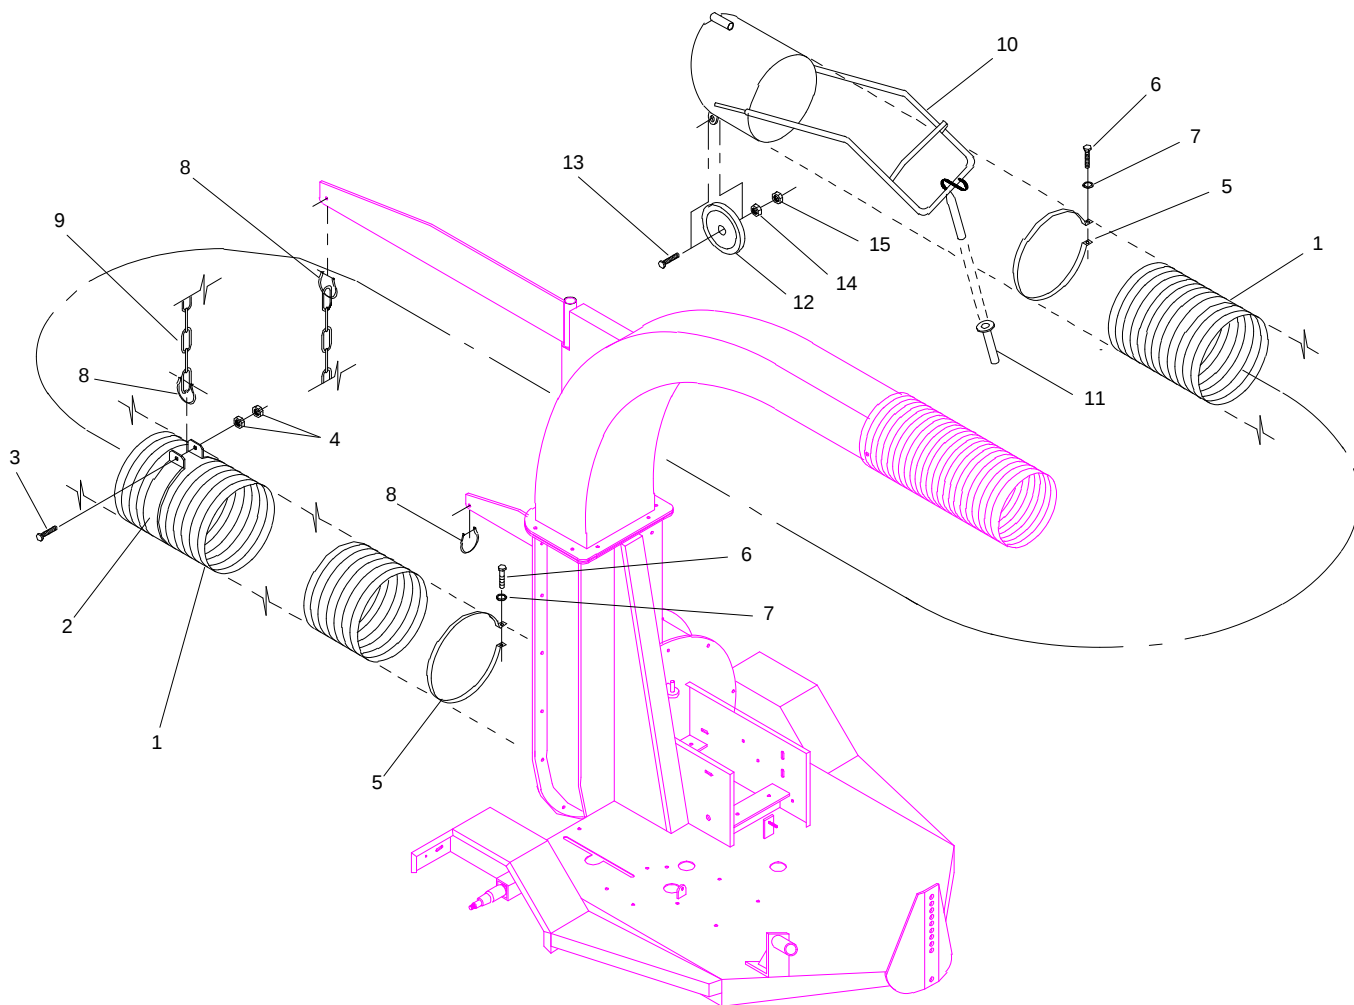

INTAKE HOSE ASSEMBLY - MODEL 44511/44512

31-007

Ref. No.	Part No.	Description	No. Used
1	31-004-1041	Suction Hose, 8' - 4" (Model #44511)	1
*	31-004-1281	Suction Hose, 16' - 8" (Model #44512)	1
2	31-005-0092	Suction Hose Clamp	1
3	01-182-0628	Capscrew - Hex Hd.	1
4	3217-7	Hex Nut	2
5	41-005-3541	Hose Clamp	2
6	01-180-0624	Capscrew - Socket Hd.	2

Ref. No.	Part No.	Description	No. Used
7	3253-5	Lock Washer	2
8	01-170-0130	Anchor Shackle	3
9	31-004-0711	Chain	1
10	31-005-0162	Nozzle	1
11	01-259-0050	Handle Grip	1
12	01-269-0800	Plastic Wheel	1
13	328-7	Capscrew - Hex Hd.	1
14	3217-12	Hex Nut	1
15	3218-7	Jam Nut	1

* Not Illustrated

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-102-0050	Bearing	1	7	2	01-286-0040	Dust Cap	1	12	2
01-102-0070	Bearing	1	9	2	01-286-0430	Wire Cotton Cover	1	*	1
01-113-0020	Bearing	2	20	1	01-405-0370	Seal	1	6	2
01-113-0160	Bearing	2	15	1	01-451-0020	Pipe Plug	3	10	1
01-127-0040	Grommet	3	16	3	01-451-0050	Pipe Plug	2	10	1
01-127-0040	Grommet	4	16	3	01-455-0030	Pipe Elbow	3	11	1
01-158-1510	Capscrew - Buttonhead	2	3	17	01-456-0040	Pipe Nipple	3	9	1
01-159-0040	Presto Pin	1	18	1	01-506-0030	Decal - Danger	3	23	1
01-161-0060	Pop Rivet	7	22	4	01-506-0030	Decal - Danger	4	23	1
01-161-0060	Pop Rivet	8	22	4	01-506-0290	Decal - Danger	3	27	1
01-170-0130	Anchor Shackle	10	8	3	01-506-0290	Decal - Danger	4	10	1
01-170-0150	Muffler Clamp	4	25	2	01-506-0300	Decal - Danger	9	15	2
01-180-0624	Capscrew - Socket Hd.	10	6	2	01-506-0430	Decal - Replacement Manual	3	25	1
01-182-0628	Capscrew - Hex Hd.	10	3	1	01-506-0430	Decal - Replacement Manual	4	9	1
01-188-0324	Hex Nut	2	5	17	01-506-0460	Decal - Gas	5	14	1
01-190-1216	Castle Nut	1	11	2	01-506-0460	Decal - Gas	6	14	1
01-201-0540	Fitting	5	16	1	01-506-0510	Decal - Toro	9	14	1
01-201-0540	Fitting	6	16	1	01-506-0510	Decal - Toro	3	26	1
01-202-0030	Hose Clamps	5	12	2	01-506-0510	Decal - Toro	4	11	1
01-202-0030	Hose Clamps	6	12	2	01-506-0840	Decal - Debris Loader 3100	9	13	2
01-205-0240	Hose	9	2	1	01-600-0030	Battery Cable	3	*	1
01-215-0050	Grease Zerk	9	16	1	01-600-0050	Battery Cable	3	14	1
01-215-0050	Grease Zerk	1	25	2	01-600-0050	Battery Cable	4	14	1
01-251-0360	Safety Chain	1	29	2	01-600-0190	Battery Cable	4	*	1
01-256-0140	Handle	7	21	1	01-607-0240	Tail Light	1	2	1
01-256-0140	Handle	8	21	1	02-276-0100	Pintle Hitch	1	31	1
01-257-0010	Knob	7	19	2	28-004-0601	Wire Clamp	1	*	2
01-257-0010	Knob	8	19	2	31-004-0302	Impeller Shaft	2	12	1
01-259-0050	Handle Grip	10	11	1	31-004-0591	Boom Pivot Washer	9	10	1
01-260-0030	Sheave	3	17	1	31-004-0711	Chain	10	9	1
01-260-0030	Sheave	4	17	1	31-004-0721	Gas Line	5	13	1
01-260-0700	Sheave	3	21	1	31-004-0721	Gas Line	6	13	1
01-260-0700	Sheave	4	21	1	31-004-0731	Foam Seal	9	11	2
01-260-0780	Bushing	3	18	1	31-004-0791	Idler Arm Side	7	2	1
01-260-0780	Bushing	4	18	1	31-004-0791	Idler Arm Side	8	2	1
01-260-0790	Bushing	3	20	1	31-004-0911	Spring Rod	7	13	1
01-260-0790	Bushing	4	20	1	31-004-0931	Jack Stand Pin	1	17	1
01-260-1440	Bushing	2	13	1	31-004-1011	Foam Seal	9	12	2
01-261-0300	Spring	7	15	1	31-004-1021	Bearing Shim	2	26	3
01-261-0300	Spring	8	15	1	31-004-1031	Shim - Long	2	25	1
01-264-0650	Belt	3	22	1	31-004-1041	Suction Hose	10	1	1
01-264-0650	Belt	4	22	1	31-004-1061	Fan Housing Liner	2	2	1
01-268-0090	Idler Pulley	7	17	1	31-004-1281	Suction Hose	10	*	1
01-268-0090	Idler Pulley	8	17	1	31-004-1321	Hitch Brace	1	21	1
01-269-0140	Hub	1	8	2	31-005-0062	Idler Arm	7	1	1
01-269-0300	Lug Nut	1	15	10	31-005-0062	Idler Arm	8	1	1
01-269-0800	Plastic Wheel	10	12	1	31-005-0072	Jack Stand	1	16	1
01-269-1550	Wheel	1	33	2	31-005-0082	Idler Bracket	7	3	1
01-269-1560	Tire	1	14	2	31-005-0082	Idler Bracket	8	3	1
01-270-1370	Engine	3	1	1	31-005-0092	Suction Hose Clamp	10	2	1
01-270-2260	Engine	4	1	1	31-005-0102	Boom Arm	9	9	1
01-273-0240	Muffler Kit	3	3	1	31-005-0112	Gas Tank Guard	5	8	1
01-273-0250	Muffler Tube Kit	3	2	1	31-005-0122	Fan Housing	2	1	1
01-273-0260	Muffler	4	3	1	31-005-0132	Guard	7	20	1
01-273-0270	Muffler Tube	4	*	1	31-005-0132	Guard	8	20	1
01-273-0280	Muffler Tube	4	2	1	31-005-0143	Main Frame	1	1	1
01-280-0010	Gas Tank	5	1	1	31-005-0152	Chute	9	1	1
01-280-0010	Gas Tank	6	1	1	31-005-0162	Nozzle	10	10	1
01-280-0090	Fuel Shutoff	5	11	1	31-005-0172	Hitch	1	20	1
01-280-0090	Fuel Shutoff	6	11	1	31-005-0181	Idler Pivot	7	16	1

* Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
31-005-0181	Idler Pivot	8	16	1	3253-5	Lock Washer	9	7	8
31-005-0201	Gas Tank Guard	6	8	1	3253-5	Lock Washer	10	7	2
31-005-0261	Jack	1	19	1	3253-5	Lock Washer	2	9	15
321-6	Capscrew - Hex Hd.	9	3	2	3253-5	Lock Washer	3	15	1
3217-11	Hex Nut	1	30	6	3253-5	Lock Washer	4	15	1
3217-11	Hex Nut	2	18	2	3253-5	Lock Washer	5	15	1
3217-12	Hex Nut	10	14	1	3253-5	Lock Washer	6	15	1
3217-5	Hex Nut	9	5	2	3253-5	Lock Washer	7	10	4
3217-7	Hex Nut	1	28	1	3253-5	Lock Washer	8	10	4
3217-7	Hex Nut	9	8	8	3253-7	Lock Washer	7	18	1
3217-7	Hex Nut	10	4	2	3253-7	Lock Washer	8	18	1
3217-7	Hex Nut	2	8	15	3253-8	Lock Washer	1	24	2
3217-7	Hex Nut	3	7	9	3256-2	Flat Washer	1	4	4
3217-7	Hex Nut	4	7	9	3256-2	Flat Washer	9	17	2
3217-7	Hex Nut	5	6	7	3256-28	"SAE" Flat Washer	1	10	2
3217-7	Hex Nut	6	6	7	3256-4	Flat Washer	1	26	2
3217-7	Hex Nut	7	11	4	3256-4	Flat Washer	3	6	8
3217-7	Hex Nut	8	11	4	3256-4	Flat Washer	4	6	8
3217-9	Hex Nut	2	23	2	3256-4	Flat Washer	5	10	4
3217-9	Hex Nut	7	6	3	3256-4	Flat Washer	6	10	4
3217-9	Hex Nut	8	6	3	3256-4	Flat Washer	7	9	8
3218-3	Jam Nut	3	8	4	3256-4	Flat Washer	8	9	8
3218-3	Jam Nut	4	8	4	3256-6	Flat Washer	2	22	8
3218-3	Jam Nut	5	7	6	3256-6	Flat Washer	7	5	12
3218-3	Jam Nut	6	7	6	3256-6	Flat Washer	8	5	12
3218-5	Jam Nut	2	24	2	3256-7	Flat Washer	1	23	2
3218-5	Jam Nut	7	7	2	3256-7	Flat Washer	2	17	8
3218-5	Jam Nut	8	7	2	327-6	Capscrew - Hex Hd.	1	22	2
3218-6	Jam Nut	2	19	2	327-11	Capscrew - Hex Hd.	1	32	2
3218-7	Jam Nut	10	15	1	327-9	Capscrew - Hex Hd.	2	16	2
322-5	Capscrew - Hex Hd.	4	26	4	3272-11	Cotter Pin	7	14	1
323-15	Capscrew - Hex Hd.	1	3	1	3272-11	Cotter Pin	8	14	1
323-24	Capscrew - Hex Hd.	2	7	15	3272-13	Cotter Pin	1	13	2
323-6	Capscrew - Hex Hd.	3	13	1	328-7	Capscrew - Hex Hd.	10	13	1
323-6	Capscrew - Hex Hd.	4	13	1	41-004-3621	Housing Wrapper Seal	2	6	1
323-6	Capscrew - Hex Hd.	5	9	3	41-004-5261	Key	2	14	1
323-6	Capscrew - Hex Hd.	6	9	3	41-005-3541	Hose Clamp	10	5	2
323-6	Capscrew - Hex Hd.	7	8	2	41-005-4842	Impeller	2	11	1
323-6	Capscrew - Hex Hd.	8	8	2	48-004-3831	Battery Hold Down	3	12	1
323-7	Capscrew - Hex Hd.	9	6	8	48-004-3831	Battery Hold Down	4	12	1
323-8	Capscrew - Hex Hd.	5	5	4	48-004-5651	Muffler Guard	3	4	1
323-8	Capscrew - Hex Hd.	6	5	4	54-004-1401	Muffler Guard	4	4	1
323-9	Capscrew - Hex Hd.	3	5	4	66-004-2391	Gas Tank Mounting Strap	5	4	2
323-9	Capscrew - Hex Hd.	4	5	4	66-004-2391	Gas Tank Mounting Strap	6	4	2
325-10	Capscrew - Hex Hd.	2	21	2	66-004-3341	Gas Tank Rubber Mount	5	2	2
325-11	Capscrew - Hex Hd.	7	12	1	66-004-3341	Gas Tank Rubber Mount	6	2	2
325-11	Capscrew - Hex Hd.	8	12	1	66-004-3351	Gas Tank Rubber Mount	5	3	2
325-17	Capscrew - Hex Hd.	7	4	1	66-004-3351	Gas Tank Rubber Mount	6	3	2
325-17	Capscrew - Hex Hd.	8	4	1	75-5190	Decal - No Riders	3	24	2
3253-2	Lock Washer	2	4	17	75-5190	Decal - No Riders	4	24	2
3253-3	Lock Washer	1	5	4	82-004-1171	Key	3	19	2
3253-3	Lock Washer	9	4	2	82-004-1171	Key	4	19	2
3253-4	Lock Washer	4	27	4	93-004-0711	Spring Rod	8	13	1
3253-5	Lock Washer	1	27	1					

* Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The Debris Blower 3100 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Debris Blower 3100, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the unit.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description
Main Frame Assembly	1	Idler Assembly 7 - 8
Fan Housing Assembly.	2	Discharge Chute Assembly. 9
Drive System	3 - 4	Intake Hose Assembly 10
Gas Tank & Guard Assembly.	5 - 6	Part Number Index 11 - 12

NOTES

NOTES

MAINTENANCE RECORD

[illegible]