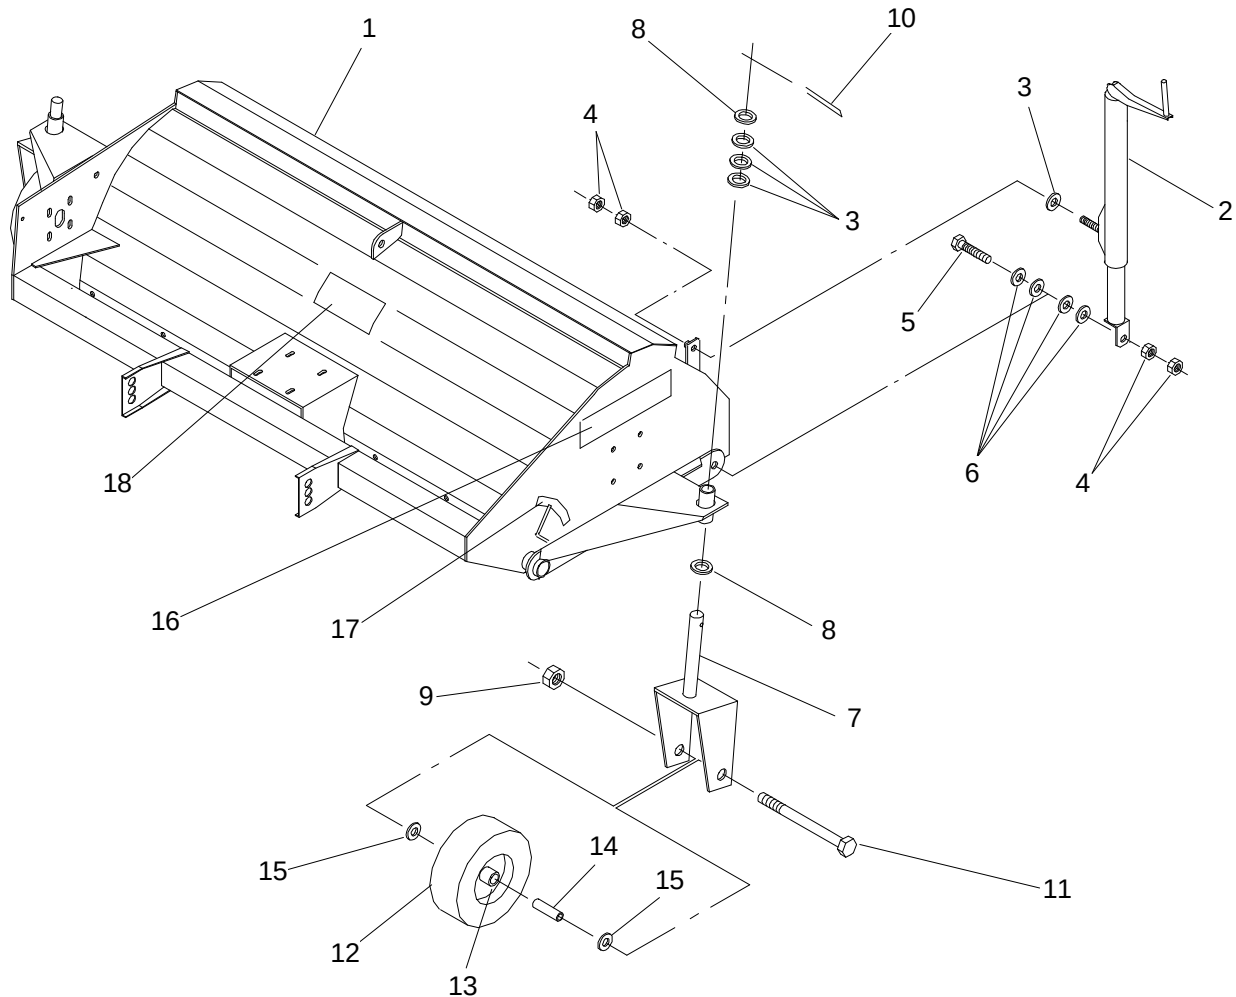



TORO®**MODEL NO. 44896 - 20101 & UP****PARTS
CATALOG****PLUG PULVERIZER 2563****WHEEL & SCREW JACK ASSEMBLY**

563-001

Ref. No.	Part No.	Description	No. Used
1	56-305-0113	Main Frame	1
2	56-005-2132	Jack	1
3	01-168-1610	Machinery Bushing	7(var)
4	3218-7	Jam Nut	4
5	328-2	Capscrew - Hex Hd.	1
6	01-166-1200	Flat Washer	4(var)
7	67-005-1472	Wheel Mount	2
8	01-168-1614	Machinery Bushing	3
9	01-189-0813	Lock Nut	2
10	3272-25	Cotter Pin	2

Ref. No.	Part No.	Description	No. Used
11	01-158-1260	Capscrew - Hex Hd.	2
12	01-269-0710	Tire	2
*	01-269-0720	Tube	2
13	01-269-0730	Wheel	2
*	01-111-0050	Bearing	4
14	01-269-1200	Axle Bushing	2
15	01-168-1210	Machinery Bushing	4
16	01-506-0810	Decal - Plug Pulverizer 2563	1
17	01-506-0180	Decal - Height Adj.	1
18	62-7400	Decal - Toro	1

* Not Illustrated

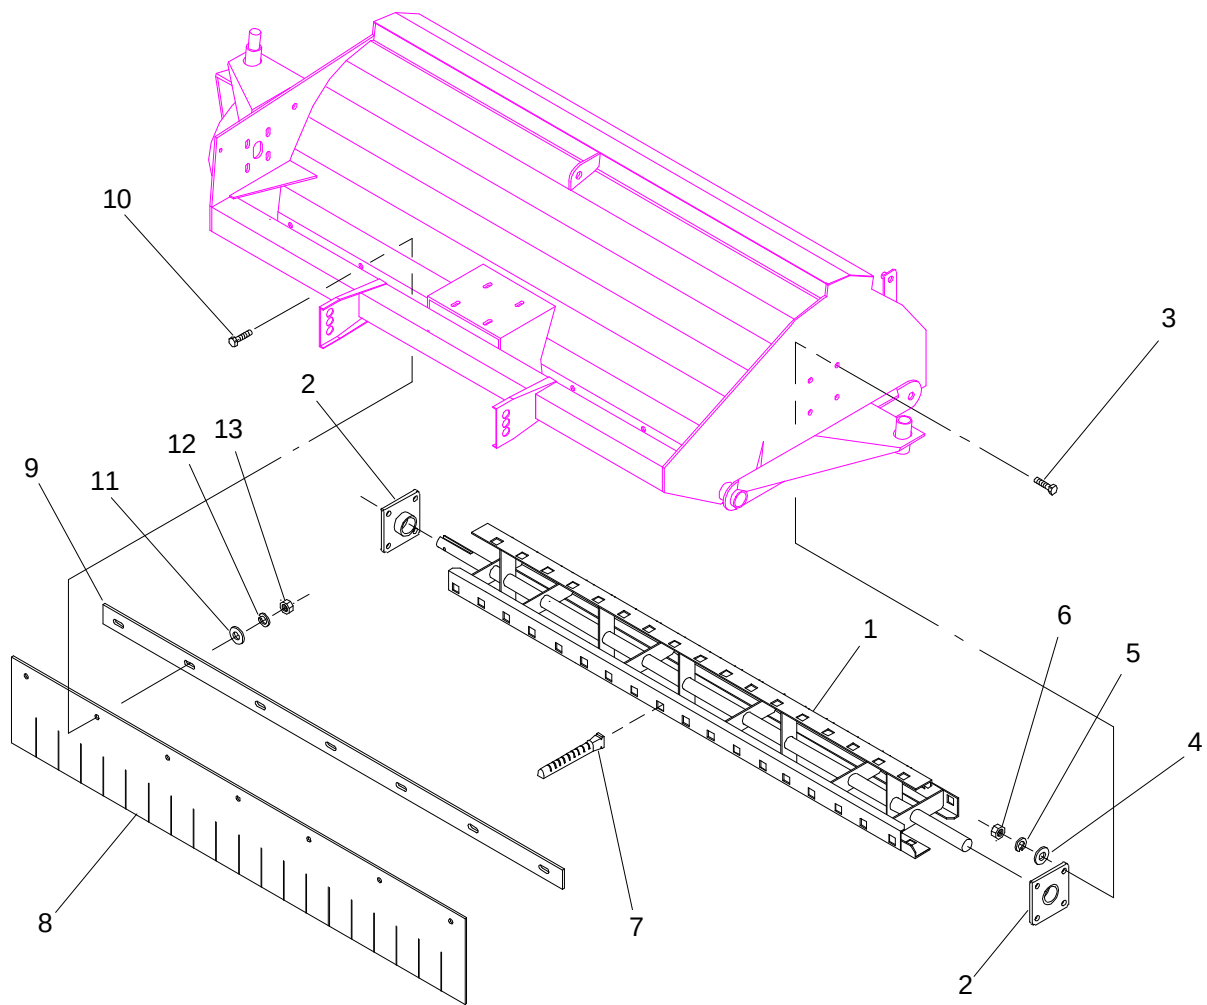


REEL ASSEMBLY

563-002

Ref. No.	Part No.	Description	No. Used
1	56-005-2112	Reel	1
2	01-100-0180	Bearing	2
3	325-6	Capscrew - Hex Hd.	8
4	3256-6	Flat Washer	8
5	3253-7	Lock Washer	8
6	3217-9	Hex Nut	8
7	01-279-0010	Fingers	70

Ref. No.	Part No.	Description	No. Used
8	56-004-2242	Rubber Flap	1
9	56-004-2471	Rubber Holder	1
10	323-6	Capscrew - Hex Hd.	7
11	3256-4	Flat Washer	7
12	3253-5	Lock Washer	7
13	3217-7	Hex Nut	7

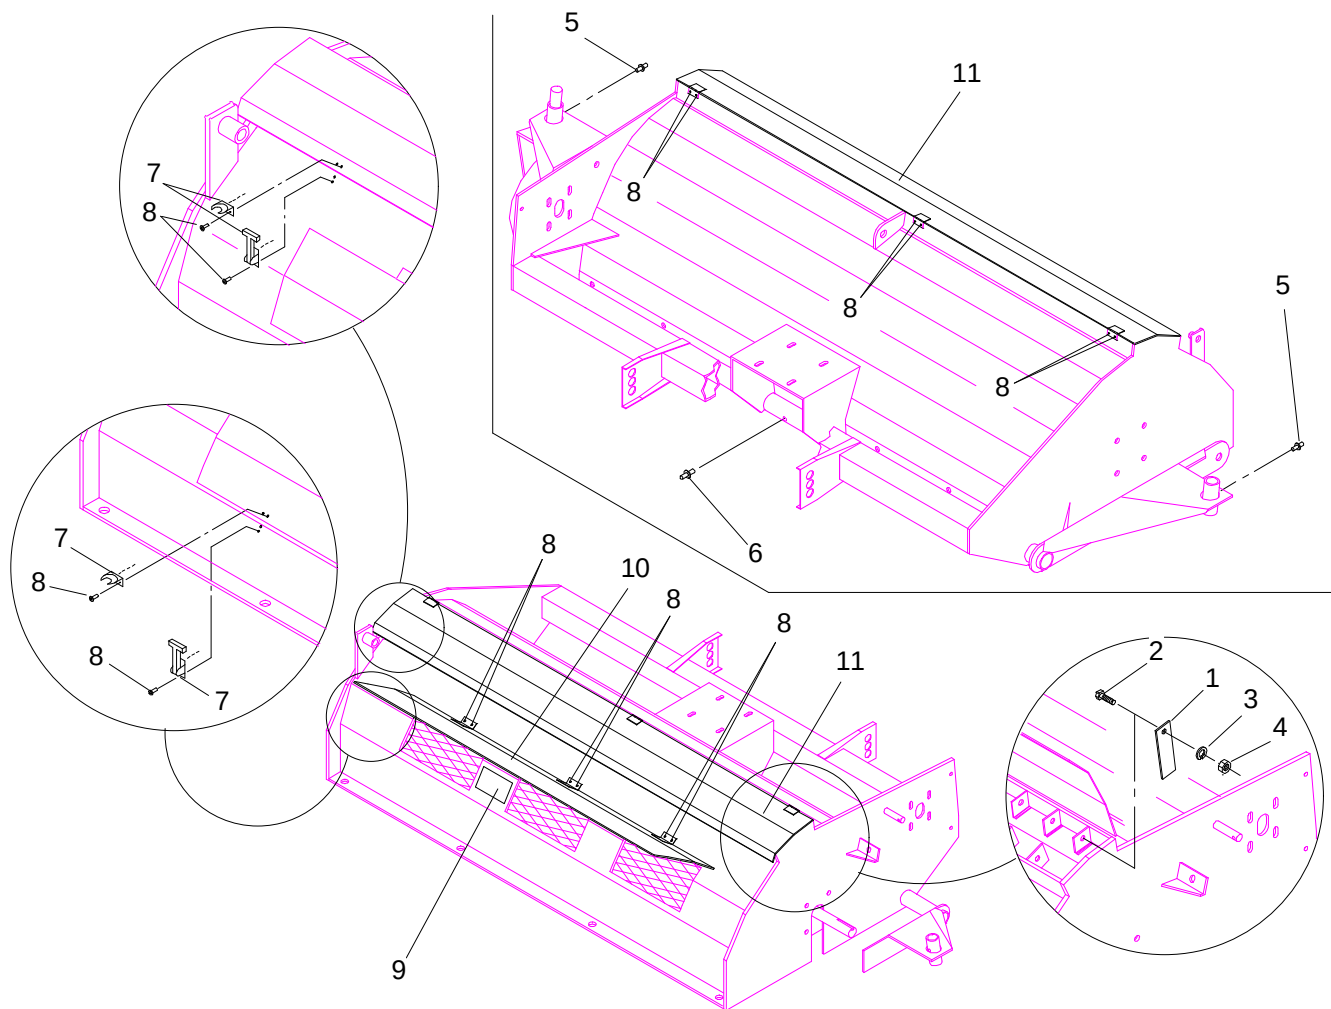


MAIN FRAME ASSEMBLY

563-003

Ref. No.	Part No.	Description	No. Used
1	56-004-2331	Blade	34
2	323-4	Capscrew - Hex Hd.	34
3	3253-5	Lock Washer	34
4	3217-7	Hex Nut	34
5	01-215-0050	Grease Zerk	2
6	01-215-0010	Grease Zerk	1

Ref. No.	Part No.	Description	No. Used
7	01-270-1350	Rubber Latch	4
8	01-161-0060	Pop Rivet	28
9	01-506-0380	Decal - Danger	1
10	56-305-0121	Clean Out Lid	1
11	56-005-3111	Blade Cover	1

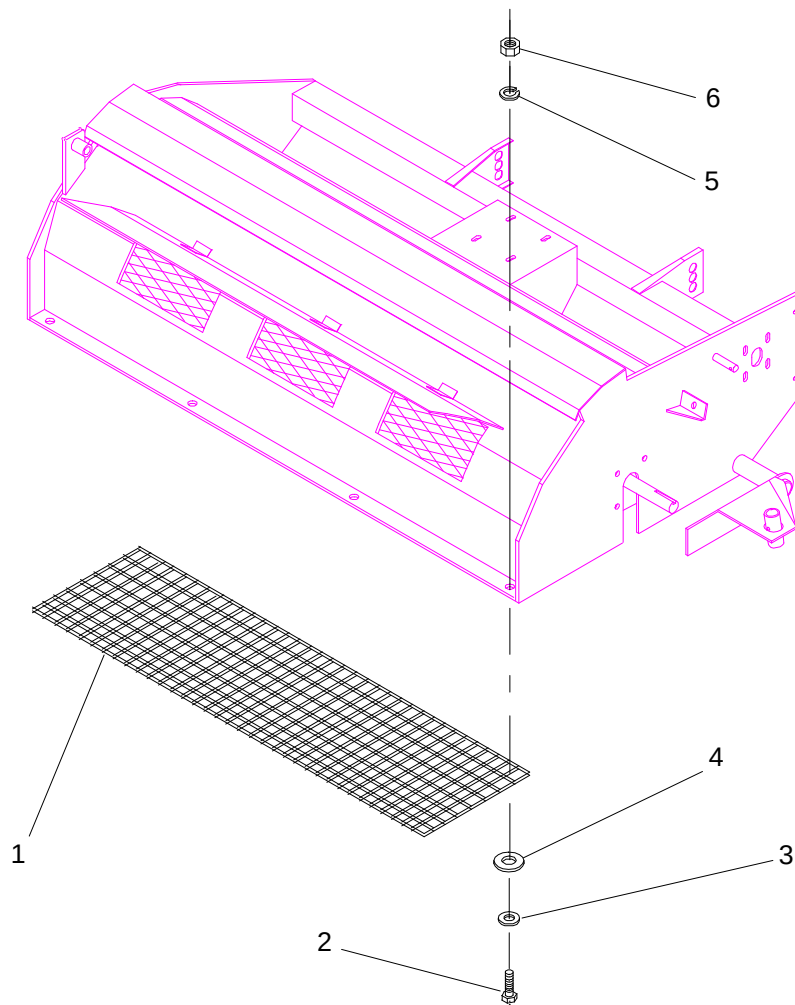


DRAG MAT ASSEMBLY

563-004

Ref. No.	Part No.	Description	No. Used
1	56-004-2741	Drag Mat	1
2	323-7	Capscrew - Hex Hd.	4
3	3256-4	Flat Washer	4

Ref. No.	Part No.	Description	No. Used
4	3256-5	Flat Washer	4
5	3253-5	Lock Washer	4
6	3217-7	Hex Nut	4

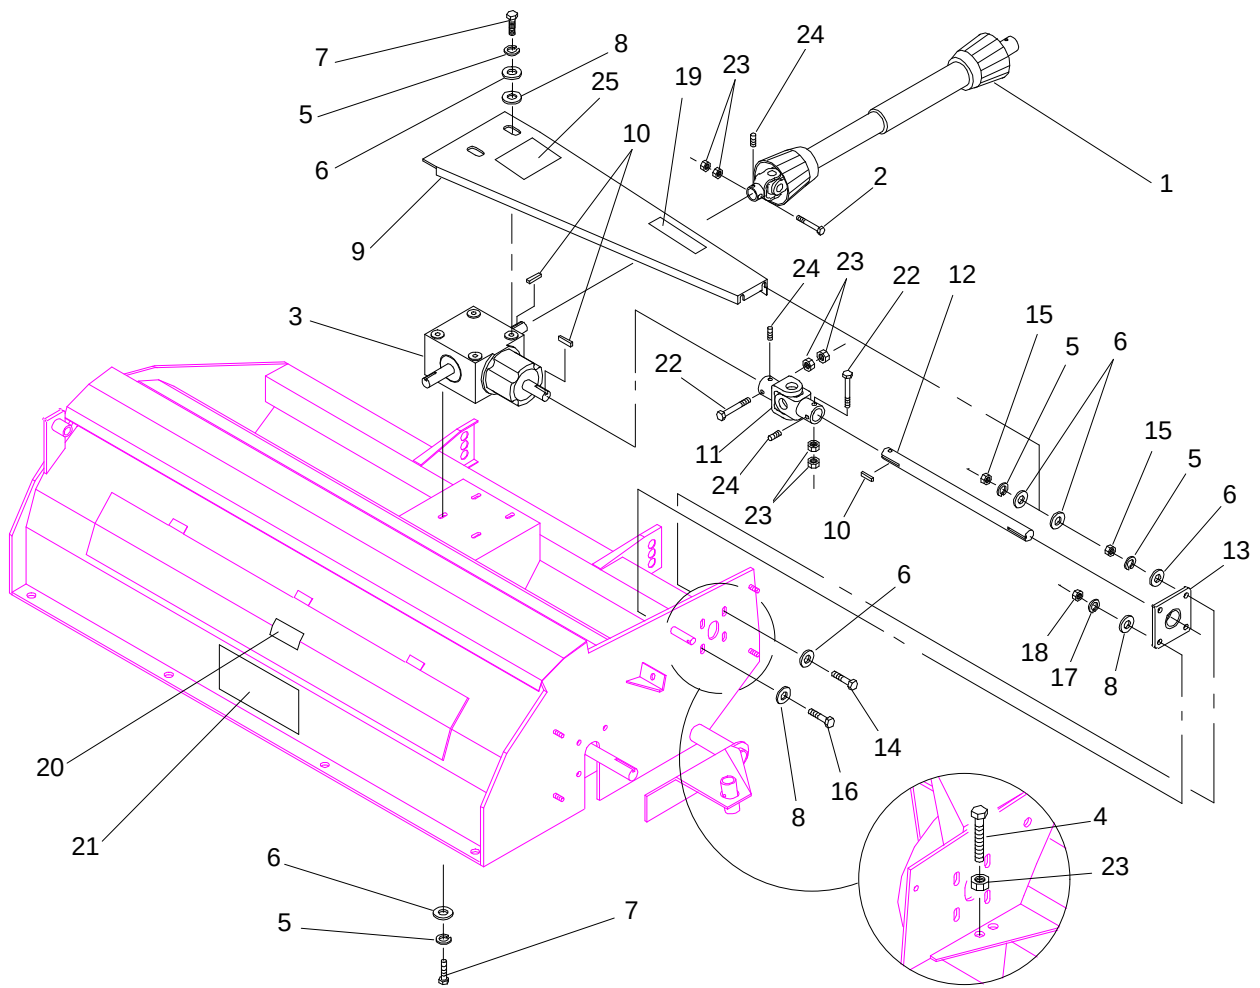


DRIVE SYSTEM

563-005

Ref. No.	Part No.	Description	No. Used
1	01-282-1340	PTO	1
2	322-12	Capscrew - Hex Hd.	1
3	01-267-1530	Gearbox	1
4	01-182-0514	Capscrew - Hex Hd.	1
5	3253-5	Lock Washer	10
6	3256-4	Flat Washer	14
7	323-6	Capscrew - Hex Hd.	6
8	3256-5	Flat Washer	6
9	56-304-0391	Shaft Guard	1
10	56-004-2401	Key	3
11	01-263-0010	U-joint	1
12	56-304-0341	Drive Shaft	1
13	01-100-0190	Bearing	1

Ref. No.	Part No.	Description	No. Used
14	01-182-0616	Capscrew - Hex Hd.	2
15	3217-7	Hex Nut	4
16	324-6	Capscrew - Hex Hd.	2
17	3253-6	Lock Washer	2
18	3217-8	Hex Nut	2
19	01-506-0130	Decal - Danger	1
20	01-506-0390	Decal - Danger	1
21	01-506-0500	Decal - Toro	1
22	322-11	Capscrew - Hex Hd.	2
23	3217-6	Hex Nut	7
24	01-163-0030	Set Screw	3
25	01-506-0160	Decal - Important	1

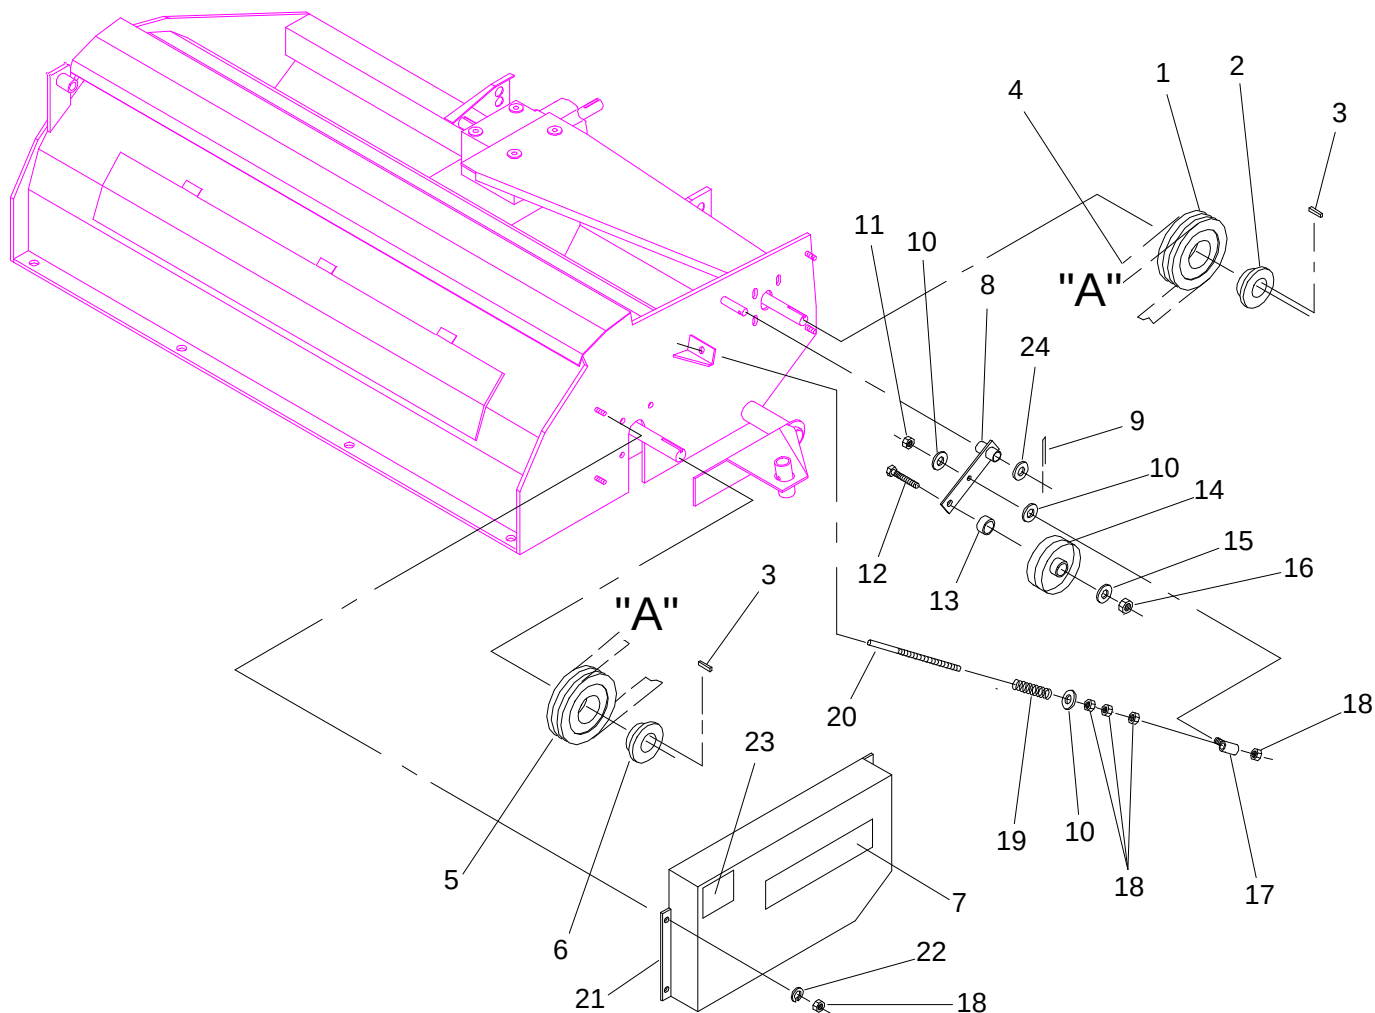


BELT DRIVE

563-006

Ref. No.	Part No.	Description	No. Used
1	01-260-0220	Sheave	1
2	01-260-0230	Bushing	1
3	56-004-2411	Key	2
4	01-264-0940	Belt	1
5	01-260-0030	Sheave	1
6	01-260-0240	Bushing	1
7	01-506-0810	Decal - Plug Pulverizer 2563	1
8	56-005-2151	Idler Arm	1
9	3272-21	Cotter Pin	1
10	3256-4	Flat Washer	3
11	3296-22	Lock Nut	1
12	325-10	Capscrew - Hex Hd.	1

Ref. No.	Part No.	Description	No. Used
13	56-004-2591	Idler Spacer	1
14	01-268-0090	Idler Pulley	1
15	3253-7	Lock Washer	1
16	3217-9	Hex Nut	1
17	56-005-2171	Pivot Bolt	1
18	3217-7	Hex Nut	8
19	01-261-0300	Spring	1
20	48-004-1711	Idler Rod	1
21	56-305-0101	Belt Guard	1
22	3253-5	Lock Washer	4
23	01-506-0040	Decal - Danger	1
24	01-168-1014	Machinery Bushing	1(var)

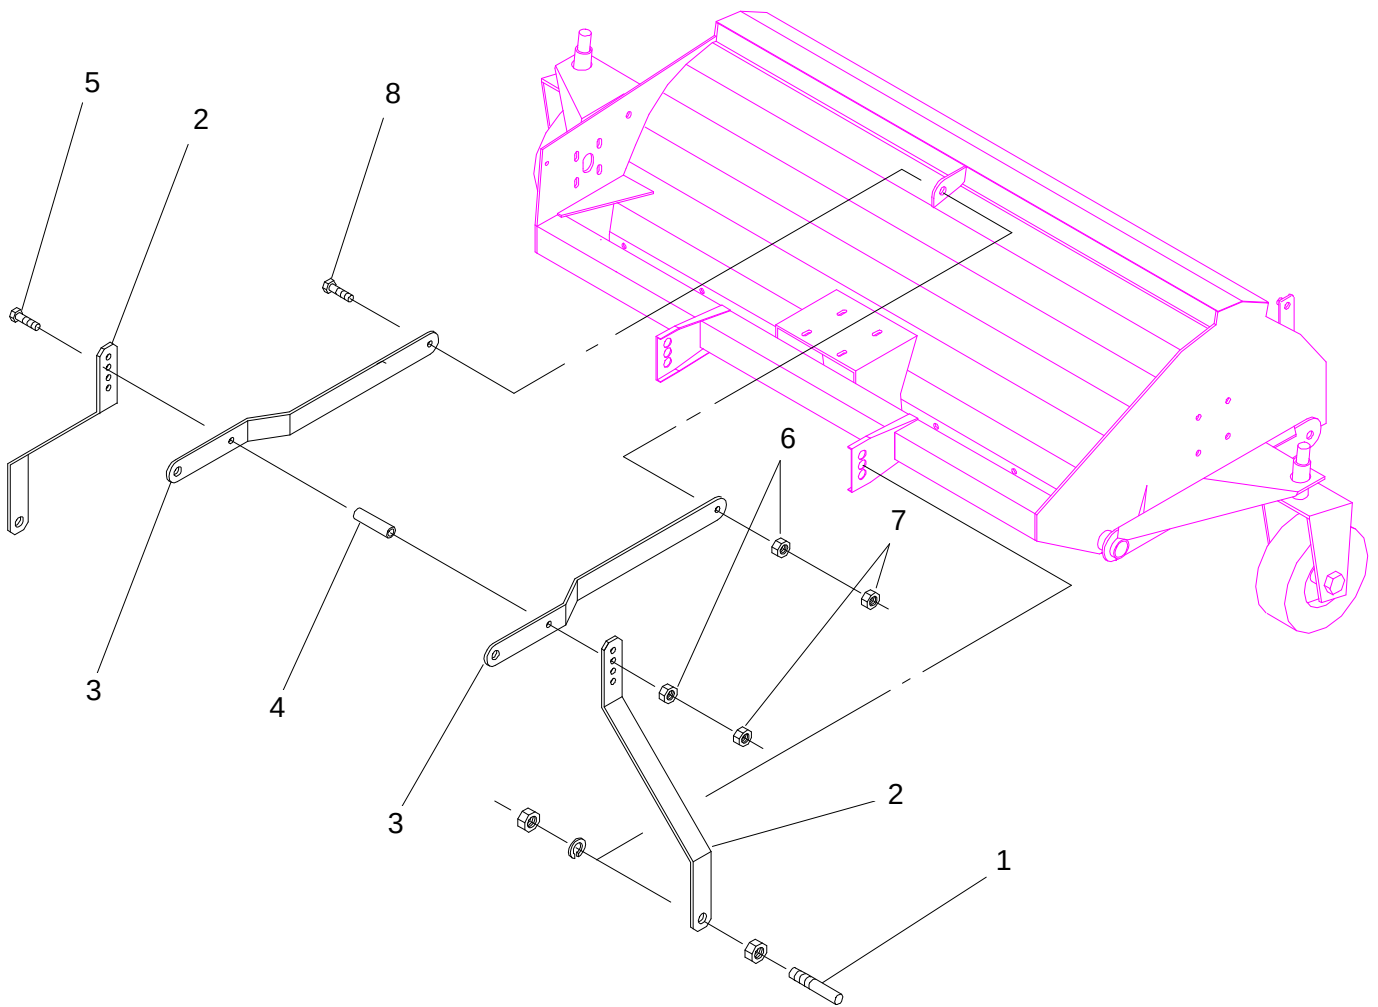


3 - POINT HITCH ASSEMBLY

563-007

Ref. No.	Part No.	Description	No. Used
1	01-252-0010	Hitch Pin w/nuts & washer	2
2	56-304-0361	Hitch Arm	2
3	56-304-0311	Support	2
4	56-304-0371	Hitch Spacer	1

Ref. No.	Part No.	Description	No. Used
5	325-20	Capscrew - Hex Hd.	1
6	3217-9	Hex Nut	2
7	3218-5	Jam Nut	2
8	325-9	Capscrew - Hex Hd.	4

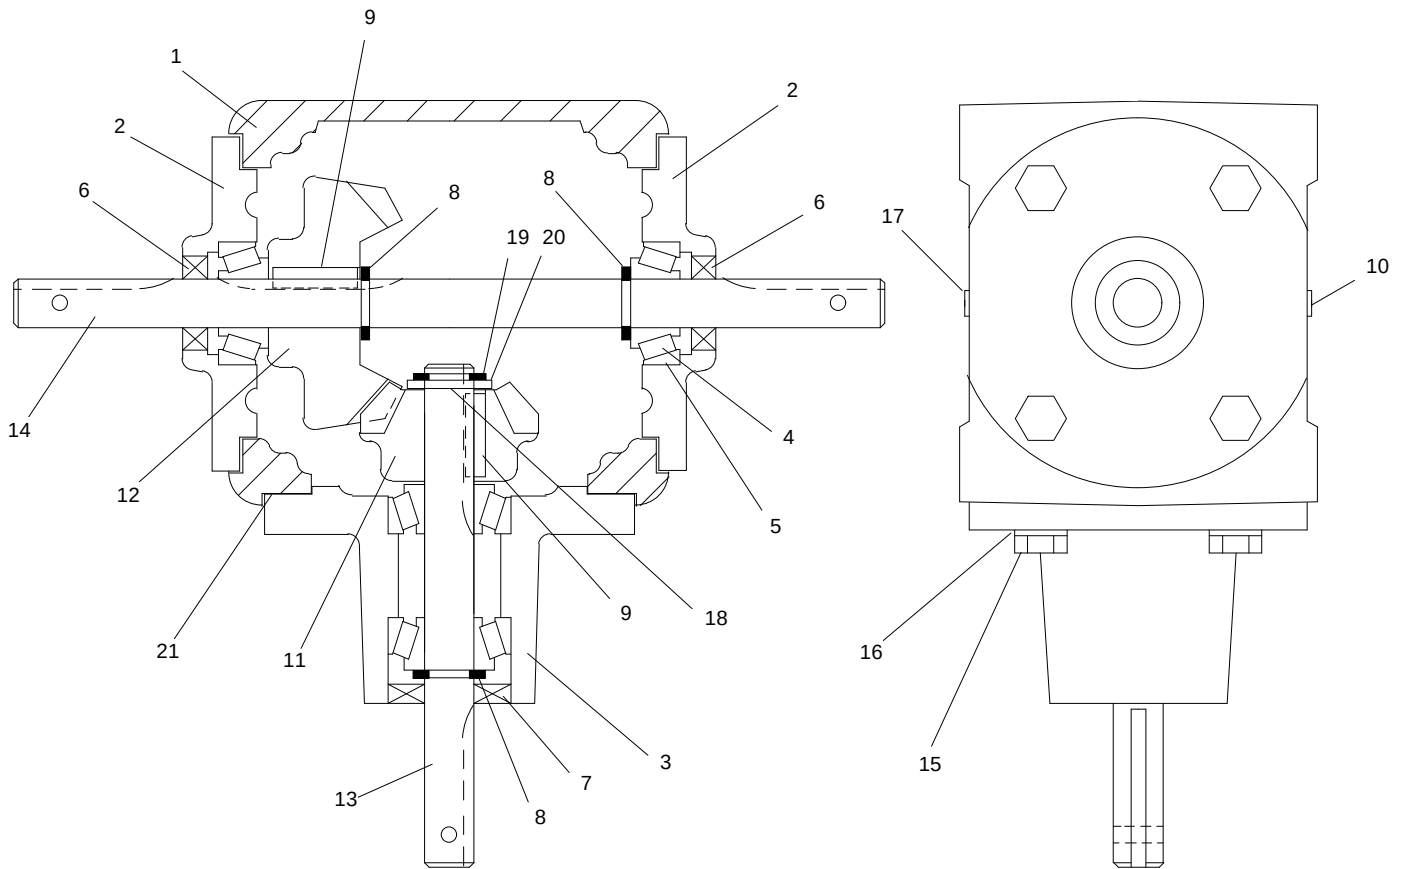

GEARBOX - MODEL NO. 01-267-1530

GB-1530

Ref. No.	Part No.	Description	No. Used
1	01-267-1220	Case - 3 Port	1
2	01-267-1230	Bearing Cap	2
3	01-267-1240	Quill	1
4	254-94	Bearing Cone	4
5	254-72	Bearing Cup	4
6	01-267-1270	Oil Seal	2
7	01-267-1280	Oil Seal	1
8	01-267-1290	Snap Ring	3
9	01-267-1300	Key	2
10	281-10	Pipe Plug	1
11	01-267-1310	Pinion	1
12	01-267-1320	Gear	1

Ref. No.	Part No.	Description	No. Used
13	01-267-1620	Shaft - Quill	1
14	01-267-1330	Shaft - Thru	1
15	322-3	Bolt	12
16	3253-4	Lock Washer	12
17	01-267-1340	Vent Plug	1
18	01-267-1350	Shim - .007	(var)
19	01-267-1360	Snap Ring	1
20	01-267-1370	Washer	1
21	01-267-1380	Shim - .005	(var)
21	01-267-1390	Shim - .0075	(var)
21	01-267-1400	Shim - .010	(var)

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-100-0180	Bearing	2	2	2	254-72	Bearing Cup	8	5	4
01-100-0190	Bearing	5	13	1	281-10	Pipe Plug	8	10	1
01-111-0050	Bearing	1	*	4	3217-6	Hex Nut	5	23	7
01-158-1260	Capscrew - Hex Hd.	1	11	2	3217-7	Hex Nut	2	13	7
01-161-0060	Pop Rivet	3	8	28	3217-7	Hex Nut	3	4	34
01-163-0030	Set Screw	5	24	3	3217-7	Hex Nut	4	6	4
01-166-1200	Flat Washer	1	6	4	3217-7	Hex Nut	5	15	4
01-168-1014	Machinery Bushing	6	24	1	3217-7	Hex Nut	6	18	8
01-168-1210	Machinery Bushing	1	15	4	3217-8	Hex Nut	5	18	2
01-168-1610	Machinery Bushing	1	3	7	3217-9	Hex Nut	2	6	8
01-168-1614	Machinery Bushing	1	8	3	3217-9	Hex Nut	6	16	1
01-182-0514	Capscrew - Hex Hd.	5	4	1	3217-9	Hex Nut	7	6	2
01-182-0616	Capscrew - Hex Hd.	5	14	2	3218-5	Jam Nut	7	7	2
01-189-0813	Lock Nut	1	9	2	3218-7	Jam Nut	1	4	4
01-215-0010	Grease Zerk	3	6	1	322-11	Capscrew - Hex Hd.	5	22	2
01-215-0050	Grease Zerk	3	5	2	322-12	Capscrew - Hex Hd.	5	2	1
01-252-0010	Hitch Pin	7	1	2	323-4	Capscrew - Hex Hd.	3	2	34
01-260-0030	Sheave	6	5	1	323-6	Capscrew - Hex Hd.	2	10	7
01-260-0220	Sheave	6	1	1	323-6	Capscrew - Hex Hd.	5	7	6
01-260-0230	Bushing	6	2	1	323-7	Capscrew - Hex Hd.	4	2	4
01-260-0240	Bushing	6	6	1	324-6	Capscrew - Hex Hd.	5	16	2
01-261-0300	Spring	6	19	1	325-10	Capscrew - Hex Hd.	6	12	1
01-263-0010	U-joint	5	11	1	325-20	Capscrew - Hex Hd.	7	5	1
01-264-0940	Belt	6	4	1	325-6	Capscrew - Hex Hd.	2	3	8
01-267-1220	Case - 3 Port	8	1	1	325-9	Capscrew - Hex Hd.	7	8	4
01-267-1230	Bearing Cap	8	2	2	3253-5	Lock Washer	2	12	7
01-267-1240	Quill	8	3	1	3253-5	Lock Washer	3	3	34
01-267-1270	Oil Seal	8	6	2	3253-5	Lock Washer	4	5	4
01-267-1280	Oil Seal	8	7	1	3253-5	Lock Washer	5	5	10
01-267-1290	Snap Ring	8	8	3	3253-5	Lock Washer	6	22	4
01-267-1300	Key	8	9	2	3253-6	Lock Washer	5	17	2
01-267-1310	Pinion	8	11	1	3253-7	Lock Washer	2	5	8
01-267-1320	Gear	8	12	1	3253-7	Lock Washer	6	15	1
01-267-1330	Shaft - Thru	8	14	1	3256-4	Flat Washer	2	11	7
01-267-1340	Vent Plug	8	17	1	3256-4	Flat Washer	4	3	4
01-267-1350	Shim - .007	8	18(var)		3256-4	Flat Washer	5	6	14
01-267-1360	Snap Ring	8	19	1	3256-4	Flat Washer	6	10	3
01-267-1370	Washer	8	20	1	3256-5	Flat Washer	4	4	4
01-267-1380	Shim - .005	8	21(var)		3256-5	Flat Washer	5	8	6
01-267-1390	Shim - .0075	8	21(var)		3256-6	Flat Washer	2	4	8
01-267-1400	Shim - .010	8	21(var)		322-3	Bolt	8	15	12
01-267-1530	Gearbox	5	3	1	3253-4	Lock Washer	8	16	12
01-267-1620	Shaft - Quill	8	13	1	3272-21	Cotter Pin	6	9	1
01-268-0090	Idler Pulley	6	14	1	3272-25	Cotter Pin	1	10	2
01-269-0710	Tire	1	12	2	328-2	Capscrew - Hex Hd.	1	5	1
01-269-0720	Tube	1	*	2	3296-22	Lock Nut	6	11	1
01-269-0730	Wheel	1	13	2	48-004-1711	Idler Rod	6	20	1
01-269-1200	Axle Bushing	1	14	2	56-004-2242	Rubber Flap	2	8	1
01-270-1350	Rubber Latch	3	7	4	56-004-2331	Blade	3	1	34
01-279-0010	Fingers	2	7	70	56-004-2401	Key	5	10	3
01-282-1340	PTO	5	1	1	56-004-2411	Key	6	3	2
01-506-0040	Decal - Danger	6	23	1	56-004-2471	Rubber Holder	2	9	1
01-506-0130	Decal - Danger	5	19	1	56-004-2591	Idler Spacer	6	13	1
01-506-0160	Decal - Important	5	25	1	56-004-2741	Drag Mat	4	1	1
01-506-0180	Decal - Height Adj.	1	17	1	56-005-2112	Reel	2	1	1
01-506-0380	Decal - Danger	3	9	1	56-005-2132	Jack	1	2	1
01-506-0390	Decal - Danger	5	20	1	56-005-2151	Idler Arm	6	8	1
01-506-0810	Decal - Plug Pulverizer 2563	1	16	1	56-005-2171	Pivot Bolt	6	17	1
01-506-0810	Decal - Plug Pulverizer 2563	6	7	1	56-005-3111	Blade Cover	3	11	1
254-94	Bearing Cone	8	4	4	56-304-0311	Support	7	3	2

* Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
56-304-0341	Drive Shaft	5	12	1	56-305-0121	Clean Out Lid	3	10	1
56-304-0361	Hitch Arm	7	2	2	58-6520	Decal - Grease Gun	*	*	7
56-304-0371	Hitch Spacer	7	4	1	62-7400	Decal - Toro	1	18	1
56-304-0391	Shaft Guard	5	9	1	62-7400	Decal - Toro	5	21	1
56-305-0101	Belt Guard	6	21	1	67-005-1472	Wheel Mount	1	7	2
56-305-0113	Main Frame	1	1	1					

* Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The Plug Pulverizer 2563 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Plug Pulverizer 2563, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the unit.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Wheel & Jack Assembly	1	Belt Drive	6
Reel Assembly	2	3-Point Hitch Assembly	7
Main Frame Assembly	3	Gearbox - Model No. 01-267-1530	8
Drag Mat Assembly	4	Part Number Index	9 - 10
Drive System	5		

MAINTENANCE RECORD

[illegible]