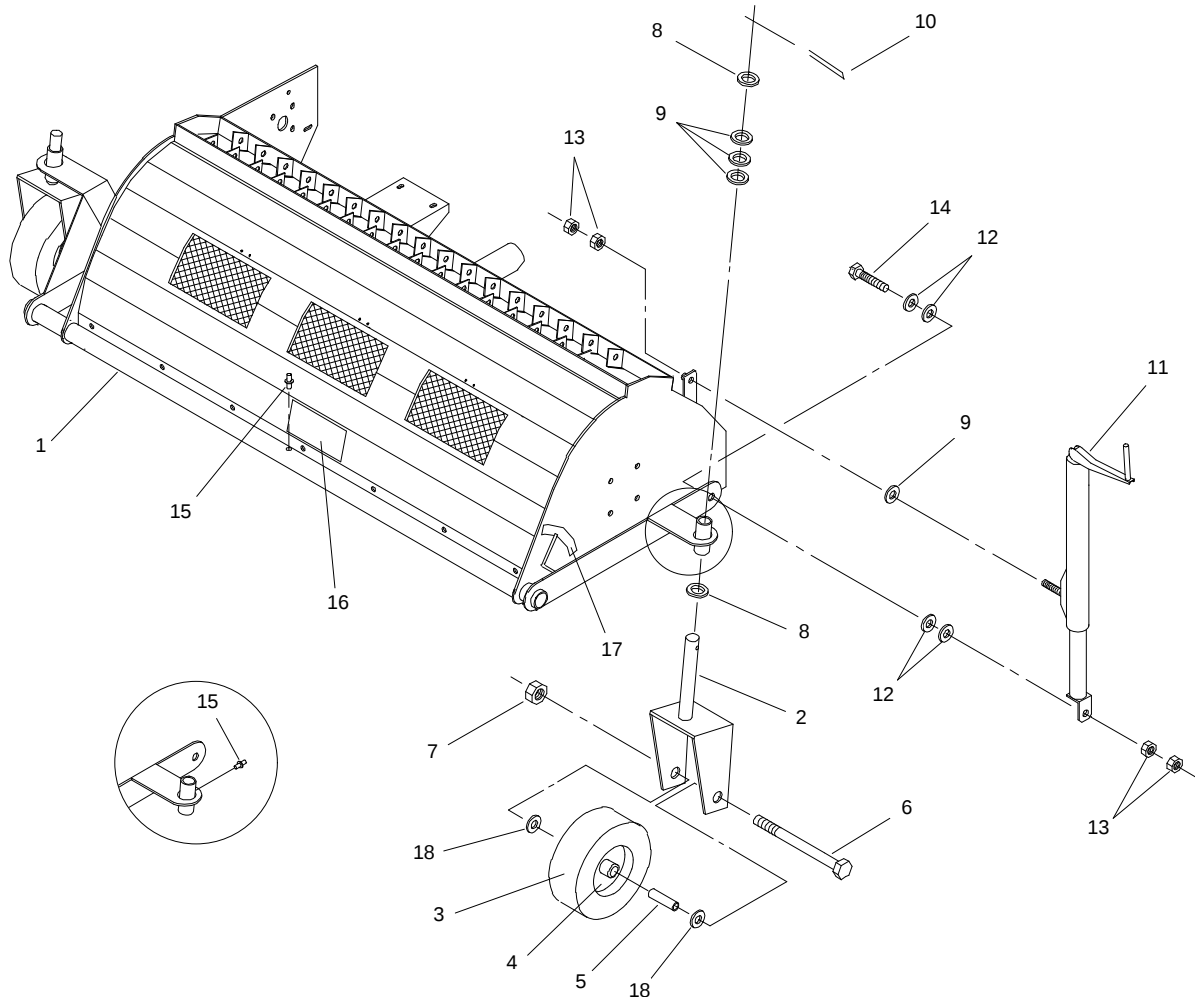


TORO®


MODEL NO. 44892 - 20101 & UP

**PARTS
CATALOG****PLUG PULVERIZER 2560****WHEEL & SCREW JACK ASSEMBLY**

56-001

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	56-005-2103	Main Frame	1	11	56-005-2132	Screw Jack	1
2	67-005-1472	Wheel Mount	2	12	01-166-1200	Flat Washer	4(var)
3	01-269-0710	Tire	2	13	3218-7	Jam Nut	4
*	01-269-0720	Tube	2	14	328-2	Capscrew - Hex Hd.	1
4	01-269-0730	Wheel	2	15	01-215-0050	Grease Zerk	3
*	01-111-0050	Wheel Bearing	4	16	62-7400	Decal - Toro	1
5	01-269-1200	Axle Bushing	2	17	01-506-0180	Decal - Height Adj.	1
6	01-158-1260	Capscrew - Hex Hd.	2	18	01-168-1210	Machinery Bushing	4
7	01-189-0813	Lock Nut	2				
8	01-168-1614	Machinery Bushing	4				
9	01-168-1610	Machinery Bushing	7(var)	*	01-269-0750	Wheel, complete (Incl. Ref. #3,4,5)	2
10	3272-25	Cotter Pin	2				

* Not Illustrated

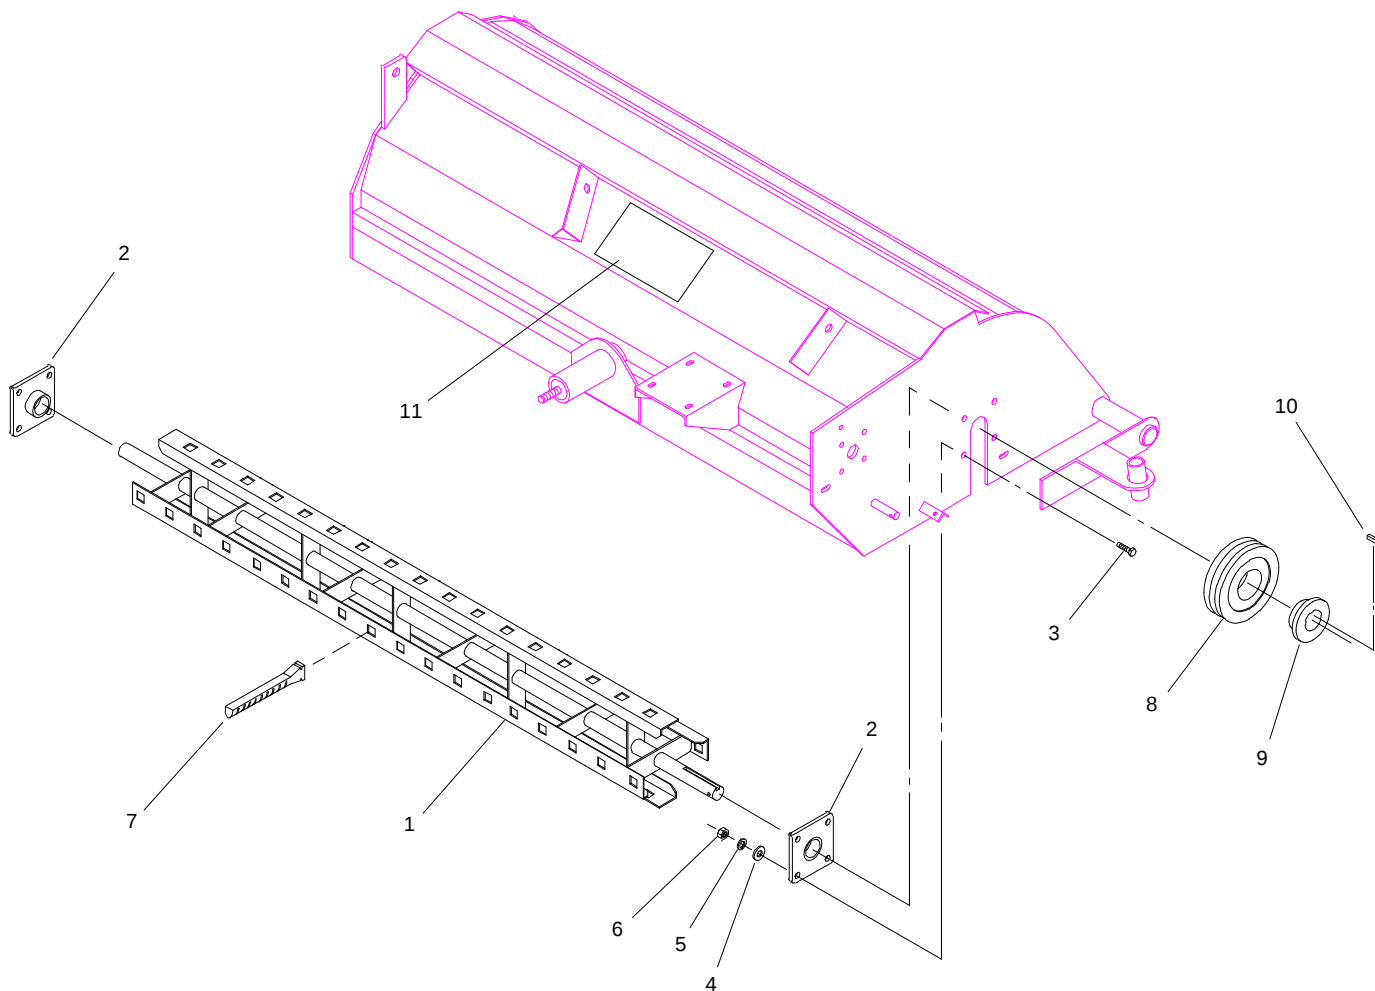


REEL ASSEMBLY

56-002

Ref. No.	Part No.	Description	No. Used
1	56-005-2112	Reel	1
2	01-100-0180	Bearing	2
3	325-6	Capscrew - Hex Hd.	8
4	3256-6	Flat Washer	8
5	3253-7	Lock Washer	8
6	3217-9	Hex Nut	8

Ref. No.	Part No.	Description	No. Used
7	01-279-0010	Finger	70
8	01-260-0220	Sheave	1
9	01-260-0790	Bushing	1
10	56-004-2411	Key	1
11	62-7400	Decal - Toro	1

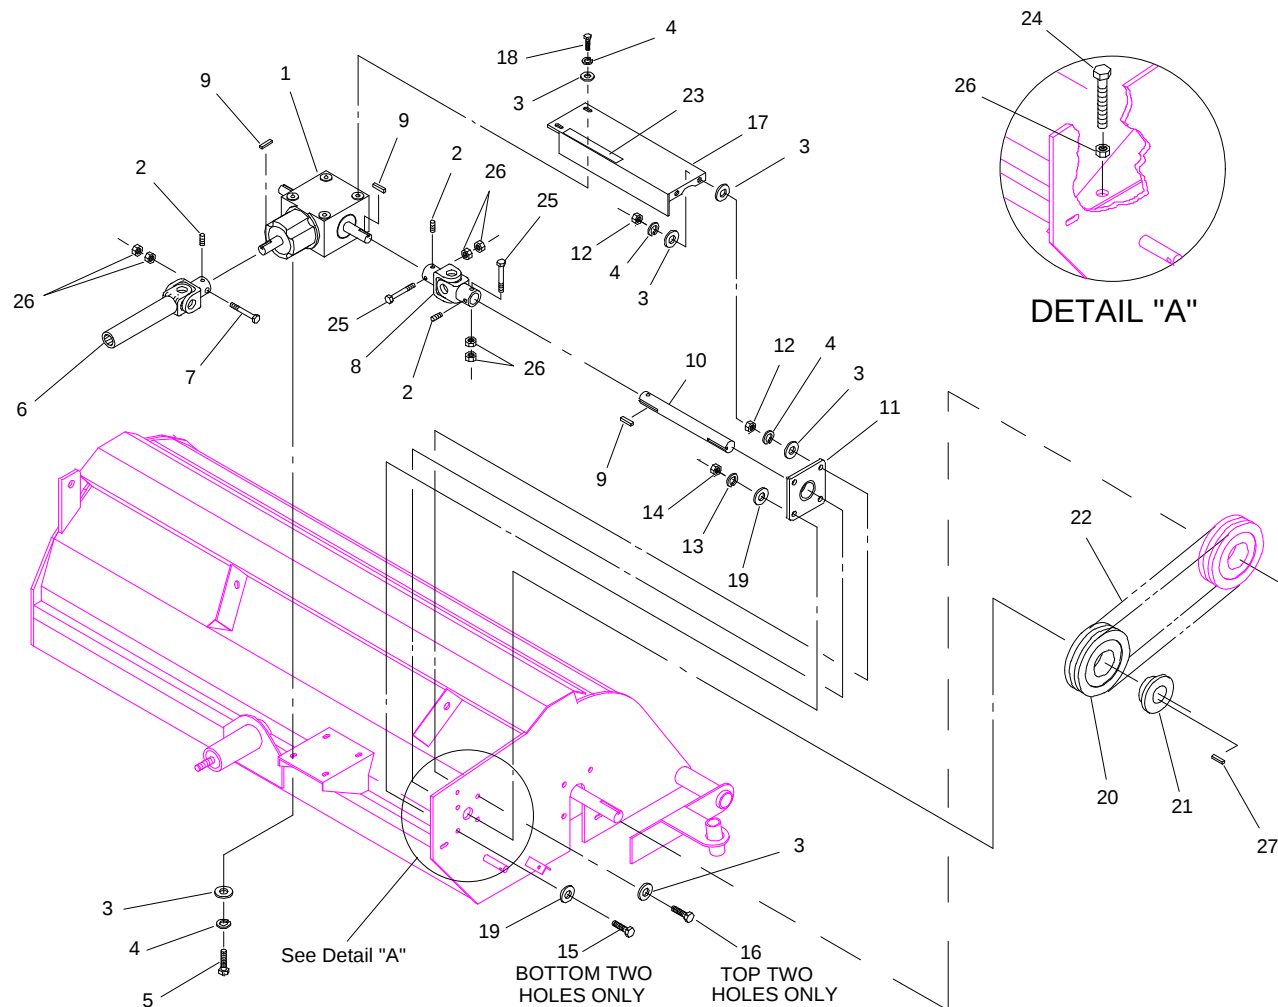


GEARBOX MOUNTING

56-003

Ref. No.	Part No.	Description	No. Used
1	01-267-1530	Gearbox	1
2	01-163-0030	Set Screw	3
3	3256-4	Flat Washer	12
4	3253-5	Lock Washer	10
5	323-7	Capscrew - Hex Hd.	4
6	01-282-0910	PTO	1
7	322-13	Capscrew - Hex Hd.	1
8	01-263-0010	U-Joint	1
9	56-004-2401	Key	4
10	56-004-2421	Drive Shaft	1
11	01-100-0190	Bearing	1
12	3217-7	Hex Nut	6
13	3253-6	Lock Washer	2
14	3217-8	Hex Nut	2

Ref. No.	Part No.	Description	No. Used
15	324-6	Capscrew - Hex Hd.	2
16	01-182-0616	Capscrew - Hex Hd.	2
17	56-004-3001	PTO Guard	1
18	323-6	Capscrew - Hex Hd.	2
19	3256-5	Flat Washer	4
20	01-260-0220	Sheave	1
21	01-260-0230	Bushing	1
22	01-264-0690	Belt	1
23	01-506-0130	Decal - Danger	1
24	01-182-0514	Capscrew - Hex Hd.	1
25	322-11	Capscrew - Hex Hd.	2
26	3217-6	Hex Nut	7
27	56-004-2411	Key	1

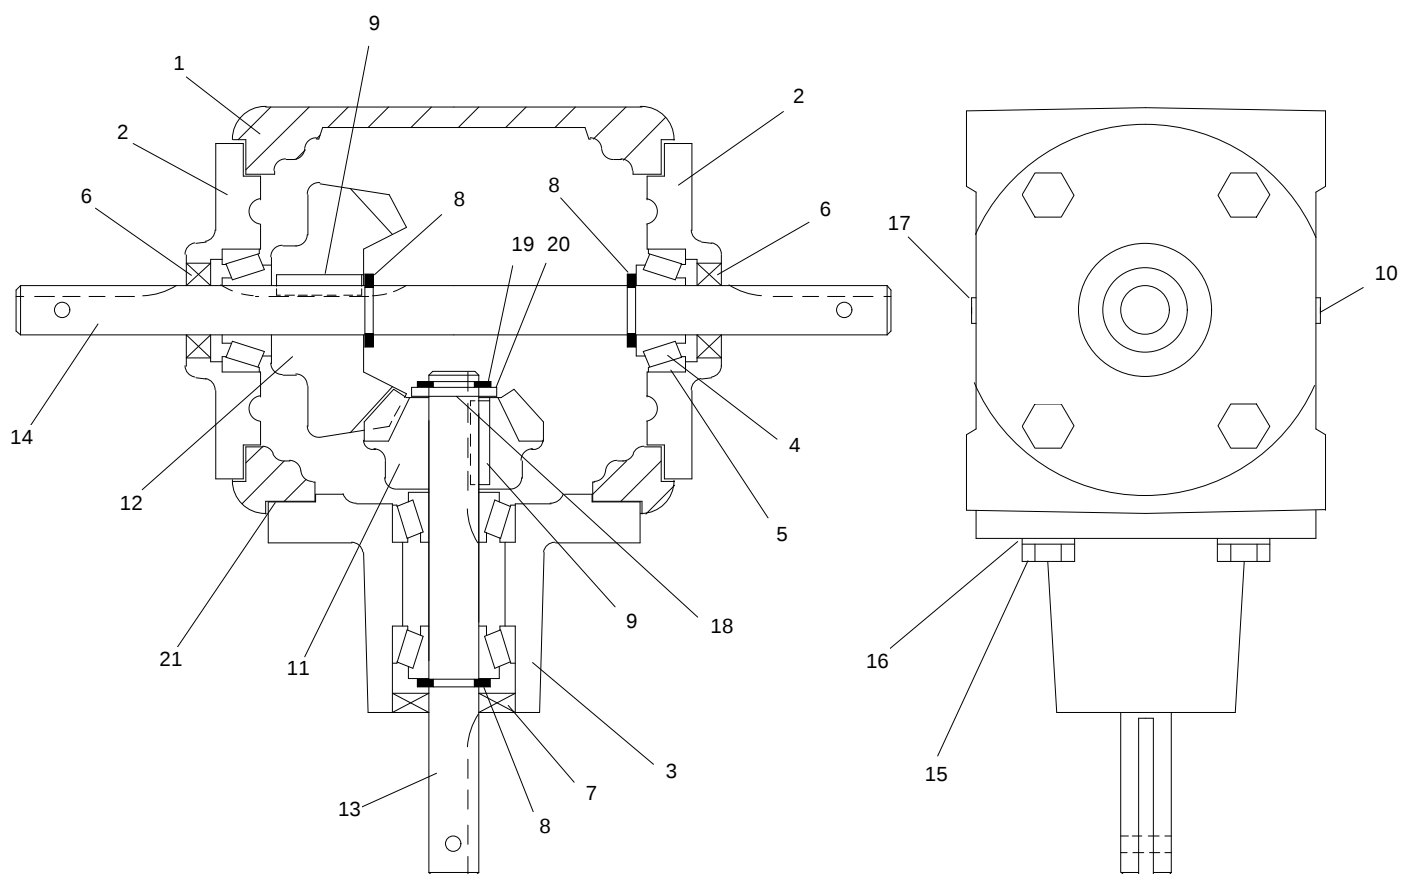


GEARBOX - NO. 01-267-1530

GB-1530

Ref. No.	Part No.	Description	No. Used
1	01-267-1220	Case - 3 Port	1
2	01-267-1230	Bearing Cap	2
3	01-267-1240	Quill	1
4	254-94	Bearing Cone	4
5	254-72	Bearing Cup	4
6	01-267-1270	Oil Seal	2
7	01-267-1280	Oil Seal	1
8	01-267-1290	Snap Ring	3
9	01-267-1300	Key	2
10	281-10	Pipe Plug	1
11	01-267-1310	Pinion	1
12	01-267-1320	Gear	1

Ref. No.	Part No.	Description	No. Used
13	01-267-1620	Shaft - Quill	1
14	01-267-1330	Shaft - Thru	1
15	322-3	Bolt	12
16	3253-4	Lock Washer	12
17	01-267-1340	Vent Plug	1
18	01-267-1350	Shim - .007	(var)
19	01-267-1360	Snap Ring	1
20	01-267-1370	Washer	1
21	01-267-1380	Shim - .005	(var)
21	01-267-1390	Shim - .0075	(var)
21	01-267-1400	Shim - .010	(var)

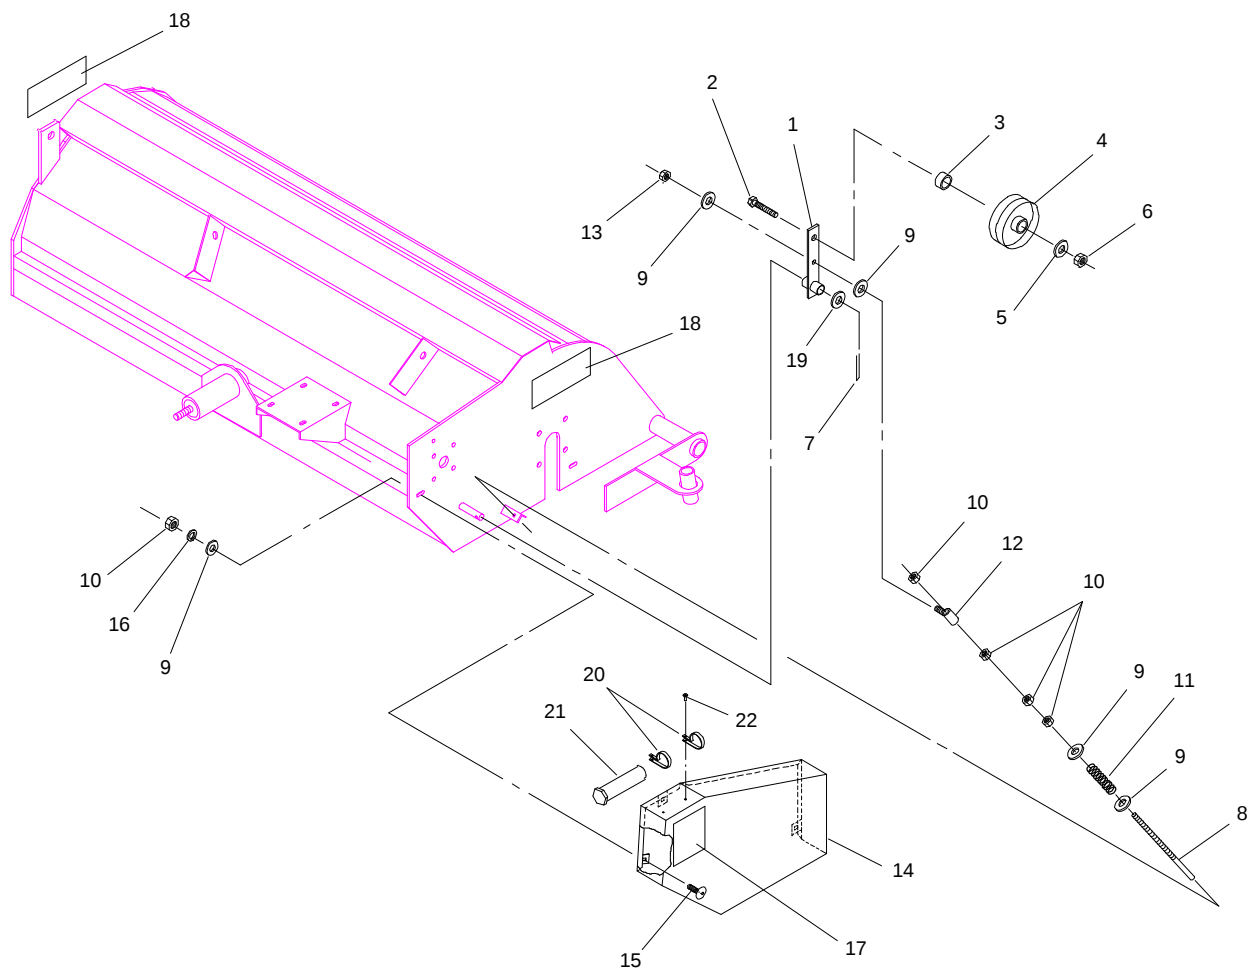


IDLER & BELT GUARD ASSEMBLY

56-004

Ref. No.	Part No.	Description	No. Used
1	56-005-2151	Idler Arm	1
2	325-10	Capscrew - Hex Hd.	1
3	56-004-2591	Idler Spacer	1
4	01-268-0090	Idler Pulley	1
5	3253-7	Lock Washer	1
6	3217-9	Hex Nut	1
7	3272-21	Cotter Pin	1
8	48-004-1711	Idler Rod	1
9	3256-4	Flat Washer	7
10	3217-7	Hex Nut	7
11	01-261-0300	Spring	1

Ref. No.	Part No.	Description	No. Used
12	56-005-2171	Pivot Bolt	1
13	3296-39	Lock Nut	1
14	56-005-2122	Belt Guard	1
15	3231-2	Carriage Bolt	3
16	3253-5	Lock Washer	3
17	01-506-0040	Decal - Danger	1
18	01-506-0800	Decal - Model No.	2
19	01-168-1014	Machinery Bushing	1
20	2412-133	R-Clamp	2
21	74-0720	Manual Tube	1
22	01-161-0030	Pop Rivet	2

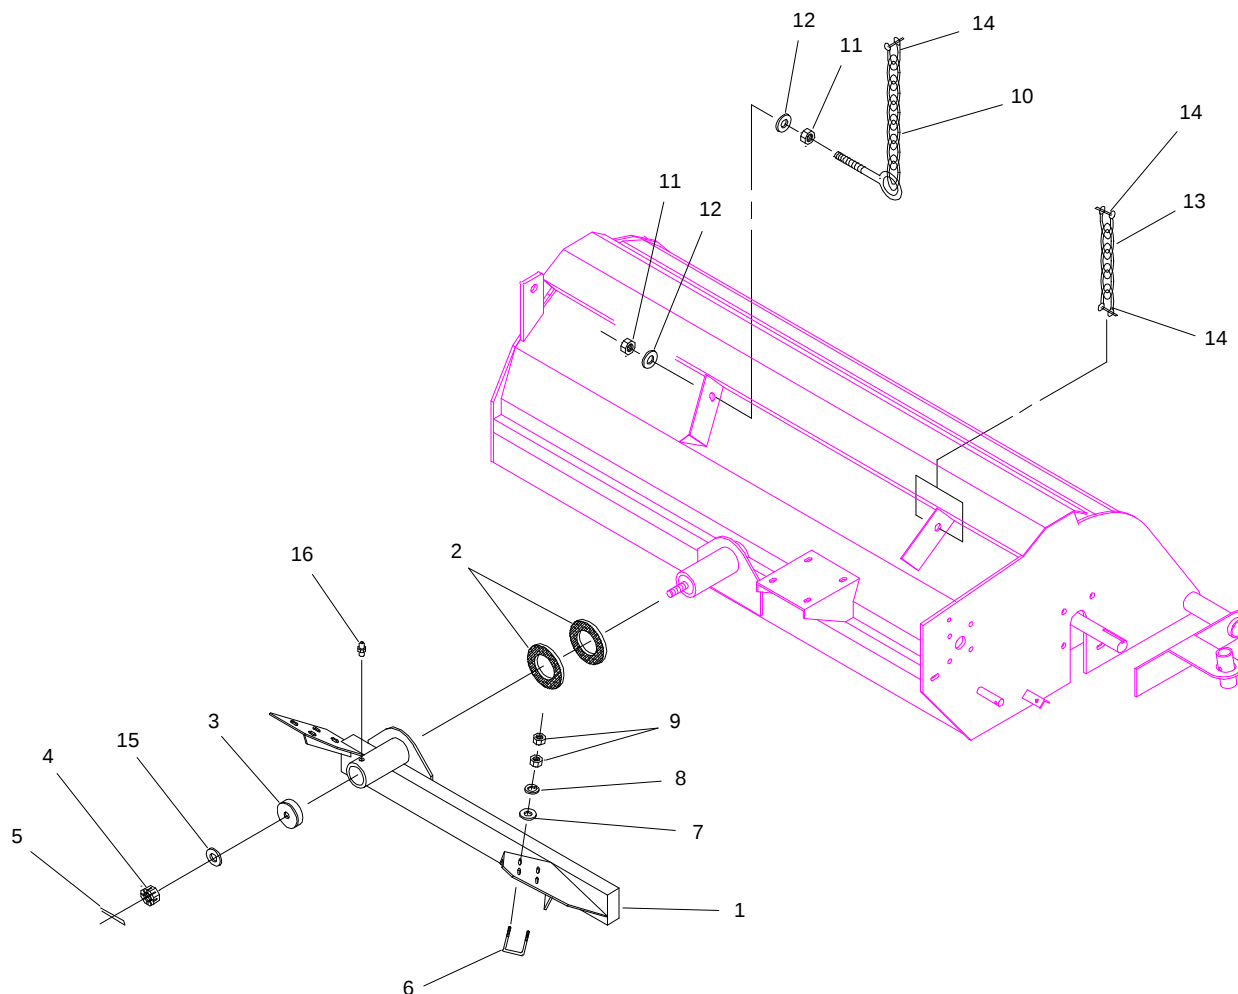


PIVOT ARM & LIFT CHAIN ASSEMBLY

56-005

Ref. No.	Part No.	Description	No. Used
1	56-005-2142	Pivot Arm	1
2	41-004-1061	Pivot Washer	2
3	56-005-2161	Pivot End Cap	1
4	01-190-1210	Castle Nut	1
5	3272-25	Cotter Pin	1
6	75-004-0361	U-Bolt	4
7	3256-4	Flat Washer	8
8	3253-5	Lock Washer	8

Ref. No.	Part No.	Description	No. Used
9	3217-7	Hex Nut	16
10	56-005-2181	Adjustment Chain	1
11	3217-9	Hex Nut	2
12	3256-6	Flat Washer	2
13	56-004-2501	Chain Short	1
14	01-170-0130	Anchor Shackle	3
15	01-168-1218	Machinery Bushing	1
16	01-215-0010	Grease Zerk	1

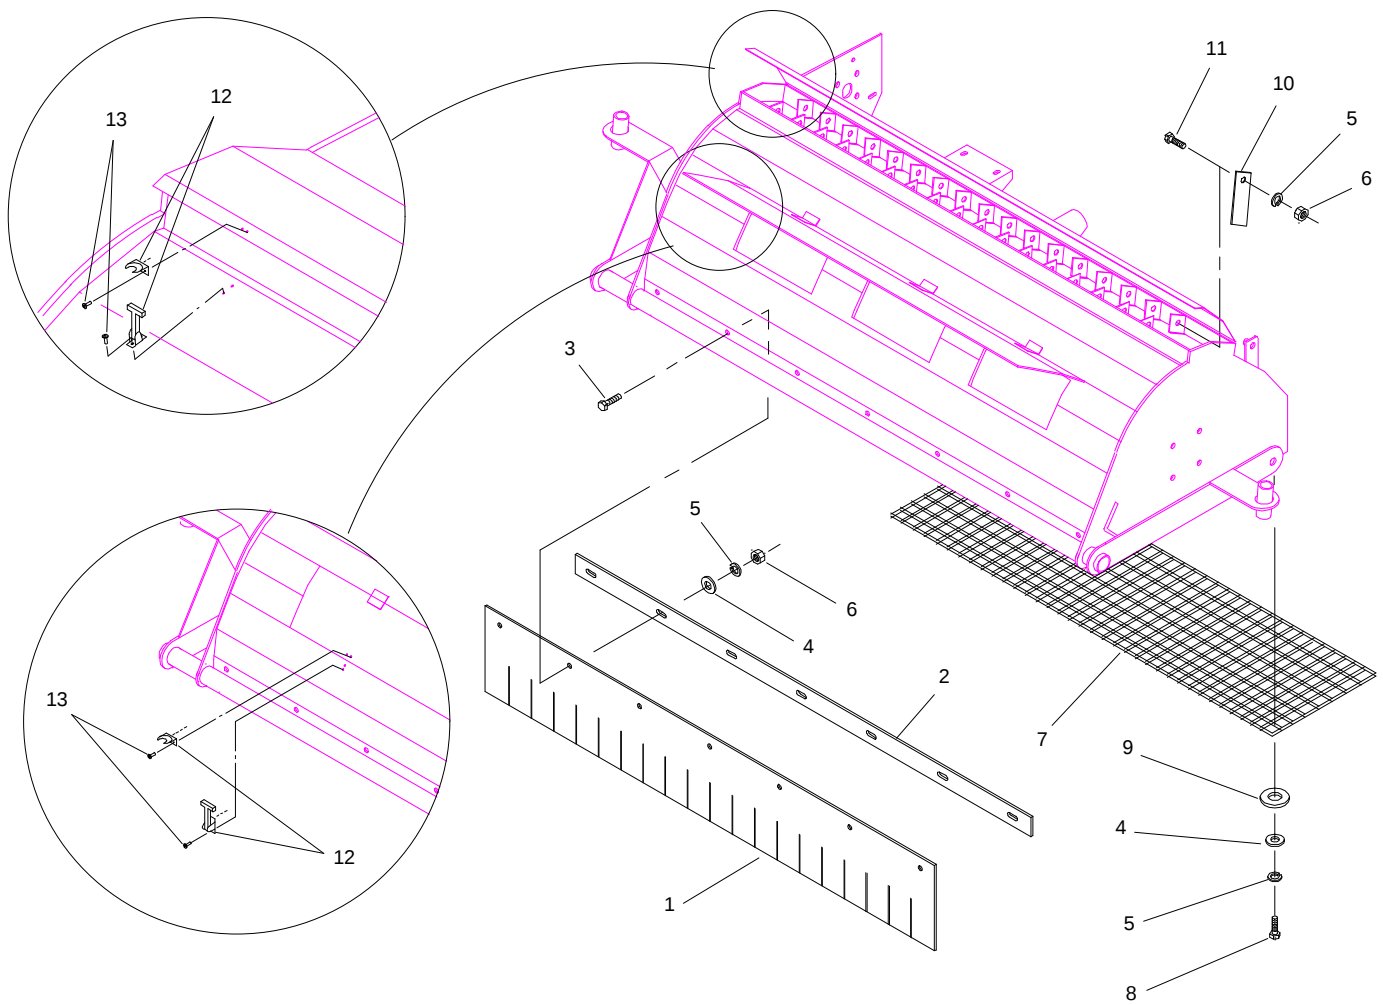


BLADE, FLAP & DRAG MAT

56-006

Ref. No.	Part No.	Description	No. Used
1	56-004-2242	Rubber Flap	1
2	56-004-2471	Rubber Holder	1
3	323-6	Capscrew - Hex Hd.	7
4	3256-4	Flat Washer	11
5	3253-5	Lock Washer	45
6	3217-7	Hex Nut	41
7	56-004-2741	Drag Mat	1

Ref. No.	Part No.	Description	No. Used
8	323-7	Capscrew - Hex Hd.	4
9	3256-5	Flat Washer	4
10	56-004-2331	Blade	34
11	323-4	Capscrew - Hex Hd.	34
12	01-270-1350	Rubber Latch	4
13	01-161-0060	Pop Rivet	16

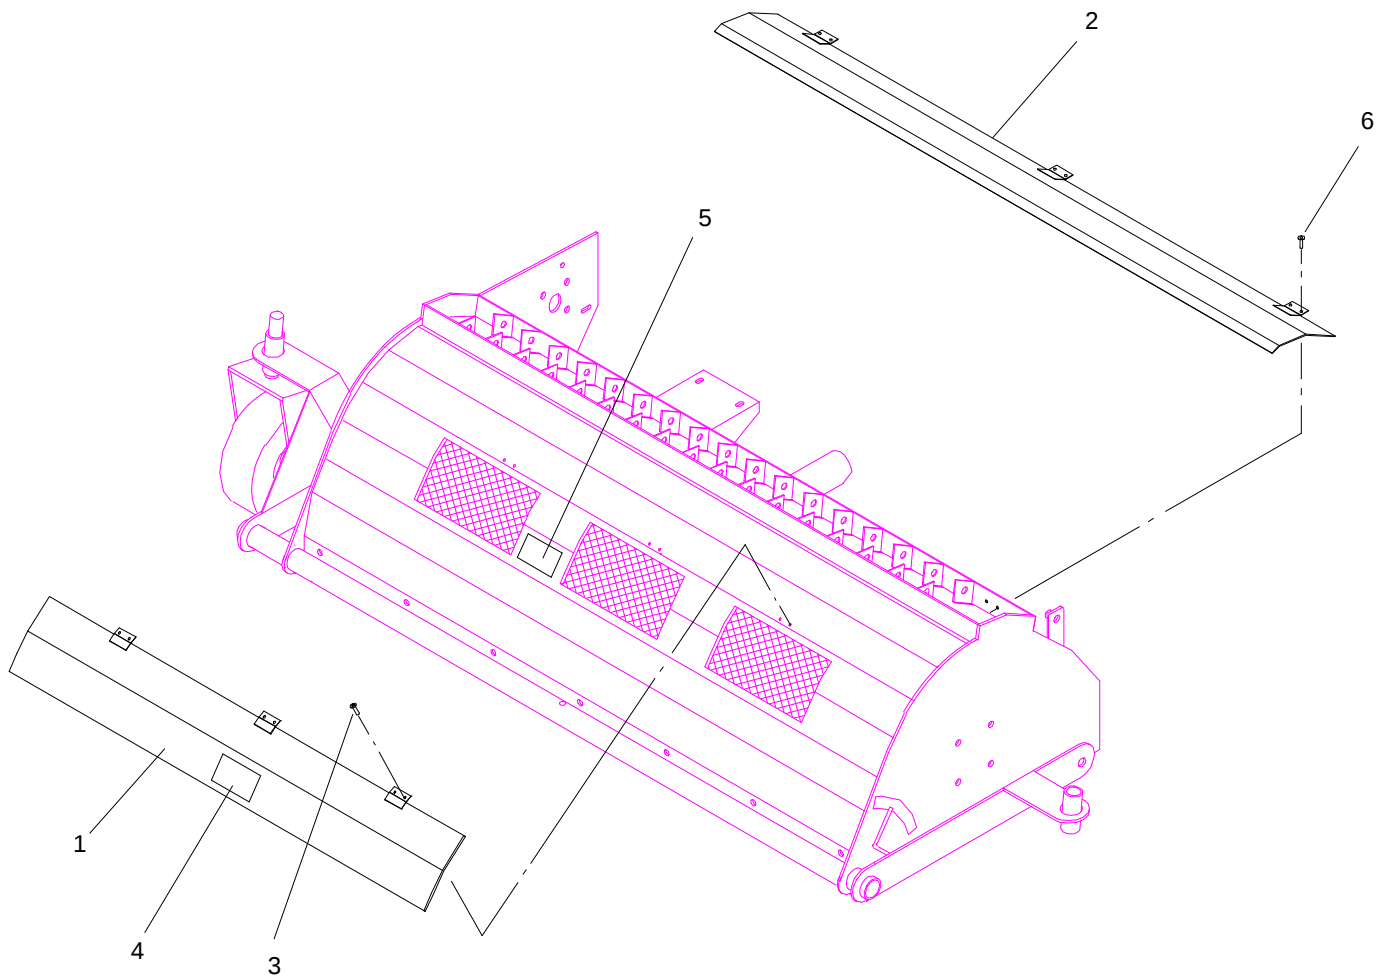

CLEAN OUT LID & BLADE COVER

56-007

Ref. No.	Part No.	Description	No. Used
1	56-005-3101	Clean Out Lid	1
2	56-005-3111	Blade Cover	1
3	01-161-0060	Pop Rivet	6

Ref. No.	Part No.	Description	No. Used
4	01-506-0390	Decal - Danger	1
5	01-506-0380	Decal - Danger	1
6	01-161-0090	Pop Rivet	6

PART NUMBER INDEX

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
01-100-0180	Bearing	2	2	2	62-7400	Decal - Toro	1	16	1
01-100-0190	Bearing	3	11	1	62-7400	Decal - Toro	2	11	1
01-111-0050	Wheel Bearing	1	*	4	01-506-0800	Decal - Model No.	5	18	2
01-158-1260	Capscrew - Hex Hd.	1	6	2	2412-133	R-Clamp	5	20	2
01-161-0030	Pop Rivet	5	22	2	254-72	Bearing Cup	4	5	4
01-161-0060	Pop Rivet	7	13	16	254-94	Bearing Cone	4	4	4
01-161-0060	Pop Rivet	8	3	6	281-10	Pipe Plug	4	10	1
01-161-0090	Pop Rivet	8	6	6	3217-6	Hex Nut	3	26	7
01-163-0030	Set Screw	3	2	3	3217-7	Hex Nut	3	12	6
01-166-1200	Flat Washer	1	12	4	3217-7	Hex Nut	5	10	7
01-168-1014	Machinery Bushing	5	19	1	3217-7	Hex Nut	6	9	16
01-168-1210	Machinery Bushing	1	18	4	3217-7	Hex Nut	7	6	41
01-168-1218	Machinery Bushing	6	15	1	3217-8	Hex Nut	3	14	2
01-168-1610	Machinery Bushing	1	9	7	3217-9	Hex Nut	2	6	8
01-168-1614	Machinery Bushing	1	8	4	3217-9	Hex Nut	5	6	1
01-170-0130	Anchor Shackle	6	14	3	3217-9	Hex Nut	6	11	2
01-182-0514	Capscrew - Hex Hd.	3	24	1	3218-7	Jam Nut	1	13	4
01-182-0616	Capscrew - Hex Hd.	3	16	2	322-11	Capscrew - Hex Hd.	3	25	2
01-189-0813	Lock Nut	1	7	2	322-13	Capscrew - Hex Hd.	3	7	1
01-190-1210	Castle Nut	6	4	1	322-3	Bolt	4	15	12
01-215-0010	Grease Zerk	6	16	1	323-4	Capscrew - Hex Hd.	7	11	34
01-215-0050	Grease Zerk	1	15	3	323-6	Capscrew - Hex Hd.	3	18	2
01-260-0220	Sheave	2	8	1	323-6	Capscrew - Hex Hd.	7	3	7
01-260-0220	Sheave	3	20	1	323-7	Capscrew - Hex Hd.	3	5	4
01-260-0230	Bushing	3	21	1	323-7	Capscrew - Hex Hd.	7	8	4
01-260-0790	Bushing	2	9	1	3231-2	Carriage Bolt	5	15	3
01-261-0300	Spring	5	11	1	324-6	Capscrew - Hex Hd.	3	15	2
01-263-0010	U-Joint	3	8	1	325-10	Capscrew - Hex Hd.	5	2	1
01-264-0690	Belt	3	22	1	325-6	Capscrew - Hex Hd.	2	3	8
01-267-1220	Case - 3 Port	4	1	1	3253-4	Lock Washer	4	16	12
01-267-1230	Bearing Cap	4	2	2	3253-5	Lock Washer	3	4	10
01-267-1240	Quill	4	3	1	3253-5	Lock Washer	5	16	3
01-267-1270	Oil Seal	4	6	2	3253-5	Lock Washer	6	8	8
01-267-1280	Oil Seal	4	7	1	3253-5	Lock Washer	7	5	45
01-267-1290	Snap Ring	4	8	3	3253-6	Lock Washer	3	13	2
01-267-1300	Key	4	9	2	3253-7	Lock Washer	2	5	8
01-267-1310	Pinion	4	11	1	3253-7	Lock Washer	5	5	1
01-267-1320	Gear	4	12	1	3256-4	Flat Washer	3	3	12
01-267-1330	Shaft - Thru	4	14	1	3256-4	Flat Washer	5	9	7
01-267-1340	Vent Plug	4	17	1	3256-4	Flat Washer	6	7	8
01-267-1350	Shim - .007	4	18	var	3256-4	Flat Washer	7	4	11
01-267-1360	Snap Ring	4	19	1	3256-5	Flat Washer	3	19	4
01-267-1370	Washer	4	20	1	3256-5	Flat Washer	7	9	4
01-267-1380	Shim - .005	4	21	var	3256-6	Flat Washer	2	4	8
01-267-1390	Shim - .0075	4	21	var	3256-6	Flat Washer	6	12	2
01-267-1400	Shim - .010	4	21	var	3272-21	Cotter Pin	5	7	1
01-267-1530	Gearbox	3	1	1	3272-25	Cotter Pin	1	10	2
01-267-1620	Shaft - Quill	4	13	1	3272-25	Cotter Pin	6	5	1
01-268-0090	Idler Pulley	5	4	1	328-2	Capscrew - Hex Hd.	1	14	1
01-269-0710	Tire	1	3	2	3296-39	Lock Nut	5	13	1
01-269-0720	Tube	1	*	2	41-004-1061	Pivot Washer	6	2	2
01-269-0730	Wheel	1	4	2	48-004-1711	Idler Rod	5	8	1
01-269-0750	Wheel, complete	1	*	2	56-004-2242	Rubber Flap	7	1	1
01-269-1200	Axle Bushing	1	5	2	56-004-2331	Blade	7	10	34
01-270-1350	Rubber Latch	7	12	4	56-004-2401	Key	3	9	4
01-279-0010	Finger	2	7	70	56-004-2411	Key	2	10	1
01-282-0910	PTO	3	6	1	56-004-2411	Key	3	27	1
01-506-0040	Decal - Danger	5	17	1	56-004-2421	Drive Shaft	3	10	1
01-506-0130	Decal - Danger	3	23	1	56-004-2471	Rubber Holder	7	2	1
01-506-0180	Decal - Height Adj.	1	17	1	56-004-2501	Chain Short	6	13	1
01-506-0380	Decal - Danger	8	5	1	56-004-2591	Idler Spacer	5	3	1
01-506-0390	Decal - Danger	8	4	1	56-004-2741	Drag Mat	7	7	1

* Not Illustrated

PART NUMBER INDEX (Continued)

Part No.	Description	Pg. No.	Ref. No.	Qty.	Part No.	Description	Pg. No.	Ref. No.	Qty.
56-004-3001	PTO Guard	3	17	1	56-005-2171	Pivot Bolt	5	12	1
56-005-2103	Main Frame	1	1	1	56-005-2181	Adjustment Chain	6	10	1
56-005-2112	Reel	2	1	1	56-005-3101	Clean Out Lid	8	1	1
56-005-2122	Belt Guard	5	14	1	56-005-3111	Blade Cover	8	2	1
56-005-2132	Screw Jack	1	11	1	67-005-1472	Wheel Mount	1	2	2
56-005-2142	Pivot Arm	6	1	1	74-0720	Manual Tube	5	21	1
56-005-2151	Idler Arm	5	1	1	75-004-0361	U-Bolt	6	6	4
56-005-2161	Pivot End Cap	6	3	1					

* Not Illustrated

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change has been made in your unit which is not reflected in your manual see your TORO Distributor or an Authorized Service Dealer for information and part numbers.

IDENTIFICATION & ORDERING

MODEL AND NUMBERS

The Plug Pulverizer 2560 has two identification numbers; a model number and a serial number. The two numbers are stamped on a plate which is located on the main frame. In any correspondence concerning the Plug Pulverizer 2560, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from your TORO Distributor or an Authorized Service Dealer, supply the following information:

1. Model and serial number of the unit.
2. Part number description and the quantity of part (s) desired.

NOTE: Do not order by reference number if a parts catalog is being used: use the PART NUMBER.

TABLE OF CONTENTS

Description	Page	Description	Page
Wheel & Screw Jack Assembly	1	Pivot Arm & Lift Chain Assembly	6
Reel Assembly	2	Blade, Flap & Drag Mat Assembly	7
Gearbox Mounting	3	Clean Out Lid & Blade Cover	8
Gearbox - No. 01-267-1530	4	Part Number Index	9
Idler & Belt Guard Assembly	5		

MAINTENANCE RECORD

[illegible]