
TORO_®

MODEL NO. 58007-600001 AND UP

PARTS CATALOG

3.5 H.P. TILLER

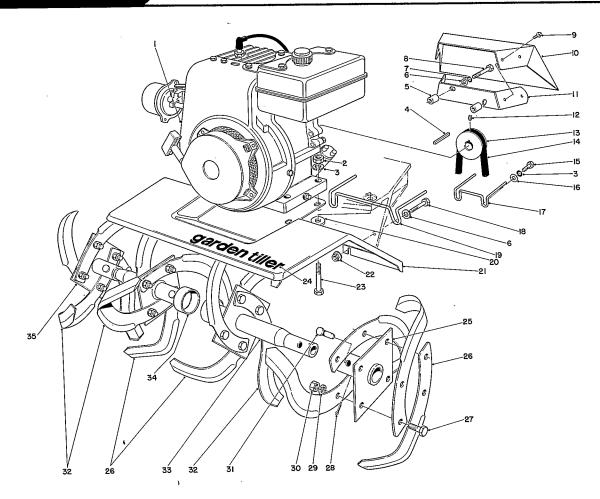


TINE AND ENGINE ASSEMBLY

	Ref. No.	Part No.	Description	No. Used
t	1	221-510	Engine	1
l	2	3217-6	Nut	4
	3	3253-4	Lockwasher	6
l	4	7-0036	Key Woodruff	1
ı	5	24-8990	Spacer	2
ļ	6	3256-22	Washer	6
1	7	3253-3	Lockwasher	2
ı	8	321-10	Capscrew	2 2 4
	9	32104-76	Screw Self Tapping	4
ı	10	26-3670	Pulley Cover	1
	11	26-3650	Strap — Belt Shield	1
1	12	3246-15	Hex Socket Set Screw	2
1	13	7-0346	Engine Pulley	1
	14	26-3340	V-Belt	1
	15	3210-3	Hex Hd. Capscrew	2
	16	3256-23	Washer	2
١	17	26-3370	Belt Guide	1
	18	321-8	Capscrew	2
П				

Ref. No.	Part No.	Description	No. Used
19	26-4030	Belt Guide — Worm Shaft	1
20	7-0081	Spacer	4
21	26-3660	Tine Shroud	1
22	32128-10	Flange Nut	2 4
23	322-11	Capscrew	4
24	17-8340	Decal – Garden Tiller	1
25	24-6960	Axle Assembly L.H. Outer	1
26	7-0103	Tine R.H.	8
27	323-7	Hex Hd. Capscrew	16
28	3272-11	Cotter Pin	4
29	3253-21	Lockwasher	16
30	3217-7	Nut	16
31	7-2116	Tine Pin	4
32	7-0102	Tine L.H.	8
33	24-6970	Axle Assembly L.H. Inner	1
34	24-6950	Axle Assembly R.H. Inner	1
35	24-6940	Axle Assembly R.H. Outer	1
ĺ		-	
1	1		


COPYRIGHT 1976 BY

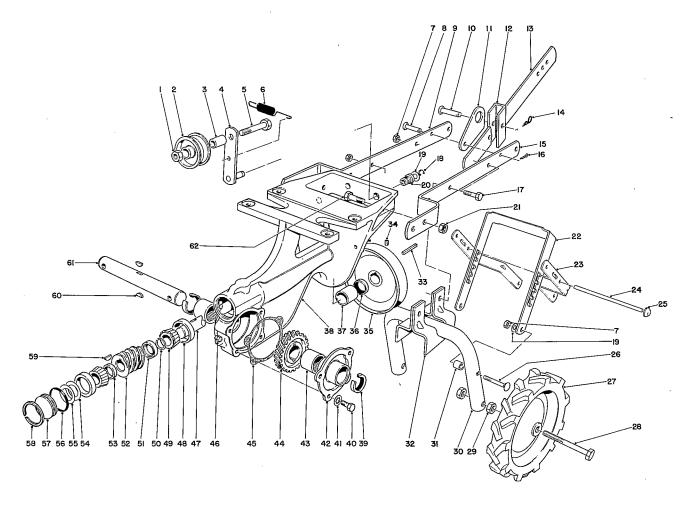

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	32152-2	Locknut	1
2	7-0056	Pulley	1
3	5-2465	Spacer	1
4	26-7100	Idler Arm	1
5	323-12	Hex hd. Capscrew	1
6	26-3730	Spring Extension	1
7	32152-1	Locknut	5
8	283-14	Pin	1
9	26-3120	Drawbar R.H.	1
10	283-23	Pin	1
11	26-3750	Latch - Depth Gauge	1
12	26-3740	Bracket — Depth Gauge	1
13	26-3760	Depth Gauge	1
14	3290-255	Hair Pin Cotter	1
15	26-5850	Drawbar L.H.	1
16	3272-6	Cotter Pin	1
17	322-7	Capscrew	3
18	32120-35	Snap Ring	1
19	3256-23	Washer	3
20	7-0023	Idler Bearing	1
21	32149-10	Keps Nut	4
22	26-3180	Lever Wheel Adjustment	1
23	26-3130	Handle Support	2

Ref. No.	Part No.	Description	No. Used
24	26-3230	Shaft Wheel Adjustment	1
25	3290-390	Push On	2
26	3230-7	Carriage Bolt	2
27	26-3610	Wheel	2
28	26-3600	Wheel Bolt	2
29	32153-5	Locknut	4
30	26-3140	Axle Yoke	1
31	5-1537	Spacer	2
32	26-3150	Saddle Yoke	1
33	7-0036	Key	1
34	3245-32	Set Screw	2
35	26-3360	Pulley — Worm Shaft	1
36	253-84	Oil Seal	1
37	256-167	Bushing	1
38	26-2280	Chassis	1
39	7-0045	Oil Seal	2
40	3235-18	Hex Hd. Capscrew	4
41	3254-8	Lockwasher	4
42	7-0048	Cover	1
43	252-88	Needle Bearing	2
44	7-0047	Worm Wheel	1
45	7-0020	Gasket	1
46	281-1	Pipe Plug	1

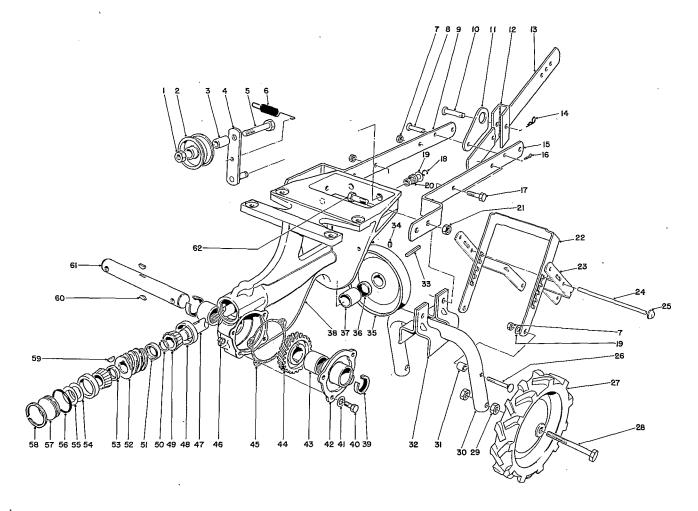


CHASSIS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
No. 47 448 449 550 551 552 553 554 555 567	7-0012 254-79 254-78 7-0013 26-5800 7-0016 7-0015 23-7690 23-7700 237-71 23-7710	Worm Shaft Bearing Cup Bearing Cone Snap Ring Spacer Rear Worm Gear Spacer Front Shim (.010) Shim (.020) "O" Ring Plug Tiller	Used 1 2 1 1 1 1 A/R A/R 1 1
		-	

Ref. No.	Part No.	Description	No. Used
58	7-0018	Snap Ring	1
59	3257-23	Woodruff Key	1
60	3257-33	Woodruff Key	
61	7-0046	Shaft Worm Wheel	2 1
62	323-18	Capscrew	4
*†	59063	Til-Row Attachment (Optional)	1
*†	17-8200	Pick Tine Kit (Optional)	1
*†	17-8620	Slasher Tine Kit (Optional)	1
*†	7-2084	Bolo Tine Extension Kit	
	,	(Optional)	1
*†	7-2104	8" Furrowing Tool (Optional)	1
		,	
			,
		·	
		, ,	


^{*}Not Illustrated †Optional Equipment

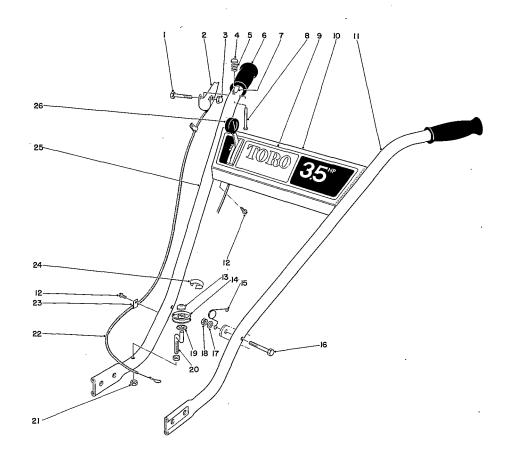

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-10	Capscrew	1
2	26-3630	Lift — Bail	1
3	32111-7	Nut — Acorn	1
4	32111-9	Cap Push-On	1
5	5-4723	Spring	1
6	235-20	Hand Grip	2
7	26-3710	Decal — Forward	1
8.	26-3640	Pin – Lock In	1
9	26-3310	Decal — Escutcheon	1
10	17-9300	Escutcheon Panel	1
11	26-3380	L.H. Handle	1
12	32104-76	Self Tapping Screw	6
13	3290-396	Push On Cap	1

Ref. No.	Part No.	Description	No. Used
14	26-3490	Pulley Cable	1
15	26-3690	Spring — Torsion	2
16	322-10	Capscrew	2
17	3256-23	Washer Plain	2
18	32152-1	Nut — Top Deform	2
19	3290-395	Retainer – Push On	1
20	26-3470	Spindle Forward	1
21	32128-28	Nut ·	2
22	26-3450	Cable Assembly	1
23	2412-21	Clamp	2
24	26-5890	Boden Clip	1
25	26-3440	Handle R.H.	1
26	26-3390	Throttle Control	1
		•	
		'	

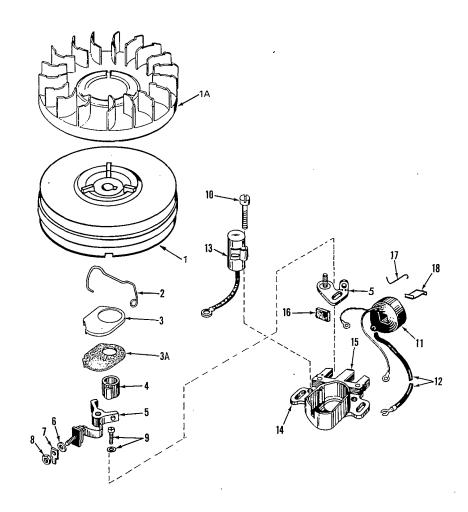


MAGNETO NO. 610940A

Ref. No.	Part No.	Description	No. Used
1	610931B	Flywheel (Incl. Nos. 1A, 3 & 3A)	1
1A	610933	Fan	1
2	30551	Spring, Breaker Box Dust Cover	1
3	610947	Cover, Dust	1
3A	610948	Gasket, Dust Cover	1
4	30552	Cam, Breaker	1
5	30547A	Contact Assy., Breaker	1
6 .	610385	Washer, Terminal	1
7	33356	Tab, Ground Terminal	1
8	610408	Nut, Terminal	1
9	29181	Screw & Washer, Breaker	1
			,
		•	

Ref. No.	Part No.	Description	No. Used
10	610593	Screw, Condenser Fastening	1
11	30560A	Coil Assy. (Incl. No. 12)	1
12	30554	Wire, <u>L</u> ead	1
13	30548A	Condenser	1
14	30545	Core & Plate	1
15	30561B	Stator Assy. (Incl. Nos. 2, 3, 3A,	
	-	5 thru 14 & 16 thru 18)	1
16	30549	Felt, Cam Wiper	1
17	31311	Clip, Coil Locking	1
18	29629	Spring, Coil Wedge	1
	,		
		· '	
		_	
		•	
		•	
	i		

^{*}The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list.

ENGINE TECUMSEH MODEL H35-45481M

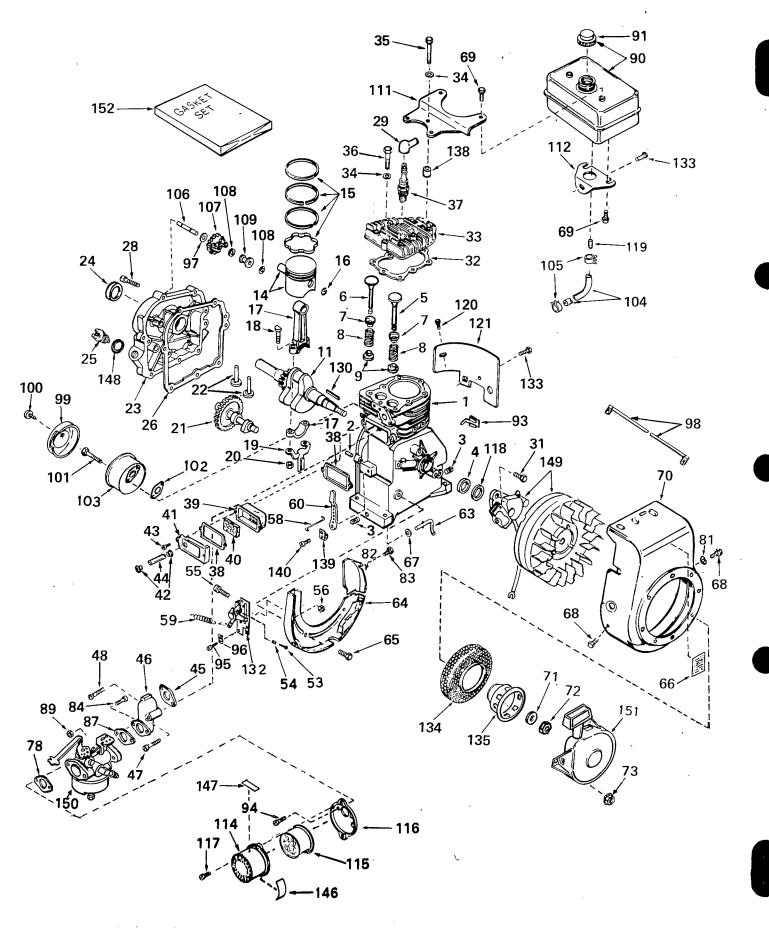


ENGINE TECUMSEH MODEL H35-45481M

Ref. No.	Part No.	Description	No. Used
1	33164	Cylinder Assy.	
		(Incl. Nos. 2, 3 & 4)	1
2	26727	Pin, Dowel	2
3	27642	Plug, Sq. Hd. Pipe (Oil Drain)	2 2 1
4	29183	Seal, Oil	1
		·	•
5	29314A	Valve, Intake (Std.) (Incl.	1
_	000450	Nos. 7, 8 & 9)	'
5	29315B	Valve, Intake (1/32" oversize)	4
		(Incl. Nos. 7, 8 & 9)	1
6	29313B	Valve, Exhaust (Std.) (Incl.	_
		Nos. 7, 8 & 9)	1
6	29315B	Valve, Exhaust (1/32" oversize)	
		(Incl. Nos. 7, 8 & 9)	1
7	31671	Cap, Upper valve spring	2
8	31672	Spring, Valve	2
9	31673	Cap, Lower Valve Spring	2
11	32555A	Crankshaft Assy.	1
14	32538	Piston & Pin Assy. (Incl. 2 of	
		No. 16) (Std.)	1
14	32548	Piston & Pin Assy. (Incl. 2 of	
• •	020.0	No. 16) (.010 oversize)	1
14	32549	Piston & Pin Assy. (Incl. 2 of	
17	02040	No. 16) (.020 oversize)	1
15	20006	Ring Set, Piston (Std.)	1
	28986	_ ·	1
15	28987	Ring Set, Piston (.010 oversize)	1
15	28988	Ring Set, Piston (.020 oversize)	
16	20381	Ring, Piston Pin Retaining	2
17	30963B	Rod Assy., Connecting (Incl.	
		Nos. 18, 19 & 20)	1
18	26706	Bolt, Connecting Rod	2
19	28594	Dipper, Oil	1
20	27573	Nut, Lock	2
21	33149	Camshaft (Compression Release)	1
22	27241	Lifter, Valve	2
23	30941D	Cover, Cylinder (Incl. Nos. 24,	
		25, 106 & 148)	1
24	30256	Seal, Oil	1
25	27625	Plug, Oil Filler (Incl. No. 148)	1
26	*27677	Gasket, Cylinder Cover	1
28	30564	Screw, Hex hd. Cap Sems	7
29	610118	Cover, Spark Plug	1
31	650489	Screw, Hex hd. Sems	2
32	*29953B	Gasket, Cylinder Head	1
33	30579	Head, Cylinder	1
	1		8
34 35	26073	Washer	5
35	650694	Screw, Hex hd. Cap	3
36	6021	Screw, Hex hd. Cap	ا ا
37	33636	Plug, Spark (Champion J-8 or	
		equivalent)	1
38	*27234	Gasket, Valve Spring Cover	2
39	27666	Breather Body & Valve Assy.	1
40	27233	Element, Breather	1
41	27667	Cover, Valve Spring	1

Ref. No.	Part No.	Description	No. Used
40			
42	32446	Grommet, Breather Tube	2
43	650128	Screw, Fil. Slotted hd. Sems	2
44	32447	Tube, Breather	1
45	*26754	Gasket, Intake	1
46	28416	Pipe, Intake	1
47	650664	Screw, Phil. fil hd. mach. Sems	1
48	30646	Screw, Phil. fil. hd. Sems	1
53	650549	Screw, Fil. slotted hd. mach	1
54	31342	Spring, Compression	1
55	†650139	Screw, Fil. slotted hd. Sems	2
56	†30322	Nut, Hex, Lock	2
58	31858	Link, Governor-to-throttle	1
59	31426	Spring, Extension	1
60	31510	Lever, Governor	1
63	31334	Rod, Governor	1
64	†33342	Baffle, Blower Housing	1
65	650561	Screw, Phil. hex hd. Sems	2
66	32078	Decal, Name & Instruction	1
67	28277	Washer, Flat	1
68	29212	Screw, Hex hd. Sems	2
69	650665	Screw, Hex hd. Sems	4
70	**33663A	Housing, Blower	1
71	650763	Washer, Belleville	1
72	650607	Nut, Flywheel	1
73	**29752	Nut & Lockwasher Assy.	4
73 78	*27272	•	1
		Gasket, Air Cleaner	1
81	650168	Washer, Flat	1
82	33341	Baffle, Extension	ı
83	650701	Screw, Phil. hex washer hd.	
		self-drilling	1
84	6202	Screw, Hex hd. Cap	2
87	*26756	Gasket, Carburetor	1
89	29752	Nut & Lockwasher Assy.	2
90	33120	Tank Assy., Fuel (Incl.	
		Nos. 69 & 91)	1
91	410144B	Cap, Fuel Tank	1
93	29443	Clip, Fuel Line	2
94	28820	Screw, Phil. fil. hd. mach. Sems.	2
95	28942	Screw, Hex hd. slotted Sems	1
96	27793	Clip, Conduit	1
97	30590A	Washer, Flat	1
98	31388	Wire, Ground	1
99	30997	Cover, Muffler	1
100	650665	Screw, Hex hd. Sems	1
101	650493	Screw, Hex hd. Sems	2
102	*30081	Gasket, Muffler	1
103	30996	Muffler	1
103	30705	Line, Fuel	1
104	26460	Clamp, Fuel Line	2
106	30574	Shaft, Mechanical Governor	1
	30574	Gear Assy., Governor	'
107	30091	(Incl. No. 97)	1
100	20102	•	2
108	29193	Ring, Retaining	4
	1	<u> </u>	

ENGINE TECUMSEH MODEL H35-45481M (Continued)

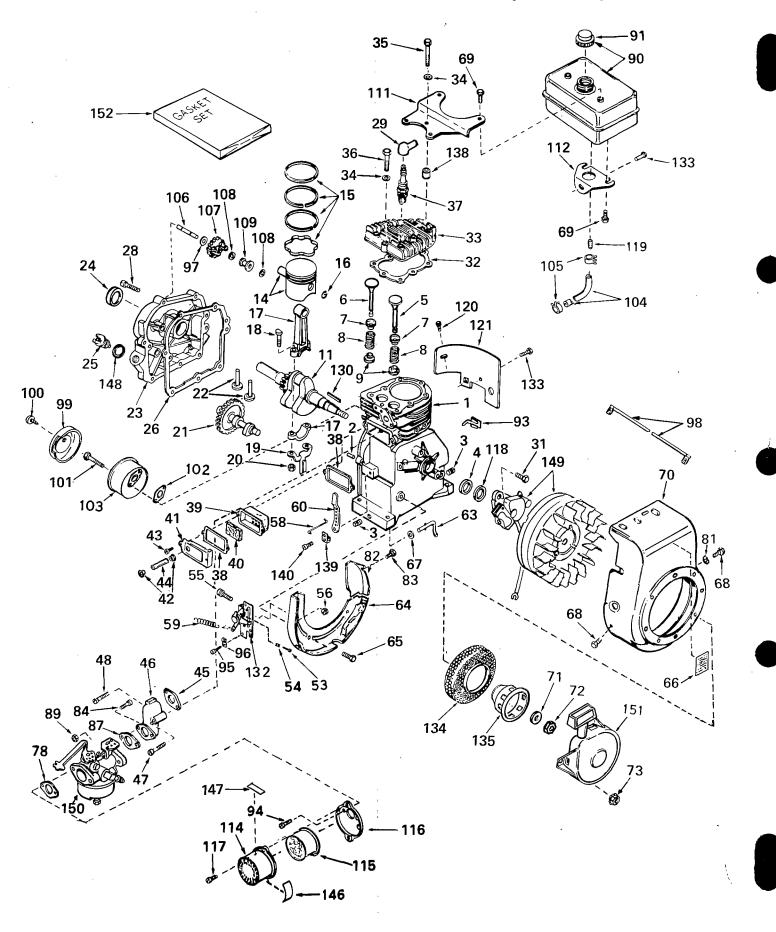


ENGINE TECUMSEH MODEL H35-45481M (Continued)

Ref.			No.
No.	Part No.	Description	Used
109	30588A	Spool, Governor	1
111	28371B	Bracket, Fuel Tank — Upper	1
112	32762	Bracket, Fuel Tank — Lower	1
114	31692	Body, Air Cleaner	1
115	31700	Element, Air Cleaner	1
116	31708	Bracket, Air Cleaner	1
117	650152	Screw, Fil. slotted hd. Sems	2
118	33876	Gasket, Stator	1
119	28819	Spring, Fuel Line	1
120	650128	Screw, Fil. slotted hd. Sems	1
121	29745	Extension, Blower Housing	1
130	610949	Key, Flywheel	1
132	†33879	Speed Control Assy. (Incl. Nos.	
		53 thru 56)	1
133	650561	Screw, Phil. hex hd. Sems	1
134	33668	Screen, Starter	1
135.	33667	Cup, Starter	1
	- '		
		`.	
I			1

Ref. No.	Part No.	Description	No. Used
138	28212	Spacer	2
139	31335	Clamp, Governor Lever	1
140	650548	Screw, Hex slotted washer hd.	1
146	31871A	Decal, Air Cleaner	1
147	31268	Decal, "Choke"	1
148	*39673	Gasket, Oil Filler	1
149	610940A	Magneto (The complete magneto	
		is not available as an assembly.	
		The magneto number is shown	
ŀ		for reference purposes only.	
		Order component parts in-	
		dividually, as shown in parts	
		list.)	1
150	631921	Carburetor (Incl. No. 87)	1
151	**590420	Starter Assy., Rewind	1
152	33233	Gasket Set (Incl. items	
		marked *)	1
		·	

^{**}In original production the starter is riveted to the blower housing. If either the starter or blower housing requires replacement, both will have to be ordered. Also order four (4) nuts illustrated to attach replacement starter to replacement blower housing.


[†] In original production the speed control assembly is riveted to the blower housing baffle. Replacement speed control assembly includes screws and nuts for mounting. Replacement baffle has threaded holes.

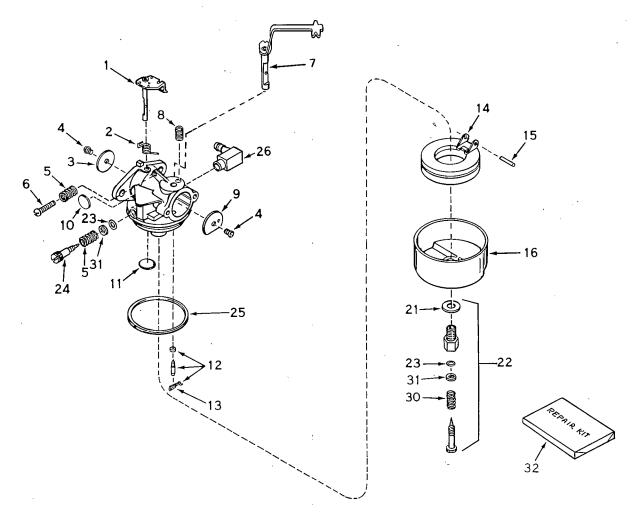

CARBURETOR NO. 631921

Ref. No.	Part No.	Description	No. Used
1 2	631615 631279	Shaft & Lever Assy., Throttle Spring, Throttle Return	1
3 4	631036 650506	Shutter, Throttle Screw	1 2
5	630766 650417	Spring, Idle Regulating Screw	2
7	630919	Screw, Idle Regulating Shaft & Lever Assy., Choke	1
8	630735 31837	Spring, Choke Stop Shutter, Choke	1 1
10	*630748	Plug, Welch	1
11 12	*631027 *631021	Plug, Welch Inlet Needle, Seat & Clip Assy.	1
		(Incl. No. 13)	1
13	631022	Clip, Inlet Needle	1
		,	
		,	

Ref. No.	Part No.	Description	No. Used
14	631023	Float, Carburetor	1
15	*631024	Shaft, Float	1
16	631867	Bowl, Float	1
21	27110	Gasket, Bowl-to-body	1
22	*31839	Adjustment Screw Assy., Main	
		(Incl. Nos. 21, 23, 30 & 31)	1
23	*630740	"O" Ring, Adjustment Screw	2
24	*631078	Screw, Idle Adjustment	1
25	*631028	Gasket, Bowl-to-body	1
26	631807	Fitting, Fuel Inlet	1
30	630738	Spring, Main Adjustment Screw	1
31	630739	Washer, Flat	2
32	31840	Repair Kit (Incl. items	
		marked *)	1
		*	

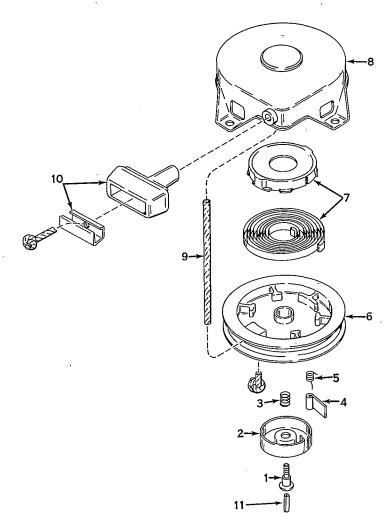

REWIND STARTER NO. 590420

Ref. No.	Part No.	Description	No. Used
1	590409	Screw, Retainer	1
2	590410	Retainer, R.H.	1
2 3	590411	Spring, Brake	1
. 4	590148	Dog, Starter	1
5	590412	Spring, R.H. Dog	1
6	590413A	Pulley	1
	}		
	ĺ		
			<u> </u>

Ref. No.	Part No.	Description	No. Used
7 8 9 10 11	590414 590415 590386 590387 590459	Spring & Keeper Assy. Housing Assy., Starter Rope, Starter Handle Assy., Starter Pin, Centering	1 1 1 1
			-

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The tiller has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on left rear side of tine shroud. In any correspondence concerning the tiller, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

- 1. Model and serial numbers of the tiller.
- 2. Part number, description, and quantity of part(s) desired.

Note: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

Keep Your TORO All Toro



Insist on Genuine Toro Parts

THE TORO PROMISE

It is Toro's policy to design and produce TORO products to provide our customers with a high level of performance and durability in normal operation. Our products, however, are produced in high volume, and it is inevitable that occasionally a unit will reach a customer with a defect in materials or workmanship which causes the unit to fall below the normal high

level of TORO performance. Invariably, such a defect will be noticed in a residential product within one year after purchase. Recognizing this possibility, Toro has established a simple guarantee policy and procedure that is intended to assure customer satisfaction. This guarantee statement is as follows:

The Toro Promise

A Full One Year Warranty

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product 1 year Residential Products Used Commercially . . 45 days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should the customer feel that a product is defective and wish to rely on The Toro Promise, the following procedure is recommended:

- Contact any Authorized TORO Service Dealer or Distributor, but preferably the dealer or distributor from whom you purchased the product.
- He will instruct you to either return the product to him, or tell you the name and address of your nearest Authorized TORO Service Dealer or Distributor if the product is to be returned to such a dealer or distributor.
- 3. Bring the product and your original sales slip, or

- other evidence of purchase date, to the service dealer or distributor.
- 4. The servicing dealer or distributor will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to the customer.

If for any reason the customer is dissatisfied with the dealer's or distributor's analysis of the defect or the service he performs, he can contact us. Write:

TORO "Customer Care" Department 8111 Lyndale Avenue South Minneapolis, Minnesota 55420