


TORO®

MODEL NO. 58237-600001 & UP
MODEL NO. 58226-600001 & UP

PARTS CATALOG


5 H. P. TILLER

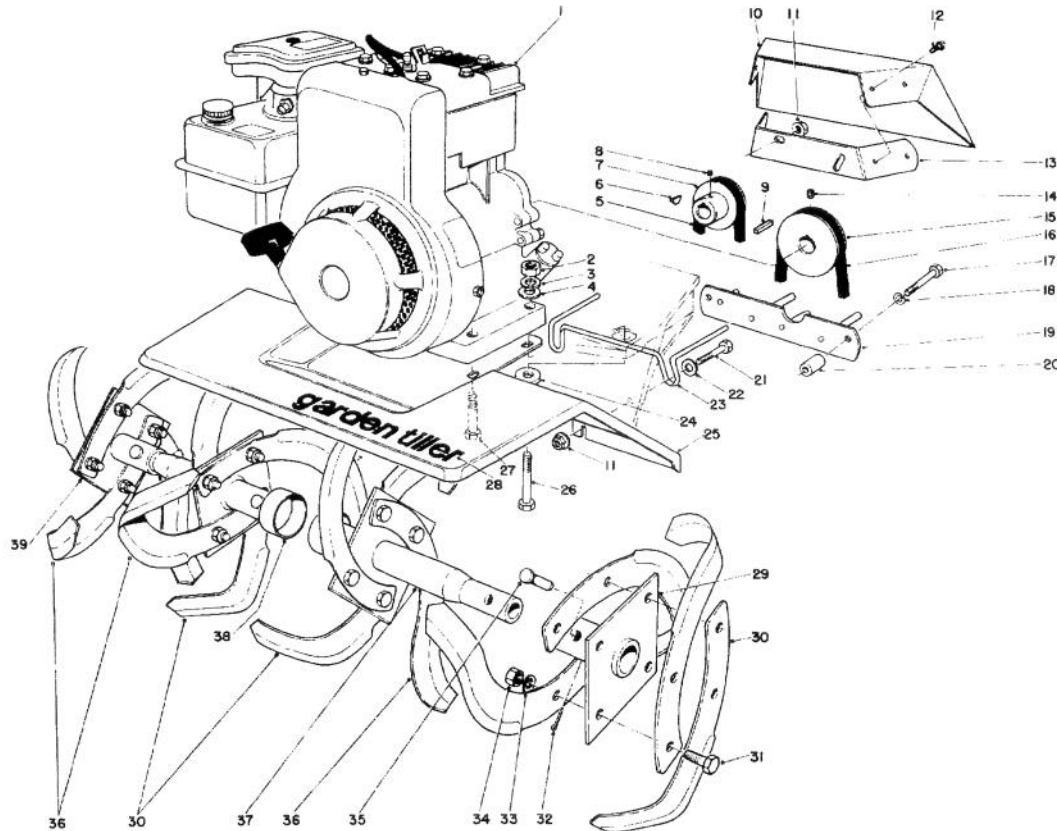

TINE AND ENGINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	221-509	Engine	1
2	3217-6	Nut	4
3	3253-4	Lockwasher	4
4	3256-23	Plain Washer	1
5	26-3550	V-Belt Rev.	1
6	3257-37	Woodruff Key	1
7	26-3570	Pulley — Engine Rev.	1
8	3245-32	Hex Socket Set Screw	2
9	7-0036	Key	1
10	26-3670	Pulley Cover	1
11	32128-10	Flanged Locknut	4
12	32104-76	Self-Tapping Screw	4
13	26-3650	Strap-Belt Shield	1
14	3246-14	Hex Socket Set Screw	2


Ref. No.	Part No.	Description	No. Used
15	26-3560	Pulley & Engine (Fwd.)	1
16	26-3540	V-Belt (Fwd.)	1
17	321-18	Capscrew	2
18	3253-3	Lockwasher	2
19	26-3770	Belt Guide	1
20	26-3220	Spacer	2
21	321-8	Capscrew	2
22	3256-22	Washer	2
23	26-4030	Belt Guide-Worm Shaft	1
24	7-0081	Spacer	4
25	26-3660	Tine Shroud	1
26	322-12	Capscrew	1
27	322-11	Capscrew	3
28	17-8340	Decal "Garden Tiller"	1

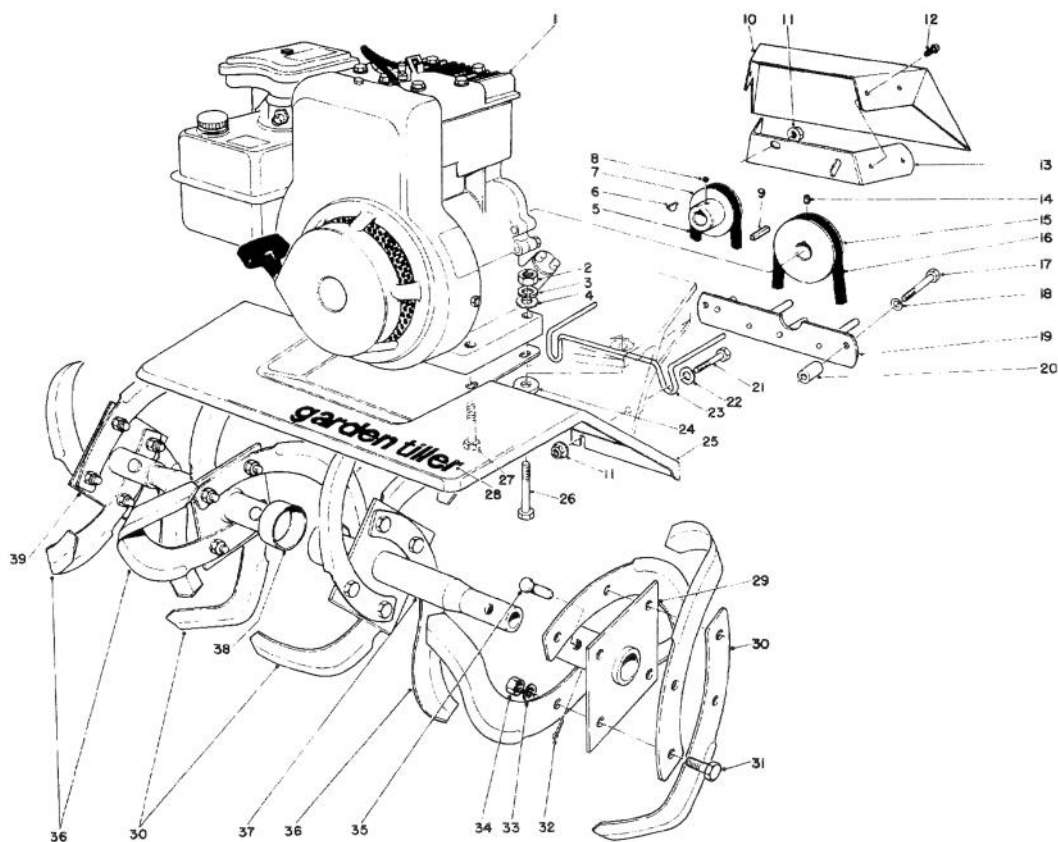

TINE AND ENGINE ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
29	24-6960	Axle L.H. Outer (Model #58226 Only)	1
30	7-0103	Tine R.H. (Model #58226 Only)	8
31	323-7	Hex Hd. Capscrew (Model #58226 Only)	16
32	3272-11	Cotter Pin	4
33	3253-21	Lockwasher (Model #58226 Only)	16
34	3217-7	Nut (Model #58226 Only)	16


Ref. No.	Part No.	Description	No. Used
35	7-2116	Tine Pin	4
36	7-0102	Tine L.H. (Model #58226 Only)	8
37	24-6970	Axle L.H. Inner (Model #58226 Only)	1
38	24-6950	Axle R.H. Inner (Model #58226 Only)	1
39	24-6940	Axle R.H. Outer (Model #58226 Only)	1

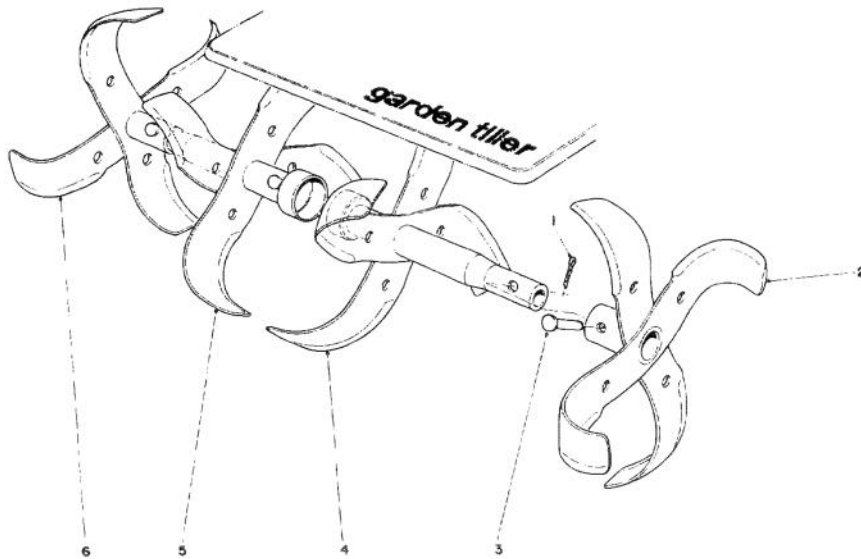

SLASHER TINE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3272-11	Cotter Pin	4
2	20-8840	Slasher Tine L.H. Outer (Model #58237 Only)	1
3	7-2116	Tine Pin	4
4	20-8830	Slasher Tine L.H. Inner (Model #58237 Only)	1


Ref. No.	Part No.	Description	No. Used
5	20-8810	Slasher Tine R.H. Inner (Model #58237 Only)	1
6	20-8820	Slasher Tine R.H. Outer (Model #58237 Only)	1

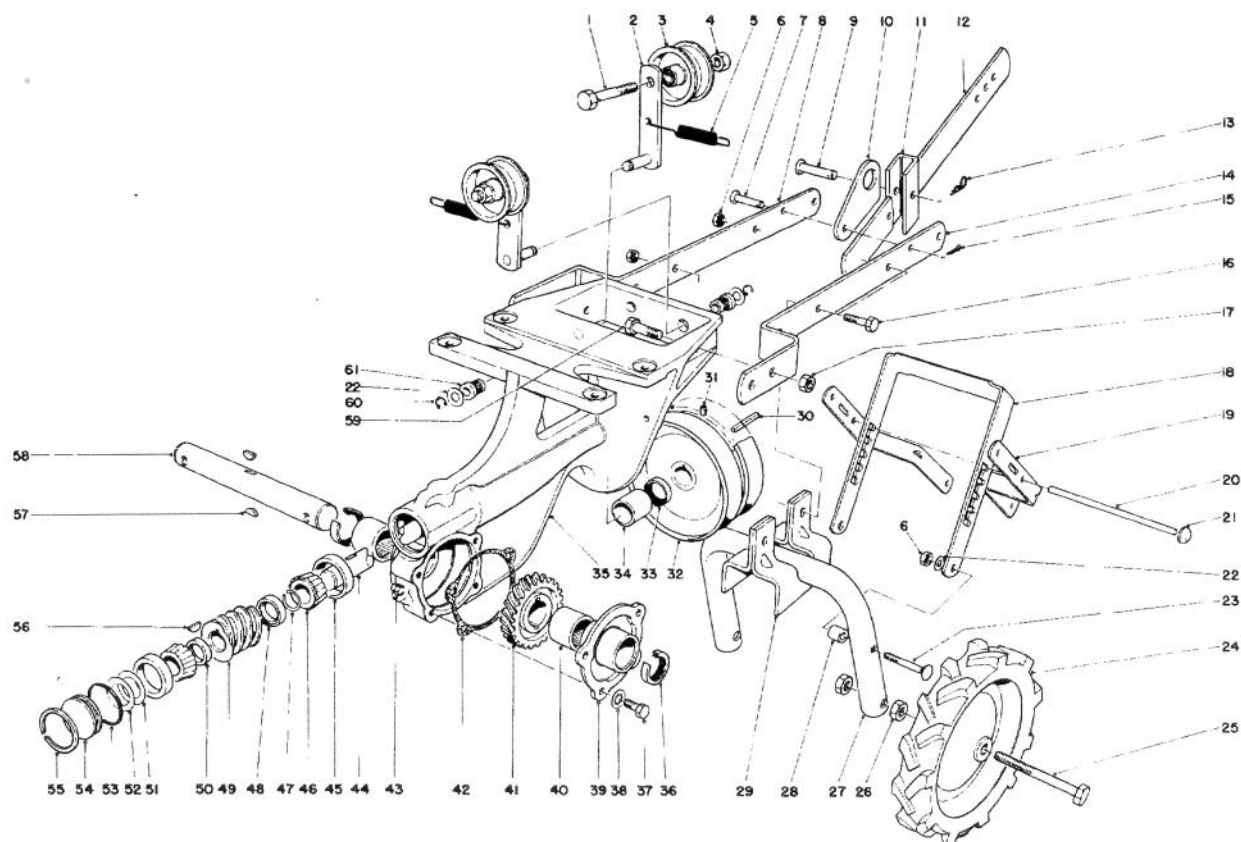

CHASSIS ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	323-8	Capscrew	2
2	26-7100	Idler Arm	2
3	7-0056	Pulley	2
4	32152-2	Locknut	2
5	26-3730	Spring — Extension	2
6	32152-1	Nut	5
7	283-14	Pin	1
8	26-3120	Drawbar R.H.	1
9	283-23	Pin	1
10	26-3750	Latch — Depth Gauge	1
11	26-3740	Bracket — Depth Gauge	1
12	26-3760	Depth Gauge	1
13	3290-255	Hair Pin Cotter	1
14	26-5850	Drawbar L.H.	1
15	3272-6	Cotter Pin	1
16	322-7	Capscrew	3
17	32149-10	Nut	4
18	26-3180	Lever — Wheel Adjustment	1
19	26-3130	Support Handle	2
20	26-3230	Shaft — Wheel Adjustment	1
21	3290-390	Push-On	2
22	3256-23	Washer	4
23	3230-7	Carriage Bolt	2

Ref. No.	Part No.	Description	No. Used
24	26-3610	Wheel	2
25	26-3600	Wheel Bolt	2
26	32153-5	Locknut	4
27	26-3140	Axle Yoke	1
28	5-1537	Spacer	2
29	26-3150	Saddle Yoke	2
30	7-0036	Key	1
31	3246-14	Set Screw	2
32	26-3580	Pulley — Worm Shaft	1
33	253-84	Oil Seal	1
34	256-167	Bushing	1
35	26-2280	Chassis	1
36	7-0045	Oil Seal	2
37	3235-18	Hex Hd. Capscrew	4
38	3254-8	Lockwasher	4
39	7-0048	Cover	1
40	252-88	Needle Bearing	2
41	7-0047	Worm Wheel	1
42	7-0020	Gasket	1
43	281-1	Pipe Plug	1
44	7-0012	Shaft Worm	1
45	254-79	Bearing Cup	2
46	254-78	Bearing Cone	2

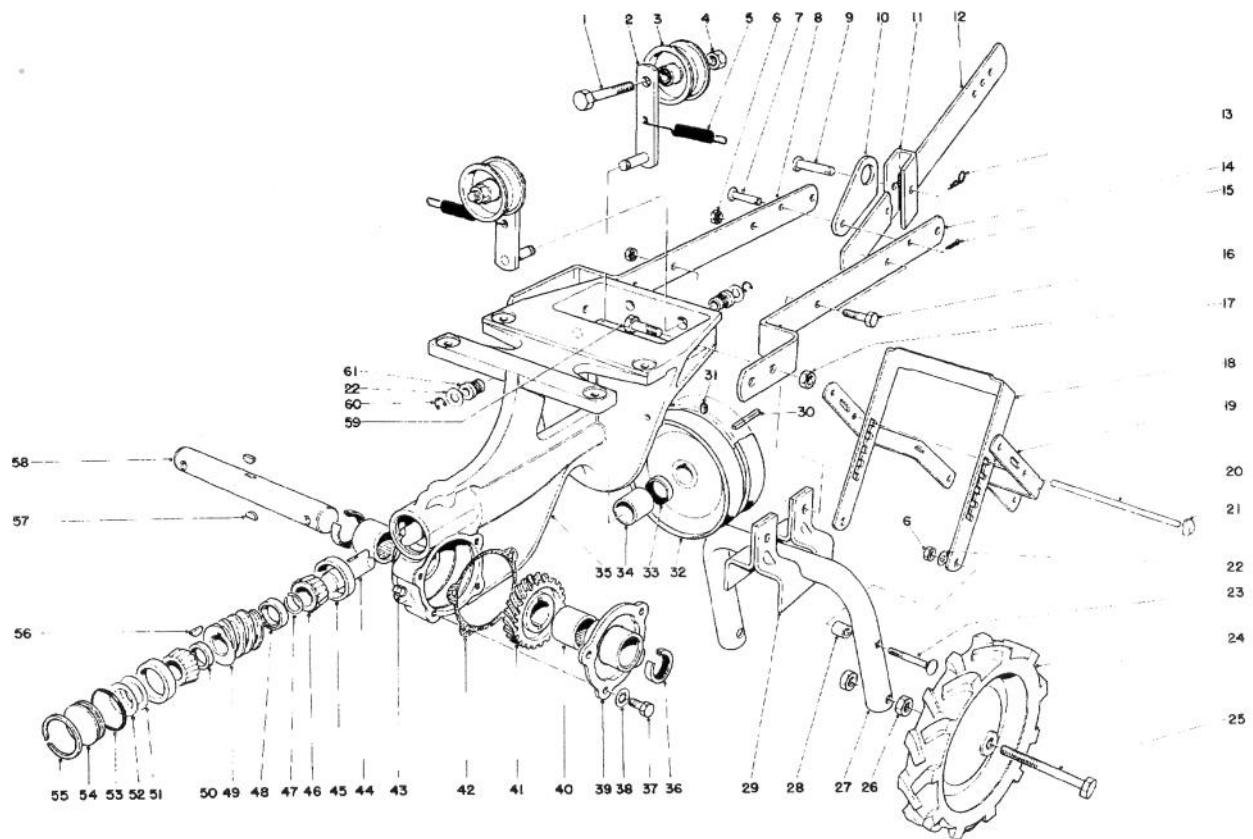


CHASSIS ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
47	7-0013	Snap Ring	1
48	26-5800	Spacer Rear	1
49	7-0016	Worm Gear	1
50	7-0015	Spacer Front	1
51	23-7690	Shim (.010)	A/R
52	23-7700	Shim (.020)	A/R
53	237-71	"O" Ring	1
54	23-7710	Plug Tiller	1
55	7-0018	Snap Ring	1

Ref. No.	Part No.	Description	No. Used
56	3257-23	Woodruff Key	1
57	3257-33	Woodruff Key	2
58	7-0046	Worm Wheel Shaft	1
59	323-18	Capscrew	4
60	32120-35	Snap Ring	2
61	7-0023	Idler Bearing	2
*	59063	Til Row Attach. (Optional)	1
*	17-8200	Pick Tine Kit (Optional)	1
*	7-2104	8" Furrowing Tool (Optional)	1

*Not Illustrated

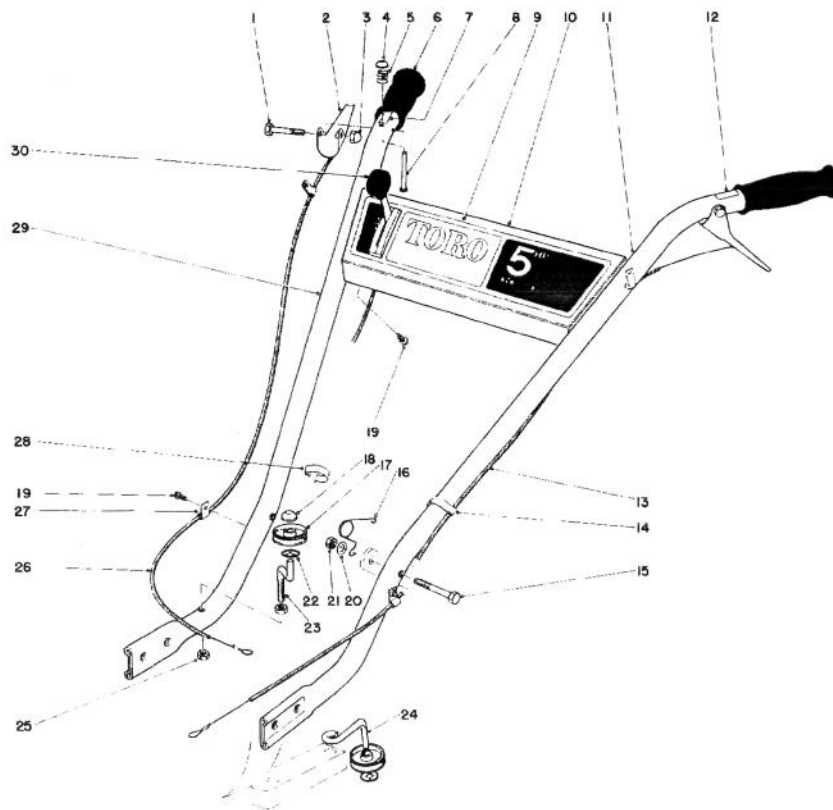


HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	321-10	Capscrew	2
2	26-3630	Lift — Bail	2
3	32111-7	Nut — Acorn	2
4	32111-9	Cap Push-On	1
5	5-4723	Spring	1
6	235-20	Hand Grip	2
7	26-3710	Decal — Fwd.	1
8	26-3640	Pin Lock In	1
9	26-3510	Decal — Escutcheon	1
10	17-9300	Escutcheon Panel	1
11	26-3420	Handle L.H.	1
12	26-3720	Decal Rev.	1
13	26-3460	Cable Assy. Rev.	1
14	2412-47	Boden Clip	1
15	322-10	Capscrew	2

Ref. No.	Part No.	Description	No. Used
16	26-3690	Spring — Torsion	2
17	26-3490	Pulley Cable	2
18	3290-396	Push-On, Cap Type	1
19	32104-76	Self Tapping Screw	8
20	3256-23	Plain Washer	2
21	32152-1	Nut	2
22	3290-395	Retainer — Push On	2
23	26-3470	Spindle — Fwd.	1
24	26-3480	Spindle — Rev.	1
25	32128-28	Nut	2
26	26-3450	Cable Assy. Fwd.	1
27	2412-21	Clamp	4
28	26-5890	Boden Clip	1
29	26-3440	Handle R.H.	1
30	26-3590	Throttle Control	1
*	6-5809	Loose Parts	1


* Not Illustrated

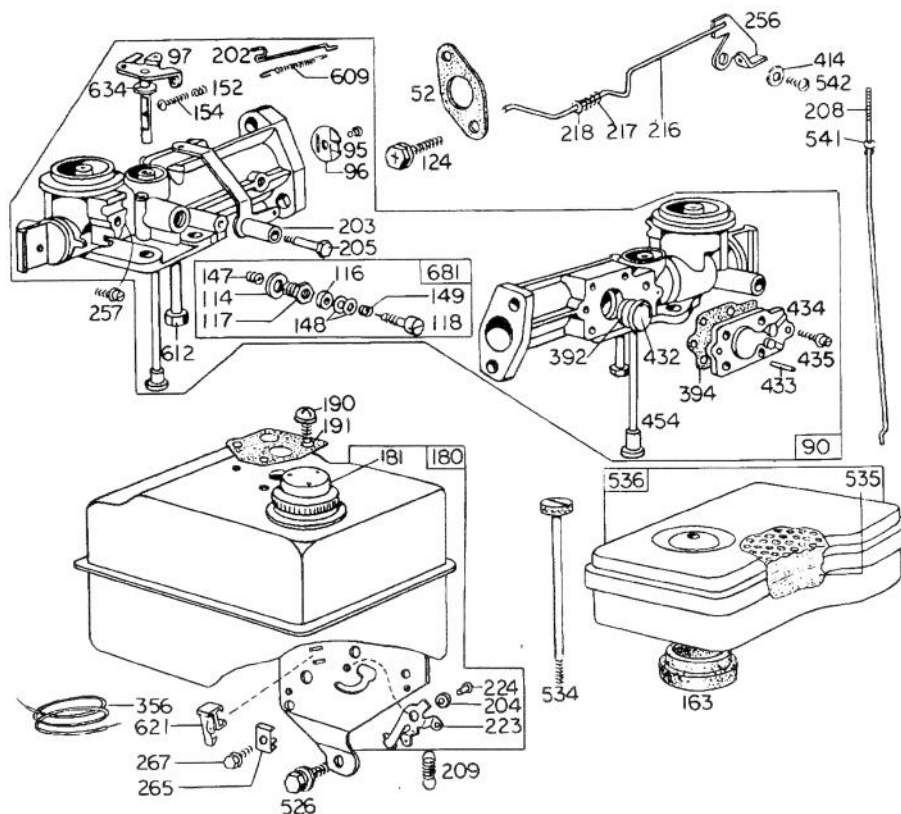

CARBURETOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	*27355	Gasket - Carburetor Mtg.	2	218	221198	Washer - Choke Link	1
90	299576	Carburetor Assembly	1	223	221517	Lever - Governor Control	1
95	93385	Screw - Throttle Valve to Shaft Sem	1	224	93491	Rivet - Governor Control Lever Mounting	1
96	211203	Throttle - Carburetor	1	256	299859	Crank - Bell	1
97	299212	Shaft and Lever - Throttle	1	257	93263	Screw - Fil. Hd. Sem	1
114	66594	Gasket - Needle Valve Nut	1	265	221535	Clamp - Casing	1
116	65978	Packing - Needle Valve	1	267	93496	Screw - Sem	1
117	230590	Nut - Needle Valve	1	356	295413	Wire - Ground	1
118	23433	Valve - Needle	1	392	260455	Spring - Fuel Pump Diaphragm	1
124	93357	Screw - Hex. Head	1	394	270026	Diaphragm	1
147	230591	Seat - Needle Valve	1	414	220982	Washer	1
148	22235	Washer - Needle Valve	2	432	221377	Cap - Spring	1
149	26336	Spring - Needle Valve	1	433	93265	Pin - Diaphragm Cover	1
152	260575	Spring - Throttle Adjustment	1	434	210959	Cover - Diaphragm	1
154	92634	Screw - Machine, Round Head	1	435	93141	Screw - Diaphragm Cover	1
163	*27660	Gasket - Air Cleaner Mtg.	1	454	296178	Housing - Fuel Pipe Screen (for 3/16" O.D. Pipe)	1
180	297600	Tank Assembly - Fuel	1	526	93343	Screw - Tank Bracket Mounting Sem	1
181	298425	Cap - Fuel Tank	1	534	93322	Screw - Air Cleaner	1
190	93341	Screw - Fuel Tank Mtg. Sem	1	535	27987	Element - Air Cleaner	1
191	*27911	Gasket - Fuel Tank Mtg.	1	536	297036	Cleaner Assembly - Air	1
202	260678	Link - Throttle	1	541	22398	Washer	1
203	297718	Crank - Bell	1	542	92265	Screw	1
204	230844	Bushing - Governor Lever (Flat)	1	609	260694	Spring - Throttle Link	1
205	93566	Screw - Shoulder	1	612	296811	Pipe - Fuel	1
208	230737	Rod - Control	1	621	297472	Switch - Stop	1
209	260695	Spring - Governor	1	634	270167	Washer, Throttle Shaft (Felt)	1
216	299859	Link - Choke	1	681	299060	Needle Valve Kit	1
217	260189	Spring - Choke Link	1				

BRIGGS & STRATTON ENGINE MODEL NO. 130292 TYPE 0646-01

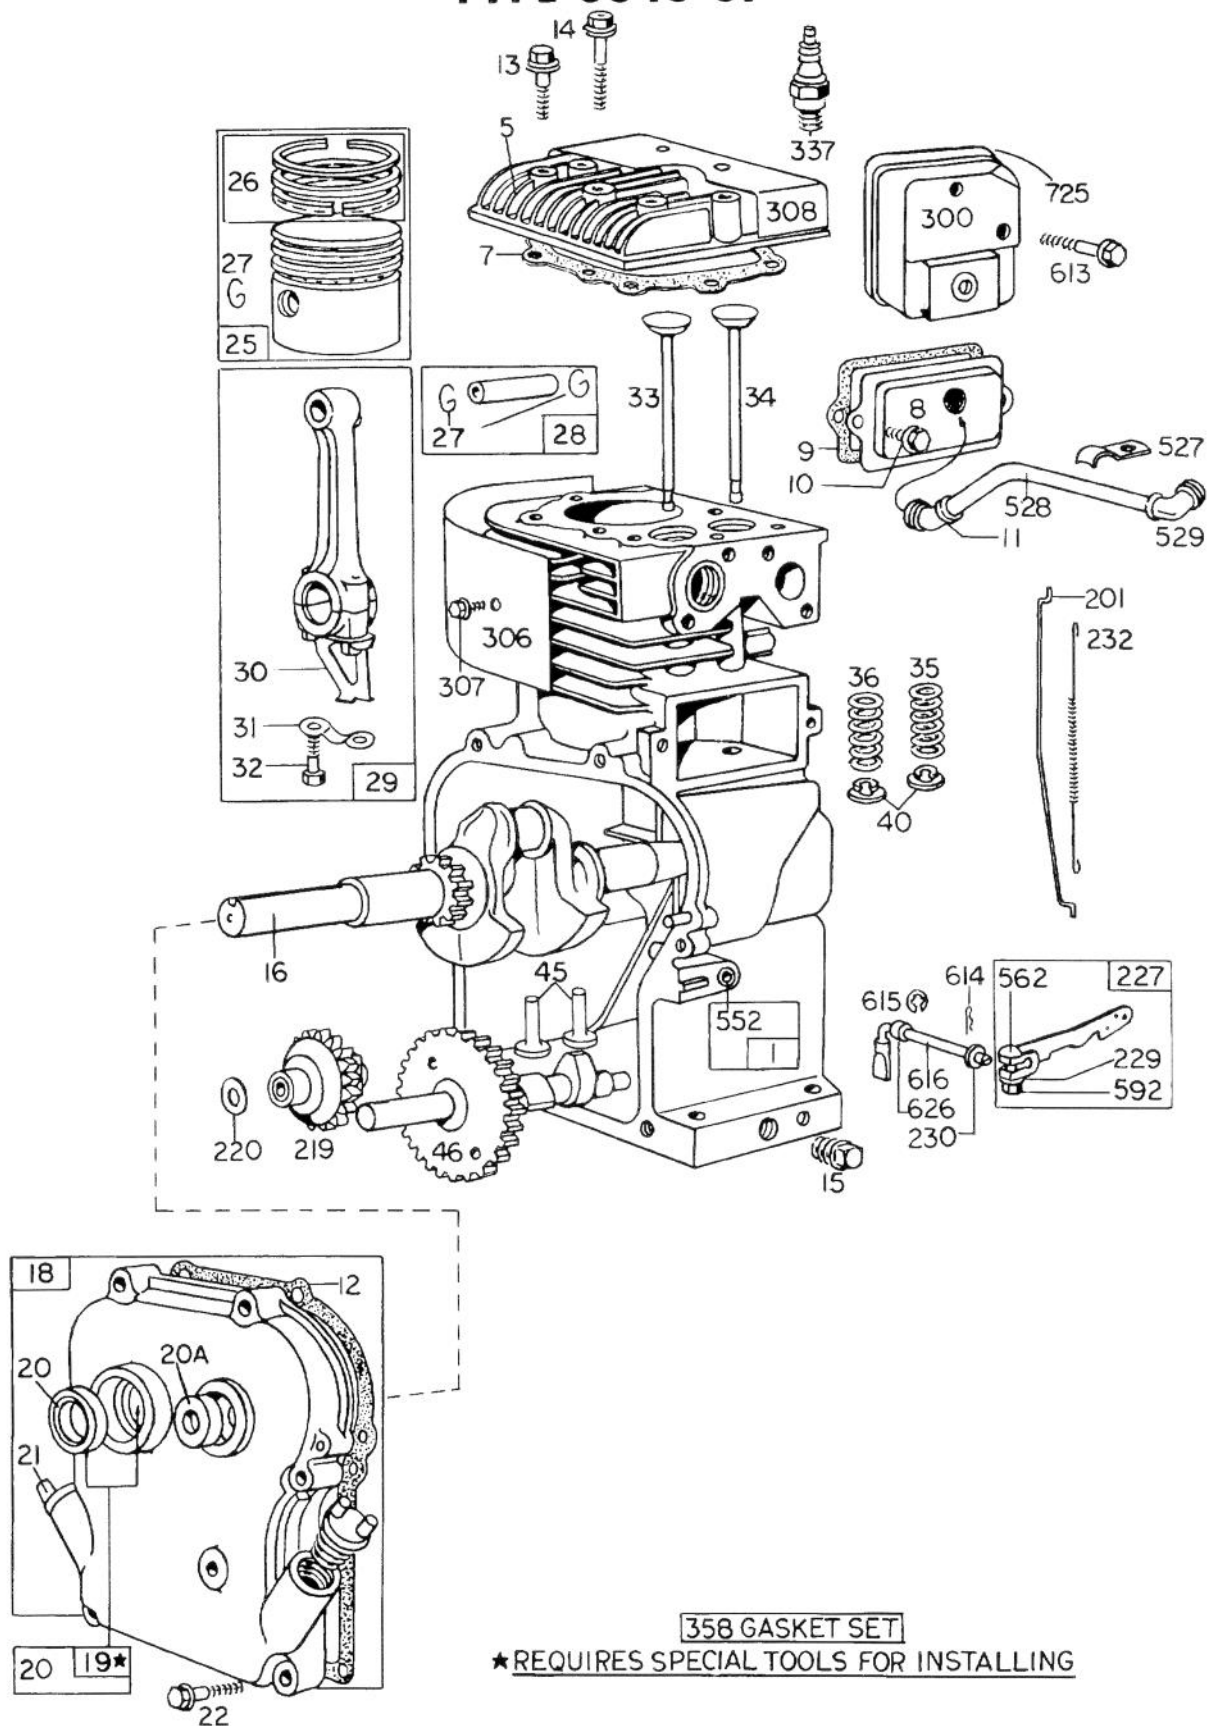


BRIGGS & STRATTON ENGINE MODEL NO. 130292 TYPE 0646-01

Ref. No.	Part No.	Description	No. Used
5	211542	Head - Cylinder	1
7	*270383	Gasket - Cylinder Head	1
8	294178	Breather - Valve Chamber	1
9	*27549	Gasket - Valve Cover	1
10	93394	Screw - Breather Mtg. Sem	1
11	66578	Grommet - Breather Tube	1
12	*270080	Gasket - Crankcase - .015" thick (Standard)	1
	270125	Gasket - Crankcase - .005" thick	1
	270126	Gasket - Crankcase - .009" thick	1
13	93368	Screw - Cylinder Head (2-3/32" long)	1
14	93369	Screw - Cylinder Head (2-15/32" long)	1
15	91249	Plug - Pipe, Std., Square Head	1
16	260938	Crankshaft	1
18	298183	Cover Assy. - Crankcase	1
19	297603	Bushing - Crankcase Cover Note: Requires special tools for installation.	1
20	294606	Seal - Oil	1
20A	298041	Seal - Oil	1
21	66768	Plug - Oil Filler	1
22	93032	Screw - Crankcase Cover Mounting Sem	3
22	93656	Dbl. Thread Crankcase Bolts	2
25	298904	Piston Assy. - Standard	1
	298905	Piston Assy. - .010" O. S.	1
	298906	Piston Assy. - .020" O. S.	1
	298907	Piston Assy. - .030" O. S.	1
26	298982	Ring Set - Standard Piston Consists of: 211467 Ring, Piston, Comp., Top, Standard 211468 Ring, Piston, Comp., Center, Standard 211469 Ring, Piston, Oil, Standard	1
	298983	Ring Set - .010" O. S. Piston Consists of: 211504 Ring, Piston, Comp., Top, .010" O. S. 211503 Ring, Piston, Comp., Center, .010" O. S. 211505 Ring, Piston, Oil, .010" O. S.	1
	298984	Ring Set - .020" O. S. Piston Consists of: 211507 Ring, Piston, Comp., Top, .020" O. S. 211506 Ring, Piston, Comp., Center, .020" O. S. 211508 Ring, Piston, Oil, .020" O. S.	1

Ref. No.	Part No.	Description	No. Used
	298985	Ring Set - .030" O. S. Piston Consists of: 211511 Ring, Piston, Comp., Top, .030" O. S. 211510 Ring, Piston, Comp., Center, .030" O. S. 211512 Ring, Piston, Oil, .030" O. S.	1
27	26026	Lock - Piston Pin	1
28	298909	Pin Assy. - Piston - Std.	1
	298908	Pin Assy. - Piston - .005" O. S.	1
29	299430	Rod Assy. - Connecting Note: For Connecting Rod with .020" undersize Crank-pin Bore - order No. 390459	1
30	221890	Dipper - Connecting Rod	1
31	221876	Lock - Conn. Rod Screw	1
32	92296	Screw - Connecting Rod	1
33	211119	Valve - Exhaust	1
34	261044	Valve - Intake	1
35	260552	Spring - Intake Valve	1
36	26478	Spring - Exhaust Valve	1
40	93312	Retainer - Valve Spring	1
45	260642	Tappet - Valve	1
46	211618	Gear - Cam	1
201	260661	Link - Governor	1
219	297656	Gear - Governor	1
220	221551	Washer - Thrust	1
227	297601	Lever Assy. - Governor	1
229	220680	Washer - Governor Lever	1
230	221559	Washer - Governor Lever	1
232	260478	Spring - Governor Link	1
300	297506	Muffler - Exhaust (Direct Outlet)	1
306	221511	Shield - Cylinder	1
307	93042	Screw - Cylinder Shield Mounting Sem	1
308	221512	Cover - Cylinder Head	1
337	298809	Plug - Spark (with Gasket) Note: Spark Plugs 298809, use Ignition Cable Terminal No. 221798.	1
358	297615	Gasket Set	1
527	221514	Clamp - Breather Tube	1
528	230722	Tube - Breather	1
529	67838	Grommet - Breather Tube	1
552	230732	Bushing - Governor	1
562	92613	Bolt - Governor Lever	1
592	90356	Nut - Hex.	1
613	93377	Screw - Muffler Mounting	1
614	93306	Cotter - Hairpin	1
615	93307	Retainer - E-Ring	1
616	230723	Crank - Governor	1
626	230749	Spacer - Governor Crank	1
725	221885	Shield - Heat	1

*Included in Gasket Set - Part No. 297615.

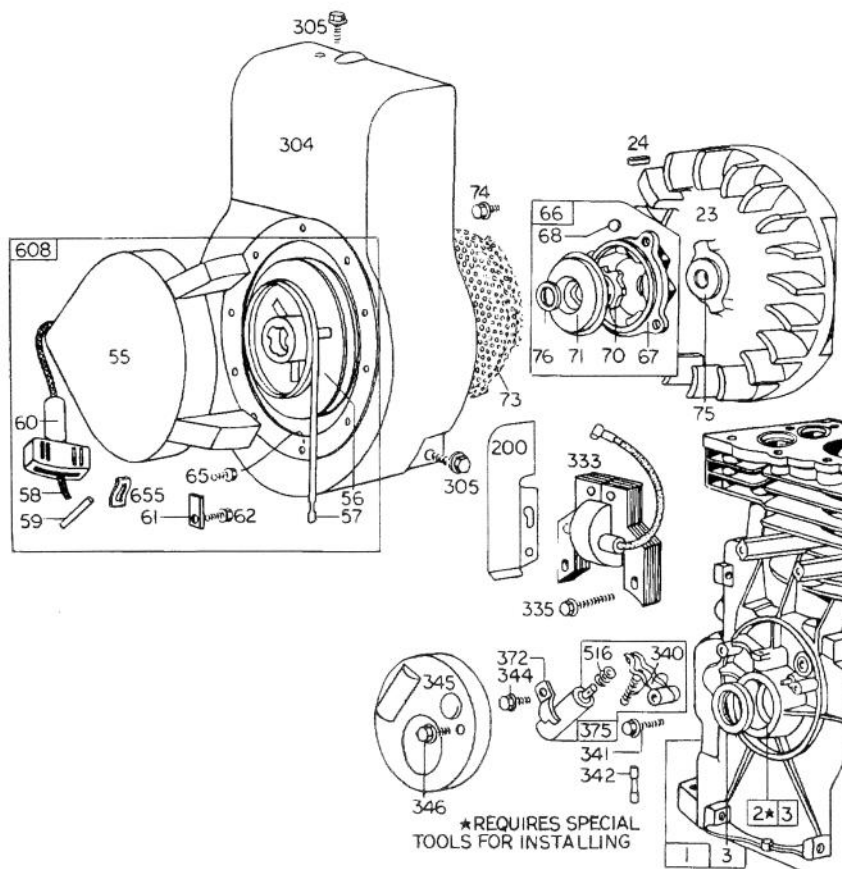

REWIND STARTER ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	299540	Cylinder Assembly	1
2	297565	Bushing - Cylinder	1
		Note: Requires special tools for installation	1
3	89660	Seal - Oil	1
23	297229	Flywheel - Magneto	1
24	61760	Key - Flywheel	1
55	299431	Housing - Rewind Starter	1
56	295871	Pulley - Rewind Starter	1
57	294303	Spring - Rewind Starter	1
58	66564	Rope - Rewind Starter	1
59	230228	Pin - Starter Grip	1
60	66728	Grip - Starter Rope	1
61	68848	Bumper - Starter Pulley	1
62	93254	Screw-Pulley Bumper Mounting	1
65	93067	Screw - Rewind Starter Housing Mounting	1
66	298310	Clutch Assy. - Rewind Starter	1
67	211383	Housing - Starter Clutch	1
68	63770	Ball - Clutch	1
70	298436	Ratchet - Rewind Starter	1
71	221653	Washer - Clutch Retainer	1
73	221923	Screen - Starter Pulley	1
74	93490	Screw - Sem	1
75	220865	Washer - Spring	1
76	68238	Washer - Ratchet Sealing	1

Ref. No.	Part No.	Description	No. Used
200	221480	Guide - Air	1
304	299410	Housing - Blower	1
305	93158	Screw - Blower Housing Mounting	1
333	298316	Armature - Magneto	1
335	93414	Screw - Armature Mtg. Sem	1
340	26018	Spring - Breaker Arm	1
341	93381	Screw - Breaker Arm Mounting Sem	1
342	65704	Plunger - Breaker Point	1
344	93042	Screw - Condenser Clamp Mounting Sem	1
345	220366	Cover - Breaker Point and Condenser	1
346	93014	Screw - Dust Cover Mounting	1
372	220477	Clamp - Condenser	1
375	294628	Breaker Points and Condenser Set	1
		Note: 299061 Ignition Kit Includes: 294628 Point Set	
		65704 Plunger	
		61760 Key - Flywheel	
516	260374	Spring - Connector	1
608	299334	Starter Assy. - Rewind	1
655	221014	Anchor - Spring	1