



Form No. 3389-315 Rev B

Count on it.

Parts Catalog

Workman® MD Utility Vehicle

Model No. 07279—Serial No. 315000001 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

 
Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Front Suspension and Wheel Assembly	4
Front Frame Assembly	5
Rear Frame and Suspension Assembly	6
Front Brake Assembly	7
Master Cylinder Assembly No. 104-6782	8
Brake Caliper Assembly No. 127-7424	9
Rear Brake Assembly	10
RH Rear Brake Assembly No. 114-8331	11
LH Rear Brake Assembly No. 114-8332	12
Steering Assembly	13
Steering Box Assembly No. 112-3130	14
Pedal Box Assembly	15
Shifter Assembly	16
Hood and Bumper Assembly	17
Fender Well Assembly	18
Fender Assembly	19
Dash Installation Assembly	20
Dash Assembly	21
Seatbase Assembly	22
Cargo Bed Assembly	23
Cargo Bed Service Assembly No. 127-7384	24
Engine, Clutch and Air Cleaner Assembly	25
Primary Clutch Assembly No. 120-4823	27
Air Cleaner Assembly No. 99-7120	28
Rear Axle Drive System Assembly	29
Transaxle Assembly No. 121-6339	30
Secondary Clutch Assembly No. 119-6011	32
Battery Assembly	33
Electrical Assembly	34
Starter Generator Assembly No. 119-9545	35
Fuel Tank Assembly	36
Cylinder Head Assembly	37
Crankshaft and Piston Assembly	38
Camshaft and Valve Assembly	39
Starter Air Shroud Assembly	40
Air Intake Assembly	41
Carburetor Assembly	42
Crankcase Assembly	43
Fuel Pump Assembly	44
Magneto Assembly	45
Miscellaneous Engine Parts	46
Governor Assembly	47
Attachments and Accessories	48

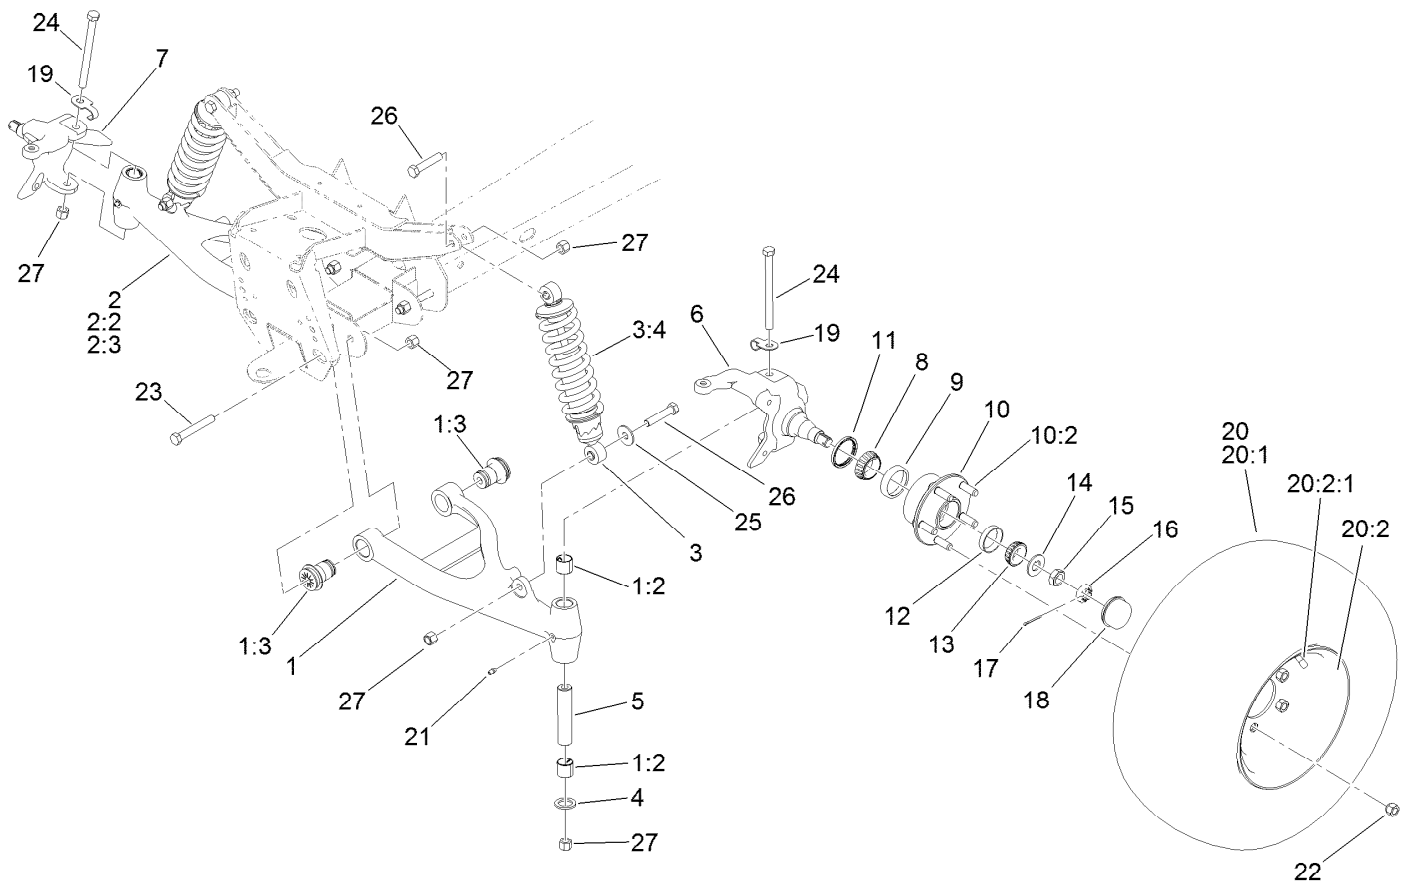

Front Suspension and Wheel Assembly

Ref.	Part Number	Qty.	Description
1	114-8313	1	LH A-Arm ASM
1:2	125-5196	2	Bushing
1:3	87-1450	2	Bushing-Flange
2	114-8314	1	RH A-Arm ASM
2:2	125-5196	2	Bushing
2:3	87-1450	2	Bushing-Flange
3	112-2975	2	Shock/Spring ASM
3:4	112-3383	1	Spring
4	256-115	2	Washer-Thrust
5	99-7499	2	Sleeve-Kingpin
6	119-9521	1	Spindle-LH
7	119-9522	1	Spindle-RH
8	254-106	2	Cone-Bearing, Tapered
9	254-107	2	Cup-Bearing, Tapered
10	117-8071	2	Hub ASM
10:2	10-6830	5	Stud-Type, Drive
11	108-7019	2	Seal-Shaft
12	254-72	2	Bearing-Cup, Tapered


Ref.	Part Number	Qty.	Description
13	254-94	2	Bearing-Cone, Tapered
14	93-0309	2	Washer-Tab
15	3220-7	2	Nut-Jam
16	93-0307	2	Nut-Lock, Retainer
17	3272-12	2	Pin-Cotter
18	241-119	2	Cap-Dust
19	112-3311	2	Clip-Hose
20	127-7434	2	Tire/Wheel ASM
20:1	127-7435	1	Tire (22 X 9.50-10) 4-Ply
20:2	127-7436	1	Wheel
20:2:1	232-27	1	Stem-Valve
21	302-5	2	Fitting-Grease
22	242-50	10	Nut-Lug
23	325-14	4	Screw-HH
24	325-20	2	Screw-HH
25	51-3500	2	Washer
26	325-10	4	Screw-HH
27	3296-23	10	Nut-Lock, NI

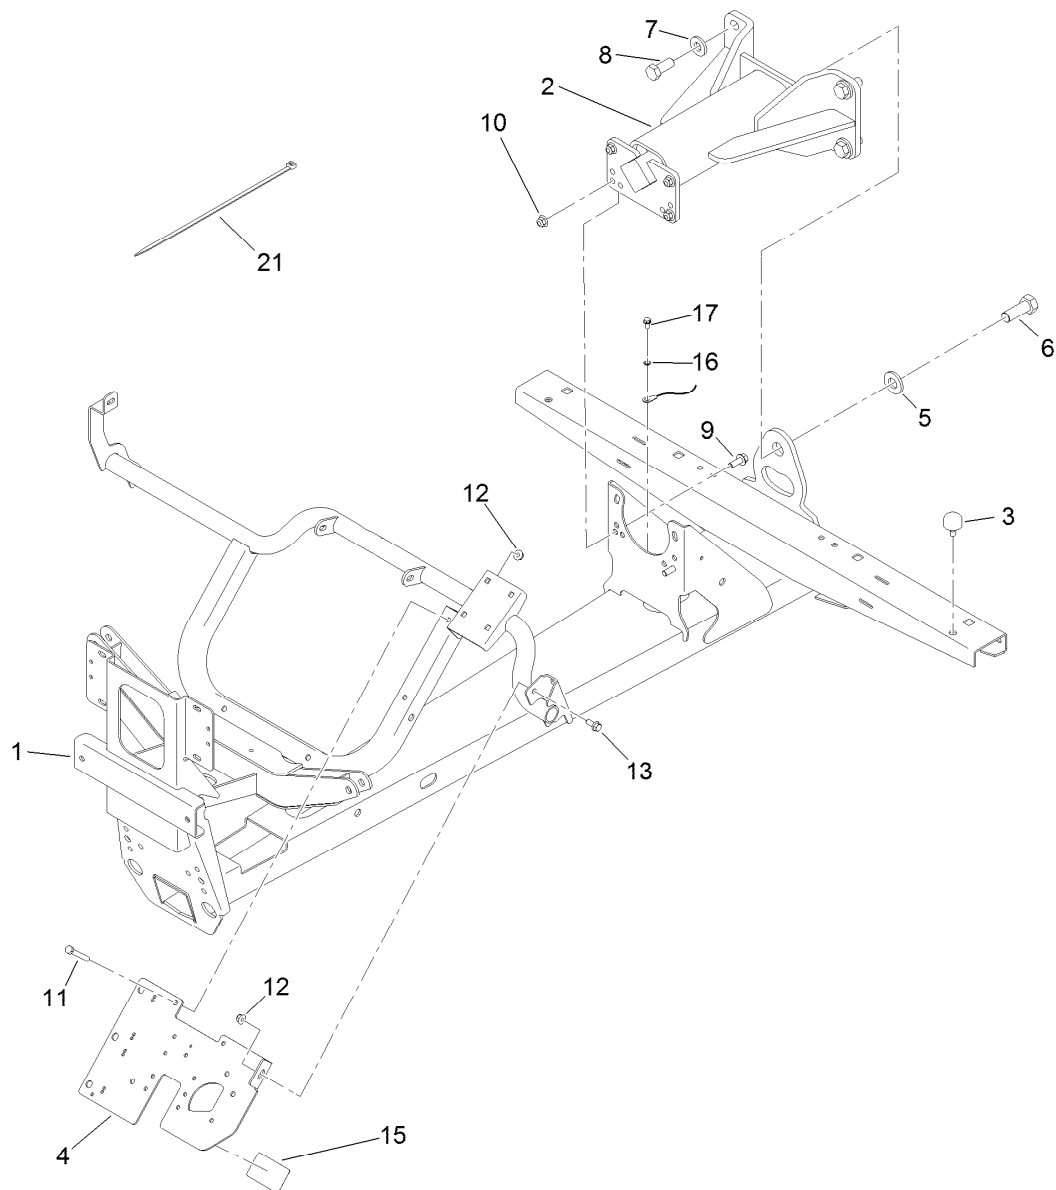 

Front Frame Assembly

Ref.	Part Number	Qty.	Description
1	112-3340-03	1	Frame-Front
2	99-7700	1	Yoke-Pivot
3	87-2440	1	Bumper-Rubber
4	112-3376-03	1	Plate-Mount, Electrical
5	87-3060	1	Washer-Hardened
6	328-24	1	Screw-HH
7	99-7667	4	Washer-Flat
8	327-4	4	Screw-HH
9	3234-11	4	Screw-HHF


Ref.	Part Number	Qty.	Description
10	104-8301	4	Nut-HF, NI
11	322-11	2	Screw-HH
12	104-8300	3	Nut-HF, NI
13	110-5053	1	Screw-HHF
15	112-3325	1	Decal-Block, Fuse
16	3254-16	1	Washer-Lock/Int
17	32144-4	1	Screw-HWH
21	3290-379	12	Tie-Cable

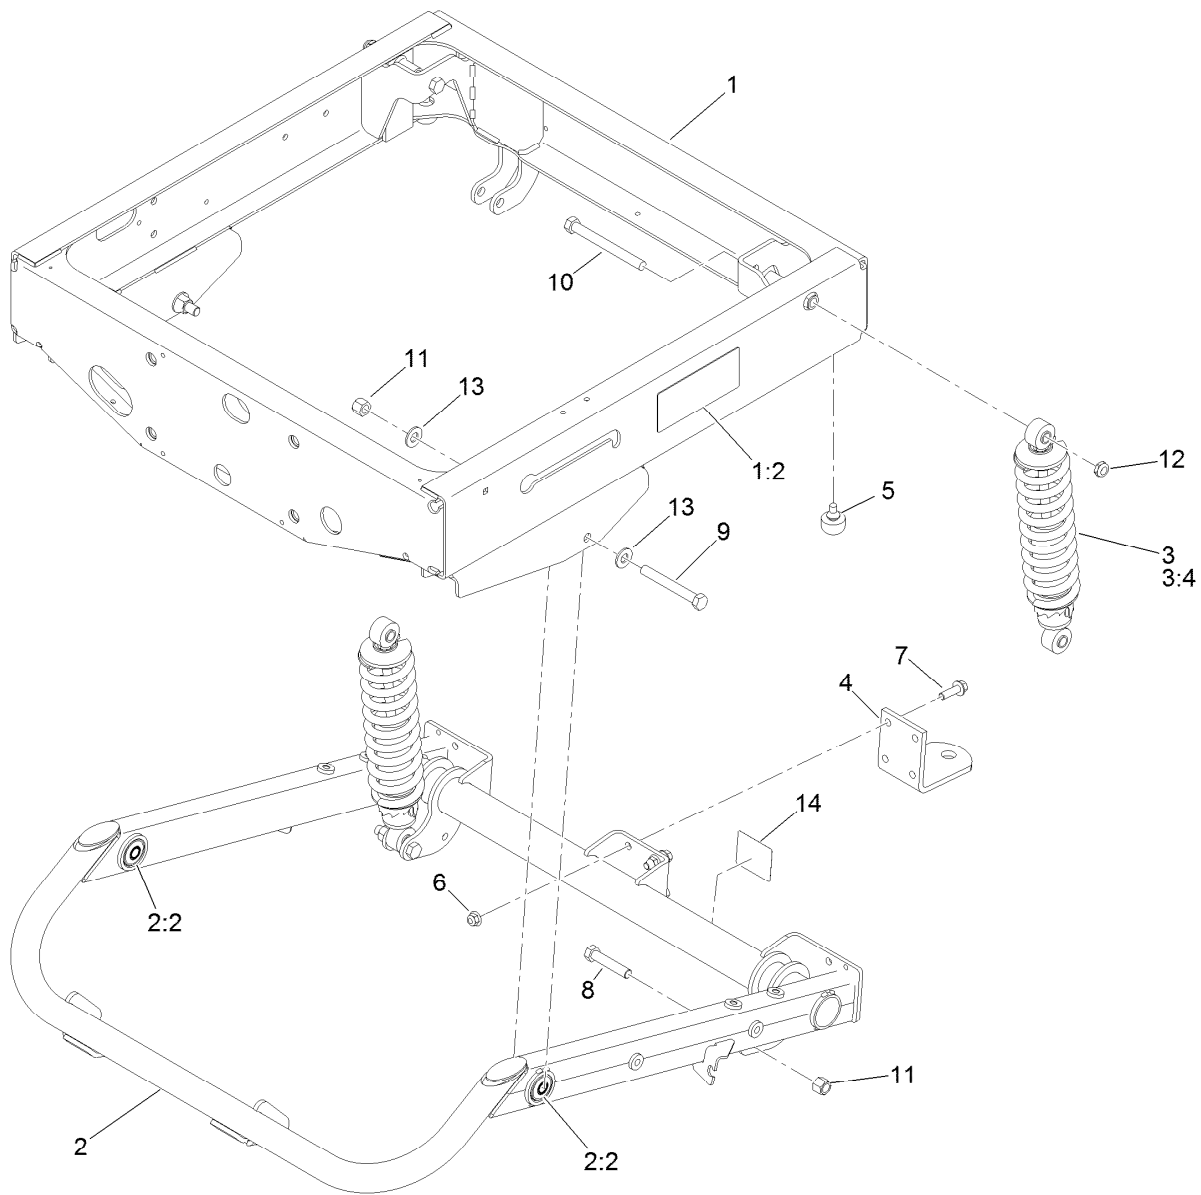 

Rear Frame and Suspension Assembly


Ref.	Part Number	Qty.	Description
1	119-9628	1	Rear Frame ASM
1:2	99-7345	2	Decal-Warning
2	115-7614	1	Swing Arm ASM
2:2	112-3377	2	Bushing-Arm, Control
3	112-3168	2	Rear Shock/Spring ASM
3:4	112-3386	1	Spring
4	99-7654-03	1	Hitch-Duty, Light
5	87-2440	2	Bumper-Rubber
6	104-8301	4	Nut-HF, NI

Ref.	Part Number	Qty.	Description
7	3234-24	4	Screw-HHF
8	325-10	2	Screw-HH
9	325-17	2	Screw-HH
10	325-19	2	Screw-HH
11	3296-23	4	Nut-Lock, NI
12	3296-45	2	Nut-Hex
13	87-7270	4	Washer-Thrust
14	99-7350	1	Decal-Rating, Hitch (Light Duty)

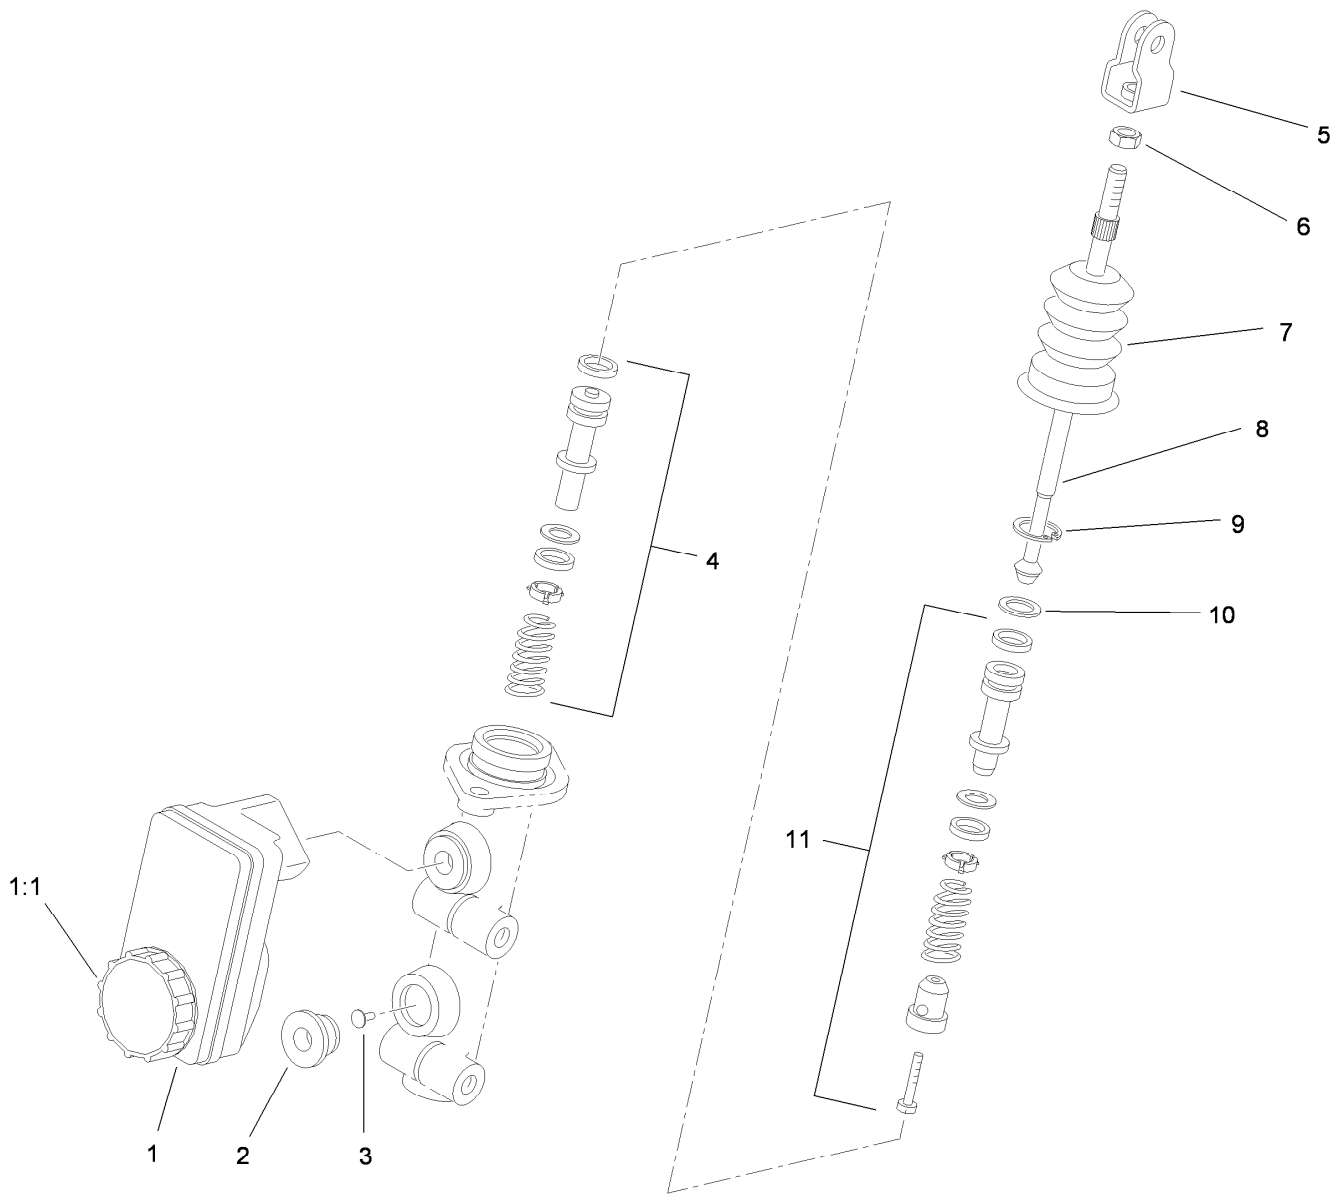 


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

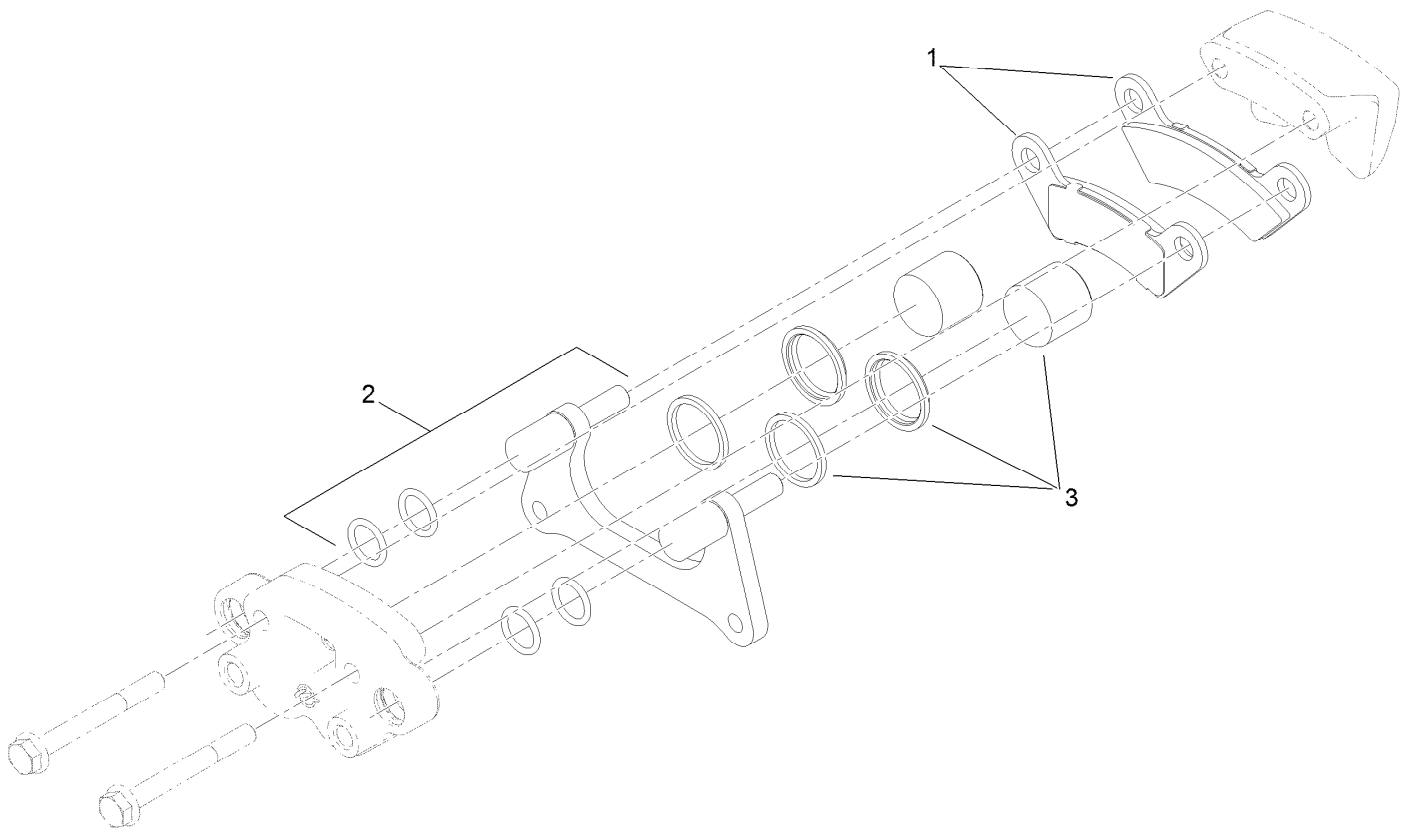 

Brake Caliper Assembly No. 127-7424


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9510	1	*obs* Pads-Brake
2	119-9511	1	Bracket Kit
3	119-9512	1	Piston Kit

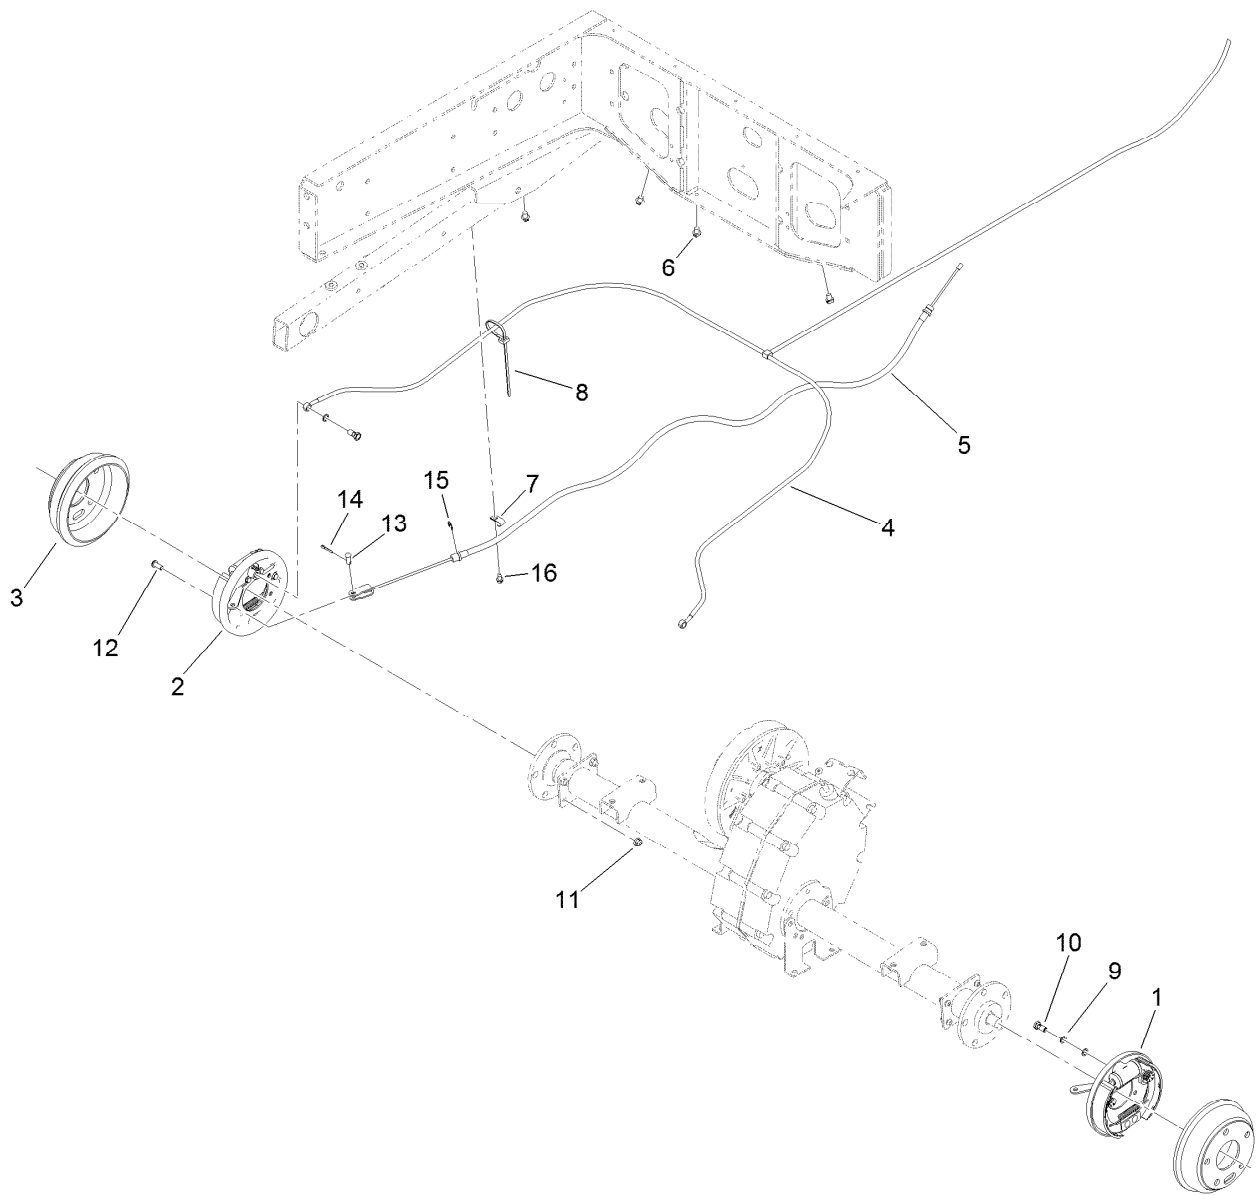 

Rear Brake Assembly

Ref.	Part Number	Qty.	Description
1	114-8331	1	RH Brake ASM
2	114-8332	1	LH Brake ASM
3	104-6500	2	Drum-Brake
4	112-2926	1	Rear Brake Line ASM
5	112-3309	2	Cable-Brake
6	32180-030	6	Clip-Tie
7	2412-89	2	Clamp-R
8	3290-378	2	Tie-Cable


Ref.	Part Number	Qty.	Description
9	115-2341	4	Washer-Banjo
10	115-2340	2	Bolt-Banjo
11	104-8300	8	Nut-HF, NI
12	3274-55	8	Screw-HSBH
13	283-62	2	Pin-Clevis
14	3272-10	2	Pin-Cotter
15	32120-47	2	Ring-Retaining, External
16	32104-17	2	Screw-HWH

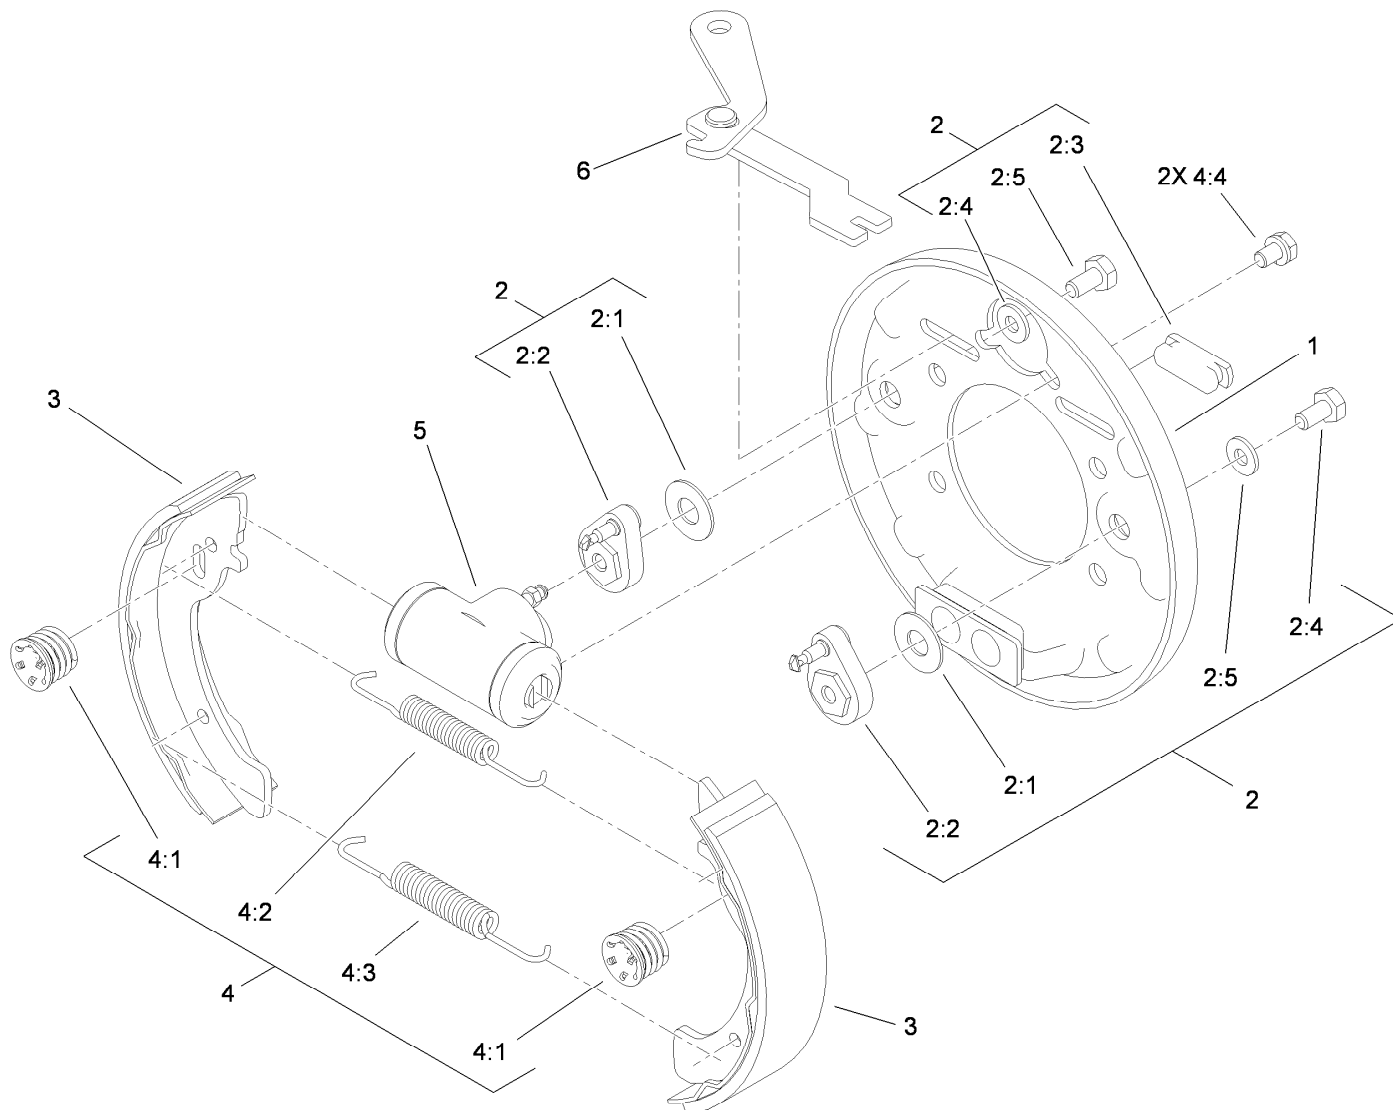 

RH Rear Brake Assembly No. 114-8331

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6826	1	RH Park Brake Lever ASM

 
● Not serviced separately

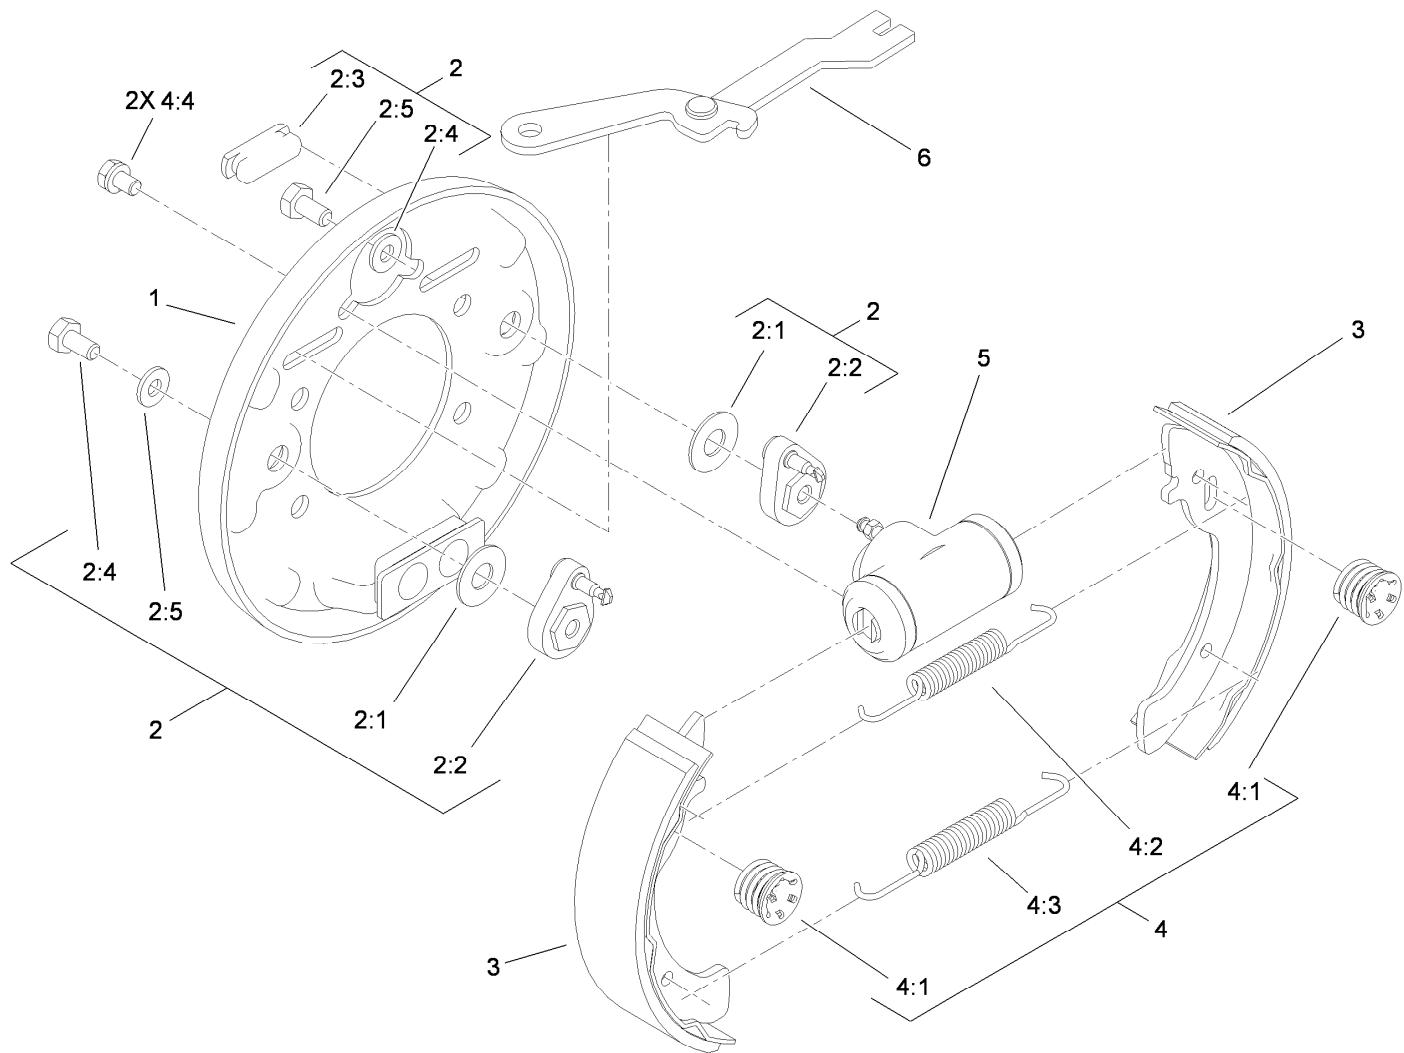

LH Rear Brake Assembly No. 114-8332

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6825	1	LH Park Brake Lever ASM

 ● Not serviced separately

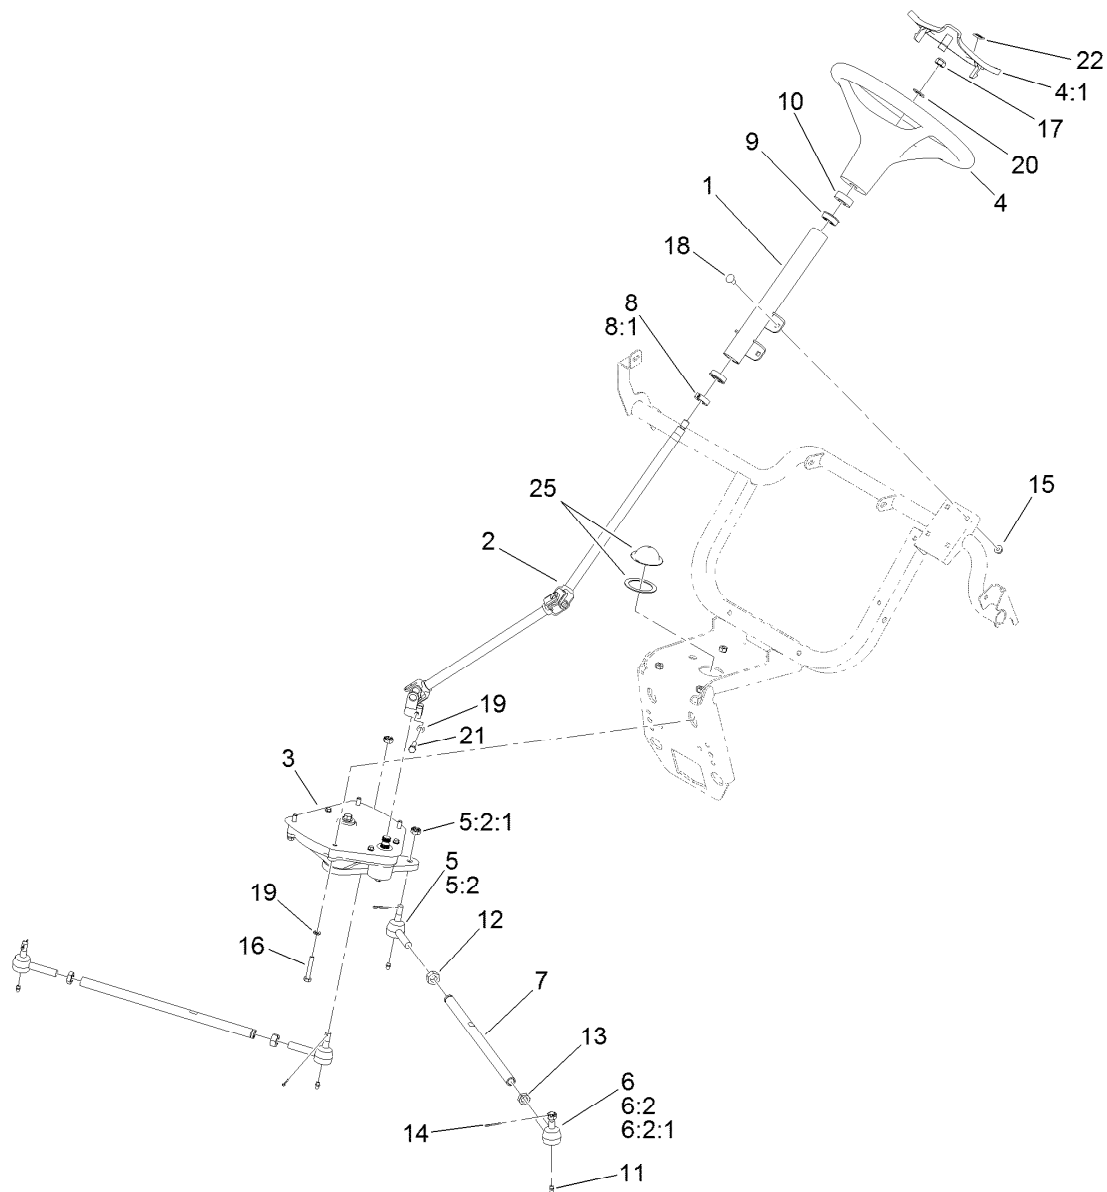


Steering Assembly

Ref.	Part Number	Qty.	Description
1	112-3264-03	1	Column
2	112-3355	1	Steering Shaft ASM
3	112-3130	1	Steering Box ASM
4	98-1471	1	Wheel-Steering
4:1	98-1468	1	Cover-Wheel, Steering
5	112771-03	2	Joint-Ball, LH
5:2		1	Socket-Balljoint ●
5:2:1	915031	1	Nut
6	112772-03	2	Joint-Ball, RH
6:2		1	Socket-Balljoint ●
6:2:1	915031	1	Nut
7	115-7654	2	Tie Rod
8	111383	1	Collar
8:1	3245-32	1	Screw-HSH
9	112-3262	2	Bearing

Ref.	Part Number	Qty.	Description
10	21-9260	1	Cover-Dust
11	302-5	4	Fitting-Grease
12	3218-21	2	Nut-Jam LH
13	3220-11	2	Nut-Jam
14	3272-7	4	Pin-Cotter
15	104-8300	4	Nut-HF, NI
16	112-3305	4	Screw-HH
17	119-9493	1	Nut-Lock, NI
18	3230-1	4	Bolt-CARR
19	3253-4	5	Washer-Lock
20	3256-26	1	Washer-Flat
21	48-7730	1	Screw-Cap, HH
22	98-1459	1	Decal
25	120-5049	1	Steering Box Cover Kit

 
● Not serviced separately

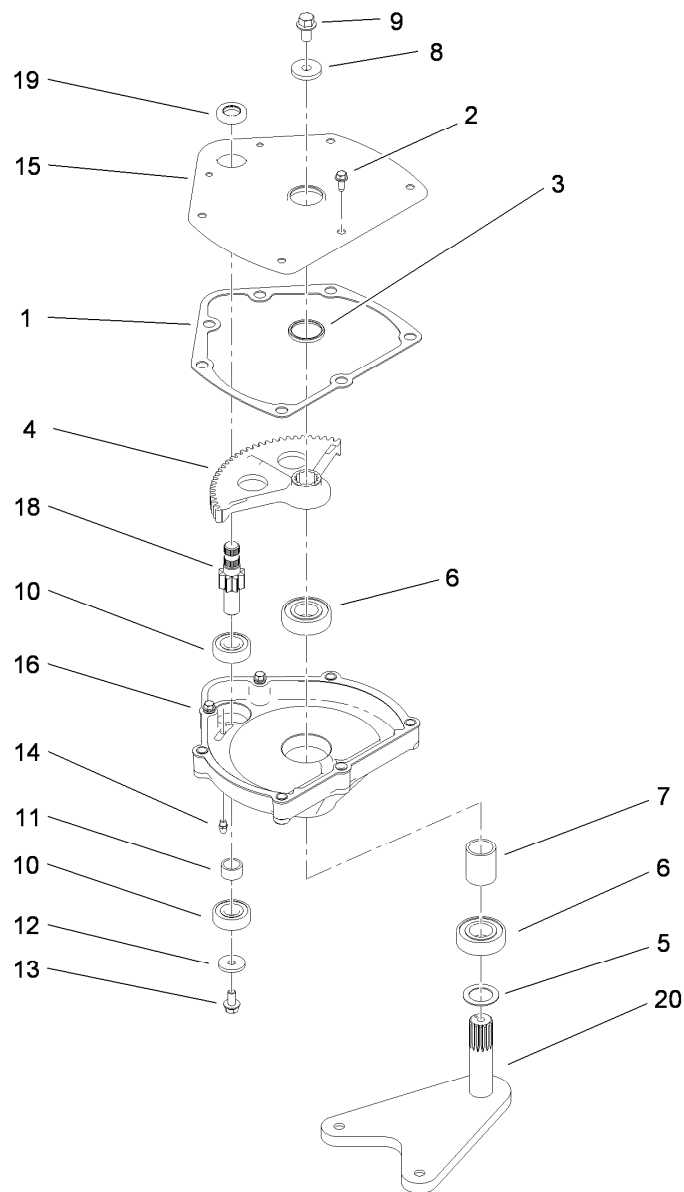

Steering Box Assembly No. 112-3130

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-2135	1	Gasket
2	32144-10	3	Screw-HWH
3	103118	1	Seal
4	99-7843	1	Sector-Gear
5	3256-42	1	Washer-Flat
6	251-82	2	Bearing-Ball
7	112-2917	1	Spacer
8	104-6563	1	Washer-Stepped
9	104-7156	1	Screw-HHF
10	38-7820	2	Bearing-Ball


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	94-2217	1	Spacer-Shaft, Input
12	1-613235	1	Washer
13	98-3498	1	Screw-HH
14	302-5	1	Fitting-Grease
15	112-2918-03	1	Cover-Housing, Steering
16	114-8309	1	Housing-Steering
18	115-7726	1	Gear-Pinion
19	99-7657	1	Seal-Oil
20	112-3096-03	1	Arm-Pitman

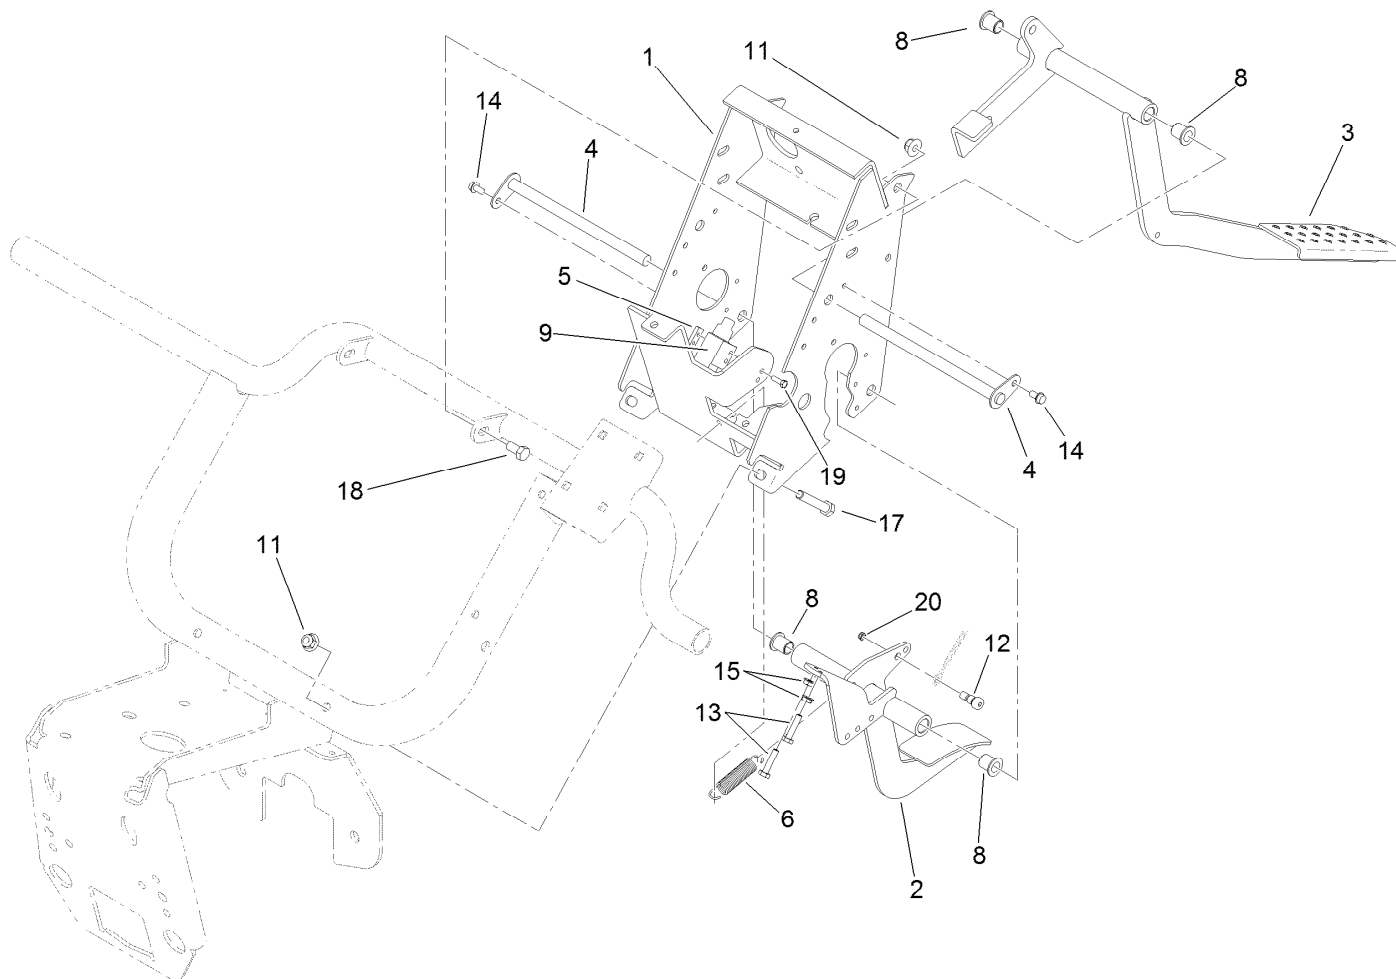 

Pedal Box Assembly

Ref.	Part Number	Qty.	Description
1	119-0748-03	1	Support-Pedal
2	119-9747-03	1	Pedal-Throttle
3	112-3314-03	1	Pedal-Brake
4	104-7164	2	Pivot-Pedal
5	1-633181	1	Plate-Tapped
6	104-6415	1	Spring-Return, Pedal
8	125-8775	4	Bushing-Flange
9	99-7407	1	Switch
11	104-8301	4	Nut-HF, NI

Ref.	Part Number	Qty.	Description
12	1-809056	1	Screw-HSH
13	321-7	2	Screw-HH
14	32144-4	2	Screw-HWH
15	32149-2	2	Nut-Keps
17	323-11	2	Screw-HH
18	323-4	2	Screw-HH
19	3290-134	2	Screw
20	3296-47	1	Nut-Lock,NI

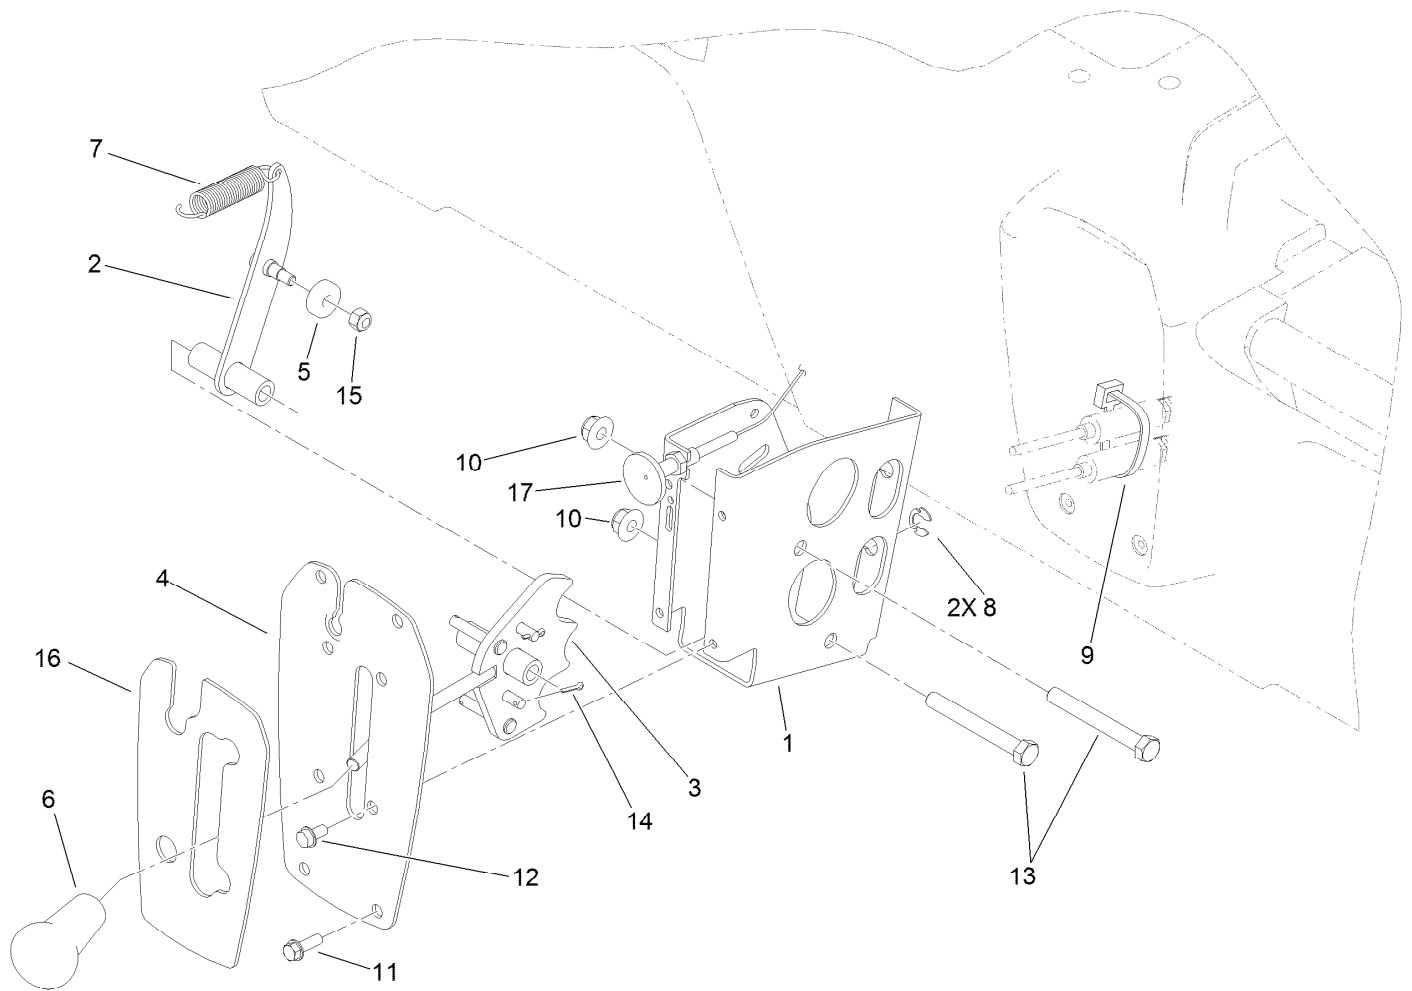 


Shifter Assembly

Ref.	Part Number	Qty.	Description
1	108-3141-03	1	Bracket-Shift
2	108-3138	1	Arm-Detent
3	114-2719	1	Plate-Detent
4	99-7887-03	1	Plate-Shifter
5	251-307	1	Bearing-Ball
6	99-7981	1	Knob-Grip, Soft
7	104-6415	1	Spring-Return, Pedal
8	32151-101	2	E-Ring
9	3290-378	1	Tie-Cable

Ref.	Part Number	Qty.	Description
10	104-8301	2	Nut-HF, NI
11	32105-15	4	Screw-HWH
12	32144-4	4	Screw-HWH
13	323-14	2	Screw-HH
14	3272-5	2	Pin-Cotter
15	3296-42	1	Nut-Lock, NI
16	99-7952	1	Decal-Shifter
17	104-6507	1	Cable-Choke




Ref.	Part Number	Qty.	Description
14	32105-13	4	Screw-HWH
15	3256-14	4	Washer-Flat
16	3296-2	4	Nut-Lock, NI
17	32128-20	2	Nut-HF
18	3230-18	2	Screw-CARR
20	46-8091	4	Screw-HWH
21	114-8322	2	Headlight ASM
21:2	115-2395	1	Bulb-Light
22	121-9606	1	Hood ASM
22:1:2	115-7635	1	Seal-Foam
22:2	121-9605	6	Screw-HWH

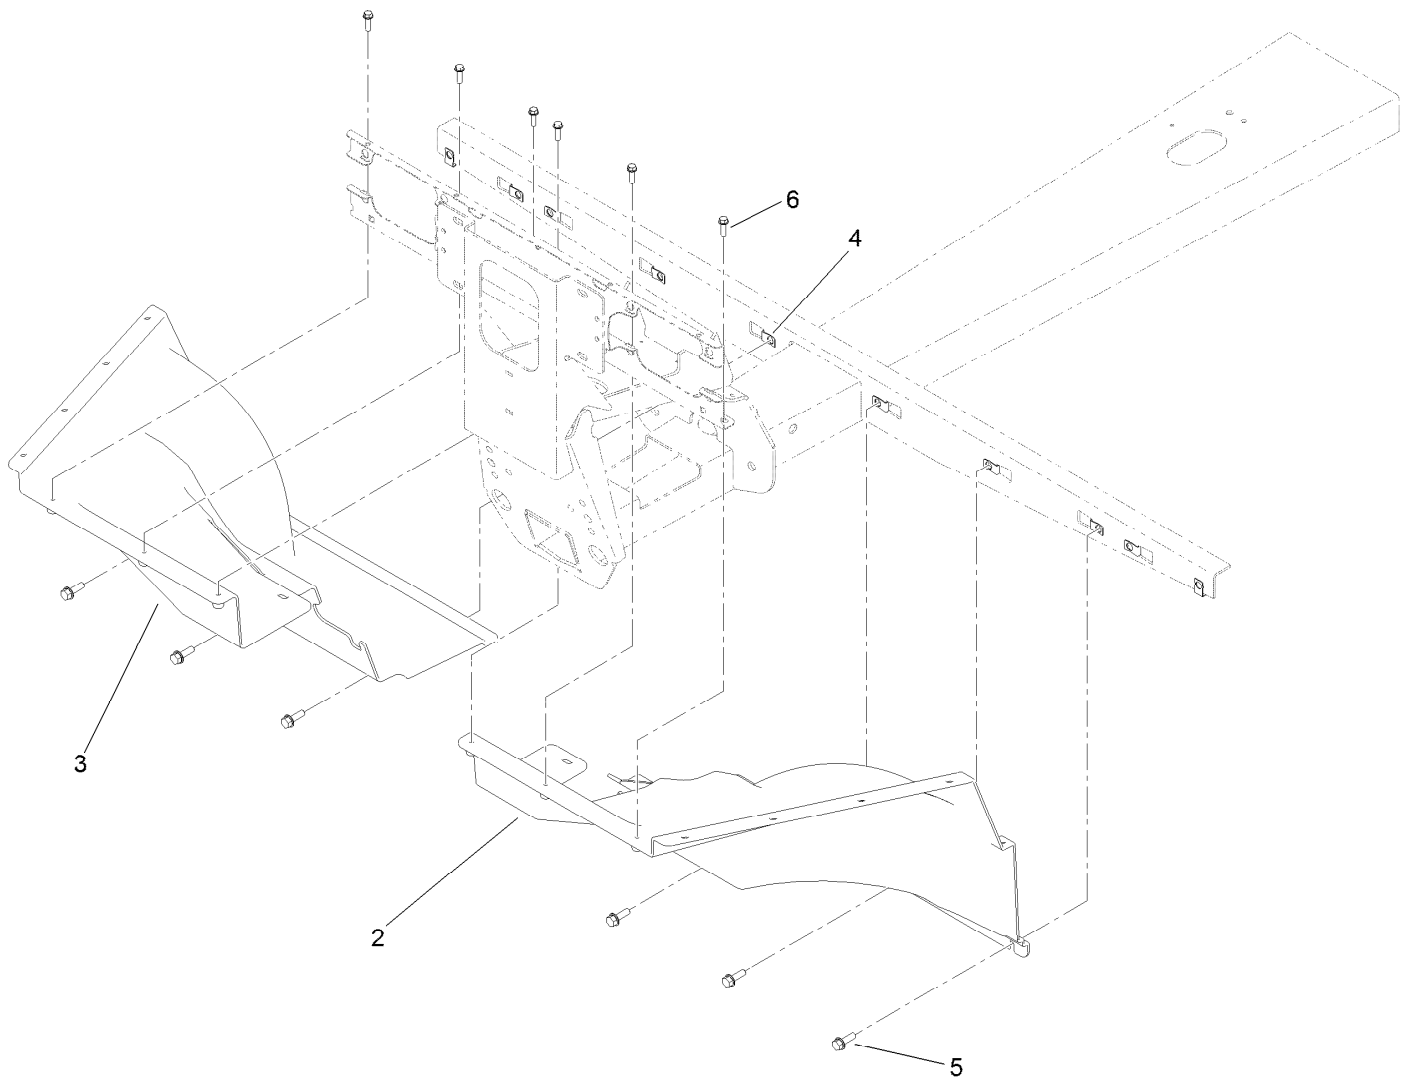 


Fender Well Assembly

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
2	112-3369	1	Well-Fender, LH
3	112-3368	1	Well-Fender, RH
4	112-3306	10	Nut
5	3234-29	10	Screw-HHF
6	46-8091	6	Screw-HWH

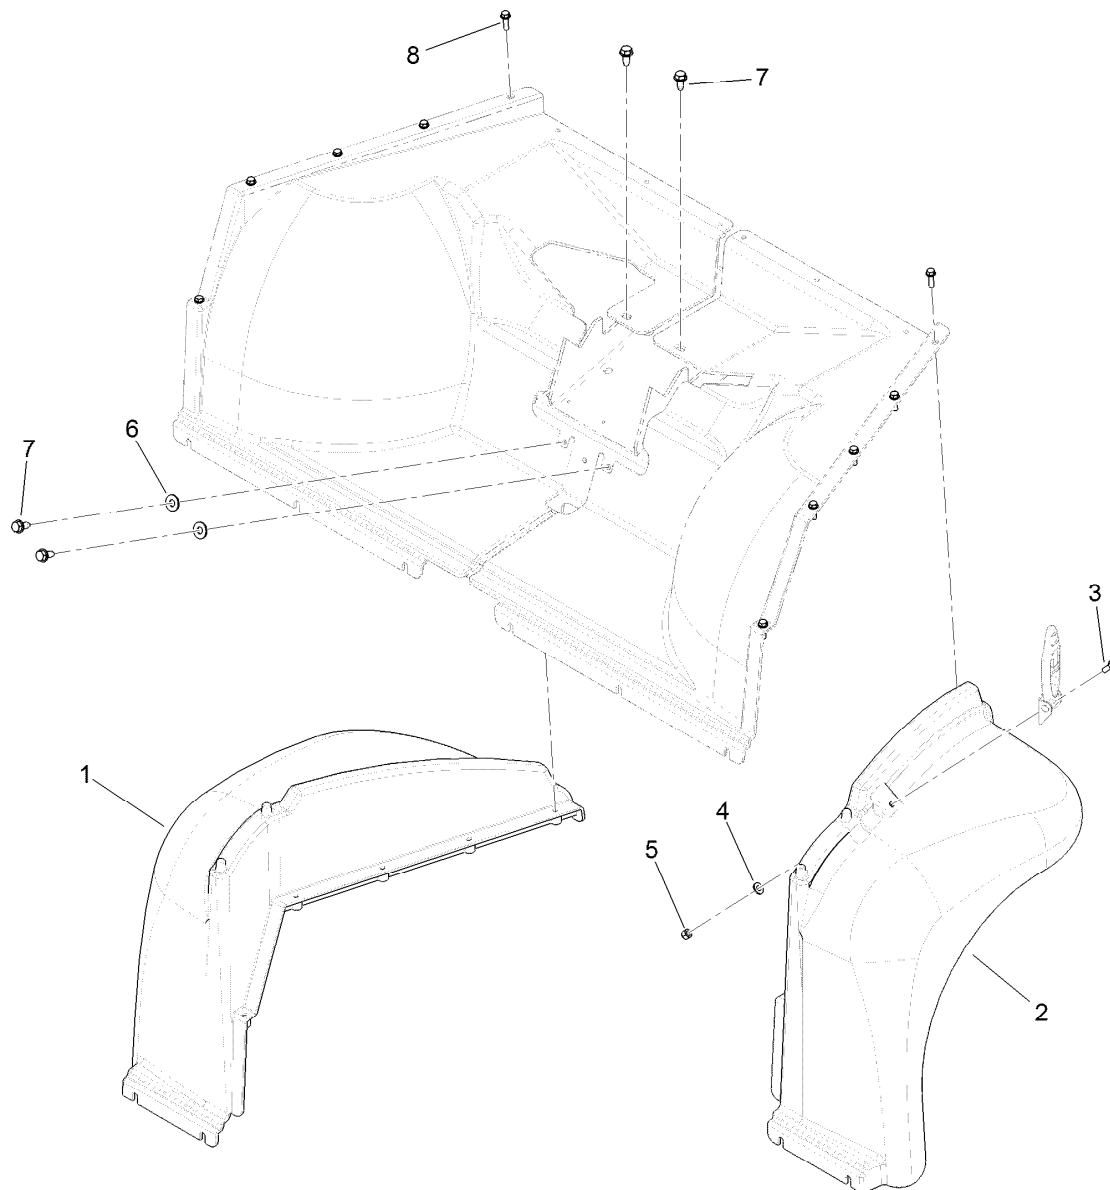 

Fender Assembly


Ref.	Part Number	Qty.	Description
1	112-3371	1	Fender-LH
2	112-3370	1	Fender-RH
3	321-39	2	Screw-HH
4	3256-22	2	Washer-Flat
5	3296-42	2	Nut-Lock, NI
6	3256-71	2	Washer-Flat
7	32104-32	4	Screw-HWH
8	46-8091	10	Screw-HWH

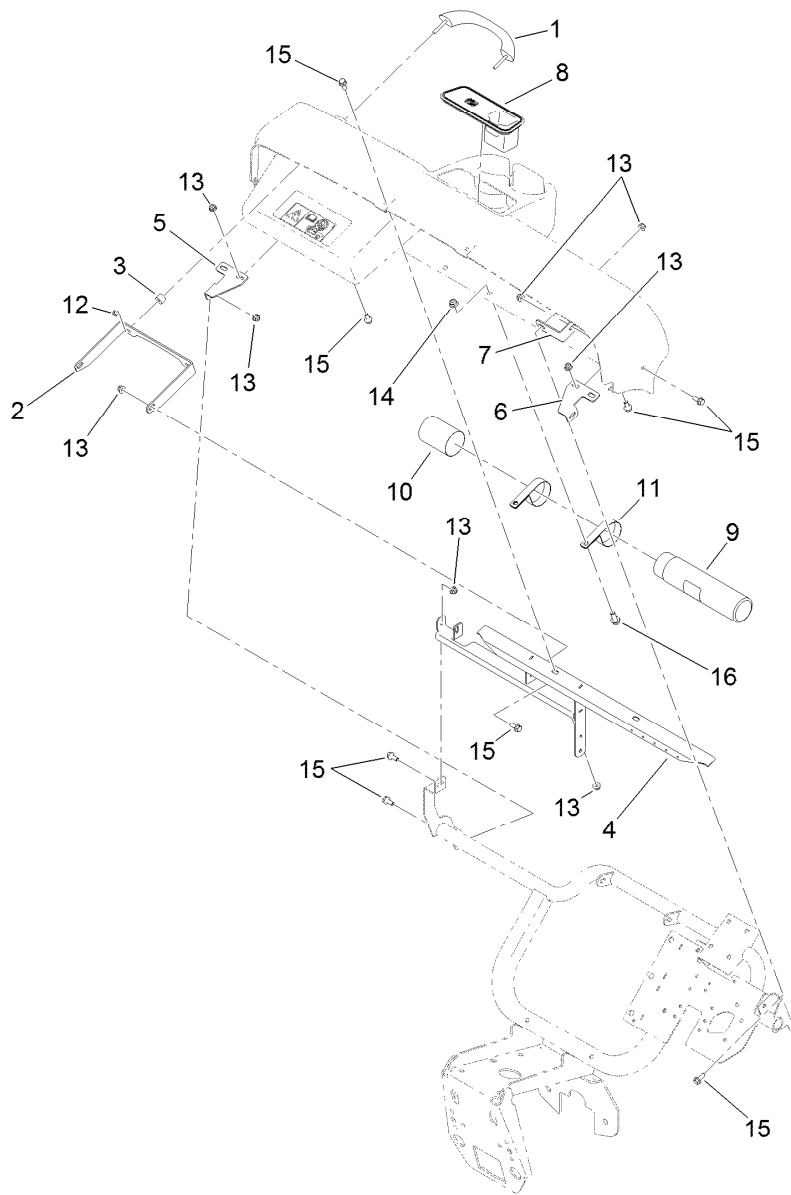 

Dash Installation Assembly


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	112-3320	1	Handle-Grip
2	112-3391-03	1	Bracket-Grip, Handle
3	114-8301	2	Spacer
4	115-7651-03	1	Support-Dash
5	114-8304	1	Bracket-Mount, Dash (RH)
6	114-8312	1	Bracket-Mount, Dash (LH)
7	114-8305	1	Angle-Mount, Dash (LH)
8	104-6930	1	Plug-Rubber

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
9	104-7050	1	Tube-Manual
10	104-7048	1	Cap-Housing
11	2412-133	2	Clamp-R
12	104-7201	2	Nut-Flange, NI
13	104-8300	15	Nut-HF, NI
14	104-8301	2	Nut-HF, NI
15	110-5053	15	Screw-HHF
16	3234-11	2	Screw-HHF

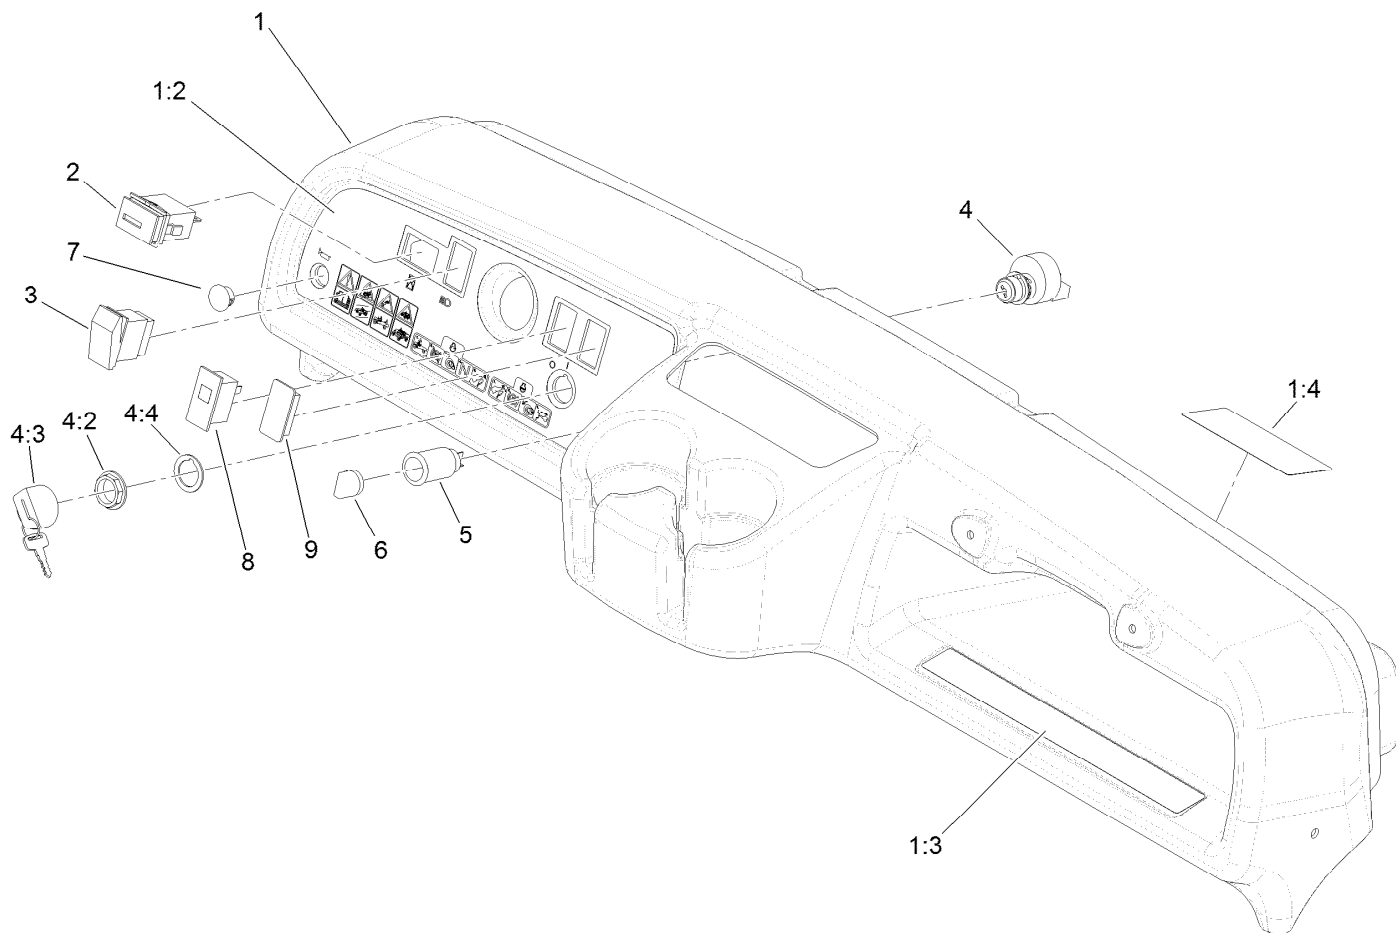 

Dash Assembly


Ref.	Part Number	Qty.	Description
1	114-8310	1	Dash ASM
1:2	117-5001	1	Decal-Panel, Control
1:3	104-6581	1	Decal-Danger
1:4	115-2412	1	Decal-No Storage
2	94-4208	1	Hourmeter
3	95-8999	1	Switch
4	120-3956	1	Ignition Switch ASM
4:2	108-8660	1	Nut-Mounting
4:3	106-5270	1	Ignition Key Set
4:4	108-8659	1	Washer-Backup
5	99-7411	1	Point-Power
6	99-7416	1	Cap
7	94-5627	1	Plug
8	99-7410	1	Indicator-Light, Low-Oil Pressure
9	99-7420	1	Plug-Hole

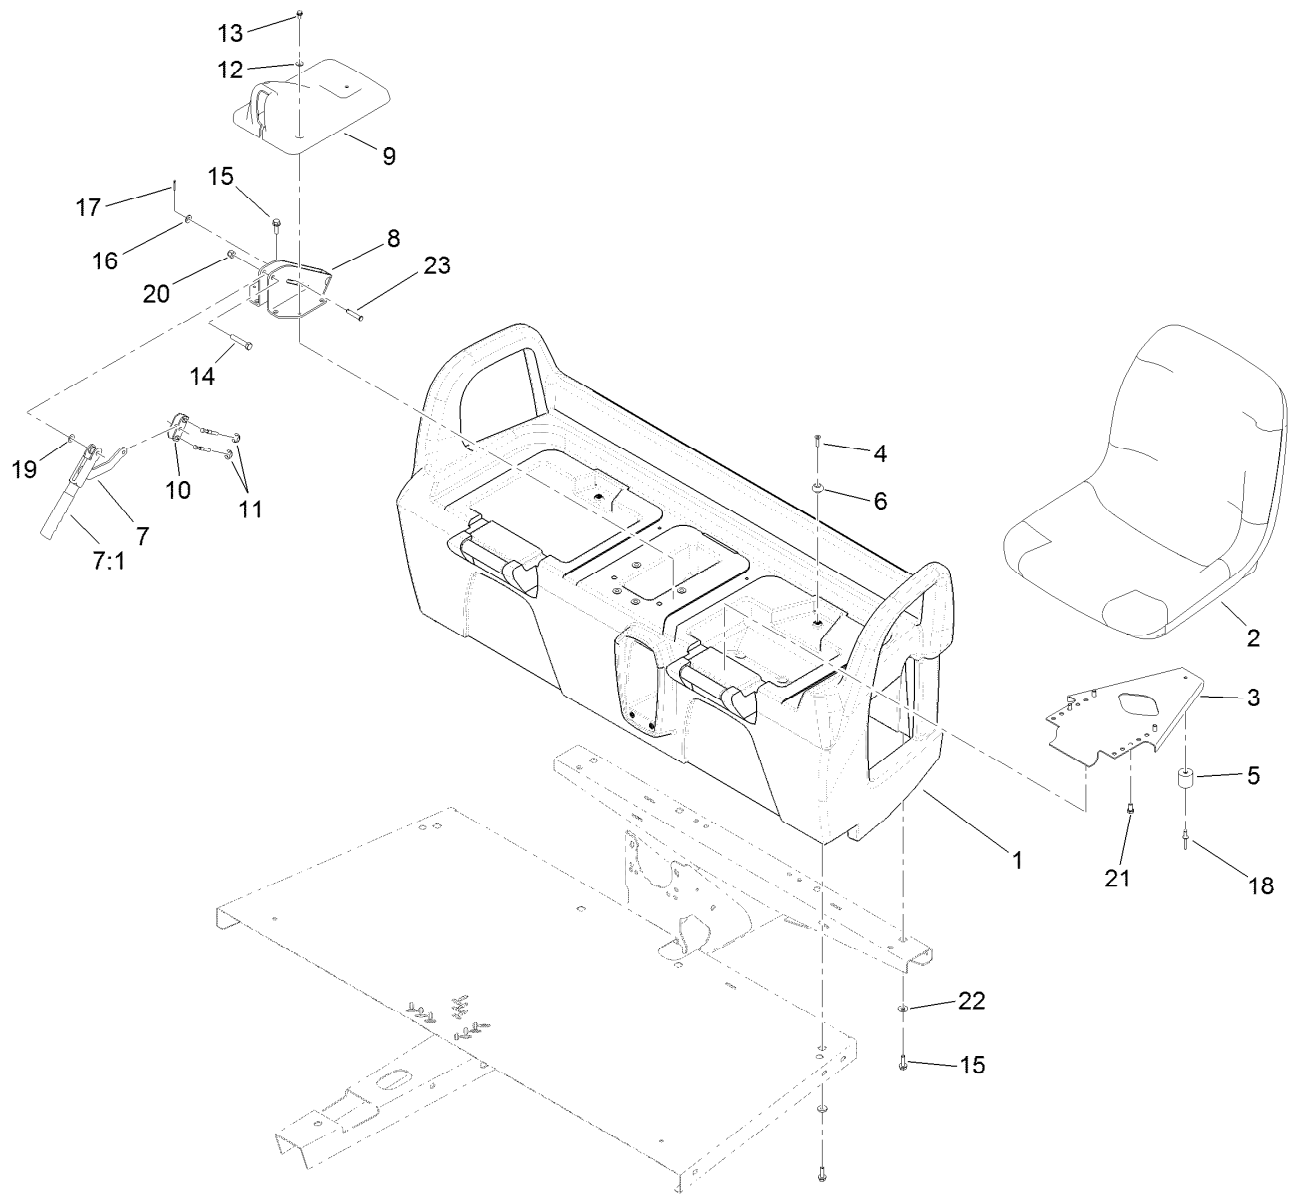 

Seatbase Assembly

Ref.	Part Number	Qty.	Description
1	104-6847	1	Base-Seat
2	112-2923	2	Seat ASM
3	99-7829	2	Bracket-Seat
4	32108-5	2	Screw-FH
5	99-7830	2	Receptical-Rubber
6	99-7833	2	Post-Holding
7	127-8863	1	Lever-Brake, Park
7:1	127-8864	1	Grip-Handle
8	104-6844-03	1	Support-Brake, Park
9	104-7014	1	Cover-Brake, Parking
10	87-3480	1	Bracket-Equalizer, Cable
11	32120-47	2	Ring-Retaining, External


Ref.	Part Number	Qty.	Description
12	3256-1	2	Washer-Flat
13	32144-4	2	Screw-HWH
14	323-10	1	Screw-HH
15	3234-17	12	Screw-HHF
16	3256-23	1	Washer-Plain
17	3272-6	1	Pin-Cotter
18	3290-412	2	Rivet-Blind
19	3290-477	1	Washer-Curved
20	3296-39	1	Nut-Lock, NI
21	33114-016	8	Screw-HH
22	88-7200	8	Washer-Flat
23	94-3829	1	Pin-Clevis

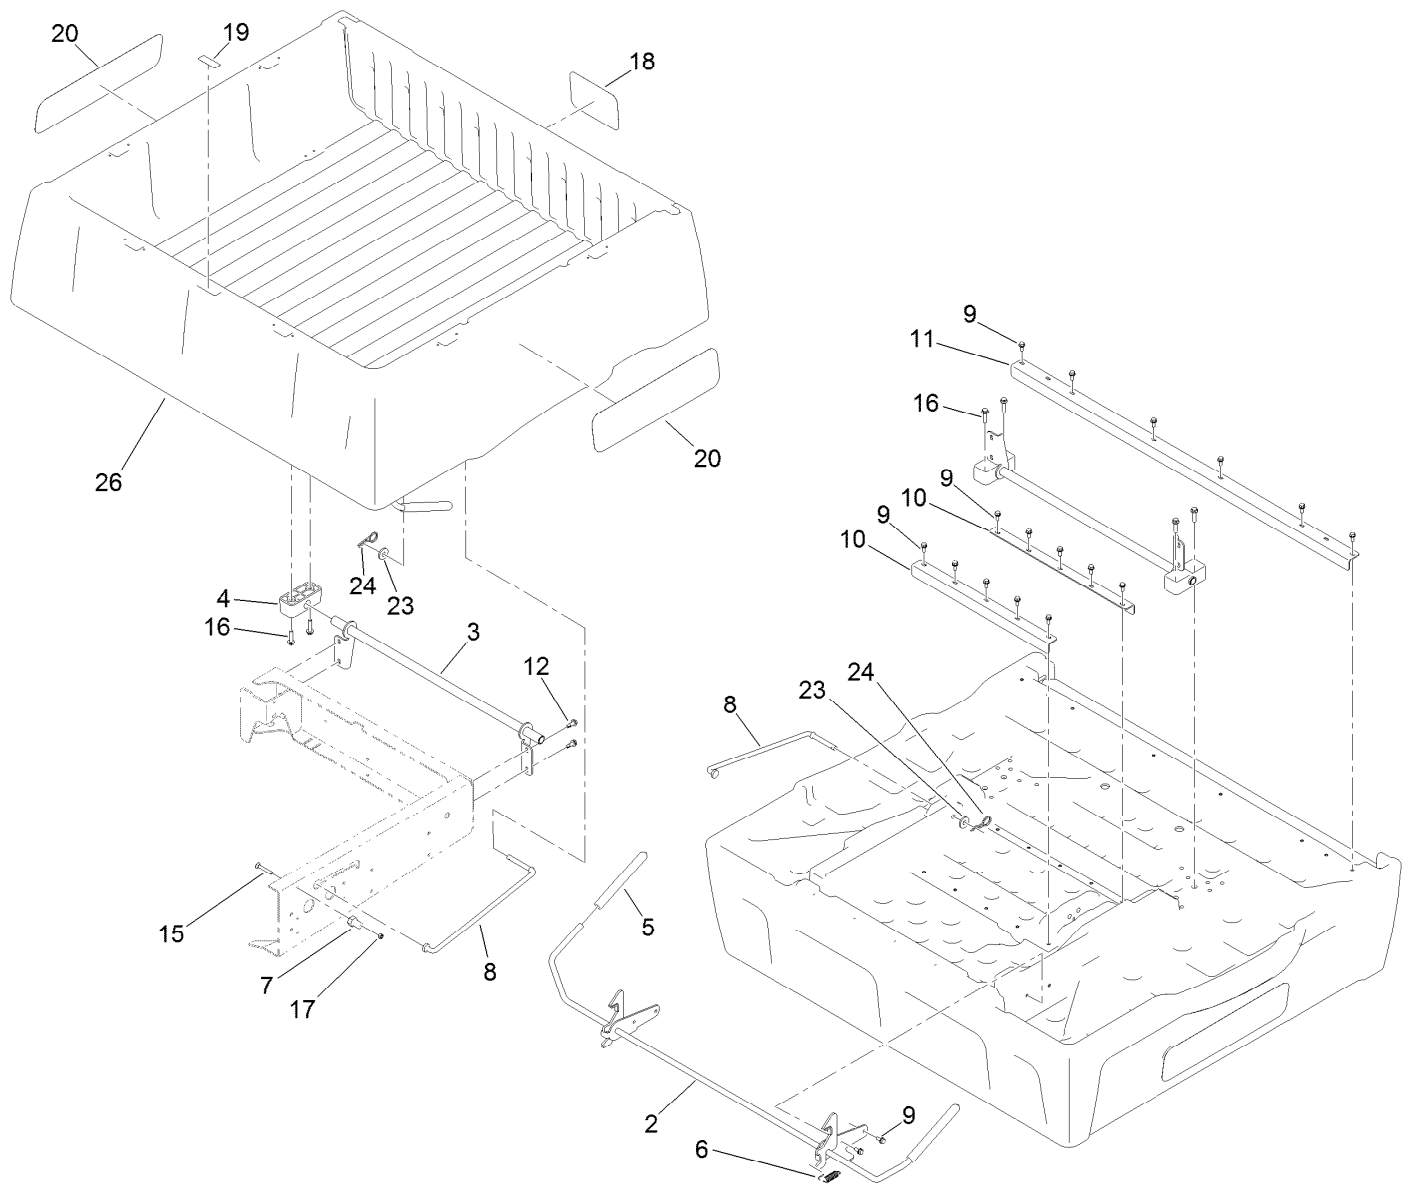 

Cargo Bed Assembly


Ref.	Part Number	Qty.	Description
2	121-6344	1	Latch
3	119-0848-03	1	Bracket-Pivot
4	121-6342	2	Bushing-Pivot
5	119-9627	2	Grip-Handle
6	5-7290	2	Spring-Tension
7	104-7248	2	Pin-Latch
8	121-6316	1	Rod-Prop
9	3234-5	20	Screw-HHF
10	121-6314-03	2	Brace-Bed, Middle
11	121-6315-03	1	Brace-Bed, Rear
12	105-6245	4	Screw-Tapping

Ref.	Part Number	Qty.	Description
15	3230-7	2	Bolt-CARR
16	3234-18	4	Screw-HHF
17	3296-29	2	Nut-Lock, NI
18	104-7213	1	Decal
19	115-7739	1	Decal-No Riders
20	119-0894	2	Decal
23	110-6147	1	Washer-Flat
24	107-3155	1	Hairpin
26	127-7384	1	Complete Cargo Bed Service ASM

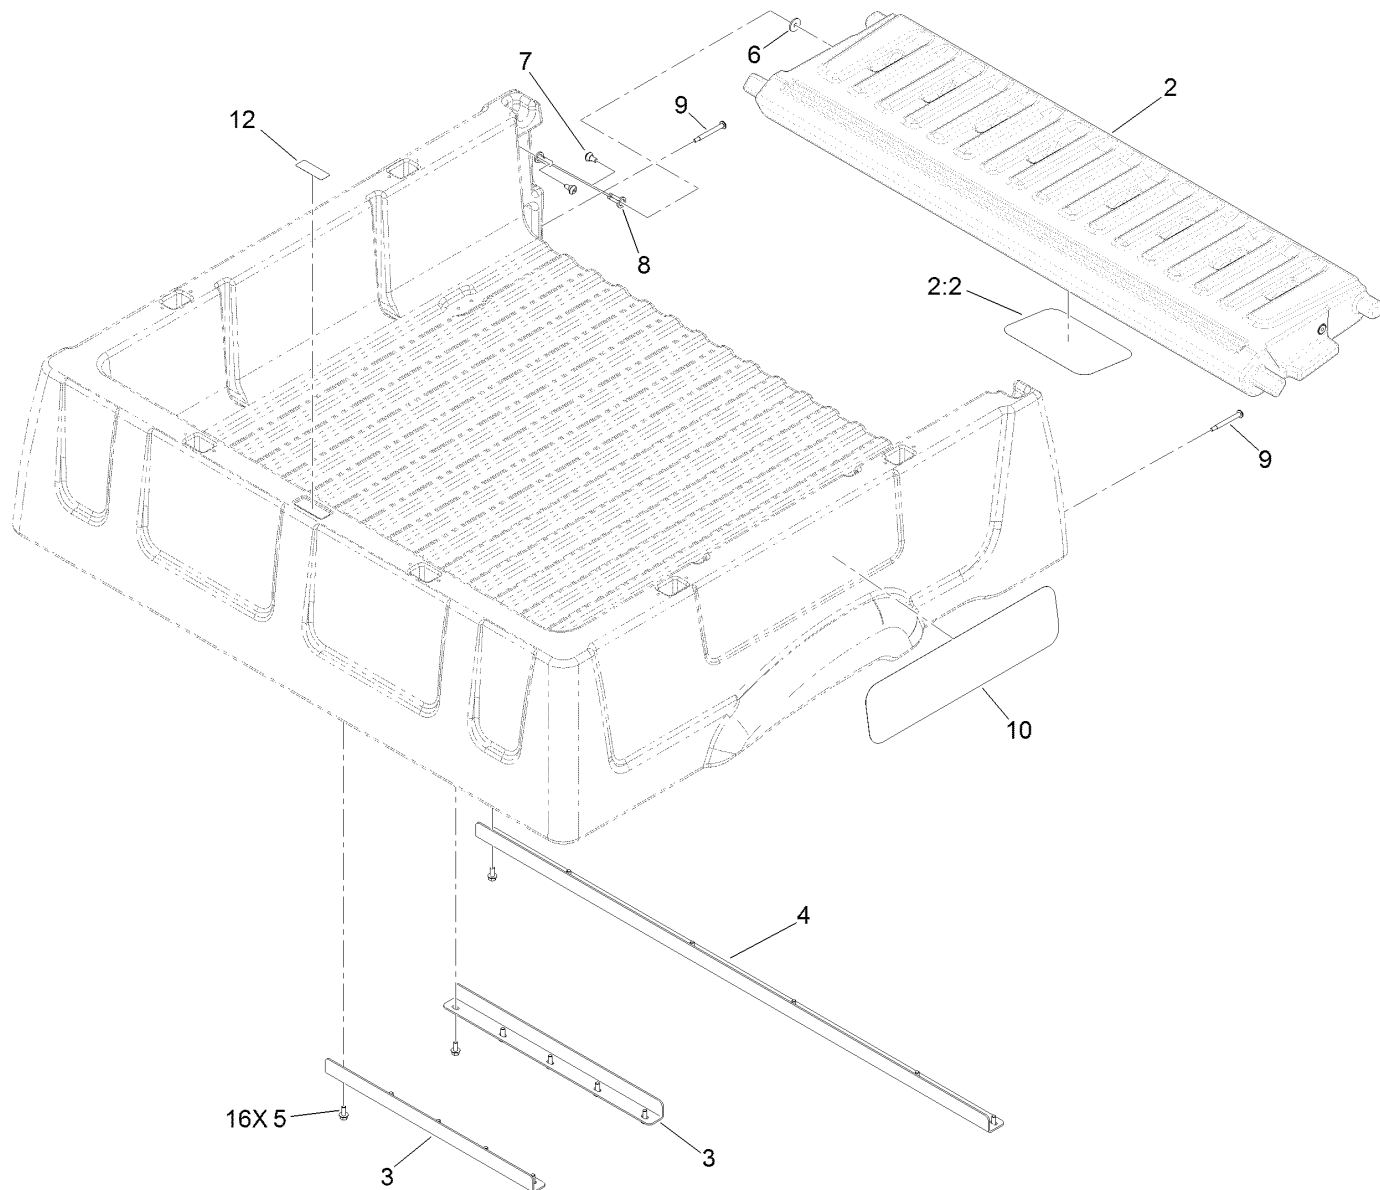 

Cargo Bed Service Assembly No. 127-7384


Ref.	Part Number	Qty.	Description
2	127-7396	1	Tailgate ASM
2:2	104-7213	1	Decal
3	121-6314-03	2	Brace-Bed, Middle
4	121-6315-03	1	Brace-Bed, Rear
5	3234-5	16	Screw-HHF
6	115-7109	2	Washer-Flat
7	119-2267	4	Screw-Shoulder, BHTF
8	121-6343	2	Lanyard-Tailgate
9	127-7383	2	Screw-Shoulder, Bh (Torx)
10	120-4825	2	Decal
12	115-7739	1	Decal-No Riders

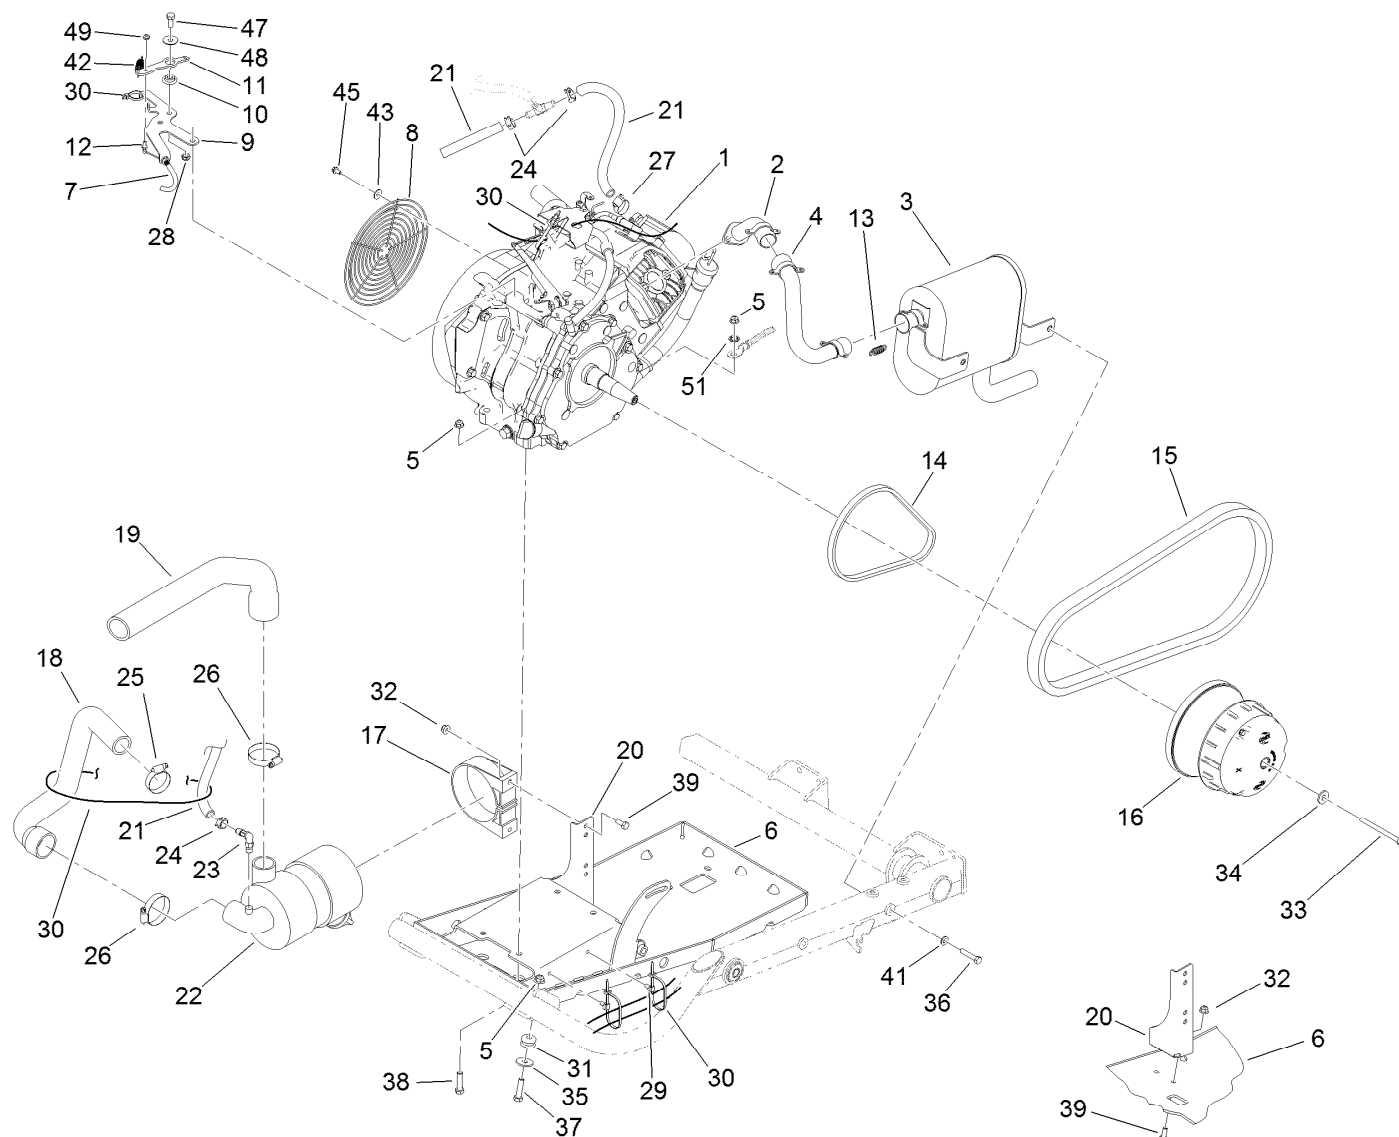 

Engine, Clutch and Air Cleaner Assembly

Ref.	Part Number	Qty.	Description
1	121-6276	1	Engine ASM (Yamaha Mx360)
2	104-6511	1	Manifold
3	119-0746	1	Muffler
4	119-0716	1	Pipe-Exhaust, Kohler
5	104-8301	6	Nut-HF, NI
6	119-0707-03	1	Tray-Engine
7	115-7612	1	Cable-Accelerator
8	119-9502	1	Grill-Engine
9	121-9715	1	Bracket-Cable, Throttle
10	75-8700	1	Bushing-Idler
11	121-9716	1	Lever-Throttle
12	99-7847	1	Ball-Stud
13	104-6478	4	Spring-Extension
14	112-3131	1	Belt-Starter
15	119-0710	1	Belt-Variable
16	120-4823	1	Primary Clutch ASM
17	95-5806	1	Bracket-Mounting, Air Cleaner
18	112-3247	1	Hose-Intake
19	115-7625	1	Hose-Intake


Ref.	Part Number	Qty.	Description
20	119-0863-03	1	Bracket-Cleaner, Air
21	74-9120	2	Hose-Overflow, Radiator
22	99-7120	1	Air Cleaner ASM
23	131-3464	1	Fitting-90 Degree
24	103-1988	3	Clamp-Hose
25	2412-111	1	Clamp
26	2412-130	2	Clamp-Hose
27	2412-36	1	Clamp-Hose
28	3296-47	1	Nut-Lock,NI
29	32180-030	2	Clip-Tie
30	3290-378	4	Tie-Cable
31	63-9750	2	Mount
32	104-8300	4	Nut-HF, NI
33	119-0721	1	Screw-HH
34	119-0724	1	Washer-Flange
35	2844	2	Washer
36	322-11	2	Screw-HH
37	323-8	2	Screw-HH
38	323-9	4	Screw-HH
39	3234-36	4	Screw-HHF
41	3253-4	2	Washer-Lock

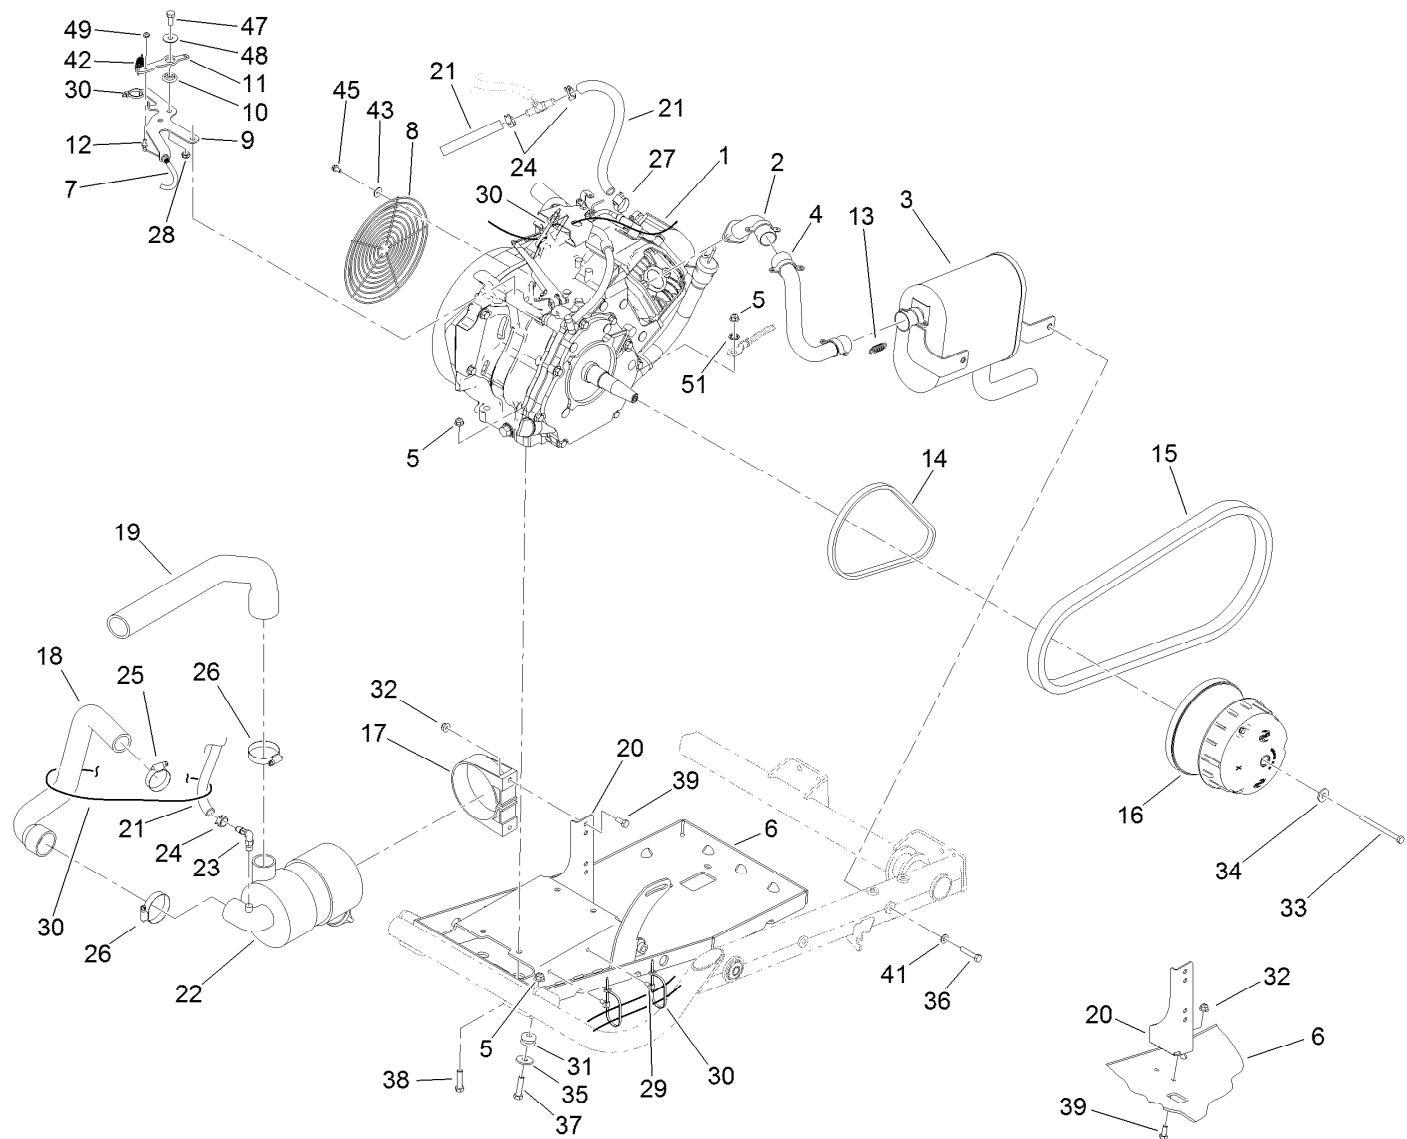 

Engine, Clutch and Air Cleaner Assembly (continued)


Ref.	Part Number	Qty.	Description
42	71-5470	1	Spring-Brake
43	3256-78	4	Washer-Flat
45	33103-012	4	Screw-HHF
47	322-4	1	Screw-HH

Ref.	Part Number	Qty.	Description
48	4-2390	1	Washer-Flat
49	3296-27	1	Nut-Lock, NI
51	3254-6	1	Washer-Lock, Internal

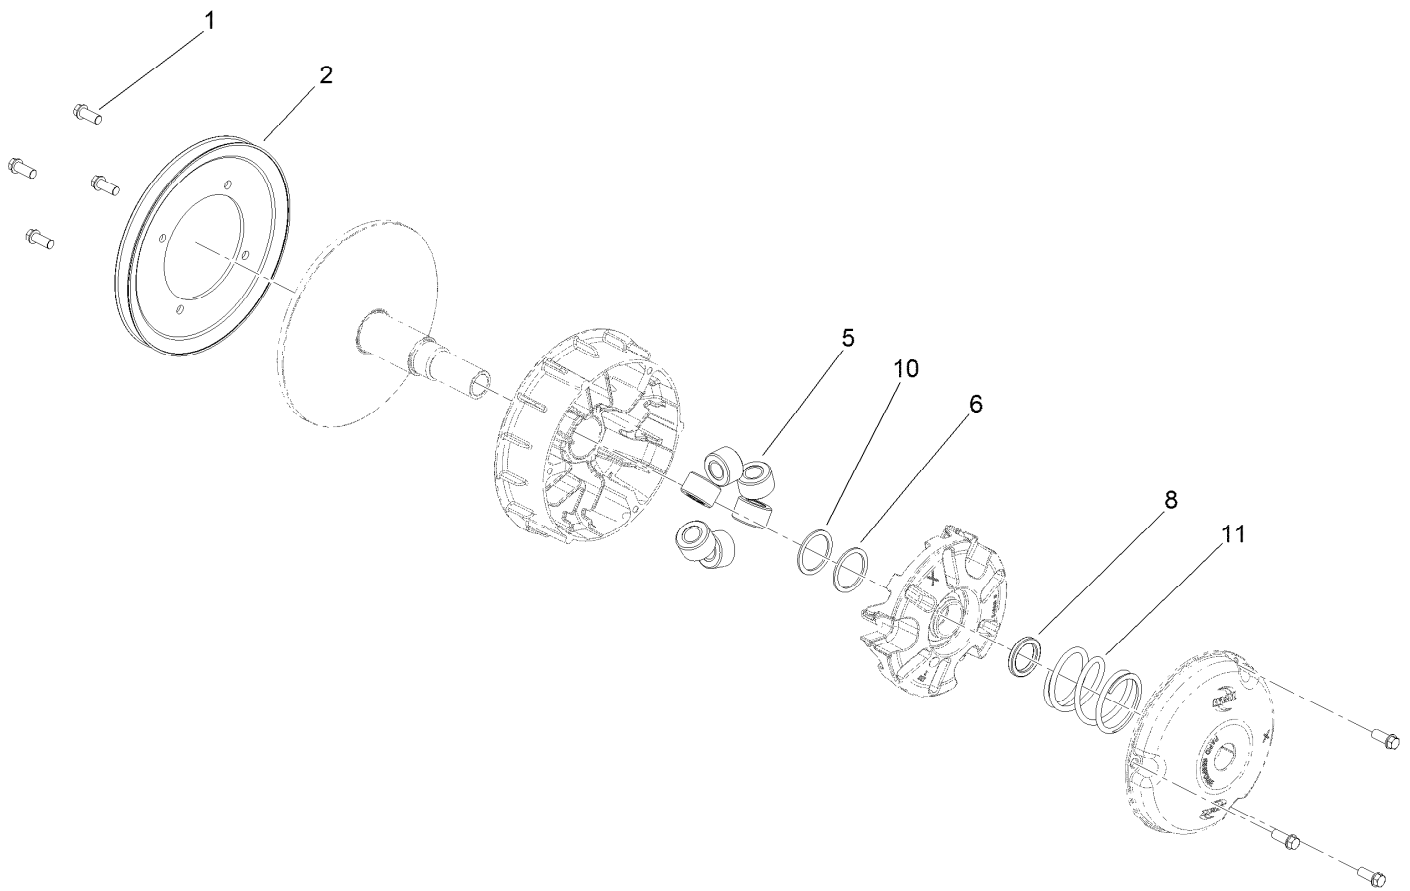 

Primary Clutch Assembly No. 120-4823


Ref.	Part Number	Qty.	Description
1	49-2040	7	Screw-HWHTF
2	119-0813	1	Pulley-Primary
5	119-0804	6	Weight-Roller
6	119-0812	1	Shim-Spider
8	119-0807	1	Shim-Limiter
10	119-0815	1	Shim-Spider
11	119-9532	1	Spring-Red/White

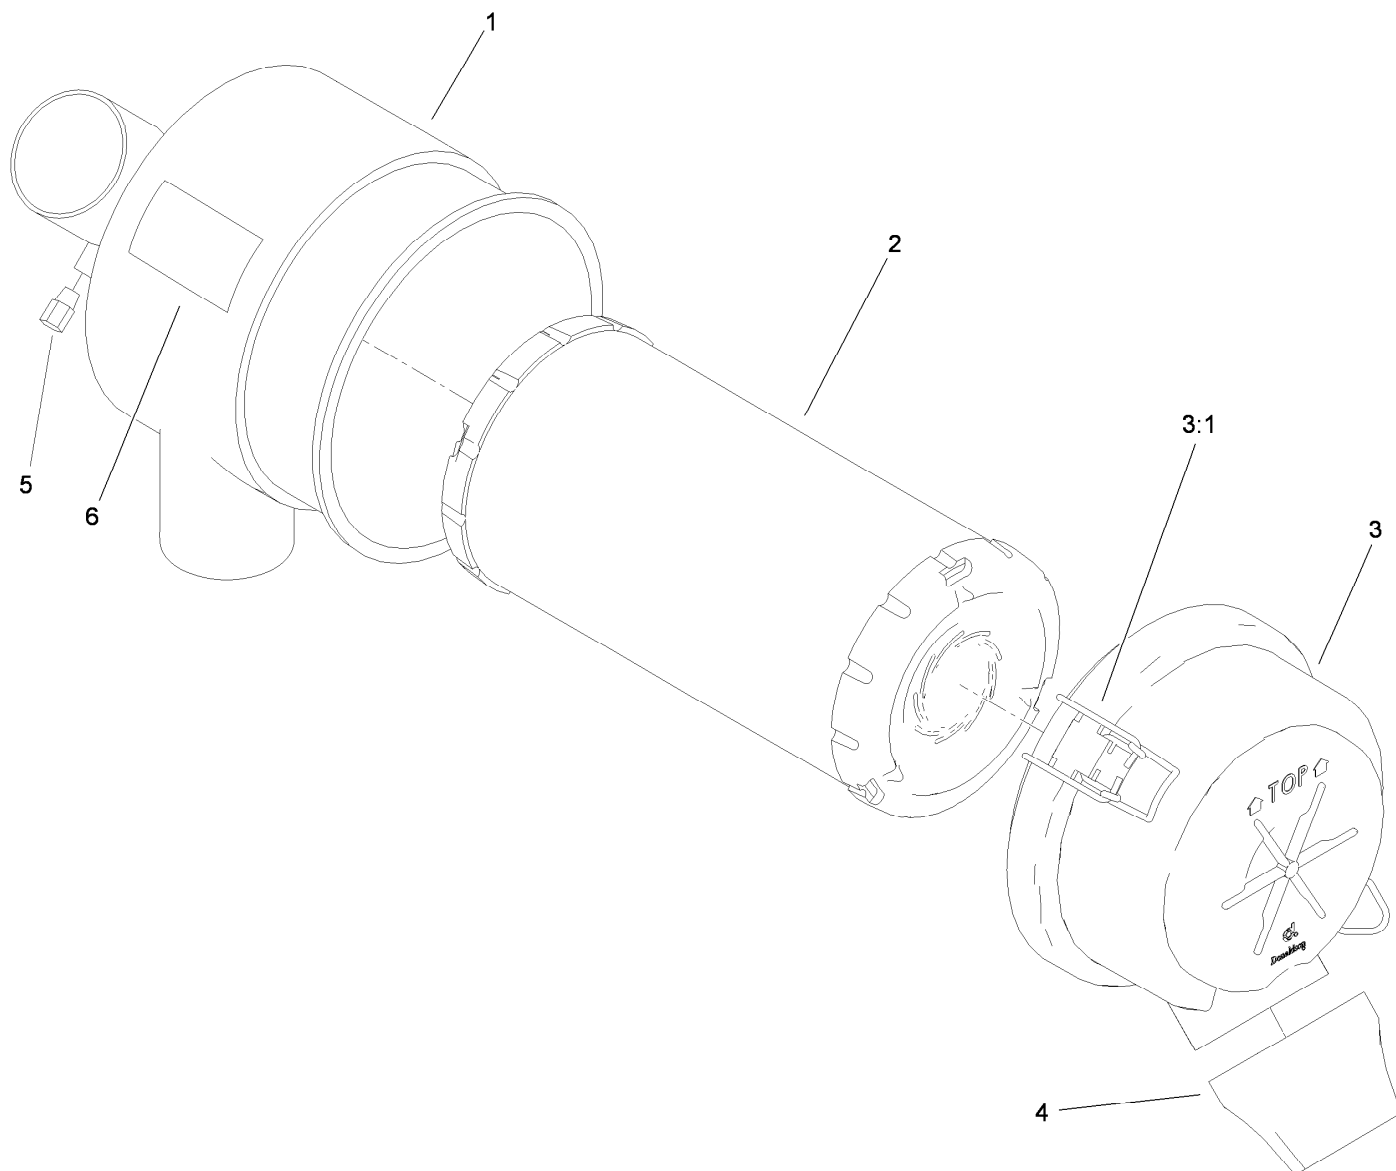 

Air Cleaner Assembly No. 99-7120

Ref.	Part Number	Qty.	Description
1		1	Body ●
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5		1	Plug ●
6		1	Marking ●

 ● Not serviced separately

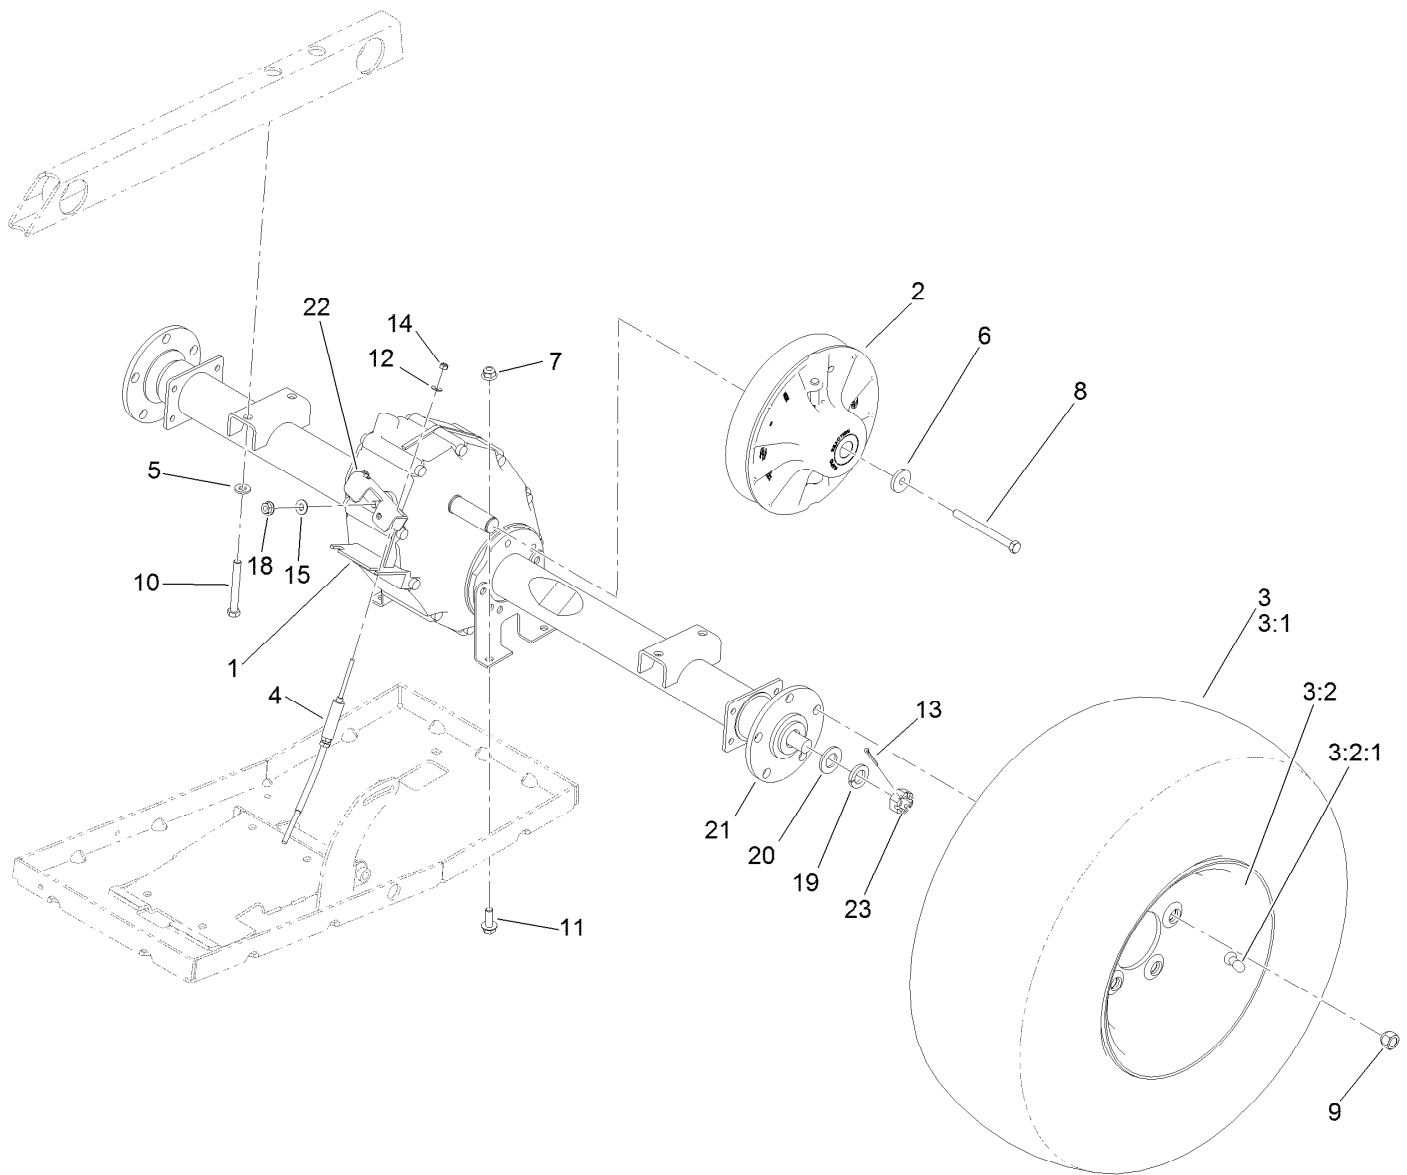


Rear Axle Drive System Assembly

Ref.	Part Number	Qty.	Description
1	121-6339	1	Transaxle ASM
2	119-6011	1	Secondary Clutch ASM
3	127-7434	2	Tire/Wheel ASM
3:1	127-7435	1	Tire (22 X 9.50-10) 4-Ply
3:2	127-7436	1	Wheel
3:2:1	232-27	1	Stem-Valve
4	115-7679	2	Cable-Control, Tension
5	100-4852	4	Washer-Hardened
6	104-6563	1	Washer-Stepped
7	104-8301	4	Nut-HF, NI
8	119-0723	1	Screw-HH, Lock
9	242-50	10	Nut-Lug


Ref.	Part Number	Qty.	Description
10	323-14	4	Screw-HH
11	3234-11	4	Screw-HHF
12	3256-49	2	Washer-Plain
13	3272-12	2	Pin-Cotter
14	3296-2	2	Nut-Lock, NI
15	87-8640	1	Washer-Flat
18	104-1672	1	Nut-Lock
19	104-1673	2	Washer-Spring
20	104-1674	2	Washer
21	104-1675	2	Hub
22	112-3287	1	Lever-Select
23	104-1656	2	Nut-Castle

 Transaxle Assembly No. 121-6339

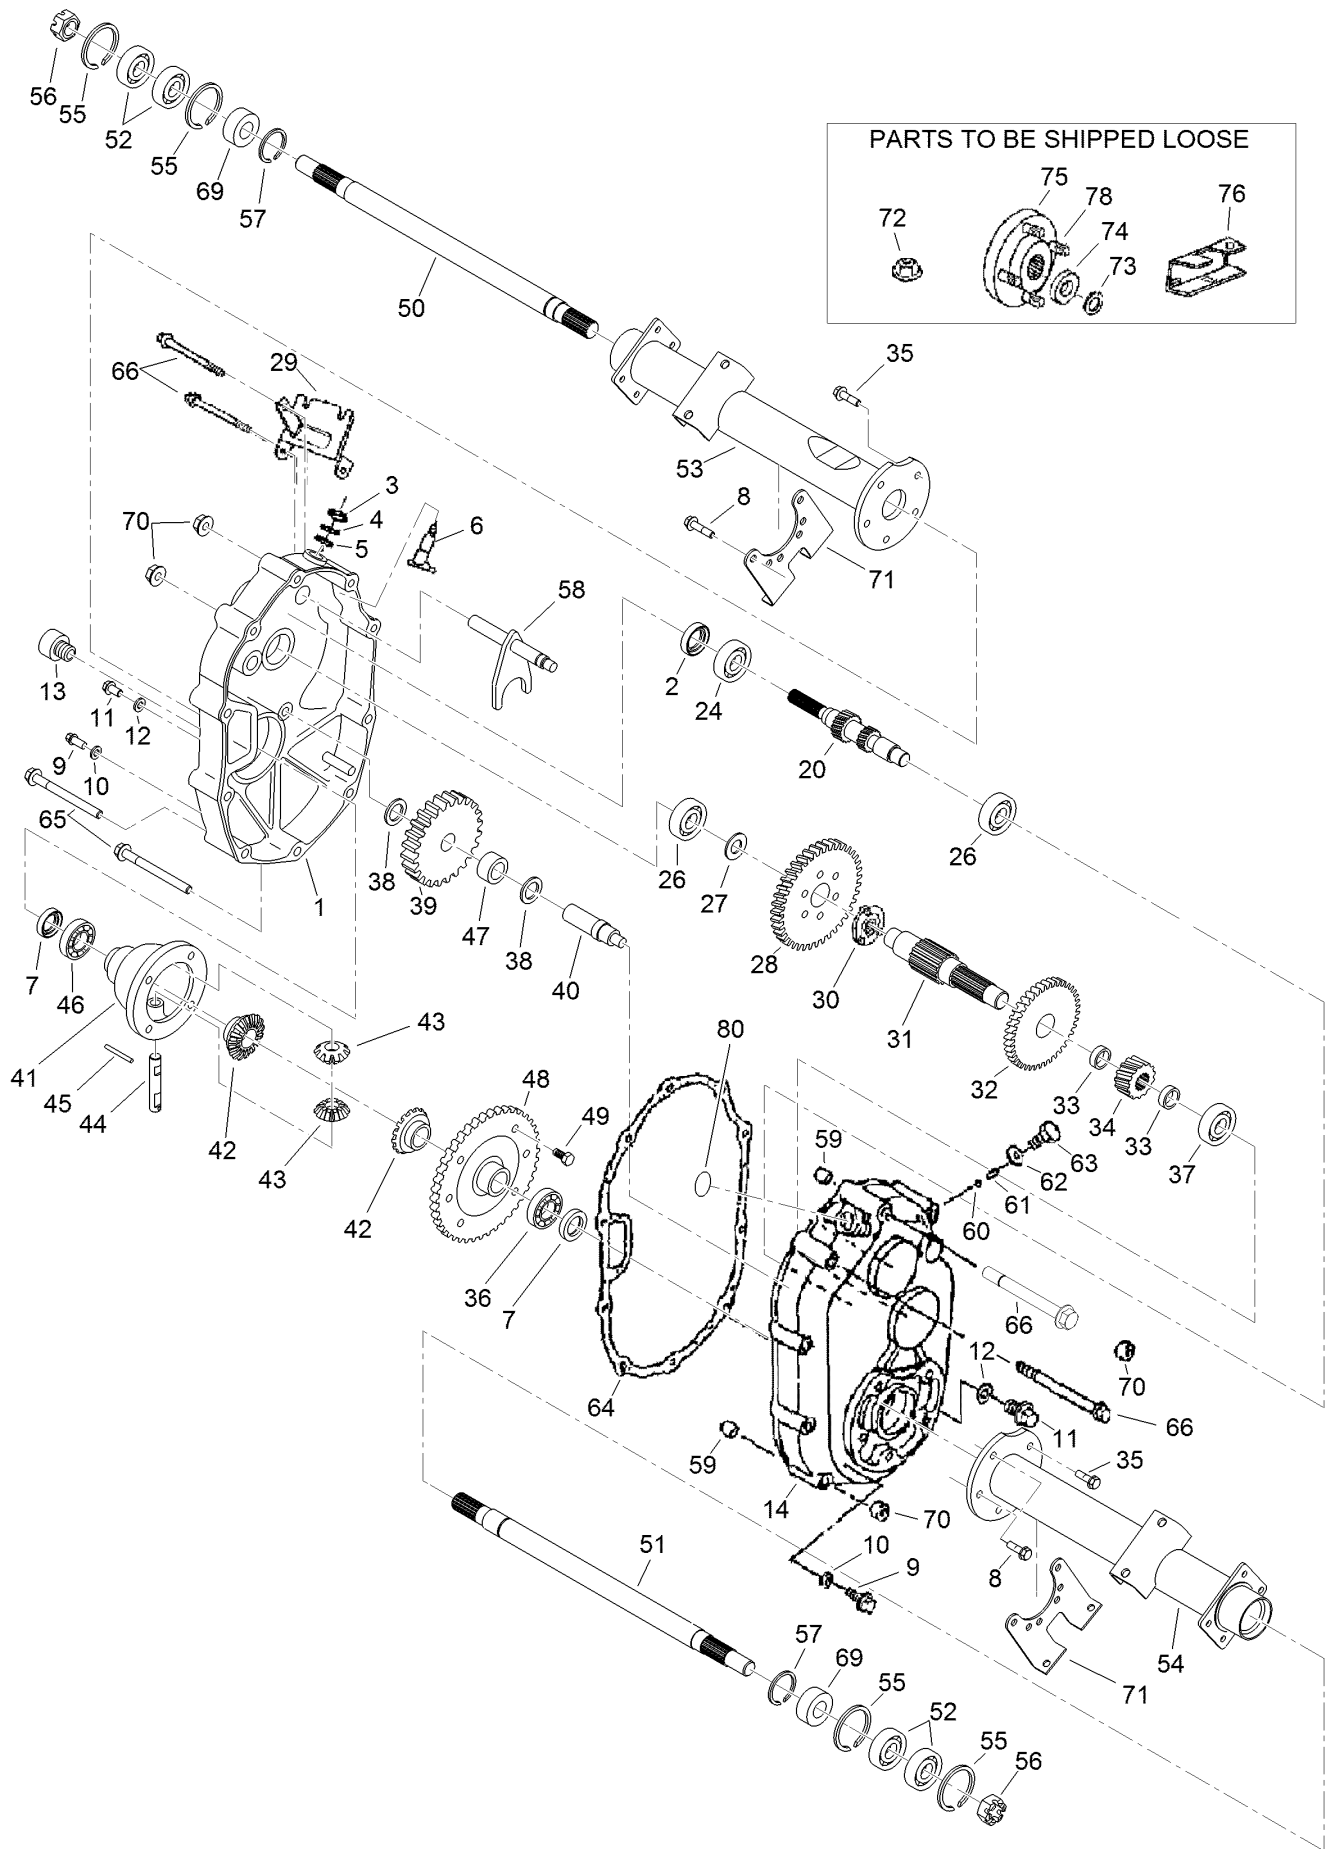


Transaxle Assembly No. 121-6339 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-1601	1	Case-LH, Complete	44	104-1644	1	Shaft-Differential
2	104-1602	1	Seal-Oil	45	104-1645	1	Pin
3	104-1603	1	Seal-Oil	46	104-1646	1	Bearing-Ball
4	104-1604	1	Ring-Snap	47	104-1647	1	Bearing-Needle
5	104-1605	1	Spacer	48	104-1648	1	Gear
6	104-1606	1	Shaft-Selector	49	104-1649	6	Bolt
7	104-1607	2	Seal-Oil	50	104-1650	1	Shaft-Axle, LH
8	104-1608	4	Bolt-Flange	51	104-1651	1	Shaft-Axle, RH
9	104-1609	2	Plug-Check, Oil	52	104-1652	4	Bearing-Ball
10	104-1610	2	Gasket	53	104-1653	1	Case-Axle, LH
11	104-1611	2	Plug-Drain, Oil	54	104-1654	1	Case-Axle, RH
12	104-1612	2	Gasket	55	104-1655	4	Ring-Snap
13	104-1613	1	Plug-Filler, Oil	56	104-1656	2	Nut-Castle
14	104-1614	1	Case-Complete, RH	57	104-1657	2	Ring-Snap
20	104-7002	1	Shaft-Input, Complete	58	104-6870	1	Shaft-Shift, Complete
24	104-1624	1	Bearing-Ball	59	104-1659	2	Knock-Pipe
26	104-1626	2	Bearing-Ball	60	104-1660	1	Ball-Steel
27	104-1627	1	Spacer	61	104-1661	1	Spring
28	104-1628	1	Gear	62	104-1662	1	Gasket
29	115-7672	1	Bracket-Wire, Change	63	104-1663	1	Bolt
30	104-1630	1	Clutch-Pin	64	104-1664	1	Gasket
31	104-1631	1	Shaft-Center	65	104-1665	6	Bolt-Flange
32	104-1632	1	Gear	66	104-1666	4	Bolt-Flange
33	104-1633	2	Collar	69	104-6867	2	Collar
34	104-1634	1	Gear	70	33004-00	10	Nut-HF
35	104-1635	6	Bolt-Flange	71	104-1671	2	Bracket-Axle
36	104-1636	1	Bearing-Ball	72	104-1672	1	Nut-Lock
37	104-1637	1	Bearing-Ball	73	104-1673	2	Washer-Spring
38	104-1638	2	Spacer	74	104-1674	2	Washer
39	104-1639	1	Gear	75	104-1675	2	Hub
40	104-1640	1	Shaft-Counter	76	112-3287	1	Lever-Select
41	104-1641	1	Case-Differential	78	104-8649	10	Stud
42	104-1642	2	Gear-Side, Differential	80	121-9718	1	Cap-Seal
43	104-1643	2	Pinion-Differential				

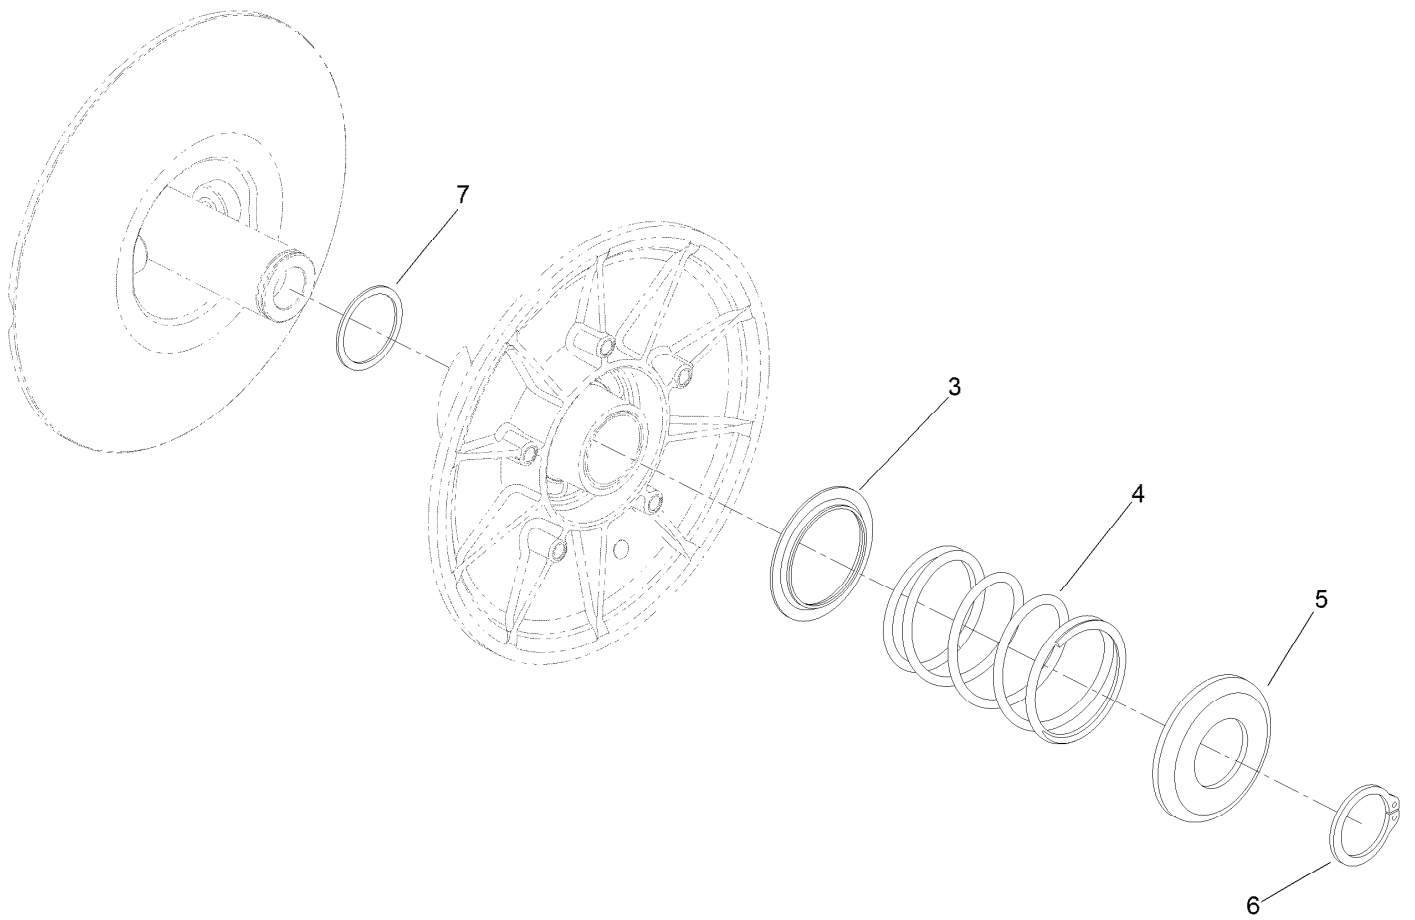 

Secondary Clutch Assembly No. 119-6011


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	119-0809	1	Cup-Spring Retainer, Inner
4	119-9360	1	Spring-Compression, Black/Almond
5	119-0810	1	Cup-Spring Retainer, Outer
6	119-0811	1	Ring-Retaining
7	119-6018	1	Shim-Thrust

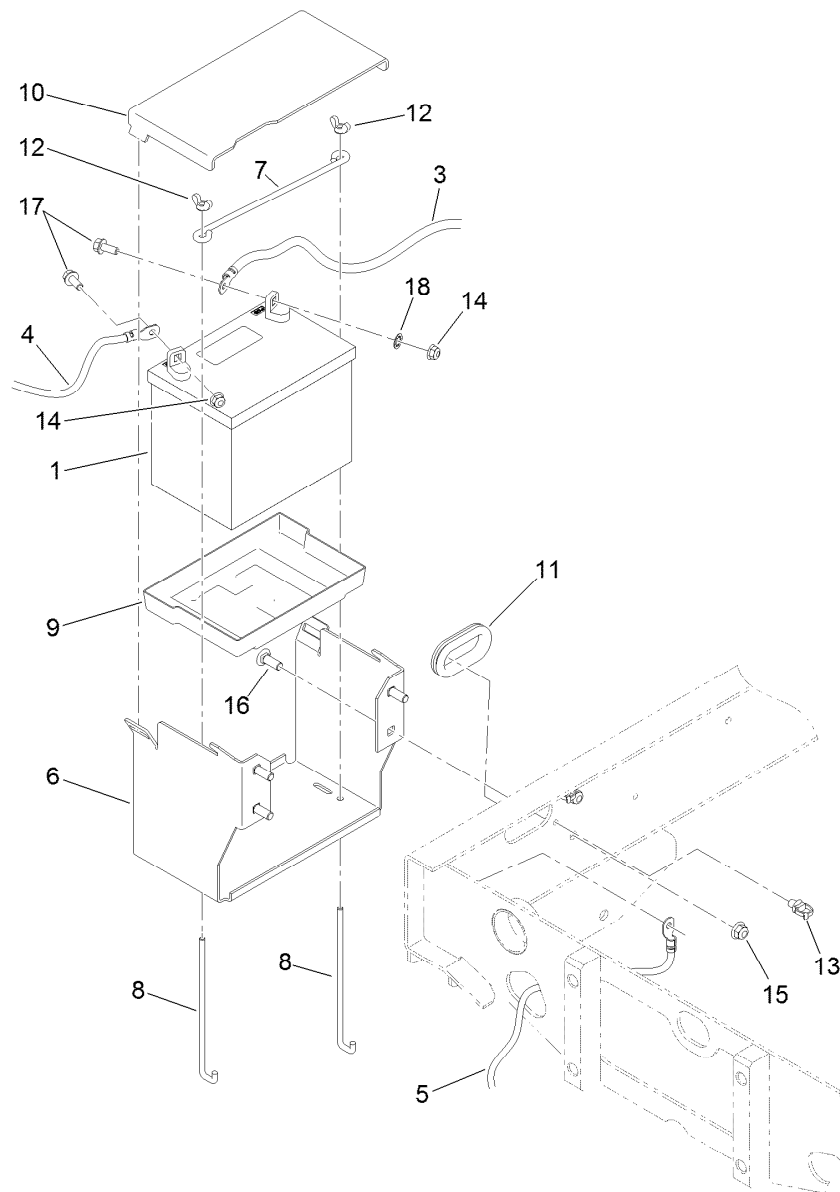 

Battery Assembly

Ref.	Part Number	Qty.	Description
1	104-8162	1	Battery
3	114-9404	1	Cable-Battery, Positive
4	115-8107	1	Cable-Battery, Negative
5	115-8108	1	Cable-Battery, Negative
6	115-2302-03	1	Base-Battery
7	100-6434	1	Rod-Hold Down, Battery
8	100-6435	2	Post-Battery
9	106948	1	Tray-Battery
10	115-2394	1	Cover-Battery


Ref.	Part Number	Qty.	Description
11	240-12	1	Grommet-Rubber
12	32103-22	2	Nut-Wing
13	32180-030	2	Clip-Tie
14	104-8300	2	Nut-HF, NI
15	104-8301	4	Nut-HF, NI
16	3231-22	4	Screw-CARR
17	3234-5	2	Screw-HHF
18	3254-6	1	Washer-Lock, Internal

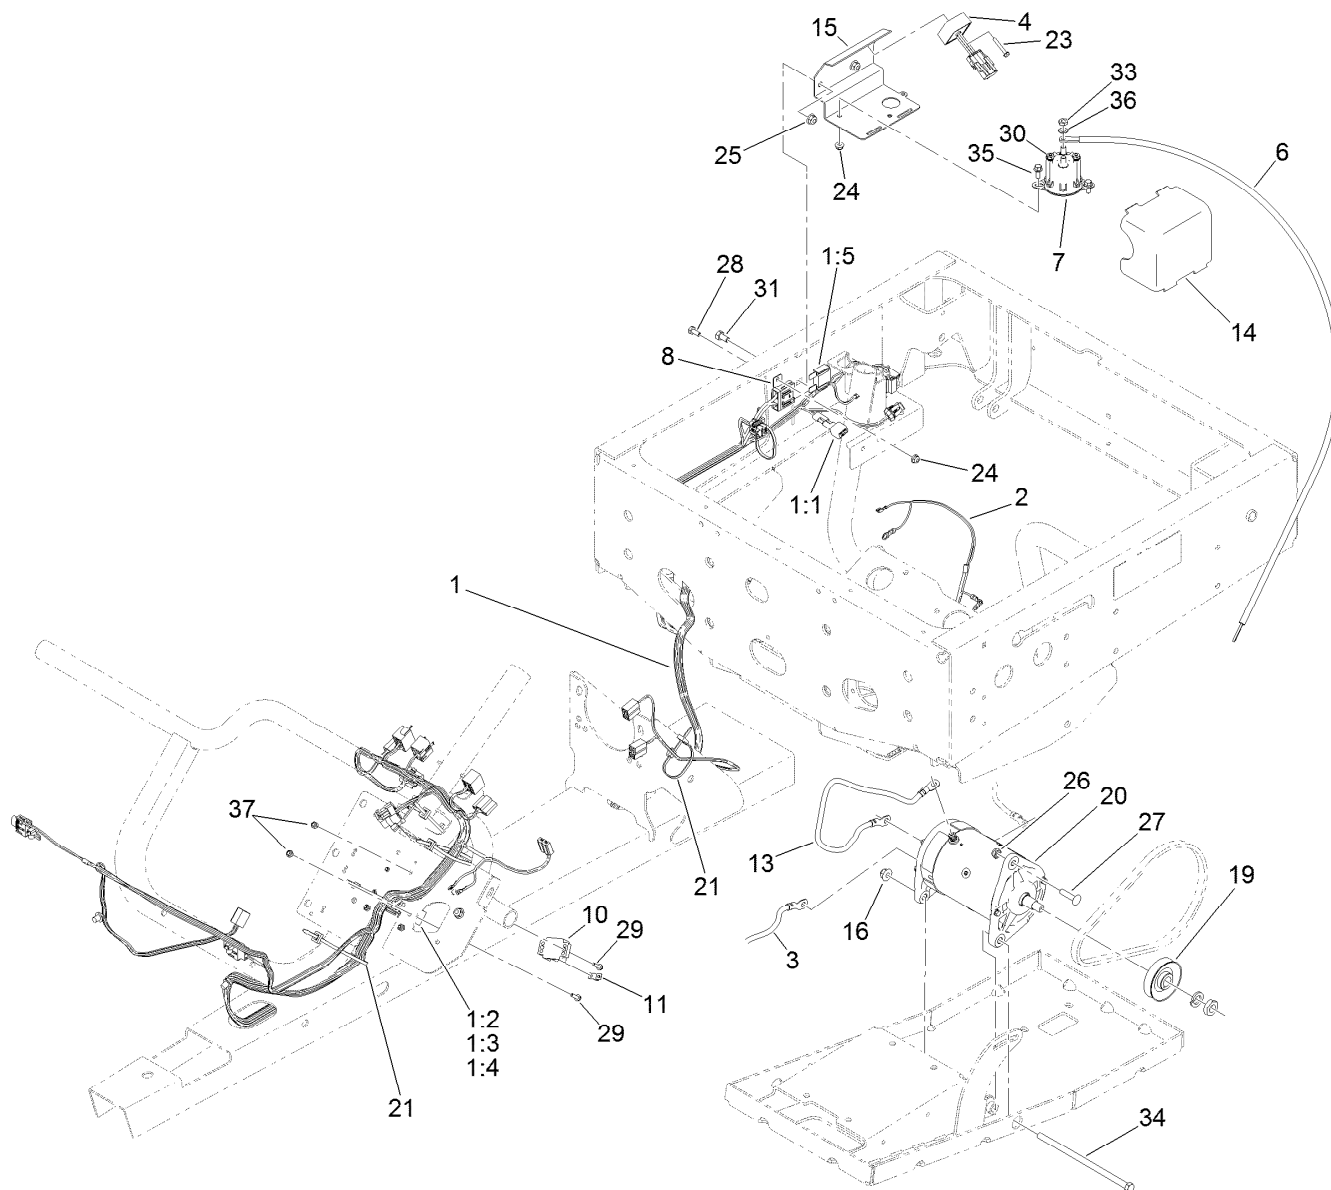 

Electrical Assembly

Ref.	Part Number	Qty.	Description
1	119-5774	1	Harness-Wire
1:1	100-4918	1	Diode
1:2	218-578	1	Fuse-Blade, 10 Amp
1:3	109355	1	Fuse-Blade, 15 Amp
1:4	109101	1	Fuse-Blade, 20 Amp
1:5	114-3342	1	Fuse-Maxi, 60 Amp
2	115-8125	1	Harness-Wire, Engine
3	100335	1	Wire-Ground
4	119-9492	1	Regulator-Voltage
6	112-3537	1	Cable-Battery, Positive
7	114-3315	1	Solenoid
8	114-5502	1	Clip-Fuse
10	42862	1	Block-Terminal, Ground
11	42863	1	Strip-Jumper
13	99-7403	1	Cable-Negative
14	112-3027	1	Cover-Controller
15	119-0752-03	1	Mount-Component
16	104-8301	1	Nut-HF, NI

Ref.	Part Number	Qty.	Description
19	121-6277	1	Pulley-Drive
20	119-9545	1	Starter Generator ASM
21	3290-378	2	Tie-Cable
23	100-4352	1	Screw-HWH
24	104-7201	3	Nut-Flange, NI
25	104-8300	3	Nut-HF, NI
26	3296-69	1	Nut-Lock, NI
27	112-6950	1	Screw-CARR
28	321-3	1	Screw-HH
29	32105-13	6	Screw-HWH
30	32149-8	2	Nut-Keps
31	322-2	2	Screw-HH
33	3220-2	2	Nut-Jam
34	323-30	1	Screw-HH
35	3234-33	2	Screw-HHF
36	3255-8	2	Washer-Lock
37	3296-2	6	Nut-Lock, NI

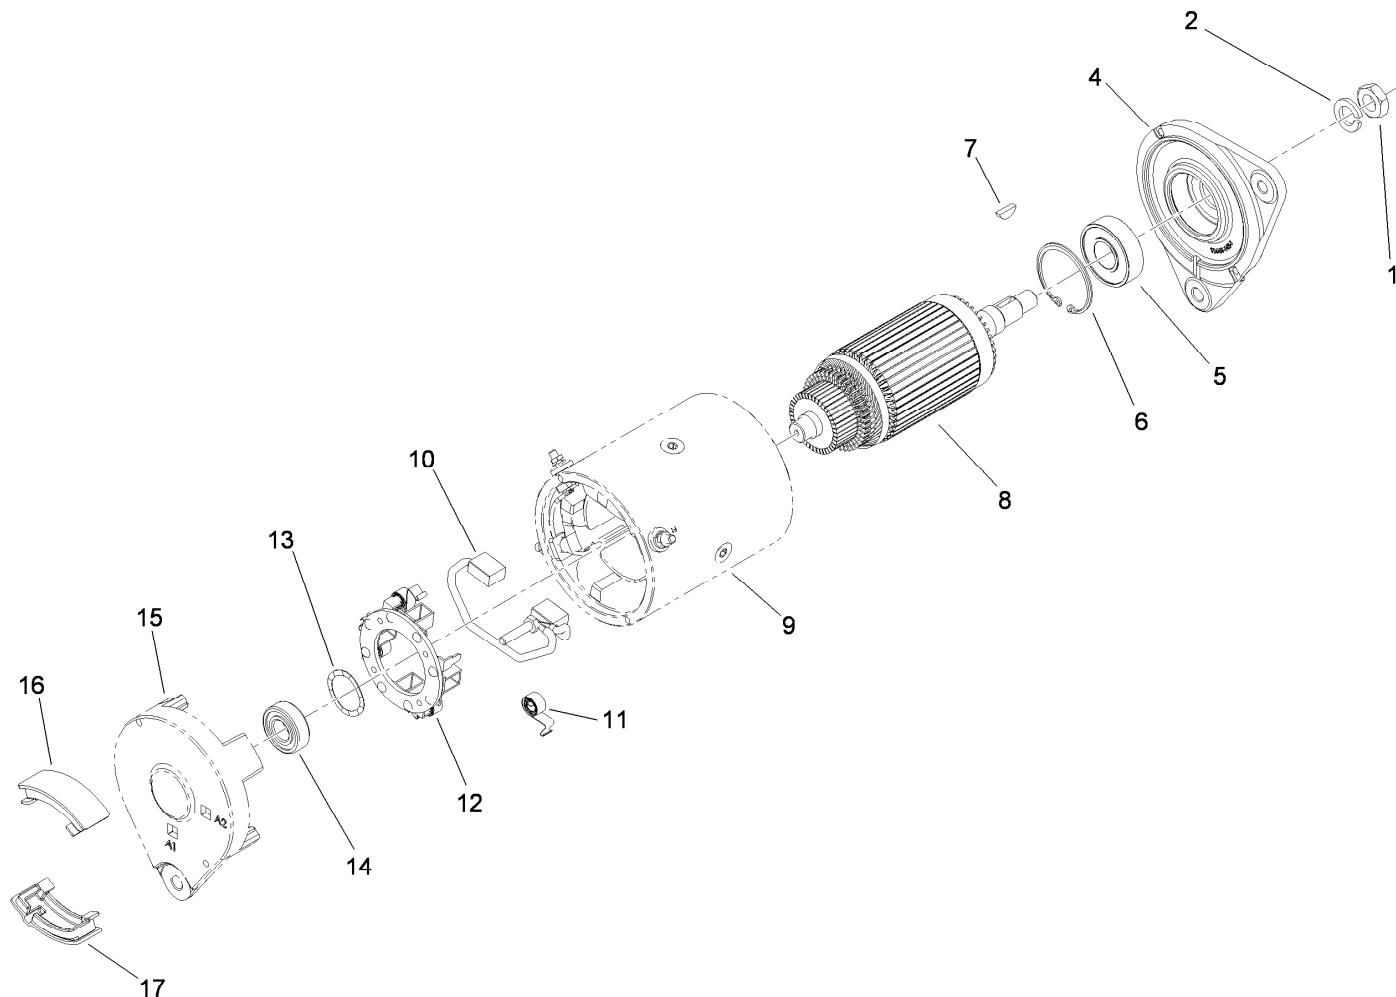 

Starter Generator Assembly No. 119-9545


Ref.	Part Number	Qty.	Description
1	119-9651	1	Nut
2	119-9652	1	Washer-Lock
4	119-9654	1	Head-End, Drive
5	119-9655	1	Bearing
6	119-9656	1	Ring-Retaining
7	119-9657	1	Key-Woodruff
8	119-9658	1	Armature ASM
9		1	Frame And Field Assembly

Ref.	Part Number	Qty.	Description
10	119-9659	1	Brush Lead And Terminal Service Kit
11	119-9660	4	Spring-Brush
12	119-9661	1	Brush Box ASM
13	119-9662	1	Washer-Wave
14	119-9663	1	Bearing
15		1	Head-End, Cummutator ●
16	119-9664	3	Plug-Rubber
17	119-9665	1	Plug-Rubber

● Not serviced separately




Ref.	Part Number	Qty.	Description
11	106-5317	1	Hose-Fuel
12	107-0588	1	Hose-Fuel
14	109-3491	1	Hose-Fuel
15	109-0273	1	Hose-Fuel
17	110-8751	1	Hose-Fuel
18	2412-146	1	Clamp-Hose
20	2412-98	4	Clamp-Hose
22	3339-175	1	Strapping-Web
23	99-7377	1	Conduit-Line, Fuel
24	99-7129	1	Conduit-Line, Fuel

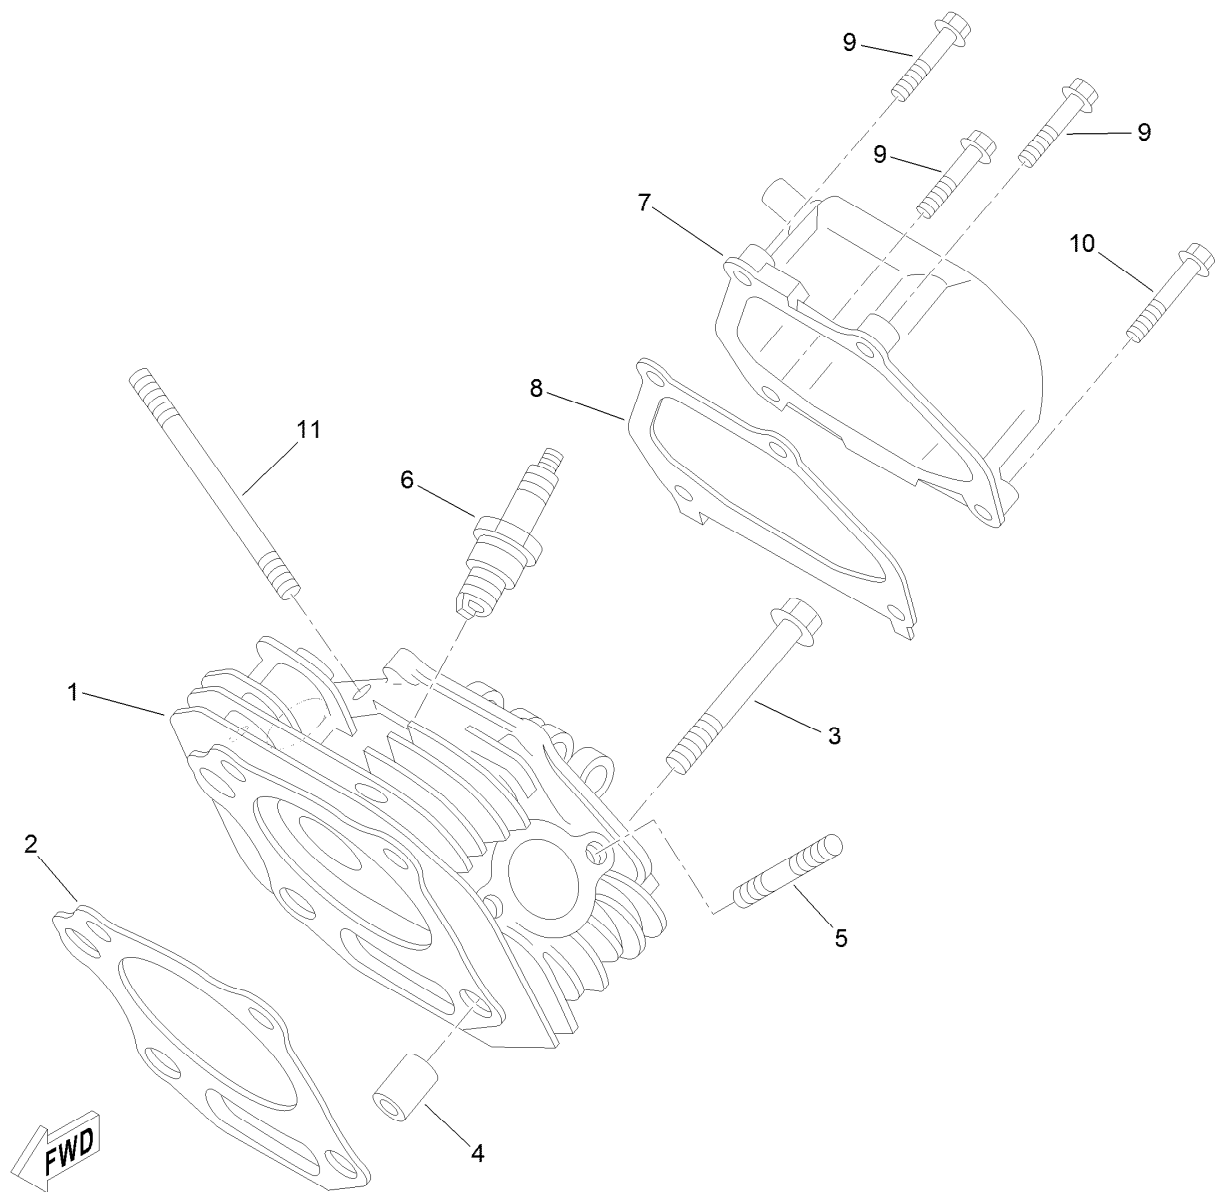 


Cylinder Head Assembly

Ref.	Part Number	Qty.	Description
1	120-5600	1	Head-Cylinder
2	120-5601	1	Gasket-Head, Cylinder
3	120-5602	4	Bolt-Flange
4	120-5603	2	Pin-Dowel
5	120-5604	2	Bolt-Stud
6	92-2153	1	Plug-Spark
7	120-5606	1	Cover-Head, Cylinder
8	120-5607	1	Gasket-Cover, Head
9	120-5608	3	Bolt-Flange
10	120-5609	1	Bolt-Flange
11	120-5610	2	Bolt-Stud

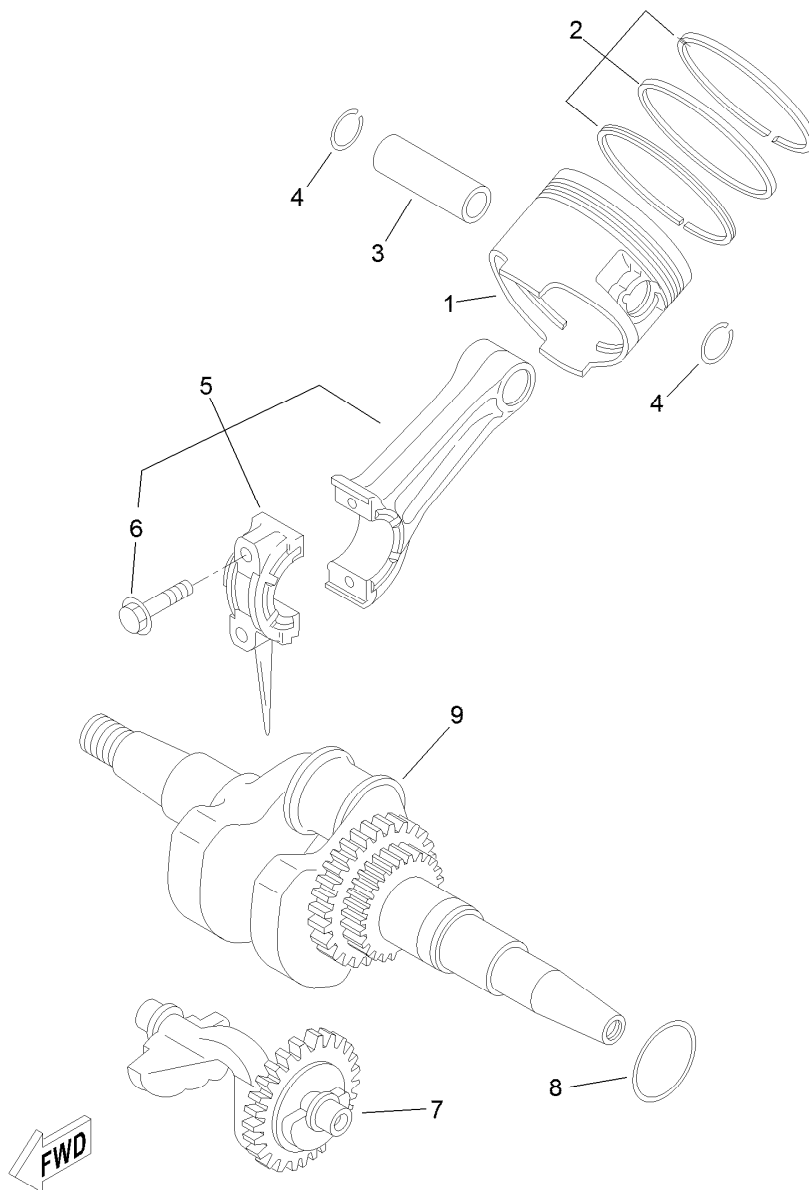 


Crankshaft and Piston Assembly

Ref.	Part Number	Qty.	Description
1	120-5612	1	Piston (STD)
1	120-5613	1	Piston (0.25Mm O/S)
1	120-5614	1	Piston (0.50Mm O/S)
2	120-5615	1	Piston Ring Set (STD)
2	120-5616	1	Piston Ring Set (0.25Mm O/S)
2	120-5617	1	Piston Ring Set (0.50Mm O/S)
3	120-5618	1	Pin-Piston
4	127-6151	2	Circlip
5	120-5620	1	Connecting Rod ASM
6	120-5621	2	Bolt- Rod, Connecting
7	120-5622	1	Weight
8	120-5623	1	Shim-Crank
9	120-5611	1	Crankshaft ASM

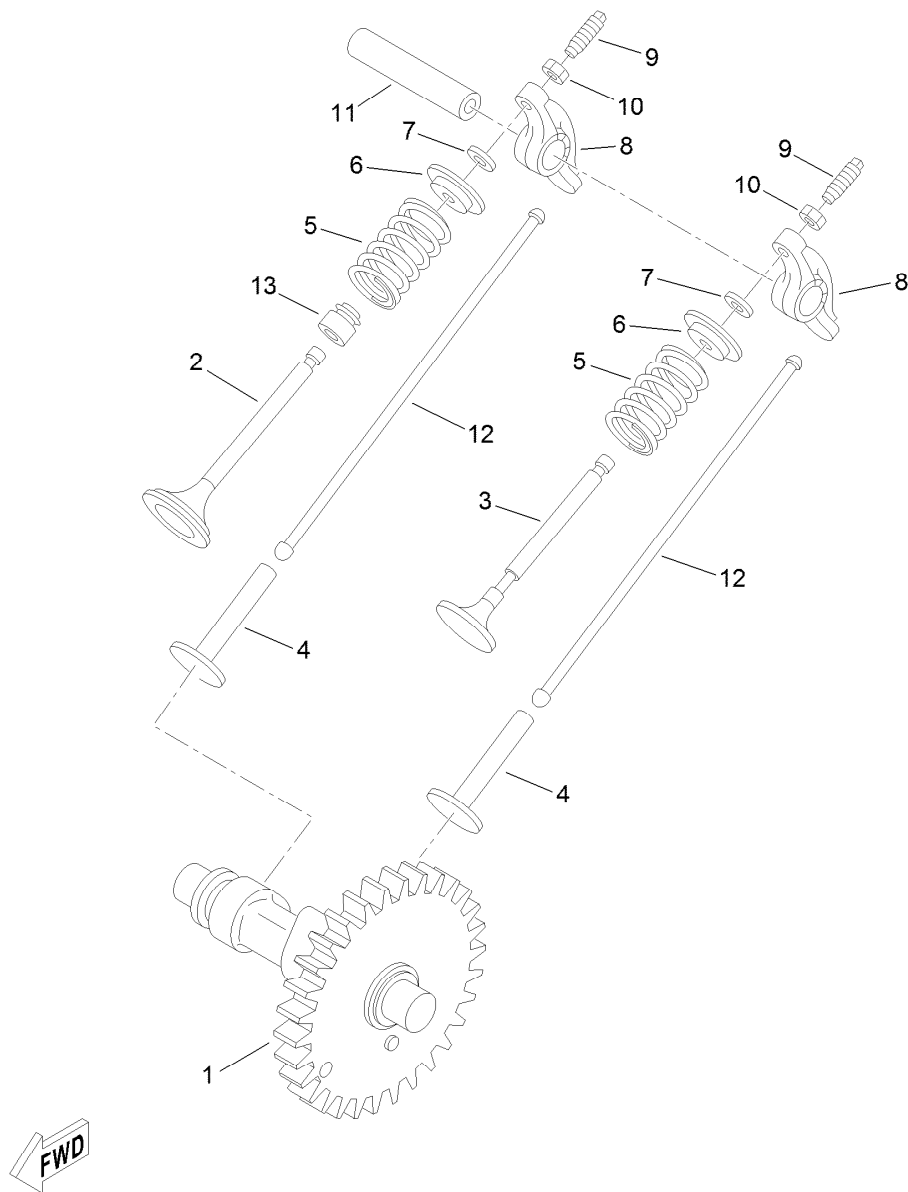 


Camshaft and Valve Assembly

Ref.	Part Number	Qty.	Description
1	120-5624	1	Camshaft ASM
2	120-5626	1	Valve-Intake
3	120-5627	1	Valve-Exhaust
4	120-5628	2	Lifter-Valve
5	120-5629	2	Spring-Compression
6	120-5630	2	Retainer-Spring, Valve
7	120-5631	2	Cotter-Valve
8	120-5632	2	Arm-Rocker, Valve
9	120-5633	2	Screw-Adjusting, Valve
10	120-5634	2	Nut
11	120-5635	1	Shaft-Rocker
12	120-5636	2	Rod-Push, Valve
13	120-5637	1	Seal-Stem, Valve

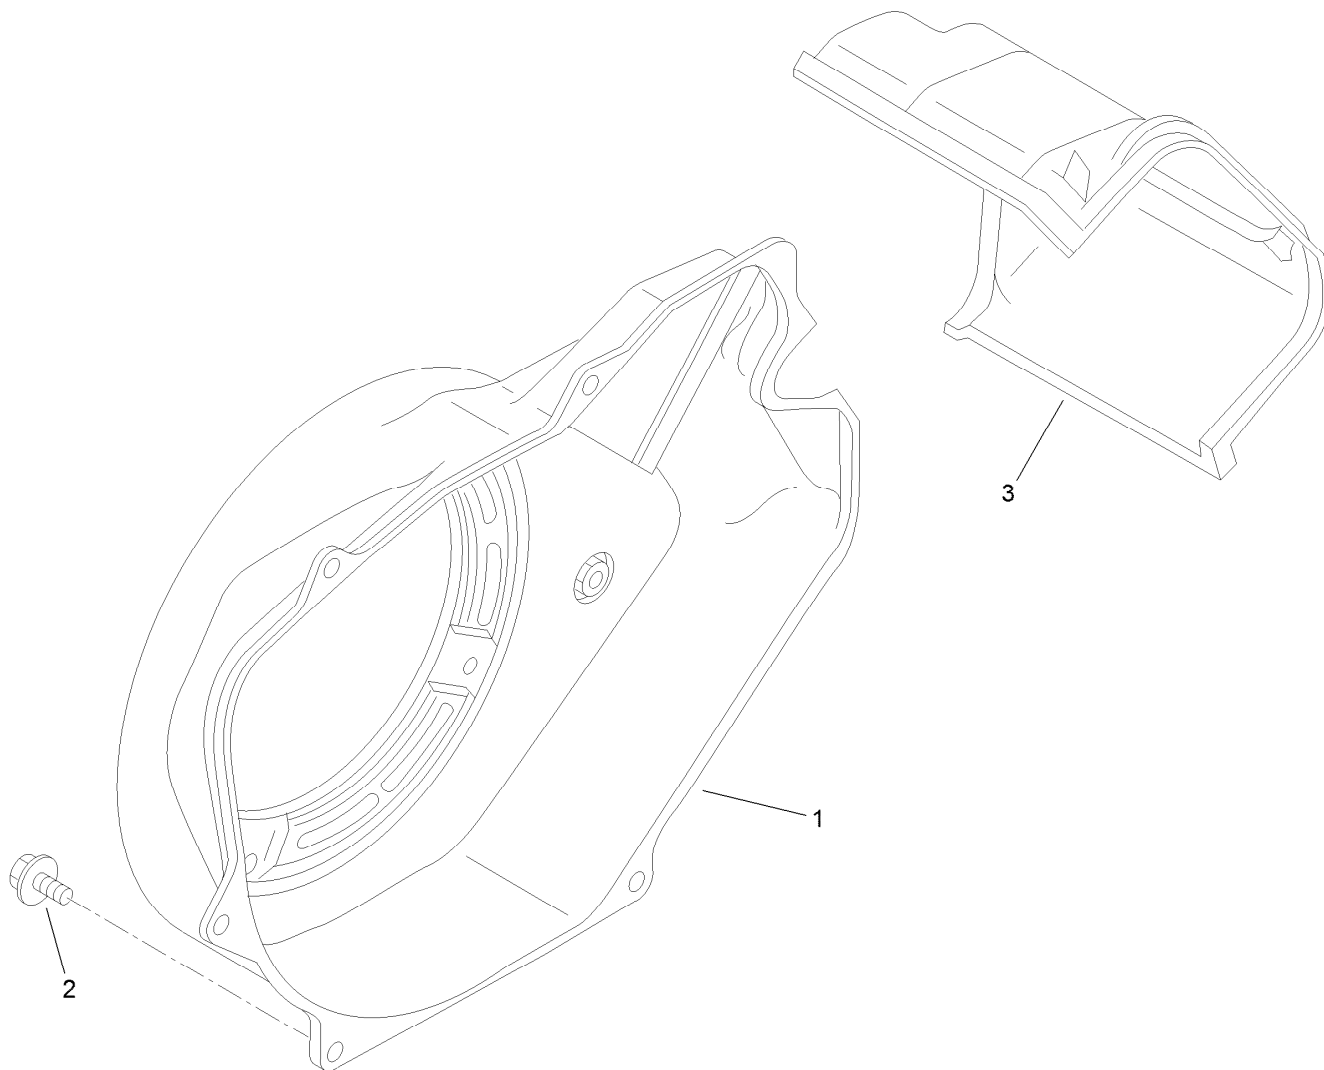 


Starter Air Shroud Assembly

Ref.	Part Number	Qty.	Description
1	120-5638	1	Case-Fan
2	120-5639	5	Bolt-Flange
3	120-5640	1	Shroud-Air, Cylinder

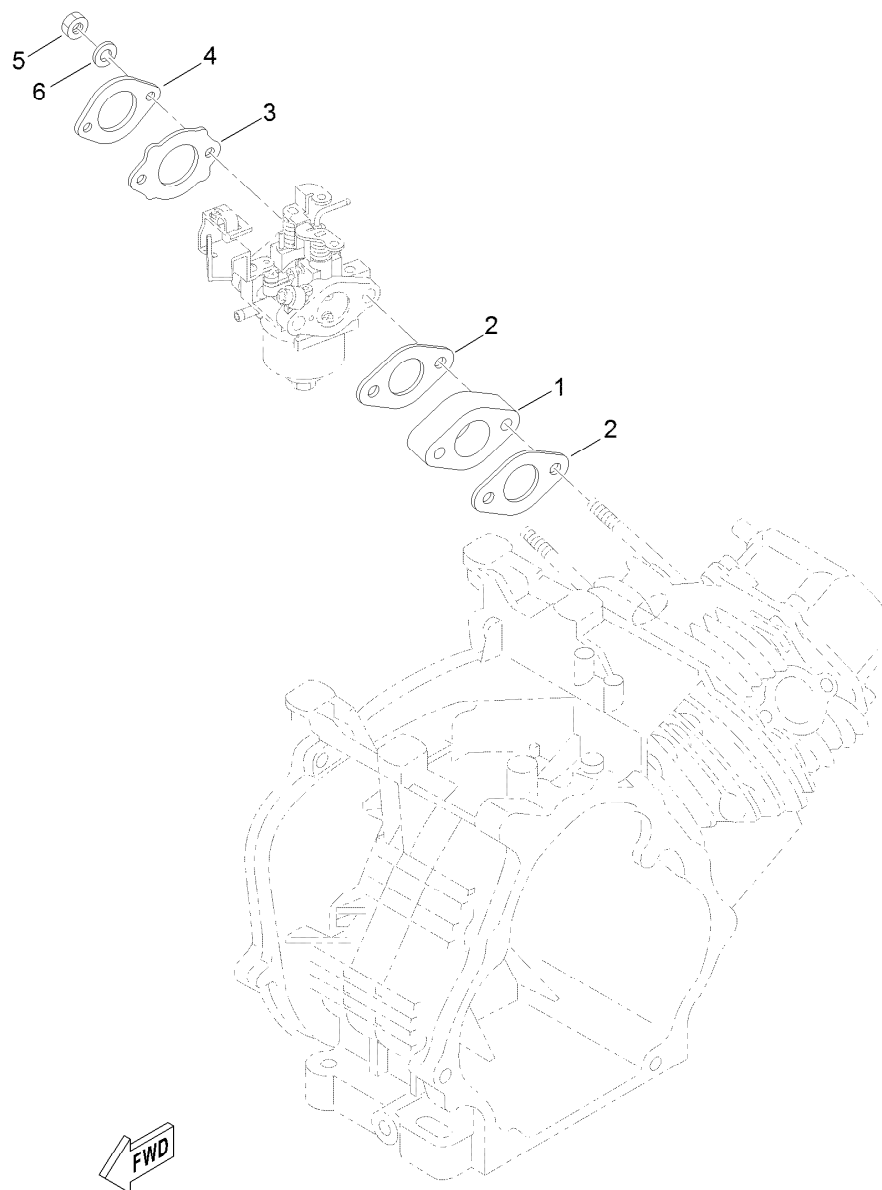 

Air Intake Assembly


Ref.	Part Number	Qty.	Description
1	120-5641	1	Joint-Carburetor
2	120-5642	2	Gasket
3	120-5643	1	Gasket
4	120-5644	1	Plate
5	119-9540	2	Nut-Hex, M8
6	120-5646	2	Washer-Spring

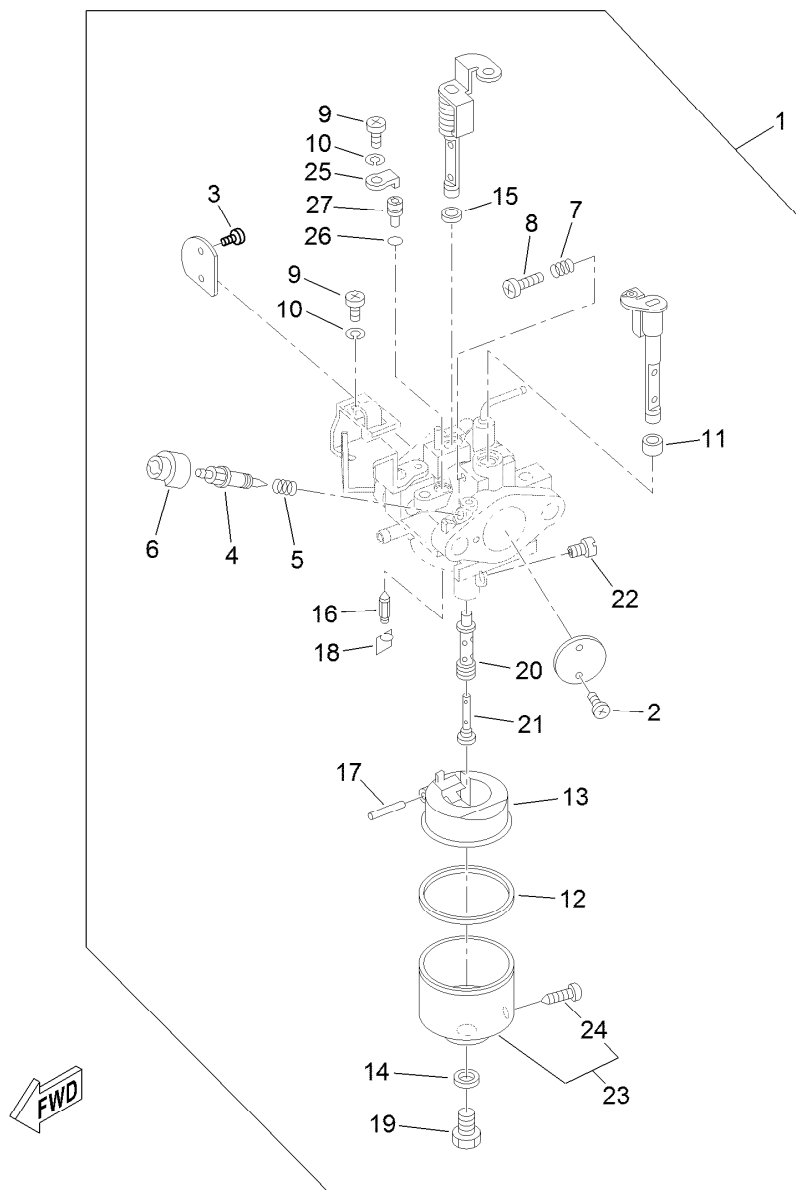 

Carburetor Assembly

Ref.	Part Number	Qty.	Description
1	127-6150	1	No. 1 Carburetor ASM
2	120-5648	2	Screw
3	120-5649	2	Screw-Rod
4	120-5650	1	Screw-Adjusting, Pilot
5	120-5651	1	Spring
6	120-5652	1	Cap
7	120-5653	1	Spring
8	120-5654	1	Screw-Throttle
9	120-5655	2	Screw-SPH
10	120-5656	2	Washer-Spring
11	120-5657	1	Washer
12	127-6161	1	Seal
13	120-5659	1	Float
14	120-5660	1	Gasket


Ref.	Part Number	Qty.	Description
15	120-5661	1	Seal
16	127-6165	1	Needle ASM
17	120-5663	1	Pin-Float
18	120-5664	1	Clip
19	120-5665	1	Bolt-Holding
20	120-5666	1	Nozzle-Main
21	120-5667	1	Pipe-Bleed, Main
22	120-5668	1	Jet-Main (115)
23	127-6172	1	Body-Float, Chamber 1
24	120-5669	1	Plug-Drain
25	120-5670	1	Plate
26	120-5671	1	O-Ring
27	120-5672	1	Jet-Pilot (53.8)

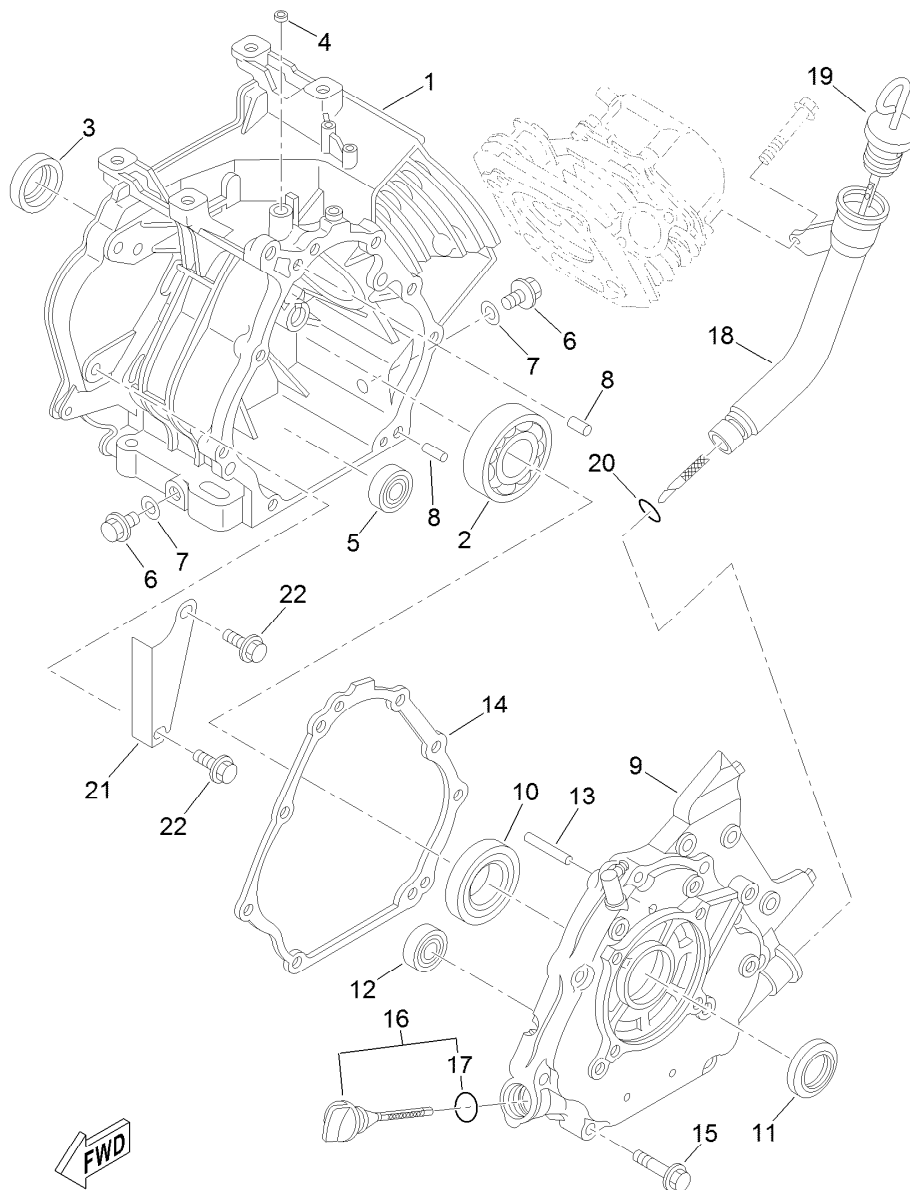 

Crankcase Assembly


Ref.	Part Number	Qty.	Description
1	120-5673	1	Crankcase
2	120-5674	1	Bearing
3	120-5675	1	Seal-Oil
4	127-6176	1	Seal-Oil
5	127-6166	2	Bearing
6	120-5678	2	Plug-Screw, Straight
7	120-5679	2	Gasket
8	120-5680	2	Pin-Dowel
9	127-6163	1	Crankcase Cover ASM
10	120-5682	1	Bearing
11	120-5675	1	Seal-Oil

Ref.	Part Number	Qty.	Description
12	127-6166	1	Bearing
13	120-5677	1	Shaft-Flyweight
14	120-5686	1	Gasket-Cover, Crankcase
15	120-5687	6	Bolt-Flange
16	127-6157	1	Plug-Oil Level
17	120-5691	1	O-Ring
18	120-5689	1	Pipe-Oil
19	120-5690	1	Gauge-Level
20	120-5692	1	O-Ring
21	120-5693	1	Plate-Baffle
22	120-5694	2	Bolt-Flange

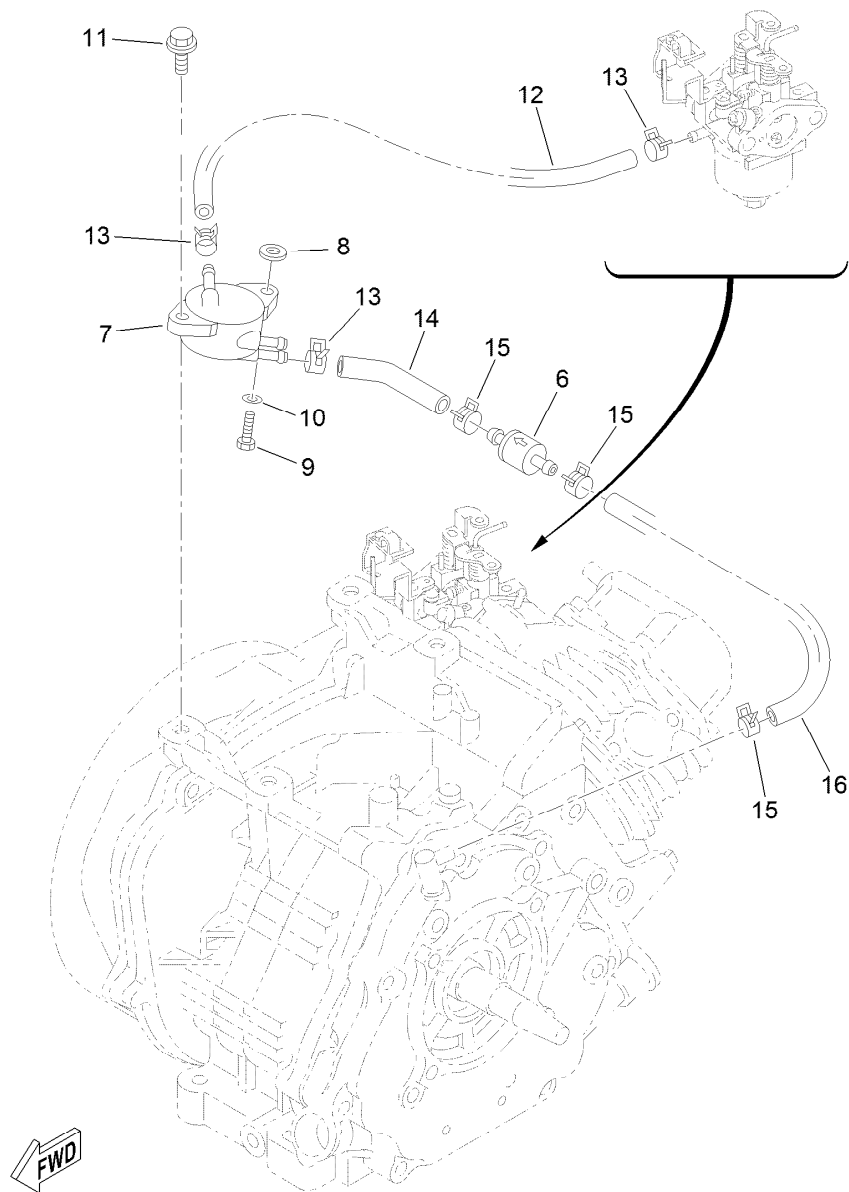 


Fuel Pump Assembly

Ref.	Part Number	Qty.	Description
6	120-5696	1	Filter ASM
7	127-6171	1	Fuel Pump ASM
8	120-5698	2	Gasket
9	120-5700	2	Bolt
10	120-5701	2	Washer-Plate
11	120-5695	2	Bolt-Flange
12	127-6156	1	Pipe-Fuel
13	120-5703	3	Clip
14	127-6160	1	Pipe-Breather
15	120-5705	3	Clip
16	127-6170	1	Hose

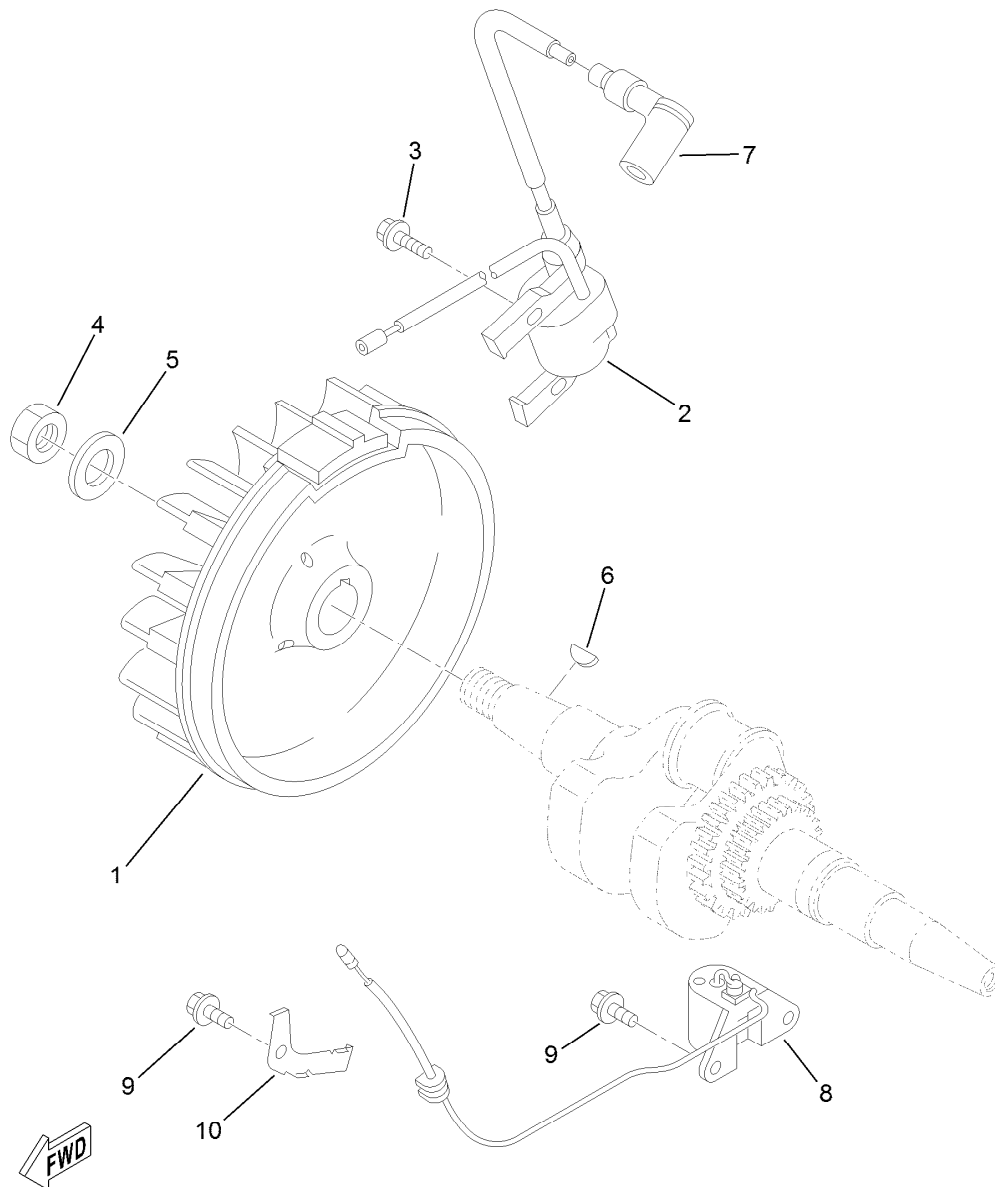 


Magneto Assembly

Ref.	Part Number	Qty.	Description
1	120-5707	1	Rotor ASM
2	127-6175	1	T.C.I. Unit ASM
3	120-5709	2	Bolt-Flange
4	120-5710	1	Nut
5	120-5711	1	Washer-Plate
6	120-5712	1	Key-Woodruff
7	120-5713	1	Plug Cap ASM
8	120-5714	1	Oil Level Gauge ASM
9	120-5715	3	Bolt-Flange
10	120-5716	1	Clamp

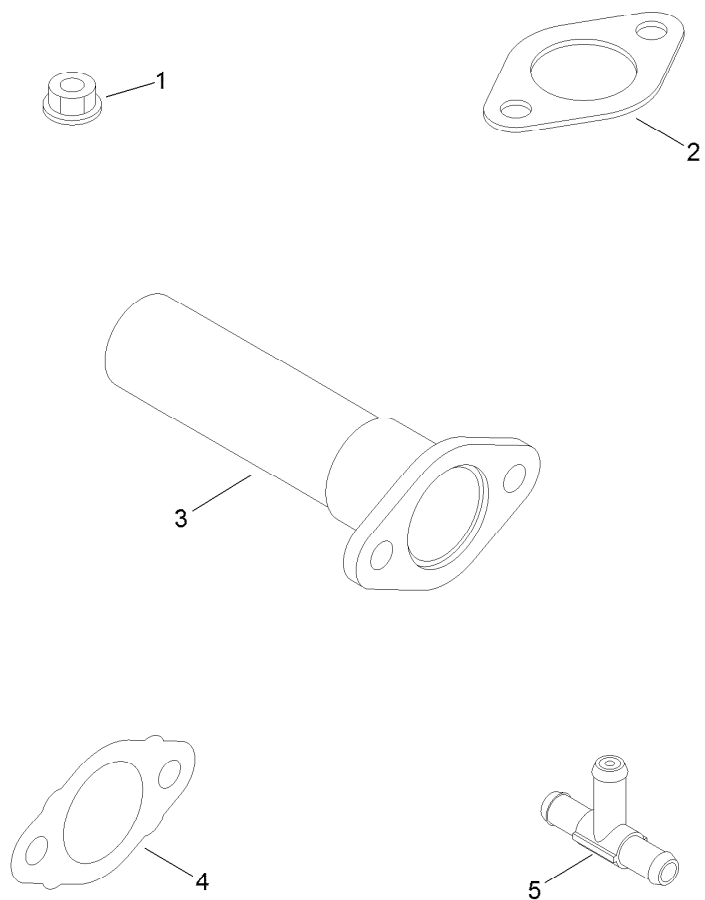 

Miscellaneous Engine Parts

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9540	2	Nut-Hex, M8
2	119-9541	2	Gasket-Exhaust
3	119-9542	1	Tube-Intake
4	119-9543	1	Gasket-Intake
5	119-9544	1	Tee-Emission, Evaporative

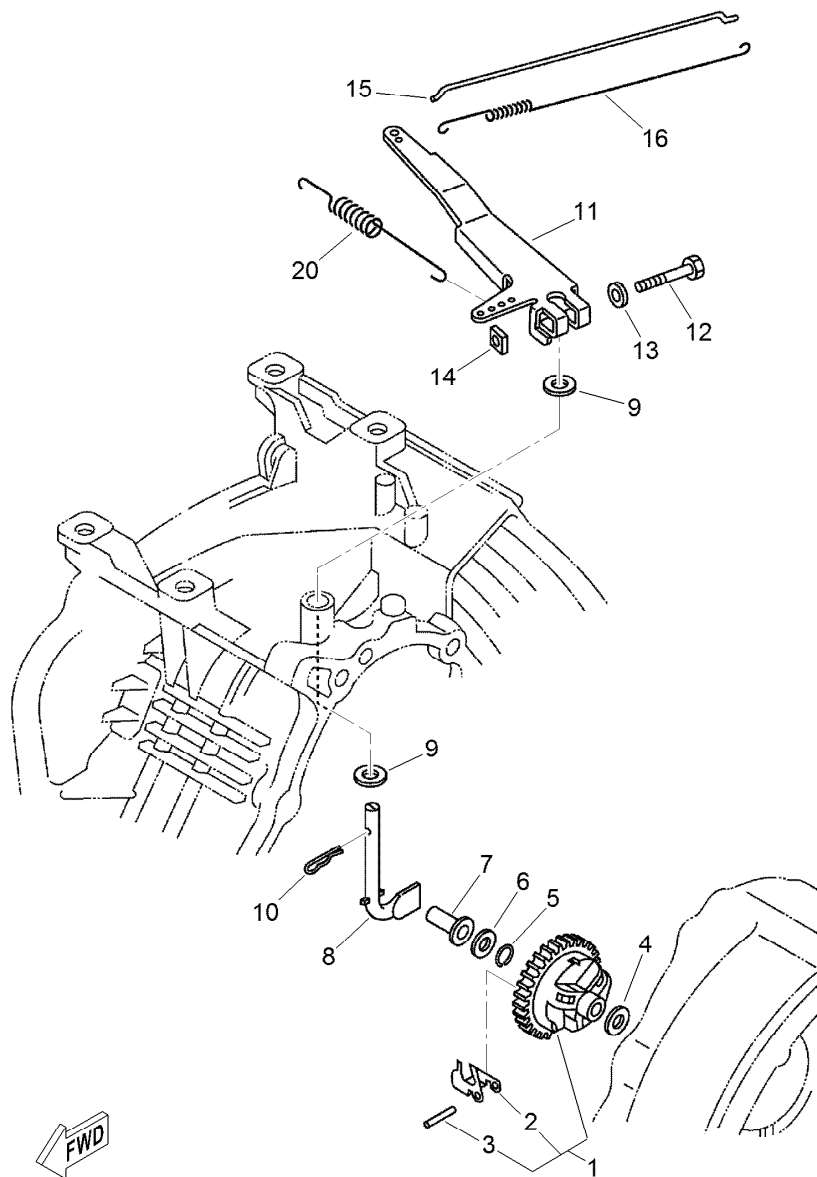 

Governor Assembly

Ref.	Part Number	Qty.	Description
1	127-6177	1	Flyweight Shaft ASM
2	127-6178	1	Weight
3	127-6179	1	Shaft-Weight
4	127-6180	1	Washer-Plate
5	127-6181	1	Circlip
6	127-6182	1	Washer-Plate
7	127-6183	1	Collar
8	127-6184	1	Fork-Governor
9	127-6185	1	Washer-Plate

Ref.	Part Number	Qty.	Description
10	127-6186	1	Clip
11	127-6187	1	Arm-Governor
12	127-6188	1	Bolt-Hexagon
13	127-6189	1	Washer-Plate
14	127-6190	1	Nut-Square
15	127-6191	1	Rod-Link
16	127-6192	1	Spring-Tension
20	127-6193	1	Spring-Governor

Attachments and Accessories

For 07279 Workman MD Utility Vehicle

Product Name	Model/Part
Roll-Over Protection System	07276
Receiver Hitch Kit	07278
Canopy Kit	07324
Solid Windshield Kit	07325
Folding Windshield Kit	07326
Snow Plow	07327
Hard Cab	07328
Heavy-Duty Bumper Kit	07329
Heavy-Duty Brush Guard and Bumper Kit	07338
Sliding Window Door Kit	07352
Fixed Window Door Kit	07353
Electric Bed Lift Kit, 2014 and After Workman MD/MDX/MDX-D Utility Vehicle	07389
Wheel-5 Bolt	104-6889
Tire-AT 489, 24x10.5-10	104-7061
Tire-AT 489, 22x9.5-10	104-7062
Lift Wire Harness Kit	115-7823
Backup Alarm Kit	115-7824
Horn Kit	115-7825
Replacement Front Spring Kit	117-4847
Tire And Wheel Asm	119-0751
Tapered Nozzle Kit	119-6280
Rectangular Nozzle Kit	119-6281
Nozzle-Extension, Straight	119-6282
Nozzle-Extension, Tapered	119-6283
Nozzle-Extension, Rectangular	119-6284
Side Mirror Kit	119-9546
Stake Pocket Adapter Kit, 2011 and After Workman MD Series Utility Vehicle	119-9604
Tie-Down Kit, 2011 and After Workman MD Series Utility Vehicle	119-9605
Battery Kit	119-9680
Road Light and Homologation Kit	120-5031
Brake and Signal Light Kit	120-5044
Key Start Kit	121-6338
Cargo Bed Installation Kit with Manual Dump, 2011 to 2013 Workman MD Series Utility Vehicle	127-7385
Cargo Bed Installation Kit with Electric Lift, 2011 to 2013 Workman MD Series Utility Vehicle	127-7386
Cargo Bed Installation Kit with Manual Dump, 2010 and Before Workman MD Series Utility Vehicle	131-3457
Pro Force Debris Blower	44538
Road-Ready Pro Force Debris Blower	44539
Bed Mount Kit, Pro Force Debris Blower	44543
Bed Mount Sound Barrier Kit, Pro Force Debris Blower	44546
Spark Arrestor Screen	94-8157

Notes:

Notes:

Notes:



Count on it.