



Form No. 3378-167 Rev C

Count on it.

Parts Catalog

Workman® MD Utility Vehicle

Model No. 07266TC—Serial No. 313000501 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

 
In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents


Dash Assembly	4
Pedal Box Assembly	6
Shifter Assembly	7
Front Frame Assembly	8
Seat Base Assembly	9
Front Tire, Spindle and Tie Rod Assembly	10
Brake Caliper Assembly No. 119-9535	12
Rear Tire and Transaxle Assembly	13
Transaxle Assembly No. 119-0760	14
Secondary Clutch Assembly No. 119-6011	16
LH Rear Brake Assembly No. 114-8332	17
RH Rear Brake Assembly No. 114-8331	18
Upper Steering Assembly	19
Steering Box Assembly No. 112-3130	20
Cargo Bed Installation Assembly	21
Cargo Bed Service Assembly No. 121-9810	22
Cargo Bed and Tailgate Assembly	23
Hood and Fender Assembly	24
Frame Assembly	25
Engine and Clutch Assembly	26
Primary Clutch Assembly No. 120-4823	28
Starter Generator Assembly No. 119-9545	29
Air Cleaner Assembly No. 99-7120	30
Master Cylinder and Brake Line Assembly	31
Master Cylinder Assembly No. 104-6782	32
Cylinder Head Assembly	33
Crankshaft and Piston Assembly	34
Camshaft and Valve Assembly	35
Starter Air Shroud Assembly	36
Air Intake Assembly	37
Carburetor Assembly	38
Crankcase Assembly	39
Fuel Pump Assembly	40
Magneto Assembly	41
Miscellaneous Engine Parts	42
Governor Assembly	43
Attachments and Accessories	44

Dash Assembly

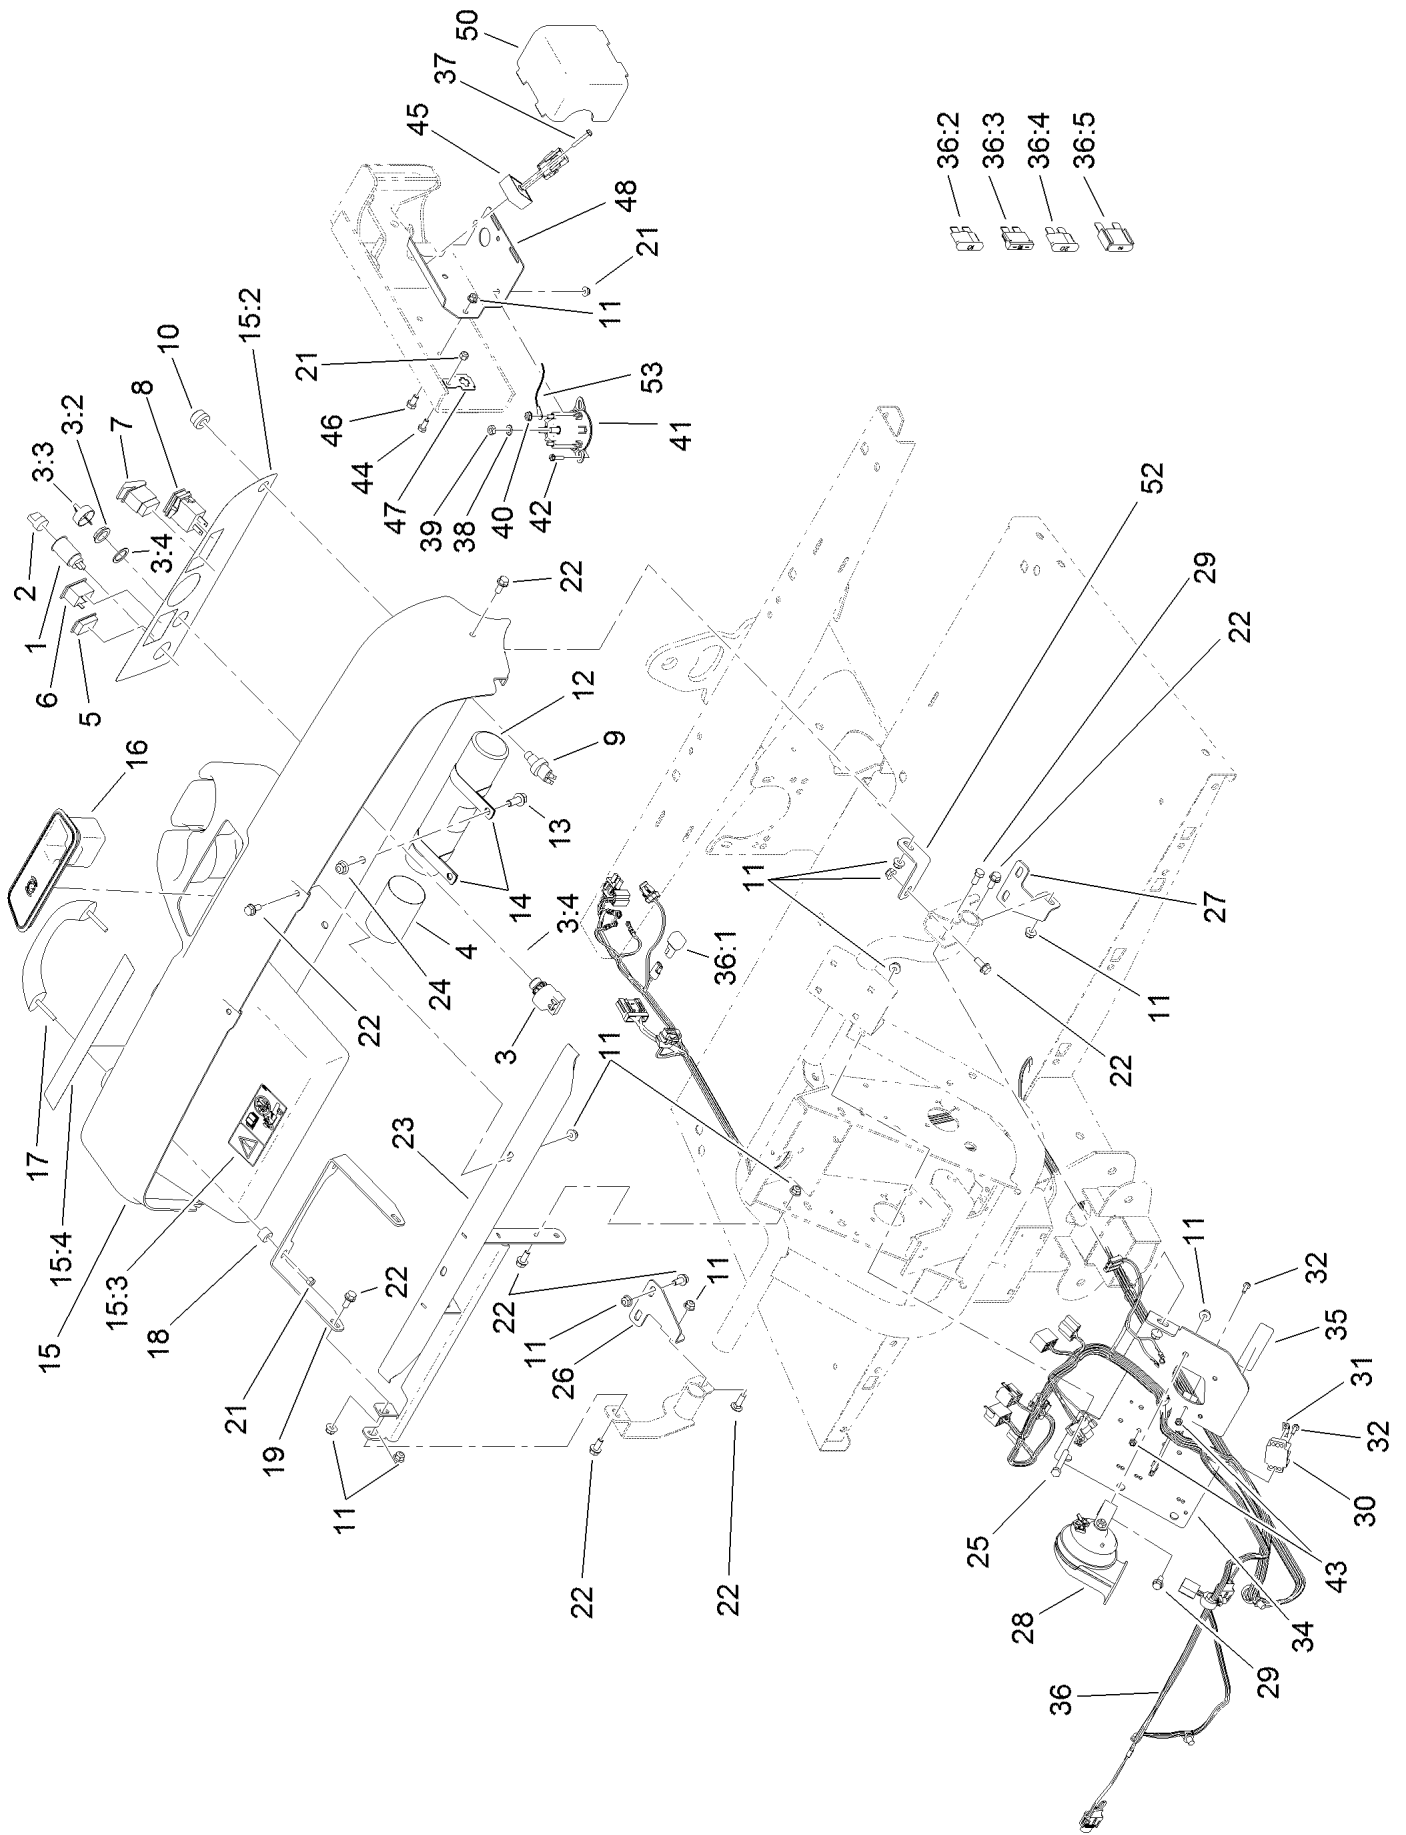

Dash Assembly (continued)


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	99-7411	1	Point-Power	26	114-8304	1	Bracket-Mount, Dash (RH)
2	99-7416	1	Cap	27	114-8312	1	Bracket-Mount, Dash (LH)
3	120-3956	1	Ignition Switch ASM	28	110-2594	1	Horn
3:2	108-8660	1	Nut-Mounting	29	110-5053	1	Screw-HHF
3:3	106-5270	1	Ignition Key Set	30	42862	1	Block-Terminal, Ground
3:4	108-8659	1	Washer-Backup	31	42863	1	Strip-Jumper
4	104-7048	1	Cap-Housing	32	32105-13	4	Screw-HWH
5	99-7420	1	Plug-Hole	34	112-3376-03	1	Plate-Mount, Electrical
6	99-7410	1	Indicator-Light, Low-Oil Pressure	35	112-3325	1	Decal-Block, Fuse
7	95-8999	1	Switch	36	119-5774	1	Harness-Wire
8	94-4208	1	Hourmeter	36:1	100-4918	1	Diode
9	112-3324	1	Switch-Horn	36:2	218-578	1	Fuse-Blade, 10 Amp
10	112-3313	1	Nut-Weatherproof	36:3	109355	1	Fuse-Blade, 15 Amp
11	104-8300	21	Nut-HF, NI	36:4	109101	1	Fuse-Blade, 20 Amp
12	104-7050	1	Tube-Manual	36:5	114-3342	1	Fuse-Maxi, 60 Amp
13	3234-11	2	Screw-HHF	37	100-4352	1	Screw-HWH
14	2412-133	2	Clamp-R	38	3255-8	2	Washer-Lock
15	114-8310	1	Dash ASM	39	3220-2	2	Nut-Jam
15:2	117-5001	1	Decal-Panel, Control	40	32149-8	2	Nut-Keps
15:3	104-6581	1	Decal-Danger	41	114-3315	1	Solenoid
15:4	115-2412	1	Decal-No Storage	42	3234-33	2	Screw-HHF
16	104-6930	1	Plug-Rubber	43	3296-2	4	Nut-Lock, NI
17	112-3320	1	Handle-Grip	44	321-3	1	Screw-HH
18	114-8301	2	Spacer	45	119-9492	1	Regulator-Voltage
19	112-3391-03	1	Bracket-Grip, Handle	46	322-2	2	Screw-HH
21	104-7201	5	Nut-Flange, NI	47	114-5502	1	Clip-Fuse
22	110-5053	16	Screw-HHF	48	119-0752-03	1	Mount-Component
23	115-7651-03	1	Support-Dash	50	112-3027	1	Cover-Controller
24	104-8301	2	Nut-HF, NI	52	114-8305	1	Angle-Mount, Dash (LH)
25	322-11	2	Screw-HH	53	112-3537	1	Cable-Battery, Positive

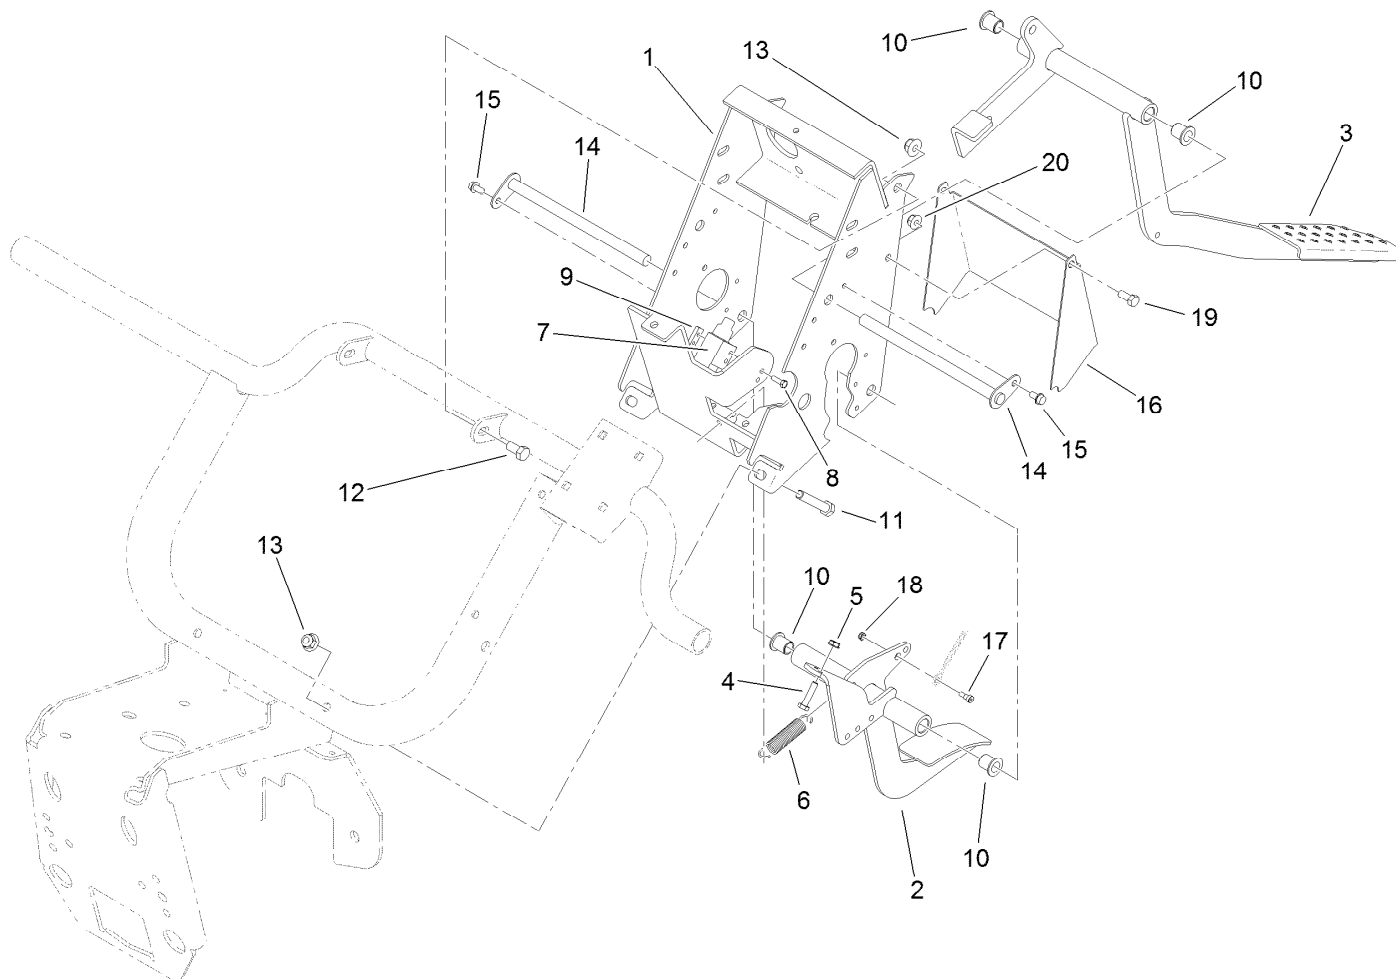 

Pedal Box Assembly

Ref.	Part Number	Qty.	Description
1	119-0748-03	1	Support-Pedal
2	119-9747-03	1	Pedal-Throttle
3	112-3314-03	1	Pedal-Brake
4	321-7	2	Screw-HH
5	32149-2	2	Nut-Keps
6	104-6415	1	Spring-Return, Pedal
7	99-7407	1	Switch
8	3290-134	2	Screw
9	1-633181	1	Plate-Tapped
10	256-155	4	Bushing-Flange


Ref.	Part Number	Qty.	Description
11	323-11	2	Screw-HH
12	323-4	2	Screw-HH
13	104-8301	4	Nut-HF, NI
14	104-7164	2	Pivot-Pedal
15	32144-4	2	Screw-HWH
16	115-7619-03	1	Cover
17	115-7632	1	Bolt-Shoulder
18	3296-47	1	Nut-Lock,NI
19	322-3	2	Screw-HH
20	104-8300	2	Nut-HF, NI

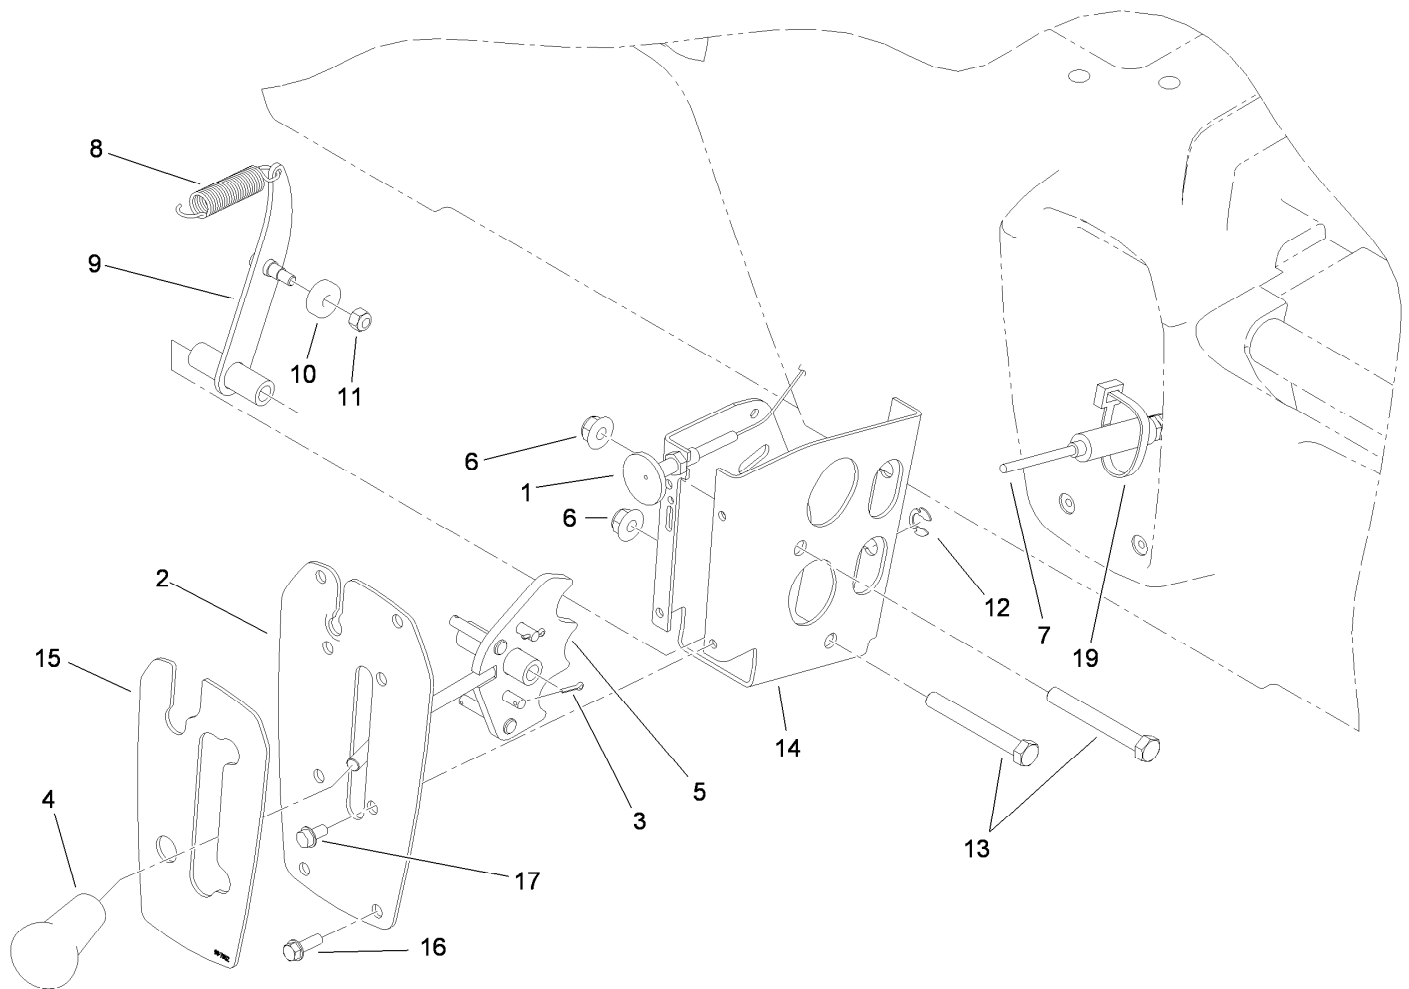 

Shifter Assembly

Ref.	Part Number	Qty.	Description
1	104-6507	1	Cable-Choke
2	99-7887-03	1	Plate-Shifter
3	3272-5	2	Pin-Cotter
4	99-7981	1	Knob-Grip, Soft
5	114-2719	1	Plate-Detent
6	104-8301	2	Nut-HF, NI
7	115-7679	2	Cable-Control, Tension
8	104-6415	1	Spring-Return, Pedal
9	108-3138	1	Arm-Detent


Ref.	Part Number	Qty.	Description
10	251-307	1	Bearing-Ball
11	3296-42	1	Nut-Lock, NI
12	32151-101	2	E-Ring
13	323-14	2	Screw-HH
14	108-3141-03	1	Bracket-Shift
15	99-7952	1	Decal-Shifter
16	32105-15	4	Screw-HWH
17	32144-4	4	Screw-HWH
19	3290-378	1	Tie-Cable

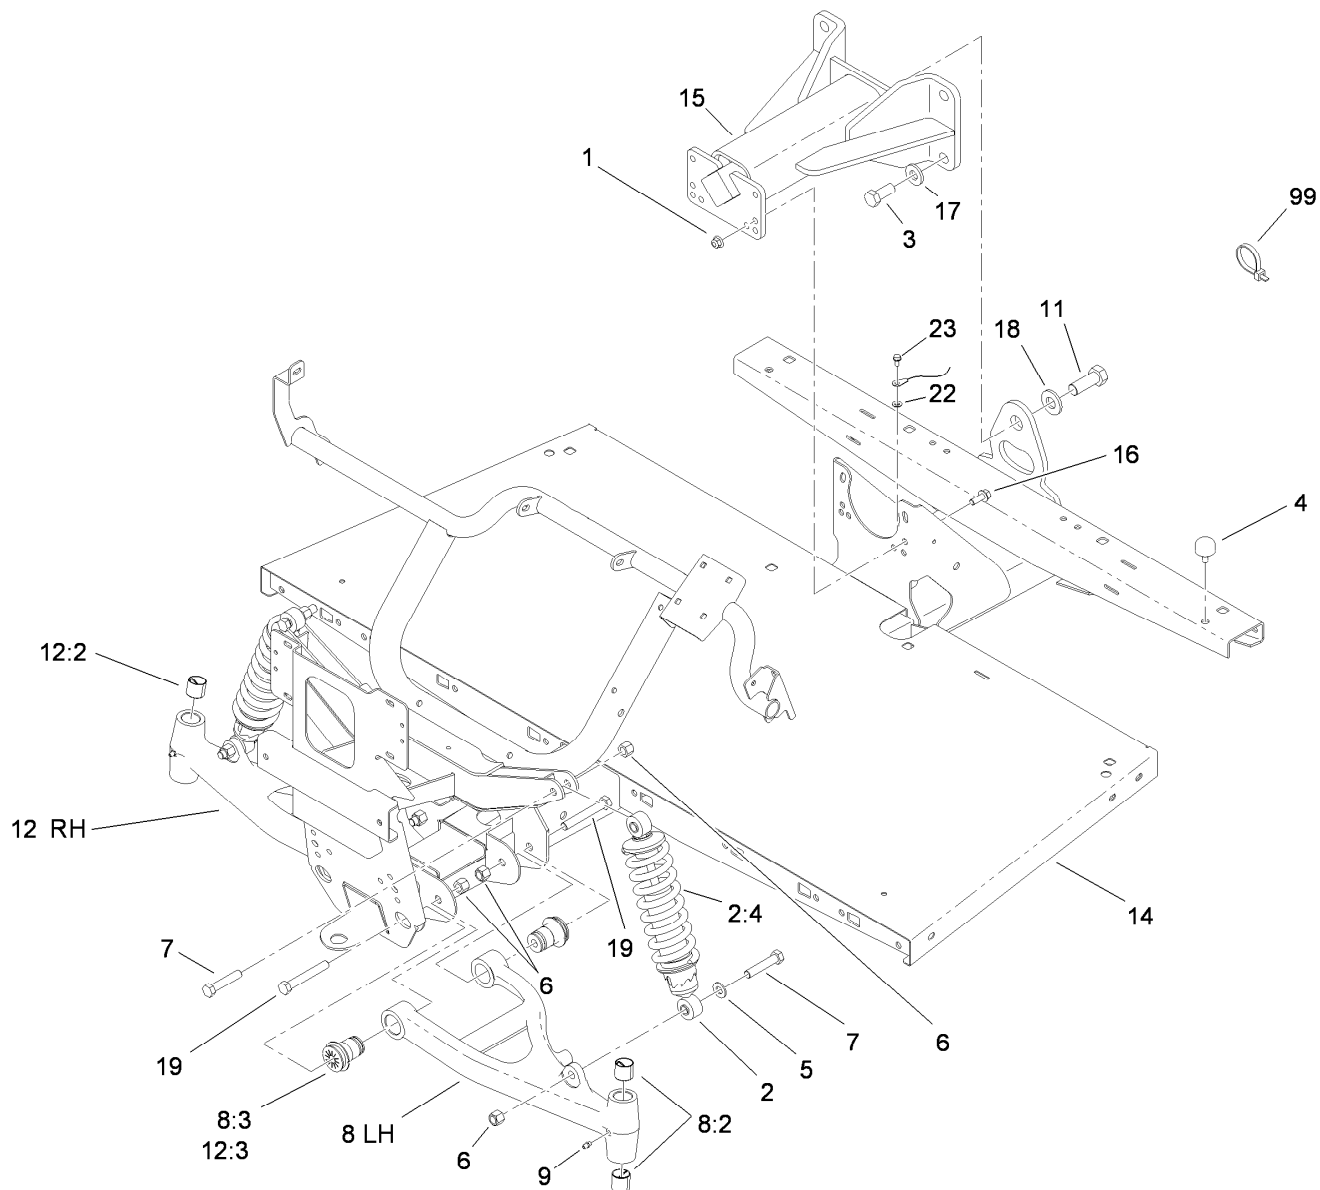 

Front Frame Assembly

Ref.	Part Number	Qty.	Description
1	104-8301	4	Nut-HF, NI
2	112-2975	2	Shock/Spring ASM
2:4	112-3383	1	Spring
3	327-4	4	Screw-HH
4	87-2440	1	Bumper-Rubber
5	51-3500	2	Washer
6	3296-23	8	Nut-Lock, NI
7	325-10	4	Screw-HH
8	114-8313	1	LH A-Arm ASM
8:2	125-5196	2	Bushing
8:3	87-1450	2	Bushing-Flange
9	302-5	2	Fitting-Grease
11	328-24	1	Screw-HH


Ref.	Part Number	Qty.	Description
12	114-8314	1	RH A-Arm ASM
12:2	125-5196	2	Bushing
12:3	87-1450	2	Bushing-Flange
14	112-3340-03	1	Frame-Front
15	99-7700	1	Yoke-Pivot
16	3234-11	4	Screw-HHF
17	99-7667	4	Washer-Flat
18	87-3060	1	Washer-Hardened
19	325-14	4	Screw-HH
22	3254-16	1	Washer-Lock/Int
23	32144-4	1	Screw-HWH
99	3290-379	12	Tie-Cable

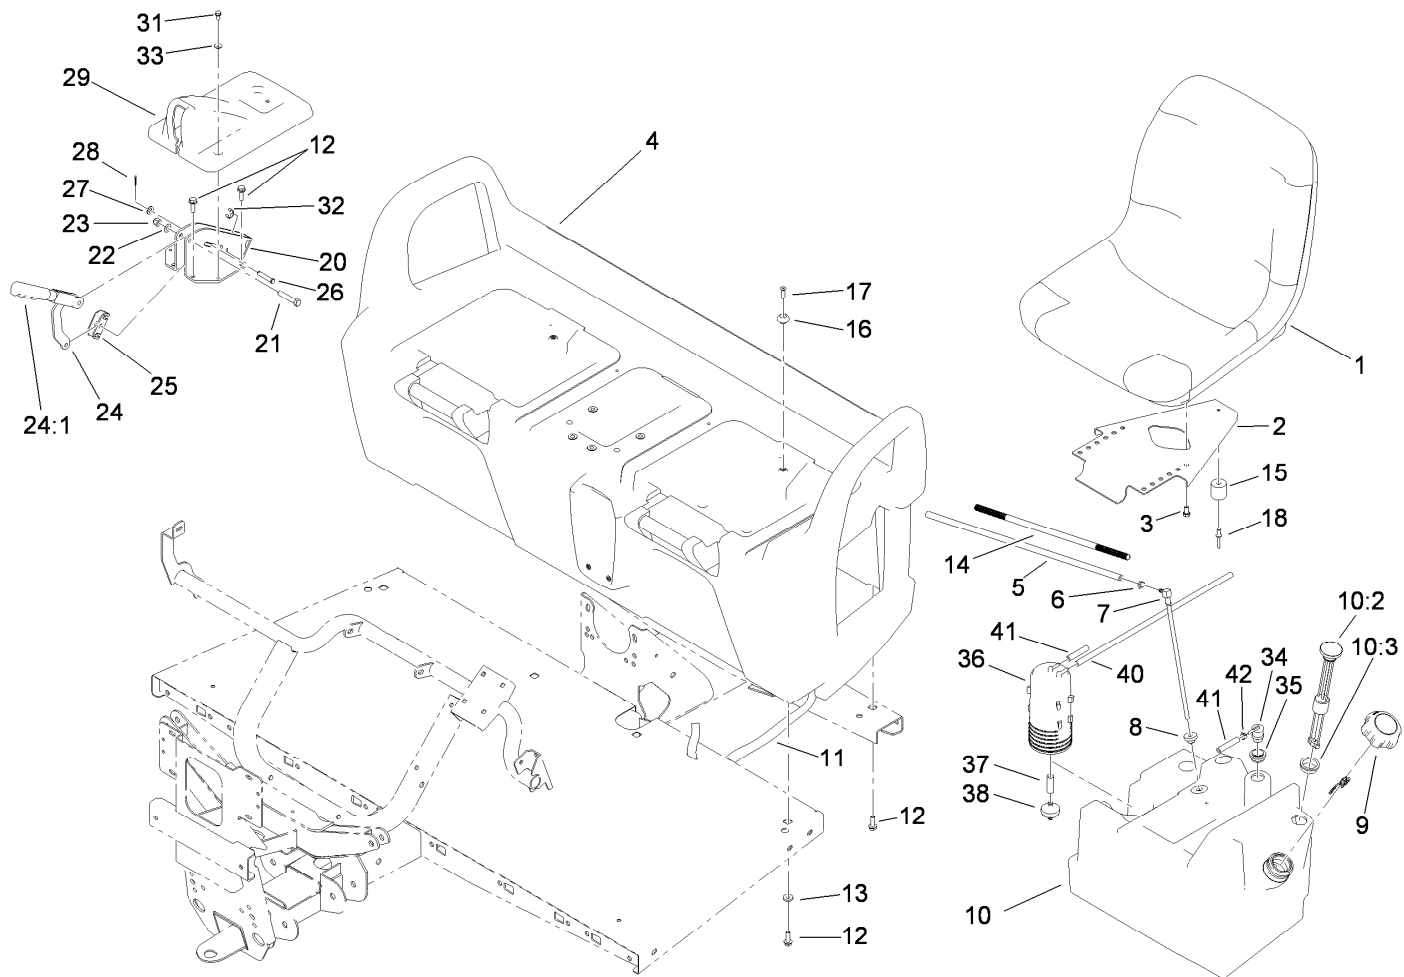 

Seat Base Assembly

Ref.	Part Number	Qty.	Description
1	112-2923	2	Seat ASM
2	99-7829	2	Bracket-Seat
3	33114-016	8	Screw-HH
4	104-6847	1	Base-Seat
5	110-4103	1	Hose-Fuel
6	2412-98	1	Clamp-Hose
7	99-7264	1	Pipe-Stand
8	46-6560	1	Bushing
9	115-7788	1	Cap-Fuel
10	121-9769	1	Fuel Tank ASM
10:2	99-7262	1	Gauge-Fuel
10:3	95-8972	1	Grommet
11	3339-175	1	Strapping-Web
12	3234-17	12	Screw-HHF
13	88-7200	8	Washer-Flat
14	99-7129	1	Conduit-Line, Fuel
15	99-7830	2	Receptical-Rubber
16	99-7833	2	Post-Holding
17	32108-5	2	Screw-FH
18	3290-412	2	Rivet-Blind
20	104-6844-03	1	Support-Brake, Park

Ref.	Part Number	Qty.	Description
21	323-10	1	Screw-HH
22	3290-477	1	Washer-Curved
23	3296-39	1	Nut-Lock, NI
24	104-6842	1	Lever-Brake, Park
24:1	106-7972	1	Grip-Handle
25	87-3480	1	Bracket-Equalizer, Cable
26	94-3829	1	Pin-Clevis
27	3256-23	1	Washer-Plain
28	3272-6	1	Pin-Cotter
29	104-7014	1	Cover-Brake, Parking
31	32144-4	2	Screw-HWH
32	32120-47	2	Ring-Retaining, External
33	3256-1	2	Washer-Flat
34	114-0285	1	Valve-Rollover
35	114-0284	1	Grommet
36	117-1221	1	Canister-Carbon, 800Cc
37	106-5317	1	Hose-Fuel
38	115-7854	1	Filter-Fuel, Inline
40	109-0273	1	Hose-Fuel
41	110-8751	1	Hose-Fuel
42	2412-146	1	Clamp-Hose

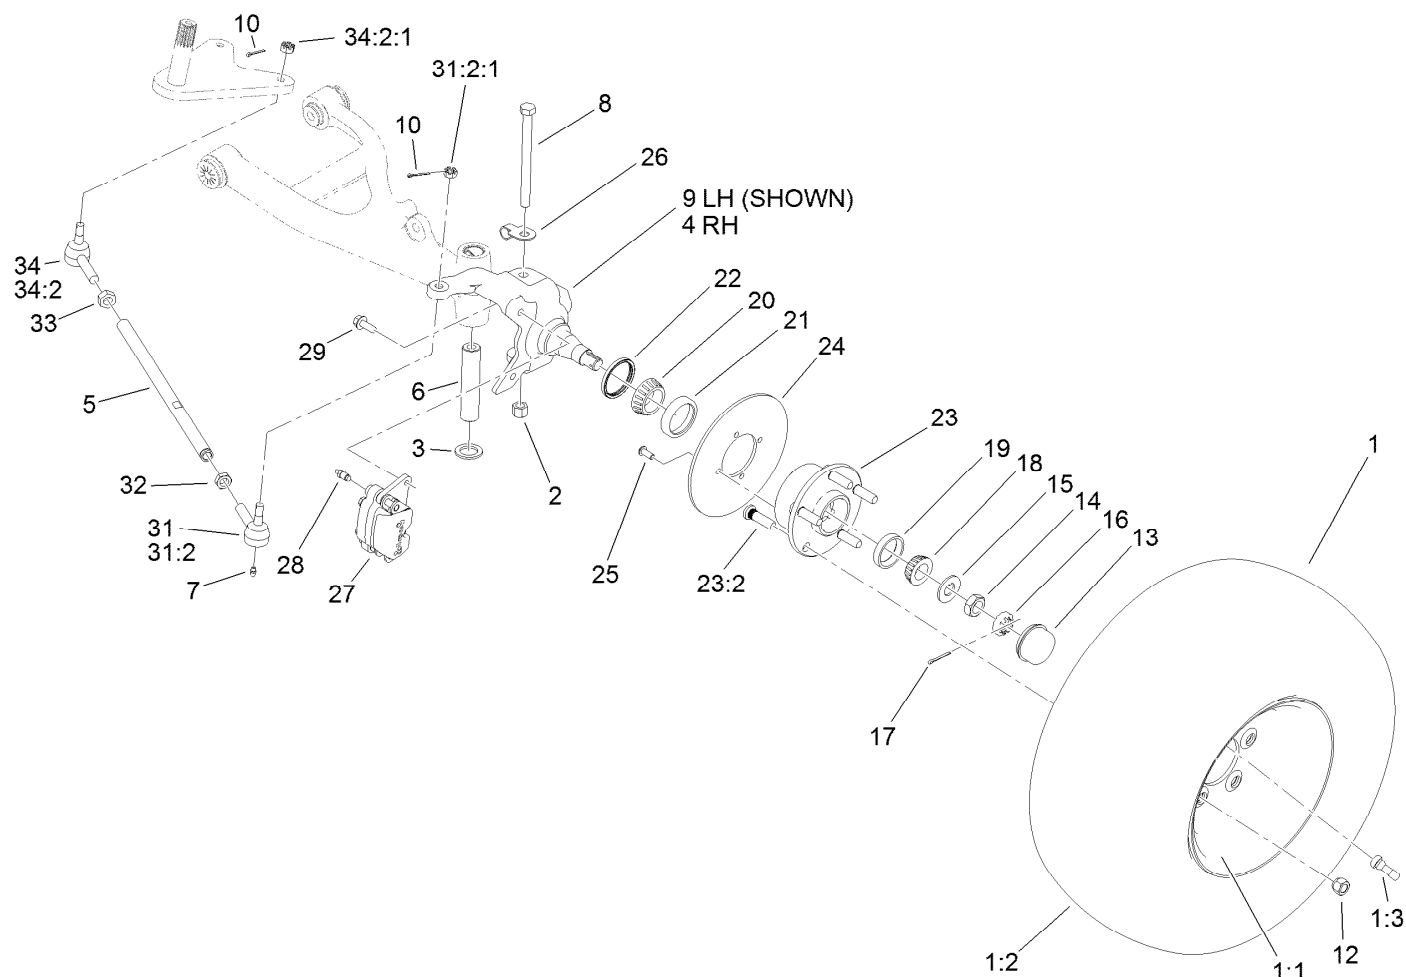 


Front Tire, Spindle and Tie Rod Assembly

Ref.	Part Number	Qty.	Description
1	120-5025	2	Tire And Wheel ASM
1:1	120-4974	1	Wheel
1:2	104-7289	1	Tire
1:3	232-27	1	Stem-Valve
2	3296-23	2	Nut-Lock, NI
3	256-115	2	Washer-Thrust
4	119-9522	1	Spindle-RH
5	115-7654	2	Tie Rod
6	99-7499	2	Sleeve-Kingpin
7	302-5	4	Fitting-Grease
8	325-20	2	Screw-HH
9	119-9521	1	Spindle-LH
10	3272-7	4	Pin-Cotter
12	242-50	10	Nut-Lug
13	241-119	2	Cap-Dust
14	3220-7	2	Nut-Jam
15	93-0309	2	Washer-Tab
16	93-0307	2	Nut-Lock, Retainer

Ref.	Part Number	Qty.	Description
17	3272-12	2	Pin-Cotter
18	254-94	2	Bearing-Cone, Tapered
19	254-72	2	Bearing-Cup, Tapered
20	254-106	2	Cone-Bearing, Tapered
21	254-107	2	Cup-Bearing, Tapered
22	108-7019	2	Seal-Shaft
23	117-8071	2	Hub ASM
23:2	10-6830	5	Stud-Type, Drive
24	119-9520	2	Rotor
25	121-9671	8	Screw-HSBH
26	112-3311	2	Clip-Hose
27	119-9535	2	Brake Caliper ASM
28	119-9509	2	Screw-Bleed
29	3234-11	4	Screw-HHF
31	112771-03	2	Joint-Ball, LH
31:2		1	Socket-Balljoint ●
31:2:1	915031	1	Nut
32	3218-21	2	Nut-Jam LH

 ● Not serviced separately

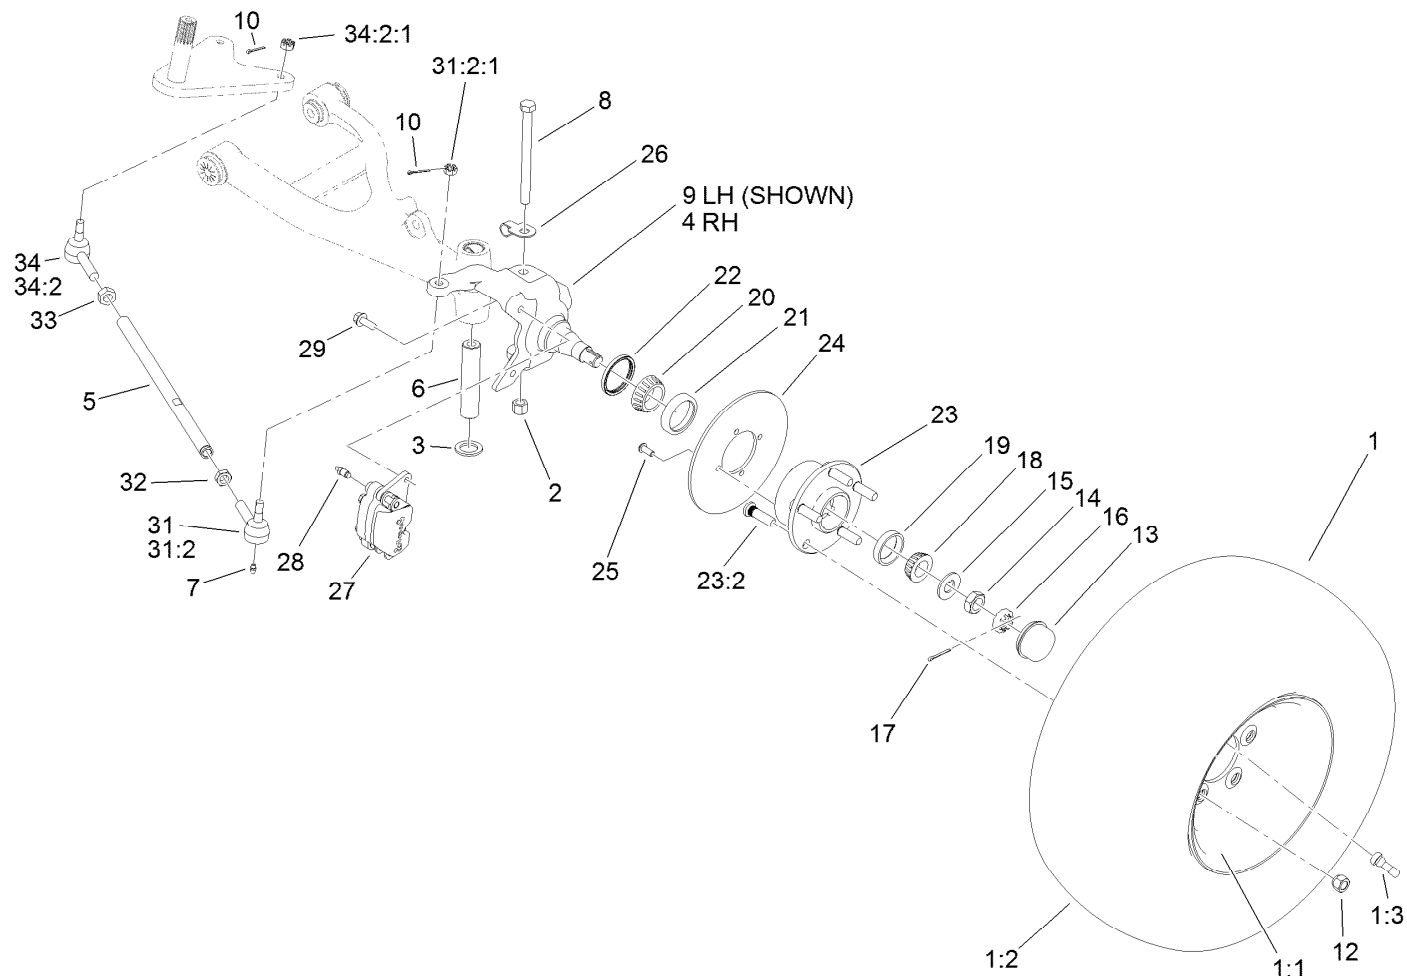


Front Tire, Spindle and Tie Rod Assembly (continued)

Ref.	Part Number	Qty.	Description
33	3220-11	2	Nut-Jam
34	112772-03	2	Joint-Ball, RH


Ref.	Part Number	Qty.	Description
34:2		1	Socket-Balljoint ●
34:2:1	915031	1	Nut

 ● Not serviced separately

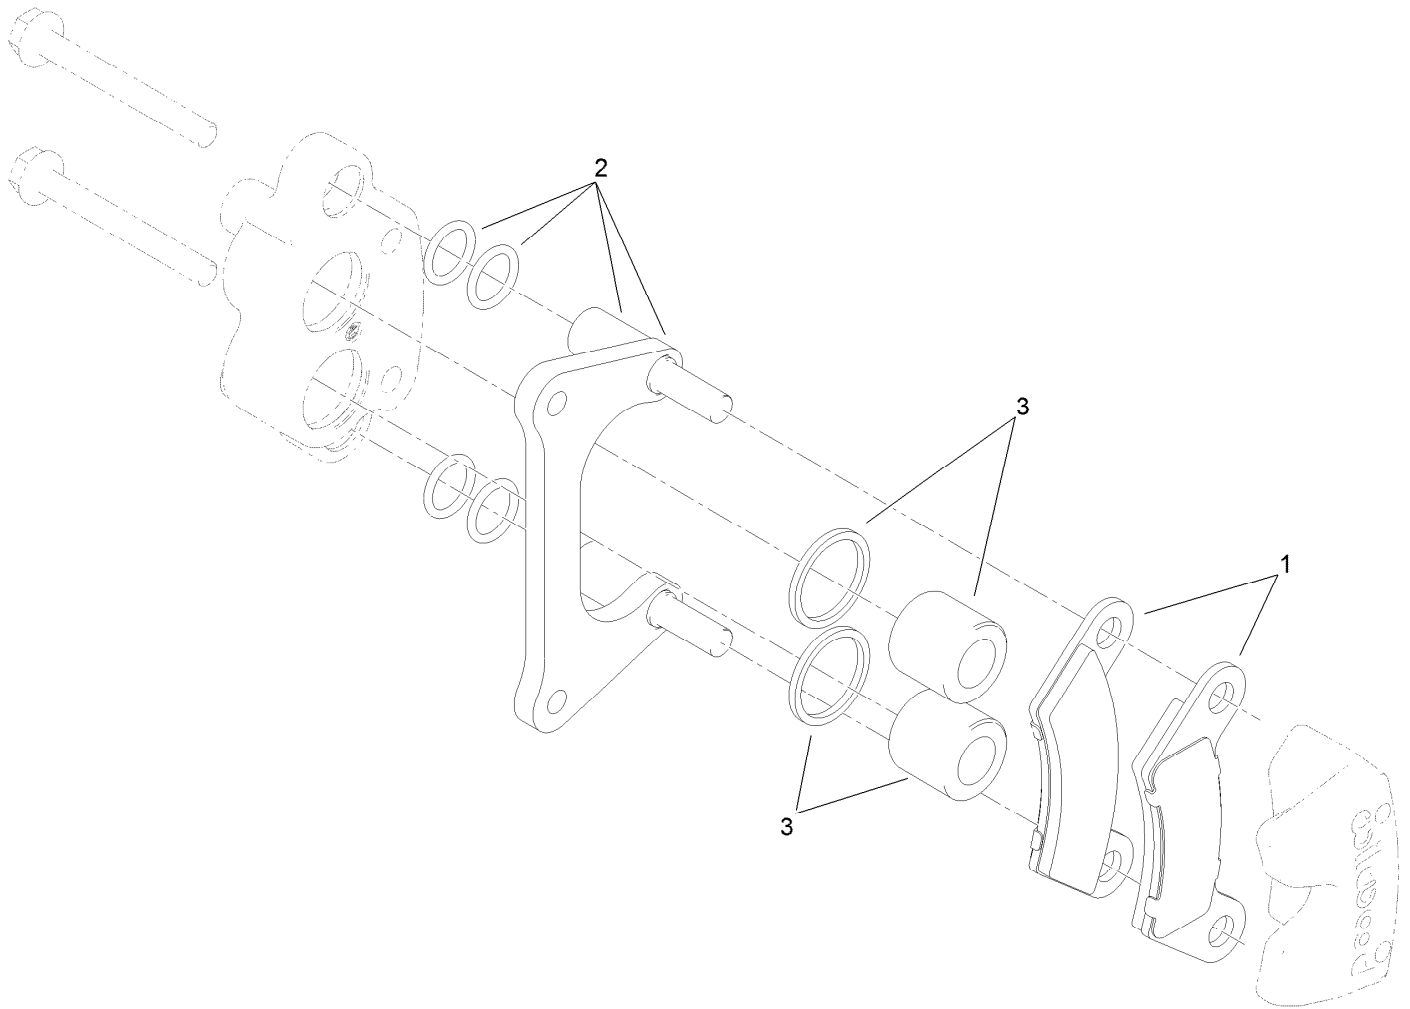

Brake Caliper Assembly No. 119-9535

Ref.	Part Number	Qty.	Description
1	119-9510	1	*obs* Pads-Brake
2	119-9511	1	Bracket Kit
3	119-9512	1	Piston Kit

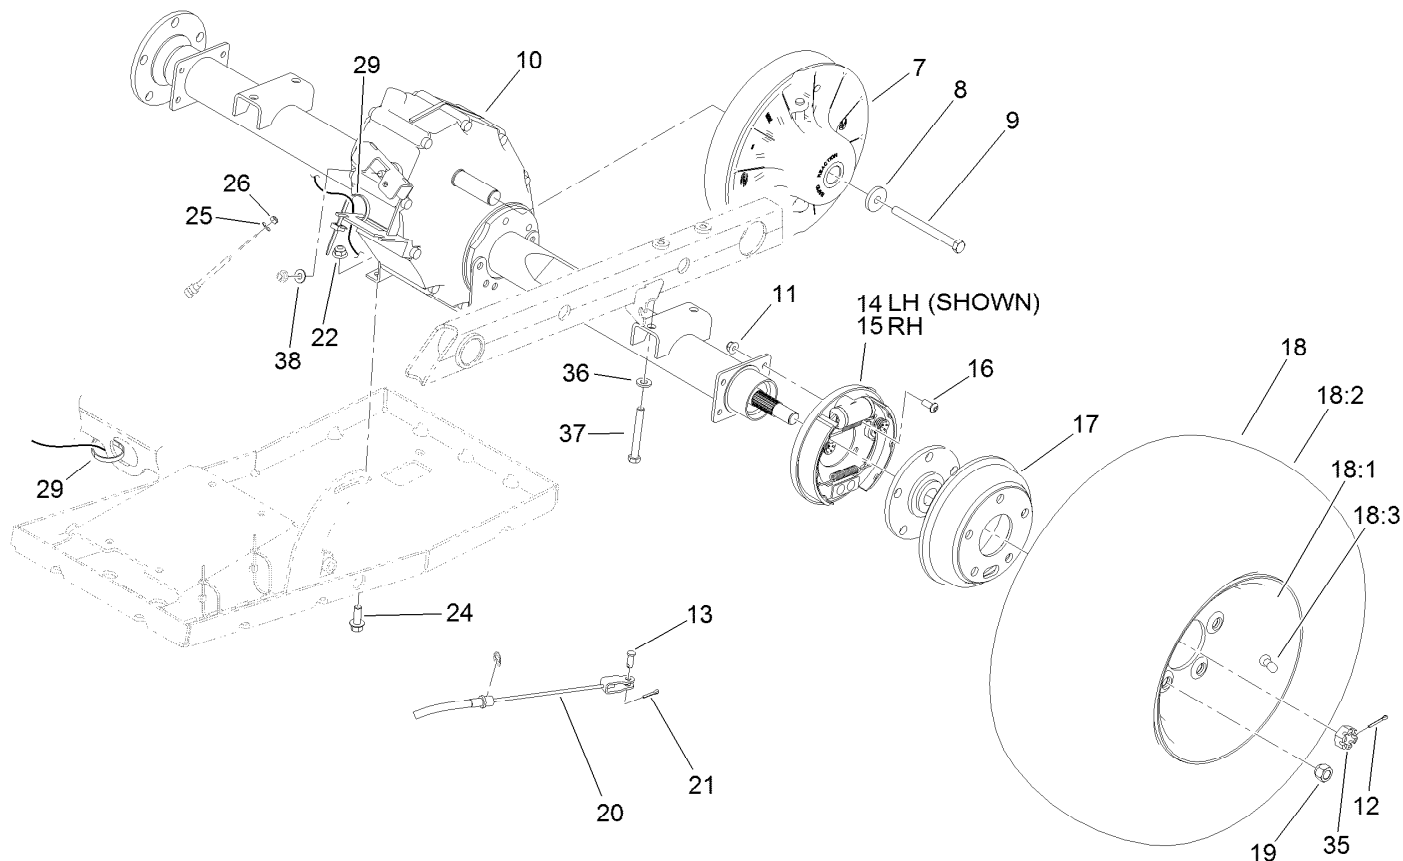 


Rear Tire and Transaxle Assembly

Ref.	Part Number	Qty.	Description
7	119-6011	1	Secondary Clutch ASM
8	104-6563	1	Washer-Stepped
9	119-0723	1	Screw-HH, Lock
10	119-0760	1	Transaxle ASM
11	104-8300	8	Nut-HF, NI
12	3272-12	2	Pin-Cotter
13	283-62	2	Pin-Clevis
14	114-8332	1	LH Brake ASM
15	114-8331	1	RH Brake ASM
16	3274-55	8	Screw-HSBH
17	104-6500	2	Drum-Brake
18	120-5025	2	Tire And Wheel ASM
18:1	120-4974	1	Wheel
18:2	104-7289	1	Tire


Ref.	Part Number	Qty.	Description
18:3	232-27	1	Stem-Valve
19	242-50	10	Nut-Lug
20	112-3309	2	Cable-Brake
21	3272-10	2	Pin-Cotter
22	104-8301	4	Nut-HF, NI
24	3234-11	4	Screw-HHF
25	3256-49	2	Washer-Plain
26	3296-2	2	Nut-Lock, NI
29	3290-378	2	Tie-Cable
35	104-1656	2	Nut-Castle
36	100-4852	4	Washer-Hardened
37	323-14	4	Screw-HH
38	87-8640	1	Washer-Flat

 Transaxle Assembly No. 119-0760

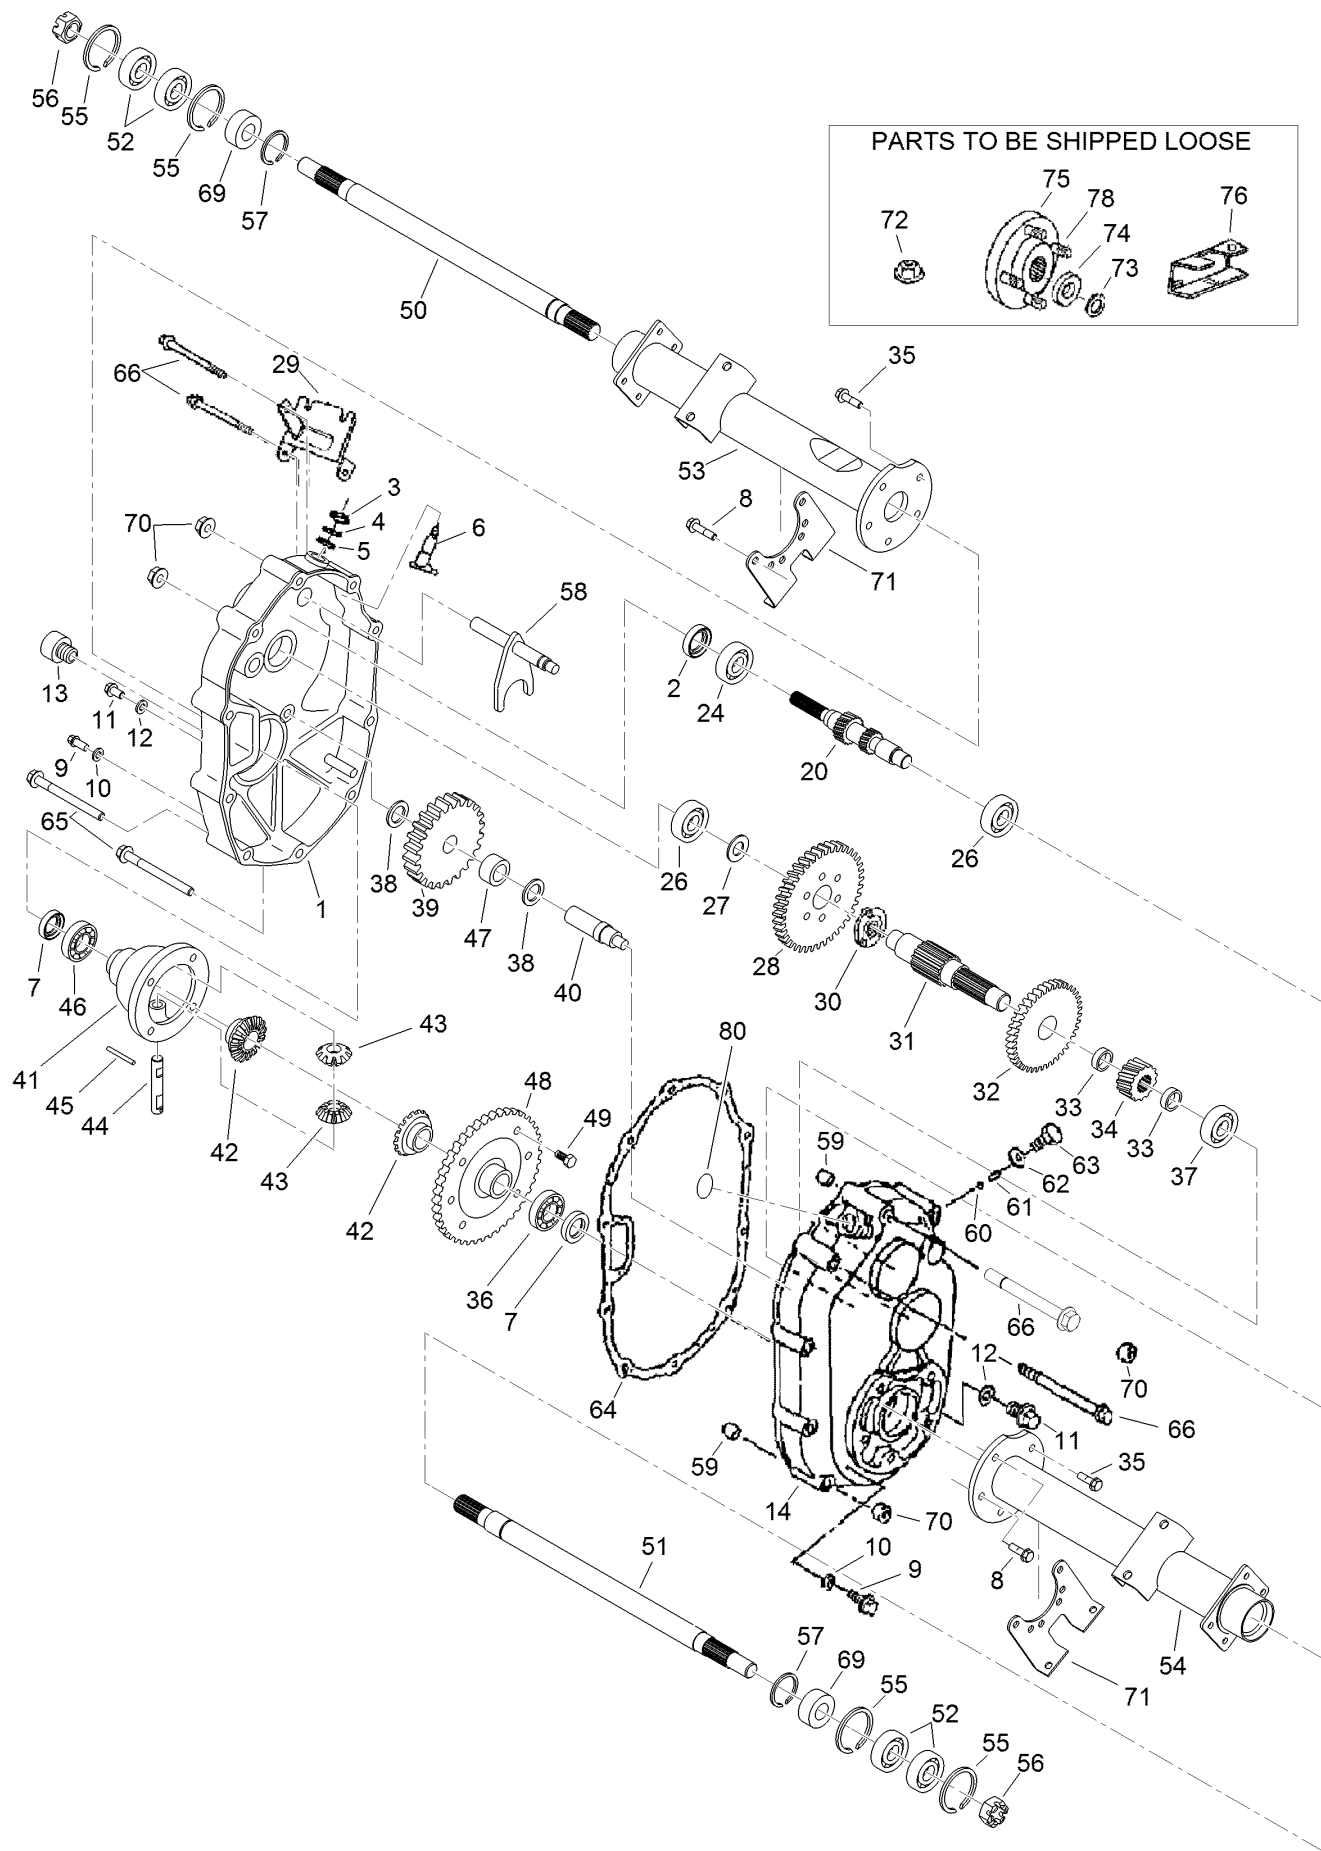


Transaxle Assembly No. 119-0760 (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	104-1601	1	Case-LH, Complete	44	104-1644	1	Shaft-Differential
2	104-1602	1	Seal-Oil	45	104-1645	1	Pin
3	104-1603	1	Seal-Oil	46	104-1646	1	Bearing-Ball
4	104-1604	1	Ring-Snap	47	104-1647	1	Bearing-Needle
5	104-1605	1	Spacer	48	104-1648	1	Gear
6	104-1606	1	Shaft-Selector	49	104-1649	6	Bolt
7	104-1607	2	Seal-Oil	50	104-1650	1	Shaft-Axle, LH
8	104-1608	4	Bolt-Flange	51	104-1651	1	Shaft-Axle, RH
9	104-1609	2	Plug-Check, Oil	52	104-1652	4	Bearing-Ball
10	104-1610	2	Gasket	53	104-1653	1	Case-Axle, LH
11	104-1611	2	Plug-Drain, Oil	54	104-1654	1	Case-Axle, RH
12	104-1612	2	Gasket	55	104-1655	4	Ring-Snap
13	104-1613	1	Plug-Filler, Oil	56	104-1656	2	Nut-Castle
14	104-1614	1	Case-Complete, RH	57	104-1657	2	Ring-Snap
20	104-7002	1	Shaft-Input, Complete	58	104-6870	1	Shaft-Shift, Complete
24	104-1624	1	Bearing-Ball	59	104-1659	2	Knock-Pipe
26	104-1626	2	Bearing-Ball	60	104-1660	1	Ball-Steel
27	104-1627	1	Spacer	61	104-1661	1	Spring
28	104-1628	1	Gear	62	104-1662	1	Gasket
29	104-1629	1	Bracket-Wire, Change	63	104-1663	1	Bolt
30	104-1630	1	Clutch-Pin	64	104-1664	1	Gasket
31	104-1631	1	Shaft-Center	65	104-1665	6	Bolt-Flange
32	104-1632	1	Gear	66	104-1666	4	Bolt-Flange
33	104-1633	2	Collar	69	104-6867	2	Collar
34	104-1634	1	Gear	70	33004-00	10	Nut-HF
35	104-1635	6	Bolt-Flange	71	104-1671	2	Bracket-Axle
36	104-1636	1	Bearing-Ball	72	104-1672	1	Nut-Lock
37	104-1637	1	Bearing-Ball	73	104-1673	2	Washer-Spring
38	104-1638	2	Spacer	74	104-1674	2	Washer
39	104-1639	1	Gear	75	104-1675	2	Hub
40	104-1640	1	Shaft-Counter	76	104-6860	1	Lever-Select
41	104-1641	1	Case-Differential	78	104-8649	10	Stud
42	104-1642	2	Gear-Side, Differential	80	121-9718	1	Cap-Seal
43	104-1643	2	Pinion-Differential				

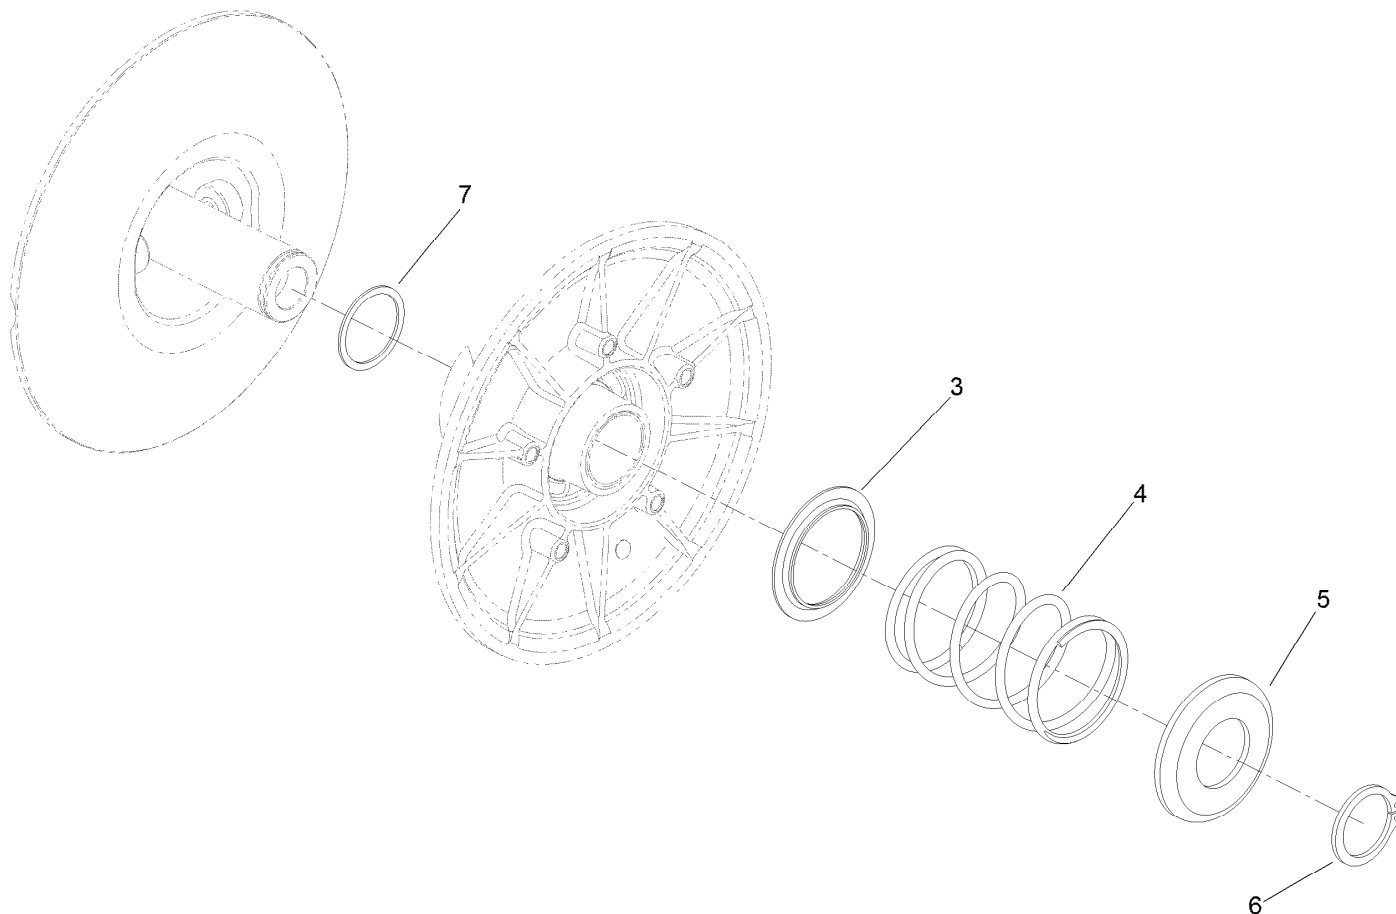 

Secondary Clutch Assembly No. 119-6011


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
3	119-0809	1	Cup-Spring Retainer, Inner
4	119-9360	1	Spring-Compression, Black/Almond
5	119-0810	1	Cup-Spring Retainer, Outer
6	119-0811	1	Ring-Retaining
7	119-6018	1	Shim-Thrust

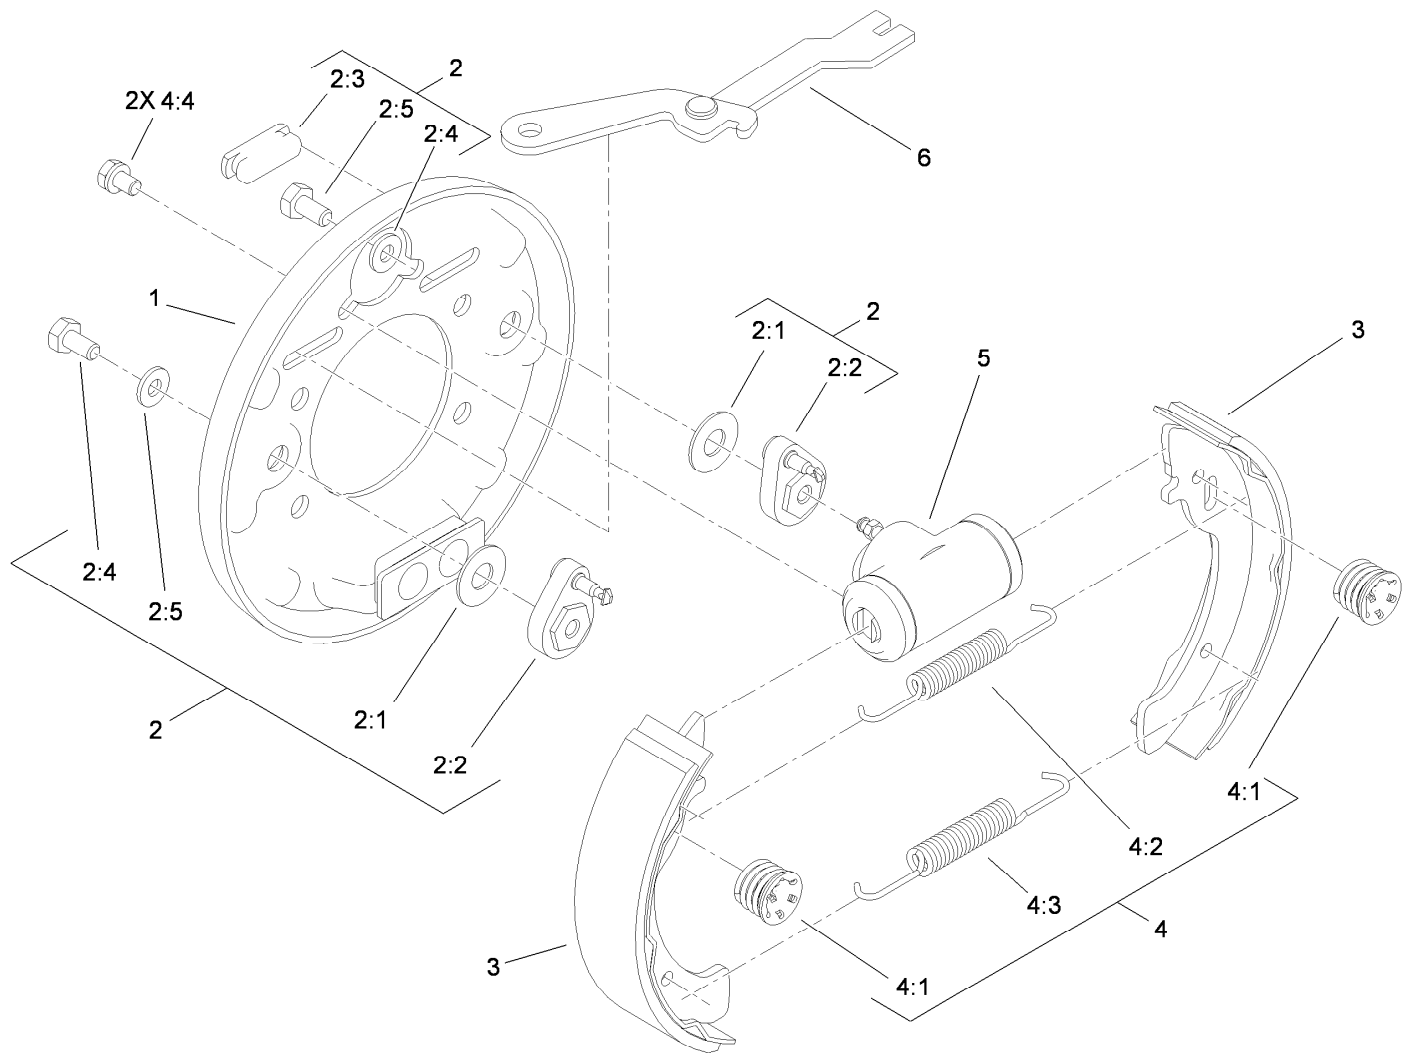 

LH Rear Brake Assembly No. 114-8332

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6825	1	LH Park Brake Lever ASM

 
● Not serviced separately

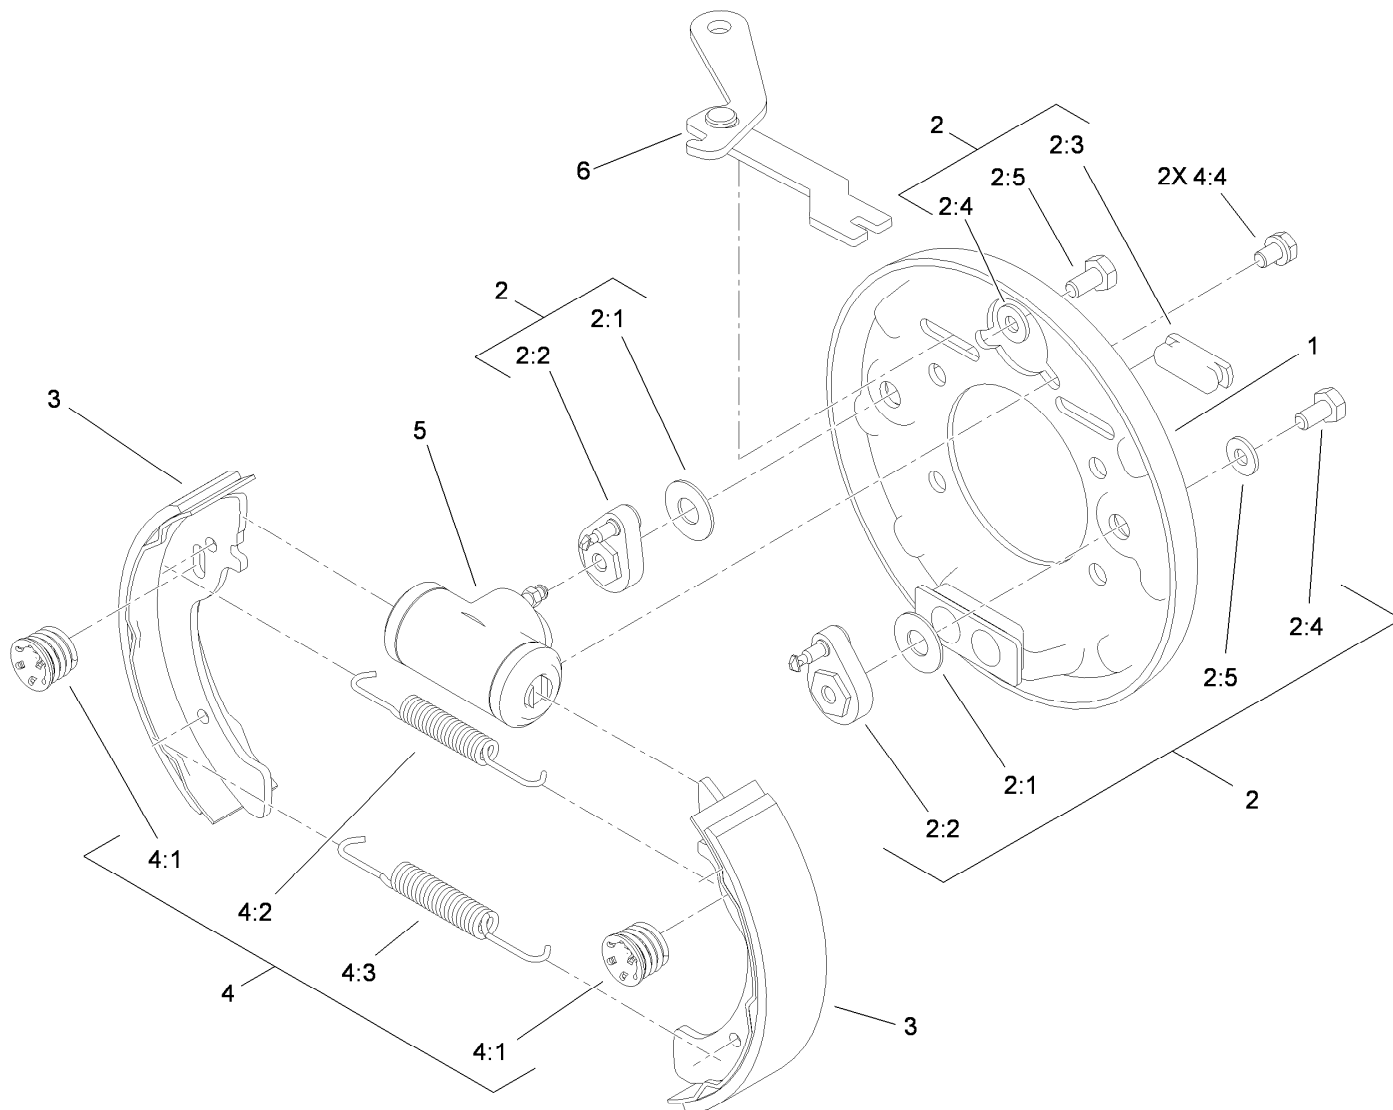

RH Rear Brake Assembly No. 114-8331

Ref.	Part Number	Qty.	Description
1	100-8586	1	Backing Plate ASM
2	104-6820	1	Adjuster Kit
2:1	100-8585	2	Washer-Bellville
2:2	100-8588	2	Adjuster Lever ASM
2:3	100-8584	2	Cover-Dust
2:4		2	Washer ●
2:5		2	Bolt ●
3	104-6818	4	Shoe And Lining Kit
4	104-6819	1	Hardware Kit
4:1	100-8583	2	Shoe Hold Down Spring ASM
4:2	100-8581	2	Spring-Upper
4:3	100-8582	2	Spring-Lower
4:4		2	Bolt And Washer ●
5	114-8333	1	Wheel Cylinder ASM
6	104-6826	1	RH Park Brake Lever ASM

 
● Not serviced separately

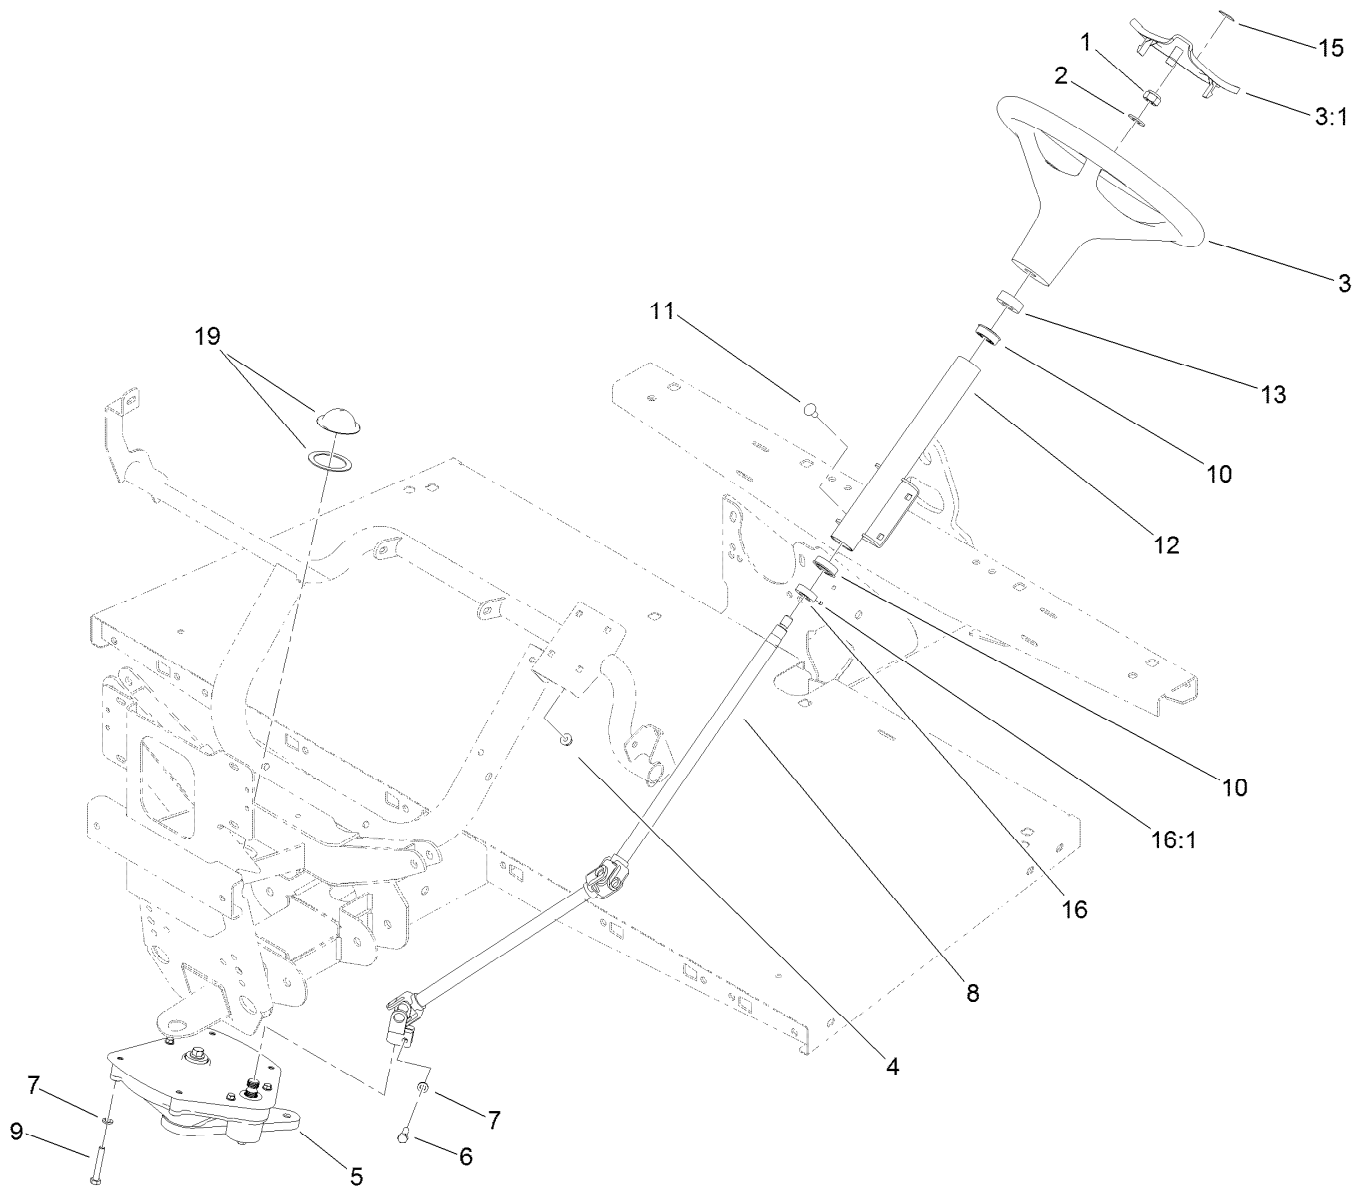

Upper Steering Assembly

Ref.	Part Number	Qty.	Description
1	119-9493	1	Nut-Lock, NI
2	3256-26	1	Washer-Flat
3	98-1471	1	Wheel-Steering
3:1	98-1468	1	Cover-Wheel, Steering
4	104-8300	4	Nut-HF, NI
5	112-3130	1	Steering Box ASM
6	48-7730	1	Screw-Cap, HH
7	3253-4	5	Washer-Lock
8	112-3355	1	Steering Shaft ASM


Ref.	Part Number	Qty.	Description
9	112-3305	4	Screw-HH
10	112-3262	2	Bearing
11	3230-1	4	Bolt-CARR
12	112-3264-03	1	Column
13	21-9260	1	Cover-Dust
15	98-1459	1	Decal
16	111383	1	Collar
16:1	3245-32	1	Screw-HSH
19	120-5049	1	Steering Box Cover Kit

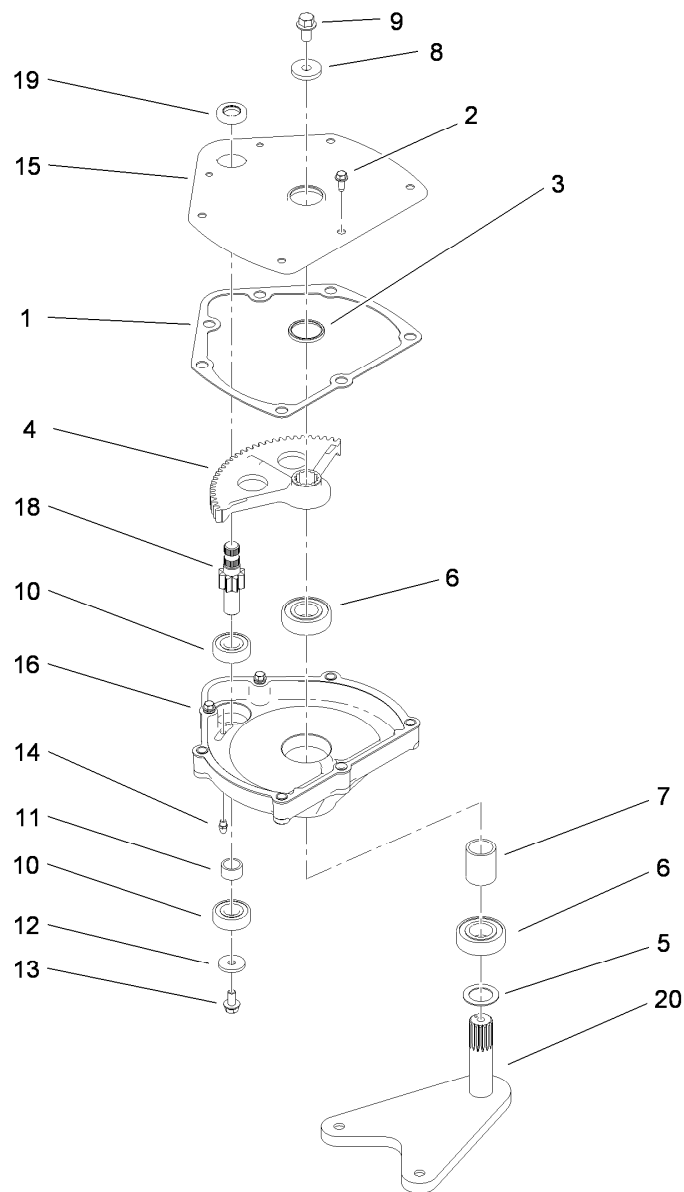 

Steering Box Assembly No. 112-3130

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	94-2135	1	Gasket
2	32144-10	3	Screw-HWH
3	103118	1	Seal
4	99-7843	1	Sector-Gear
5	3256-42	1	Washer-Flat
6	251-82	2	Bearing-Ball
7	112-2917	1	Spacer
8	104-6563	1	Washer-Stepped
9	104-7156	1	Screw-HHF
10	38-7820	2	Bearing-Ball


<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11	94-2217	1	Spacer-Shaft, Input
12	1-613235	1	Washer
13	98-3498	1	Screw-HH
14	302-5	1	Fitting-Grease
15	112-2918-03	1	Cover-Housing, Steering
16	114-8309	1	Housing-Steering
18	115-7726	1	Gear-Pinion
19	99-7657	1	Seal-Oil
20	112-3096-03	1	Arm-Pitman

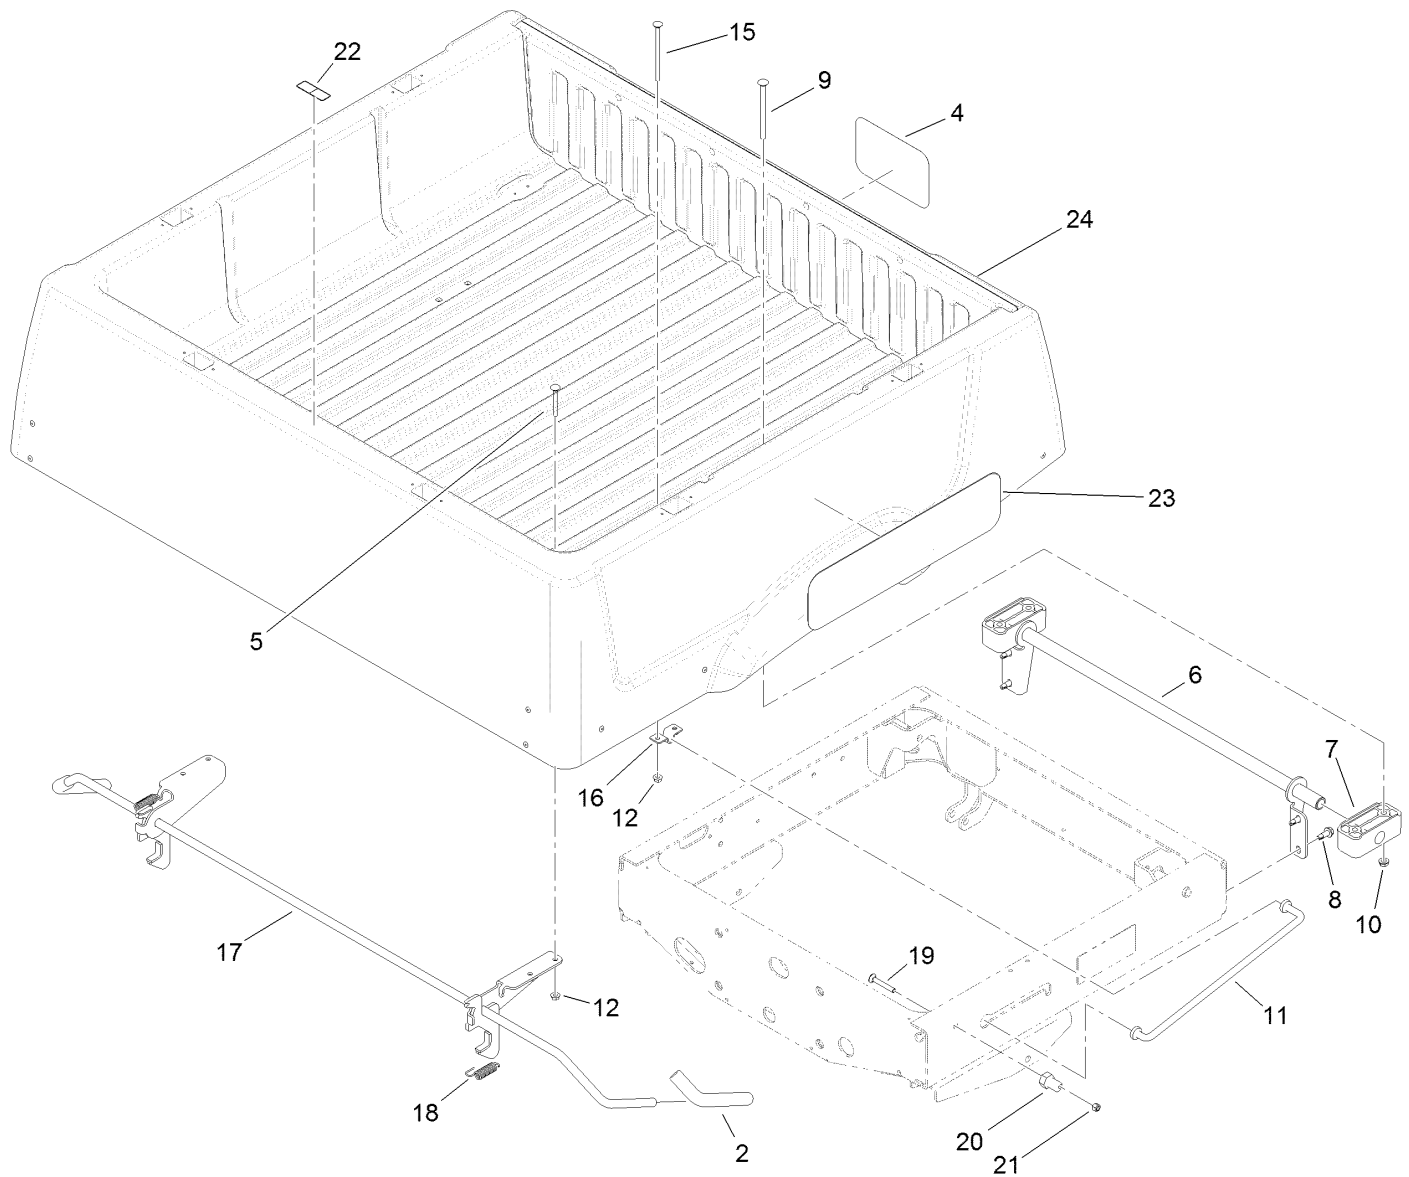 

Cargo Bed Installation Assembly

Ref.	Part Number	Qty.	Description
2	119-9627	2	Grip-Handle
4	104-7213	1	Decal
5	3230-8	4	Screw-CARR
6	119-0848-03	1	Bracket-Pivot
7	119-0835	2	Bushing-Pivot
8	105-6245	4	Screw-Tapping
9	109-6795	4	Bolt-CARR
10	3290-357	4	Nut-HHF, Whiz
11	119-0844	1	Rod-Prop
12	32128-20	6	Nut-HF


Ref.	Part Number	Qty.	Description
15	119-0914	2	Bolt-CARR
16	99-7896	1	Bracket-U, Prop Rod
17	119-0837	1	Latch ASM
18	5-7290	2	Spring-Tension
19	3230-7	2	Bolt-CARR
20	104-7248	2	Pin-Latch
21	3296-29	2	Nut-Lock, NI
22	115-7739	1	Decal-No Riders
23	119-0894	2	Decal
24	121-9810	1	Complete Cargo Bed ASM

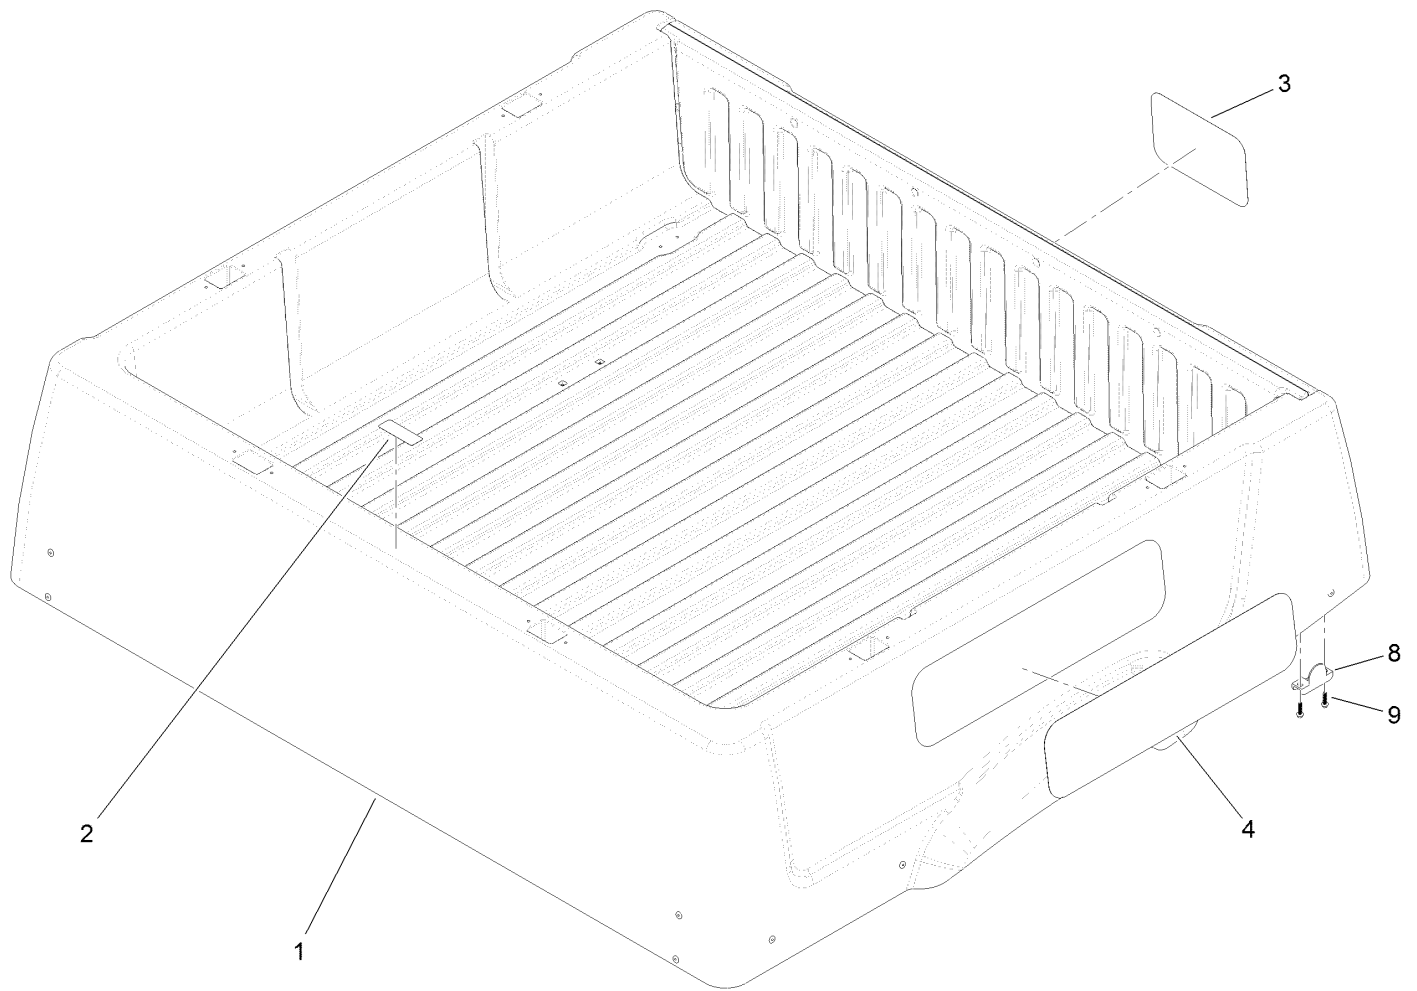 

Cargo Bed Service Assembly No. 121-9810

Ref.	Part Number	Qty.	Description
1		1	Cargo Bed And Tailgate ASM ●
2	115-7739	1	Decal-No Riders
3	104-7213	1	Decal
4	120-4825	2	Decal
8	121-9720	2	Cap-Pivot, Tailgate
9	121-9102	4	Screw-HWH

 
● Not serviced separately

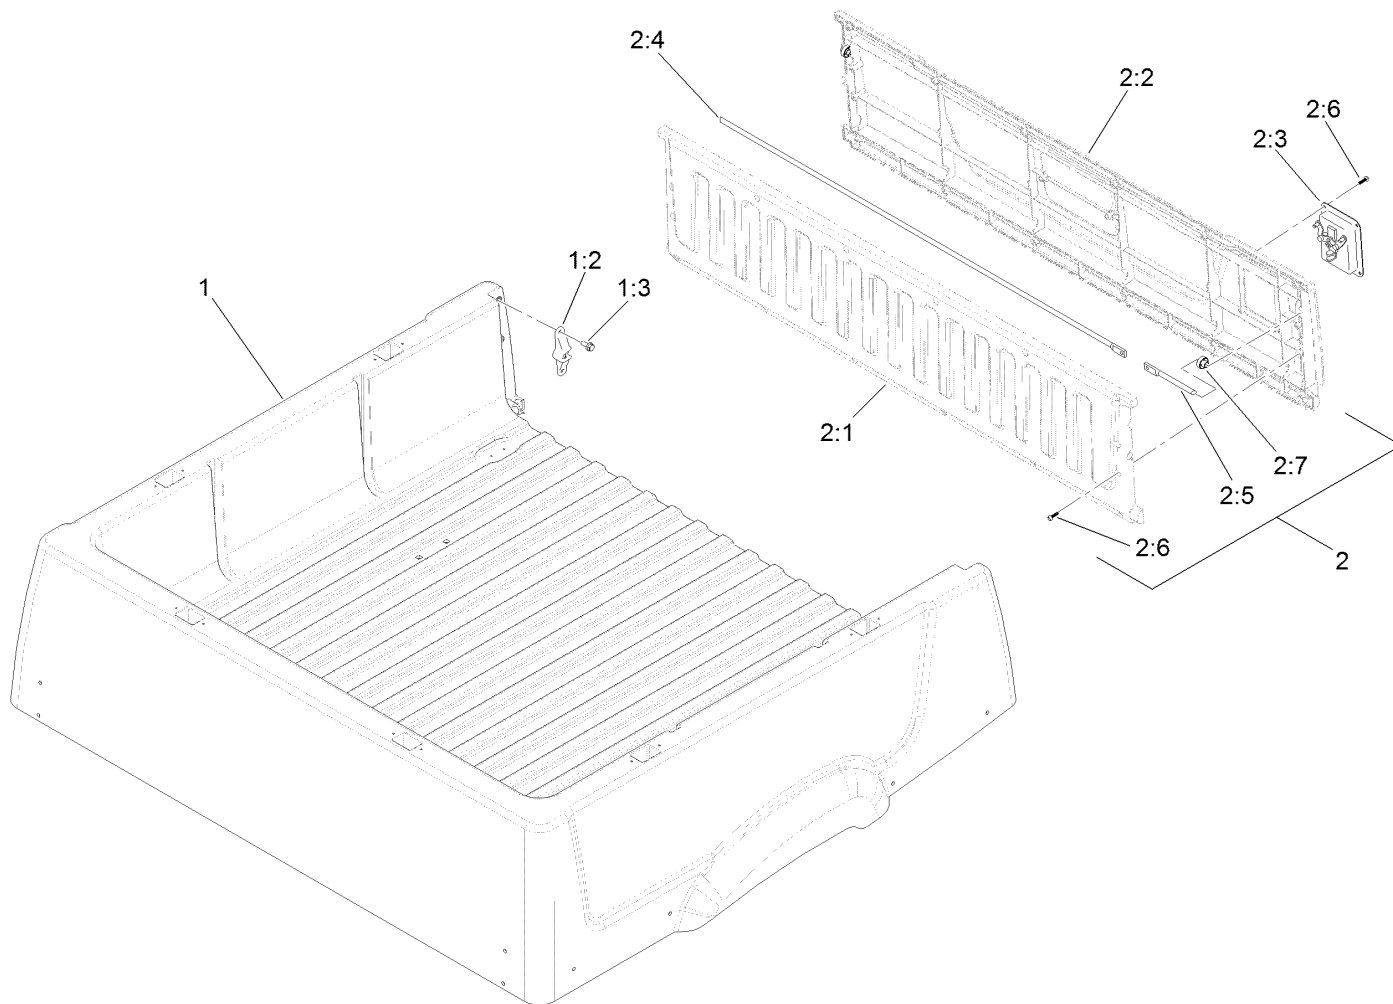

Cargo Bed and Tailgate Assembly


Ref.	Part Number	Qty.	Description
1		1	Cargo Bed W/ Strikes ●
1:2	121-9717	2	Striker-Latch
1:3	3234-47	4	Screw-HHF
2	121-9806	1	Tailgate ASM
2:1		1	Tailgate-Inner ●
2:2		1	Tailgate-Outer ●
2:3	119-0891	1	Handle-Latch
2:4	121-9741	1	Rod-Latch, RH
2:5	121-9742	1	Rod-Latch, LH
2:6	121-9102	20	Screw-HWH
2:7	121-9724	2	Bushing

 ● Not serviced separately

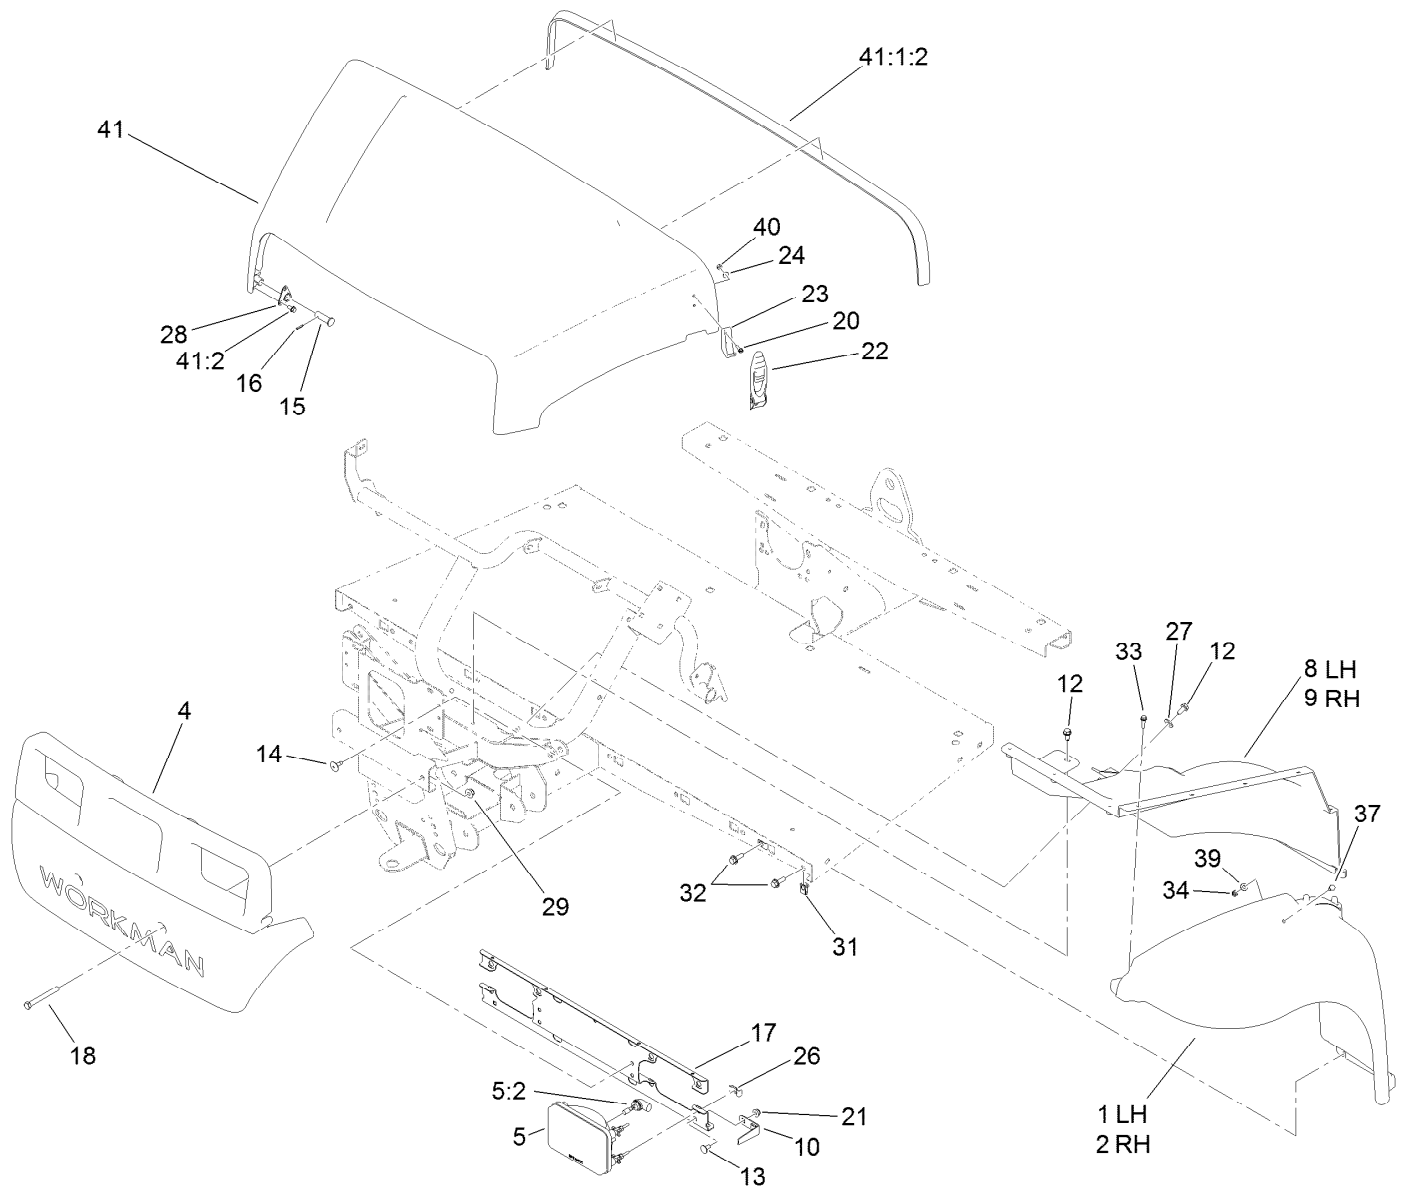

Hood and Fender Assembly


Ref.	Part Number	Qty.	Description	Ref.	Part Number	Qty.	Description
1	112-3371	1	Fender-LH	22	115-2416	2	Latch-Rubber
2	112-3370	1	Fender-RH	23	103-2897	2	Latch-Catch
4	112-3365	1	Bumper	24	3256-14	4	Washer-Flat
5	114-8322	2	Headlight ASM	26	115-2408	6	Clip-Speed
5:2	115-2395	1	Bulb-Light	27	3256-71	2	Washer-Flat
8	112-3369	1	Well-Fender, LH	28	112-3308	2	Retainer-Pin
9	112-3368	1	Well-Fender, RH	29	104-8301	2	Nut-HF, NI
10	112-3373	2	Keeper-Pivot, Hood	31	112-3306	10	Nut
12	32104-32	4	Screw-HWH	32	3234-29	10	Screw-HHF
13	3230-18	2	Screw-CARR	33	46-8091	20	Screw-HWH
14	146489	4	Rivet	34	3296-42	2	Nut-Lock, NI
15	117-5094	2	Pin-Clevis	37	321-39	2	Screw-HH
16	32121-50	2	Pin-Spring	39	3256-22	2	Washer-Flat
17	119-0841-03	1	Bracket-Headlight	40	3296-2	4	Nut-Lock, NI
18	115-7660	2	Screw-HHF	41	121-9606	1	Hood ASM
20	32105-13	4	Screw-HWH	41:1:2	115-7635	1	Seal-Foam
21	32128-20	2	Nut-HF	41:2	121-9605	6	Screw-HWH

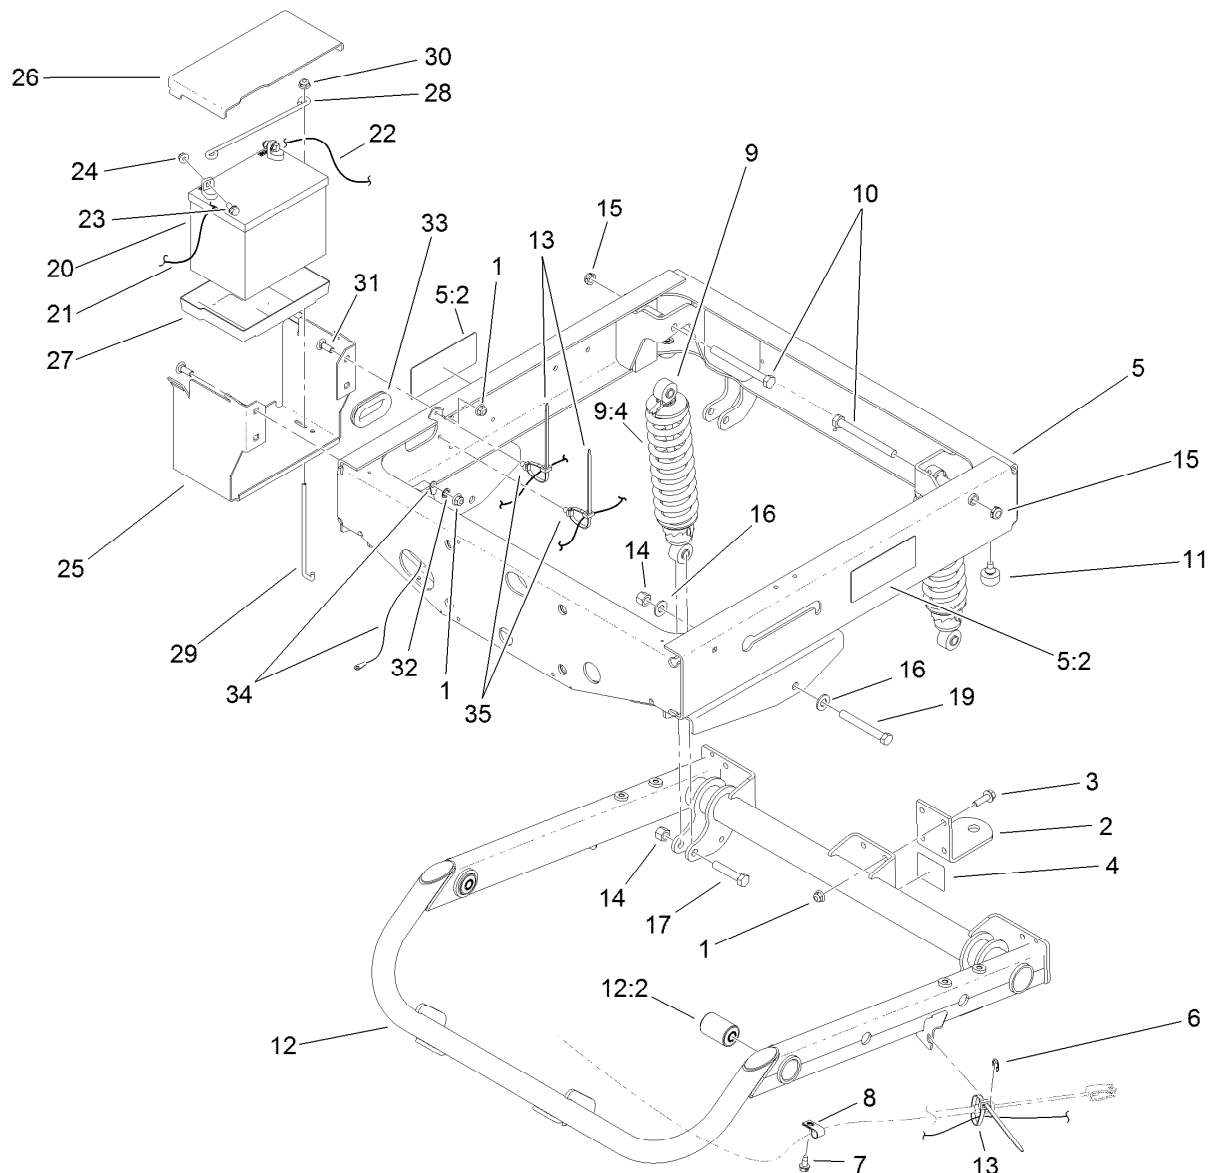 

Frame Assembly

Ref.	Part Number	Qty.	Description
1	104-8301	8	Nut-HF, NI
2	99-7654-03	1	Hitch-Duty, Light
3	3234-24	4	Screw-HHF
4	99-7350	1	Decal-Rating, Hitch (Light Duty)
5	119-9628	1	Rear Frame ASM
5:2	99-7345	2	Decal-Warning
6	32120-47	2	Ring-Retaining, External
7	32104-17	2	Screw-HWH
8	2412-89	2	Clamp-R
9	112-3168	2	Rear Shock/Spring ASM
9:4	112-3386	1	Spring
10	325-19	2	Screw-HH
11	87-2440	2	Bumper-Rubber
12	115-7614	1	Swing Arm ASM
12:2	112-3377	2	Bushing-Arm, Control
13	3290-378	4	Tie-Cable
14	3296-23	4	Nut-Lock, NI
15	3296-45	2	Nut-Hex
16	87-7270	4	Washer-Thrust


Ref.	Part Number	Qty.	Description
17	325-10	2	Screw-HH
19	325-17	2	Screw-HH
20	104-8162	1	Battery
20	99-7421	1	Battery
21	115-8107	1	Cable-Battery, Negative
22	114-9404	1	Cable-Battery, Positive
23	3234-5	2	Screw-HHF
24	104-8300	2	Nut-HF, NI
25	115-2302-03	1	Base-Battery
26	115-2394	1	Cover-Battery
27	106948	1	Tray-Battery
28	100-6434	1	Rod-Hold Down, Battery
29	100-6435	2	Post-Battery
30	119-6897	2	Nut-Flange, Hex
31	3231-22	4	Screw-CARR
32	3254-6	1	Washer-Lock, Internal
33	240-12	1	Grommet-Rubber
34	115-8108	1	Cable-Battery, Negative
35	32180-030	2	Clip-Tie

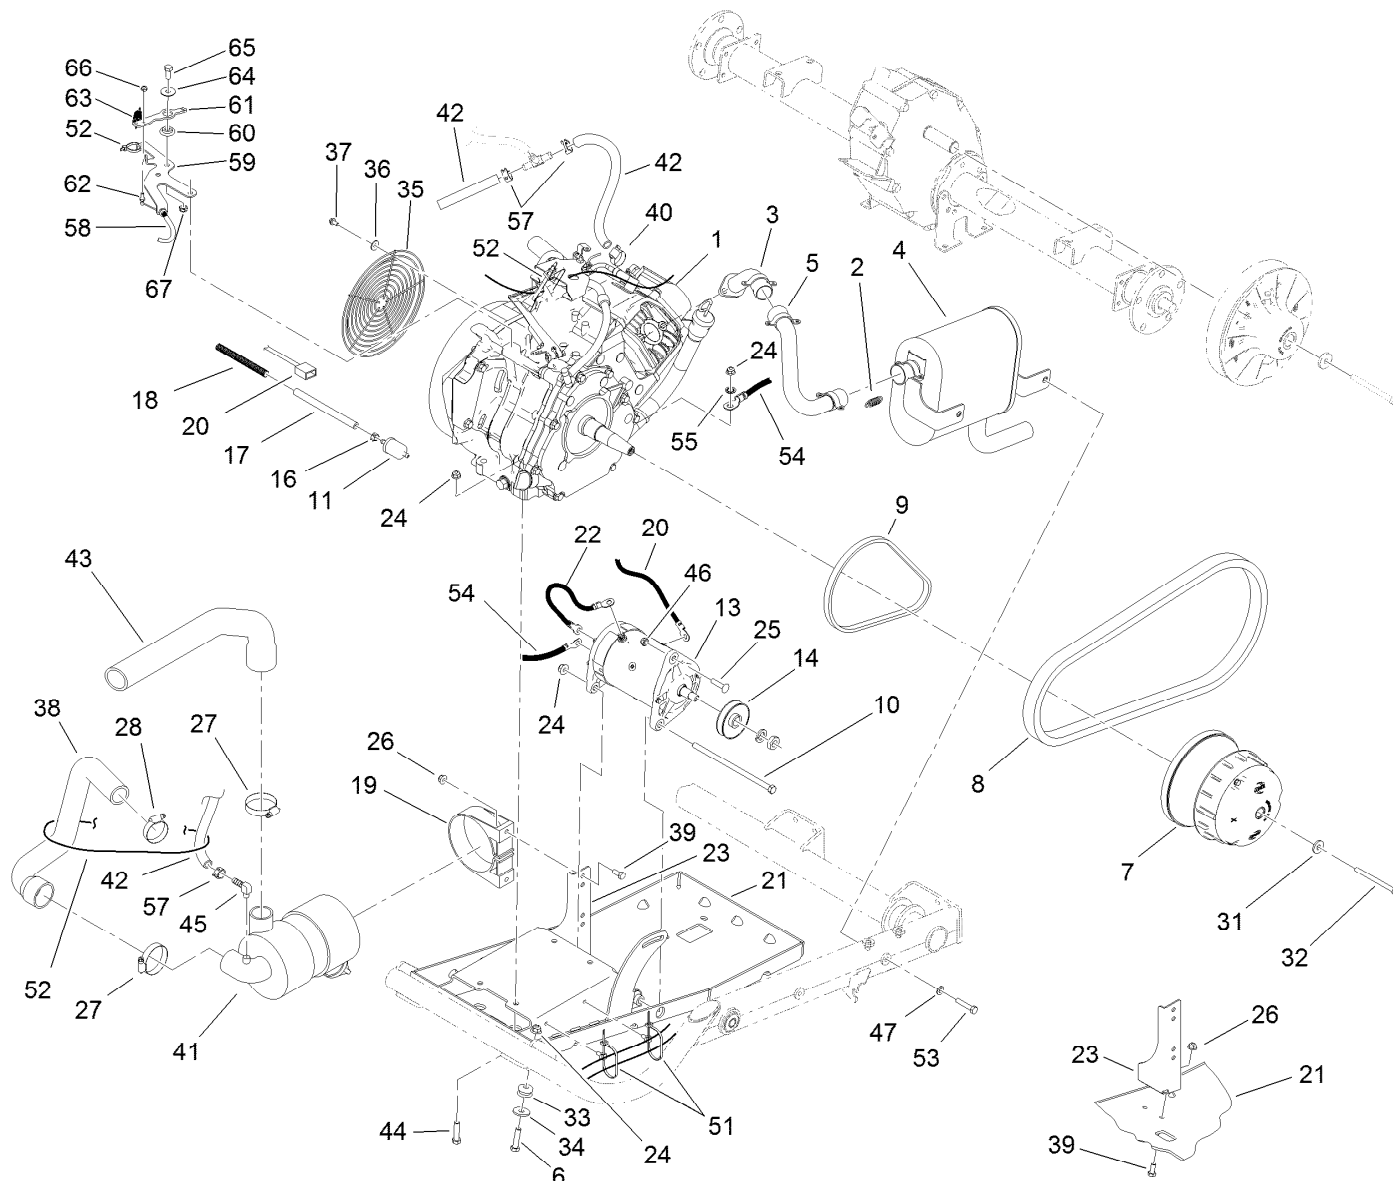 

Engine and Clutch Assembly

Ref.	Part Number	Qty.	Description
1	121-6276	1	Engine ASM (Yamaha Mx360)
2	104-6478	4	Spring-Extension
3	104-6511	1	Manifold
4	119-0746	1	Muffler
5	119-0716	1	Pipe-Exhaust, Kohler
6	323-8	2	Screw-HH
7	120-4823	1	Primary Clutch ASM
8	119-0710	1	Belt-Variable
9	112-3131	1	Belt-Starter
10	323-30	1	Screw-HH
11	94-2690	1	Filter-Fuel
13	119-9545	1	Starter Generator ASM
14	121-6277	1	Pulley-Drive
16	2412-98	3	Clamp-Hose
17	107-0588	1	Hose-Fuel
18	99-7377	1	Conduit-Line, Fuel
19	95-5806	1	Bracket-Mounting, Air Cleaner
20	115-8125	1	Harness-Wire, Engine
21	119-0707-03	1	Tray-Engine


Ref.	Part Number	Qty.	Description
22	99-7403	1	Cable-Negative
23	119-0863-03	1	Bracket-Cleaner, Air
24	104-8301	7	Nut-HF, NI
25	112-6950	1	Screw-CARR
26	104-8300	4	Nut-HF, NI
27	2412-130	2	Clamp-Hose
28	2412-111	1	Clamp
31	119-0724	1	Washer-Flange
32	119-0721	1	Screw-HH
33	63-9750	2	Mount
34	2844	2	Washer
35	119-9502	1	Grill-Engine
36	3256-78	4	Washer-Flat
37	33103-012	4	Screw-HHF
38	112-3247	1	Hose-Intake
39	3234-36	4	Screw-HHF
40	2412-36	1	Clamp-Hose
41	99-7120	1	Air Cleaner ASM
42	74-9120	2	Hose-Overflow, Radiator
43	115-7625	1	Hose-Intake
44	323-9	4	Screw-HH

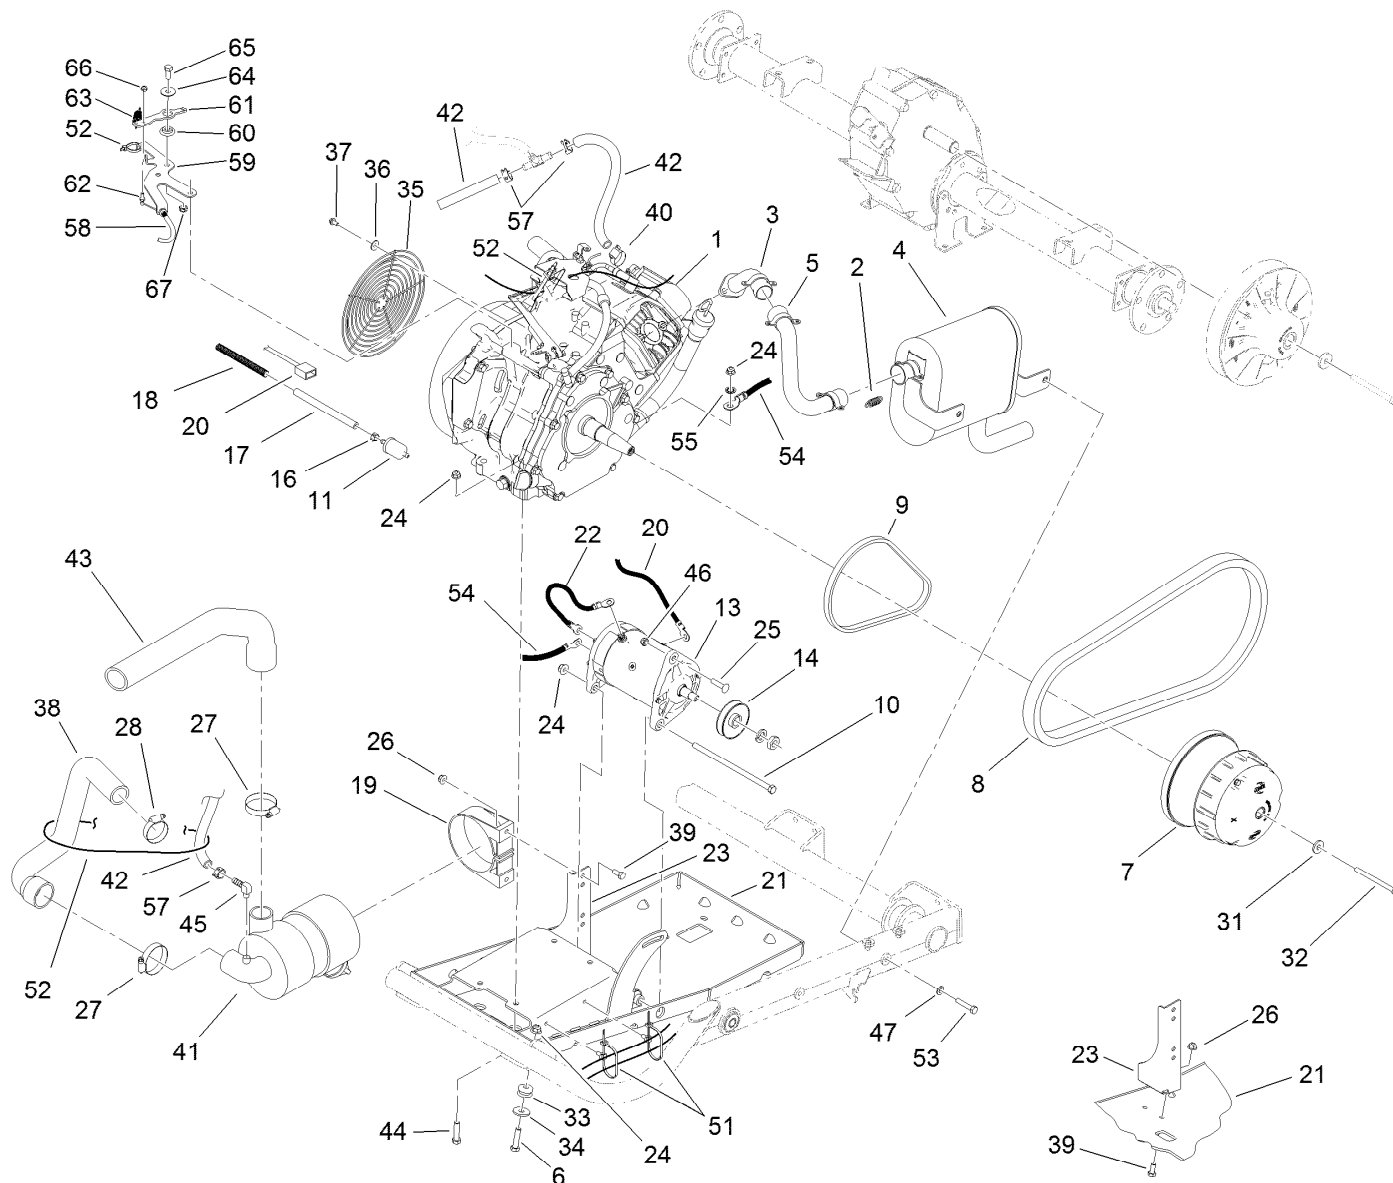 

Engine and Clutch Assembly (continued)


Ref.	Part Number	Qty.	Description
45	99-7230	1	Fitting-90 DEG
46	3296-69	1	Nut-Lock, NI
47	3253-4	2	Washer-Lock
51	32180-030	2	Clip-Tie
52	3290-378	3	Tie-Cable
53	322-11	2	Screw-HH
54	100335	1	Wire-Ground
55	3254-6	1	Washer-Lock, Internal
57	103-1988	3	Clamp-Hose
58	115-7612	1	Cable-Accelerator

Ref.	Part Number	Qty.	Description
59	121-9715	1	Bracket-Cable, Throttle
60	75-8700	1	Bushing-Idler
61	121-9716	1	Lever-Throttle
62	99-7847	1	Ball-Stud
63	71-5470	1	Spring-Brake
64	4-2390	1	Washer-Flat
65	322-4	1	Screw-HH
66	3296-27	1	Nut-Lock, NI
67	3296-47	1	Nut-Lock, NI

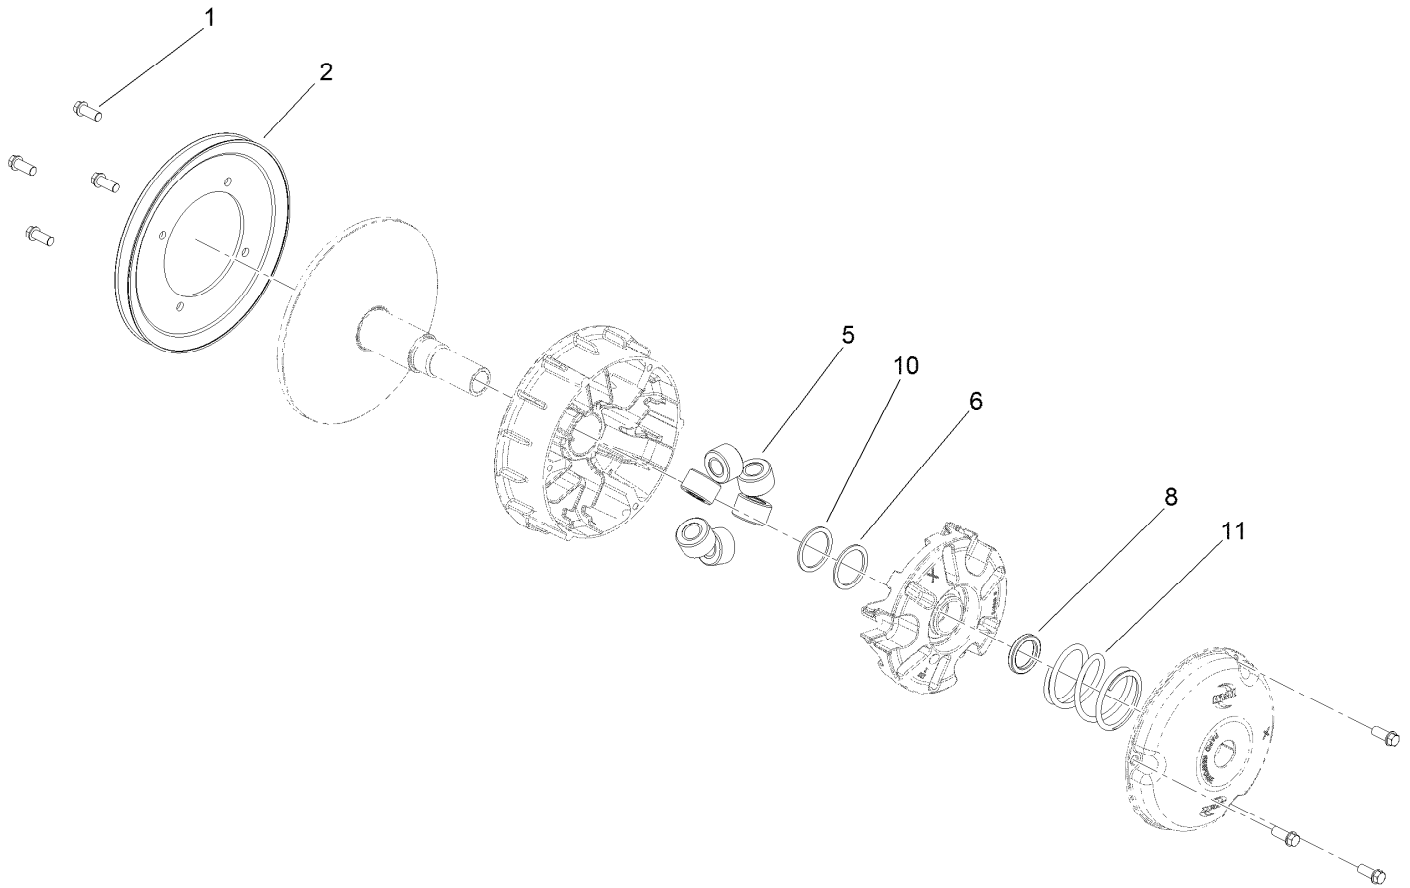 

Primary Clutch Assembly No. 120-4823

Ref.	Part Number	Qty.	Description
1	49-2040	7	Screw-HWHTF
2	119-0813	1	Pulley-Primary
5	119-0804	6	Weight-Roller
6	119-0812	1	Shim-Spider
8	119-0807	1	Shim-Limiter
10	119-0815	1	Shim-Spider
11	119-9532	1	Spring-Red/White

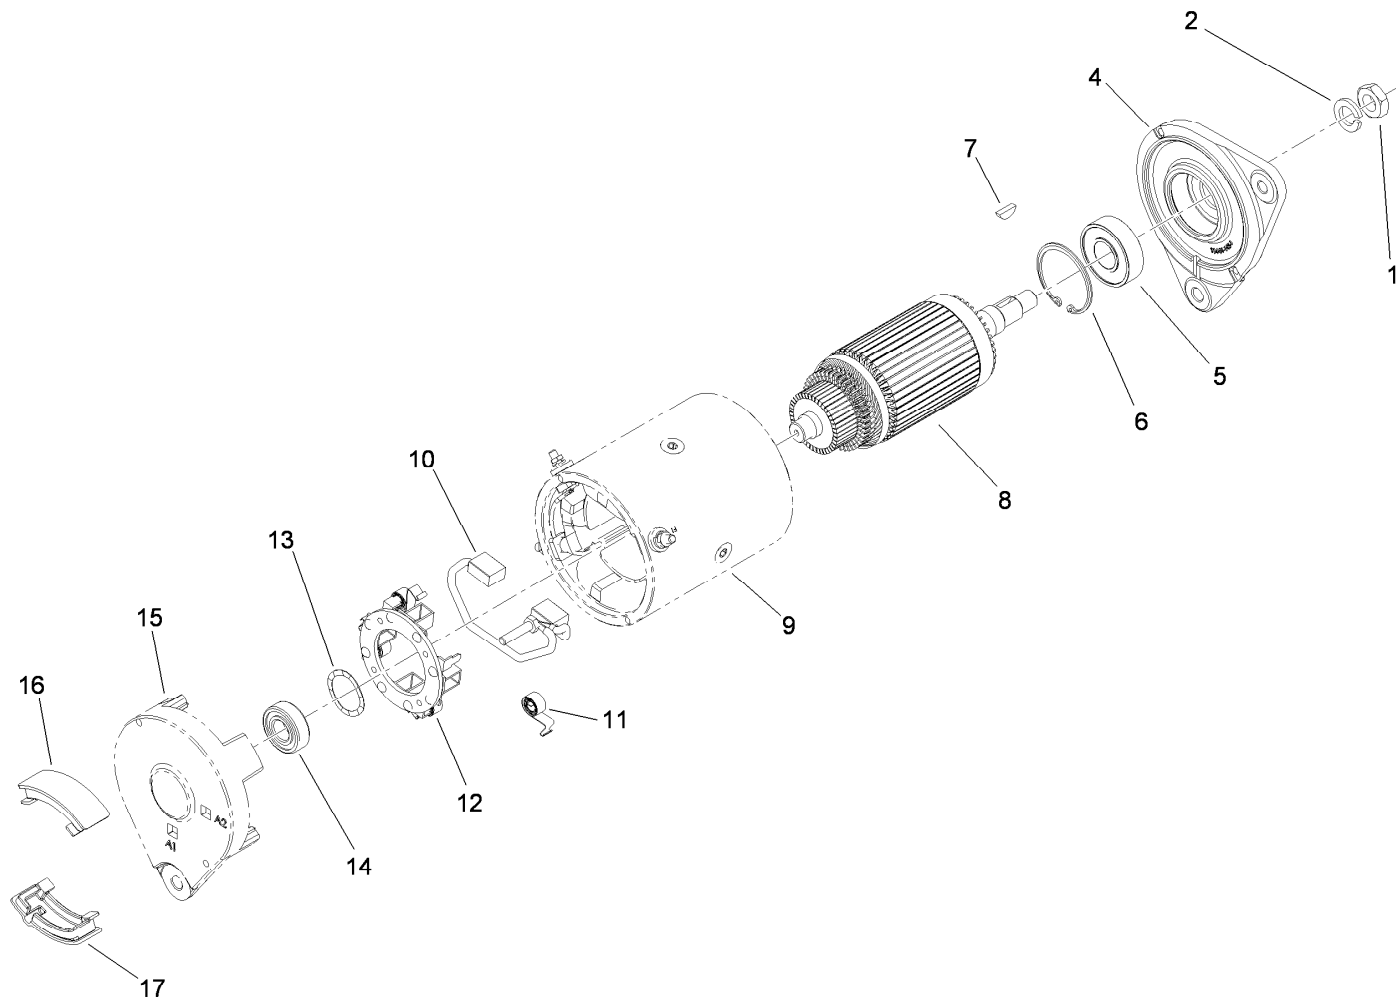 


Starter Generator Assembly No. 119-9545

Ref.	Part Number	Qty.	Description
1	119-9651	1	Nut
2	119-9652	1	Washer-Lock
4	119-9654	1	Head-End, Drive
5	119-9655	1	Bearing
6	119-9656	1	Ring-Retaining
7	119-9657	1	Key-Woodruff
8	119-9658	1	Armature ASM
9		1	Frame And Field Assembly

Ref.	Part Number	Qty.	Description
10	119-9659	1	Brush Lead And Terminal Service Kit
11	119-9660	4	Spring-Brush
12	119-9661	1	Brush Box ASM
13	119-9662	1	Washer-Wave
14	119-9663	1	Bearing
15		1	Head-End, Cummutator ●
16	119-9664	3	Plug-Rubber
17	119-9665	1	Plug-Rubber

 
● Not serviced separately

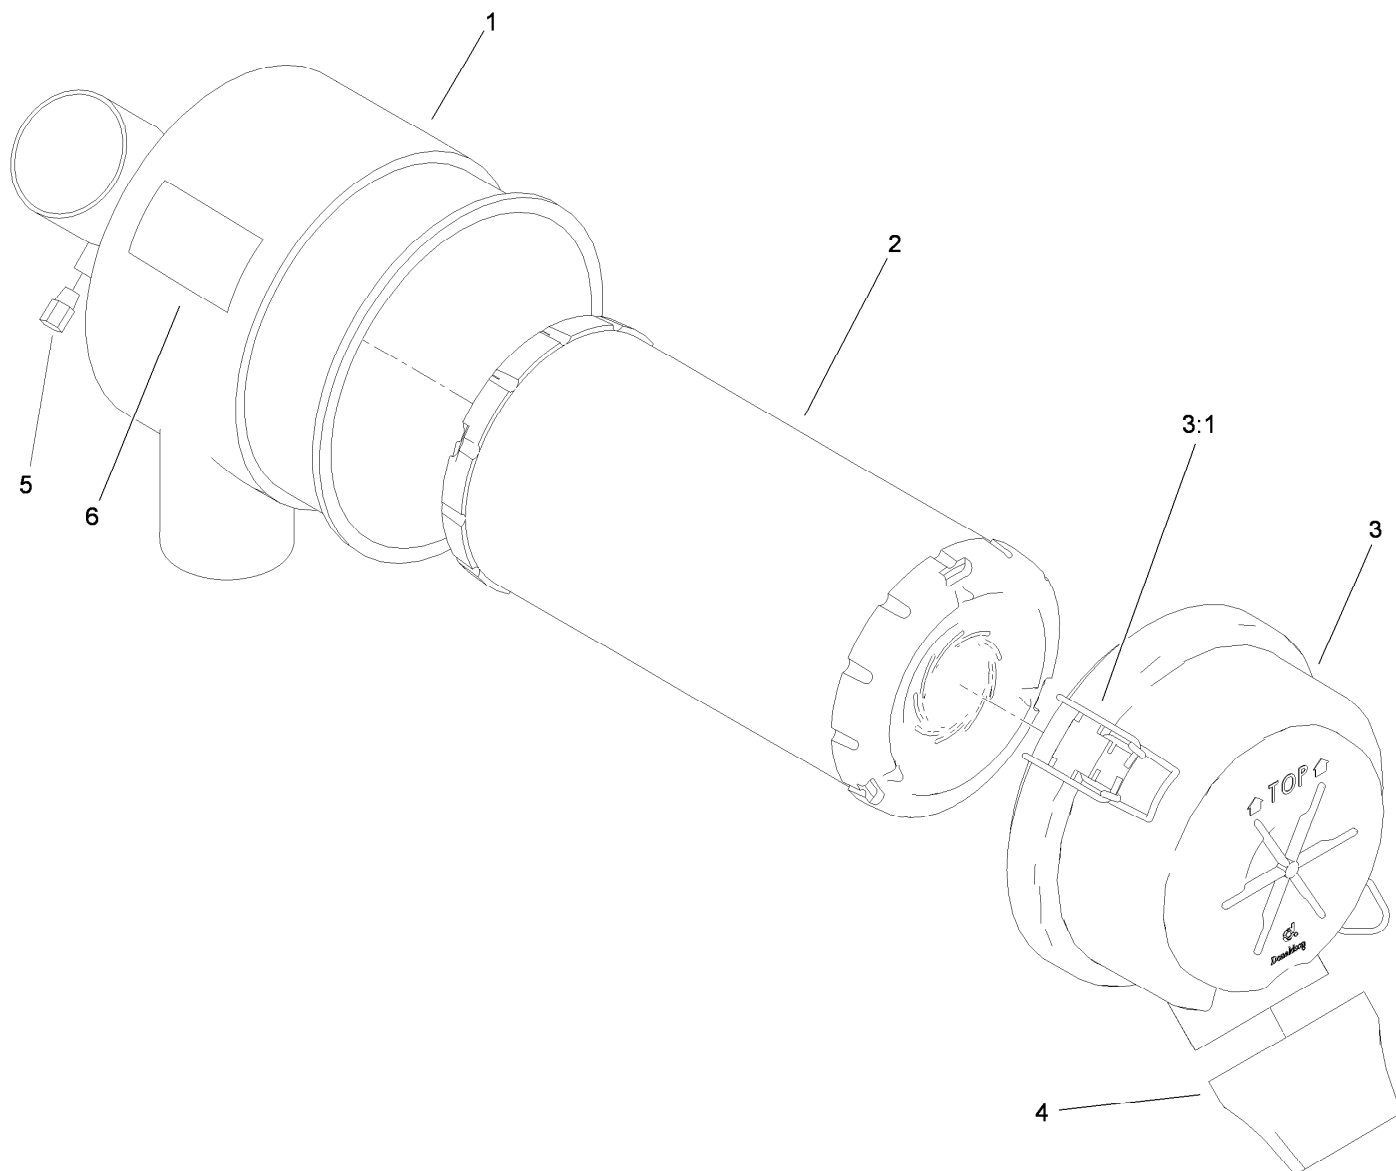

Air Cleaner Assembly No. 99-7120


Ref.	Part Number	Qty.	Description
1		1	Body ●
2	108-3811	1	Filter-Air
3	94-3652	1	Cover ASM
3:1	1-643283	2	Latch-Cleaner, Air
4	87-9400	1	Valve-Vacuator
5		1	Plug ●
6		1	Marking ●

 ● Not serviced separately

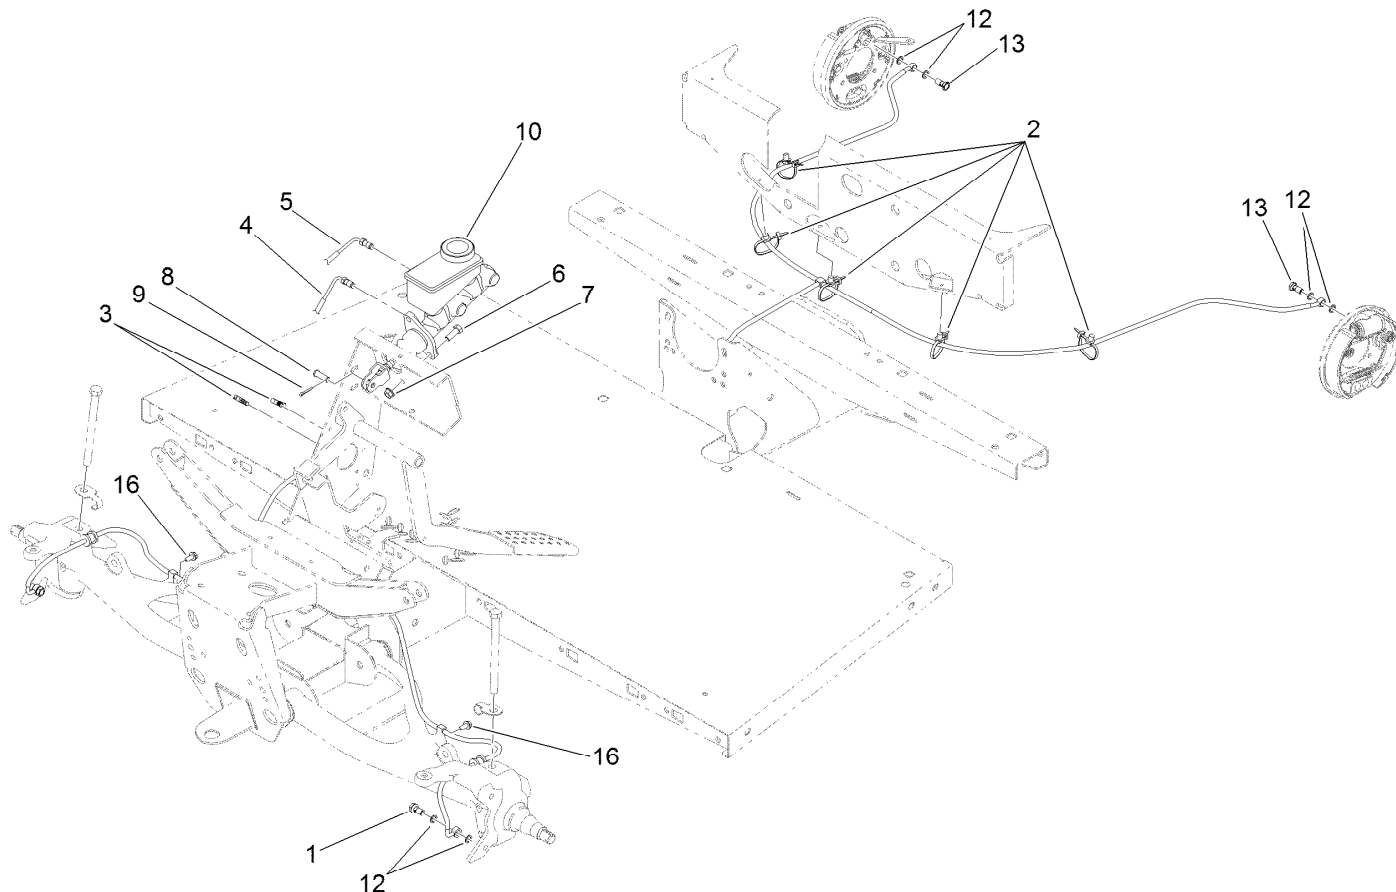


Master Cylinder and Brake Line Assembly

Ref.	Part Number	Qty.	Description
1	120-4875	2	Bolt-Flange, Banjo
2	32180-030	5	Clip-Tie
3	114-8324	4	Clip-Line, Brake
4	119-9683	1	Front Brake Line ASM
5	112-2926	1	Rear Brake Line ASM
6	323-6	2	Screw-HH
7	3290-357	2	Nut-HHF, Whiz
8	283-2	1	Pin-Clevis
9	3272-10	1	Pin-Cotter
10	104-6782	1	Master Cylinder ASM
12	115-2341	8	Washer-Banjo
13	115-2340	2	Bolt-Banjo
16	32104-32	2	Screw-HWH

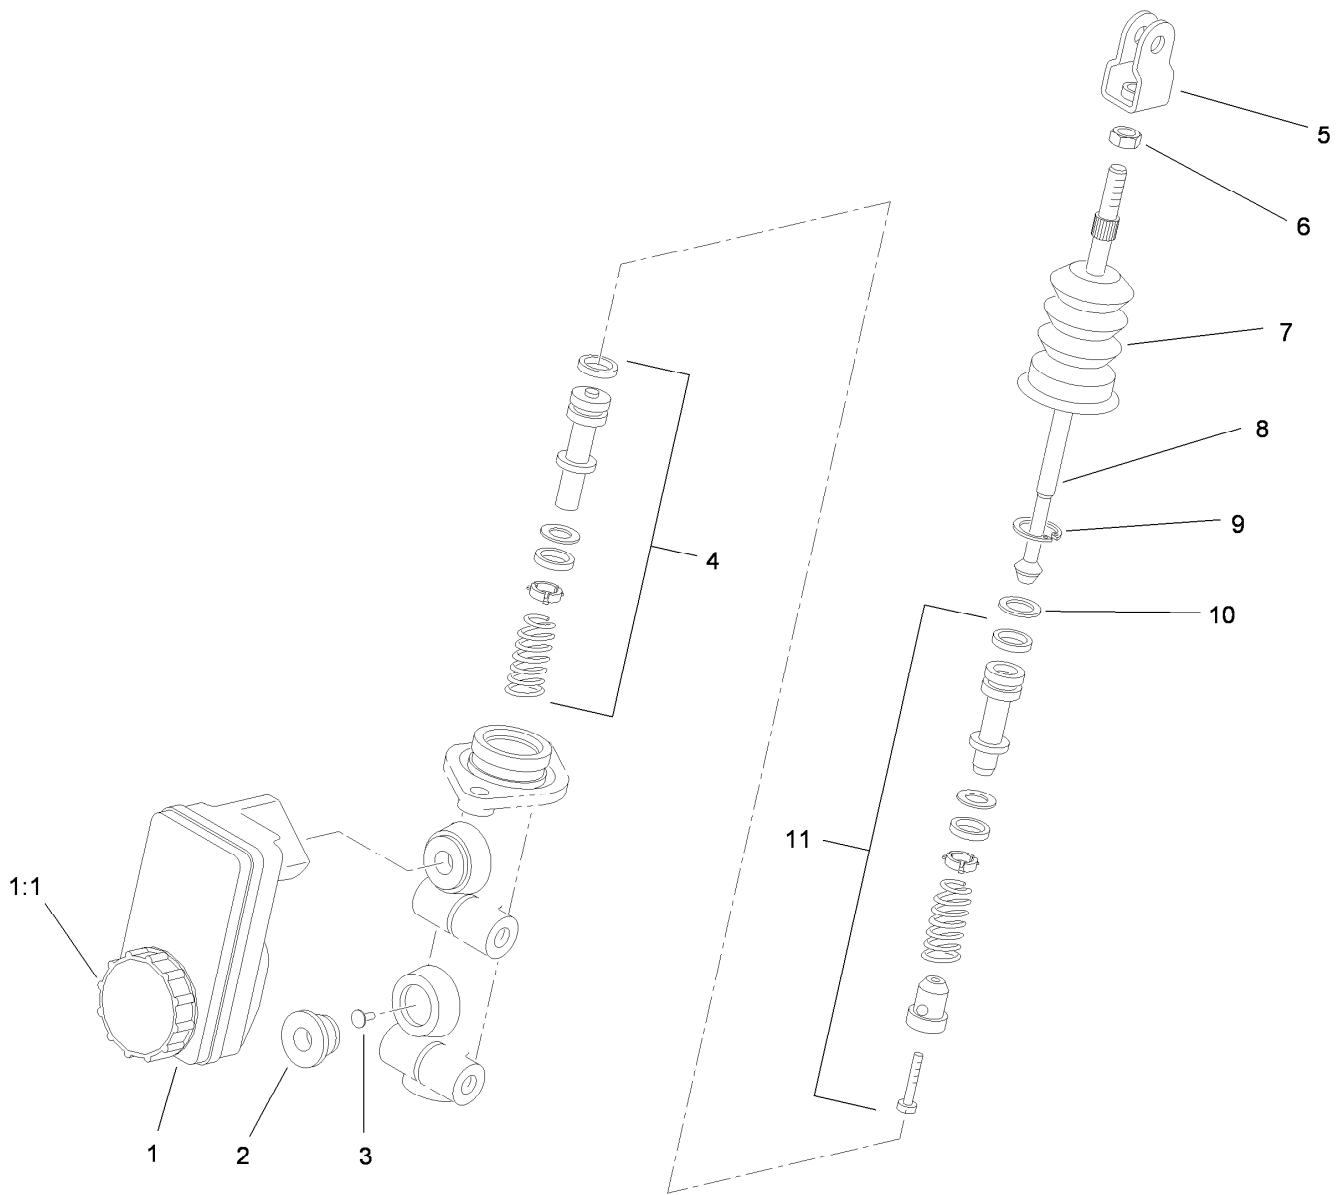 


Master Cylinder Assembly No. 104-6782

Ref.	Part Number	Qty.	Description
1	104-6845	1	Reservoir ASM
1:1	92-4112	1	Cap ASM
2	93-8971	2	Seal-Port, Flange
3	92-4103	1	Pin-Stop
4	92-4102	1	Secondary Piston ASM
5	92-4110	1	Clevis
6	21-0360	1	Nut-Hex
7	94-5209	1	Cover-Dust
8	94-5210	1	Rod-Push
9	92-4109	1	Ring-Snap
10	92-4108	1	Retainer-Washer
11	92-4101	1	Primary Piston ASM

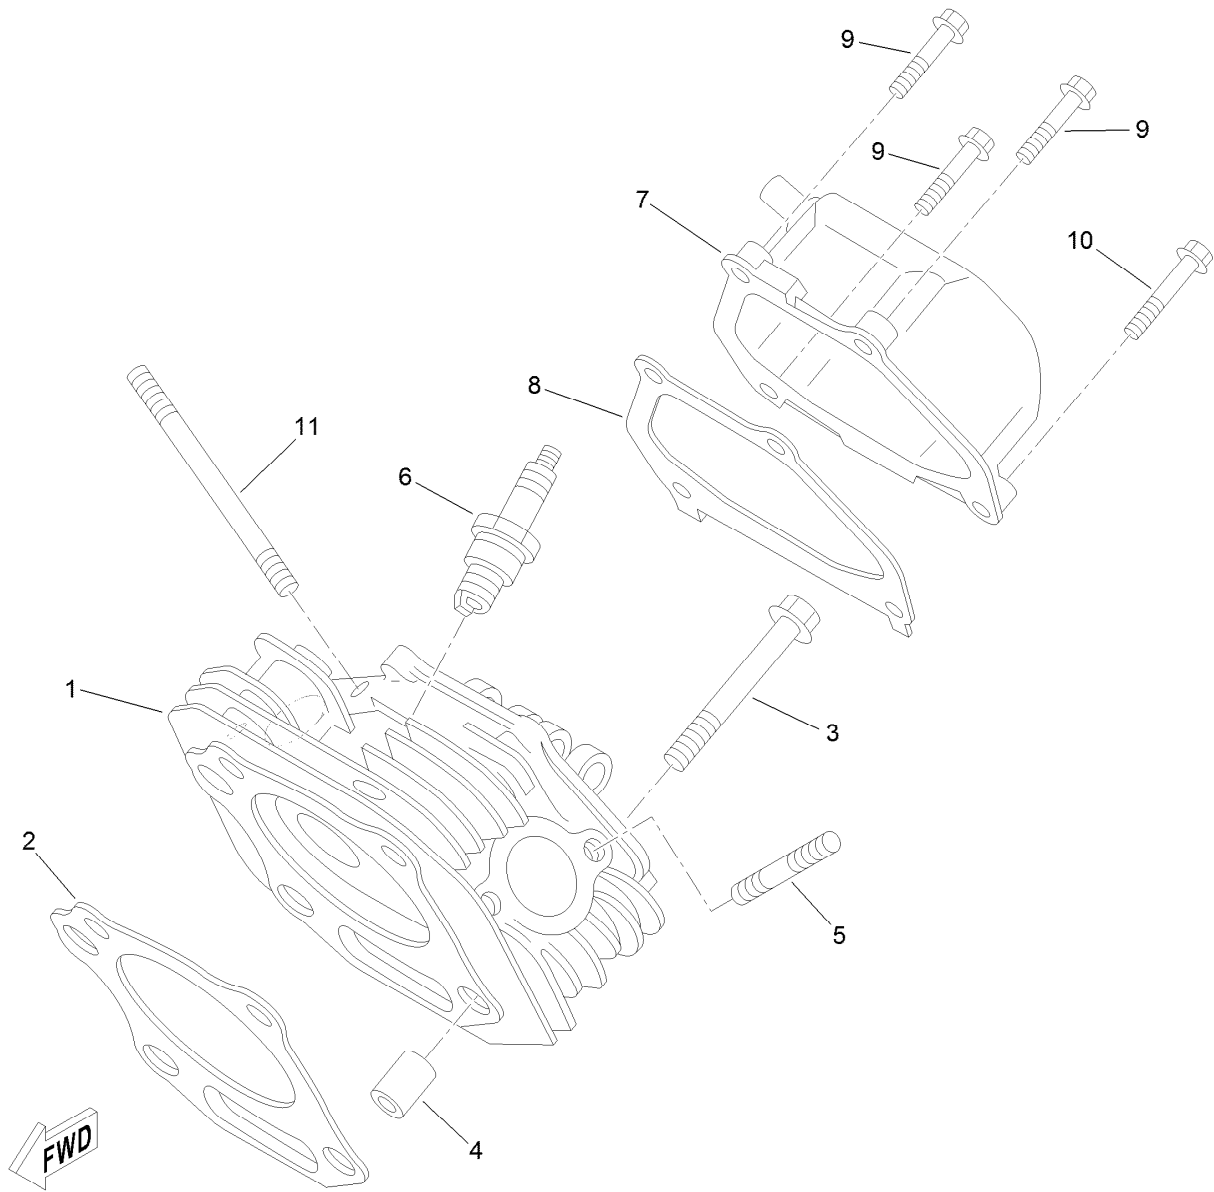 


Cylinder Head Assembly

Ref.	Part Number	Qty.	Description
1	120-5600	1	Head-Cylinder
2	120-5601	1	Gasket-Head, Cylinder
3	120-5602	4	Bolt-Flange
4	120-5603	2	Pin-Dowel
5	120-5604	2	Bolt-Stud
6	92-2153	1	Plug-Spark
7	120-5606	1	Cover-Head, Cylinder
8	120-5607	1	Gasket-Cover, Head
9	120-5608	3	Bolt-Flange
10	120-5609	1	Bolt-Flange
11	120-5610	2	Bolt-Stud

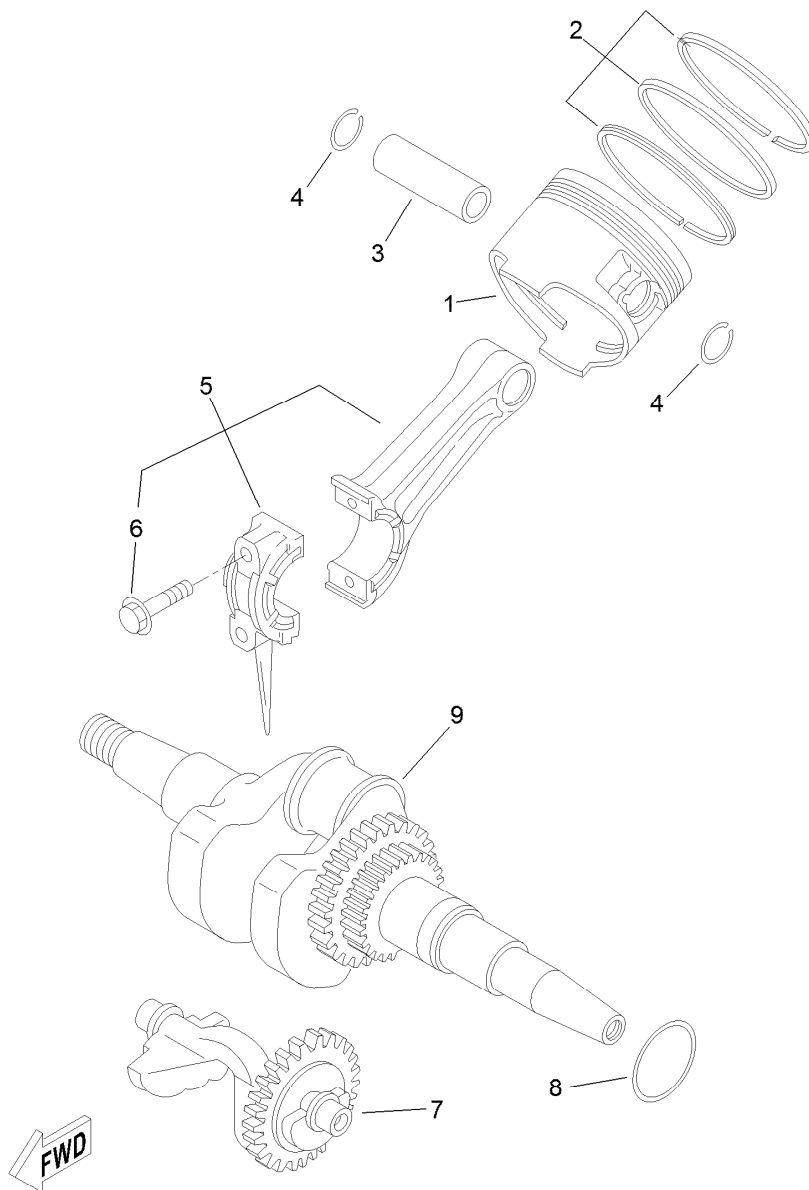 


Crankshaft and Piston Assembly

Ref.	Part Number	Qty.	Description
1	120-5612	1	Piston (STD)
1	120-5613	1	Piston (0.25Mm O/S)
1	120-5614	1	Piston (0.50Mm O/S)
2	120-5615	1	Piston Ring Set (STD)
2	120-5616	1	Piston Ring Set (0.25Mm O/S)
2	120-5617	1	Piston Ring Set (0.50Mm O/S)
3	120-5618	1	Pin-Piston
4	127-6151	2	Circlip
5	120-5620	1	Connecting Rod ASM
6	120-5621	2	Bolt- Rod, Connecting
7	120-5622	1	Weight
8	120-5623	1	Shim-Crank
9	120-5611	1	Crankshaft ASM

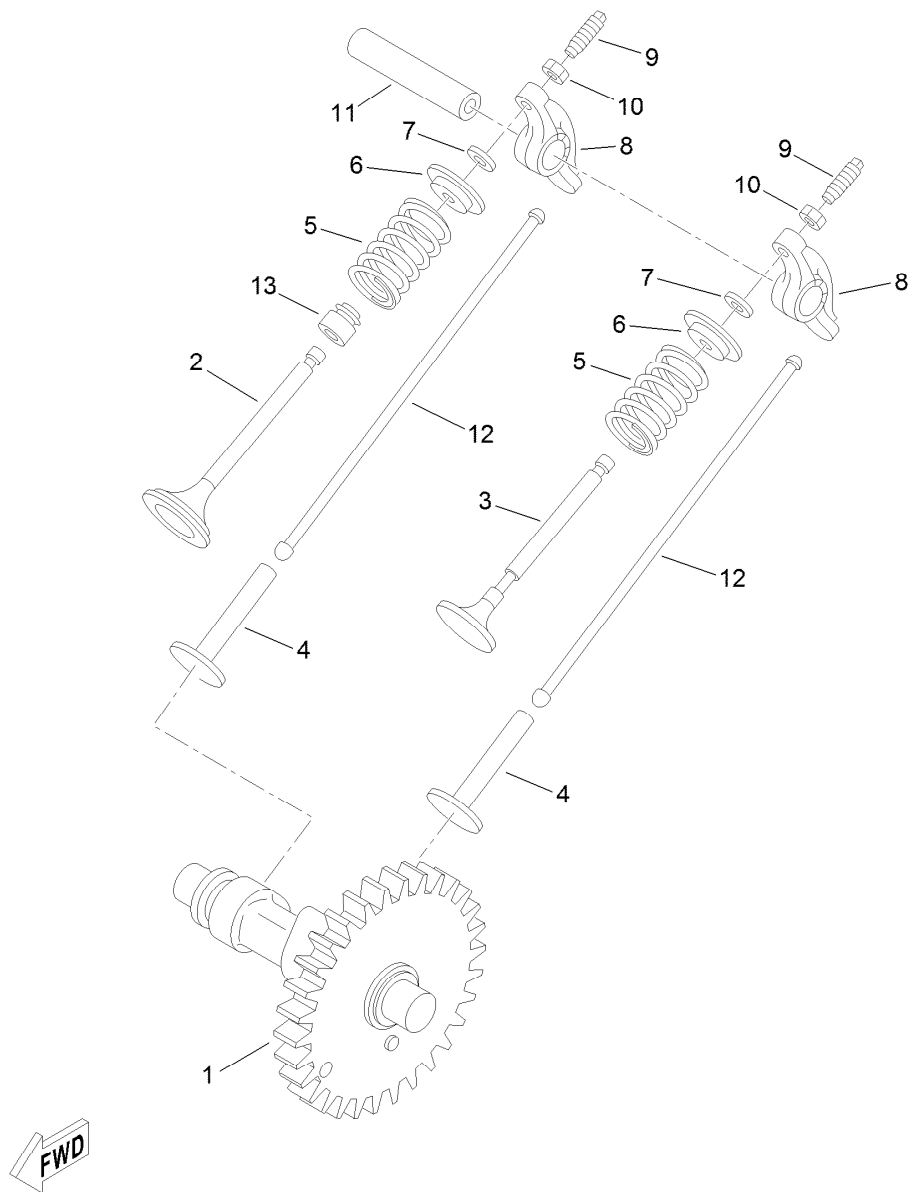 


Camshaft and Valve Assembly

Ref.	Part Number	Qty.	Description
1	120-5624	1	Camshaft ASM
2	120-5626	1	Valve-Intake
3	120-5627	1	Valve-Exhaust
4	120-5628	2	Lifter-Valve
5	120-5629	2	Spring-Compression
6	120-5630	2	Retainer-Spring, Valve
7	120-5631	2	Cotter-Valve
8	120-5632	2	Arm-Rocker, Valve
9	120-5633	2	Screw-Adjusting, Valve
10	120-5634	2	Nut
11	120-5635	1	Shaft-Rocker
12	120-5636	2	Rod-Push, Valve
13	120-5637	1	Seal-Stem, Valve

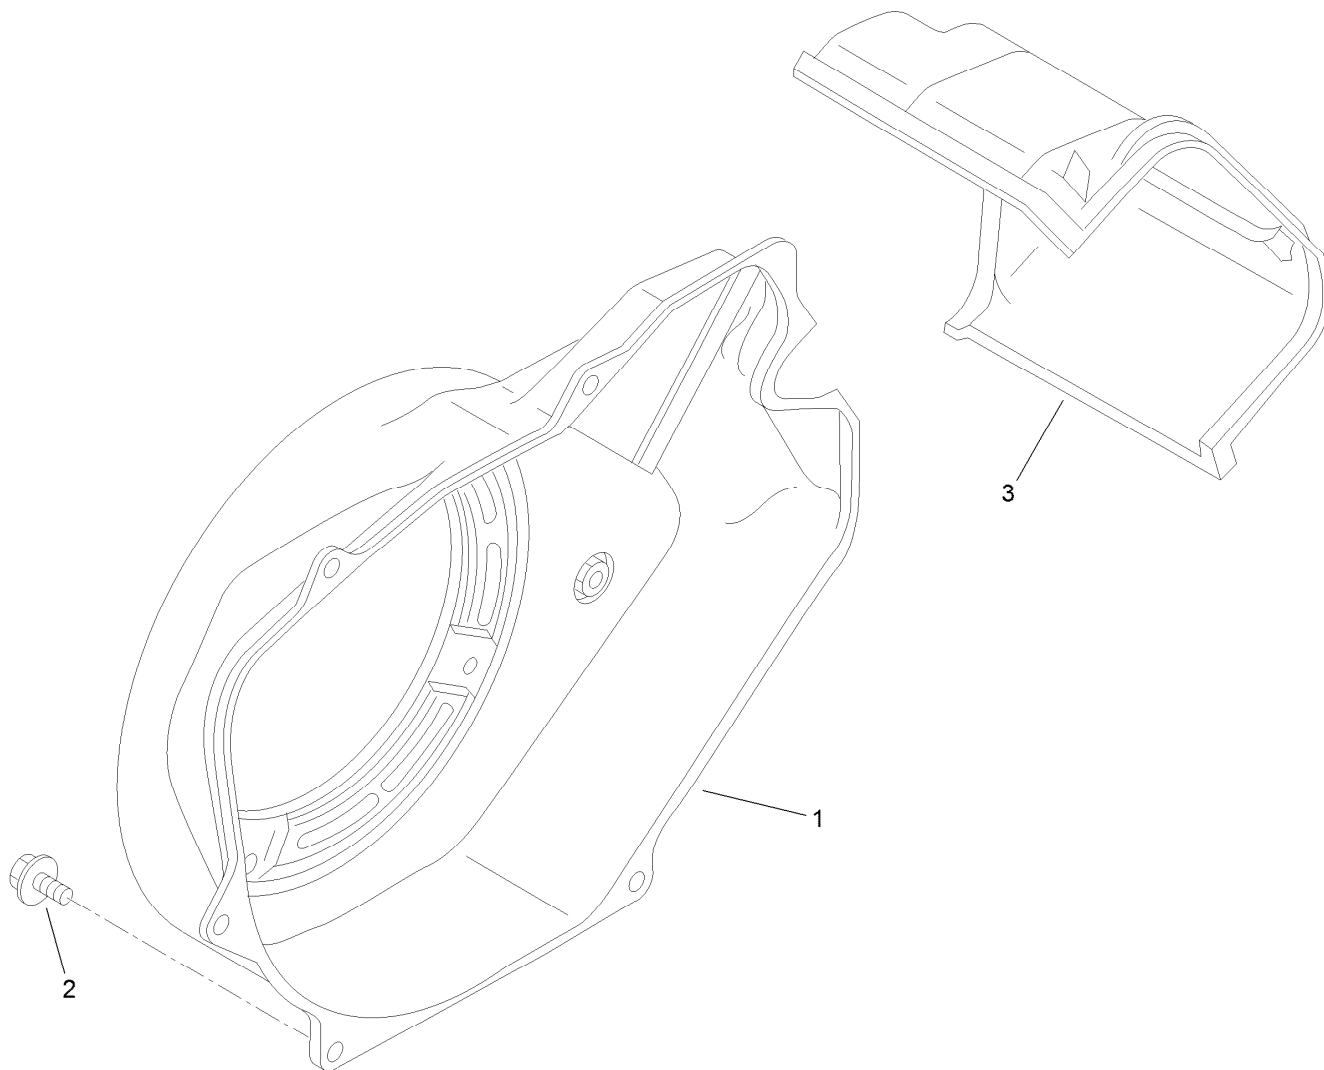 


Starter Air Shroud Assembly

Ref.	Part Number	Qty.	Description
1	120-5638	1	Case-Fan
2	120-5639	5	Bolt-Flange
3	120-5640	1	Shroud-Air, Cylinder

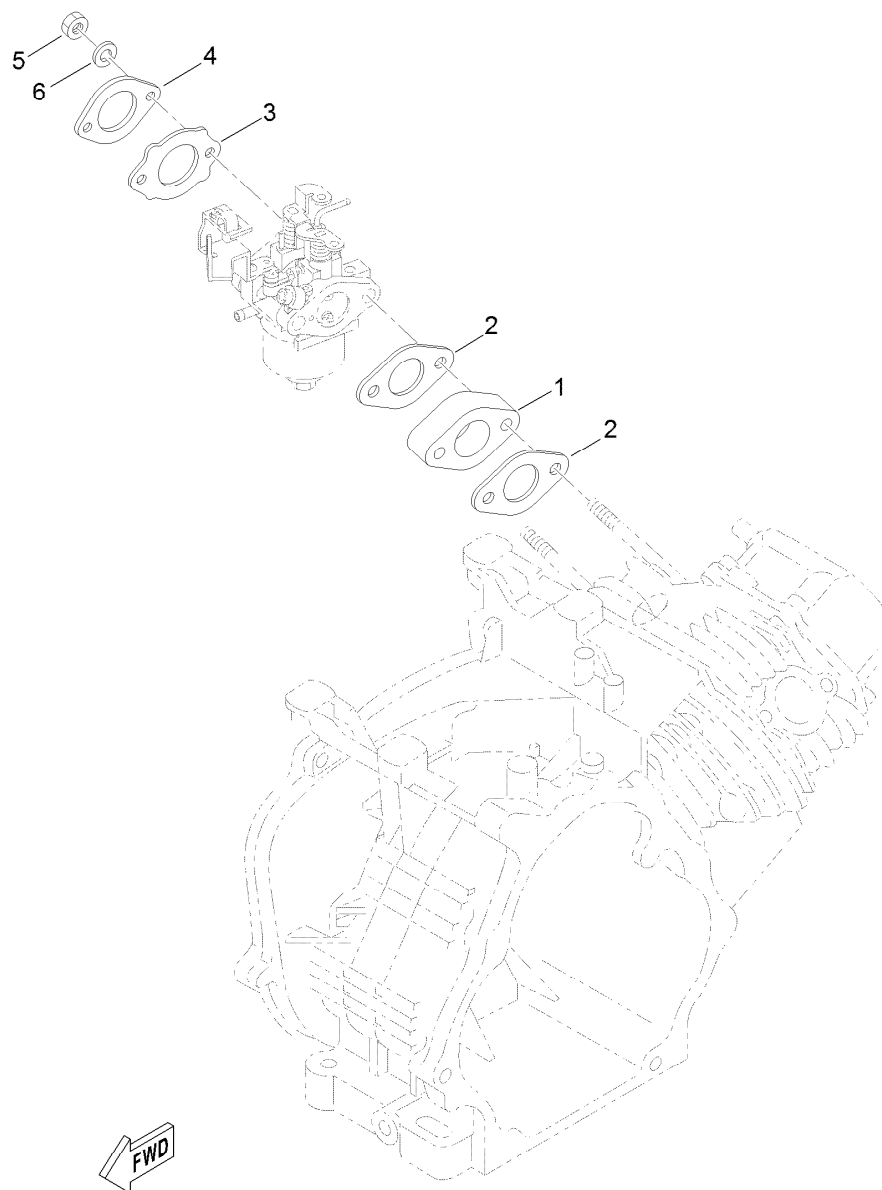 

Air Intake Assembly


Ref.	Part Number	Qty.	Description
1	120-5641	1	Joint-Carburetor
2	120-5642	2	Gasket
3	120-5643	1	Gasket
4	120-5644	1	Plate
5	119-9540	2	Nut-Hex, M8
6	120-5646	2	Washer-Spring

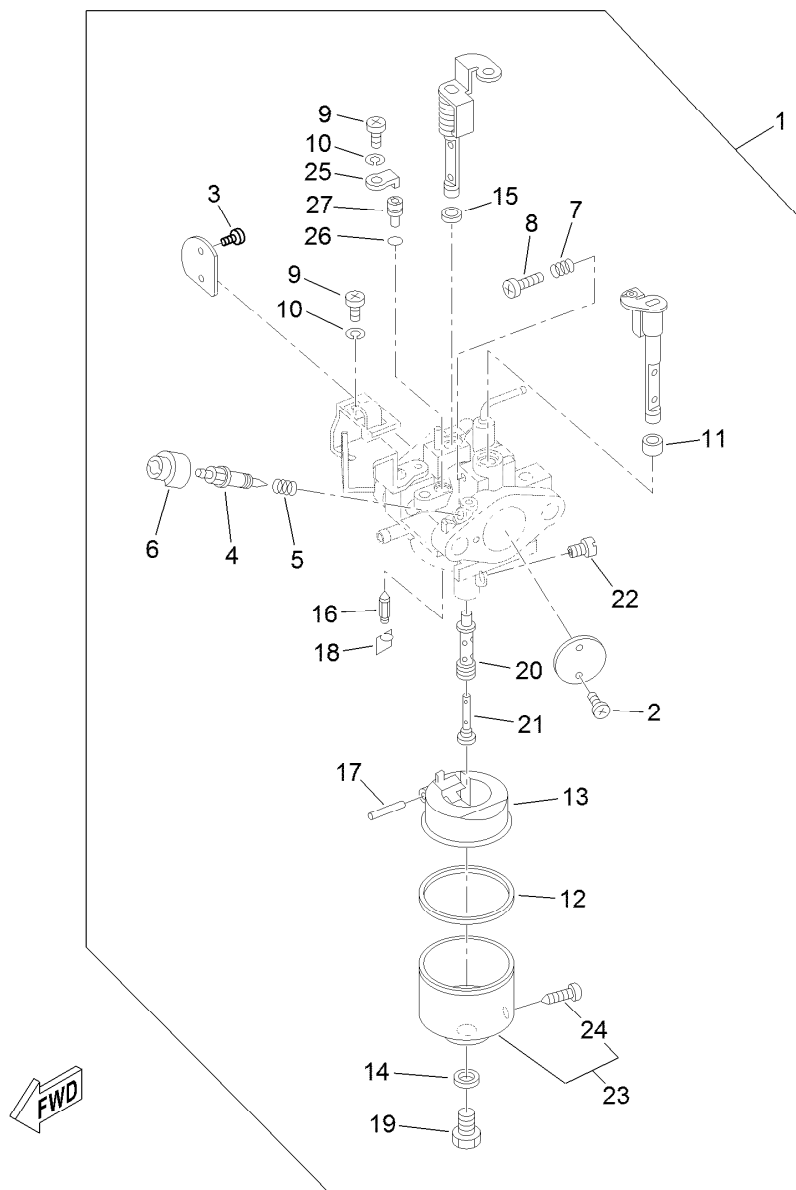 

Carburetor Assembly

Ref.	Part Number	Qty.	Description
1	127-6150	1	No. 1 Carburetor ASM
2	120-5648	2	Screw
3	120-5649	2	Screw-Rod
4	120-5650	1	Screw-Adjusting, Pilot
5	120-5651	1	Spring
6	120-5652	1	Cap
7	120-5653	1	Spring
8	120-5654	1	Screw-Throttle
9	120-5655	2	Screw-SPH
10	120-5656	2	Washer-Spring
11	120-5657	1	Washer
12	127-6161	1	Seal
13	120-5659	1	Float
14	120-5660	1	Gasket


Ref.	Part Number	Qty.	Description
15	120-5661	1	Seal
16	127-6165	1	Needle ASM
17	120-5663	1	Pin-Float
18	120-5664	1	Clip
19	120-5665	1	Bolt-Holding
20	120-5666	1	Nozzle-Main
21	120-5667	1	Pipe-Bleed, Main
22	120-5668	1	Jet-Main (115)
23	127-6172	1	Body-Float, Chamber 1
24	120-5669	1	Plug-Drain
25	120-5670	1	Plate
26	120-5671	1	O-Ring
27	120-5672	1	Jet-Pilot (53.8)

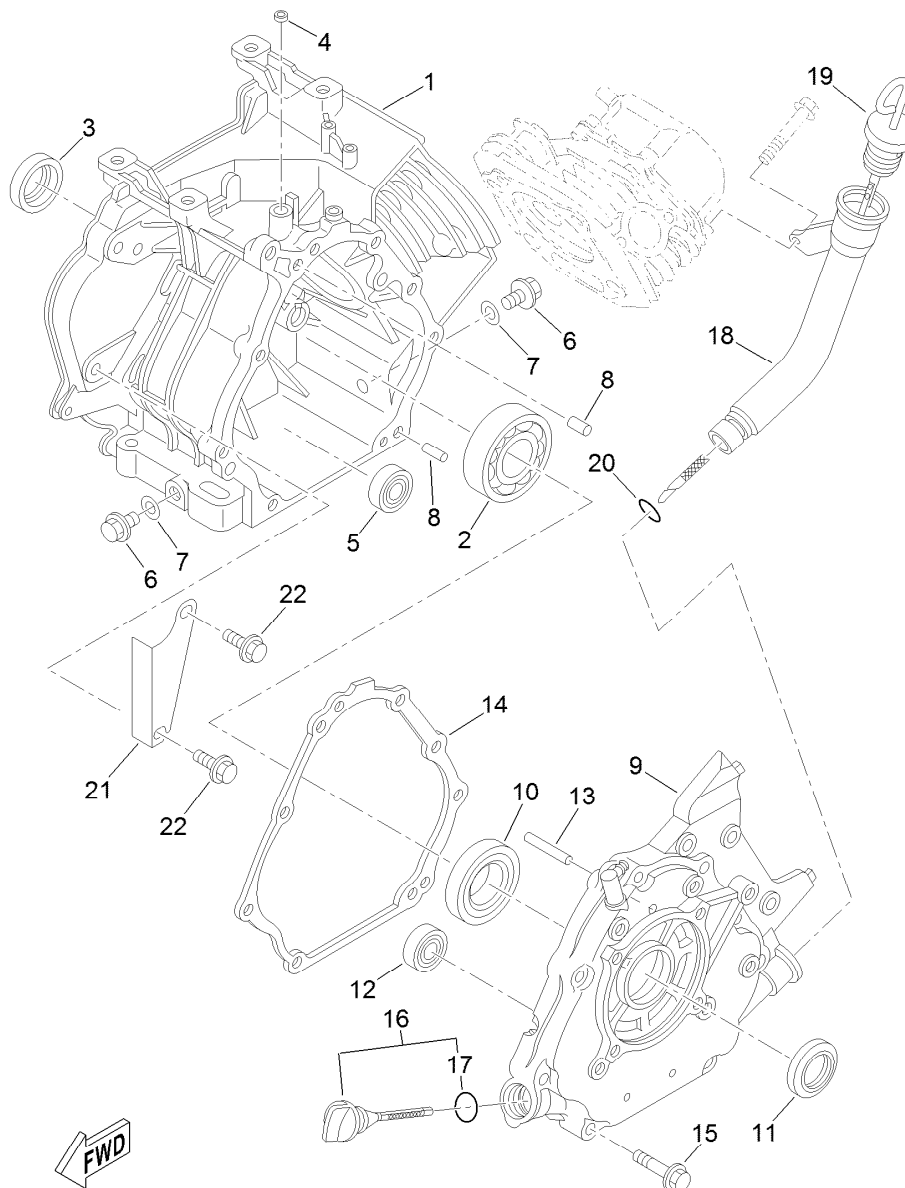 

Crankcase Assembly


Ref.	Part Number	Qty.	Description
1	120-5673	1	Crankcase
2	120-5674	1	Bearing
3	120-5675	1	Seal-Oil
4	127-6176	1	Seal-Oil
5	127-6166	2	Bearing
6	120-5678	2	Plug-Screw, Straight
7	120-5679	2	Gasket
8	120-5680	2	Pin-Dowel
9	127-6163	1	Crankcase Cover ASM
10	120-5682	1	Bearing
11	120-5675	1	Seal-Oil

Ref.	Part Number	Qty.	Description
12	127-6166	1	Bearing
13	120-5677	1	Shaft-Flyweight
14	120-5686	1	Gasket-Cover, Crankcase
15	120-5687	6	Bolt-Flange
16	127-6157	1	Plug-Oil Level
17	120-5691	1	O-Ring
18	120-5689	1	Pipe-Oil
19	120-5690	1	Gauge-Level
20	120-5692	1	O-Ring
21	120-5693	1	Plate-Baffle
22	120-5694	2	Bolt-Flange

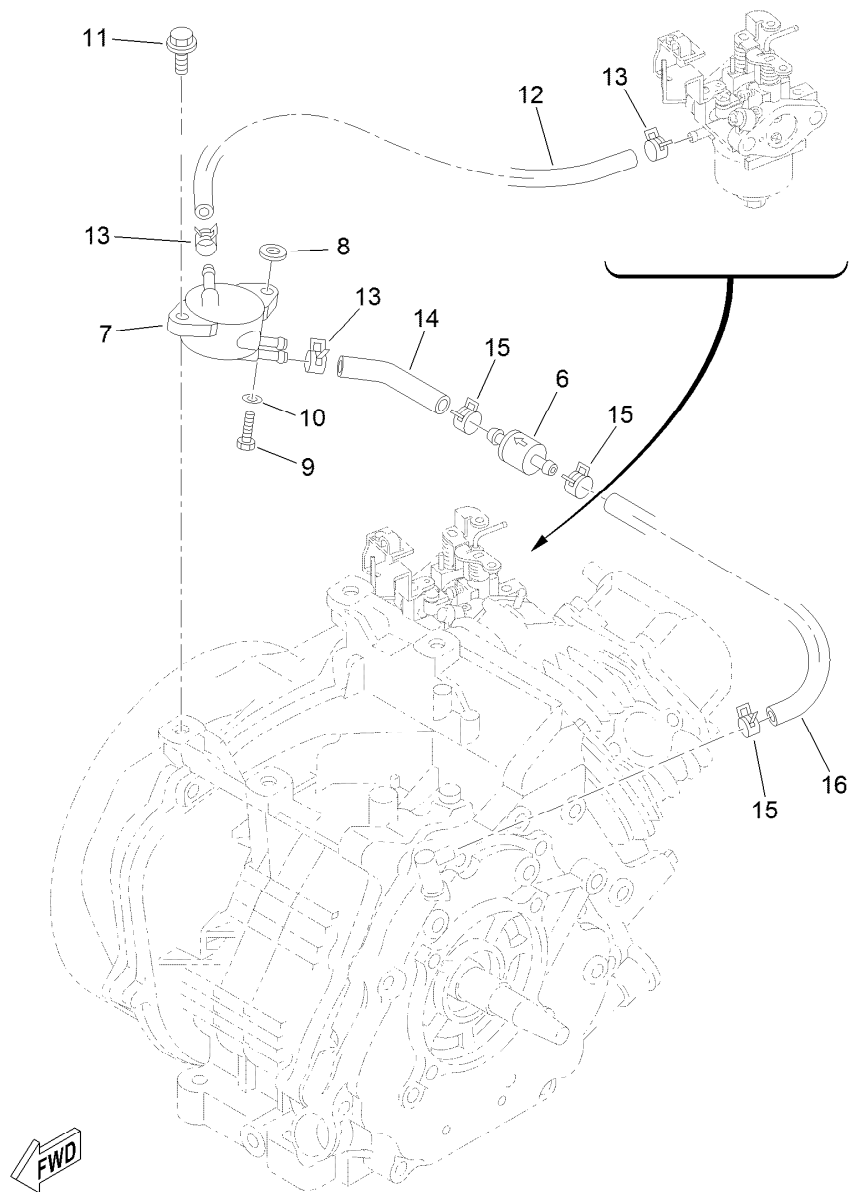 


Fuel Pump Assembly

Ref.	Part Number	Qty.	Description
6	120-5696	1	Filter ASM
7	127-6171	1	Fuel Pump ASM
8	120-5698	2	Gasket
9	120-5700	2	Bolt
10	120-5701	2	Washer-Plate
11	120-5695	2	Bolt-Flange
12	127-6156	1	Pipe-Fuel
13	120-5703	3	Clip
14	127-6160	1	Pipe-Breather
15	120-5705	3	Clip
16	127-6170	1	Hose

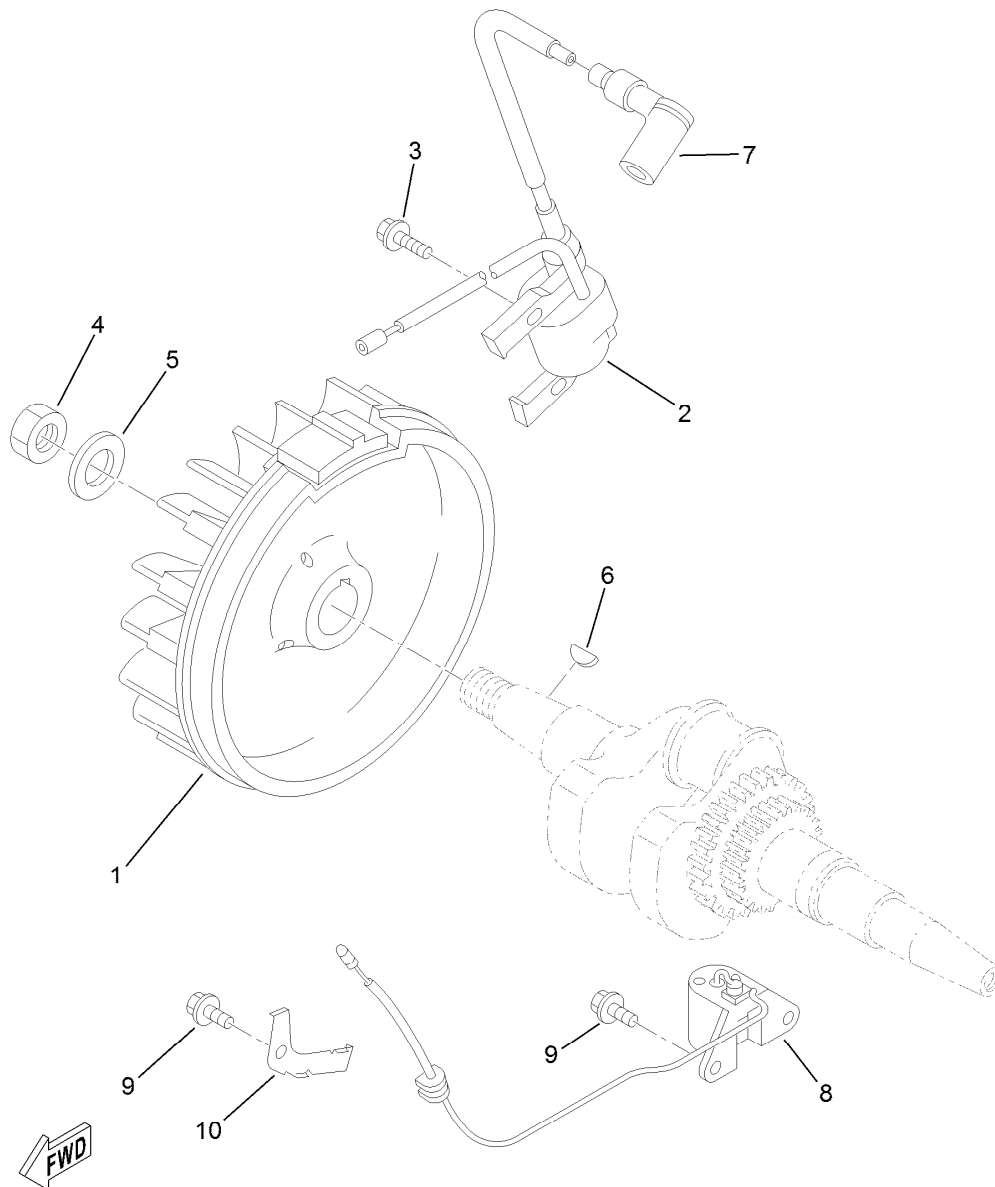 


Magneto Assembly

Ref.	Part Number	Qty.	Description
1	120-5707	1	Rotor ASM
2	127-6175	1	T.C.I. Unit ASM
3	120-5709	2	Bolt-Flange
4	120-5710	1	Nut
5	120-5711	1	Washer-Plate
6	120-5712	1	Key-Woodruff
7	120-5713	1	Plug Cap ASM
8	120-5714	1	Oil Level Gauge ASM
9	120-5715	3	Bolt-Flange
10	120-5716	1	Clamp

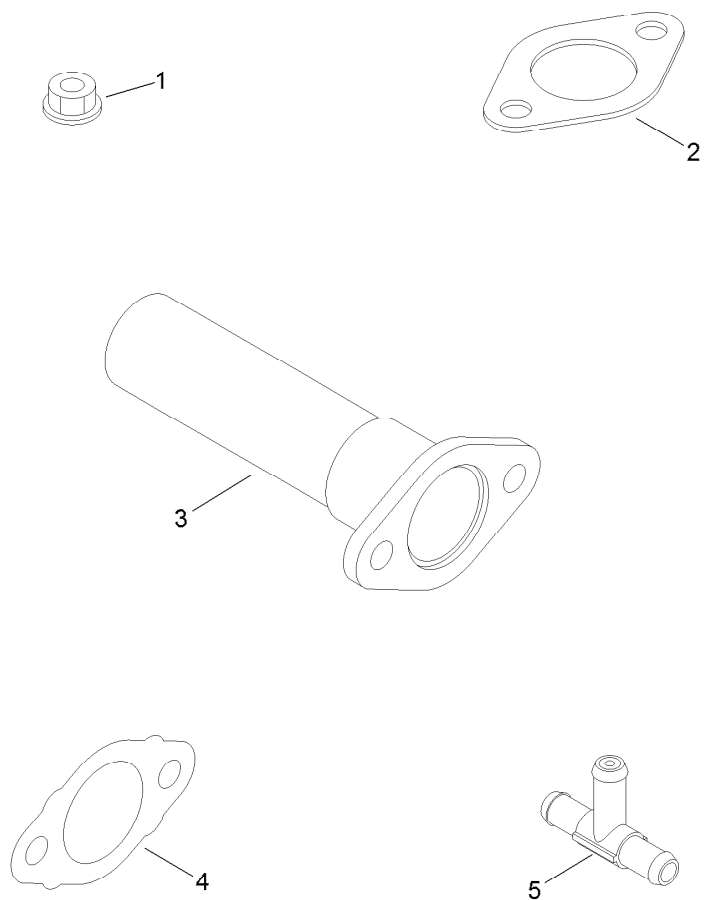 

Miscellaneous Engine Parts

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	119-9540	2	Nut-Hex, M8
2	119-9541	2	Gasket-Exhaust
3	119-9542	1	Tube-Intake
4	119-9543	1	Gasket-Intake
5	119-9544	1	Tee-Emission, Evaporative

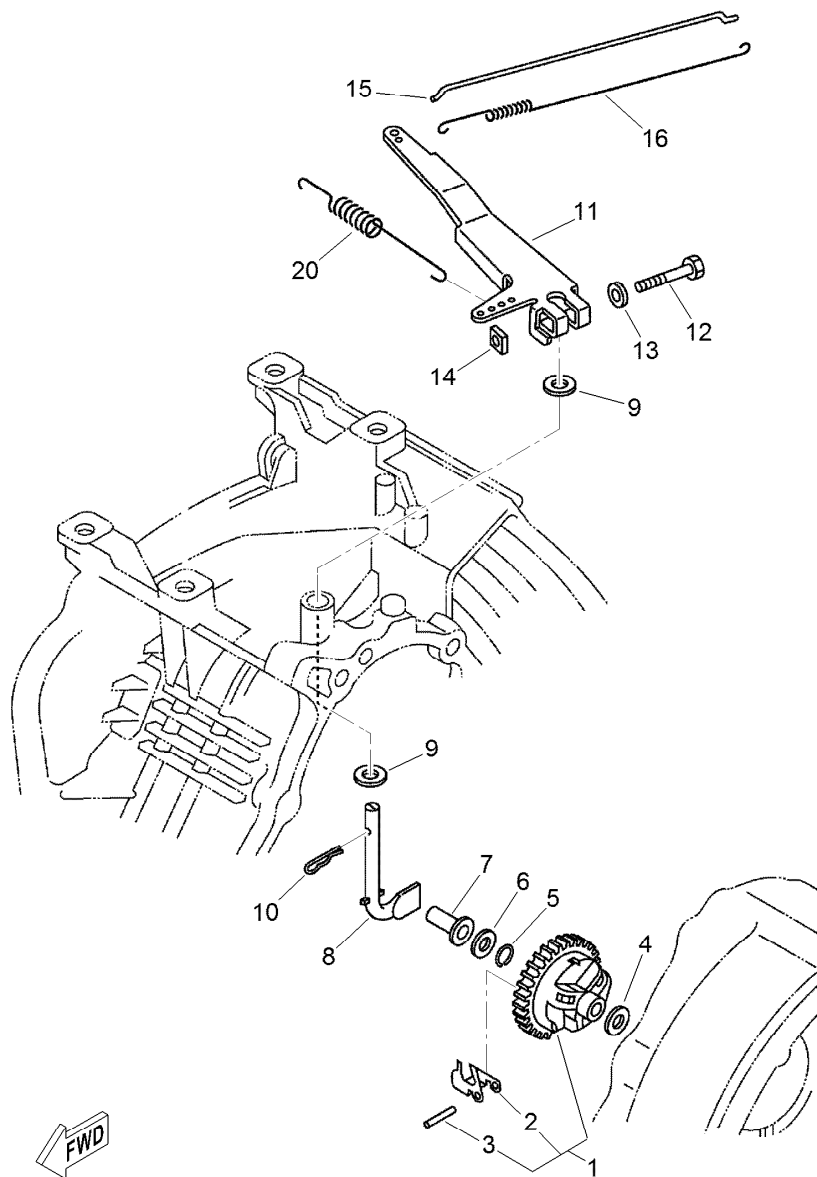 

Governor Assembly

Ref.	Part Number	Qty.	Description
1	127-6177	1	Flyweight Shaft ASM
2	127-6178	1	Weight
3	127-6179	1	Shaft-Weight
4	127-6180	1	Washer-Plate
5	127-6181	1	Circlip
6	127-6182	1	Washer-Plate
7	127-6183	1	Collar
8	127-6184	1	Fork-Governor
9	127-6185	1	Washer-Plate

Ref.	Part Number	Qty.	Description
10	127-6186	1	Clip
11	127-6187	1	Arm-Governor
12	127-6188	1	Bolt-Hexagon
13	127-6189	1	Washer-Plate
14	127-6190	1	Nut-Square
15	127-6191	1	Rod-Link
16	127-6192	1	Spring-Tension
20	127-6193	1	Spring-Governor

Attachments and Accessories

For 07266TC Workman MD Utility Vehicle

Product Name	Model/Part
Roll-Over Protection System	07276
Receiver Hitch Kit	07278
Canopy Kit	07324
Solid Windshield Kit	07325
Folding Windshield Kit	07326
Snow Plow	07327
Hard Cab	07328
Heavy-Duty Bumper Kit	07329
Heavy-Duty Brush Guard and Bumper Kit	07338
Sliding Window Door Kit	07352
Fixed Window Door Kit	07353
Electric Bed Lift Kit, 2011 and After Workman MD/MDX/MDX-D Utility Vehicle	07381
Wheel-5 Bolt	104-6889
Tire-AT 489, 24x10.5-10	104-7061
Tire-AT 489, 22x9.5-10	104-7062
Lift Wire Harness Kit	115-7823
Backup Alarm Kit	115-7824
Replacement Front Spring Kit.....	117-4847
Tire And Wheel Asm	119-0751
Tapered Nozzle Kit.....	119-6280
Rectangular Nozzle Kit	119-6281
Nozzle-Extension, Straight	119-6282
Nozzle-Extension, Tapered.....	119-6283
Nozzle-Extension, Rectangular	119-6284
Side Mirror Kit.....	119-9546
Stake Pocket Adapter Kit, 2011 and After Workman MD Series Utility Vehicle.....	119-9604
Tie-Down Kit, 2011 and After Workman MD Series Utility Vehicle	119-9605
Bed Retrofit Kit, 2010 and Before Workman MD Series Utility Vehicle.....	119-9606
Battery Kit	119-9680
Road Light and Homologation Kit	120-5031
Brake and Signal Light Kit.....	120-5044
Lanyard Kit, Workman MD Series Utility Vehicle with Serial Number 313000501 thru 313999999	121-9898
Pro Force Debris Blower.....	44538
Road-Ready Pro Force Debris Blower.....	44539
Bed Mount Kit, Pro Force Debris Blower.....	44543
Bed Mount Sound Barrier Kit, Pro Force Debris Blower	44546
Spark Arrestor Screen	94-8157

Notes:

Notes:

Notes:



Count on it.