



Dethatcher Kit

Reelmaster® 5500-D and 6000-D Series

Model No. 03872—220000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Shaft and Frame Assembly	3	Roller and Carrier Frame Assembly	5
Shaft and Blade Assembly	4		

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

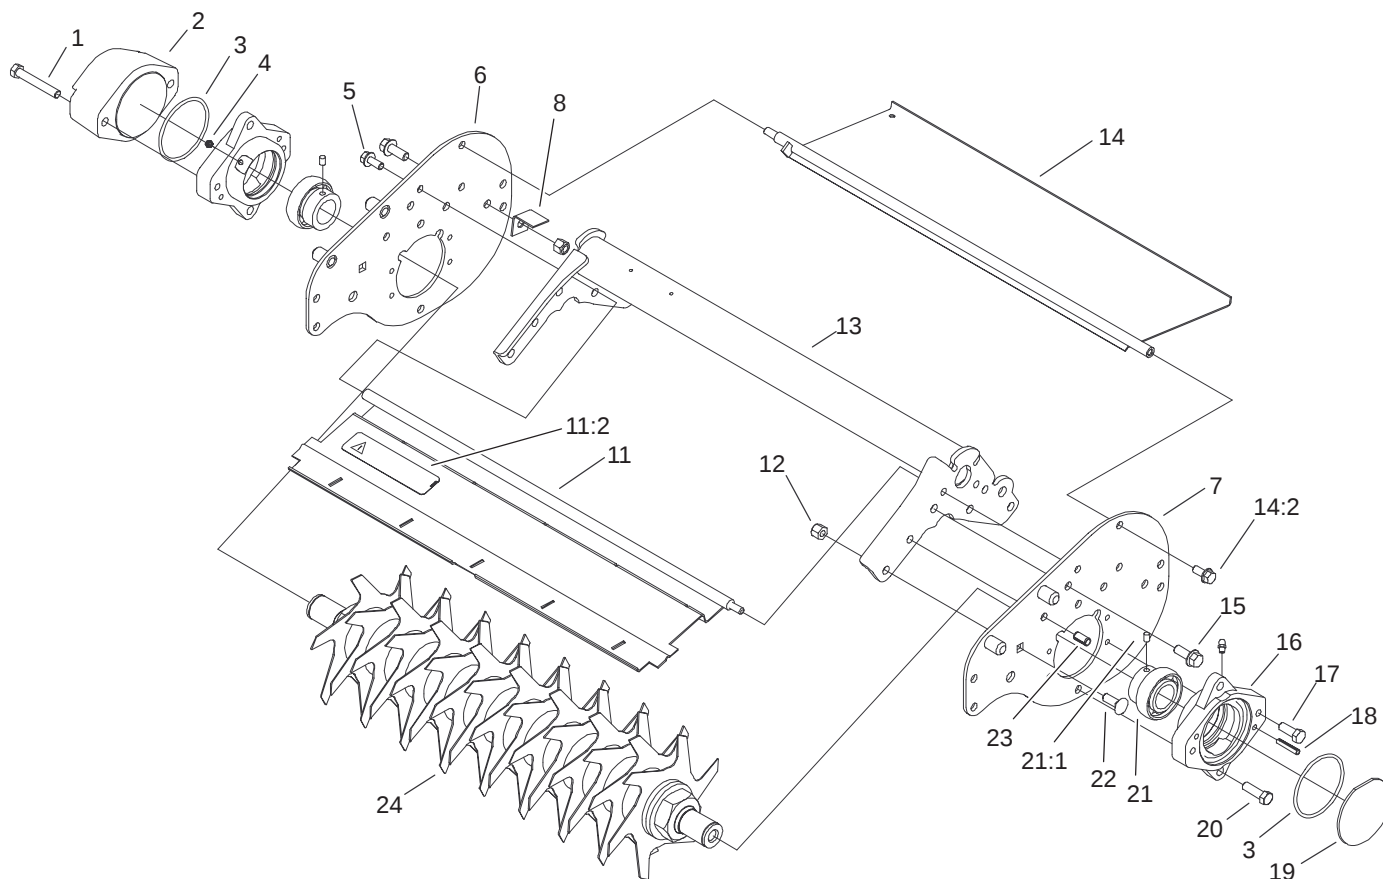


Sheet No.:2

Shaft and Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	323-12	2	Screw-HH	22	3231-22	2	Screw-CARR
2	105-4011-03	1	Weight-End	23	32121-36	4	Pin-Spring
3	93-9783	2	O-Ring	★24		1	Shaft & Blade ASM
4	302-5	2	Fitting-Grease				
5	3234-5	1	Screw				
6	105-4005-01	1	Plate-Side, RH				
7	105-4006-01	1	Plate-Side, LH				
8	94-2747	1	Tab-Stop				
11	100-9900	1	Front Grass Shield ASM				
11:2	67-7960	1	Decal-Danger				
11:2	93-6688	1	Decal-Danger, Europe				
11:2	94-4584	1	Decal-Danger, Japan				
12	3296-39	12	Nut-Lock, NI				
13	105-4007-01	1	Frame-Dethatcher				
14	105-4012	1	Rear Grass Shield ASM				
14:2	3234-5	1	Screw				
15	3234-11	6	Screw-HHF				
16	105-4015	2	Housing-Bearing				
17	323-6	2	Screw-HH				
18	32121-69	4	Pin-Spring				
19	94-2703	1	Plug				
20	323-7	4	Screw-HH				
21	94-2710	2	Bearing				
21:1	3245-1	1	Screw-Set, HSH				


★ Not serviced separately

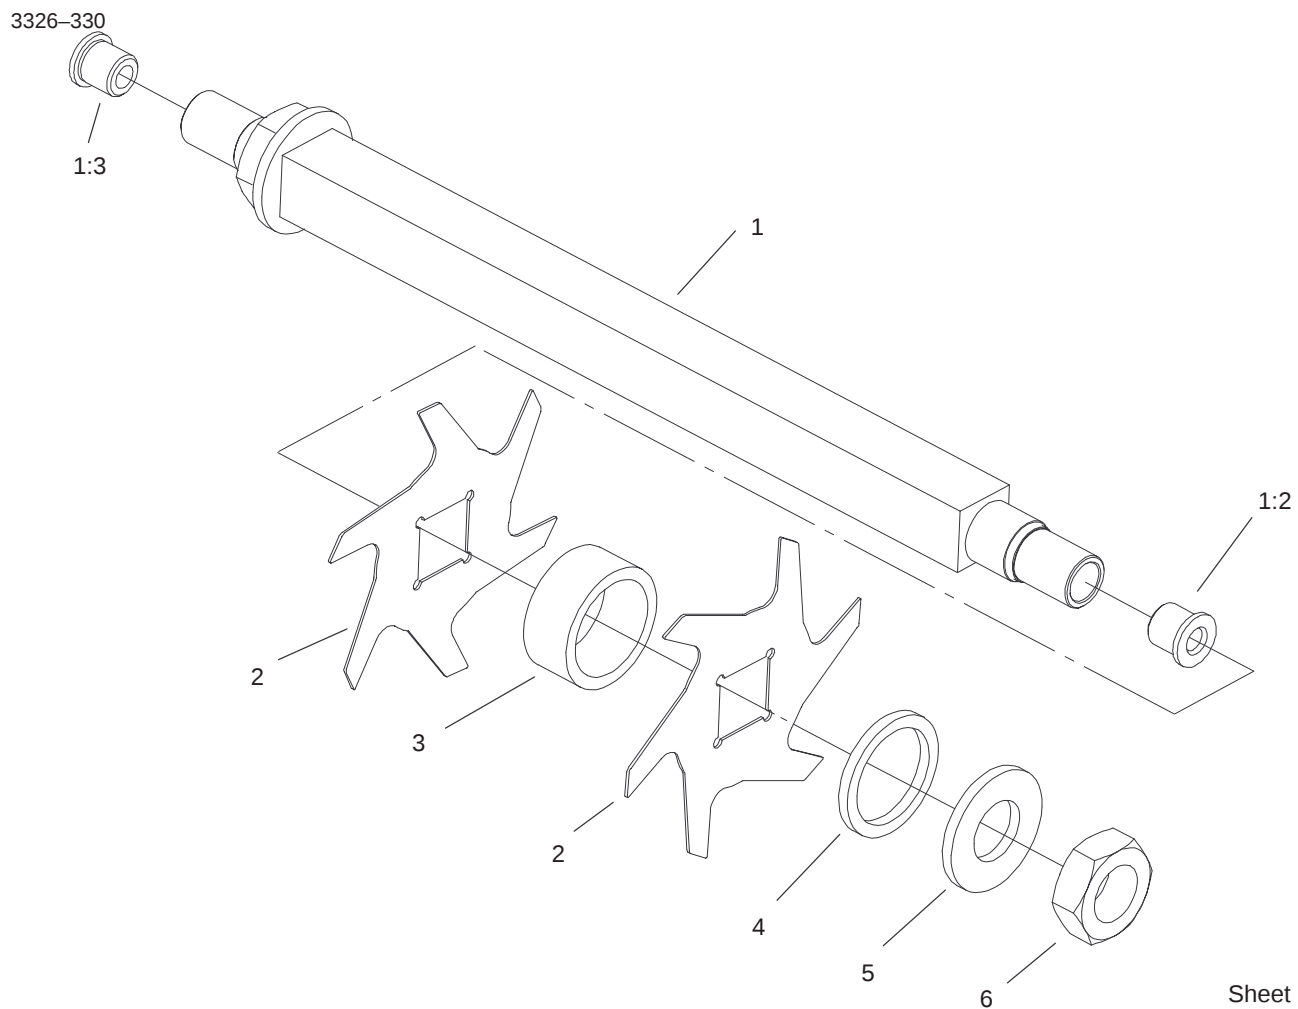

Shaft and Blade Assembly

Ref. No.	Part No.	Qty.	Description
1	105-4017	1	Shaft ASM
1:2	94-2732	1	Insert-Threaded, RH
1:3	94-2733	1	Insert-Threaded, LH
2	93-3038-03	16	Blade-Dethatcher
3	105-0172	15	Spacer
4	105-0177	1	Spacer
5	105-0173	1	Washer
6	3220-25	1	Nut-Jam

Ref. No.	Part No.	Qty.	Description

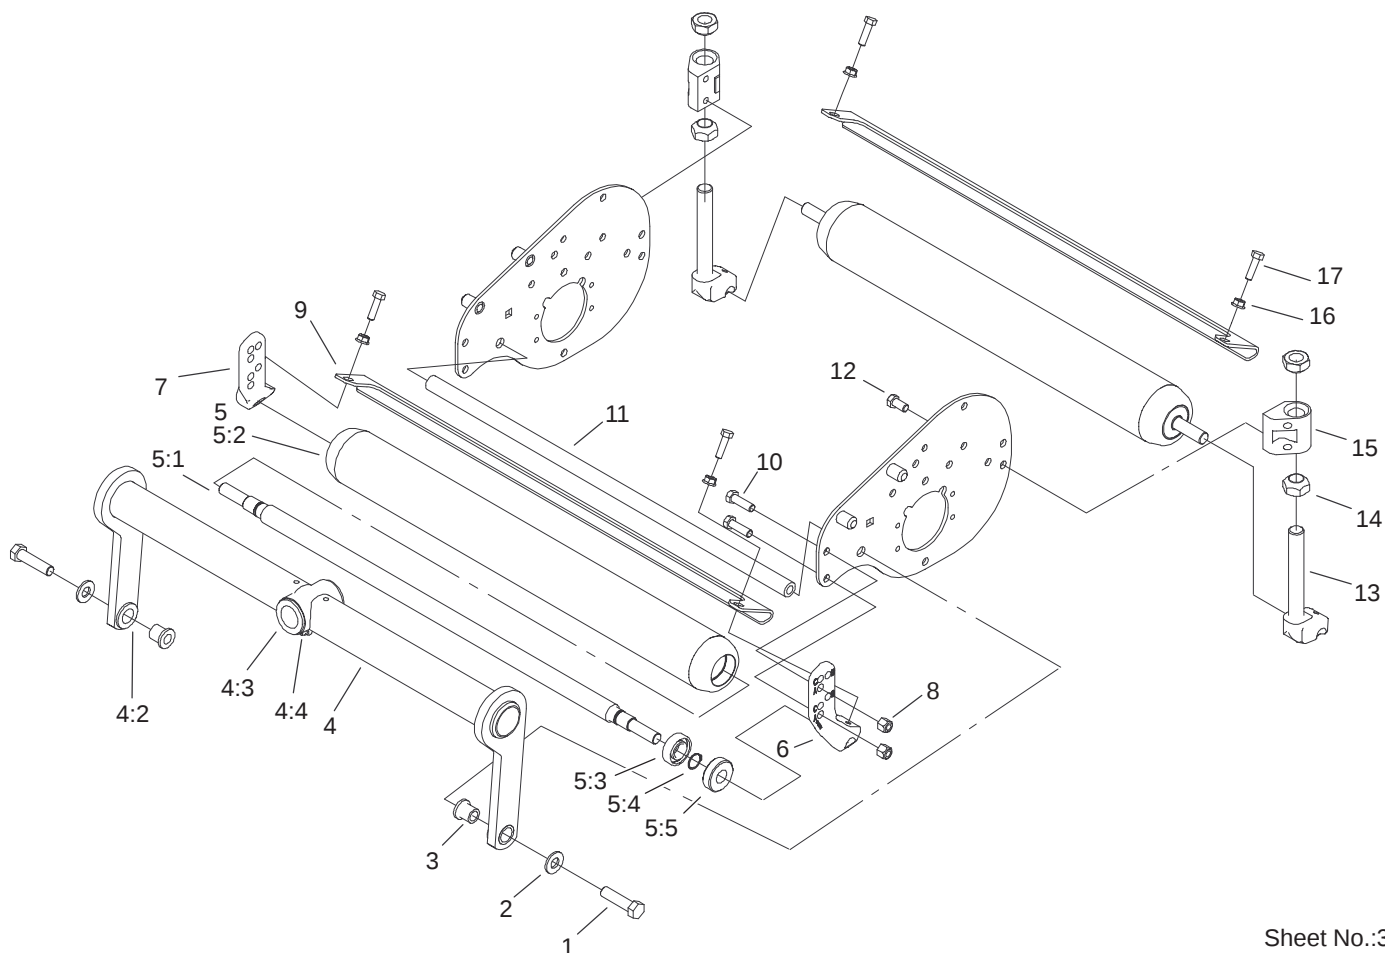

Sheet No.:3

T-3828

Roller and Carrier Frame Assembly

Ref. No.	Part No.	Qty.	Description
1	325-8	2	Screw-HH
2	87-7270	2	Washer-Thrust
3	100-2276	2	Spacer-Frame
4	105-4014	1	Frame ASM
4:2	93-2877	2	Bushing
4:3	94-1291	2	Bushing-Special
4:4	302-60	1	Fitting-Lube
5	104-1814	2	Full Roller ASM
5:1	104-1815	1	Shaft-Roller
5:2	104-1816-03	1	Roller Tube ASM
5:3	251-347	2	Bearing-Ball
5:4	32120-15	2	Ring-Snap, Ext
5:5	99-3842	2	Seal-Oil
6	104-3375-01	1	Bracket-HOC, LH
7	104-3373-01	1	Bracket-HOC, RH
8	3296-39	4	Nut-Lock, NI
9	105-4019-03	2	Scraper-Full
10	323-7	4	Screw-HH
11	105-4021	1	Rod-Support
12	323-4	4	Screw-HH
13	100-2263	2	Support-Rod
14	95-2789	4	Nut-Cone
15	100-2262-01	2	Bracket-HOC, Rear
16	32128-20	4	Nut-HF
17	322-16	4	Screw-HH

Ref. No.	Part No.	Qty.	Description

Maintenance Record

[illegible]

Maintenance Record

[illegible]

