



Groundsmaster[®] 225

Traction Unit

Model No. 30230—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.


Contents

Description	Page	Description	Page
Frame and Cover Assembly	3	Axle Assembly	27
Frame Assembly No. 95–6280	4	Steering Cylinder Assembly No. 76–2070	28
Control Panel Assembly	5	Engine Installation Assembly	29
Power Steering and Brake Pedal Assembly ...	6	Electric Clutch/Brake Assembly No. 100–6565	30
Power Steering Valve Assembly No. 92–7308 .	8	Electrical Schematic	31
Traction Pedal Assembly	9	Electrical Schematic(Continued)	32
Battery and Engine Mount Assembly	10	Differential Assembly	33
PTO and Shaft Assembly	11	Differential Carrier Assembly No. 92–4909	34
Hydraulic Lift and Throttle Assembly	12	Brake Assembly	36
Hydraulic Lift and Throttle Assembly (Continued)	13	Hydraulic Schematic	37
Lift Valve Assembly No. 63–7960	14	Cylinder Assembly	38
Connector Fitting Assembly No. 63–6760	15	Crankshaft Assembly	39
Radiator Assembly	16	Cylinder Head Assembly	40
Fuel Tank and Axle Assembly	17	Intake and Exhaust Assembly	41
Fuel Tank and Axle Assembly(Continued)	18	Carburetor Assembly	42
Transmission and Drive Coupling Assembly ...	19	Rocker Arm Assembly	43
Transmission and Drive Coupling Assembly(Continued)	20	Oil Pan and Dipstick Assembly	44
Transmission Assembly No. 92–5513	21	Cover Assembly	45
Transmission Interlock Assembly	22	Gears and Housing Assembly	46
Seat Frame Assembly	23	Water Pump and Fan Assembly	47
Air Cleaner Components Assembly	24	Governor Assembly	48
Air Cleaner Assembly No. 27–7100	25	Alternator and Starter Assembly	49
Rear Axle Assembly	26	Gasket Set and Valve Overhaul Kit	50
		Carburetor Kit	51

Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

Abbreviation	Meaning	Abbreviation	Meaning
AR	as required	HYD	hydraulic
ASM	assembly	INC	incorporated
CARR	carriage	LH	left hand
DEG	degrees	NI	nylon insert
FH	flat head	PPH	Phillips pan head
GA	gauge	PTH	Phillips truss head
HF	hex flange	PTO	power take off
HH	hex head	RH	right hand
HHF	hex head flange	SFH	slotted fillister head
HLH	hex lag head	SHH	slotted hex head
HJ	hex jam	SQH	square head
HOC	height-of-cut	SHWH	slotted hex washer head
HS	hex socket	SPH	slotted pan head
HSBH	hex socket button head	SRH	slotted round head
HSFH	hex socket flat head	STD	standard
HSH	hex socket head	TAP	self tapping
HWH	hex washer head	TTH	Torx truss head
HWHTF	hex washer head thread forming	WH	wing head

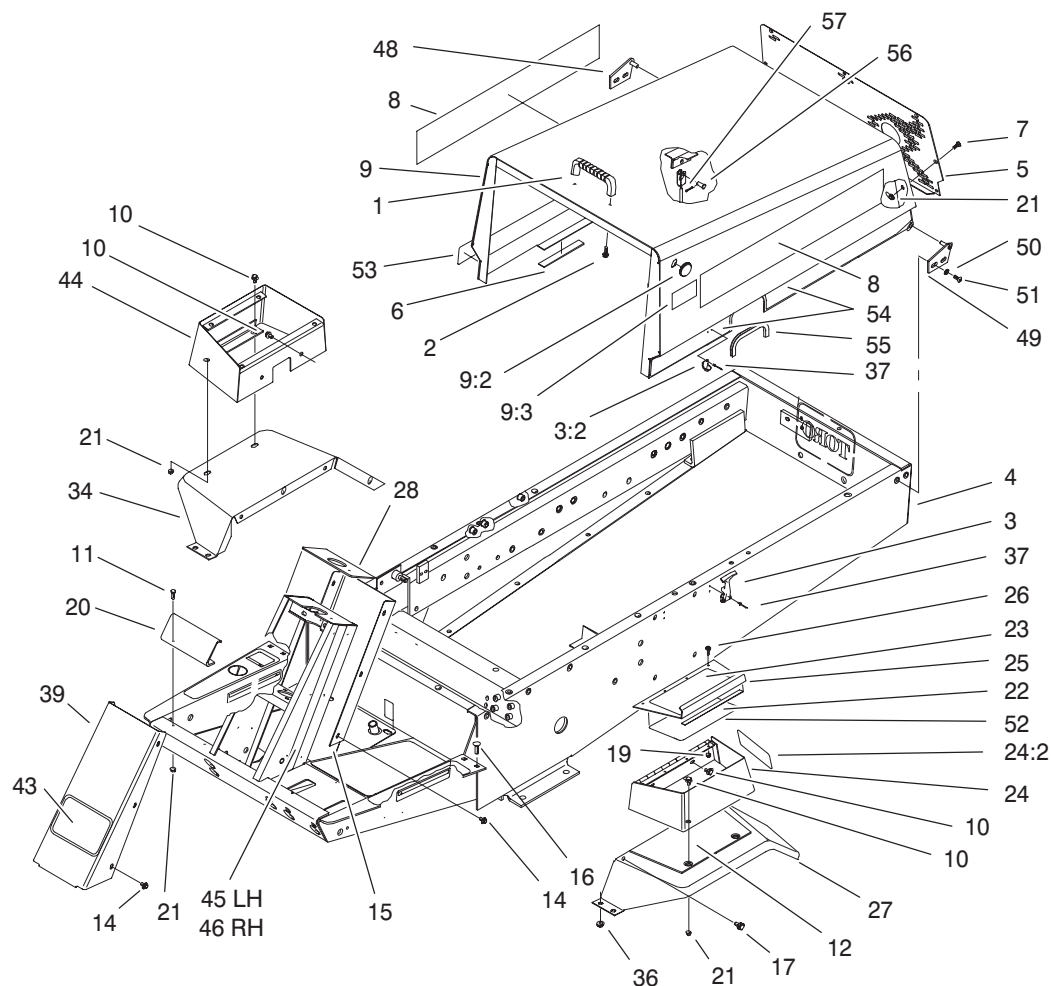


Sheet No.:2

Frame and Cover Assembly

Ref. No.	Part No.	Qty.	Description
1	65-5100	1	Handle-Door
2	46-8091	2	Screw-HWH
3	59-9740	1	Flex Draw Latch ASM
3:2	249-40	1	Keeper
4	95-6280	1	Frame ASM
5	63-7030-03	1	Screen-Hood Rear
6	82-8950	2	Foam
7	321-3	7	Screw-HH
8	95-3024	2	Decal - Gm225
9	100-6571	1	Hood ASM
9:2	98-9314	1	Grommet
9:3	100-6574	1	Decal-Warning
10	3234-13	8	Screw-HHF
11	321-4	2	Screw-HH
12	76-4790	1	Rubber Pad
14	46-6810	13	Screw & Washer ASM
15	63-7320-01	1	Cover-Tower Rear
16	3230-23	4	Screw-CARR
17	3234-14	8	Screw-HHF
19	3296-12	4	Nut-Lock
20	92-5548-01	1	Shield-Pedal Stop
21	32128-33	13	Nut-HF
22	66-3050	1	Latch-Tool Box
23	92-8798	1	Decal - Warning
24	92-6501	1	Tool Box ASM
24:2	93-7822	1	Decal - Refueling

Ref. No.	Part No.	Qty.	Description
25	66-3040-03	1	Cover-Tool Box
26	3290-359	4	Screw-HWH
27	63-7310-01	1	Fender-LH
28	66-2470	1	Panel-Tower
34	63-7300-01	1	Fender-RH
36	32128-20	4	Nut-HF
37	3290-271	4	Rivet-Pop
39	92-5545-01	1	Cover-Tower, Front
43	62-5550	1	Decal-Toro
44	63-8050	1	Box-Control
45	66-8760	1	Decal-Tower, LH
46	66-8770	1	Decal-Tower, RH
48	63-6890-01	1	Plate ASM-Hood Hinge, RH
49	63-6900-01	1	Plate ASM-Hood Hinge, LH
50	3255-8	4	Washer-Lock/Ext
51	3274-32	4	Screw-HSBH
52	95-3008	1	Decal - Service, Gm225
53	93-3192	1	Decal - Hood, RH
54	93-3193	1	Decal - Hood, LH
55	66-8110	1	Trim-Hood
56	283-58	1	Pin-Clevis
57	3272-10	1	Pin-Cotter

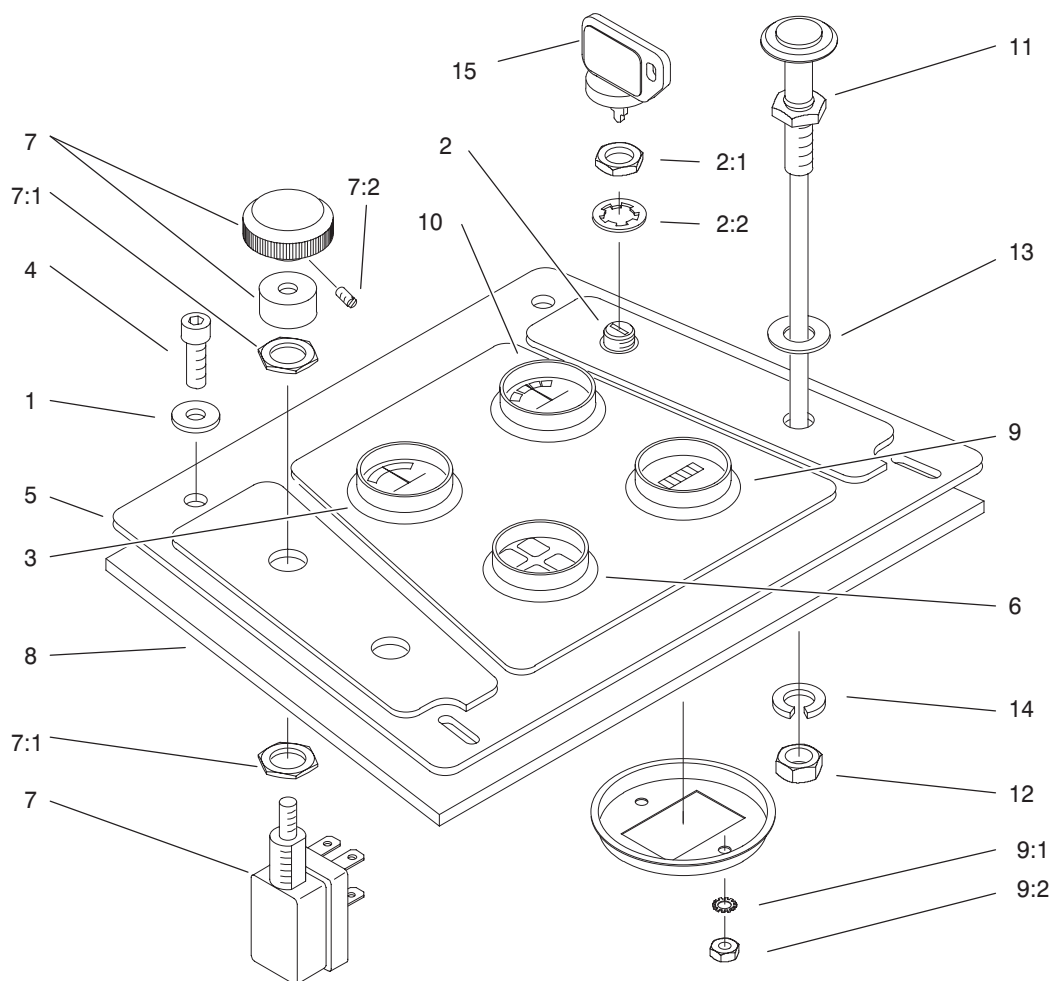


Sheet No.:3

Control Panel Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-1	4	Washer-Flat
2	104-2541	1	Switch-Key
2:1	218-461	1	Nut-HH
2:2	3254-5	1	Washer-Lock, Internal
3	105-2540	1	Gauge-Temp, Gas
4	3274-65	4	Screw Hbh
5	95-3009	1	Panel - Control
6	98-9306	1	Light-Warning
7	95-6309	1	Switch - PTO
7:1	3218-19	2	Nut-HJ
7:2	3298-8	1	Screw-Set
8	105-4279-03	1	Control Panel
9	66-2950	1	Gauge-Hourmeter
9:1	3255-20	2	Washer-Lock
9:2	3217-25	2	Nut-Hex
10	98-9339	1	Gauge-Fuel
11	94-9425	1	Control ASM - Choke
12	3220-3	1	Nut-Jam
13	3256-24	1	Washer-Flat
14	3253-21	1	Washer-Lock
15	63-8360	1	Key-Ignition

Ref. No.	Part No.	Qty.	Description

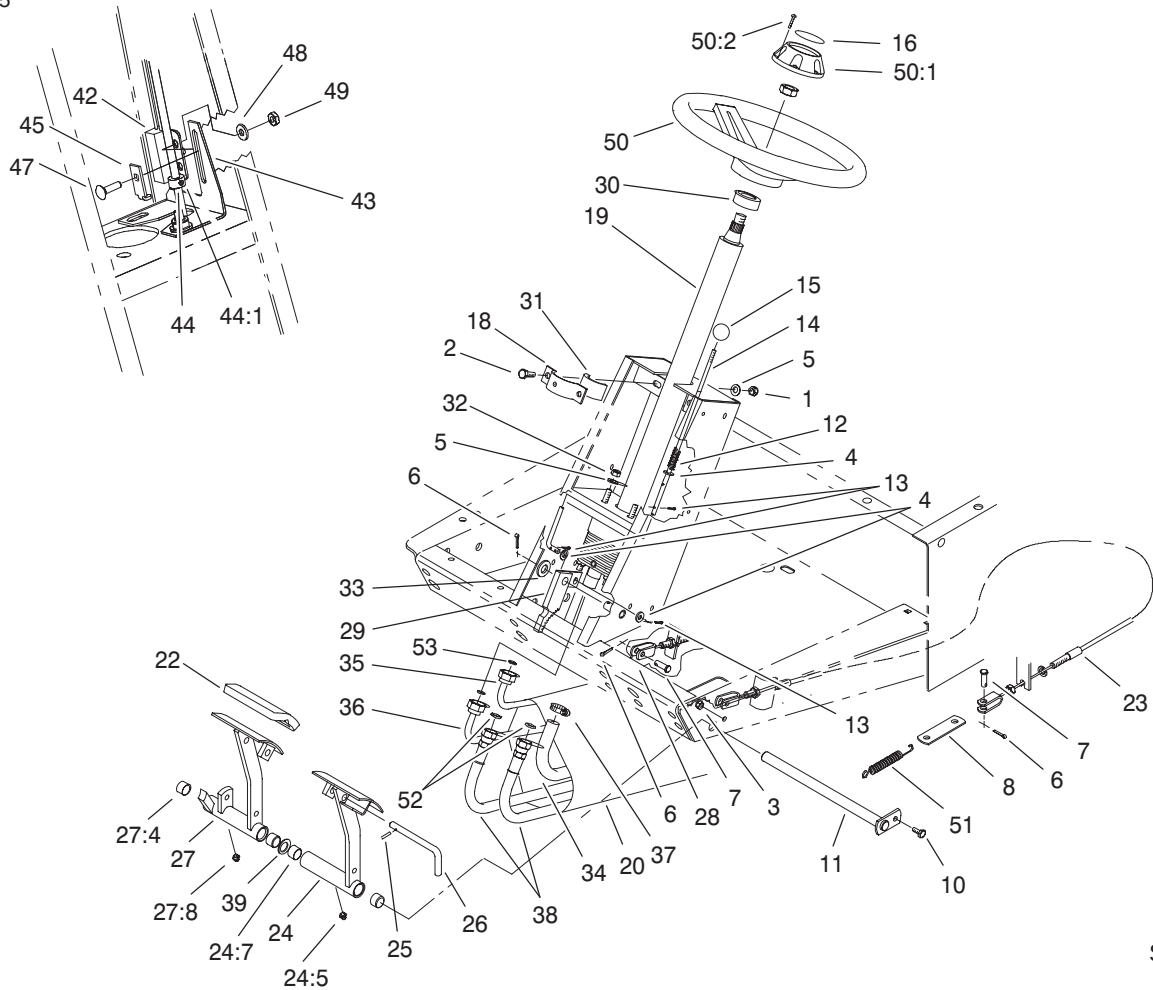


Sheet No.:4

Power Steering and Brake Pedals Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	2	Nut-Lock
2	322-5	2	Screw-HH
3	3296-42	1	Nut-Lock, NI
4	3256-22	3	Washer-Flat
5	3256-23	6	Washer-Flat
6	3272-10	5	Pin-Cotter
7	283-58	4	Pin-Clevis
8	63-6750	2	Link-Brake Cable
10	321-3	1	Screw-HH
11	63-6210-03	1	Pin-Brake
12	95-1821-03	1	Spring-Compression
13	3272-5	3	Pin-Cotter
14	63-7910	1	Rod-Parking Brake
15	233-17	1	Knob
16	68-5370	1	Decal-Toro
18	84-7660	1	Clamp - Column
19	92-7308	1	Powersteering Unit
20	44-8530	1	Protector-Sleeve
22	93-8742	2	Footpad-Brake
23	63-7731	1	Cable-Brake
24	63-6180	1	Pedal-Brake, LH
24:5	256-42	2	Bushing
24:7	302-5	1	Fitting-Grease
25	32121-50	1	Pin-Spring
26	63-7880	1	Pin-Latch, Brake
27	63-6190	1	Pedal-Brake, RH

Ref. No.	Part No.	Qty.	Description
27:4	256-42	2	Bushing
27:8	302-5	1	Fitting-Grease
28	63-7730	1	Cable-Brake
29	63-7900-03	1	Rack
30	21-9260	1	Cover-Dust
31	84-7670	2	Foam - Column Support
32	3296-20	4	Nut-Lock NI
33	3256-26	1	Washer-Flat
34	66-8140	1	Hose-Hydraulic
35	66-8630	1	Tube-Hydraulic
36	66-8620	1	Tube-Hydraulic
37	2412-36	1	Clamp-Hose
38	66-8170	2	Hydraulic Hose ASM
39	3256-69	2	Washer-Flat
42	105-0023	1	Switch-Proximity
43	104-3423-03	1	Bracket-Sensor, Brake
44	105-0021	1	Collar-Set Screw
44:1	3245-42	1	Set Screw - 8-32x.25
45	100-4872	1	Plate-Switch, Neutral
47	104-1450	1	Screw-CARR
48	3256-14	1	Washer-Flat
49	3296-2	1	Nut-Hex
50	75-0560	1	Wheel-Steering

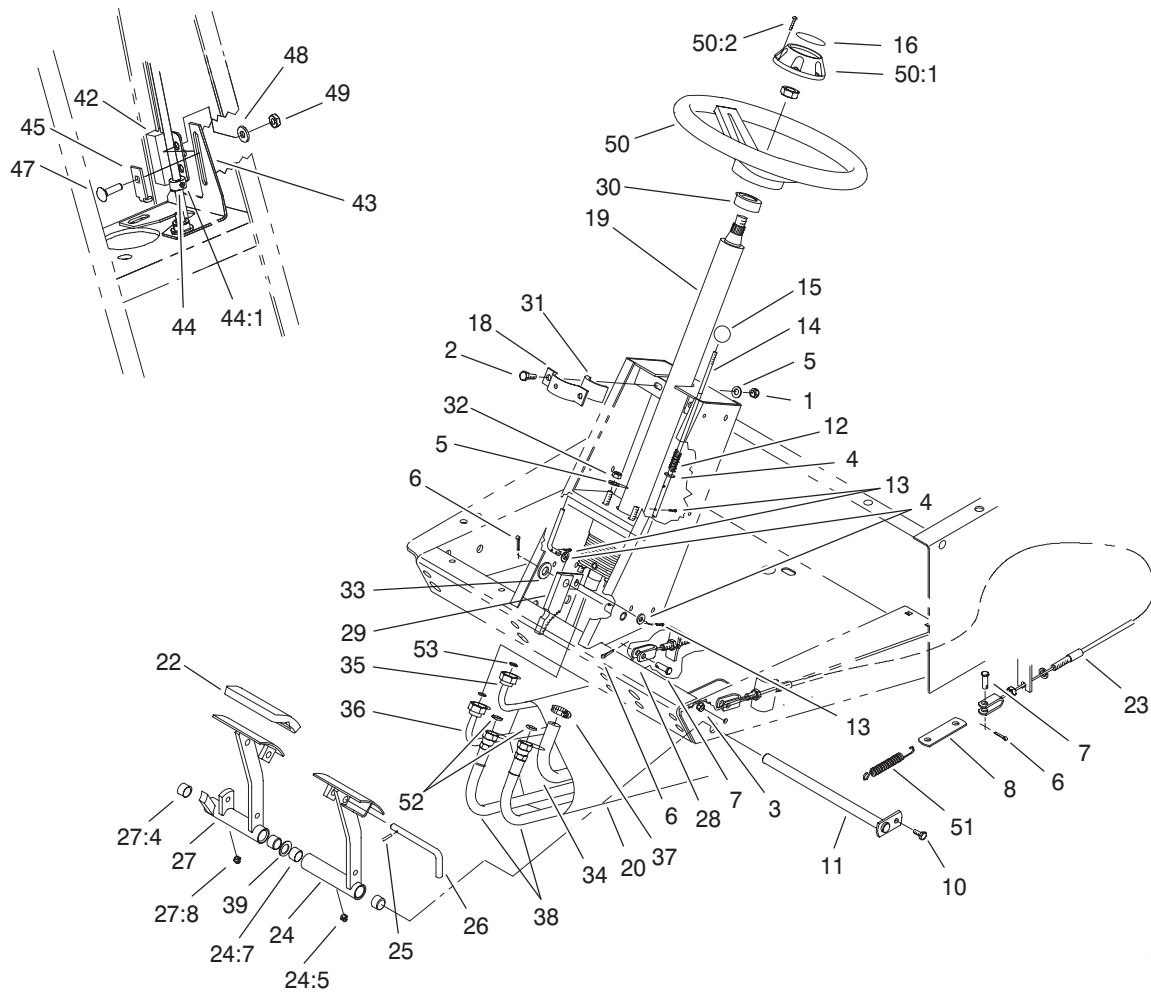


Sheet No.:4

Power Steering and Brake Pedal Assembly(Continued)

Ref. No.	Part No.	Qty.	Description
50:1	68-5140	1	Cap-Wheel, Steering
50:2	32144-21	1	Screw
51	3-7243	2	Spring-Return
52	237-30	2	O-Ring
53	237-22	2	O-Ring

Ref. No.	Part No.	Qty.	Description

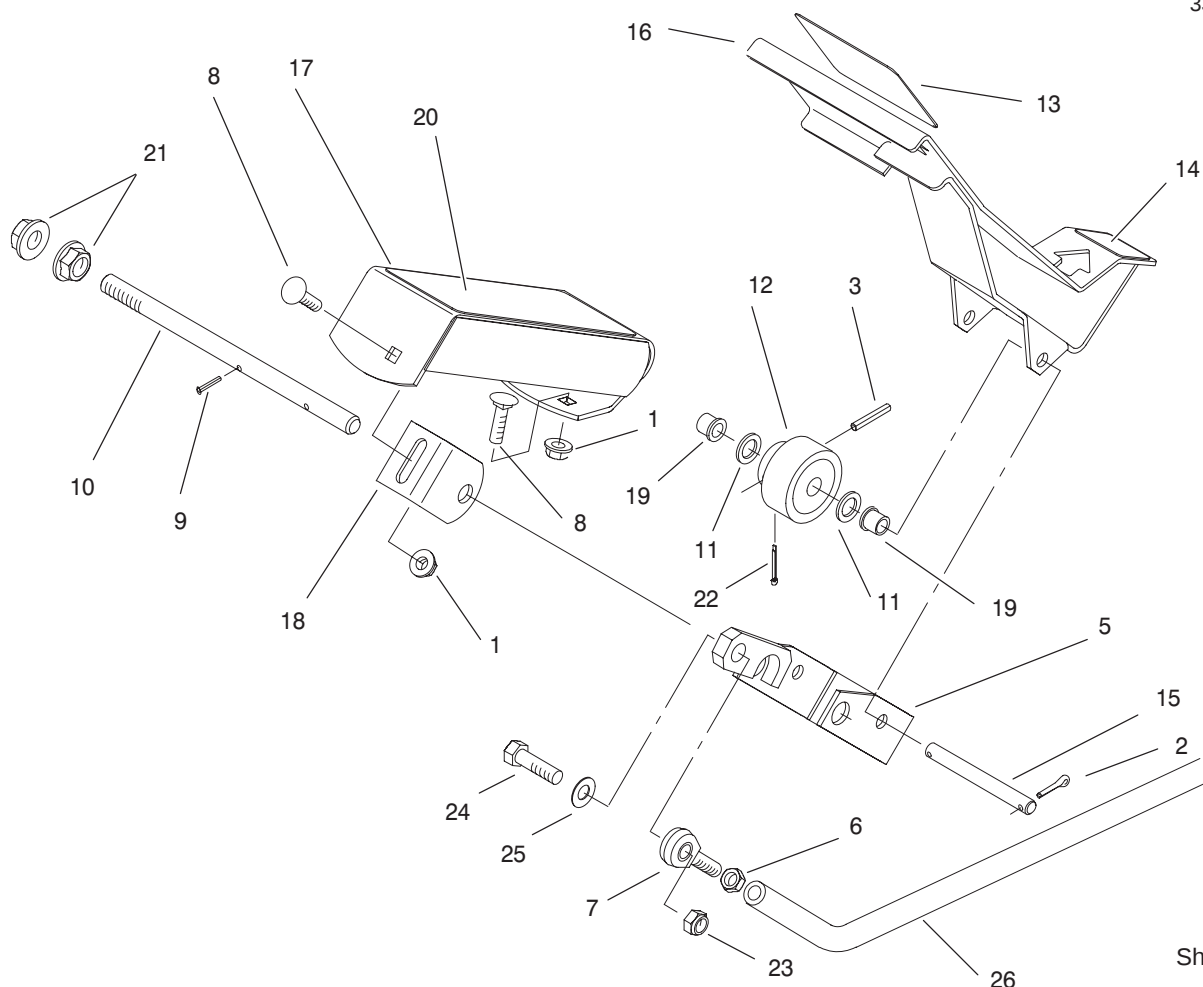


Sheet No.:5

Traction Pedal Assembly

Ref. No.	Part No.	Qty.	Description
1	32128-44	2	Nut
2	3272-10	2	Pin-Cotter
3	32121-6	1	Pin-Roll
5	92-8854-03	1	Bracket-Pivot
6	3220-3	1	Nut-Jam
7	2411-36	1	Bearing-End, Rod
8	3230-2	2	Screw-CARR
9	32121-50	1	Pin-Spring
10	92-5534	1	Shaft - Traction Pedal
11	5-7570	2	Washer-Flat
12	28-5220	1	Wheel ASM-Friction
13	94-3307	1	Pad - Traction Pedal
14	94-3308	1	Pad - Traction Pedal
15	92-5537	1	Pin - Traction Pedal
16	94-3591-03	1	Support-Pedal
17	92-5514-01	1	Footrest
18	92-5077	1	Bracket-Footrest
19	256-156	2	Bushing-Flange
20	92-5750	1	Pad-Footrest
21	32128-56	2	Nut-HF
22	3272-6	1	Pin-Cotter
23	3296-39	1	Nut-Lock, NI
24	323-29	1	Screw-HH
25	3256-24	1	Washer-Flat
26	63-6410-03	1	Tube-Pump, Control

Ref. No.	Part No.	Qty.	Description

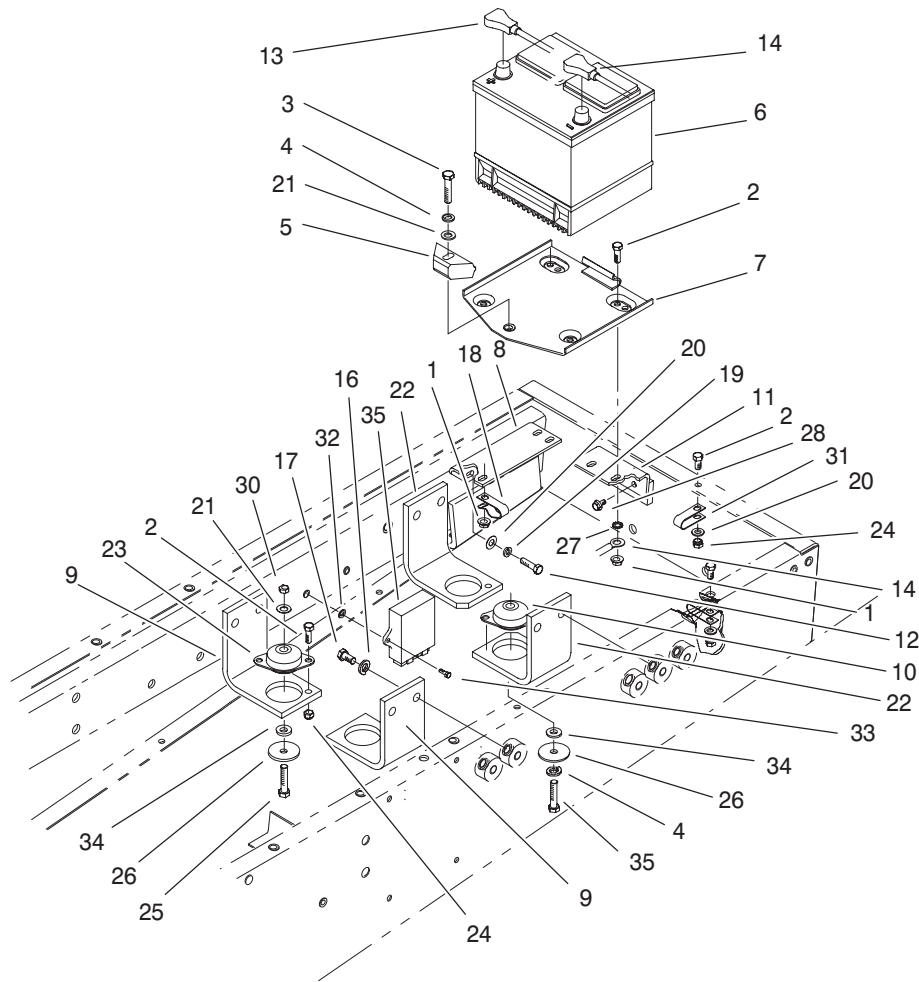


Sheet No.:6

Battery and Engine Mount Assembly

Ref. No.	Part No.	Qty.	Description
1	32128-20	3	Nut-HF
2	322-5	13	Screw-HH
3	323-9	1	Screw-HH
4	3253-21	2	Washer-Lock
5	66-2490	1	Retainer-Battery
6	66-2750	1	Battery
7	94-7343	1	Battery Base ASM
8	95-1592-03	1	Angle-Base,Battery
9	95-6270-03	2	Bracket-Engine Mount
10	63-7141	1	Mount-Shock,Engine
11	95-1599-03	1	Bracket-Base, Battery
12	322-6	2	Screw-HH
13	105-1223	1	Cable-Positive
14	63-7340	1	Battery Cable
16	3253-7	8	Washer-Lock
17	3213-2	8	Screw-HH
18	92-5753	1	Clamp-Hose
19	3253-4	2	Washer-Lock
20	3256-23	4	Washer-Flat
21	3256-24	4	Washer-Flat
22	95-6272-03	2	Bracket-Engine Mount
23	63-7140	3	Mount-Shock, Engine
24	3296-29	10	Nut-Lock
25	323-11	3	Screw-HH
26	63-7400	4	Washer-Rebound
27	3255-8	1	Washer-Lock/Ext

Ref. No.	Part No.	Qty.	Description
28	3234-30	2	Screw-HHF
30	3296-39	3	Nut-Lock, NI
31	98-3883	2	Clamp - Wire
32	3256-22	2	Washer-Flat
33	3274-8	2	Screw-HSH
34	80-7730	4	Spacer
35	323-10	1	Screw

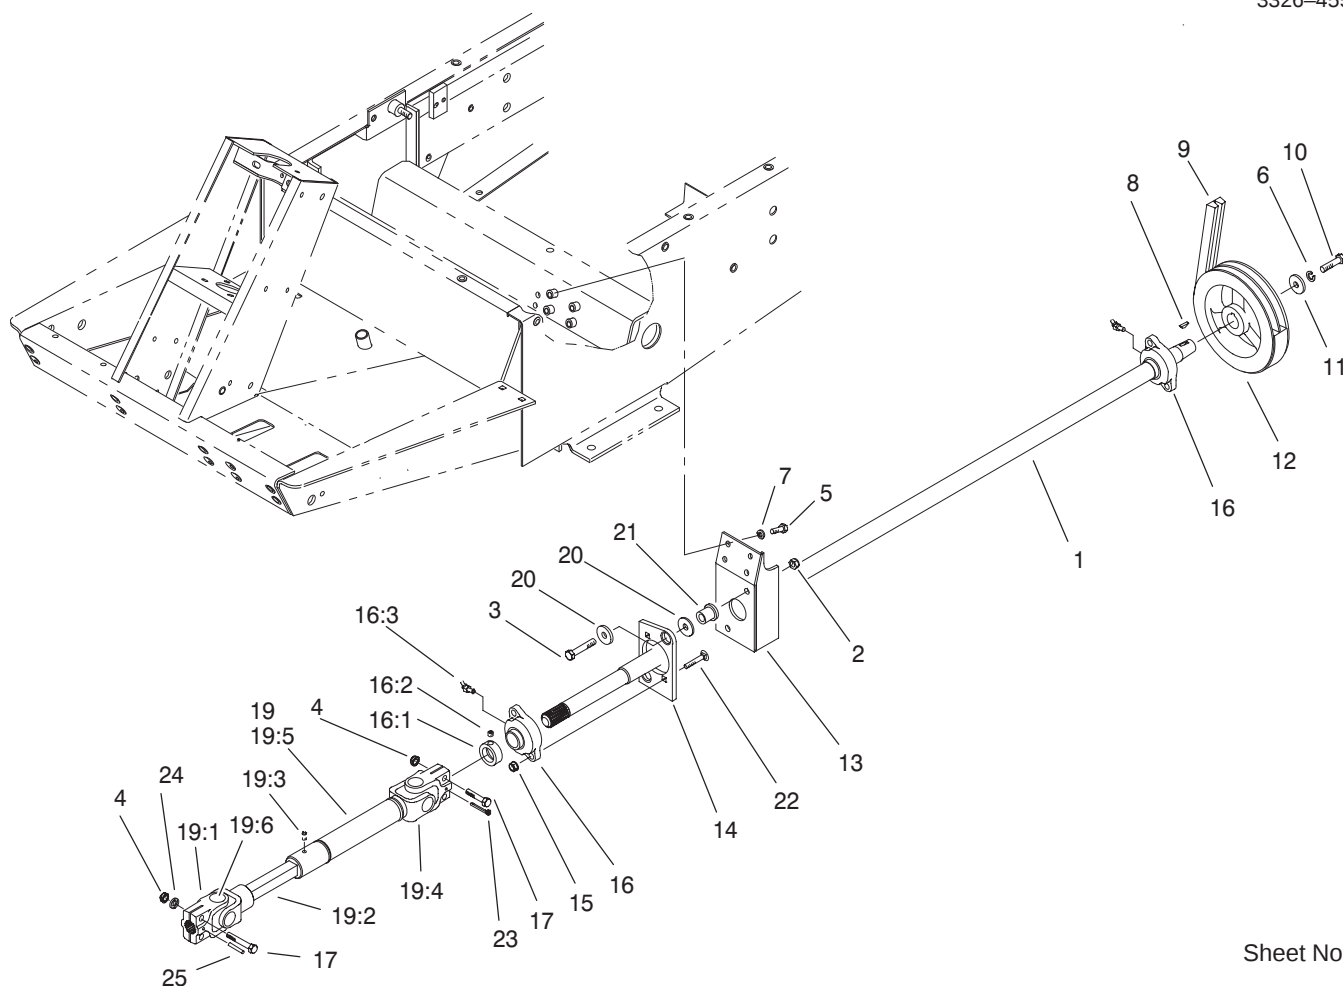


Sheet No.:7

PTO and Shaft Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	92-8855-03	1	PTO Shaft	19:5	54-9170-01	1	Slip Yoke Tube
2	3296-39	2	Nut-Lock, NI	19:6	54-9180	2	U-Joint Kit
3	323-10	2	Screw-HH	*19:6:1	62-3820	1	Fitting-Grease
4	3296-29	4	Nut-Lock	20	63-8410	4	Washer
5	322-5	4	Screw-HH	21	63-9750	2	Mount
6	3253-21	1	Washer-Lock	22	3230-4	2	Screw-CARR
7	3253-4	4	Washer-Lock	23	3272-15	1	Pin-Cotter
8	3257-5	1	Key-Woodruff	24	3256-23	1	Washer-Flat
9	63-6240	1	V-Belt, PTO	25	32121-34	1	Pin-Roll
10	323-18	1	Screw-HH				
11	29-4730	1	Washer-Flat				
12	94-7422-03	1	Pulley-PTO				
13	92-8751-03	1	Bracket-Bearing, PTO				
14	84-7580	1	Plate-Bushing Support				
15	32149-1	2	Nut				
16	92-8799	2	Bearing-Flange				
16:1	251-77	2	Bearing-Lockcollar				
16:2	3246-1	2	Screw-Set				
16:3	302-40	2	Fitting-Grease				
17	322-9	4	Screw-HH				
19	54-7950	1	Universal Shaft				
19:1	54-9040	1	Yoke-End				
19:2	54-9050	1	Slip Yoke Shaft				
19:3	302-58	1	Fitting-Grease				
19:4	54-9090	1	Yoke-End				

* Not illustrated

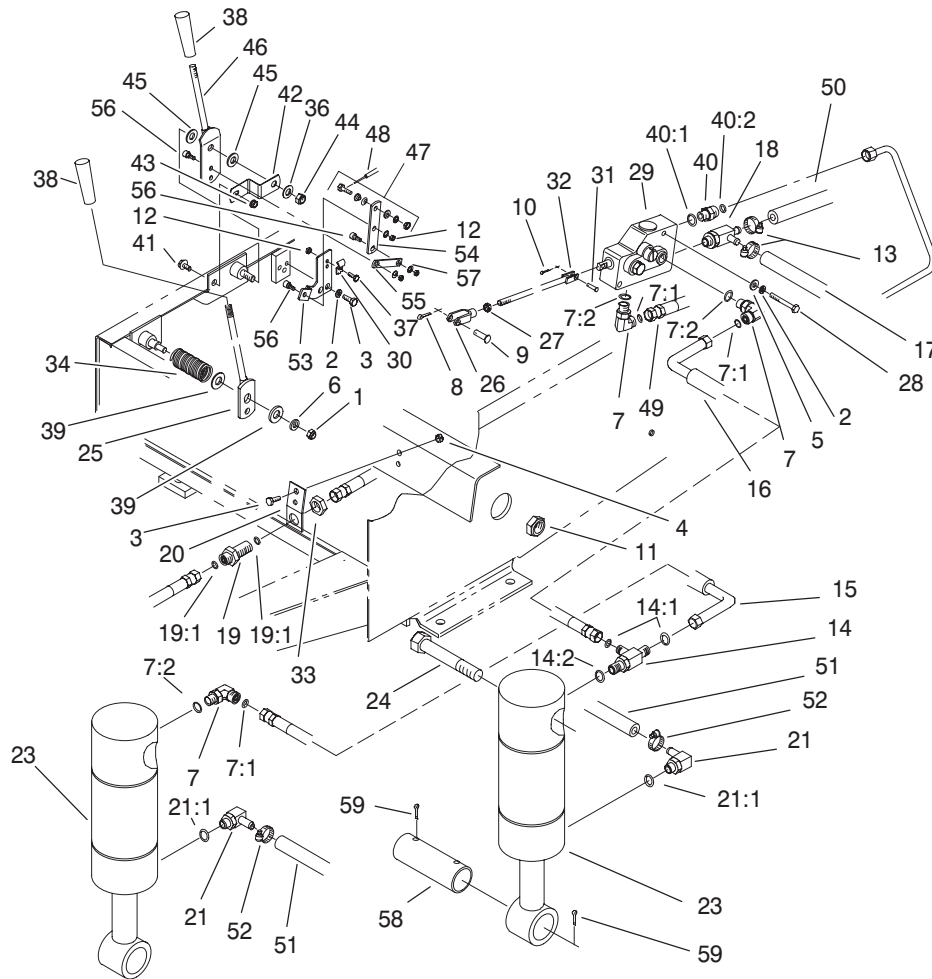


Sheet No.:8

Hydraulic Lift and Throttle Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	1	Nut-Lock
2	3253-3	4	Washer-Lock
3	321-4	4	Screw-HH
4	3296-42	2	Nut-Lock, NI
5	3256-22	2	Washer-Flat
6	3256-23	1	Washer-Flat
7	340-77	3	Fitting-HYD, 90°
7:1	237-22	2	O-Ring
7:2	237-42	2	O-Ring
8	3272-10	1	Pin-Cotter
9	283-58	1	Pin-Clevis
10	3272-5	1	Pin-Cotter
11	3296-15	2	Nut-Lock NI
12	3296-12	4	Nut-Lock
13	2412-36	2	Clamp-Hose
14	340-86	1	Fitting-Tee, HYD
14:1	237-22	2	O-Ring
14:2	237-42	1	O-Ring
15	66-8190	1	Hydraulic Hose ASM
16	66-8640	1	Hydraulic Hose ASM
17	66-8150	1	Hydraulic Hose
18	66-3130	1	Fitting-Special
18:1	237-65	1	O-Ring
19	340-71	1	Fitting-Straight, Bulkhead
19:1	237-22	2	O-Ring

Ref. No.	Part No.	Qty.	Description
20	63-7410	1	Bracket-Bulkhead
21	304-99	2	Stem-Hose
21:1	237-78	1	O-Ring
23	63-6630	2	Cylinder - Hydraulic
24	3216-3	2	Screw-HH
25	66-2720-03	1	Lever-Valve
26	282-27	1	Clevis
27	3220-2	1	Nut
28	321-11	2	Screw-HH
29	63-7960	1	Lift Valve
30	2412-58	1	Clamp
31	283-16	1	Pin-Clevis
32	76-4830-03	1	Rod-Valve
33	340-70	1	Locknut-Bulkhead
34	70-7530	1	Spring - Compression
36	3256-24	1	Washer-Flat
37	32105-8	1	Screw
38	233-39	2	Knob-Control
39	3256-26	2	Washer-Flat
40	82-8530	1	Fitting-HYD, Special
40:1	237-42	1	O-Ring
40:2	237-22	1	O-Ring
41	3234-13	1	Screw-HHF
42	66-2670	1	Bracket-Throttle
43	32128-33	1	Nut-HF
44	3296-39	1	Nut-Lock, NI

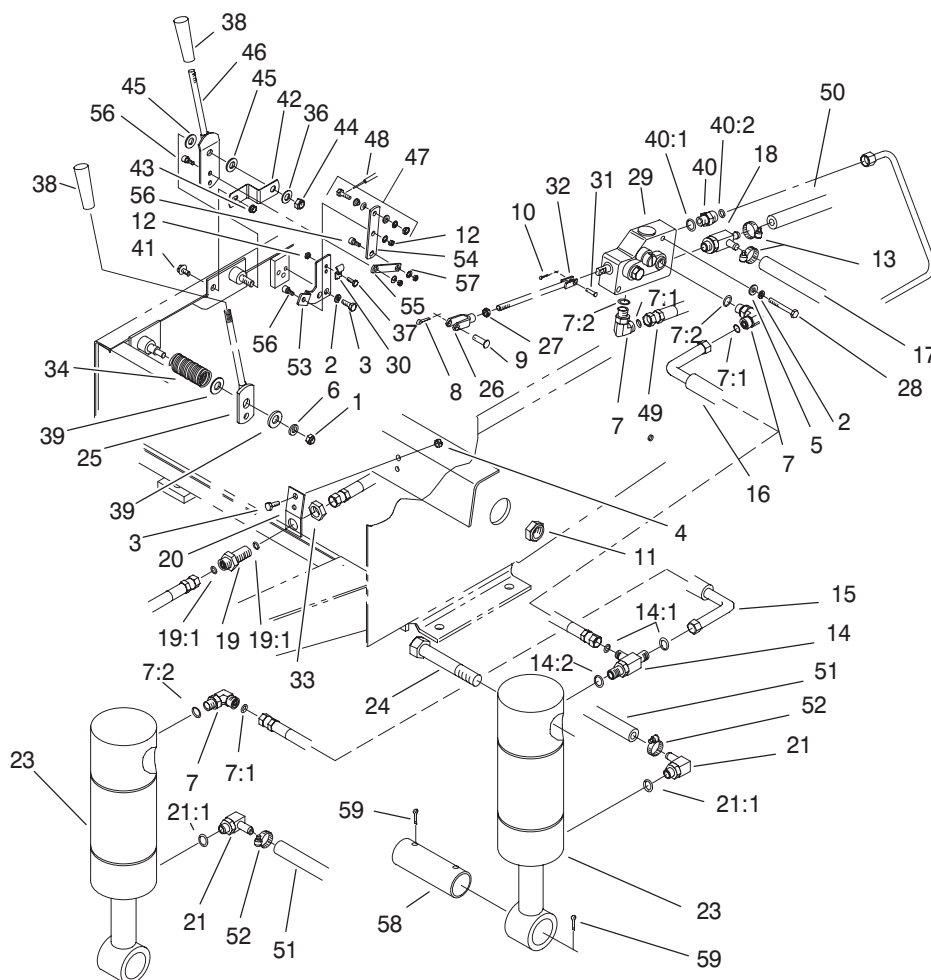


Sheet No.:8

Hydraulic Lift and Throttle Assembly (Continued)

Ref. No.	Part No.	Qty.	Description
45	66-2920	2	Washer-Friction
46	71-3500-03	1	Throttle Lever ASM
47	63-6760	1	Connector Fitting
48	94-9426	1	Cable - Throttle
49	66-8180	1	Hydraulic Hose ASM
50	66-8500	1	Hydraulic Hose ASM
51	92-5082	2	Hydraulic Hose
52	2412-108	2	Clamp-Worm
53	94-6968	1	Bracket-Bellcrank, Throttle
54	94-9421	1	Bellcrank-Throttle
55	94-9420	1	Link-Throttle
56	94-9422	3	Screw-Shoulder
57	3256-51	3	Washer-Flat
58	27-4240	2	Cylinder Pin
59	3272-23	4	Pin-Cotter

Ref. No.	Part No.	Qty.	Description

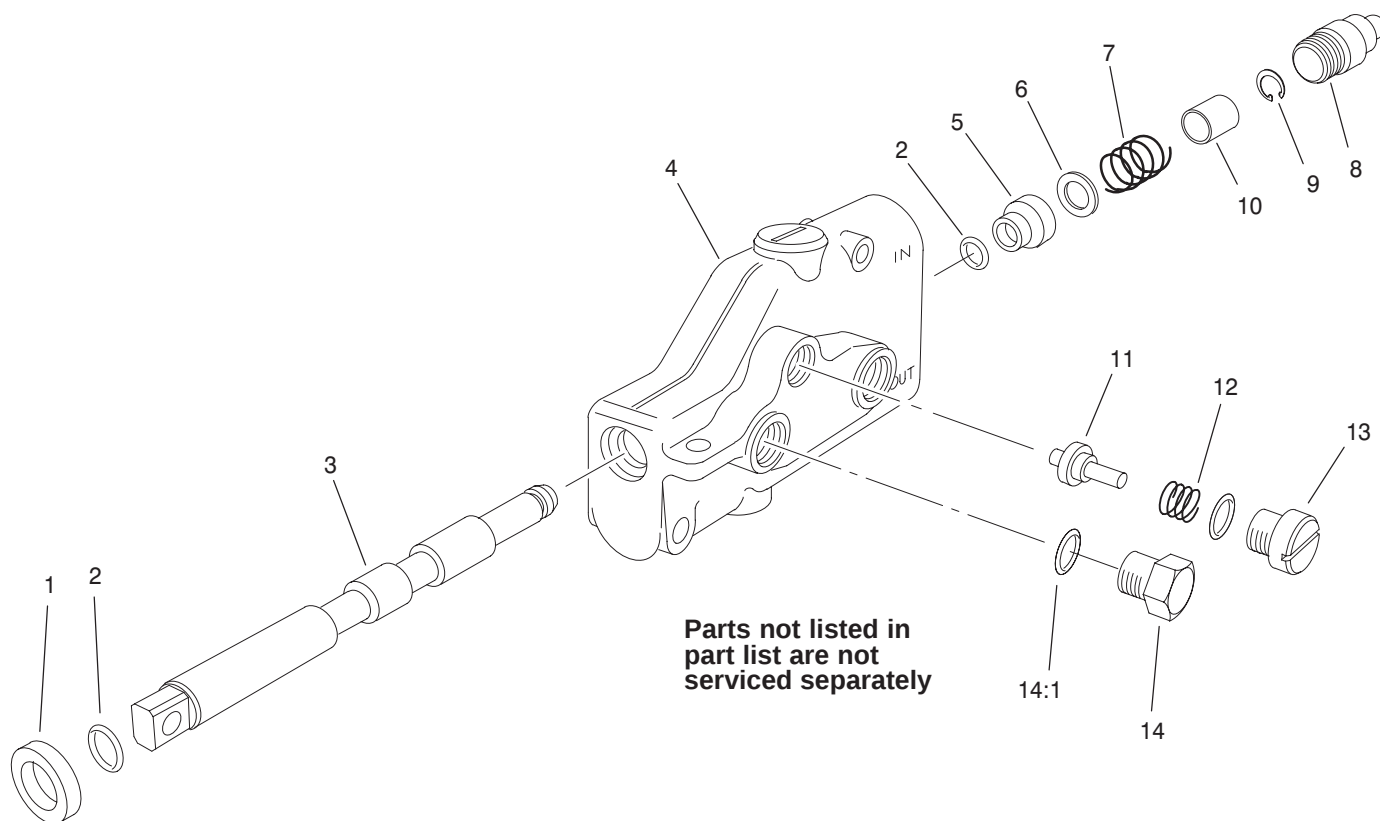


Sheet No.:A3

T-0532

Lift Valve Assembly No. 63-7960

Ref. No.	Part No.	Qty.	Description
1	58-6320	1	Wiper
2	58-6450	2	O-Ring
5	58-6400	1	Bushing
6	65-2770	1	Washer
7	65-2950	1	Spring
8	58-6420	1	Cap
9	58-6460	1	Ring
10	65-2740	1	Spacer
11	65-2750	1	Plunger
12	65-2760	1	Spring
13	65-2930	1	Plug ASM
14	353-508	1	Plug
14:1	237-42	1	O-Ring

Ref. No.	Part No.	Qty.	Description

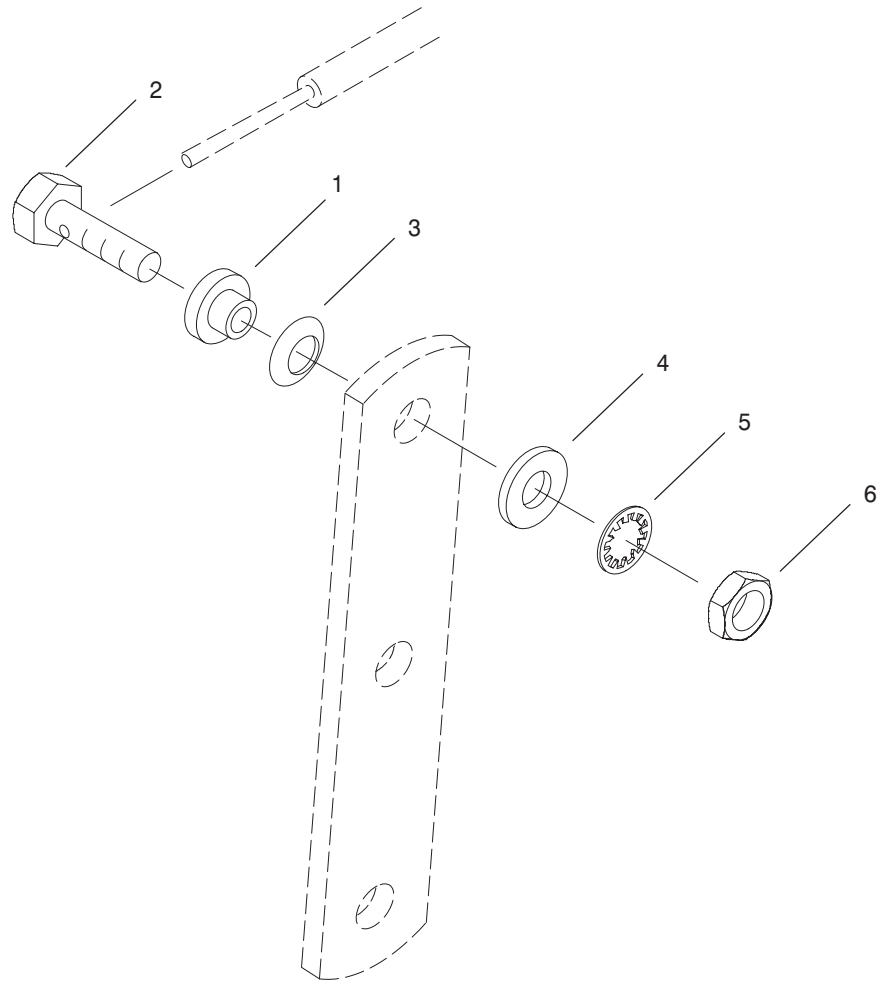


Sheet No.:A4

T-3791

Connector Fitting Assembly No. 63-6760

Ref. No.	Part No.	Qty.	Description
1	67-5100	1	Connector Sleeve
2	67-5110	1	Special Screw
3	67-5120	1	Spring Washer
4	67-5130	1	Flat Washer
5	67-5140	1	Internal Lockwasher
6	67-5150	1	Hex Nut

Ref. No.	Part No.	Qty.	Description

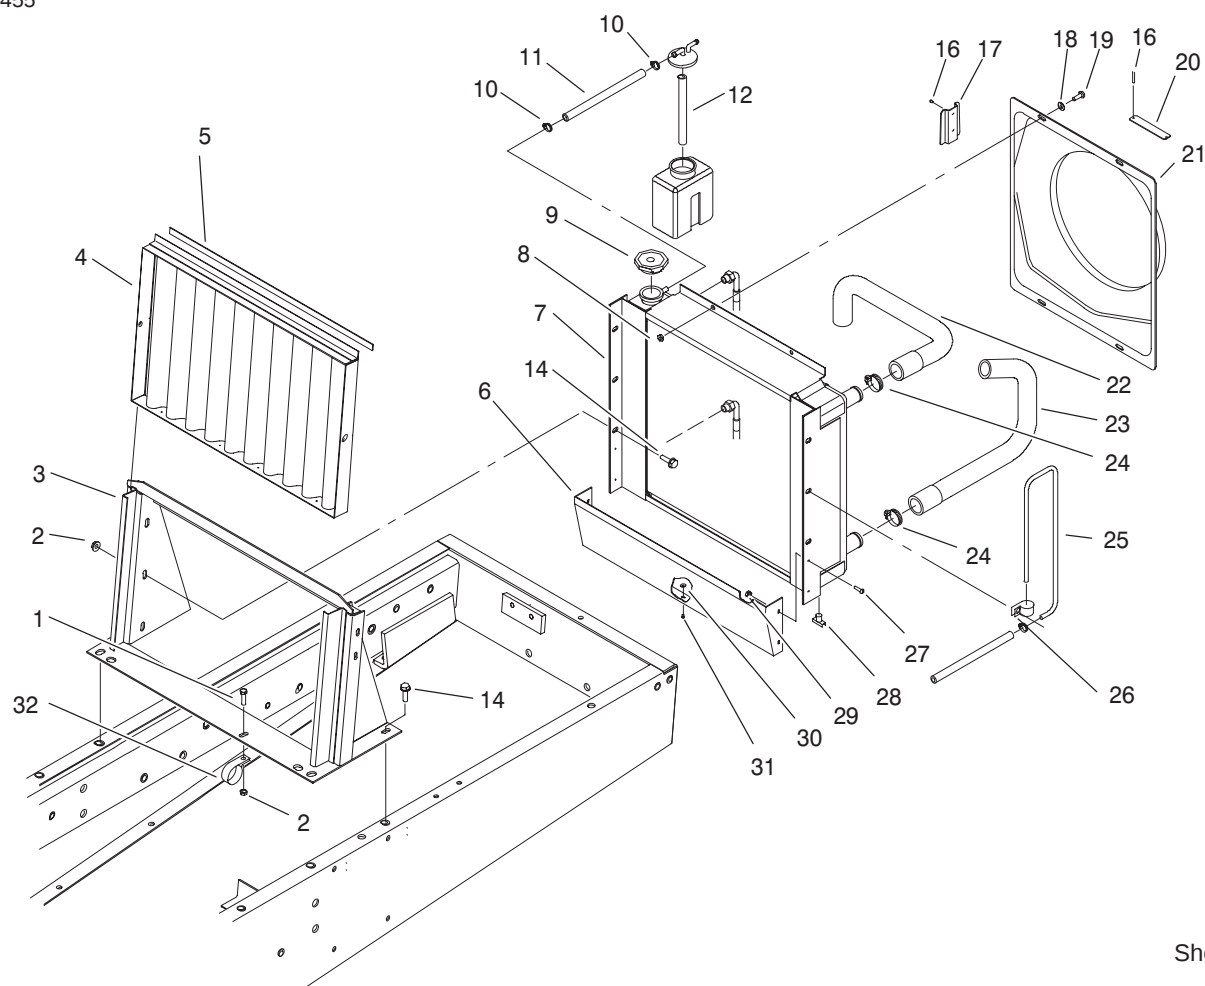


Sheet No.:9

Radiator Assembly

Ref. No.	Part No.	Qty.	Description
1	3234-17	1	Screw-HHF
2	32128-20	7	Nut-HF
3	92-5757-03	1	Support-Radiator
4	63-7700-03	1	Grill-Front
5	63-7710	1	Strip-Magnetic
6	63-6440-03	1	Shield-Radiator, Bottom
7	63-6150	1	Radiator ASM
8	3296-42	4	Nut-Lock, NI
9	66-3240	1	Cap-Radiator
10	2412-108	3	Clamp-Worm
11	93-2260	1	Hose-Expansion Tank
12	96-1215	1	Hose-Tank, Recovery
14	3234-5	8	Screw
16	3290-55	4	Rivet-Pop
17	94-7337	1	Bracket-Bottle, Overflow
18	3256-22	4	Washer-Flat
19	321-4	4	Screw-HH
20	76-8750	1	Plate-Warning
21	94-6750	1	Shroud-Fan
22	94-6756	1	Hose - Radiator
23	94-7421	1	Hose-Radiator, Lower
24	2412-34	4	Clamp-Hose
25	71-1540	1	Vent Tube
26	2412-103	2	Clamp

Ref. No.	Part No.	Qty.	Description
27	3249-3	2	Screw
28	304-46	1	Draincock
29	3217-29	2	Nut-Hex
30	3269-10	3	Washer-Back
31	3269-13	3	Rivet-Pop
32	2412-147	1	Clamp

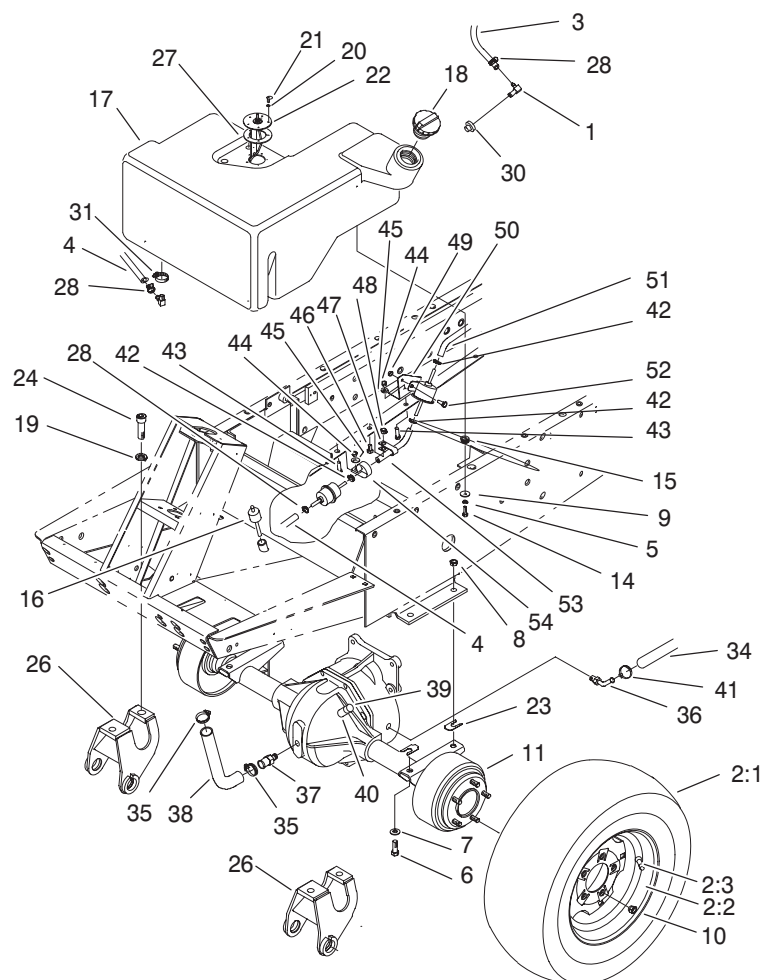


Sheet No.:10

Fuel Tank and Axle Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	94-6765	1	Fitting-90°, Barbed	26	98-2328-03	2	Bracket-Carrier
☆2		2	Tire ASM	27	62-7650	1	Gasket
2:1	95-3348	1	Tire	28	2412-108	3	Clamp-Worm
2:2	217-117	1	Wheel ASM	30	46-6560	1	Bushing
2:3	232-27	1	Stem-Valve	31	2412-36	1	Clamp-Hose
3	94-1349	1	Hose - Breather	34	92-5083	1	Hose-Hydraulic
4	63-7627	1	Hose-Fuel	35	2412-34	2	Clamp-Hose
5	3253-3	3	Washer-Lock	36	92-5088	1	Fitting-45°, Barbed
6	324-5	4	Screw-HH	37	354-71	1	Fitting-HYD, Barbed
7	3256-25	4	Washer-Flat	38	77-0550	1	Hose-Differential Fill
8	3296-48	4	Nut-Lock NI	39	2810-1	1	Coupling
9	3256-67	3	Washer-Flat	40	289-6	1	Nipple-Pipe
10	23-7270	10	Nut-Wheel	41	2412-119	1	Clamp-Worm
11	86-9640-03	1	Axle ASM	42	2412-98	3	Clamp
14	321-5	3	Screw-HH	43	321-6	2	Screw-HH
15	237-136	3	Grommet	44	3296-42	2	Nut-Lock, NI
16	66-3060	1	Dipstick	45	3256-22	2	Washer-Flat
17	98-5002	1	Tank - Fuel	46	322-5	1	Screw-HH
18	93-7170	1	Cap-Fuel	47	94-6821	1	Clamp - Wire
19	3253-8	4	Washer-Lock	48	32128-20	1	Nut-HF
20	3253-15	5	Washer-Lock/Sp	49	32128-14	2	Nut-HF
21	32122-24	5	Screw-Pth	50	95-0655	1	Bracket - Fuel Pump
22	63-7640	1	Sender-Fuel	51	94-7420	1	Hose-Fuel
23	42-6080	1	Shim-Axle	52	321-4	2	Screw-HH
24	3273-38	4	Screw-HSH	53	95-6269	1	Hose-Fuel

☆ Not serviced

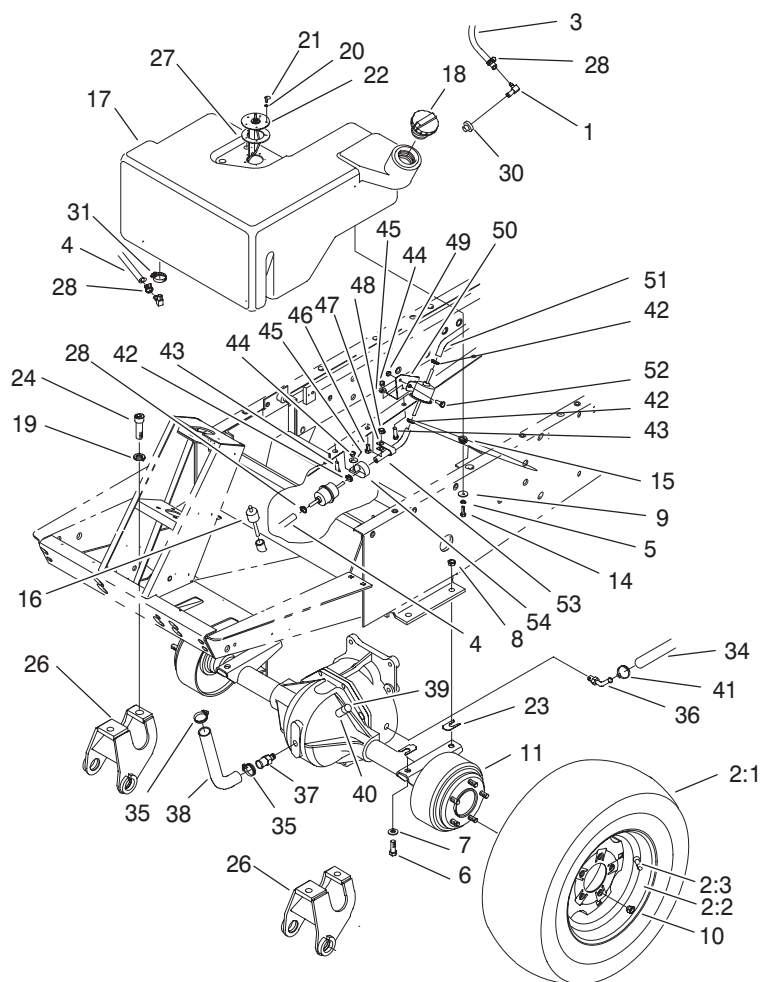


Sheet No.:10

Fuel Tank and Axle Assembly(Continued)

Ref. No.	Part No.	Qty.	Description
54	2412-147	1	Clamp

Ref. No.	Part No.	Qty.	Description

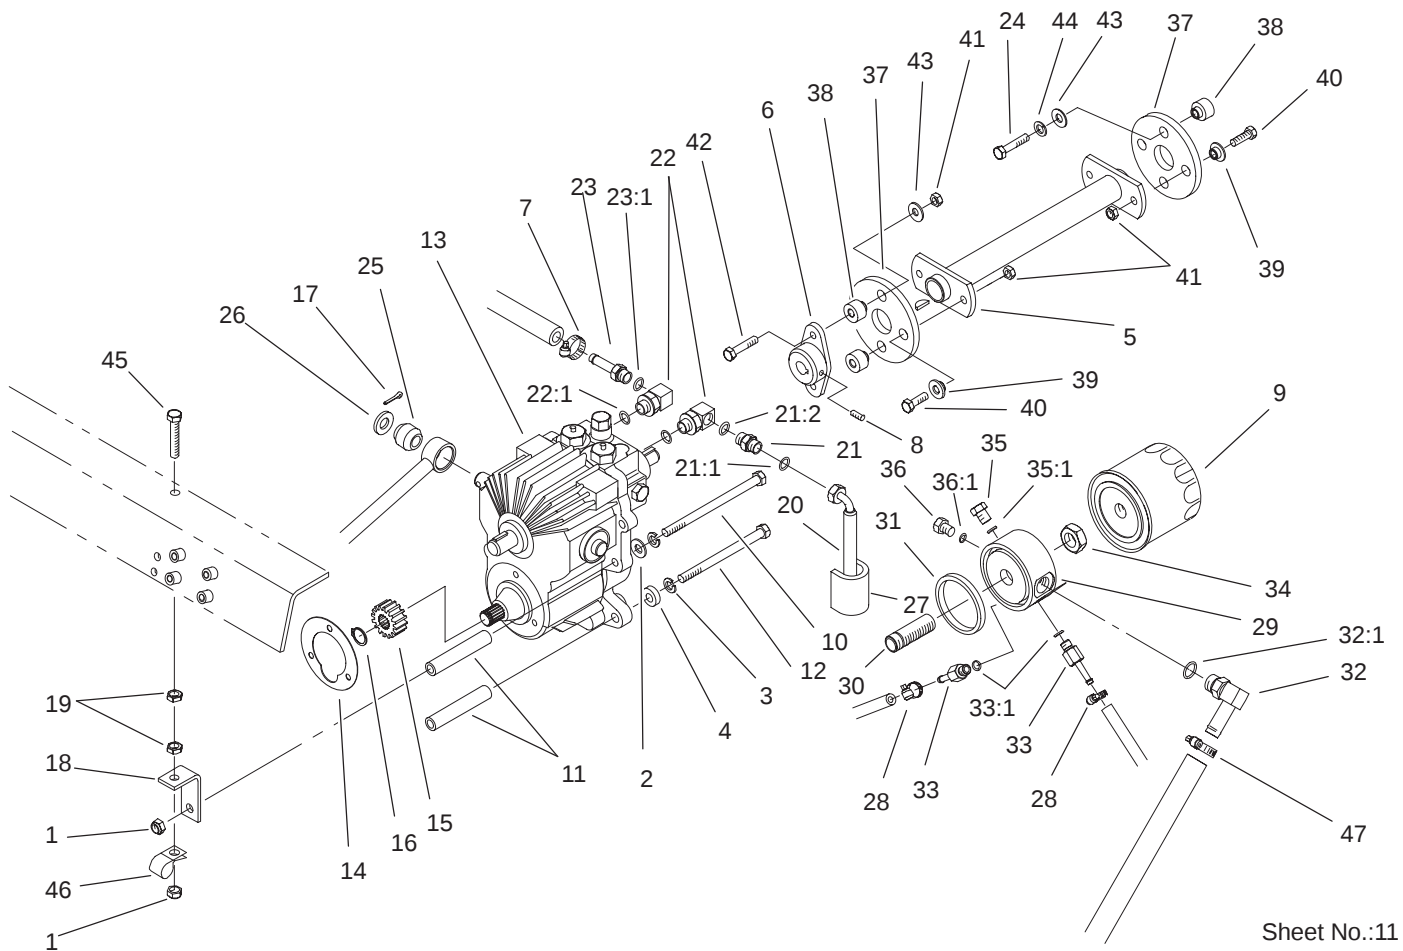


Sheet No.:11

Transmission and Drive Coupling Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-39	2	Nut-Lock, NI
2	3256-24	1	Washer-Flat
3	3253-21	4	Washer-Lock
4	5-0652	1	Spacer
5	94-9400-03	1	Drive Shaft
6	27-4370	1	Hub-Pump
7	2412-36	1	Clamp-Hose
8	3241-6	2	Screw-SQH
9	23-2300	1	Filter-Oil, Transmission
10	27-9620	1	Screw-HH
11	27-3680	4	Spacer-Mounting
12	323-39	3	Screw-HH
13	92-5513	1	Transmission
14	27-3690	1	Gasket-Transmission
15	86-7220	1	Gear-Pinion
16	32120-72	1	Ring-Snap
17	3272-10	1	Pin-Cotter
18	63-7170	1	Anchor-Transmission
19	3218-3	2	Nut-Jam
20	66-8490	1	Hose ASM-Hydraulic
21	82-8530	1	Fitting-HYD, Special
21:1	237-42	1	O-Ring
21:2	237-22	1	O-Ring
22	66-3110	2	Fitting-HYD, 90°
22:1	237-65	1	O-Ring


Ref. No.	Part No.	Qty.	Description
23	353-979	1	Fitting-Barb, Straight
23:1	237-42	1	O-Ring
24	33104-040	2	Screw-HHF
25	23-2270	1	Bushing-Rubber
26	3256-26	1	Washer-Flat
27	38-3400	1	Guard-Rubber
28	2412-108	2	Clamp-Worm
29	92-5076	1	Adapter - Filter
30	92-5085	1	Union - Filter
31	92-5087	1	Seal - Filter Adapter
32	92-5086	1	Fitting-HYD, 90°
32:1	237-79	1	O-Ring
33	92-5512	2	Fitting-Hose, Barbed
33:1	237-78	1	O-Ring
34	3220-7	1	Nut-Jam
35	353-990	1	Plug
35:1	237-78	1	O-Ring
36	353-988	1	Plug-Hex, Hollow
36:1	237-79	1	O-Ring
37	44-2230	2	Coupling-Rubber
38	27-6590	4	Spacer-Coupling, Rubber
39	27-6600	4	Spacer-Coupling
40	3210-5	4	Screw-HH
41	32152-5	6	Nut-Conelock
42	3210-8	2	Screw-HH

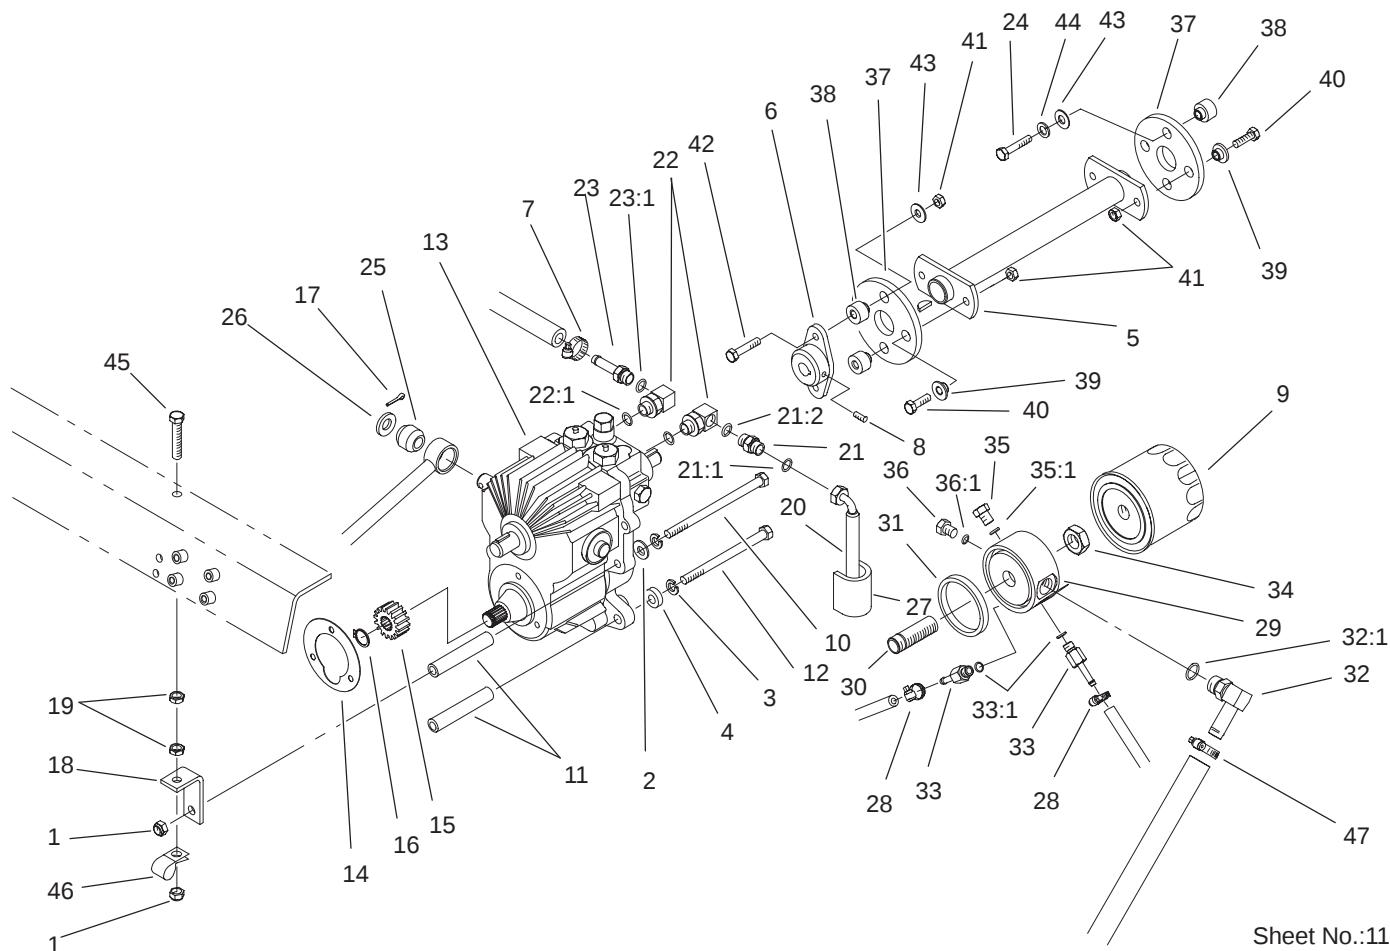

Transmission and Drive Coupling Assembly(Continued)

Ref. No.	Part No.	Qty.	Description
43	3256-71	4	Washer-Flat
44	42-9850	2	Washer-Lock, Spring
45	67-1900	1	Screw-HH
46	2412-4	1	Clamp
47	2412-119	1	Clamp-Worm


Ref. No.	Part No.	Qty.	Description

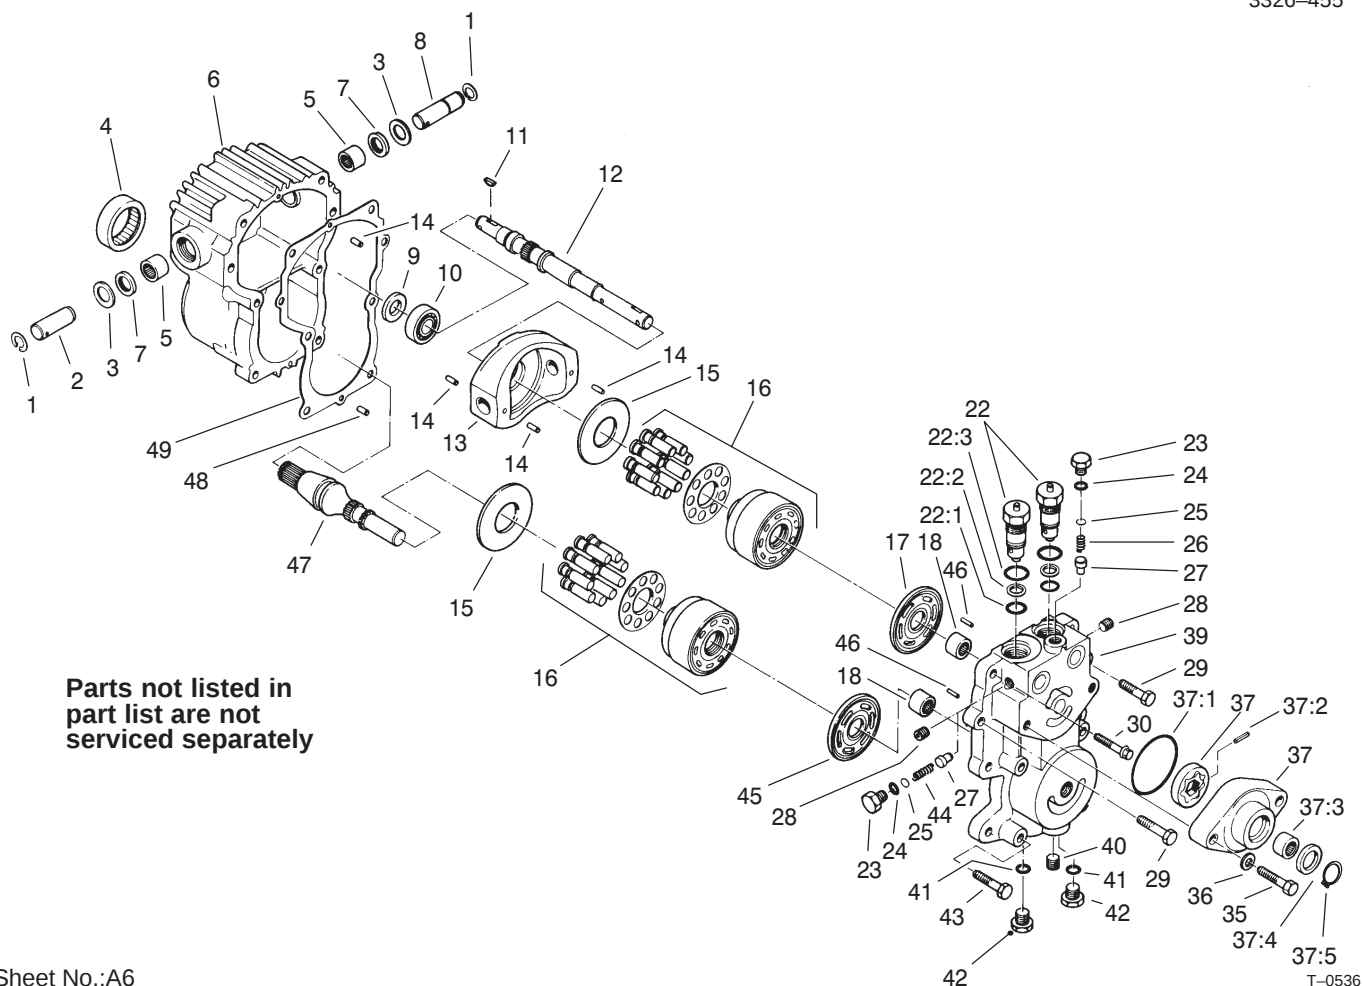

Sheet No.:A6

Transmission Assembly No. 92-5513

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	32151-46	2	Ring-Retaining	27	83-7260	2	Cone-Charge Relief
2	25-2500	1	Shaft-Trunnion	28	285-17	4	Plug-Pipe
3	25-2510	2	Washer-Flat	29	323-8	2	Screw-HH
4	28-3300	1	Bearing-Roller	30	28-3530	2	Capscrew
5	252-82	2	Bearing	34	94-2975	1	Seal - Shaft
6	92-5709	1	Housing-Transmission	35	324-23	2	Screw-HH
7	25-3210	2	Seal-Lip	36	28-3450	2	Washer
8	28-3670	1	Shaft-Trunnion	37	38-2670	1	Charge Pump Kit
9	93-4133	1	Seal-Lip	37:1	28-3520	1	O-Ring
10	28-3650	1	Bearing-Ball	37:2	38-2680	1	Pin
11	3257-5	2	Key-Woodruff	37:3	28-3480	1	Bearing
12	28-3640	1	Shaft-Pump	37:4	28-3470	1	Seal-Lip
13	49-7820	1	Swashplate-Variable	37:5	94-2976	1	Ring - Retaining
14	32121-91	3	Pin-Coil Spring	39	92-5716	1	Section-Center
15	25-2380	2	Plate-Thrust	40	92-5717	1	Plug- Pipe
16	48-1800	2	Kit-Cylinder Block	42	28-3440	2	Plug-Threaded
17	46-7320	1	Plate-Valve, Pump	43	323-10	4	Screw-HH
18	25-3300	2	Bearing-Needle	44	25-2480	1	Spring-Valve
22	49-7830	2	Check Valve Kit	45	28-3380	1	Plate-Valve, Motor
22:1	28-3590	2	O Ring	46	25-2430	2	Pin-Dowel
22:2	28-3580	2	Ring-Back Up	47	49-8200	1	Shaft-Motor
22:3	28-3570	2	O-Ring	48	353-599	2	Pin-Dowel
23	25-2460	2	Plug-HH	49	28-3340	1	Gasket
24	28-3400	2	O-Ring				
25	25-2470	1	Pack-Shim				
26	46-7310	1	Spring				

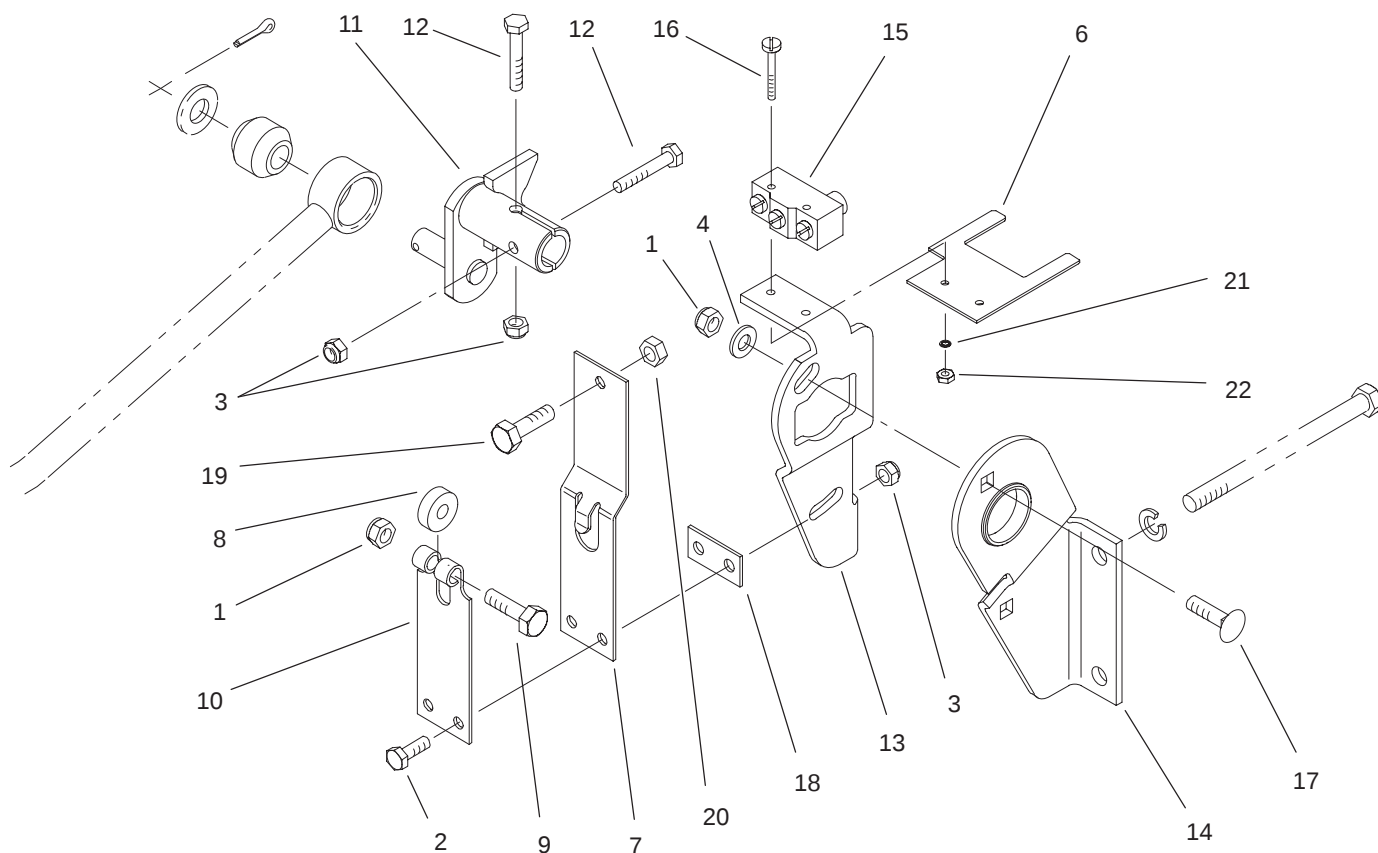


Sheet No.:12

Transmission Interlock Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	3	Nut-Lock
2	321-4	2	Screw-HH
3	3296-42	4	Nut-Lock, NI
4	3256-23	2	Washer-Flat
6	46-8810	1	Stop-Leaf Spring
7	29-6170	1	Leaf Spring ASM
8	251-259	1	Bearing
9	322-17	1	Screw-HH
10	29-6150	1	Spring-Leaf
11	29-9790-03	1	Lever-Pump
12	321-9	2	Screw-HH
13	52-9070	1	Plate-Pump
14	52-8890-03	1	Bracket-Mounting
15	29-6163	1	Switch-Micro
16	3249-11	2	Screw
17	3230-2	2	Screw-CARR
18	51-3150	1	Shim
19	3210-7	1	Screw-HH
20	3219-2	1	Nut-Hex
21	3254-9	2	Washer-Lock/Int
22	3217-16	2	Nut-Hex

Ref. No.	Part No.	Qty.	Description

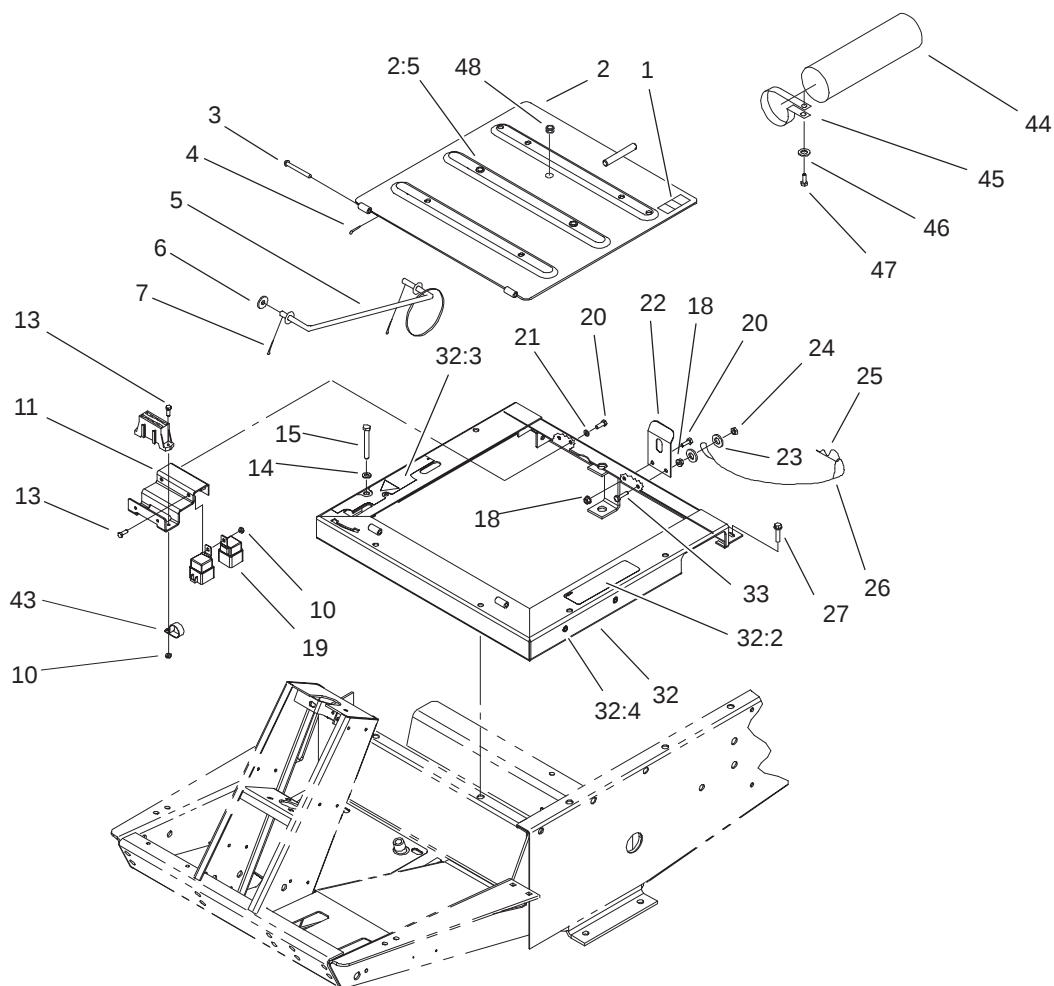


Sheet No.:13

Seat Frame Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
1	71-3730	1	Decal – Gas	32:2	67-1710	1	Decal-Warning
2	92-5759	1	Plate-Seat	32:3	93-7833	1	Decal-Throttle & Lift Control
2:5	32148-9	2	Nut-Insert	32:4	32148-6	4	Nut-Insert
3	283-49	2	Clevis Pin	33	321-6	1	Screw-HH
4	3272-4	2	Pin-Cotter	43	2412-106	1	Clamp-R
5	66-2800-03	1	Rod-Support	44	74-0720	1	Tube-Manual
6	3256-24	1	Washer-Flat	45	2412-133	2	R-Clamp
7	3272-11	2	Pin-Cotter	46	3256-23	2	Washer-Flat
10	3296-12	4	Nut-Lock	47	322-5	2	Screw-HH
11	105-0036	1	Bracket ASM-Fuse Block	48	240-5	1	Grommet
*11:2	32148-6	2	Nut-Insert				
13	32105-12	4	Screw				
14	3256-23	6	Washer-Flat				
15	322-13	6	Screw-HH				
18	32128-33	2	Nut-HF				
19	70-1480	4	Relay				
20	321-4	3	Screw-HH				
21	3253-3	2	Washer-Lock				
22	66-2630	1	Latch-Seat				
23	3256-22	2	Washer-Flat				
24	3296-42	1	Nut-Lock, NI				
25	3290-255	1	Pin-Hair				
26	28-8070	1	Lanyard				
27	3234-17	2	Screw-HHF				
32	92-8877	1	Seat Frame ASM				


* Not illustrated

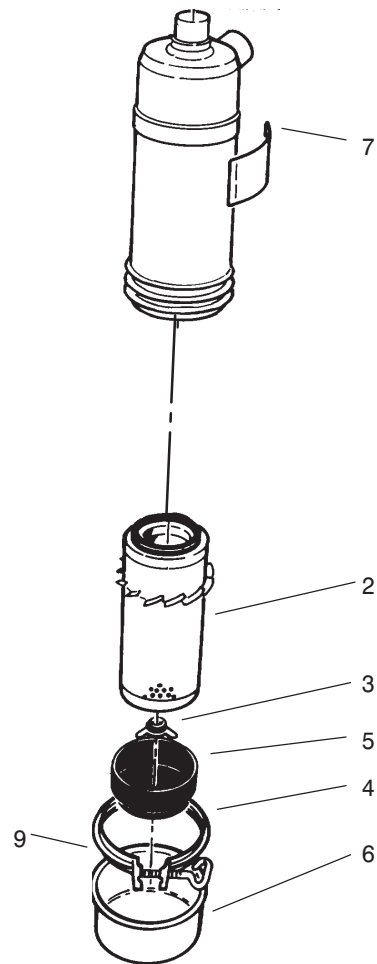

Sheet No.:A7
T-3786

Air Cleaner Assembly No. 27-7100

Ref. No.	Part No.	Qty.	Description
2	27-7110	1	Air Cleaner ASM
3	27-7120	1	Nut & Gasket ASM
4	27-7130	1	Clamp ASM
5	27-7140	1	Skirt-Baffle
6	27-7150	1	Cup ASM-A/C
7	27-7160	1	Decal-Installation
9	80-3330	1	Gasket

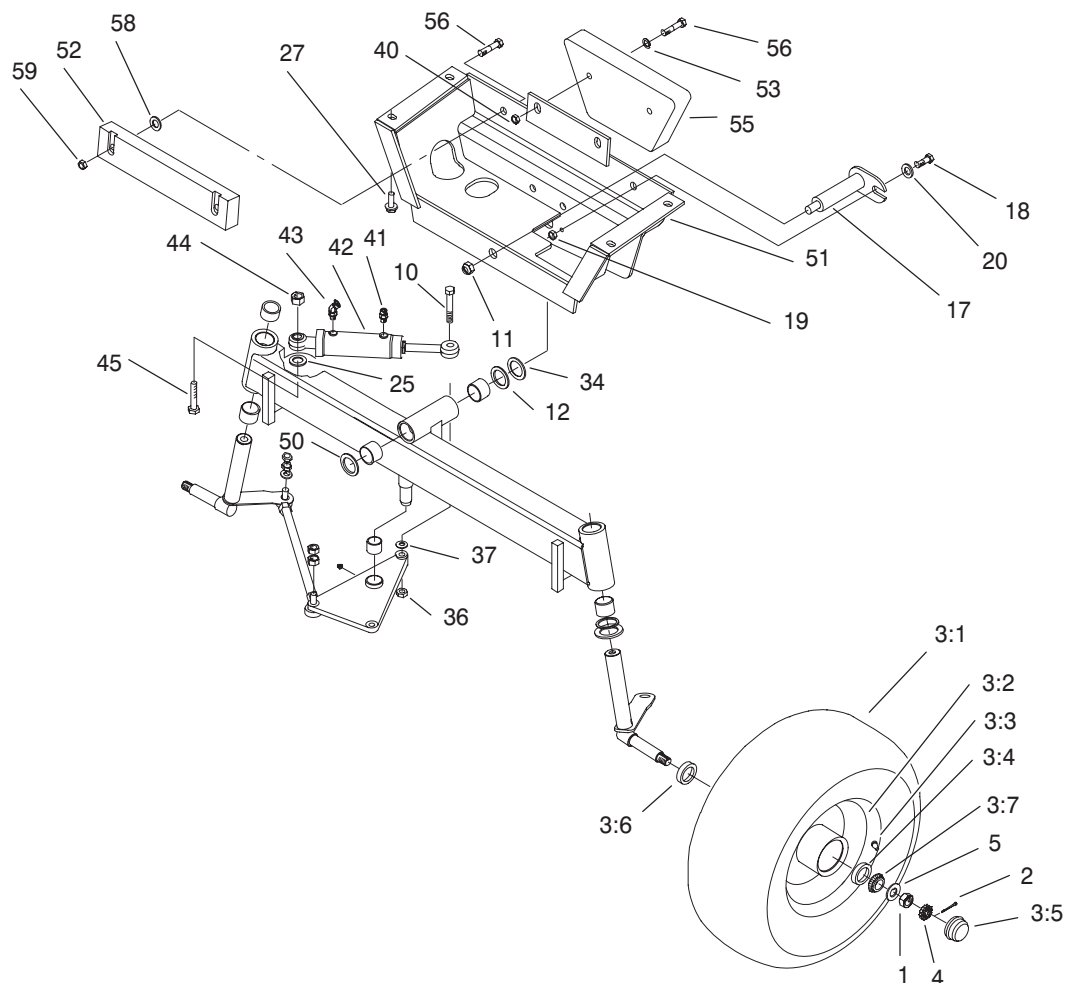


Sheet No.:15

Rear Axle Assembly

Ref. No.	Part No.	Qty.	Description
☆		1	Rear Axle ASM
1	3220-7	2	Nut-Jam
2	3272-13	2	Pin-Cotter
☆3		2	16" Wheel & Tire ASM
3:1	231-105	1	Tire
3:2	217-118	1	Rim
3:3	232-35	1	Valve Stem
3:4	254-72	2	Bearing-Taper, Cup
3:5	241-119	1	Cap-Dust
3:6	253-129	1	Seal
3:7	254-94	2	Bearing-Taper, Cone
4	93-0307	2	Nut-Retainer, Lock
5	93-0309	2	Washer-Tab
10	328-25	1	Screw-HH
11	3296-51	1	Nut-Lock, NI
12	10-8110	1	Washer-Thrust
17	63-6770-03	1	Pin-Masked
18	321-4	1	Screw-HH
19	3296-42	1	Nut-Lock, NI
20	3256-22	1	Washer-Flat
25	67-7250	1	Spacer-Ring
27	3234-25	4	Bolt-Flange
34	56-2460	1	Washer-Flat
36	32128-45	1	Locknut-Flange
37	67-9410	1	Washer
40	3296-25	2	Nut-Lock NI

Ref. No.	Part No.	Qty.	Description
41	340-92	1	Fitting-HYD, Straight
41:1	237-78	1	O-Ring
41:2	237-21	1	O-Ring
42	76-2070	1	Cylinder-Steering
43	340-103	1	Fitting-HYD, 45°
43:1	237-78	1	O-Ring
43:2	237-21	1	O-Ring
44	32153-6	1	Locknut
45	67-7300	1	Screw-HH
50	71-4540	1	Washer-Thrust
51	63-6430-03	1	Frame-Rear
52	92-8762-03	1	Weight - 20 Lb
53	3253-7	2	Washer-Lock
55	24-5790-01	1	Weight-Rear
56	325-9	4	Screw-HH
58	70-8040	2	Washer
59	3296-45	2	Nut-Lock, NI


☆ Not serviced

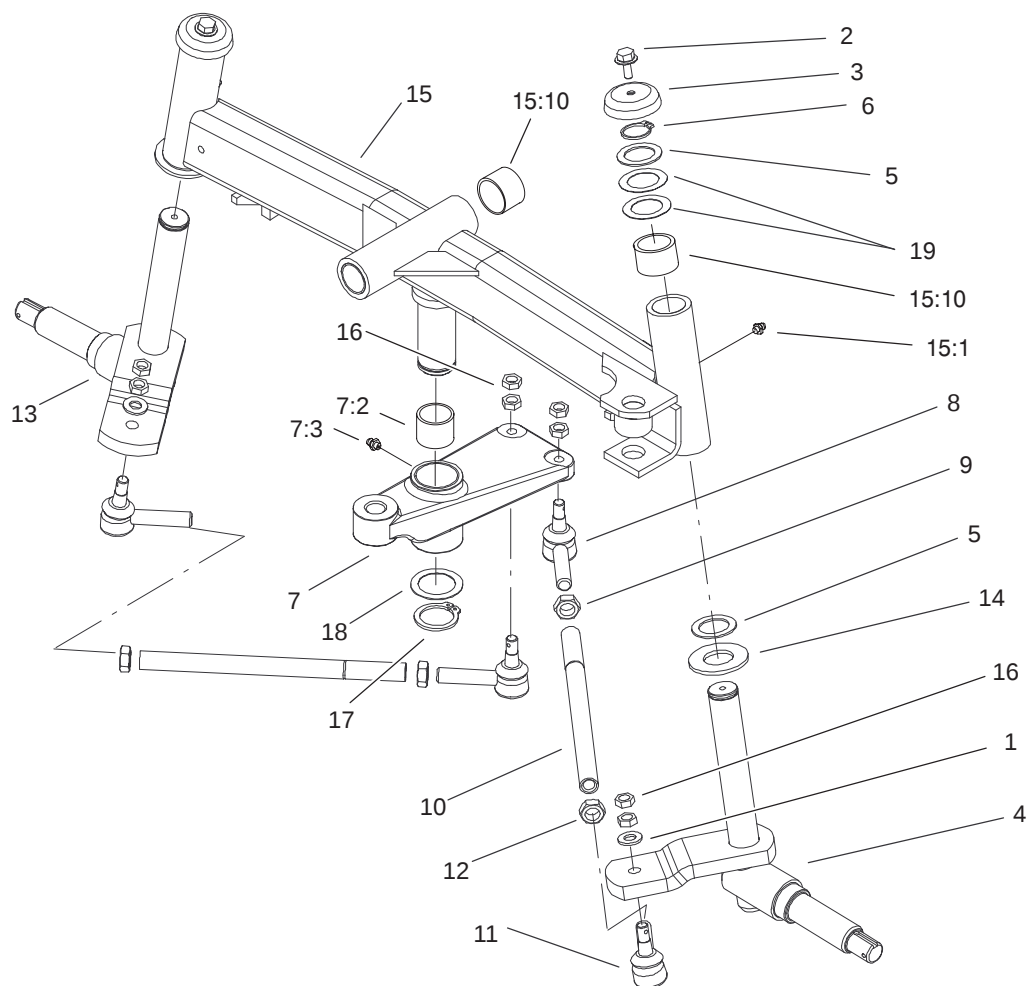

Sheet No.:A8

Axle Assembly

Ref. No.	Part No.	Qty.	Description
1	3256-24	2	Washer-Flat
2	3234-13	2	Screw-HHF
3	66-2990	2	Cap-Spindle
4	93-3196	1	Spindle ASM-RH
5	10-8110	4	Washer-Thrust
6	32151-36	2	Ring-Retaining
7	100-6598	1	Steering Pivot ASM
7:2	76-2970	2	Bushing-Straight
7:3	302-5	1	Fitting-Grease
8	21-0151	2	LH Ball Joint ASM
9	3220-12	2	Nut-Jam, LH Thread
10	63-6880	2	Tie Rod-Steering
11	21-0141	2	RH Ball Joint ASM
12	3220-5	2	Nut-HJ
13	93-3195	1	Spindle ASM-LH
14	256-121	2	Washer-Thrust
15	76-3000	1	Axle-Rear
15:1	302-5	3	Fitting-Grease
15:10	67-1750	6	Bushing
16	3220-3	8	Nut-Jam
17	32151-77	1	Ring-Retaining, Ext.
18	76-2980	1	Washer-Thrust
19	56-2460	4	Washer-Flat

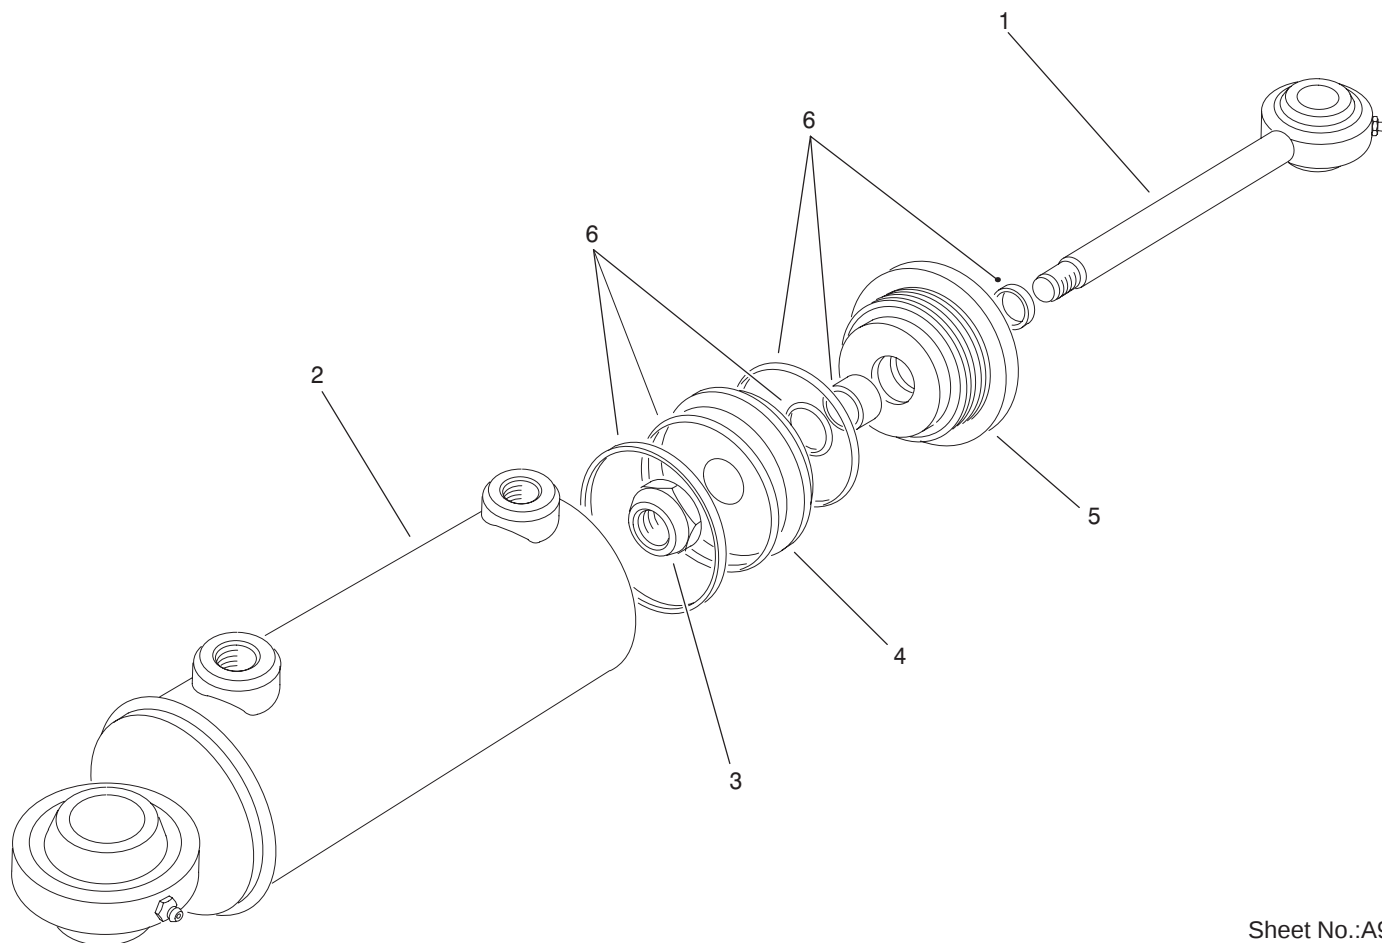


Sheet No.:A9

T-0541

Steering Cylinder Assembly No. 76-2070

Ref. No.	Part No.	Qty.	Description
1	76-2080	1	Piston Rod ASM
2	66-2770	1	Tube-Cylinder
3	66-1930	1	Locknut
4	66-1940	1	Piston
5	76-2790	1	Gland
6	76-2090	1	Seal Kit

Ref. No.	Part No.	Qty.	Description

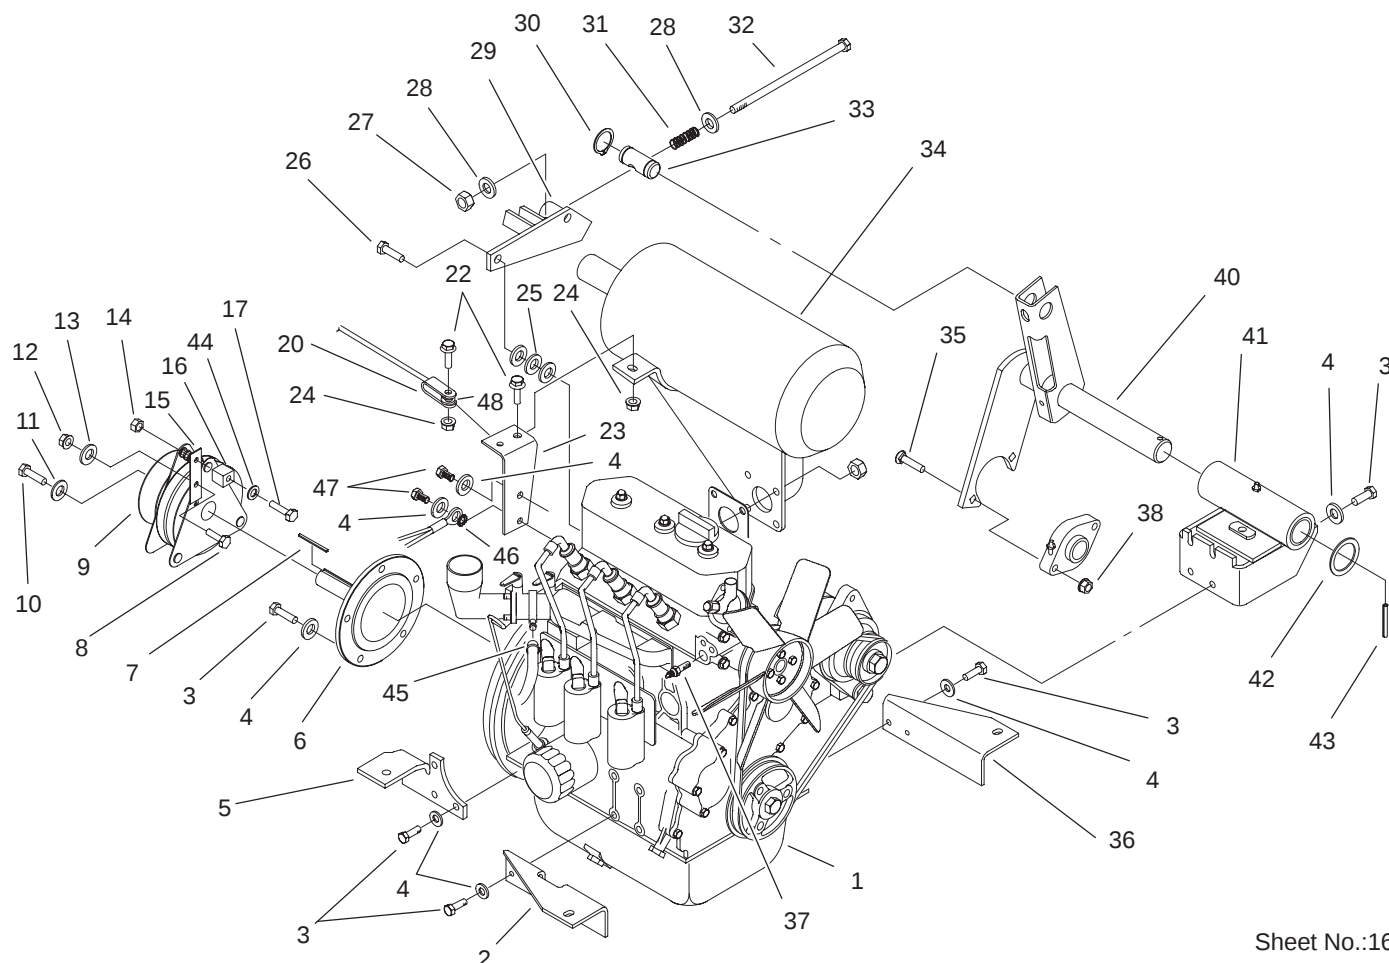


Sheet No.:16

Engine Installation Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
*1	99-9019	1	Manual-Owners, Engine	25	48-9580	3	Washer
1	99-8440	1	Engine-Briggs Diahatsu Dm950g	26	43-0090	2	Screw-HH
2	95-3300-03	1	Bracket-Mounting	27	32153-3	1	Nut-Lock
3	66-3160	16	Screw-Cap	28	4-2390	2	Washer-Flat
4	48-8030	18	Washer	29	94-7434-03	1	Bracket-Mounting
5	94-7416-03	1	Bracket-Mounting	30	32151-83	2	Ring-Snap
6	94-7430	1	Hub-Clutch	31	3-6624	1	Spring-Compression
7	18-6430	1	Key-Square	32	94-7431	1	Bolt-HH
8	323-34	1	Screw-HH	33	63-6290	1	Pin-PTO Tension
9	100-6565	1	Electric Clutch/Brake ASM	34	94-6412	1	Muffler-Exhaust
10	3212-5	1	Screw-HH	35	3230-4	2	Screw-CARR
11	105-3698	1	Spacer	36	95-3097-03	1	Bracket-Mounting
12	3296-59	1	Nut-Lock NI	37	94-7621	1	Sender - Temperature
13	3256-24	2	Washer-Flat	38	32149-1	2	Nut
14	32153-4	1	Locknut	40	63-6250-03	1	Shaft-PTO Tension
15	94-7438	1	Anchor-Lever, Clutch	41	94-7344	1	Pivot Plate ASM
16	95-6328	1	Bumper - Electric Clutch	42	3-4324	1	Washer-Flat
17	321-8	1	Screw-HH	43	32121-32	1	Pin-Roll
20	66-2870	1	Cable-Hood Stop	44	3256-60	1	Washer-Flat
22	3234-29	2	Screw-HHF	45	2412-98	1	Clamp
23	94-7433-03	1	Support-Muffler	46	3255-8	1	Washer-Lock/Ext
24	32128-20	2	Nut-HF	47	33114-016	2	Screw-HH
				48	3256-23	2	Washer-Flat

* Not illustrated

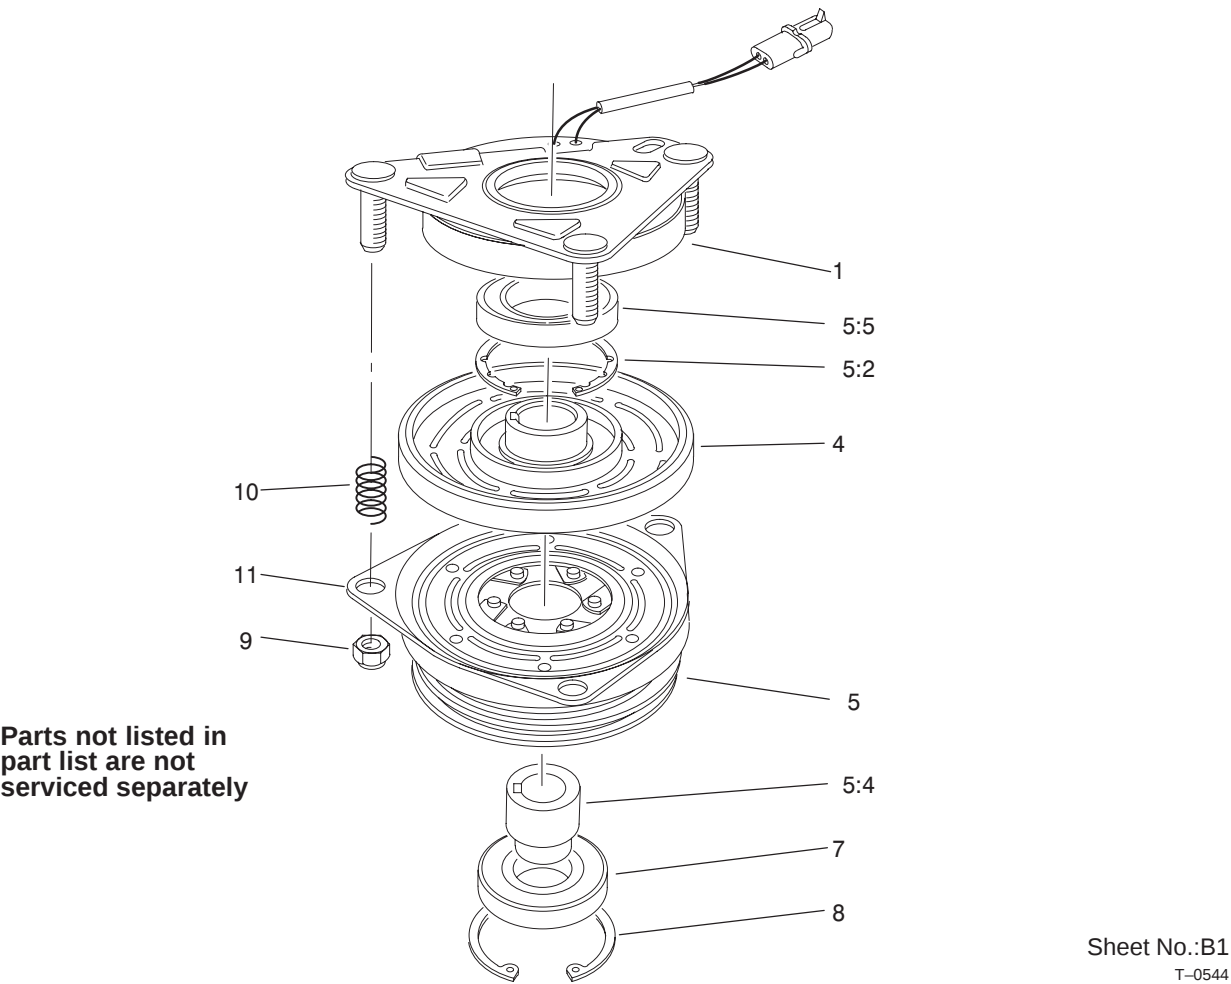

Electric Clutch/Brake Assembly No. 100-6565

Ref. No.	Part No.	Qty.	Description
1	100-6563	1	Field & Rotor ASM
5	67-7070	1	Armature & Pulley ASM
5:2	67-7060	1	Ring-Retaining
5:4	67-7080	1	Sleeve-Bearing, Armature
5:5	67-7090	1	Bearing-Armature
7	67-7090	1	Bearing-Armature
8	67-7060	1	Ring-Retaining
9	3296-6	3	Nut-Lock, NI
10	44-8320	3	Spring
11	67-7100	1	Plate-Brake


Ref. No.	Part No.	Qty.	Description



Electrical Schematic(Continued)

Ref. No.	Part No.	Qty.	Description
1	105-2529	1	Harness-Wire,Main Gm225
2	105-0024	1	Harness-Wire, Gauges
3	105-0025	1	Harness-Wire, Seat
4	218-581	1	Fuse - 15 Amp, 32 Volt
5	218-574	2	Fuse 7.5 Amp,Blade Style
6	219-17	4	Bulb
7	99-3441	1	Harness-Wire, Fusible Link
8	100-4918	3	Diode

Ref. No.	Part No.	Qty.	Description

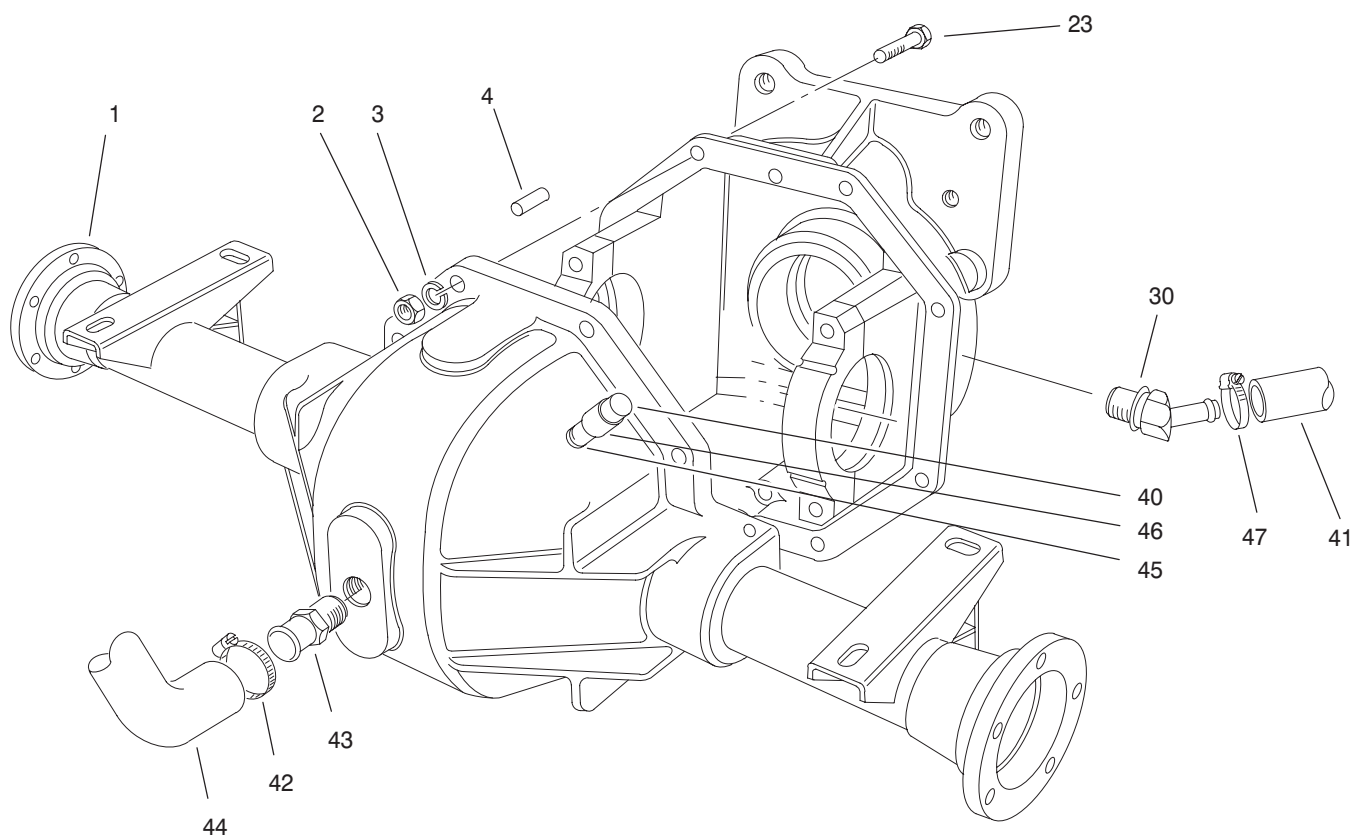

Sheet No.:1


T-3792

Differential Assembly

Ref. No.	Part No.	Qty.	Description
1	63-8090-03	1	Lower Housing ASM
2	3219-2	8	Nut-Hex
3	3255-8	8	Washer-Lock/Ext
4	21-8270	2	Pin-Dowel
23	3210-7	8	Screw-HH
30	92-5088	1	Fitting-45°, Barbed
40	72-9420	1	Vent
41	92-5083	1	Hose-Hydraulic
42	2412-34	2	Clamp-Hose
43	354-71	1	Fitting-HYD, Barbed
44	77-0550	1	Hose-Differential Fill
45	289-6	1	Nipple-Pipe
46	2810-1	1	Coupling
47	2412-119	1	Clamp-Hose
*49	92-4909	1	Differential Carrier ASM

Ref. No.	Part No.	Qty.	Description

* Not illustrated

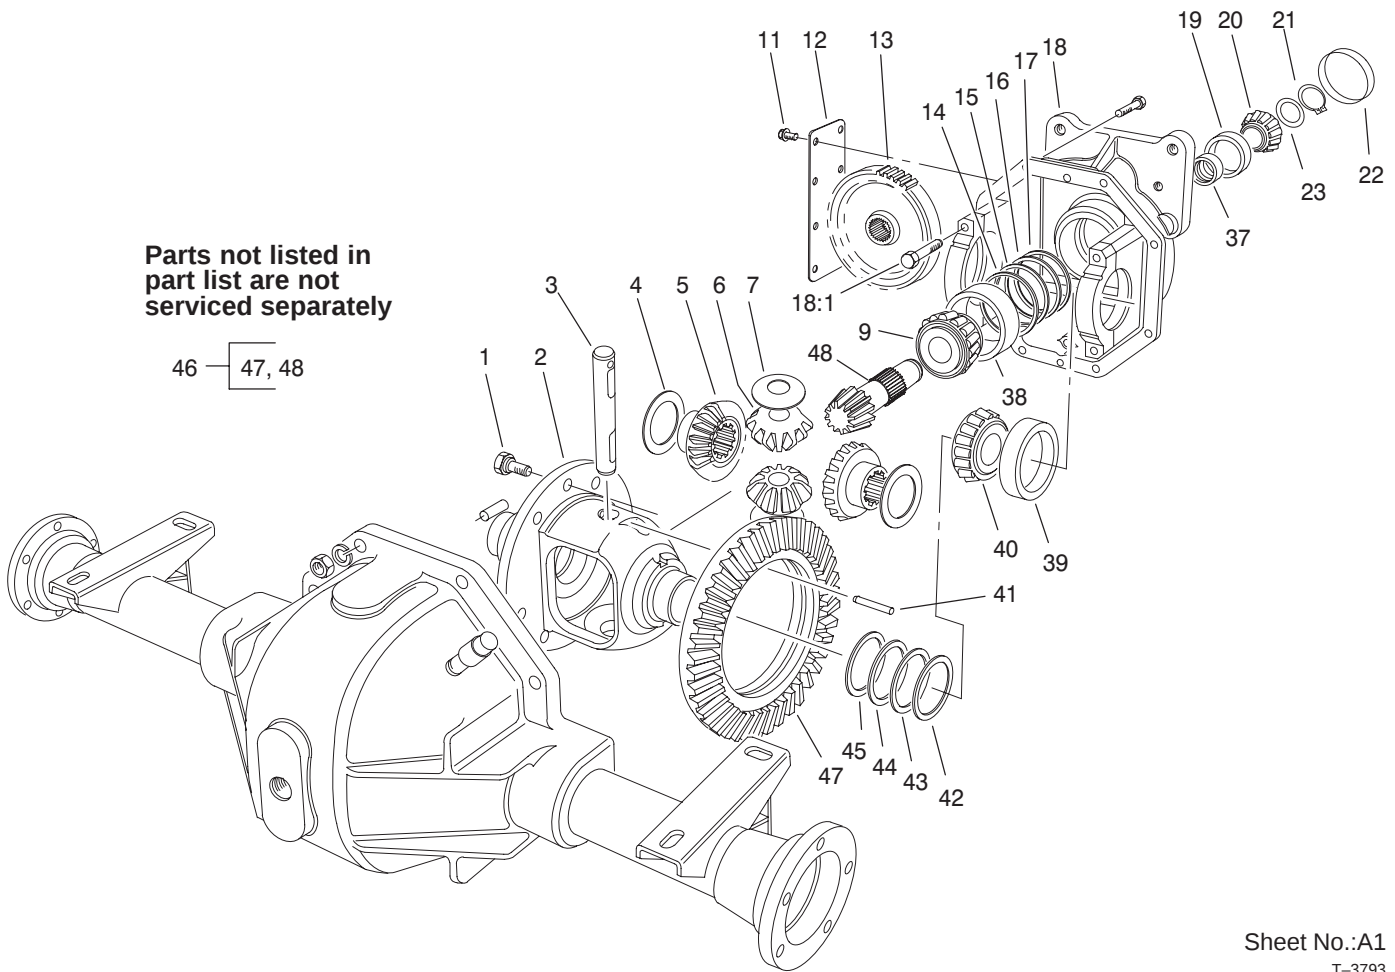

Sheet No.:A1


T-3793

Differential Carrier Assembly No. 92-4909

Ref. No.	Part No.	Qty.	Description
1	21-7770	5	Screw—Gear, Drive
2	21-7670	1	Case—Differential
3	21-7700	1	Shaft—Pinion Mate
4	21-7720	2	Washer—Thrust
5	24-8790	2	Gear—Differential
6	21-7690	2	Pinion—Differential
7	21-7730	2	Washer—Thrust, Pinion
9	43-6760	1	Bearing—Roller, Cone Taper
11	12-5450	8	Screw
12	21-7830	1	Cover—Gear
13	86-7230	1	Gear—Input, Transmission
14	43-6710	1	Shim
15	43-6711	1	Shim
16	43-6712	1	Shim
17	43-6713	1	Shim
18	86-7930	1	Upper Housing ASM
18:1	92-1773	4	Screw—HHF
19	254-90	1	Bearing—Cup
20	254-91	1	Cone—Bearing
21	43-6550	1	Ring—Snap
22	21-7850	1	Cup Plug
23	46-2210	1	Shim—Front Bearing, .031

Ref. No.	Part No.	Qty.	Description
*24	46-2211	1	Shim—Front Bearing, .033
*25	46-2212	1	Shim—Front Bearing, .035
*26	46-2213	1	Shim—Front Bearing, .037
*27	46-2214	1	Shim—Front Bearing, .039
*28	46-2215	1	Shim—Front Bearing, .041
*29	46-2216	1	Shim—Front Bearing, .043
*30	46-2220	1	Shim—Front Bearing, .045
*31	46-2221	1	Shim—Front Bearing, .047
*32	46-2222	1	Shim—Front Bearing, .049
*33	46-2223	1	Shim—Front Bearing, .051
*34	46-2224	1	Shim—Front Bearing, .053
*35	46-2225	1	Shim—Front Bearing, .055

* Not illustrated

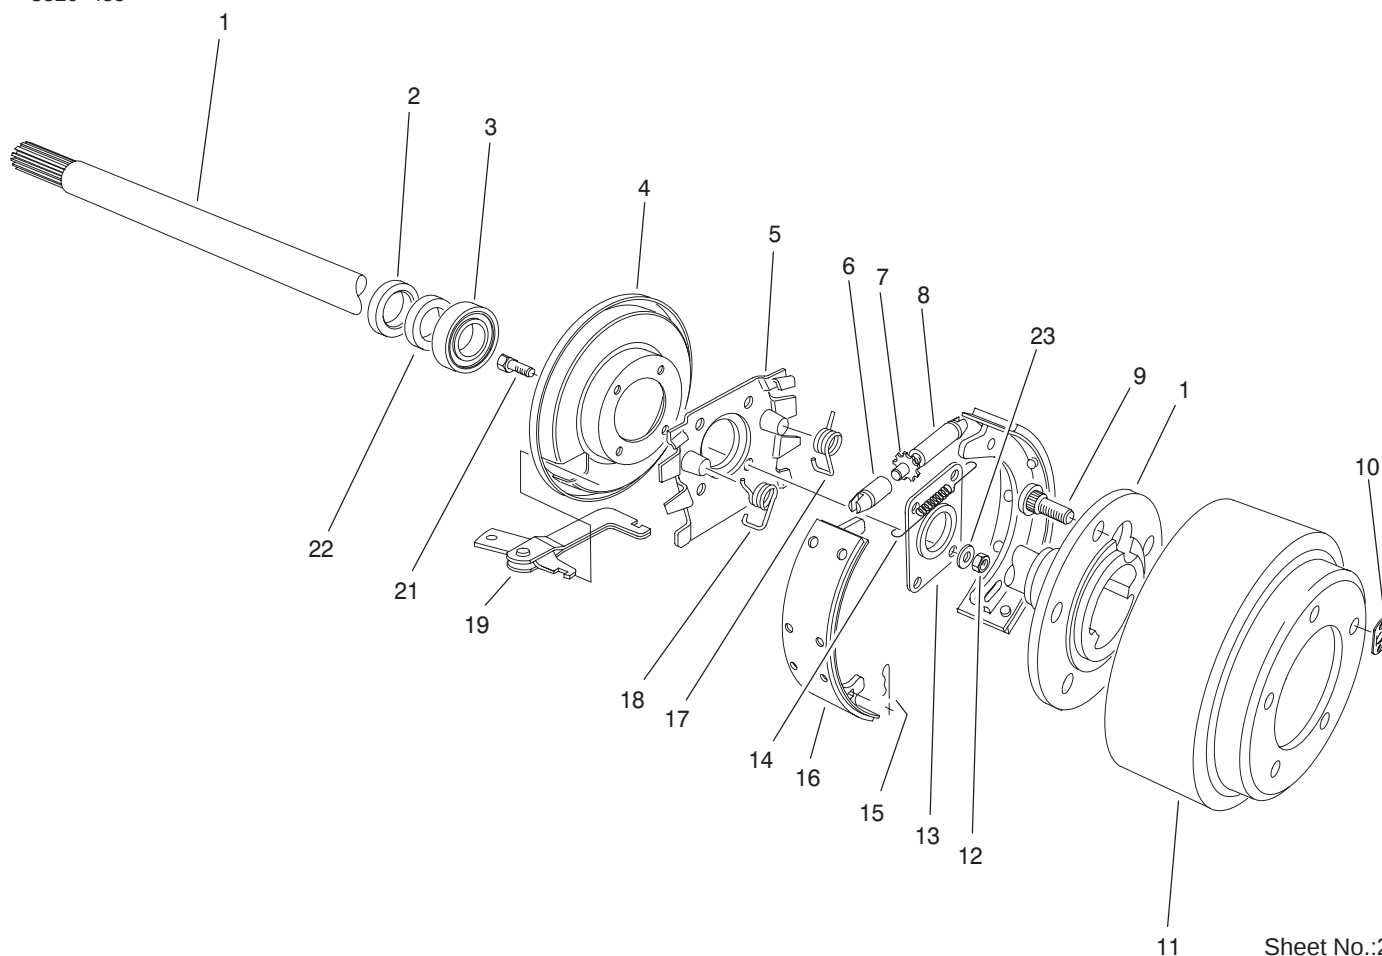

Sheet No.:2

T-2664


Brake Assembly


Ref. No.	Part No.	Qty.	Description
*1	27-6851	1	Flanged Axle Shaft RH
1	27-6861	1	Flanged Axle Shaft LH
2	92-1774	2	Seal-Oil
3	21-8180	2	Bearing ASM
4	21-9450	2	Shield-Dust
5	43-6810	2	Spider-Torque
6	21-9390	2	Socket-Adjusting, Screw
7	21-9370	2	Screw-Adjusting
8	21-9380	2	Nut-Pivot
9	242-34	10	Stud-Drive
10	21-8360	2	Locknut
11	28-0680	2	Drum-Brake
12	94-6935	8	Locknut
13	28-0670	2	Seal-Grease
14	21-9440	2	Spring-Adjusting Screw
15	21-9460	4	Retainer-Lever, Brake
16	84-8600	1	Shoe-Brake
17	21-9430	2	Spring-Shoe Return, RH
18	21-9420	2	Spring-Return, Shoe
19	24-9180	2	Strut And Lever ASM
21	94-6934	8	Screw-Brake
22	24-8840	2	Ring-Retaining, Wheel Bearing

Ref. No.	Part No.	Qty.	Description
23	94-6936	8	Washer - Hardened
*24	92-8775	1	Kit-Liquid Gasket

* Not illustrated

Hydraulic Schematic

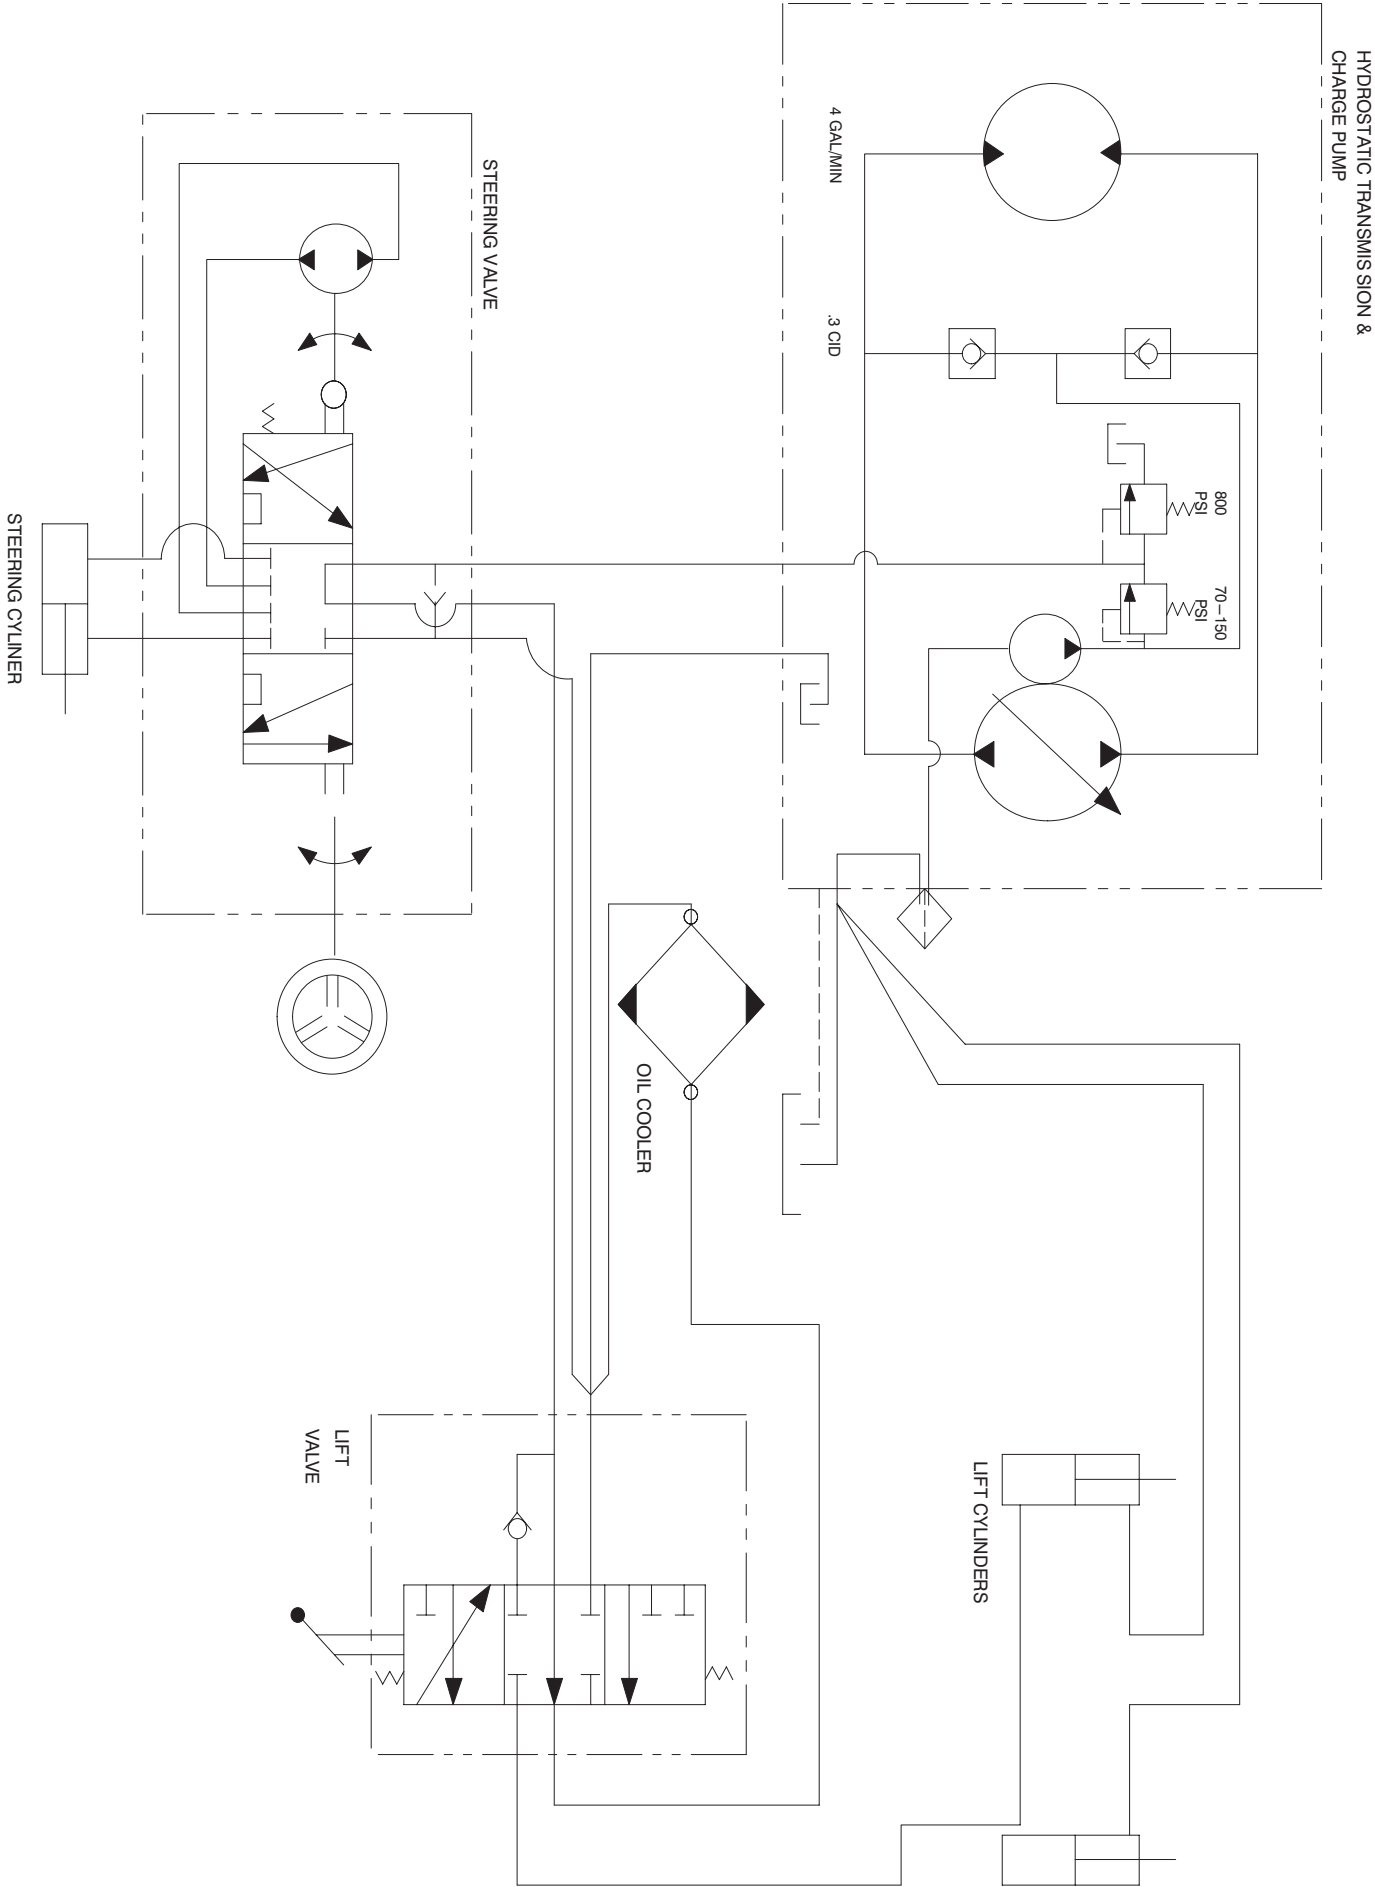

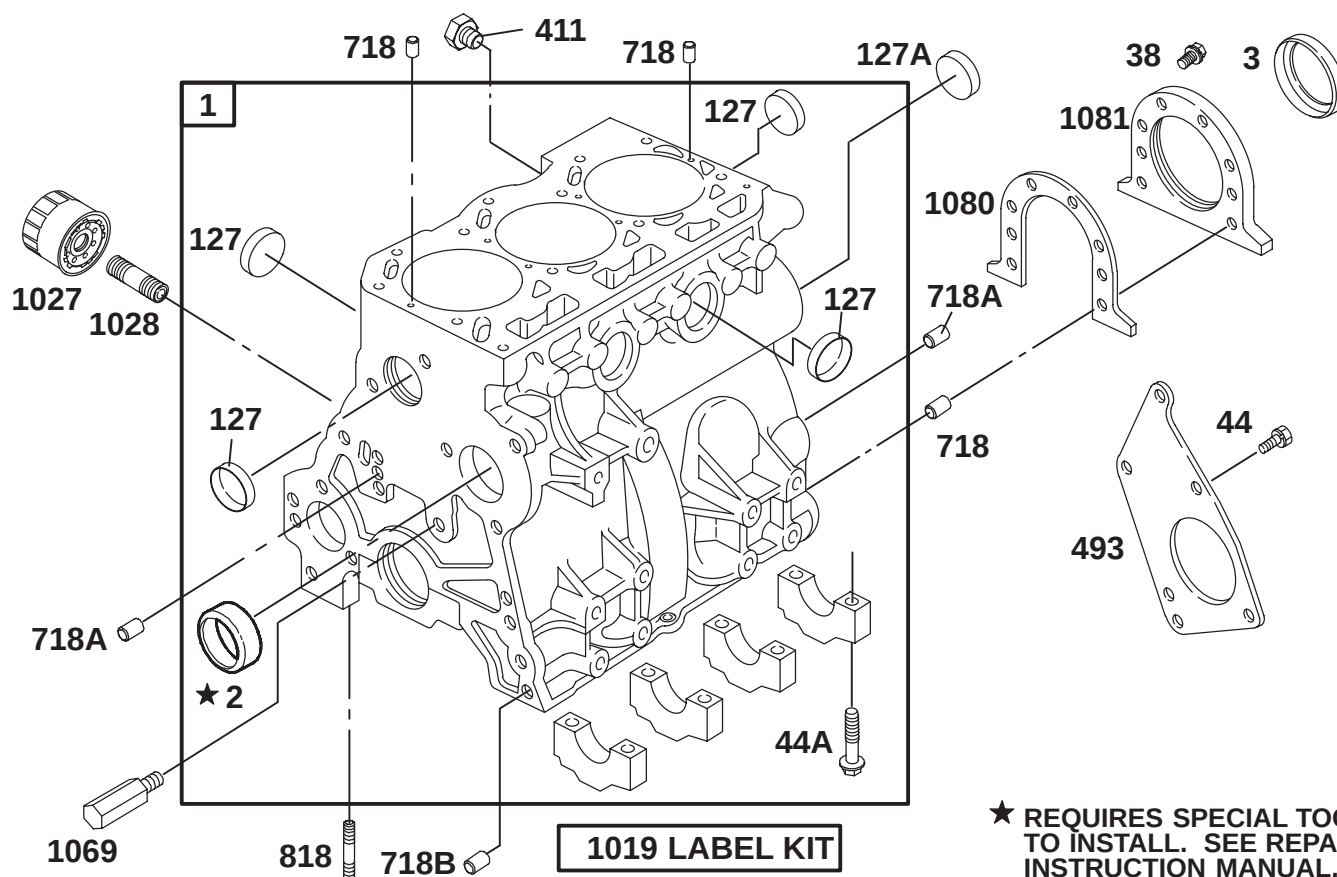


★ REQUIRES SPECIAL TOOLS
TO INSTALL. SEE REPAIR
INSTRUCTION MANUAL.

Sheet No.: 3

Cylinder Assembly

Ref. No.	Part No.	Qty.	Description
1	99-9251	1	ASM-Cylinder
2	99-9002	1	Bushing
3	99-9003	1	Seal-Oil
38	99-9004	6	Screw-Hex
44	99-9005	3	Screw-Hex
44A	99-9006	8	Screw-Hex
127	99-9008	7	Plug-Welch
127A	99-9009	1	Plug-Welch
411	99-9010	1	Plug-Welch (Camshaft)
493	99-9011	1	Bracket-Mounting
718	99-9012	4	Pin-Locating
718A	99-9013	3	Pin-Locating
718B	99-9014	2	Pin-Locating
818	99-9007	2	Stud-Metric
1019	99-9015	1	Label Kit
1027	99-9017	1	Filter-Oil
1027	99-9016	1	Filter-Oil
1028	99-9018	1	Adapter-Oil Filter
1069	99-9020	1	Nozzle-Oil
1080	99-9021	1	Gasket-Retainer
1081	99-9022	1	Retainer-Seal


Ref. No.	Part No.	Qty.	Description

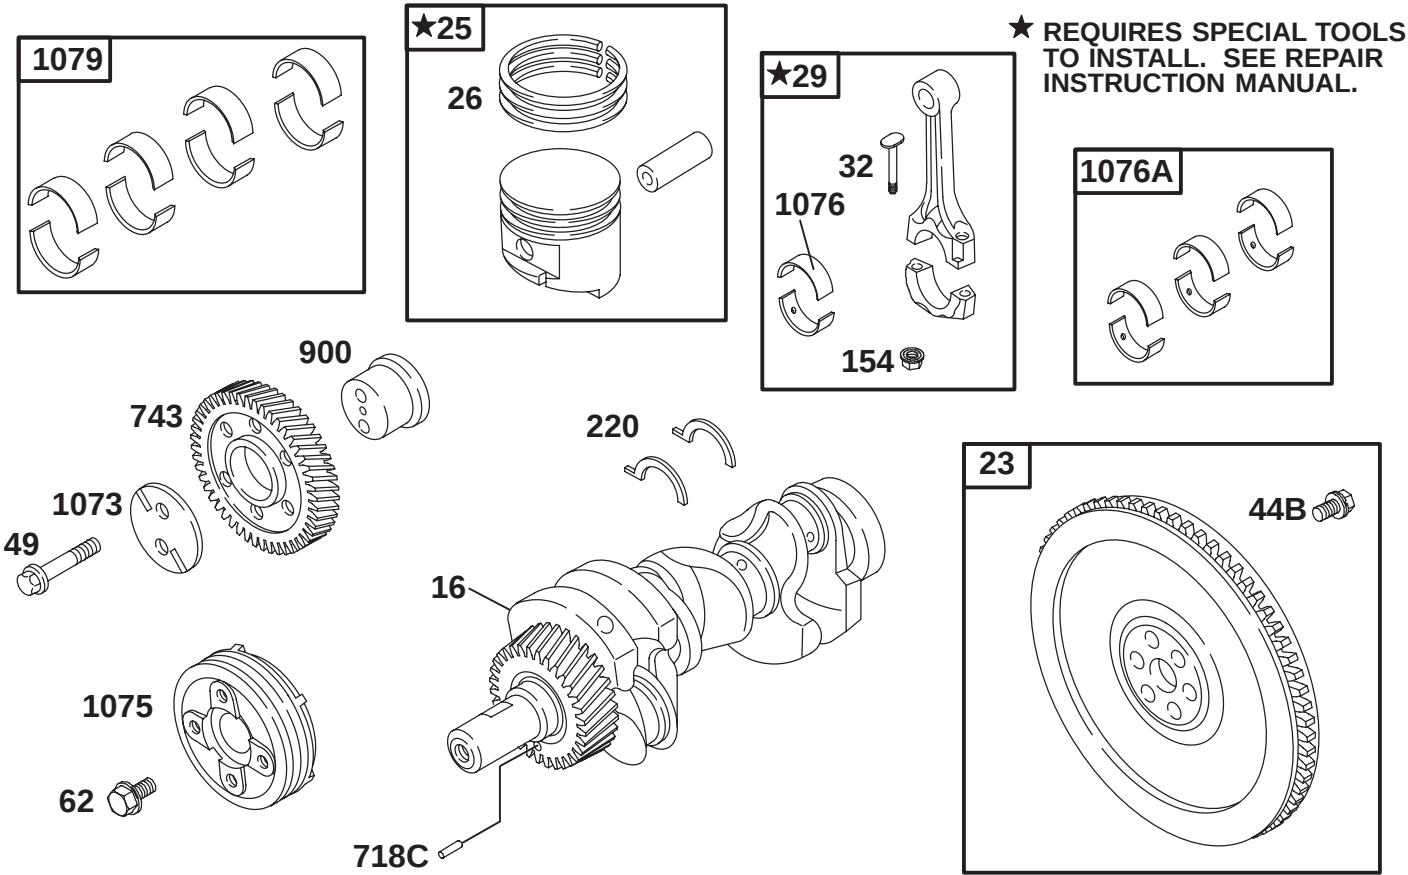

Sheet No.: 4

Crankshaft Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
16	99-9252	1	Crankshaft	1079	99-9046	4	Bearing Set-Main, .010 Under
23	99-9024	1	Flywheel				
25	99-9025	3	Piston ASM, Standard				
25	99-9026	3	Piston ASM, .010 Over				
26	99-9028	3	Ring Set, .010 Over				
26	99-9027	3	Ring Set, Standard				
29	99-9029	3	Rod-Connecting				
32	99-9030	6	Screw-Connecting Rod				
44B	99-9031	6	Screw-10mm Hex				
49	99-9032	2	Screw-8mm Hex				
62	99-9033	1	Screw-Hex				
154	99-9034	6	Nut-Hex				
220	99-9035	1	Washer-Thrust				
220	99-9036	1	Washer-Thrust				
718C	99-9037	1	Pin-Locating				
743	99-9609	1	Gear-Drive				
900	99-9039	1	Shaft-Gear				
1073	99-9040	1	Plate-Idler Gear				
1075	99-9041	1	Pulley-Crankshaft				
1076	99-9042	3	Bearing-Rod				
1076A	99-9043	3	Bearing Set-Rod				
1076A	99-9044	3	Bearing Set-Rod, .010 Over				
1079	99-9045	4	Bearing Set-Main				

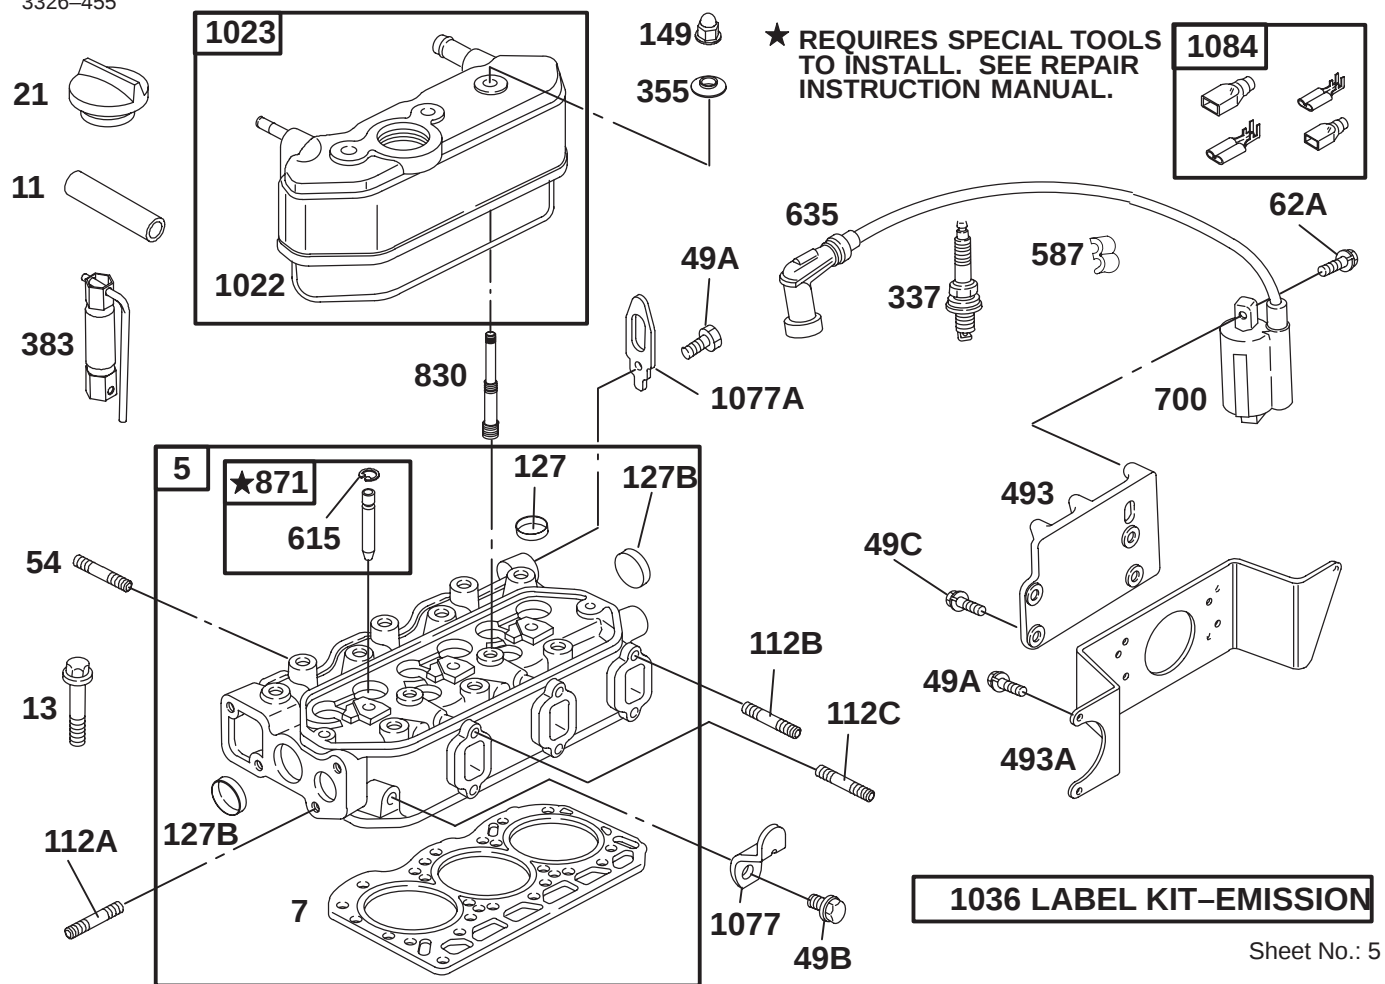


Sheet No.: 5

Cylinder Head Assembly

Ref. No.	Part No.	Qty.	Description
5	99-9253	1	Head-Cylinder
7	99-9254	1	Gasket-Cylinder Head
11	99-9049	1	Tube-Breather
13	99-9255	14	Screw-Hex
21	99-9052	1	Cap-Oil Fill
49A	99-9256	3	Screw-Hex
49B	99-9054	2	Screw-8mm Hex
49C	99-9202	4	Screw-8mm Hex
54	99-9055	2	Stud-Metric
62A	99-9056	6	Screw-Hex
112A	99-9057	2	Stud-Metric
112B	99-9058	5	Stud-Metric
112C	99-9059	1	Stud-Metric
127	99-9008	2	Plug-Welch
127B	99-9060	2	Plug-Welch
149	99-9061	3	Nut-Metric Hex
337	99-9062	3	Plug-Spark
355	99-9063	3	Washer-Seal
383	99-9064	1	Wrench-Spark Plug
493	99-9065	1	Bracket-Mounting
493A	99-9220	1	Bracket-Support
587	99-9066	2	Clip-Wire
615	99-9067	6	Retainer
635	99-9068	3	Boot-Spark Plug
700	99-9069	3	Coil-Ignition
830	99-9101	3	Stud-Rocker Arm

Ref. No.	Part No.	Qty.	Description
871	99-9070	6	Bushing-Guide
1022	99-9073	1	Gasket-Rocker Cover
1023	99-9074	1	Cover-Rocker
1036	99-9075	1	Label-Kit Emission
1077	99-9076	1	Bracket-Lifting
1077A	99-9077	1	Bracket-Lifting
1084	99-9078	1	Connector

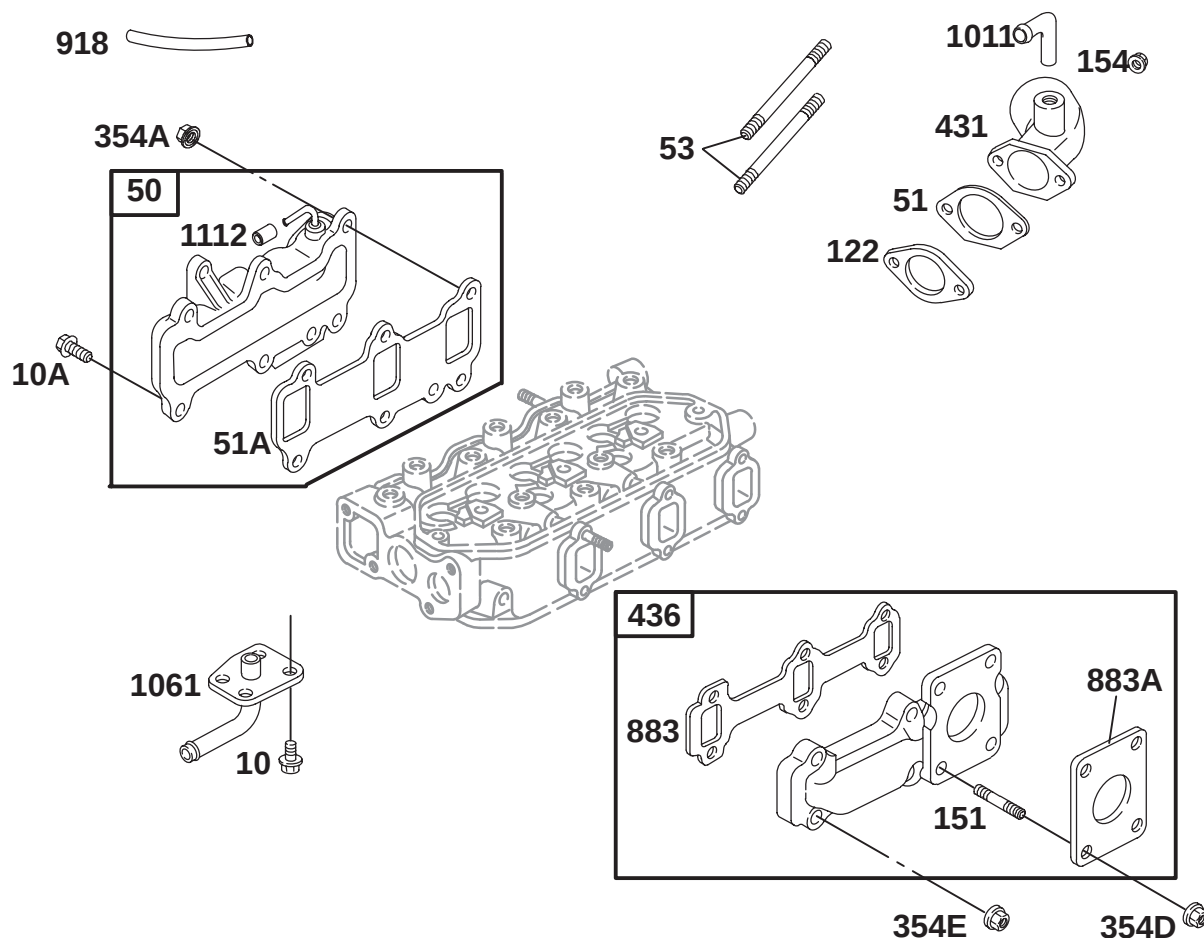


Sheet No.: 6

Intake and Exhaust Assembly

Ref. No.	Part No.	Qty.	Description
10	99-9004	4	Screw-Hex
10A	99-9111	4	Screw-6mm Hex
50	99-9172	1	Manifold-Intake
51	99-9182	1	Gasket-Intake
51A	99-9173	1	Gasket-Intake
53	99-9183	2	Stud-Carb. Mounting
122	99-9184	1	Spacer-Carburator
151	99-9174	4	Stud-Exhaust Manifold
154	99-9186	2	Nut-Metric Hex
354A	99-9114	2	Nut-Metric Hex
354D	99-9176	4	Nut-Metric Hex
354E	99-9175	6	Nut-Metric Hex
431	99-9257	1	Intake Elbow
436	99-9177	1	Manifold-Exhaust
883	99-9178	1	Gasket-Exhaust
883A	99-9179	1	Gasket-Exhaust
918	99-9222	1	Hose-Vaccum
1011	99-9198	1	Tube-Vent
1061	99-9180	1	Cover-Outlet
1112	99-9223	1	Plug-Vent


Ref. No.	Part No.	Qty.	Description

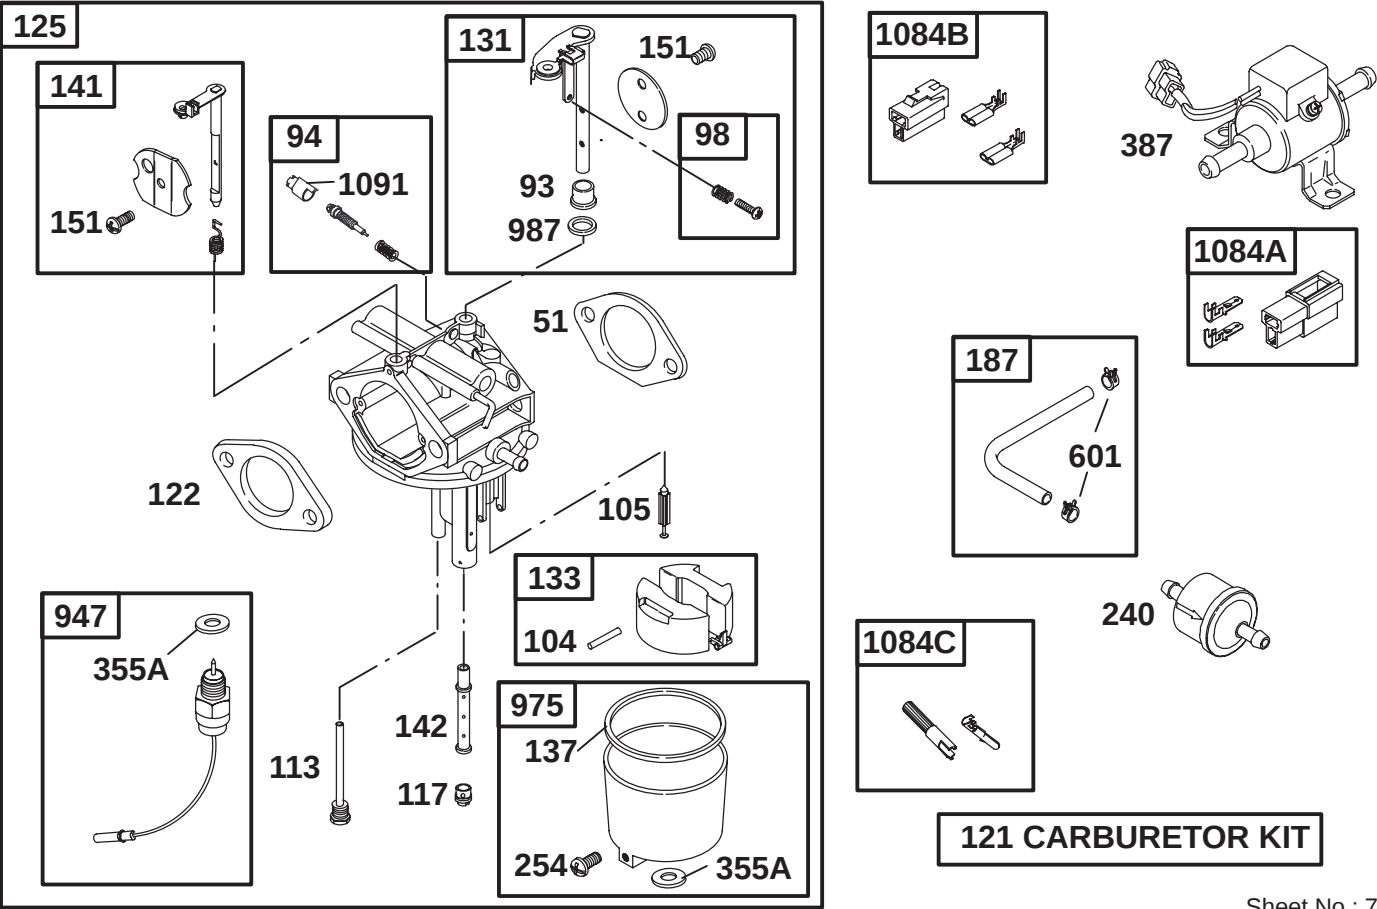

Sheet No.: 7

Carburetor Assembly


Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
51	99-9182	1	Gasket-Intake	1084A	99-9199	1	Connector
94	99-9224	1	Valve-Idle Adj.	1084B	99-9213	1	Connector
98	99-9225	1	Screw-Idle Speed	1084C	99-9245	1	Connector
104	99-9226	1	Pin-Float Hinge	1091	99-9246	1	Cap-Limiter
105	99-9227	1	Valve-Needle				
113	99-9228	1	Tube-Jet				
117	99-9230	1	Jet - Main (High Altitude)				
117	99-9229	1	Jet-Main				
121	99-9231	1	Carbuertor Kit				
122	99-9184	1	Spacer-Carburator				
125	99-9185	1	Carburetor				
131	99-9232	1	Shaft-Throttle				
133	99-9233	1	Float-Carburetor				
137	99-9234	1	Gasket-Float Bowl				
141	99-9235	1	Shaft-Choke				
142	99-9236	1	Nozzle-Carburetor				
151	99-9237	1	Screw-Cross/Slotted				
187	99-9238	1	Line-Fuel				
240	99-9193	1	Filter-Fuel				
254	99-9239	1	Drain-Carb. Bowl				
355A	99-9240	1	Washer-Seal				
387	99-9196	1	Pump-Fuel				
601	99-9242	1	Clamp-Hose				
947	99-9243	1	Solenoid-Fuel				
975	99-9244	1	Bowl-Float				

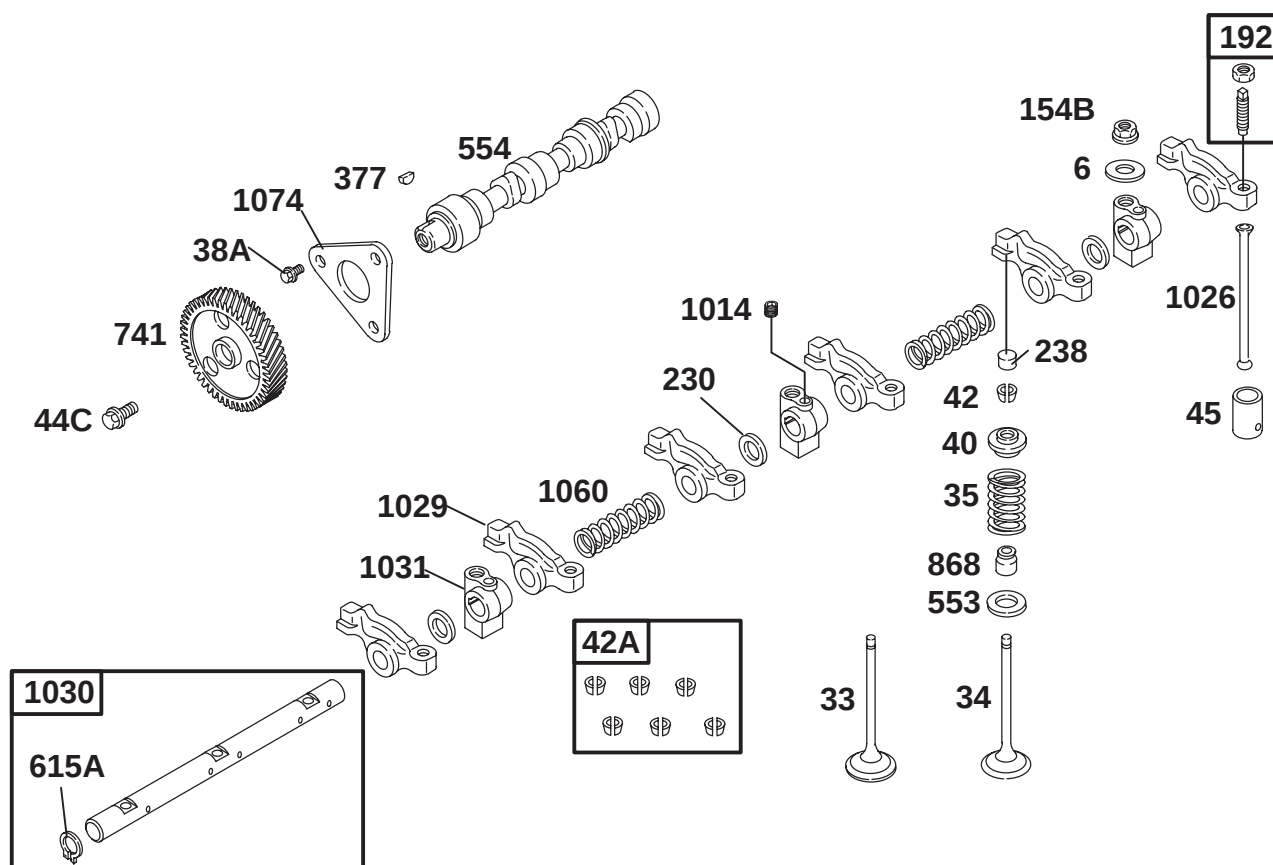

Sheet No.: 8

Rocker Arm Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
6	99-9079	3	Washer-Flat	1060	99-9108	2	Spring-Rocker Shaft
33	99-9080	3	Valve-Exhaust	1074	99-9109	1	Retainer-Camshaft
34	99-9081	3	Valve-Exhaust				
35	99-9082	6	Spring-Valve				
38A	99-9083	3	Screw-6mm Hex				
40	99-9084	6	Retainer-Valve				
42	99-9086	1	Keeper-Valve				
42A	99-9087	6	Keeper-Valve				
44C	99-9085	1	Screw-Metric				
45	99-9088	6	Tappet-Valve				
154B	99-9091	3	Nut-Metric Hex				
192	99-9092	6	Adjuster-Rocker Arm				
230	99-9093	3	Washer-Spacer				
238	99-9094	6	Cap-Valve				
377	99-9095	1	Key-Woodruff				
553	99-9096	6	Seat-Valve Spring				
554	99-9097	1	Shaft-Cam				
615A	99-9099	2	Retainer				
741	99-9641	1	Gear-Cam				
868	99-9102	6	Seal-Valve				
1014	99-9090	3	Screw-Metric				
1026	99-9103	6	Rod-Push				
1029	99-9104	6	Arm-Rocker				
1030	99-9106	1	Shaft-Rocker Arm				
1031	99-9107	3	Support-Rocker Arm				

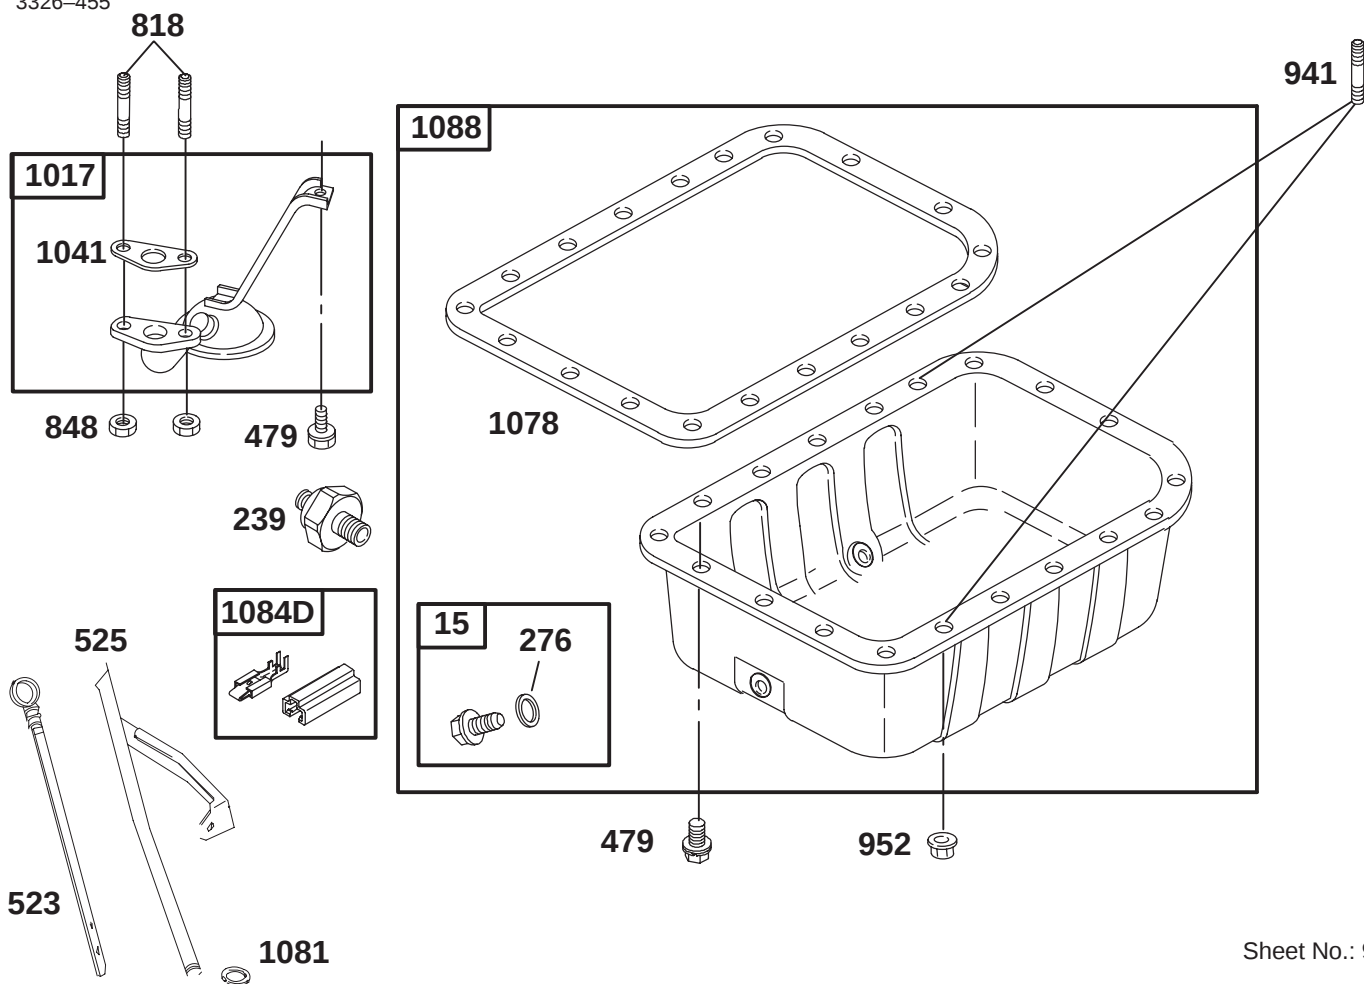


Sheet No.: 9

Oil Pan and Dipstick Assembly

Ref. No.	Part No.	Qty.	Description
15	99-9247	2	Plug-Oil Drain (16mm)
239	99-9115	1	Switch-Oil Pressure
276	99-9249	2	Washer-Seal (16mm)
479	99-9111	18	Screw-6mm Hex
523	99-9259	1	Dipstick
525	99-9260	1	Tube-Dipstick
818	99-9007	2	Stud-Metric
848	99-9113	2	Nut-Metric Hex
941	99-9112	2	Stud-Metric
952	99-9114	2	Nut-Metric Hex
1017	99-9116	1	Screen-Oil Pump
1041	99-9120	1	Gasket-Oil Strainer
1078	99-9121	1	Gasket-Oil Pan
1081	99-9265	1	O-Ring Seal (Dipstick)
1084D	99-9124	1	Connector
1088	99-9241	1	Pan-Oil (16mm Dual Drain)

Ref. No.	Part No.	Qty.	Description


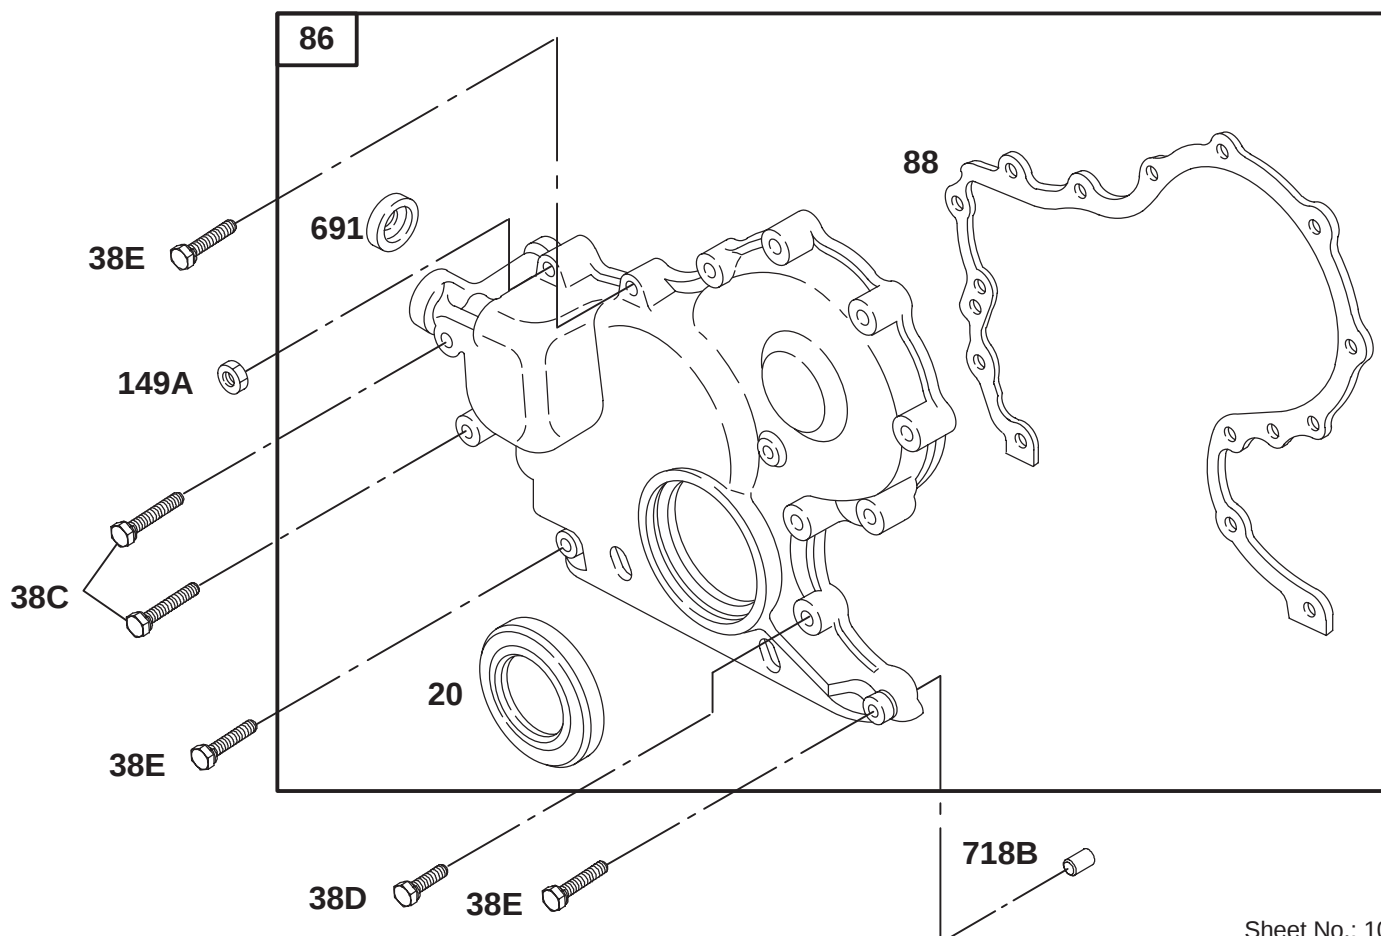


Sheet No.: 10

Cover Assembly

Ref. No.	Part No.	Qty.	Description
20	99-9126	1	Seal-Oil
38C	99-9127	2	Screw-Hex
38D	99-9128	6	Screw-6mm Hex
38E	99-9129	3	Screw-6mm Hex
86	99-9130	1	ASM-Cover, Gear
88	99-9132	1	Gasket-Cover
149A	99-9114	2	Nut-Metric Hex
691	99-9131	1	Seal-Governor Shaft
718B	99-9014	2	Pin-Locating


Ref. No.	Part No.	Qty.	Description

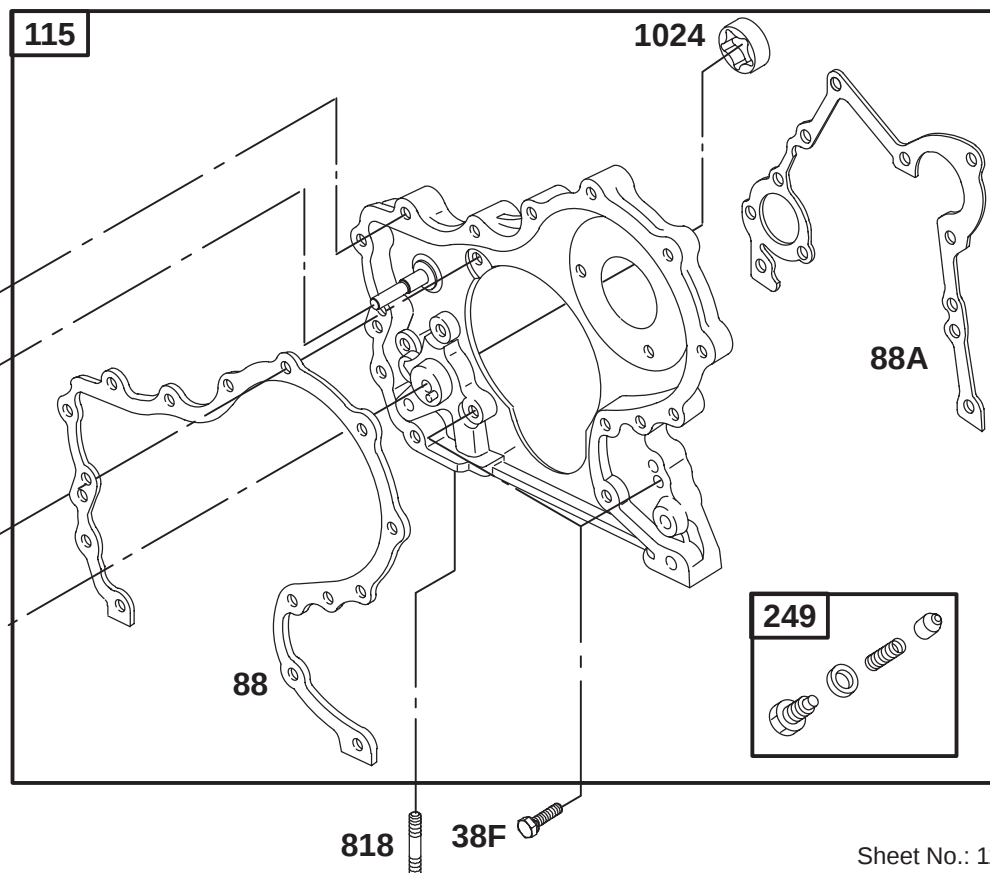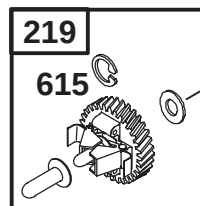

Gears and Housing Assembly

Ref. No.	Part No.	Qty.	Description
38F	99-9133	4	Screw-6mm Hex
38G	99-9134	1	Screw-6mm Hex
49D	99-9135	1	Screw-8mm Hex
87	99-9131	1	Seal-Governor Shaft
88	99-9132	1	Gasket-Cover
88A	99-9136	1	Gasket-Gear Cover
112E	99-9137	2	Stud-Metric
115	99-9138	1	Housing-Gear
219	99-9261	1	Gear-Governor
230A	99-9140	1	Washer-Spacer
230B	99-9141	1	Washer-Spacer
249	99-9142	1	Valve-Oil Relief
613	99-9143	2	Screw-Torx Hex
614	99-9053	1	Pin-Cotter
615	99-9145	1	Retainer
616	99-9146	1	Crank-Governor
616A	99-9147	1	Crank-Governor
746	99-9656	1	Gear-Drive
818	99-9007	2	Stud-Metric
1071	99-9149	1	Paddle-Governor


Ref. No.	Part No.	Qty.	Description

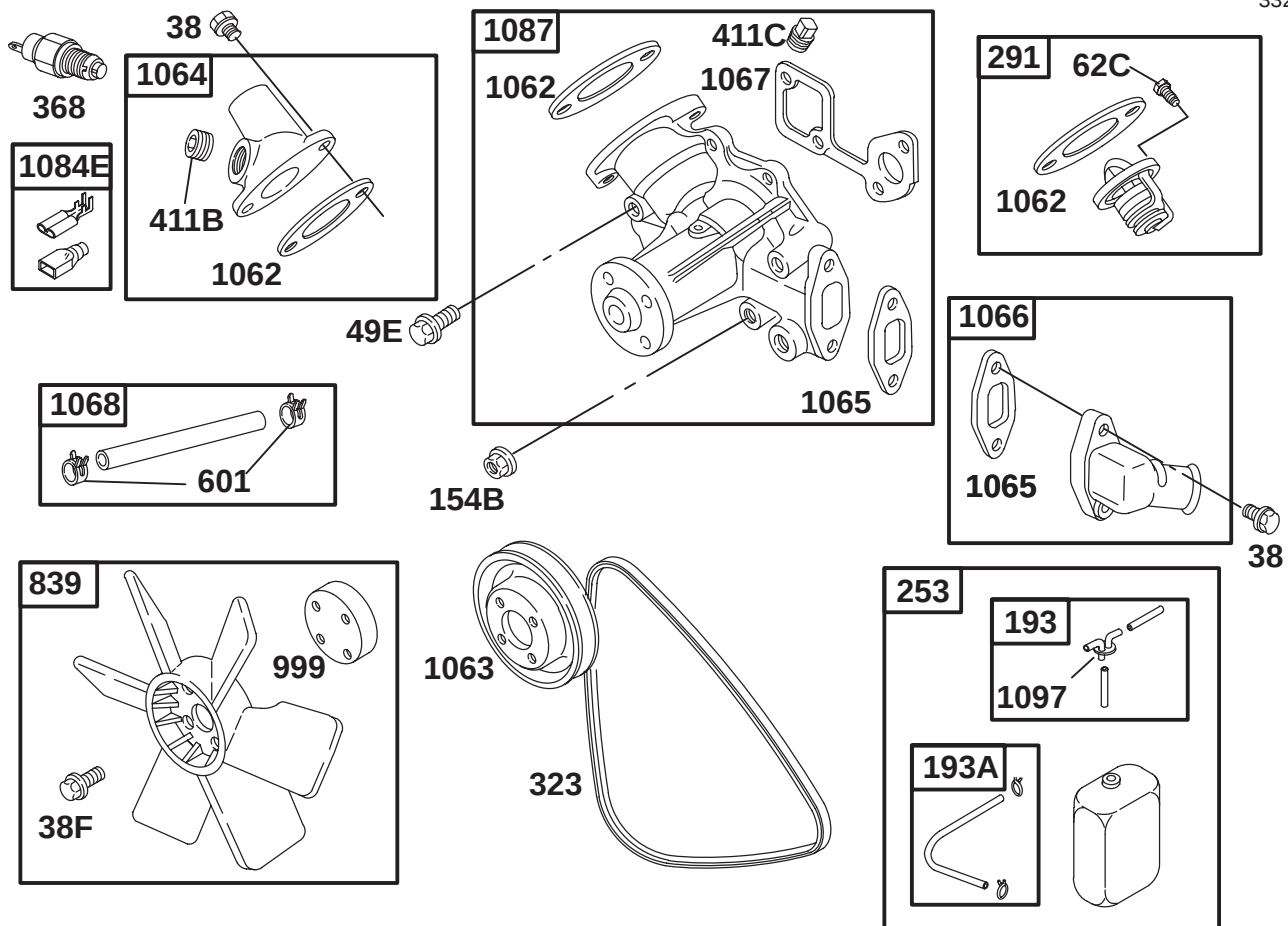

Sheet No.: 12

Water Pump and Fan Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
38	99-9004	4	Screw-Hex				
38F	99-9133	4	Screw-6mm Hex				
49E	99-9151	2	Screw-8mm Hex				
62C	99-9152	1	Screw-Metric				
154B	99-9153	1	Nut-Metric Hex				
193	99-9071	1	Hose-Reserve Tank				
193A	99-9072	1	Hose-Reserve Tank				
253	99-9154	1	Tank-Reserve				
291	99-9155	1	Thermostat				
323	99-9156	1	Belt-Vee				
368	99-9157	1	Switch-Water Temp.				
411B	99-9158	1	Plug				
411C	99-9159	1	Plug				
601	99-9160	2	Clamp-Hose				
839	99-9162	1	Fan-Radiator				
999	99-9161	1	Spacer				
1062	99-9163	1	Gasket-Outlet				
1063	99-9164	1	Pulley-Pump				
1064	99-9165	1	Housing-Outlet				
1065	99-9166	1	Gasket-Inlet Housing				
1066	99-9167	1	Housing-Inlet				
1067	99-9168	1	Gasket-Water Pump				
1068	99-9169	1	ASM-Hose Clamp				
1084E	99-9098	1	Connector				
1087	99-9170	1	Pump-Water				
1097	99-9171	1	Cap-Surge Tank				

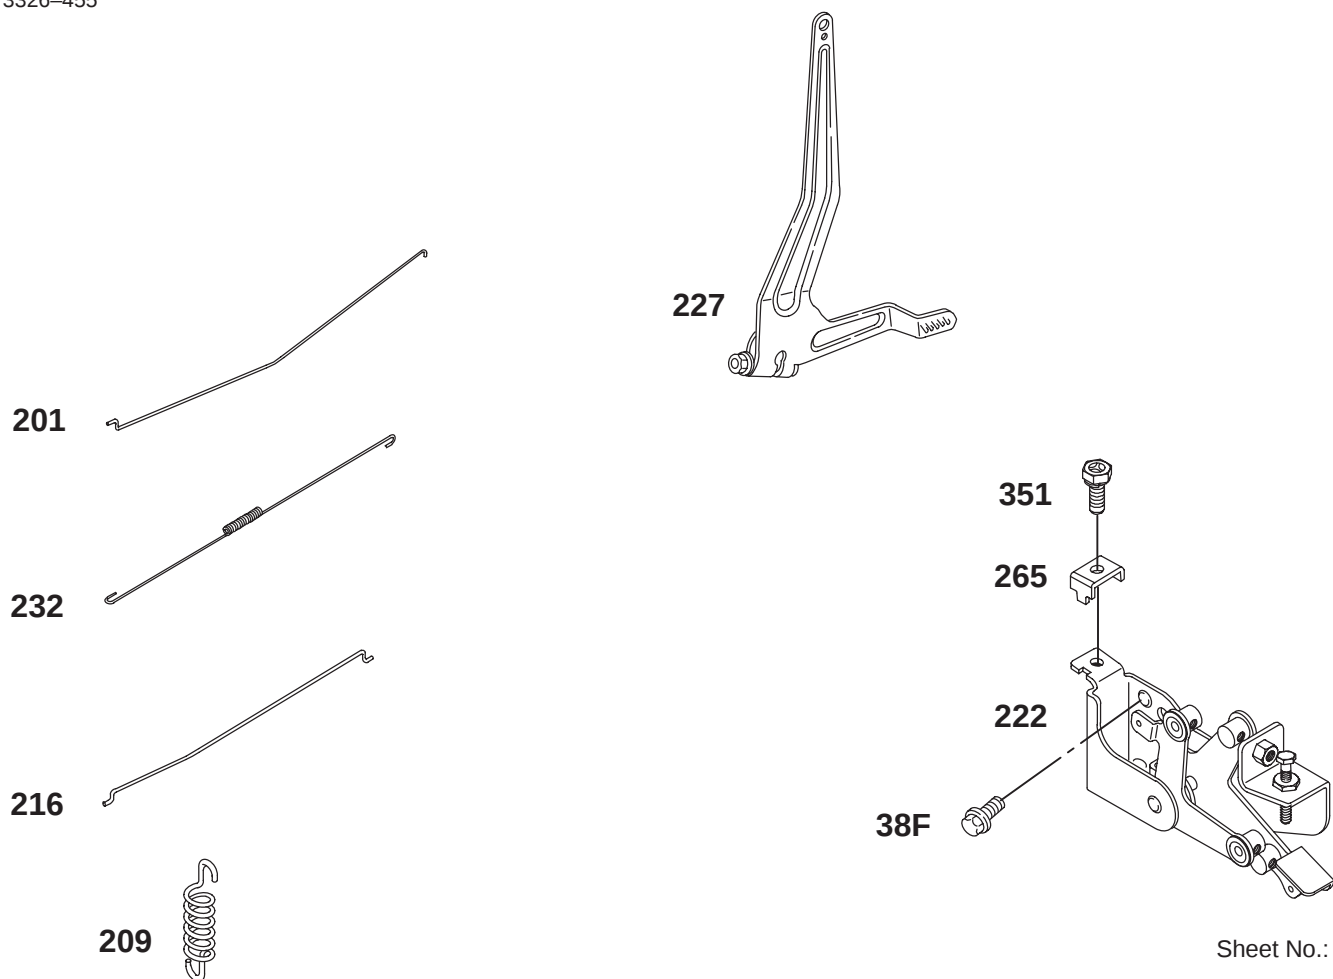


Sheet No.: 13

Governor Assembly

Ref. No.	Part No.	Qty.	Description
38F	99-9181	2	Screw-Hex
201	99-9187	1	Link-Mech. Governor
209	99-9188	1	Spring-Governor
216	99-9189	1	Link-Choke
222	99-9190	1	Bracket-Control
227	99-9191	1	Lever-Governor
232	99-9192	1	Spring-Link
265	99-9194	1	Clamp-Casing
351	99-9195	1	Screw-Phillips, Hex

Ref. No.	Part No.	Qty.	Description

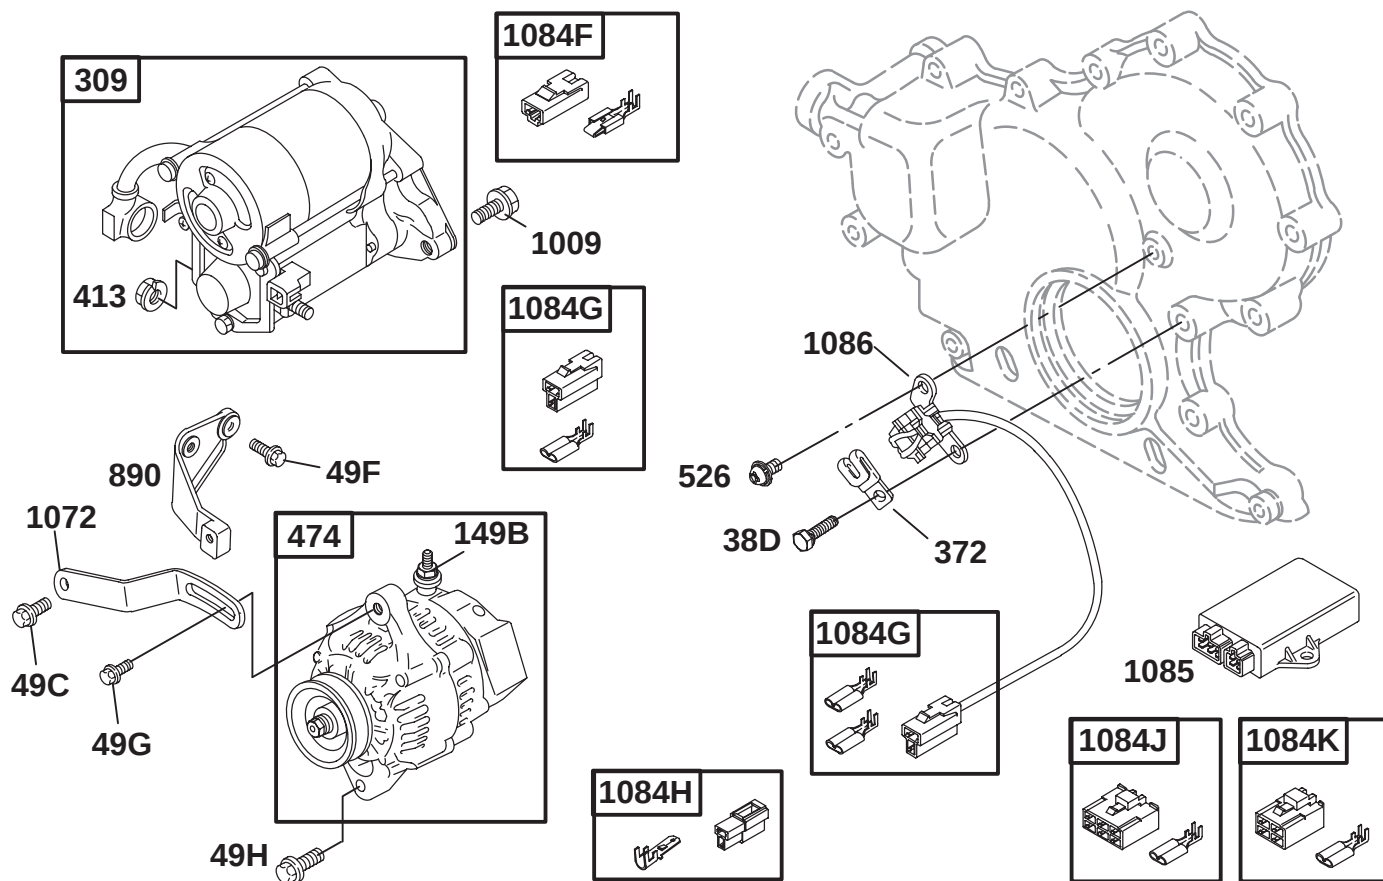

Sheet No.: 14

Alternator and Starter Assembly

Ref. No.	Part No.	Qty.	Description
38D	99-9128	1	Screw-6mm Hex
49C	99-9202	1	Screw-8mm Hex
49F	99-9203	2	Screw-8mm Hex
49G	99-9105	1	Screw-Hex
49H	99-9205	1	Screw-Metric Hex
149B	99-9114	1	Nut-Metric Hex
309	99-9207	1	Motor-Starter
372	99-9208	1	Clamp
413	99-9206	1	Nut-Metric Hex
474	99-9209	1	Alternator
526	99-9210	1	Screw-Phillips
890	99-9211	1	Bracket-Support
1009	99-9201	2	Screw-10mm Hex
1072	99-9212	1	Bracket-Adjusting
1084F	99-9144	1	Connector
1084G	99-9213	1	Connector
1084H	99-9199	1	Connector
1084J	99-9214	1	Connector
1084K	99-9215	1	Connector
1086	99-9217	1	Trigger-Ignition


Ref. No.	Part No.	Qty.	Description



Gasket Set and Valve Overhaul Kit

Ref. No.	Part No.	Qty.	Description

121 CARBURETOR KIT

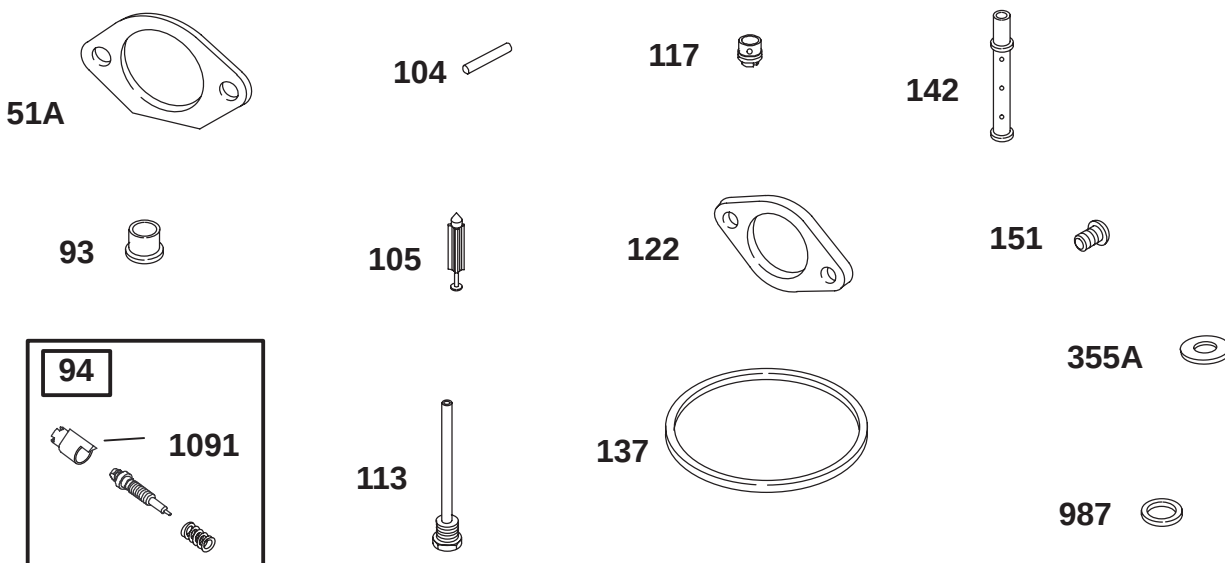

Sheet No.: 16

Carburetor Kit

Ref. No.	Part No.	Qty.	Description
51A	99-9182	1	Gasket-Intake
94	99-9224	1	Valve-Idle Adj.
104	99-9226	1	Pin-Float Hinge
105	99-9227	1	Valve-Needle
113	99-9228	1	Tube-Jet
117	99-9229	1	Jet-Main
121	99-9231	1	Carbuertor Kit
122	99-9184	1	Spacer-Carburator
137	99-9234	1	Gasket-Float Bowl
142	99-9236	1	Nozzle-Carburetor
151	99-9237	1	Screw-Cross/Slotted
355A	99-9240	1	Washer-Seal
1091	99-9246	1	Cap-Limiter

Ref. No.	Part No.	Qty.	Description

