



## 16-38HXL and 16-38HXLE

### Wheel Horse<sup>®</sup> Lawn Tractor

Model No. 71227-220010001 and Up

Model No. 71242-220010001 and Up

## Parts Catalog

---

### Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

### Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

### Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number **6**, the tire by **6:1**, the valve by **6:2**, and the wheel by **6:3**. When you order the assembly identified by reference number **6**, you receive all parts identified by reference numbers **6:1**, **6:2**, and **6:3**. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

### Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form **nX y**. The **n** represents the quantity of the part, the **X** is the multiplication symbol, and the **y** represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number **37** are indicated.

## Contents

<b>Description</b>	<b>Page</b>	<b>Description</b>	<b>Page</b>
Frame and Body Assembly .....	4	Cylinder Head Assembly	
Hood and Tower Assembly .....	5	Briggs and Stratton Model 286H77-0121-E1	26
Rear Body and Seat Assembly .....	6	Crankshaft Assembly	
Steering Assembly .....	7	Briggs and Stratton Model 286H77-0121-E1	27
Fixed Steering Assembly .....	9	Crankcase Assembly	
OHV Engine System Assembly .....	10	Briggs and Stratton Model 286H77-0121-E1	28
Traction Clutching Assembly .....	11	Oil Filter, Tube and Pump Assembly	
Rear Wheel and Tire Assembly .....	12	Briggs and Stratton Model 286H77-0121-E1	29
Hydro Transaxle Assembly .....	13	Carburetor Assembly	
Hydro Transaxle Controls Assembly .....	14	Briggs and Stratton Model 286H77-0121-E1	30
Deck Assembly .....	15	Air Cleaner Assembly	
Deck Assembly (Continued) .....	16	Briggs and Stratton Model 286H77-0121-E1	31
Deck Blade Drive & Braking Assembly .....	17	Governor Assembly	
Deck Engagement Assembly .....	18	Briggs and Stratton Model 286H77-0121-E1	32
Height of Cut Assembly .....	19	Blower Housing Assembly	
Electrical Assembly .....	20	Briggs and Stratton Model 286H77-0121-E1	33
Housing and Bearing Assembly .....	21	Starter Assembly	
Gear Assembly .....	22	Briggs and Stratton Model 286H77-0121-E1	34
Axle Assembly .....	23	Gasket Assembly	
Electric Schematic .....	24	Briggs and Stratton Model 286H77-0121-E1	35
Cylinder Assembly		Carburetor Overhaul Kit Assembly	
Briggs and Stratton Model 286H77-0121-E1	25	Briggs and Stratton Model 286H77-0121-E1	36

## Accessories


<b>Description</b>	<b>Model / Part No.</b>	<b>Description</b>	<b>Model / Part No.</b>
Easy Empty® Bagging Kit . . . .	79116 (only on 71223)	Headlight Kit (Std. this Model) . . . . .	79180
Easy Empty® Bagging Kit . . . . .	79117	42in Snowblade Kit . . . . .	79150
Twin Bag Bagger Kit . . . . .	79101 (on only 71223)	Wheel Weight Kit . . . . .	59159
Recycler® Kit (Std. this Model) . . . . .	79170	Anti-Scalp Kit . . . . .	79182
Hi-Sail Bagging Blade . . . . .	57-4700	Exhaust Deflector Kit . . . . .	94-6872
Tire Chains . . . . .	11-0430		

## Part Description Abbreviations

Part descriptions in this catalog may include the following abbreviations.

<b>Abbreviation</b>	<b>Meaning</b>	<b>Abbreviation</b>	<b>Meaning</b>
AR .....	as required	HYD .....	hydraulic
ASM .....	assembly	INC .....	incorporated
CARR .....	carriage	LH .....	left hand
DEG .....	degrees	NI .....	nylon insert
FH .....	flat head	PPH .....	Phillips pan head
GA .....	gauge	PTH .....	Phillips truss head
HF .....	hex flange	PTO .....	power take off
HH .....	hex head	RH .....	right hand
HHF .....	hex head flange	SFH .....	slotted fillister head
HLH .....	hex lag head	SHH .....	slotted hex head
HJ .....	hex jam	SQH .....	square head
HOC .....	height-of-cut	SHWH .....	slotted hex washer head
HS .....	hex socket	SPH .....	slotted pan head
HSBH .....	hex socket button head	SRH .....	slotted round head
HSFH .....	hex socket flat head	STD .....	standard
HSH .....	hex socket head	TAP .....	self tapping
HWH .....	hex washer head	TTH .....	Torx truss head
HWHTF .....	hex washer head thread forming	WH .....	wing head



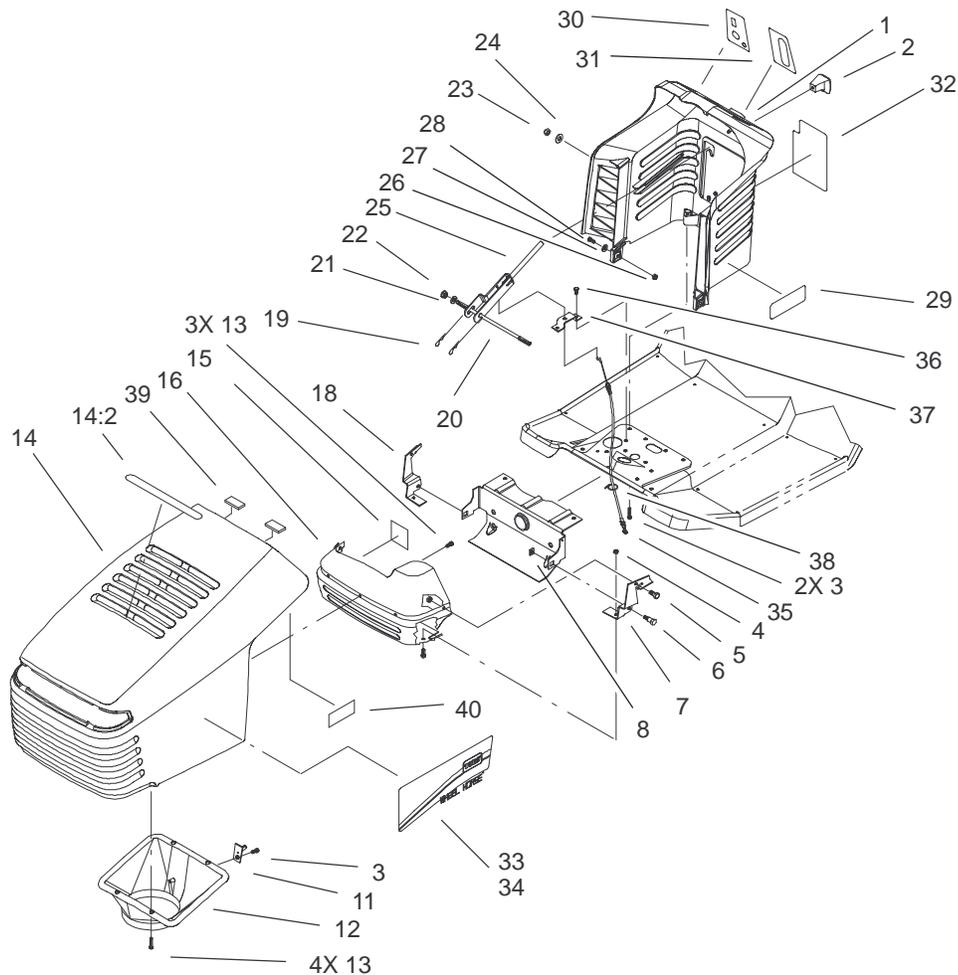


Sheet No.:3

## Hood and Tower Assembly

Ref. No.	Part No.	Qty.	Description
1	99-1947	1	Tower-Steering
2	94-5565	1	Knob-Shift
3	46-8091	3	Screw-HWH
4	3296-42	4	Nut-Lock, NI
5	321-2	4	Screw-HH
6	28-0540	2	Bolt-Shoulder
7	88-6050-03	1	Bracket-Hinge, LH
8	3290-496	2	Nut-Retainer
11	94-1984	1	Latch-Pin
12	93-3891	1	Duct-Hood Air
13	46-8090	7	Screw-Plastite
14	93-3819	1	Hood-W/Decal, Toro
14:2	92-5748	1	Decal-Air Duct, Toro
15	92-5782	3	Tape-Foil
16	93-3864-03	1	Shield-Heat
18	88-6040-03	1	Bracket-Hinge, RH
19	3290-307	2	Pin-Hair
20	100-7401	1	Rod-Tower, Pivot
21	3256-24	2	Washer-Flat
22	3218-3	2	Nut-Jam
23	100-7402	2	Nut-Cap
24	100-7403	2	Washer-Flat
25	88-5190-03	1	Lever-Deck, Engage
26	3296-29	2	Nut-Lock, NI
27	3256-23	2	Washer-Flat
28	322-3	2	Screw-HH

Ref. No.	Part No.	Qty.	Description
29	100-6248	2	Decal 38 Hxl
30	99-8139	1	Decal-Ignition/Lights (only on: 71227)
30	99-8141	1	Decal-Ignition/Lights (only on: 71242)
31	92-5730	1	Decal-Throttle (only on: 71242)
31	92-2461	1	Decal-Throttle (only on: 71227)
32	93-6673	1	Decal-Deck, Engage (only on: 71242)
32	92-2462	1	Decal-Deck, Engage (only on: 71227)
33	95-0808	1	Decal-Hood, Left
34	95-0807	1	Decal-Hood, Right
35	99-6837	1	Deck Cable ASM
36	9266714	2	Screw-HWH
37	93-3849	1	Bracket-Upper, Cable
38	614249	1	Tie-Strap
39	94-1980	2	Foam-Hood
40	104-4150	1	Decal (only on: 71227)

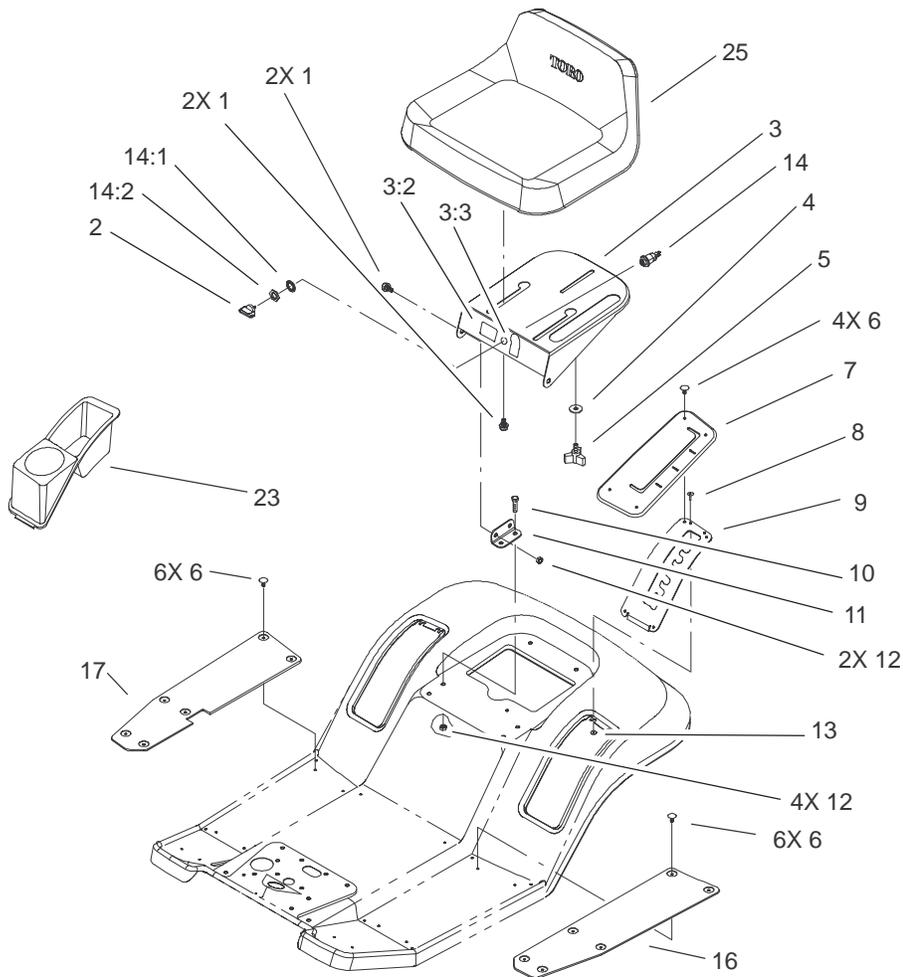


Sheet No.:4

## Rear Body and Seat Assembly

Ref. No.	Part No.	Qty.	Description
1	37-8770	4	Bolt-Shoulder
2	63-8360	1	Key-Ignition
3	99-5831	1	Seat Support ASM (only on: 71242)
3	99-5830	1	Seat Support ASM (only on: 71227)
3:2	99-2986	1	Decal-Danger (only on: 71242)
3:2	99-2985	1	Danger-Decal (only on: 71227)
3:3	99-5339	1	Decal (only on: 71227)
3:3	99-5340	1	Decal-Switch (only on: 71242)
4	5-4460	1	Washer-Pivot
5	92-9674	1	Knob
6	3290-479	16	Fastener-Panel
7	93-7657	1	Cover-HOC (only on: 71242)
7	88-5170	1	Cover-HOC (only on: 71227)
8	3290-282	2	Rivet-Pop, Steel
9	88-5030-03	1	Gate-HOC
10	322-3	4	Screw-HH
11	88-4820-03	2	Bracket-Seat, Hinge
12	3296-29	6	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
13	3269-26	2	Washer-Flat
14	46-5780	1	Switch-Starter
14:1	3254-5	1	Washer-Lock, Internal
14:2	218-461	1	Nut-HH
16	88-5240	1	Mat-Foot, LH
17	88-5230	1	Mat-Foot, RH Hydro
23	88-4990	1	Tray-Fender
25	88-3950	1	Seat-Medium Back

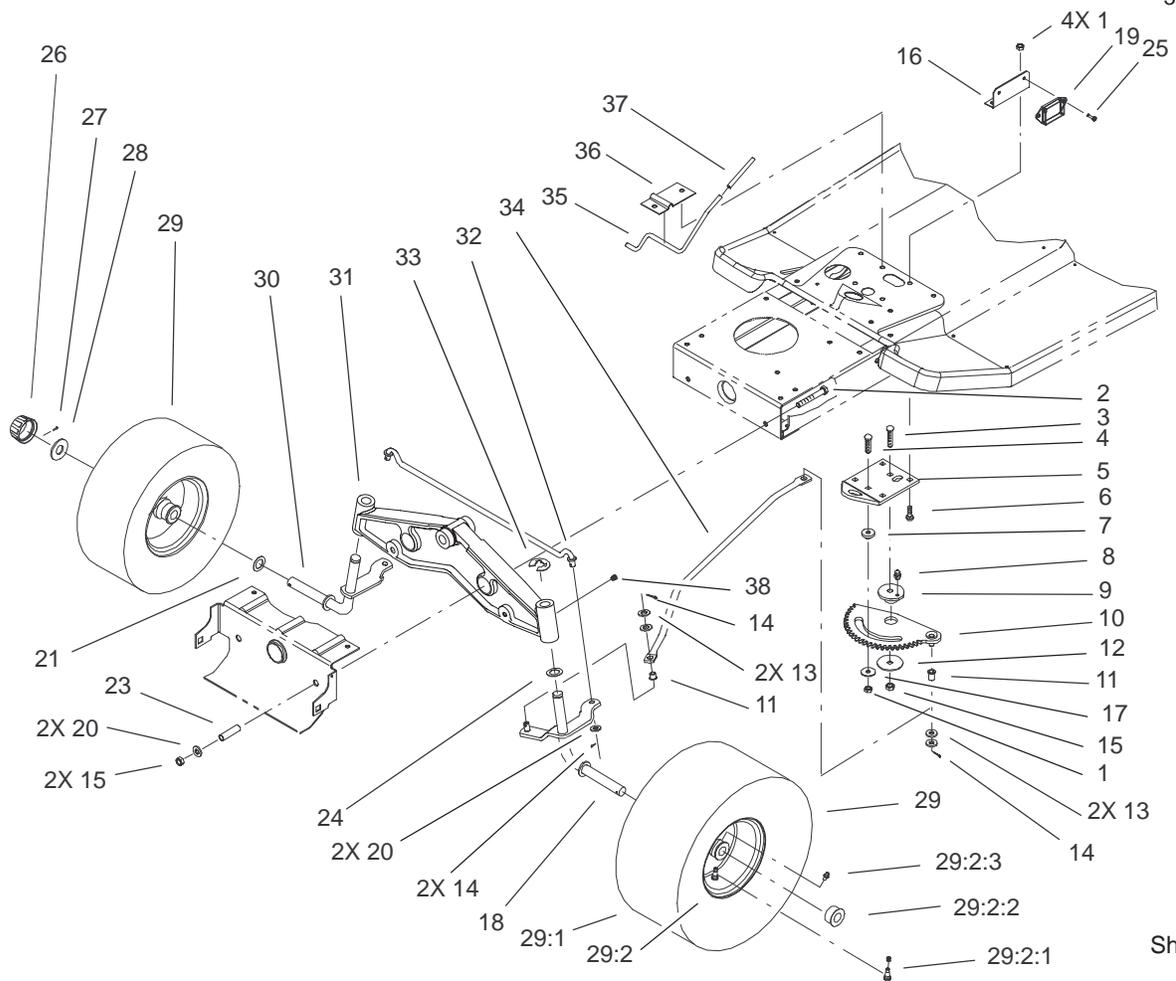

Sheet No.:5

## Steering Assembly

Ref. No.	Part No.	Qty.	Description
1	3296-29	5	Nut-Lock, NI
2	323-13	2	Screw-HH
3	3231-4	1	Screw-CARR
4	3230-3	1	Screw-CARR
5	88-5130-03	1	Bracket-Steering Rack
6	3230-2	4	Screw-CARR
7	88-5010	1	Spacer-Steering, Rack
8	302-26	1	Fitting-Grease
9	88-4670	1	Bushing-Eccentric
10	88-5200	1	Rack-Steering
11	52-2891	2	Bushing-Link, Steering
12	111419	1	Bearing-Washer
13	3256-25	4	Washer-Flat
14	3272-10	4	Pin-Cotter
15	3296-39	3	Nut-Lock, NI
16	99-2956-03	1	Bracket-Module
17	5-4460	1	Washer-Pivot
18	92-7890-03	1	Spindle-LH
19	99-3700	1	Module
20	3256-24	4	Washer-Flat
21	3-6498	4	Washer-Thrust
23	88-5470	2	Spacer-Front, Axle
24	3-6498	2	Washer-Thrust


Ref. No.	Part No.	Qty.	Description
25	9266714	2	Screw-HWH
26	61-9780	2	Cap-Hub
27	3272-12	2	Pin-Cotter
28	28-2480	2	Washer
☆29		2	Front Wheel And Tire ASM (only on: 71242)
☆29		2	Front Wheel And Tire ASM (only on: 71227)
29:1	99-2988	1	Tire
29:2	88-4370	1	Rim ASM (only on: 71227)
29:2	99-6829	1	Rim ASM (only on: 71242)
29:2:1	232-27	1	Stem-Valve
29:2:2	110513	2	Bearing-Wheel (only on: 71242)
29:2:2	88-4400	2	Bearing-Wheel (only on: 71227)
29:2:3	302-5	1	Fitting-Grease
*29:3	232-39	1	Tube
30	92-7889-03	1	Spindle-RH
31	99-6844-03	1	Axle-Front
32	88-5380	1	Tie Rod-Steering
33	32151-48	2	E-Ring
34	88-4830	1	Link-Drag

☆ Not serviced separately

\* Not illustrated





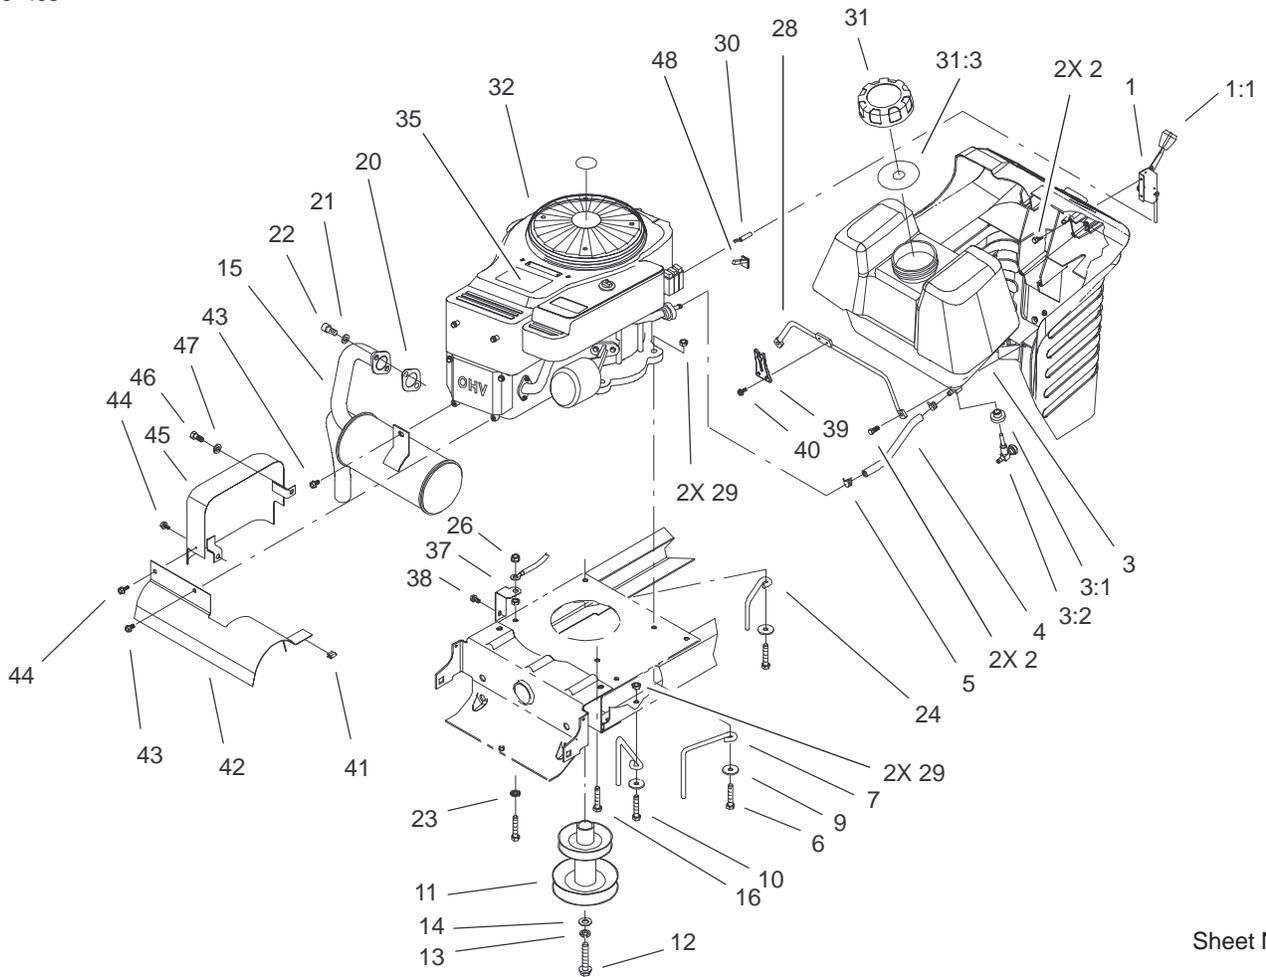


Sheet No.:8

## OHV Engine System Assembly

Ref. No.	Part No.	Qty.	Description
1	88-4340	1	Control-Throttle
1:1	66-0120	1	Knob
2	27-0220	4	Screw-Special
3	88-3880	1	Gas Tank ASM
3:1	104047	1	Bushing
3:2	104048	1	Valve-Fuel
4	47-2963	1	Hose-Gas
5	2412-98	2	Clamp
6	322-9	3	Screw-HH
7	93-3854	3	Guide-Belt, Engine
9	5-4460	4	Washer-Pivot
10	322-5	2	Screw-HH
11	94-1963	1	Pulley-Engine ASM
12	62-3760	1	Screw-HH
13	3253-22	1	Washer-Lock
14	3256-25	1	Washer-Flat
15	94-1953	1	Muffler-Exhaust
16	9267154	1	Screw
20	88-4410	1	Gasket-Muffler
21	3253-4	2	Washer-Lock
22	3274-10	2	Screw-HSH
23	3255-8	1	Washer-Lock/Ext
24	93-3855	1	Guide-Belt, RH
26	32149-1	2	Nut
28	94-1952	1	Rod-Gas, Tank
29	3296-29	4	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
30	88-4350	1	Cable-Throttle
31	88-3980	1	Gas Cap ASM
31:3	88-4010	1	Gasket-Cap, Gas
☆32		1	Engine-16 HP Intec 286h77-0121-E1
35	105-2467	1	Decal-Engine, 16 HP
37	93-3809	1	Bracket-Ground
38	9266714	1	Screw-HWH
39	94-1951	1	Latch-Hood
40	32144-112	2	Screw-HWHTF
41	93-3882	1	Clip-Tinnerman
42	93-3880-03	1	Shield-Muffler
43	9266714	2	Screw-HWH
44	32104-76	2	Screw
45	93-8450-03	1	Exhaust Shield ASM
46	322-3	1	Screw-HH
47	3253-4	1	Washer-Lock
48	88-4490	1	Reducer-Throttle, Rpm (only on: 71242)

☆ Not serviced separately

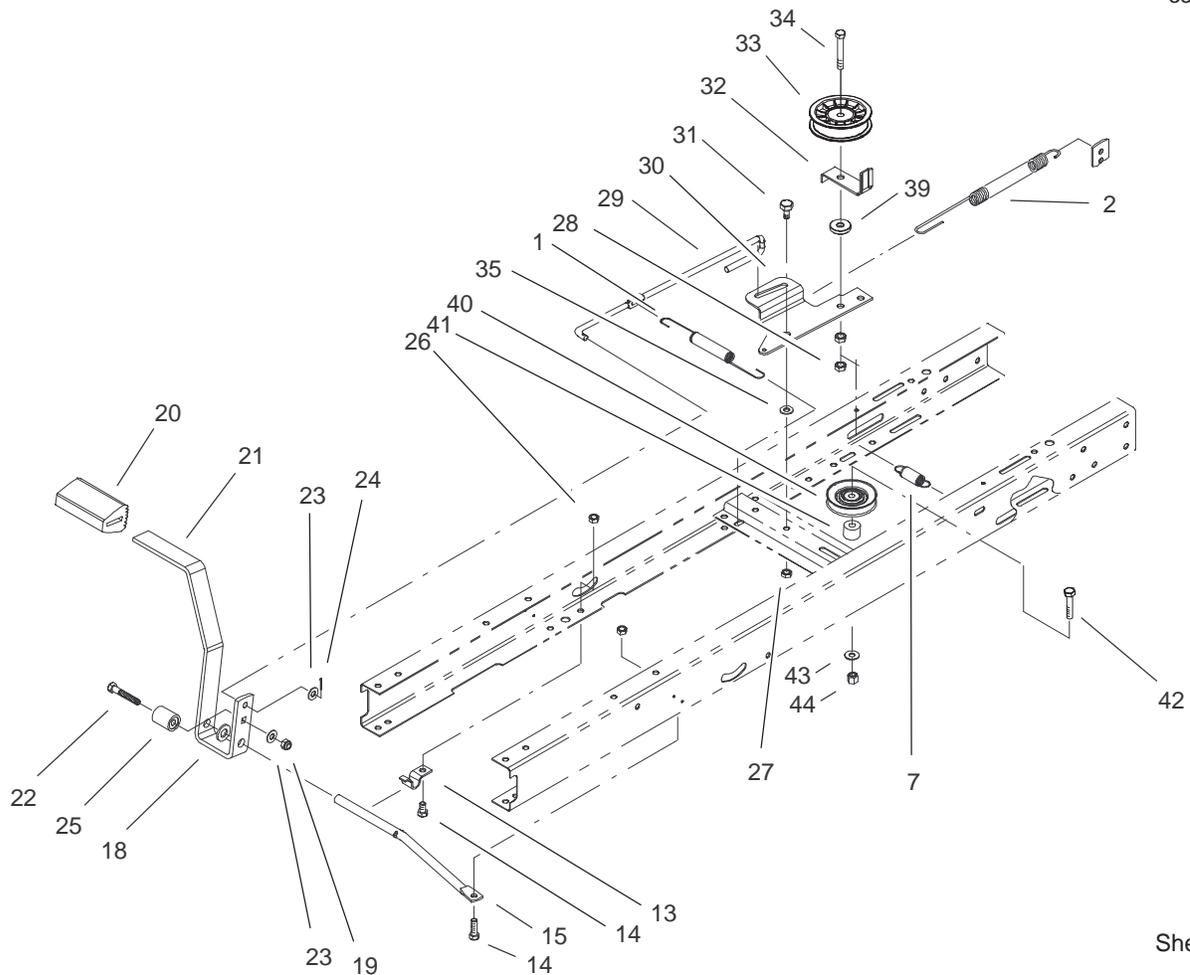

Sheet No.:9


## Traction Clutching Assembly

Ref. No.	Part No.	Qty.	Description
1	27-8890	1	Spring-Return
2	100-7422	1	Spring-Brake
7	88-6330	1	Spring-Extension
13	88-4810	1	Clamp-Shift, Pivot
14	322-3	2	Screw-HH
15	88-5500	1	Rod-Pedal, Pivot
18	3256-26	1	Washer-Flat
19	3296-47	1	Nut-Lock, NI
20	65-2920	1	Pad-Pedal
21	88-5000-03	1	Pedal-Clutch/Brake
22	322-9	1	Screw-HH
23	3256-23	2	Washer-Flat
24	3272-10	1	Pin-Cotter
25	99-6836	1	Spacer-Switch
26	3296-29	2	Nut-Lock, NI
27	3296-29	1	Nut-Lock, NI
28	3296-59	2	Nut-Lock, NI
29	88-5270	1	Rod-Clutch/Brake
30	88-6070	1	Arm-Idler
31	37-8770	1	Bolt-Shoulder
32	88-5560	1	Guide-Idler, Belt
33	104-4160	1	Pulley-Idler
34	323-11	1	Screw-HH
35	5-4460	1	Washer-Pivot
39	92-4890	1	Washer-Wheel
40	92-7102	1	Pulley-Idler

Ref. No.	Part No.	Qty.	Description
41	92-5791	1	Spacer
42	323-10	1	Screw-HH
43	3256-3	1	Washer-Flat
44	3296-39	1	Nut-Lock, NI





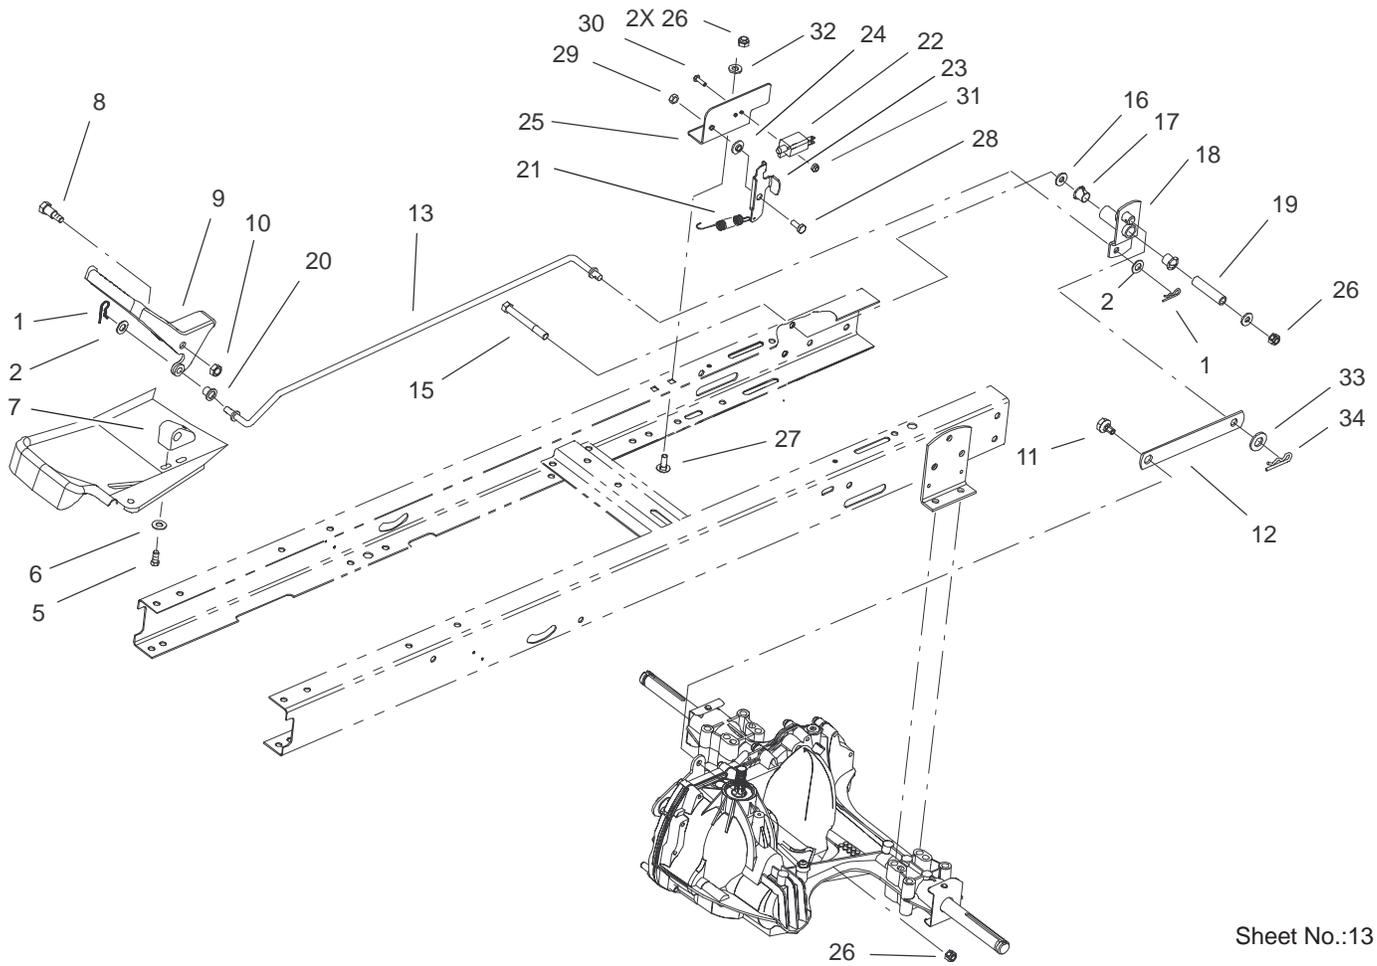


Sheet No.:13

## Hydro Transaxle Controls Assembly

Ref. No.	Part No.	Qty.	Description
1	3290-307	2	Pin-Hair
2	3256-38	2	Washer-Flat
5	46-8090	2	Screw-Plastite
6	3256-22	2	Washer-Flat
7	88-4690	1	Block-Pivot
8	23-0310	1	Bolt-Shoulder
9	99-6120-05	1	Pedal-Control, Speed
10	3296-59	1	Nut-Lock, NI
11	37-8770	1	Bolt-Shoulder
12	99-6833	1	Link-Control, Speed
13	99-6839	1	Rod-Control, Speed
15	322-14	1	Screw-HH
16	3256-2	2	Washer-Flat
17	256-257	2	Flange-Nyliner
18	99-6835-03	1	Pivot ASM
19	99-6832	1	Spacer-Pivot
20	99-6121	1	Bushing
21	99-6805	1	Spring-Extension
22	95-1653	1	Switch-Single Pole
23	99-6807	1	Bracket-Pivot
24	99-6808	1	Washer-Stepped
25	99-6806	1	Bracket-Adjustment
26	3296-29	4	Nut-Lock, NI
27	3230-18	2	Screw-CARR
28	99-6810	1	Screw-Hex Hd
29	3296-42	1	Nut-Lock, NI

Ref. No.	Part No.	Qty.	Description
30	3290-392	2	Screw-HHF
31	3296-1	2	Nut-Lock NI
32	3256-23	2	Washer-Flat
33	3256-26	1	Washer-Flat
34	9335054	1	Pin-Hair

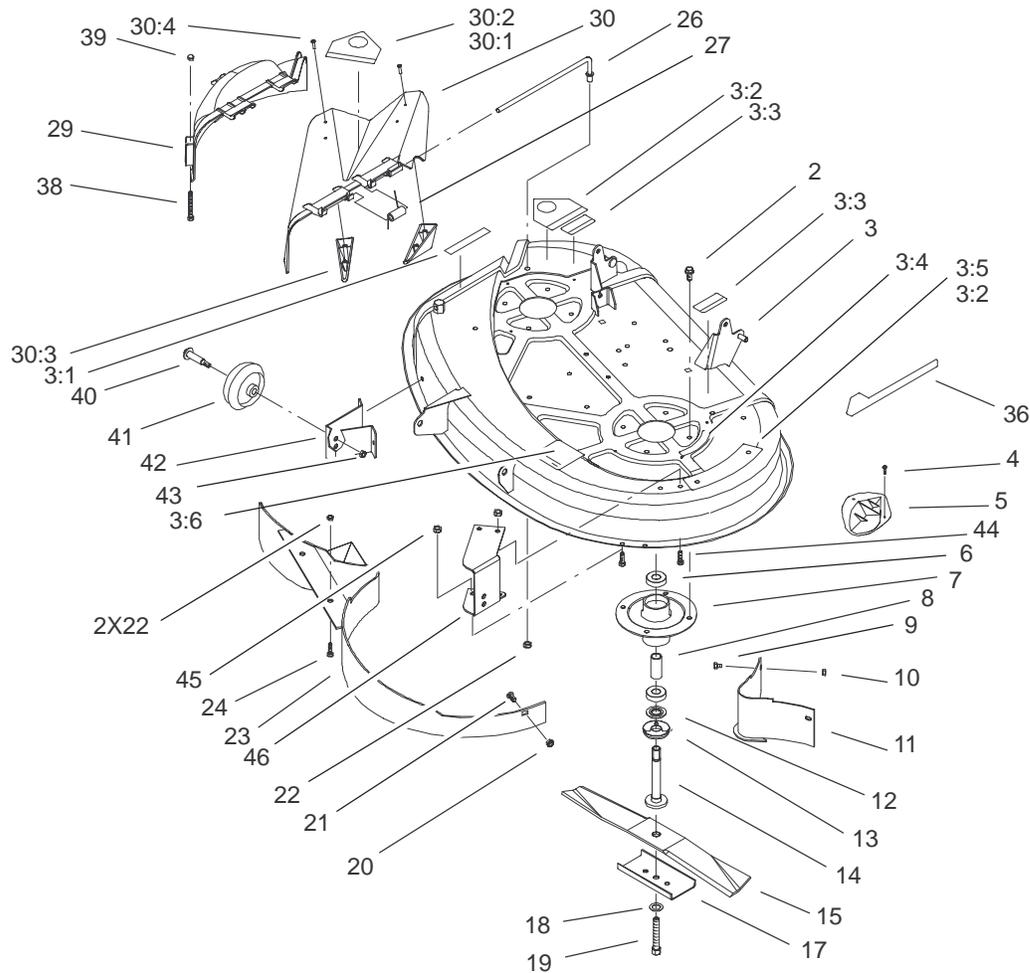


Sheet No.:16

## Deck Assembly

Ref. No.	Part No.	Qty.	Description
2	32144-41	8	Screw-Taptite
3	99-5846	1	Deck ASM (only on: 71227)
3	99-5847	1	Deck ASM (only on: 71242)
3:1	93-7009	1	Decal-Danger (only on: 71242)
3:1	68-3650	1	Decal-Deflector Danger (only on: 71227)
3:2	93-1122	1	Decal-Danger (only on: 71227)
3:2	93-7010	2	Decal-Danger (only on: 71242)
3:3	55-4300	2	Decal-Warning (only on: 71227)
3:3	93-6674	2	Decal-Warning (only on: 71242)
3:4	93-6677	1	Decal-Shield, Danger (only on: 71242)
3:4	68-3660	1	Decal-Shield Danger (only on: 71227)
3:5	79-3140	1	Decal-Danger (only on: 71227)
3:6	93-6679	1	Decal-Routing, Belt
4	32144-111	8	Screw-PPH

Ref. No.	Part No.	Qty.	Description
5	76-2160	4	Plate-Kicker
6	100-1048	4	Bearing-Ball
7	88-4510	2	Spindle
8	62-3661	2	Spacer-Bearing
9	321-4	2	Screw-HH
10	3296-42	2	Nut-Lock, NI
11	79-1640-03	1	Baffle
12	80-4380	2	Spacer
13	80-4360	2	Shield-Bearing
14	80-4341	2	Spindle-Shaft
15	79-3061	2	Blade
17	80-0510-03	2	Blade-Stiffener
18	3290-465	2	Washer-Belleville
19	26-0671	2	Screw-Blade
20	3296-29	1	Nut-Lock, NI
21	3230-1	1	Screw-CARR
22	3296-39	3	Nut-Lock, NI
23	79-1600-03	1	Baffle
24	323-5	2	Screw-HH
26	95-1661	1	Rod-Pivot
27	57-6950	1	Spring
29	88-4430	1	Recycler Cover
30	93-7695	1	Deflector ASM (only on: 71242)
30	93-0317	1	Deflector ASM (only on: 71227)



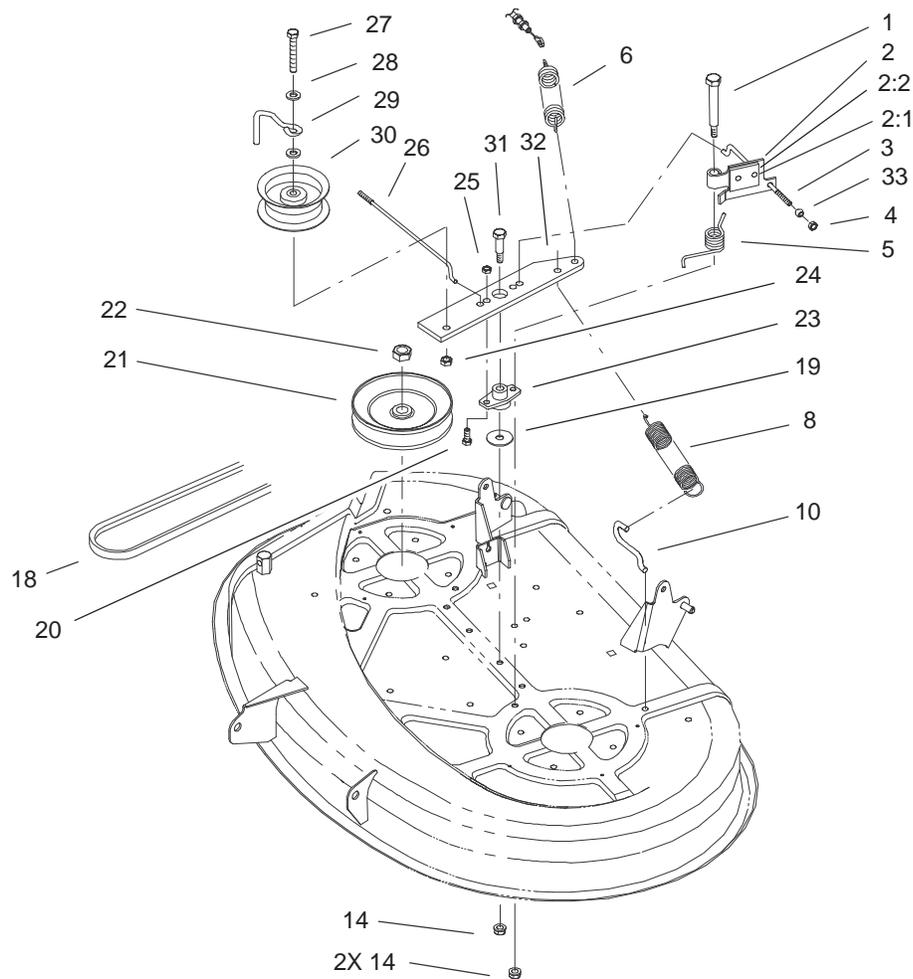


Sheet No.:17

## Deck Blade Drive & Braking Assembly

Ref. No.	Part No.	Qty.	Description
1	88-4590	2	Bolt-Shoulder
2	88-6100	2	Brake ASM
2:1	3290-282	2	Rivet-Pop, Steel
2:2	56-9830	1	Pad-Brake
3	88-5550	1	Rod-Brake, Deck LH
4	3296-42	2	Nut-Lock, NI
5	88-5910	2	Spring-Torsion
6	88-6130	1	Spring-Deck, Engagement
8	92-8934	1	Spring-Extension
10	88-5970	1	Hook-Return, Spring
14	3296-58	3	Nut-Lock NI
18	88-6250	1	V-Belt
19	3256-68	1	Washer-Flat
20	322-5	2	Screw-HH
21	88-5330	2	Pully-Deck
22	3219-6	2	Nut-Hex
23	88-4980	1	Bushing-Idler, Arm
24	3296-39	1	Nut-Lock, NI
25	3296-29	2	Nut-Lock, NI
26	88-5540	1	Rod-Brake, Deck RH
27	323-12	1	Screw-HH
28	3256-24	2	Washer-Flat
29	88-5070	1	Guide-Idler, Belt
30	88-5630	1	Pulley-Idler, Flat
31	7-0030	1	Bolt-Shoulder

Ref. No.	Part No.	Qty.	Description
32	88-4870-03	1	Arm-Idler, Deck
33	67-0710	2	Ball-Swivel, Stop

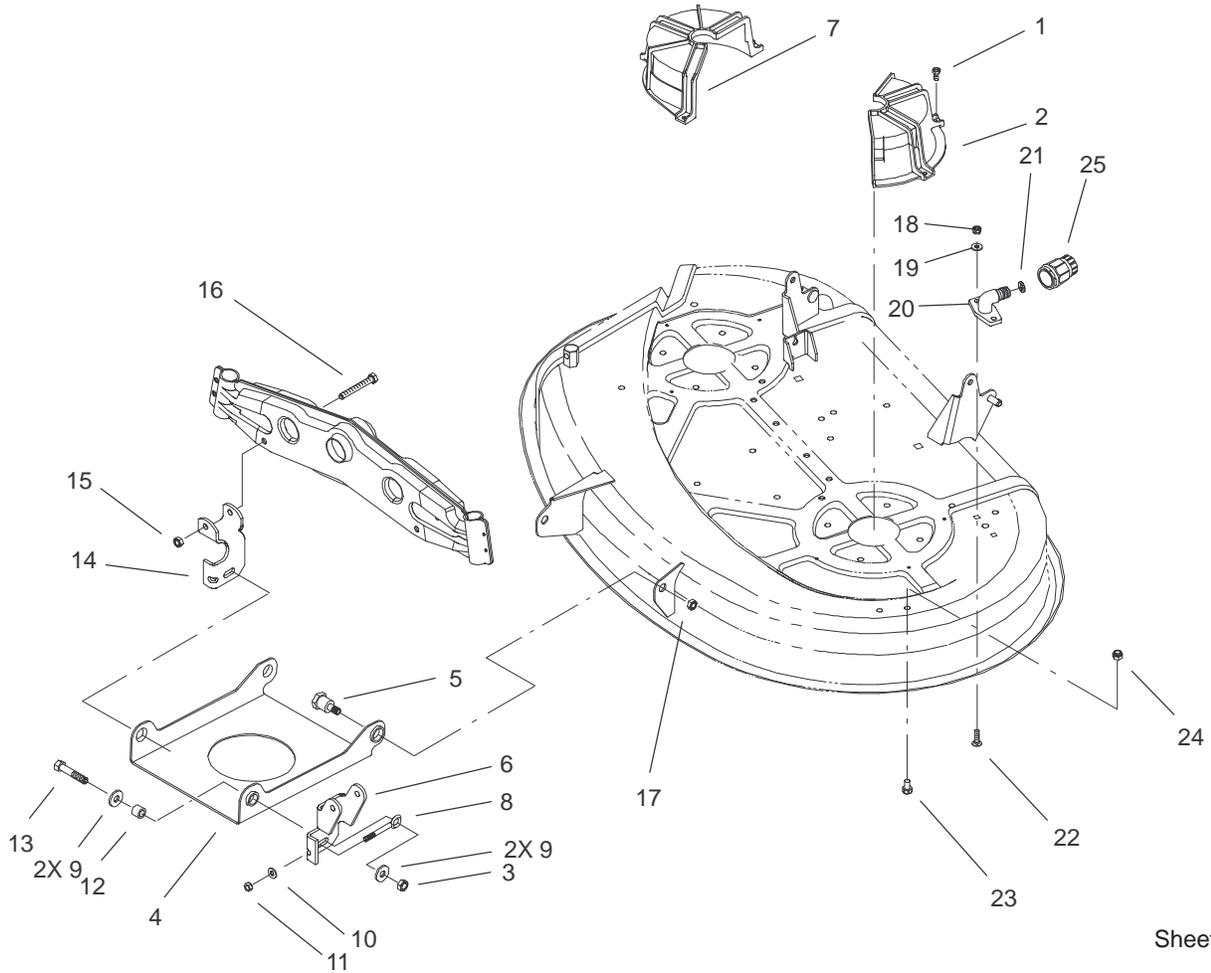


Sheet No.:18

## Deck Engagement Assembly

Ref. No.	Part No.	Qty.	Description
1	32104-76	5	Screw
2	88-4030	1	Guide-Belt, Deck LH
3	3296-39	2	Nut-Lock, NI
4	93-3881-03	1	Pan-Front Deck, Suspension
5	94-5823	2	Bolt-Shoulder
6	94-1971-03	1	Bracket-Deck Suspension, LH
7	88-4020	1	Guide-Belt, Deck RH
8	61-9980	2	Screw-Adjusting
9	80-6990	4	Washer-Hardened
10	3256-22	2	Washer-Flat
11	3296-42	2	Nut-Lock, NI
12	93-9847	2	Spacer
13	323-9	2	Screw-HH
14	94-1970-03	1	Bracket-Suspension, Deck RH
15	3296-29	2	Nut-Lock, NI
16	322-12	2	Screw-HH
17	3296-23	2	Nut-Lock, NI
18	3296-16	2	Nut-Lock, NI
19	3256-1	2	Washer-Flat
20	95-2747	1	Fitting-Washout
21	46-6290	1	O-Ring
22	3229-1	2	Screw-CARR

Ref. No.	Part No.	Qty.	Description
23	322-1	2	Screw-HH (only on: 71227)
24	3296-29	2	Nut-Lock, NI (only on: 71227)
25	95-3270	1	Connector-Hose (only on: 71227)



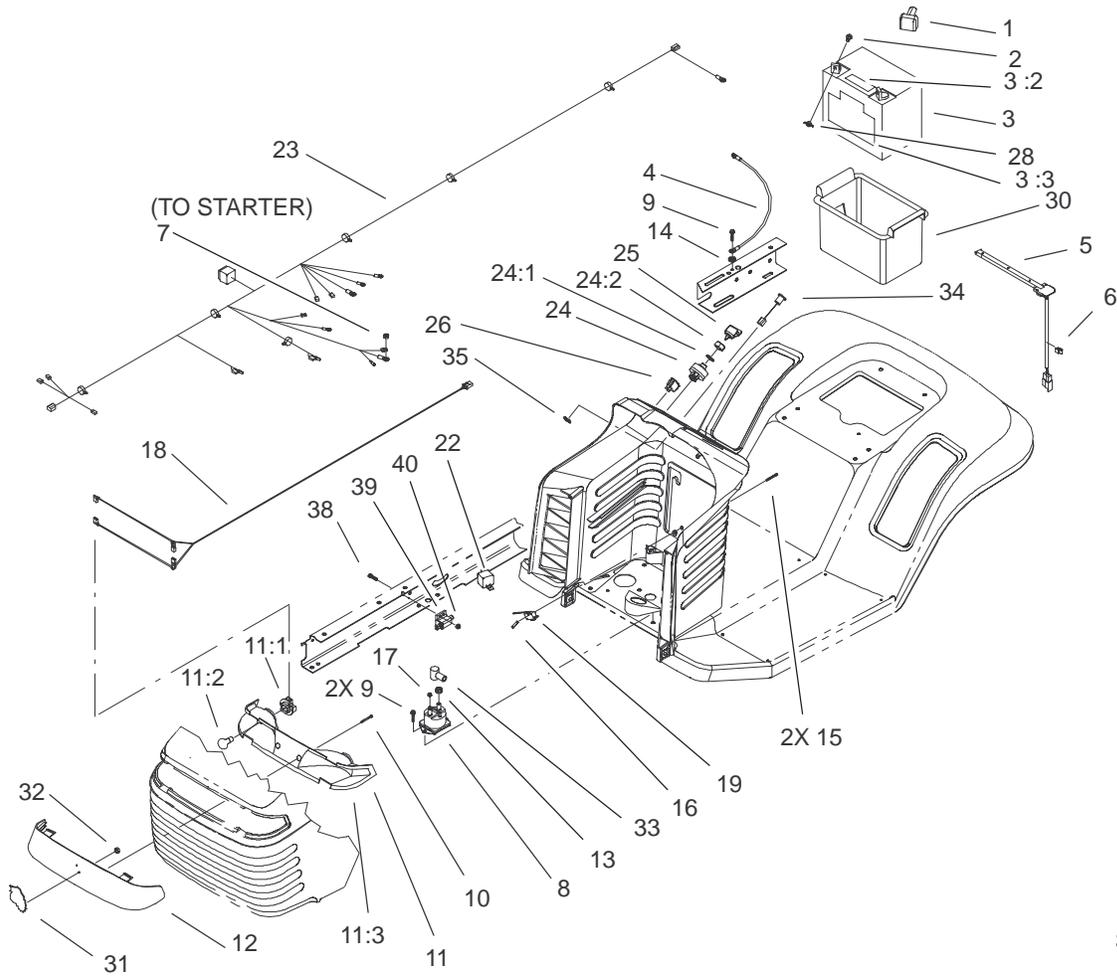


Sheet No.:20

## Electrical Assembly

Ref. No.	Part No.	Qty.	Description
1	28-8080	1	Boot-Terminal
2	321-4	2	Screw-HH
3	104-1755	1	Battery-155 Cca
3:2	104-4163	1	Decal-Battery
3:3	104-4164	1	Decal-Battery
4	44-8110	1	Wire ASM
5	38-1420	1	Switch-Seat
6	702366	1	Clip-Wire Retainer
7	32149-2	1	Nut
8	28-4210	1	Solenoid
9	9266714	3	Screw-HWH
10	32144-32	2	Screw
11	88-3970	1	Reflector And Lamp ASM
11:1	111686	2	Socket-Light
11:2	7228	2	Bulb
11:3	93-8741	1	Reflector
12	88-3960	1	Lens-Headlight
13	32149-1	2	Nut
14	3255-7	2	Washer-Lock/Ext
15	93-0539	2	Screw-HH
16	3290-354	1	Nut-Speed
17	32149-8	2	Nut-Keps
18	99-1935	1	Harness-Headlight
19	88-9932	1	Switch-Micro
22	98-7249	1	Relay


Ref. No.	Part No.	Qty.	Description
23	99-6840	1	Harness-Wire, Hydro
24	88-9830	1	Key Switch ASM
24:1	3254-5	1	Washer-Lock, Internal
24:2	218-461	1	Nut-HH
25	63-8360	1	Key-Ignition
26	92-8875	1	Switch-Rocker
28	32103-22	2	Nut-Wing
30	88-4040	1	Box-Battery
31	80-2240	1	Emblem-Grille Wheelhorse
32	3290-299	1	Clip
33	93-3190	1	Boot-Terminal, Insulator
34	95-7652	1	Light-Indicator
35	99-6059	1	Clip-Retainer
38	3274-14	2	Screw-HSH
39	65-7410	1	Switch-Single Pole
40	3296-2	2	Nut-Lock

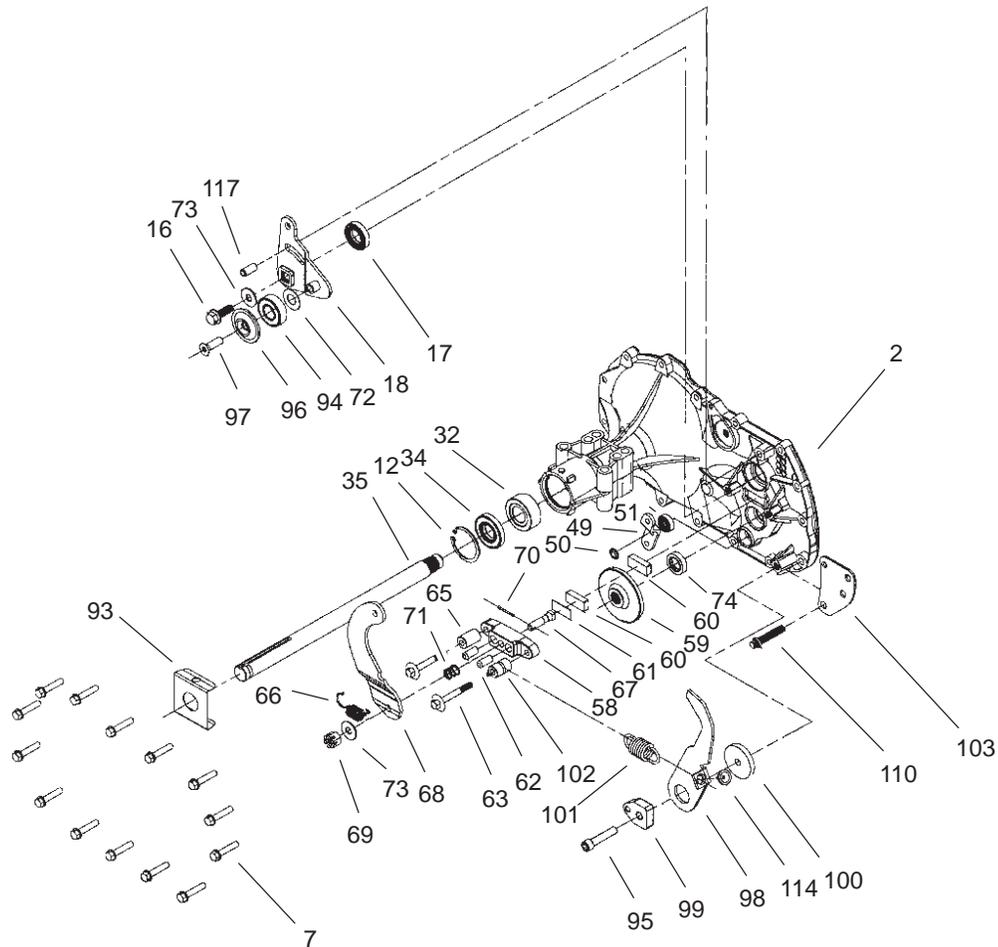

Sheet No.:3

## Housing and Bearing Assembly

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
02	104-5302	1	Side Housing ASM	71	104-2188	1	Spring-Brake Anti Drag Comp.
07	104-5305	14	Screw-Hex Flange	72	94-1933	1	Washer
12	104-5309	1	Ring-Retaining	73	104-2146	2	Washer
16	104-5312	1	Screw-Hex Flange	74	104-5347	1	Seal-Oil
17	104-5313	1	Seal-Lip	93	104-5353	1	Clip-Spring
18	104-5314	1	Arm-Control	94	104-2156	1	Bearing
32	104-5321	1	Bearing-Sleeve, Outboard	95	104-2155	1	Screw
34	104-5322	1	Seal-Lip	96	104-2157	1	Spacer-Locating
35	104-5323	1	Shaft-Axle RH	97	104-2158	1	Screw-Countersunk
49	104-5336	1	Arm-Bypass	98	104-5354	1	Arm-Return
50	104-5337	1	Ring-Retaining	99	104-2119	1	Puck-Adjusting
51	104-5338	1	Seal-Lip	100	104-5355	1	Washer
58	104-5343	1	Yoke-Brake	101	104-5356	1	Spring-Extension
59	104-5344	1	Rotor-Brake	102	104-5357	1	Spacer
60	104-2171	2	Puck-Brake	103	104-5358	1	Bracket-Torque
61	104-2181	1	Puck-Plate	110	104-2148	1	Screw-Torx Head
62	104-2176	2	Pin-Brake	114	104-5363	1	Guide-Spring
63	104-5345	2	Screw-Hex Flange	117	104-5365	1	Pin-Spring
65	104-2180	1	Spacer				
66	104-2184	1	Spring-Brake Arm Bias				
67	104-2174	1	Bolt-Square Head				
68	104-5346	1	Arm-Brake				
69	93-3807	1	Nut - Castle				
70	104-2179	1	Pin-Cotter				

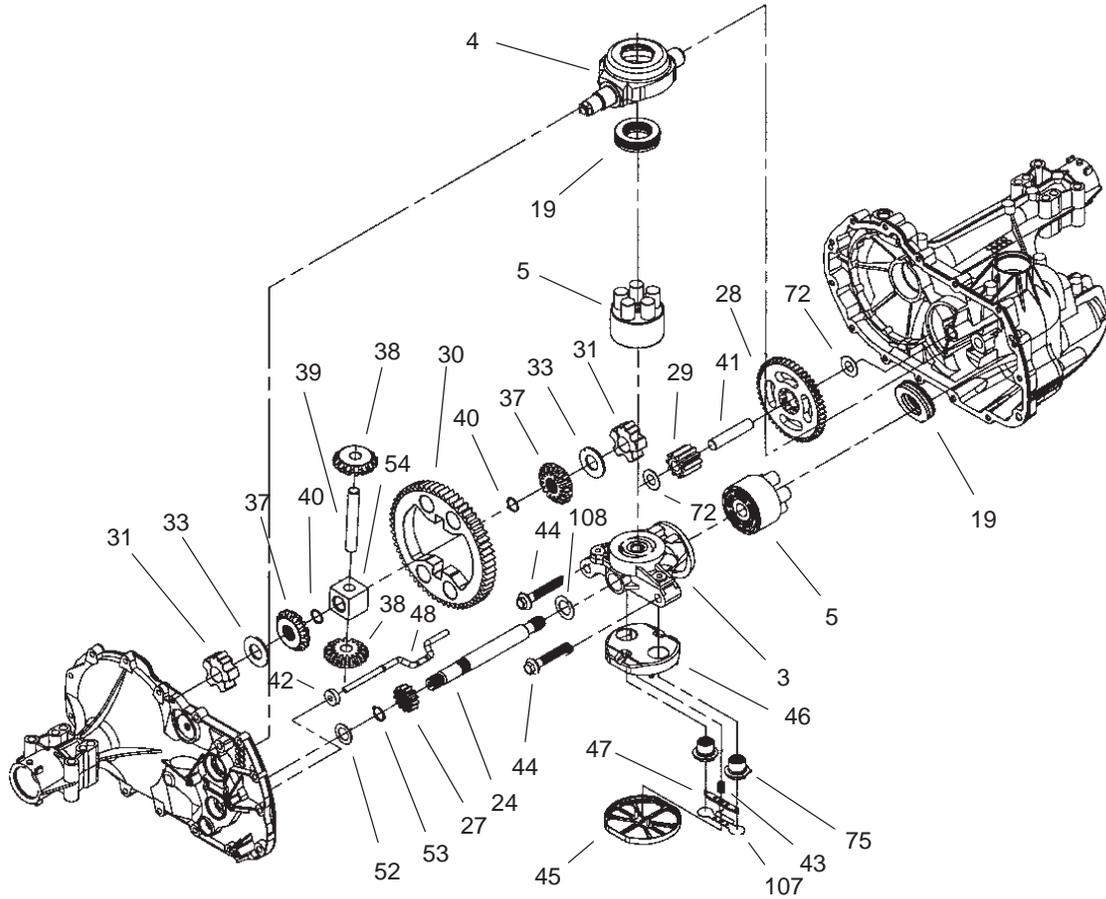

Sheet No.:4


### Gear Assembly


Ref. No.	Part No.	Qty.	Description
03	104-5303	1	Center Section ASM
04	104-5304	1	Swashplate-Trunnion Machined
05	104-2106	2	10cc Cylinder Block ASM
19	94-6922	2	Bearing - Thrust
24	104-5314	1	Arm-Control
27	104-5316	1	Gear-Pinion, 13t
28	104-5317	1	Gear- 10t/48t
29	104-5318	1	Gear-Jackshaft 10t
30	104-5319	1	Gear-Bull 60t
31	104-5320	2	Bearing-Sleeve
33	94-1943	2	Washer
37	104-5325	2	Gear-Miter
38	104-5326	2	Gear-Miter 15t
39	104-5327	1	Shaft
40	104-5328	2	Ring-Spiral Retaining
41	104-5329	1	Pin-Jackshaft
42	104-5330	1	Magnet-Ring
43	104-5331	1	Spring-Bypass
44	94-6926	2	Bolt
45	104-5332	1	Filter
46	104-5333	1	Base-Filter
47	104-5334	1	Actuator-Bypass
48	104-5335	1	Rod-Bypass Actuator
52	104-5339	1	Washer-Flat

Ref. No.	Part No.	Qty.	Description
53	104-5340	1	Ring-Retaining
54	104-5341	1	Bearing-Center Block
72	94-1933	2	Washer
75	104-5348	2	Check Plug ASM
107	104-5359	1	Deflector
108	104-5360	1	Washer-Motor Shaft



# Electric Schematic

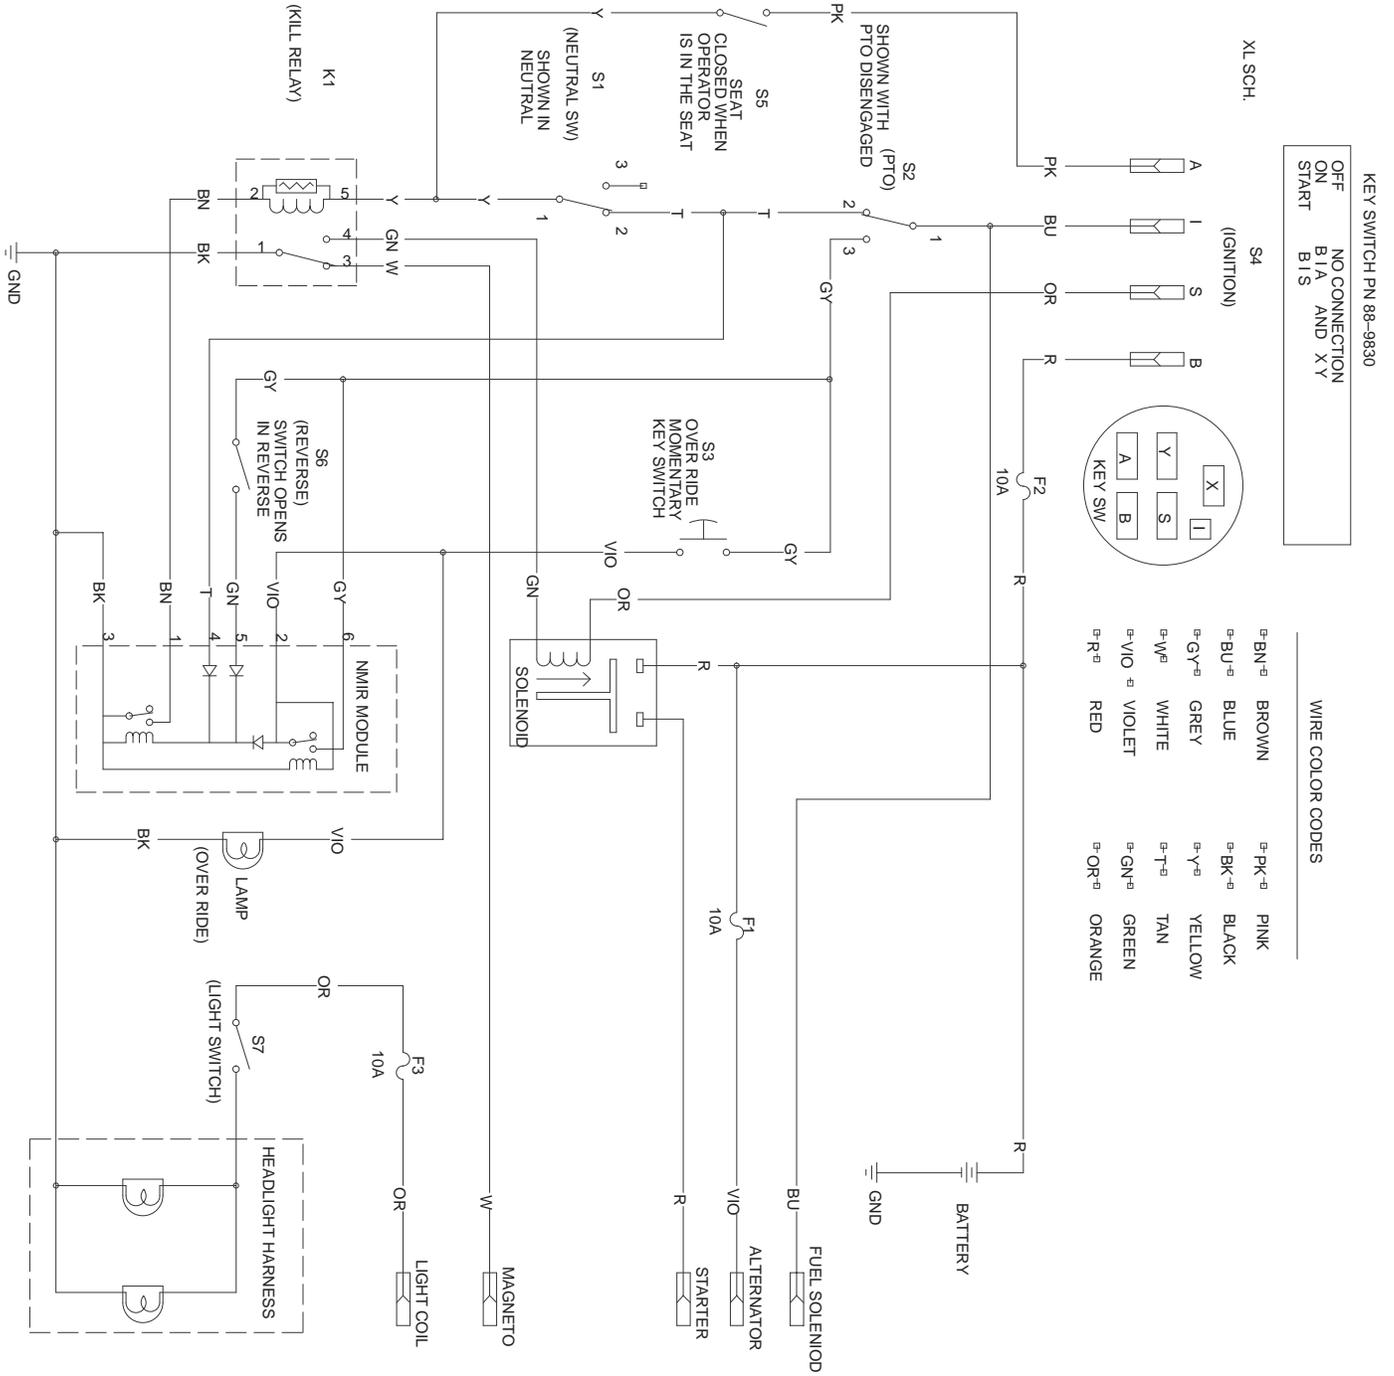

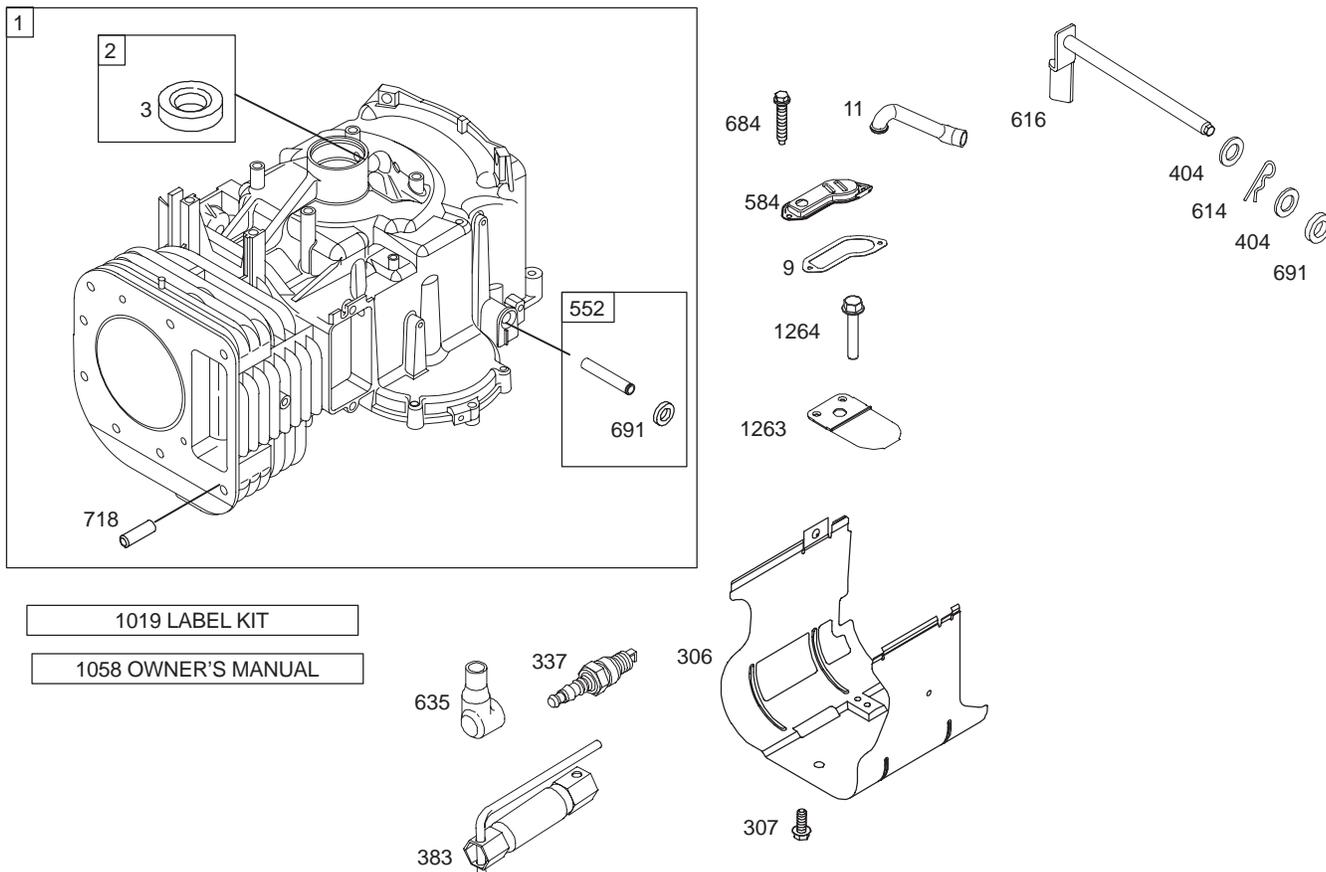


Assemblies include all parts shown in frames.

## Cylinder Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
1	697132	1	Cylinder Assembly
2	399265	1	Kit-Bushing/Seal (Magneto Side)
★3	391086	1	Seal-Oil (Magneto Side)
★9	697109	1	Gasket-Breather
11	697113	1	Tube-Breather
306	697107	1	Shield-Cylinder
307	691003	1	Screw (Cylinder Shield)
337	491055	1	Plug-Spark
383	89838	1	Wrench-Spark Plug
404	691691	1	Washer (Governor Crank)
552	697144	1	Bushing-Governor Crank
584	697112	1	Cover-Breather Passage
614	691620	1	Pin-Cotter
616	692012	1	Crank-Governor
635	691909	1	Boot-Spark Plug
684	697157	1	Screw (Breather Passage Cover)

Ref. No.	Part No.	Qty.	Description
★691	692407	1	Seal-Governor Shaft
718	690959	1	Pin-Locating
1019	697143	1	Kit-Label
1058	275038	1	Owner's Manual
1263	697124	1	Reed-Breather
1264	697104	1	Screw (Breather Reed)

★ Included in Engine Gasket Set-Ref. 358.

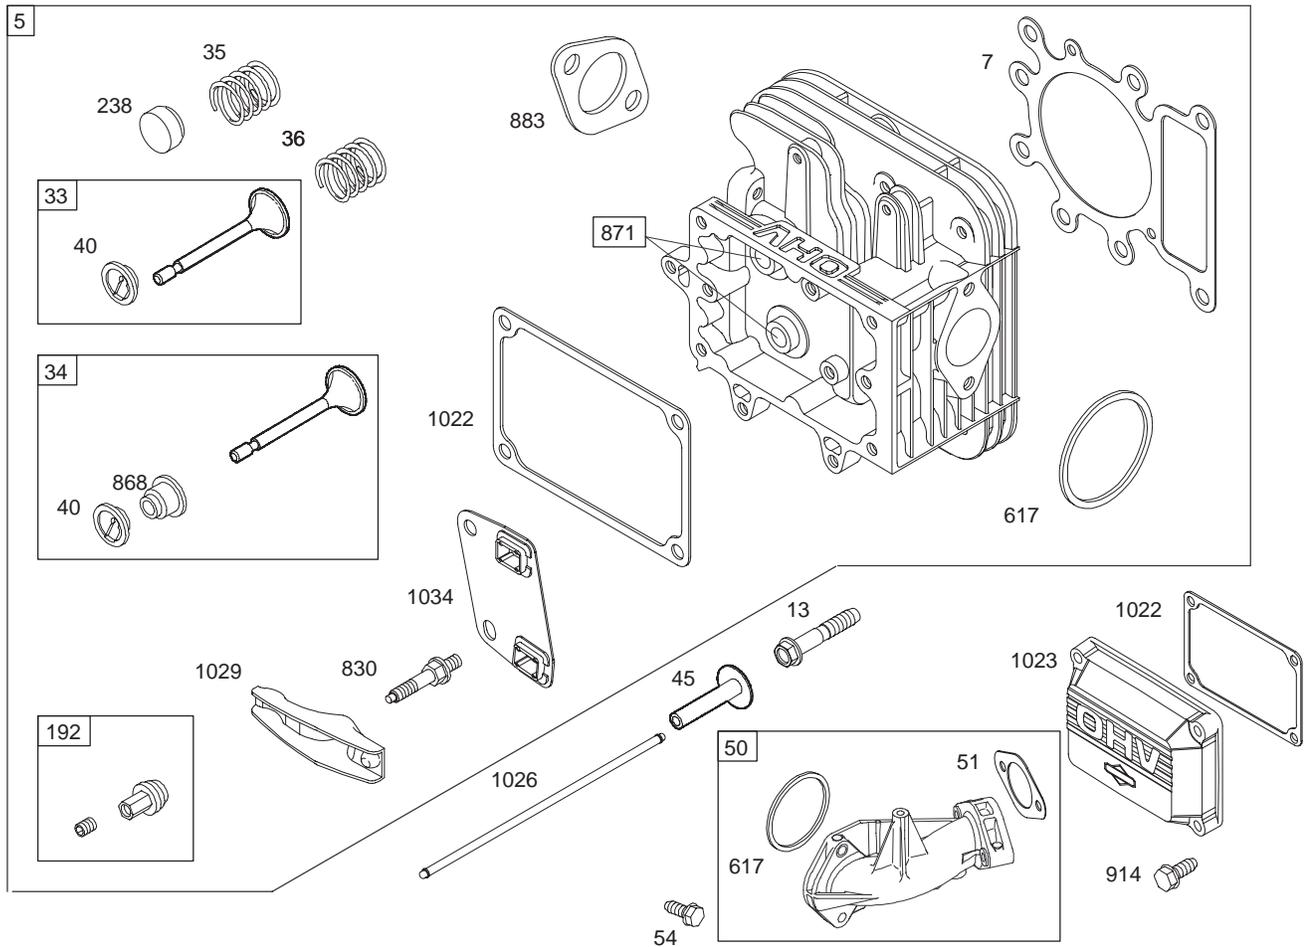


## Cylinder Head Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
5	691165	1	Head-Cylinder
Δ★7	273280	1	Gasket-Cylinder Head
13	690360	1	Screw (Cylinder Head Gasket)
33	495856	1	Valve-Exhaust
34	495857	1	Valve-Intake
35	691279	1	Spring-Valve (Intake)
36	691279	1	Spring-Valve (Exhaust)
40	691752	1	Retainer-Valve
45	690564	1	Tappet-Valve
50	690193	1	Manifold-Intake
★Δ◆51	692137	1	Gasket-Intake
54	691148	1	Screw (Intake Manifold)
192	691986	1	Adjustor-Rocker Arm
238	691843	1	Cap-Valve
★617	692138	1	Seal-O Ring (Intake Manifold)
830	691095	1	Stud-Rocker Arm
Δ★868	690968	1	Seal-Valve
871	690969	1	Bushing-Valve Guide

Ref. No.	Part No.	Qty.	Description
883	692236	1	Gasket-Exhaust
914	690960	1	Screw (Rocker Cover)
★1022	272475	1	Gasket-Rocker Cover
1023	692492	1	Cover-Rocker
1026	692003	1	Rod-Push (Intake)
	692011	1	Rod-Push (Exhaust)
1029	691751	1	Arm-Rocker
1034	690822	1	Guide-Push Rod

Δ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.



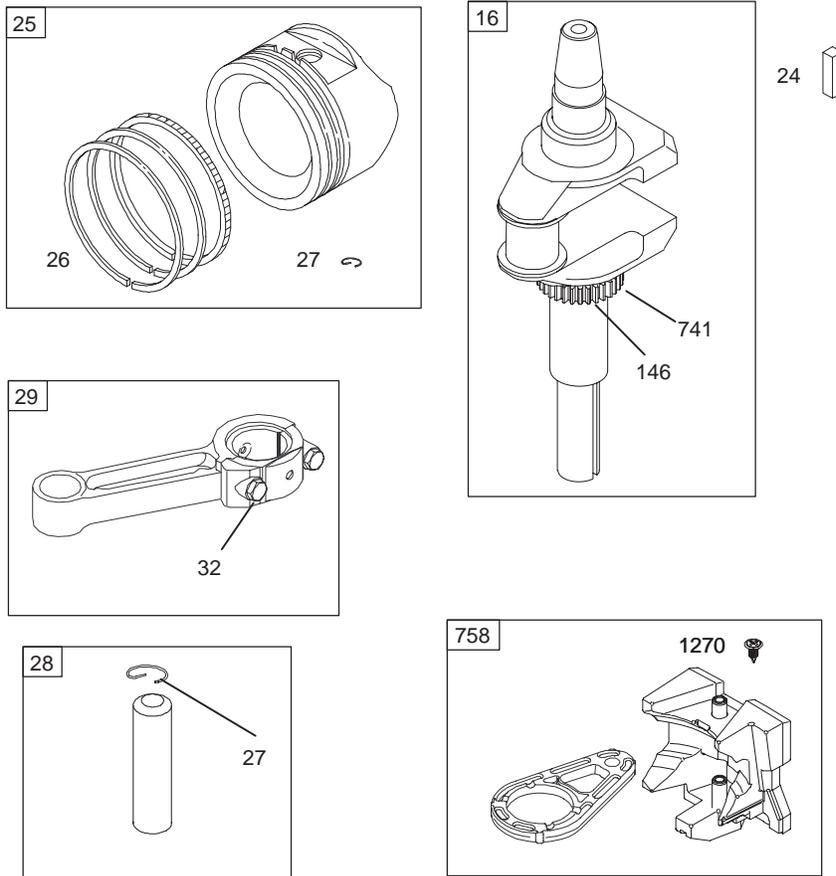


Assemblies include all parts shown in frames.

## Crankshaft Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
16	697127	1	Crankshaft
24	222698	1	Key-Flywheel
25	697114	1	Piston Assembly (Standard)
	697116	1	Piston Assembly (.010" Oversize)
	697117	1	Piston Assembly (.020" Oversize)
	697118	1	Piston Assembly (.030" Oversize)
26	697115	1	Ring Set (Standard)
	697119	1	Ring Set (.010" Oversize)
	697120	1	Ring Set (.020" Oversize)
	697121	1	Ring Set (.030" Oversize)
27	697199	1	Lock-Piston Pin
28	697099	1	Pin-Piston (Standard)

Ref. No.	Part No.	Qty.	Description
29	697126	1	Rod-Connecting (Standard)
	697264	1	Rod-Connecting (.020" Undersize)
	32	1	Screw (Connecting Rod)
146	690979	1	Key-Timing
741	697128	1	Gear-Timing
758	697134	1	Counterweight
1270	697156	1	Plug-AVS Counterweight

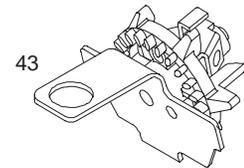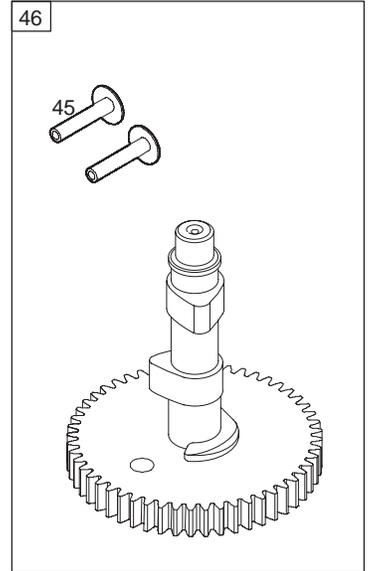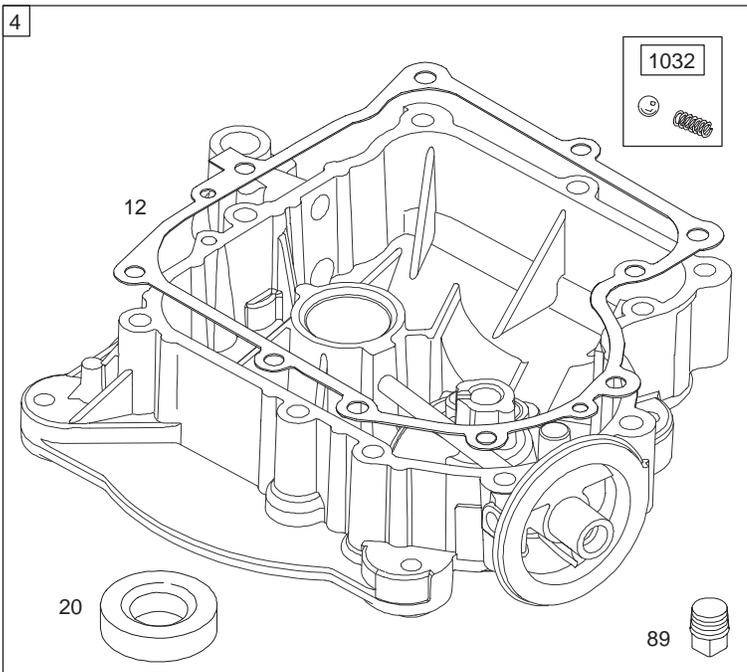

Assemblies include all parts shown in frames.


## Crankcase Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
4	697188	1	Sump-Engine
★12	697110	1	Gasket-Crankcase
15	690946	1	Plug-Oil Drain
★20	690947	1	Oil Seal (PTO Side)
22	692125	1	Screw (Engine Sump)
43	691968	1	Governor/Oil Slinger
45	690564	1	Tappet-Valve
46	697139	1	Camshaft
89	690283	1	Plug-Oil
1032	491710	1	Ball-Oil Pump

Ref. No.	Part No.	Qty.	Description

★ Included in Engine Gasket Set-Ref. 358.



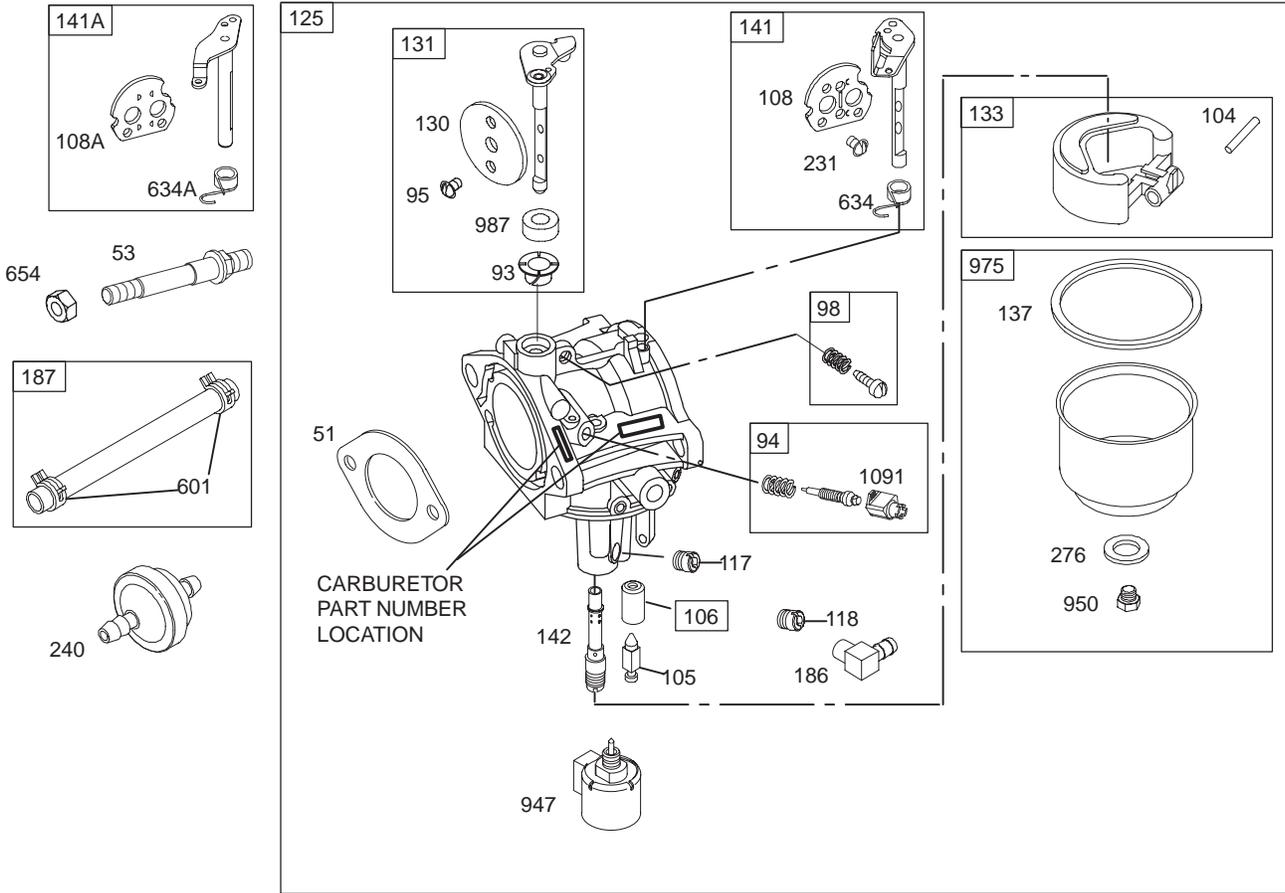

Assemblies include all parts shown in frames.

## Carburetor Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
★△◆51	692137	1	Gasket-Intake
53	690227	1	Stud (Carburetor)
●93	690602	1	Bushing-Throttle Shaft
94	498030	1	Kit-Idle Mixture
●95	691636	1	Screw (Throttle Valve)
98	495800	1	Kit-Idle Speed
●104	690525	1	Pin-Float Hinge
●105	231855	1	Valve-Float Needle
●106	690577	1	Seat-Inlet
108	690464	1	Valve-Choke (Manual Choke)
108A	692344	1	Valve-Choke (Choke A Matic)
●117	694352	1	Jet-Main (Standard)
118	697228	1	Jet-Main (High Altitude)
125	697190	1	Carburetor
130	691750	1	Valve-Throttle
131	494379	1	Kit-Throttle Shaft
133	494381	1	Float-Carburetor
◆137	281165	1	Gasket-Float Bowl


Ref. No.	Part No.	Qty.	Description
141	495097	1	Kit-Choke Shaft (Manual Choke)
141A	495931	1	Kit-Choke Shaft (Choke A Matic)
●142	697140	1	Nozzle-Carburetor
186	692317	1	Connector-Hose
187	691050	1	Line-Fuel (Cut to Required Length)
●231	691636	1	Screw (Choke Valve)
240	394358	1	Filter-Fuel
◆276	692255	1	Sealing Washer
601	95162	1	Clamp-Hose
●634	690801	1	Spring/Seal Assembly
●634A	690802	1	Spring/Seal Assembly
654	690958	1	Nut (Carburetor)
947	694393	1	Solenoid-Fuel
950	691657	1	Screw (Float Bowl)
975	495933	1	Bowl-Float
●987	691326	1	Seal-Throttle Shaft
1091	691333	1	Cap-Limiter

△ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.

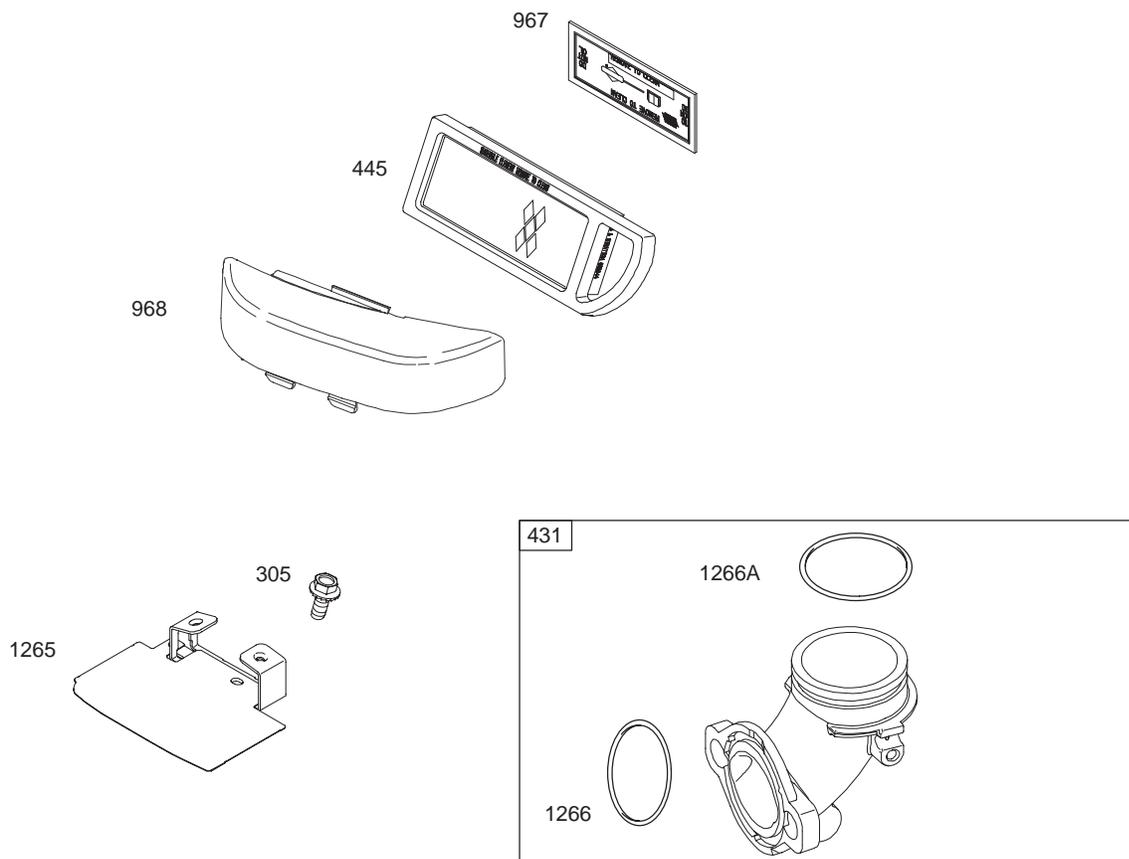


Assemblies include all parts shown in frames.

## Air Cleaner Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description	Ref. No.	Part No.	Qty.	Description
305	690960	1	Screw (Blower Housing Support)				
431	697122	1	Elbow-Intake				
445	697014	1	Filter-Air Cleaner Cartridge				
967	697015	1	Filter-Pre Cleaner				
968	697084	1	Cover-Air Cleaner				
1265	697125	1	Support-Blower Housing				
★1266	691917	1	Seal-O Ring (Intake Elbow)				
★1266A	697123	1	Seal-O Ring (Intake Elbow)				

★ Included in Engine Gasket Set-Ref. 358.

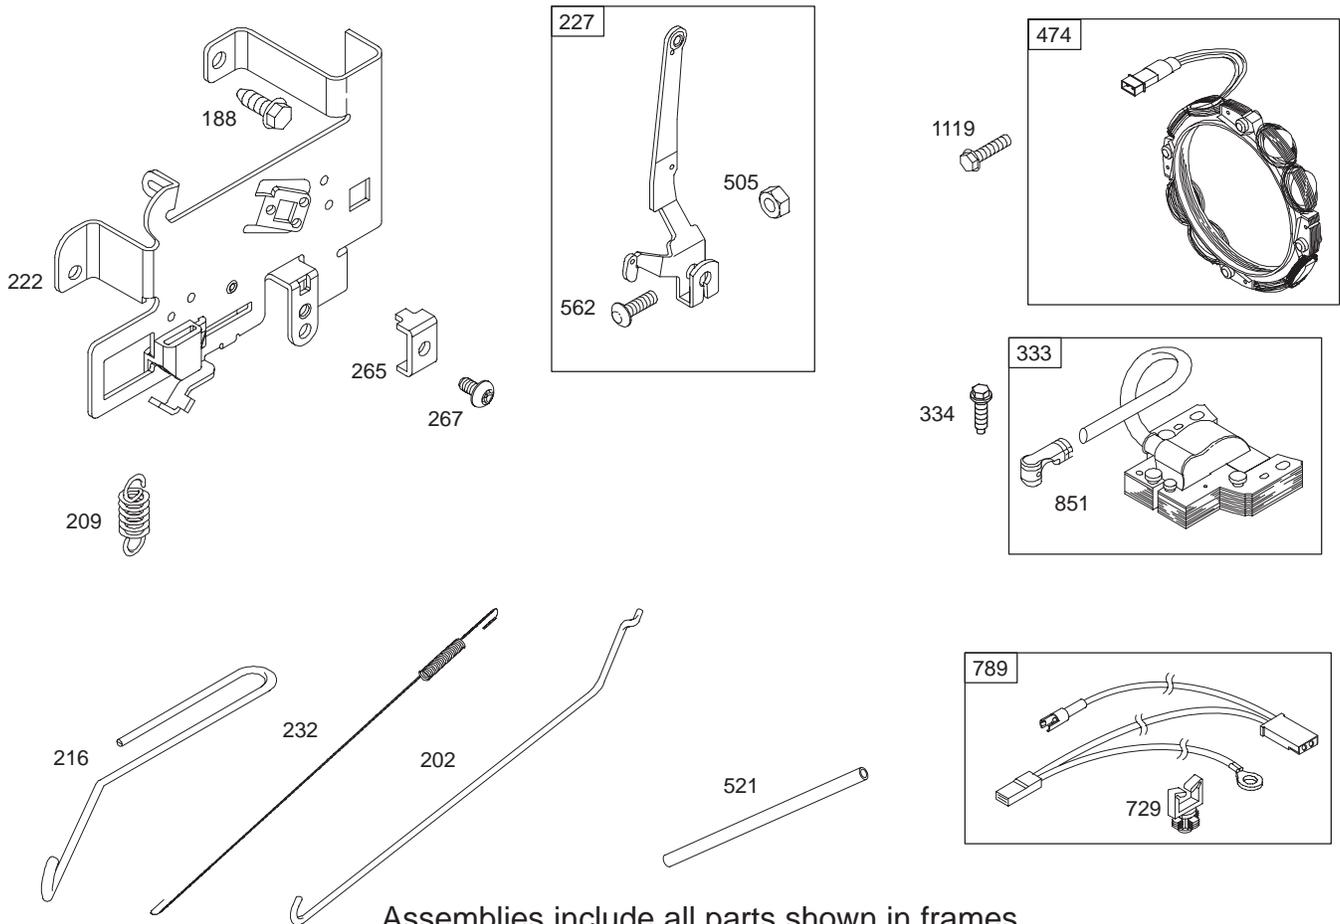


Assemblies include all parts shown in frames.

## Governor Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
188	691693	1	Screw (Control Bracket)
202	691841	1	Link-Mechanical Governor
209	692208	1	Spring-Governor
216	691840	1	Link-Choke
222	694042	1	Bracket-Control
227	691374	1	Lever-Governor Control
232	691842	1	Spring-Governor Link
265	691024	1	Clamp-Casing
267	695134	1	Screw (Casing Clamp)
333	492341	1	Armature-Magneto
334	691061	1	Screw (Magneto Armature)
474	696459	1	Alternator
505	691251	1	Nut (Governor Control Lever)
521	690581	1	Shield-Cable
562	691119	1	Bolt (Governor Control Lever)

Ref. No.	Part No.	Qty.	Description
729	691335	1	Clip-Wire
789	692037	1	Wiring-Harness
851	493880	1	Terminal-Spark Plug
1119	691183	1	Screw (Alternator)


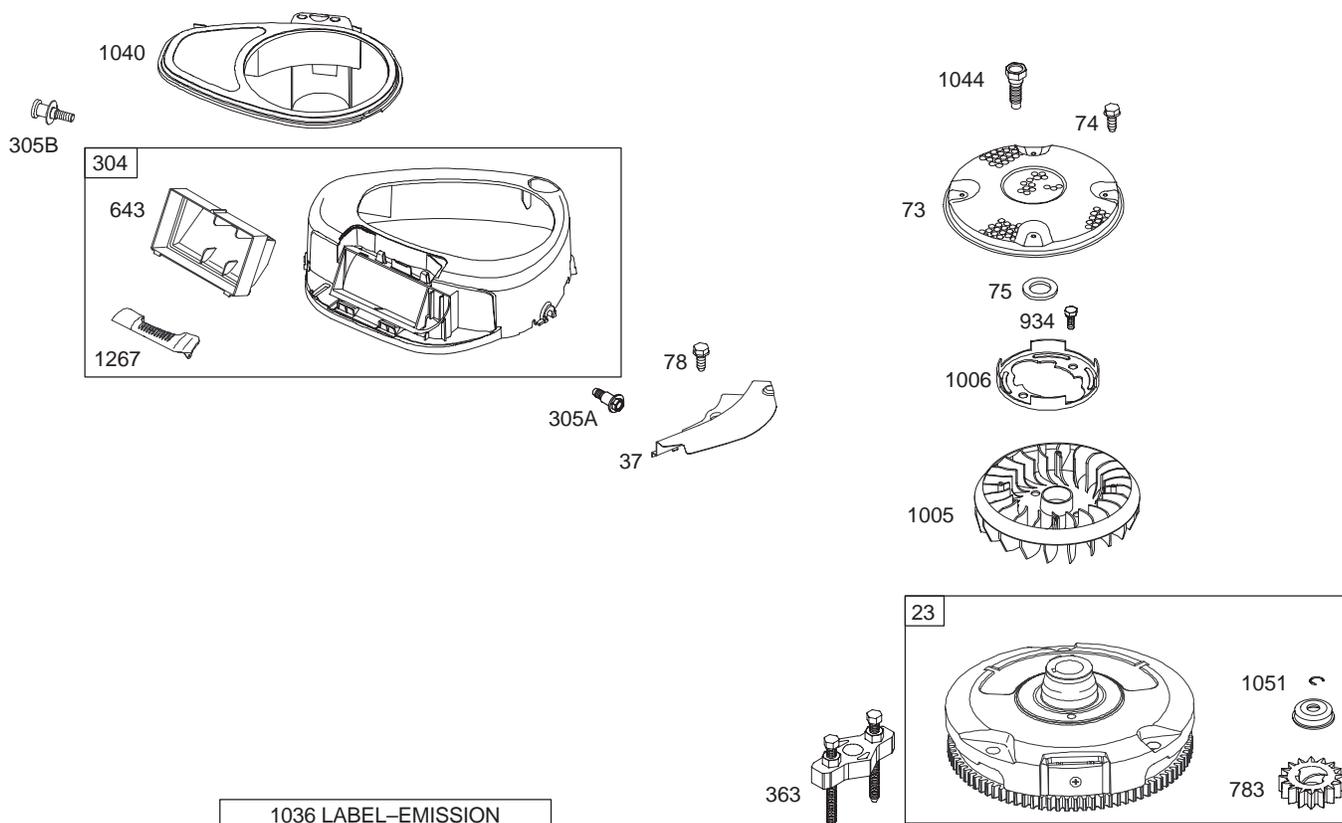


Assemblies include all parts shown in frames.

## Blower Housing Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
23	693557	1	Flywheel
37	697108	1	Guard-Flywheel
73	697133	1	Screen-Rotating
74	690661	1	Screw (Rotating Screen)
75	690582	1	Washer (Flywheel)
78	690661	1	Screw (Flywheel Guard)
304	697137	1	Housing-Blower
305A	697102	1	Screw (Blower Housing)
305B	697103	1	Screw (Blower Housing)
363	19203	1	Puller-Flywheel
643	697155	1	Retainer-Air Filter
783	693713	1	Gear-Pinion
934	691058	1	Screw (Fan Retainer)
1005	697111	1	Fan-Flywheel
1006	690452	1	Retainer-Fan
1036	695700	1	Label-Emission
1040	697142	1	Plate-Trim
1044	691658	1	Screw (Crankshaft Extension)



Ref. No.	Part No.	Qty.	Description
1051	691265	1	Ring-Retaining
1267	697135	1	Latch-Blower Housing

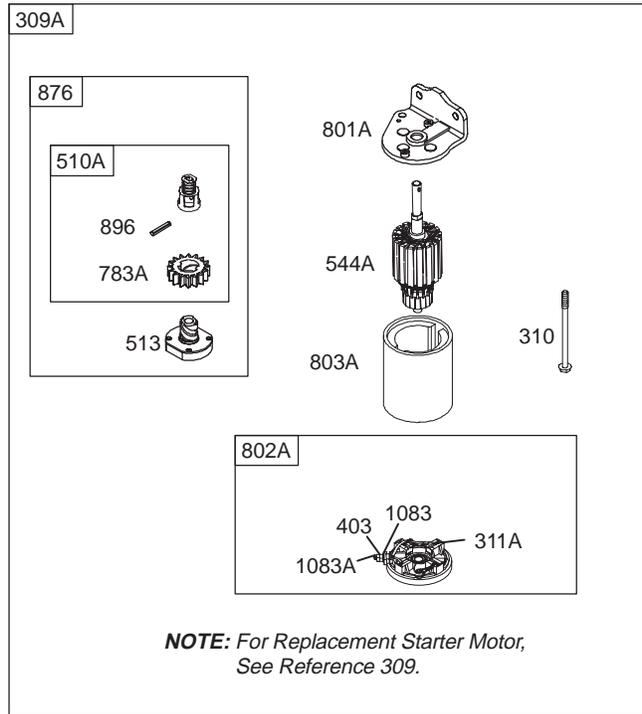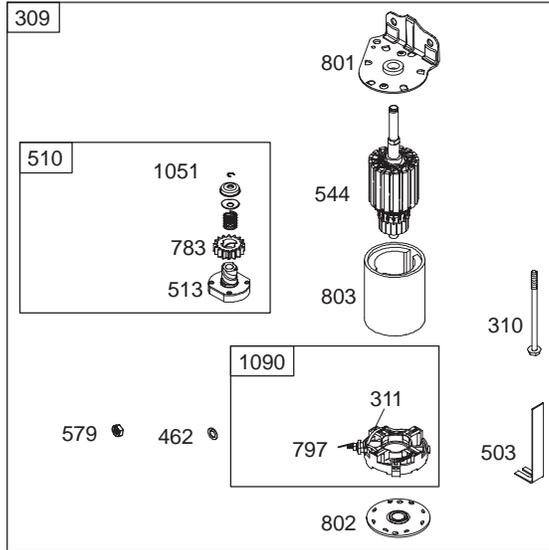

## Starter Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
309	693551	1	Motor-Starter
309A		1	Motor-Starter (For Replacement Starter Motor, See Ref. 309)
310	690323	1	Bolt (Starter Motor)
311	497608	1	Brush Set
311A	395538	1	Brush Set
403	690288	1	Washer (End Cap)
462	691261	1	Washer (Brush Retainer)
503	691532	1	Strap-Starter
510	693699	1	Drive-Starter
510A	495878	1	Drive-Starter
513	692024	1	Drive Clutch
544	692034	1	Armature-Starter
544A	390837	1	Armature-Starter
579	691029	1	Nut (Brush Retainer)
697	690372	1	Screw (Drive Cap)
729A	691224	1	Clip-Wire

Ref. No.	Part No.	Qty.	Description
783	693713	1	Gear-Pinion
783A	693059	1	Gear-Pinion
797	693167	1	Nut (Brush Retainer)
801	691283	1	Cap-Drive
801A	691429	1	Cap-Drive
802	691286	1	Cap-End
802A	395537	1	Cap-End
803	693757	1	Housing-Starter
803A	398159	1	Housing-Starter
876	495877	1	Kit-Gear
896	691641	1	Pin-Drive Retainer
1051	691265	1	Ring-Retaining
1090	691293	1	Retainer-Brush
1083	690958	1	Nut (End Cap)
1083A	691626	1	Nut (End Cap)

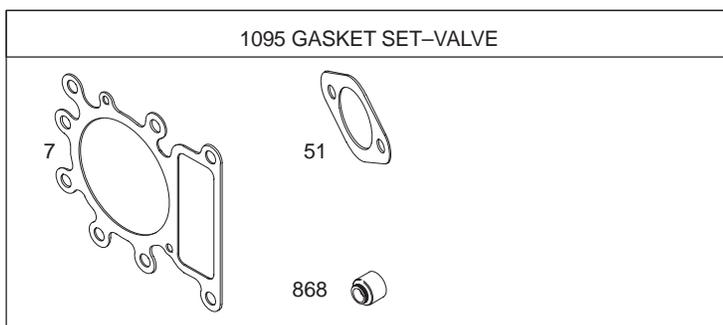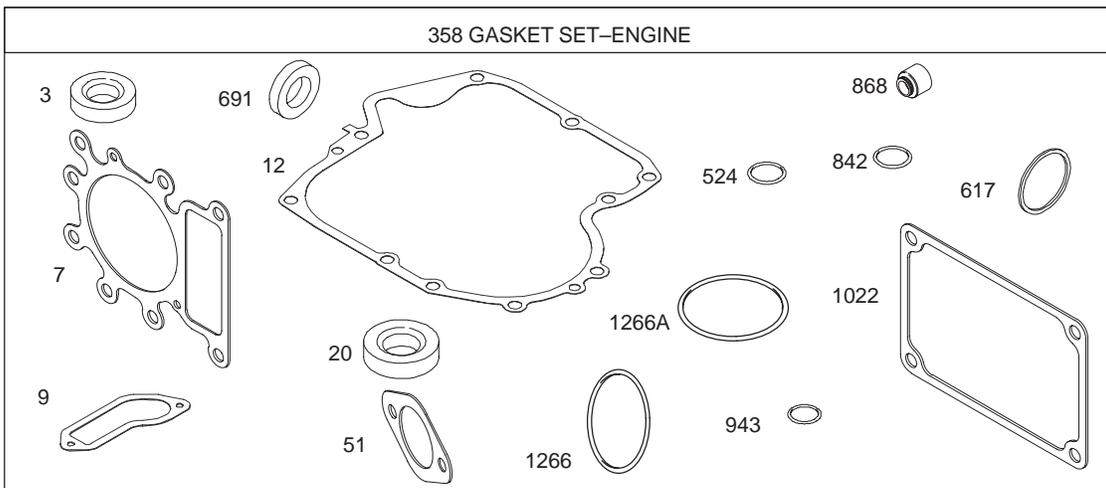

Assemblies include all parts shown in frames.



## Gasket Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
★3	391086	1	Seal-Oil (Magneto Side)
★7	273280	1	Gasket-Cylinder Head
★9	697109	1	Gasket-Breather
★12	697110	1	Gasket-Crankcase
★20	690947	1	Seal-Oil (PTO Side)
★△◆♦51	692137	1	Gasket-Intake
358	697151	1	Gasket Set-Engine
★△◆617	692138	1	Seal-O Ring (Intake Manifold)
★524	691032	1	Seal-Dipstick Tube
★691	692407	1	Seal-Governor Shaft
★842	691031	1	Seal-O Ring (Dipstick Tube)
★△868	690968	1	Seal-Valve
★943	690589	1	Seal-O Ring (Oil Pump Cover)
★1022	272475	1	Gasket-Rocker Cover
1095	691581	1	Gasket Set-Valve
★◆1266	691917	1	Seal-O Ring (Intake Elbow)
★◆1266A	697123	1	Seal-O Ring (Intake Elbow)

Ref. No.	Part No.	Qty.	Description

△ Included in Valve Gasket Set-Ref. 1095.  
★ Included in Engine Gasket Set-Ref. 358.

◆ Included in Carburetor Overhaul Kit-Ref. 121.  
♦ Included in Carburetor Gasket Set-Ref. 977.

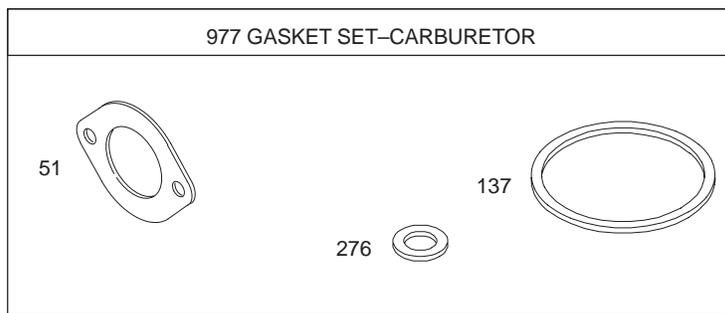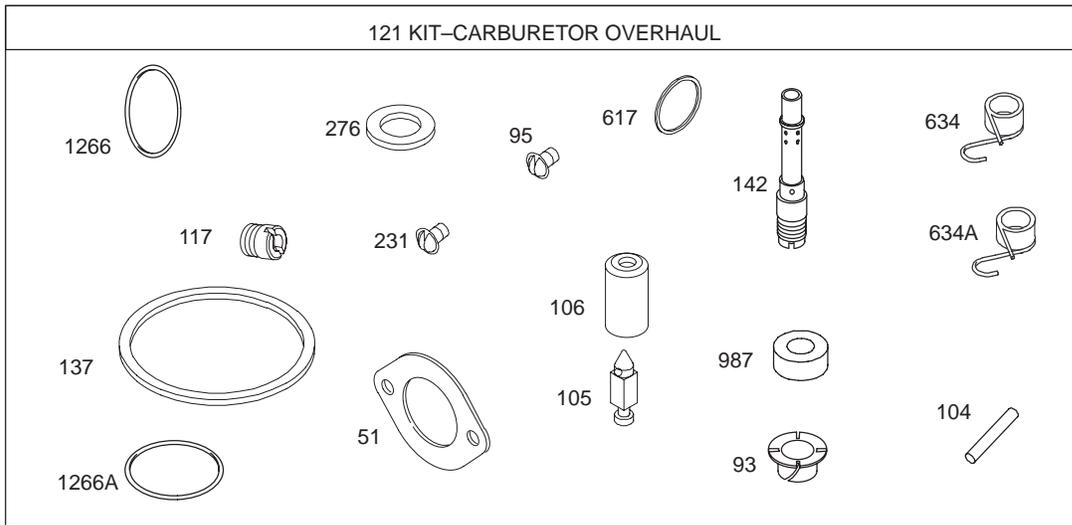

Assemblies include all parts shown in frames.

## Carburetor Overhaul Kit Assembly Briggs and Stratton Model 286H77-0121-E1

Ref. No.	Part No.	Qty.	Description
★△◆51	692137	1	Gasket-Intake
●93	690602	1	Bushing-Throttle Shaft
●95	691636	1	Screw (Throttle Valve)
●104	690525	1	Pin-Float Hinge
●105	231855	1	Valve-Float Needle
●106	690577	1	Seat-Inlet
●117	694352	1	Jet-Main (Standard)
121	697154	1	Kit-Carburetor Overhaul
◆137	281165	1	Gasket-Float Bowl
●142	697140	1	Nozzle-Carburetor
●231	691636	1	Screw (Choke Valve)
◆276	692255	1	Washer-Sealing
★●617	692138	1	Seal-O Ring (Intake Manifold)
●634	690801	1	Spring/Seal Assembly
●634A	690802	1	Spring/Seal Assembly
977	690192	1	Gasket Set-Carburetor
●987	691326	1	Seal-Throttle Shaft
★●1266	691917	1	Seal-O Ring (Intake Elbow)

Ref. No.	Part No.	Qty.	Description
★●1266A	697123	1	Seal-O Ring (Intake Elbow)

△ Included in Valve Gasket Set-Ref. 1095.

★ Included in Engine Gasket Set-Ref. 358.

● Included in Carburetor Overhaul Kit-Ref. 121.

◆ Included in Carburetor Gasket Set-Ref. 977.







