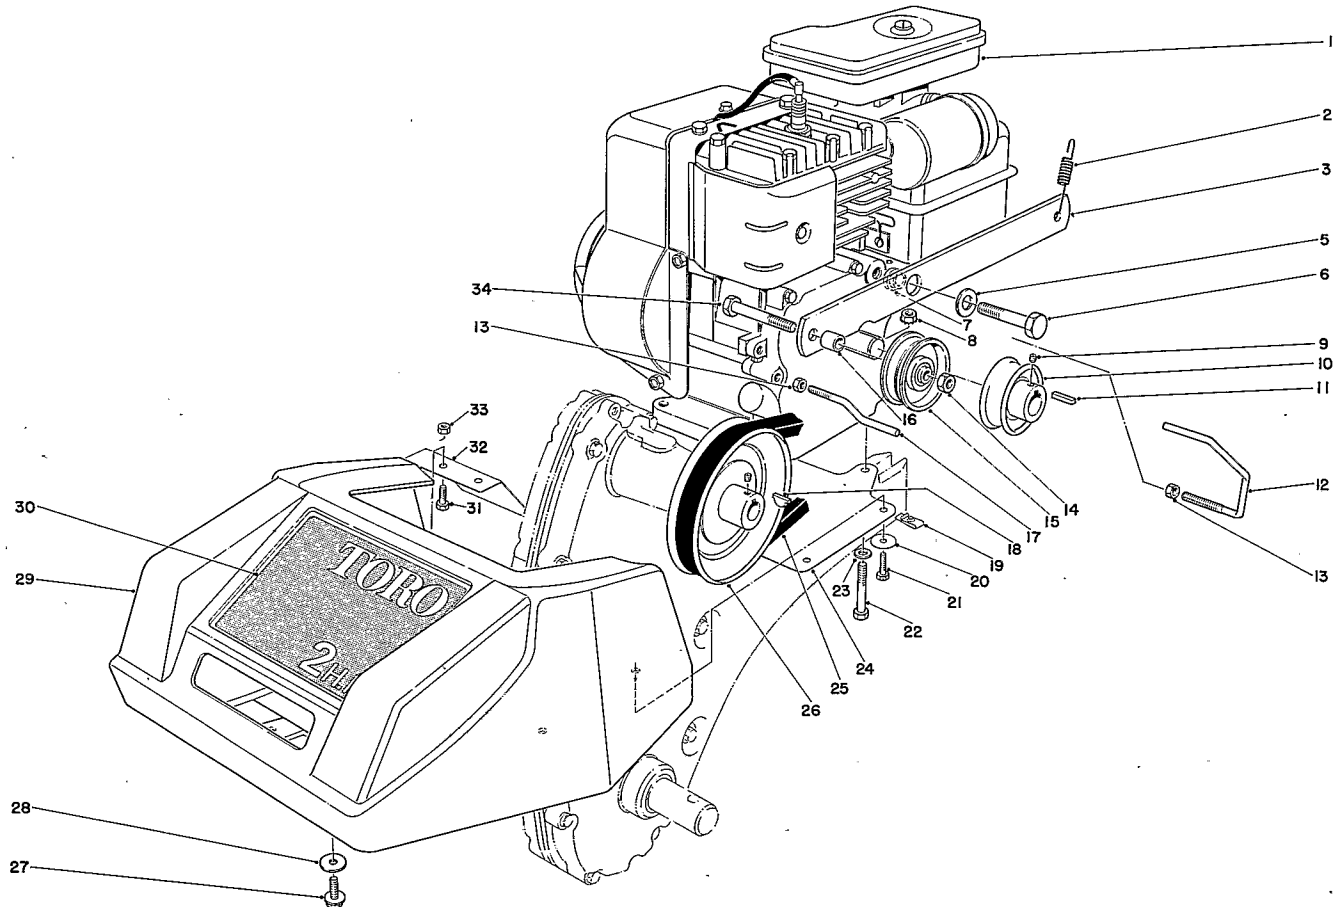


1977

FORM NO. 3310-979

TORO®MODEL NO. 58307-700001 & UP
MODEL NO. 58336-700001 & UP**PARTS
CATALOG****2 & 4 H.P. TILLER — CHAIN DRIVE****ENGINE AND SHROUD ASSEMBLY MODEL 58307 & 58336**

Ref. No.	Part No.	Description	No. Used
1	221-530	Engine (Model 58307)	1
*	221-531	Engine (Model 58336)	1
2	26-3730	Spring	1
3	28-3030	Idler Arm	1
5	3256-5	Plain Washer	1
6	3213-3	Hex. Hd. Capscrew	1
7	29-6850	Spacer - Idler Arm Pivot	1
8	32149-1	Keys Lock Nut	4
9	3245-32	Set Screw	2
10	28-2960	Driver Pulley (Model 58307)	1
*	28-2970	Drive Pulley (Model 58336)	1
11	21-5070	Key	1
12	29-6650	Belt Guide	1
13	3217-5	Full Hex. Nut	2
14	32153-2	Locknut	1
15	3-4244	Idler Pulley	1
16	28-4380	Spacer	1
17	28-2940	Belt Guide	1
18	3257-30	Hi-Pro Key	1

Ref. No.	Part No.	Description	No. Used
19	3290-277	Speed Nut	4
20	5-0774	Washer	4
21	3290-134	Hex. Hd. Screw	4
22	322-11	Hex. Hd. Capscrew	4
23	3256-23	Washer	4
24	28-3040	Mtg. Plate-Shroud	1
25	28-2990	V-Belt	1
26	28-2980	Driver Pulley	1
27	11-9760	Thread Forming Screw	2
28	3256-22	Plain Washer	2
29	28-3050	Shroud	1
30	28-3070	Decal (Model 58307)	1
*	28-3060	Decal (Model 58336)	1
31	321-2	Hex. Hd. Capscrew	1
32	29-4400	Shield	1
33	32146-17	Hex. Nut	1
34	323-10	Hex. Hd. Capscrew	1
*	28-8640	Oil Fill Tube	1


*Not Illustrated

COPYRIGHT 1977 BY

TheToroCompany

MINNEAPOLIS, MINN. 55420 — U.S.A.


PRICE \$1.00

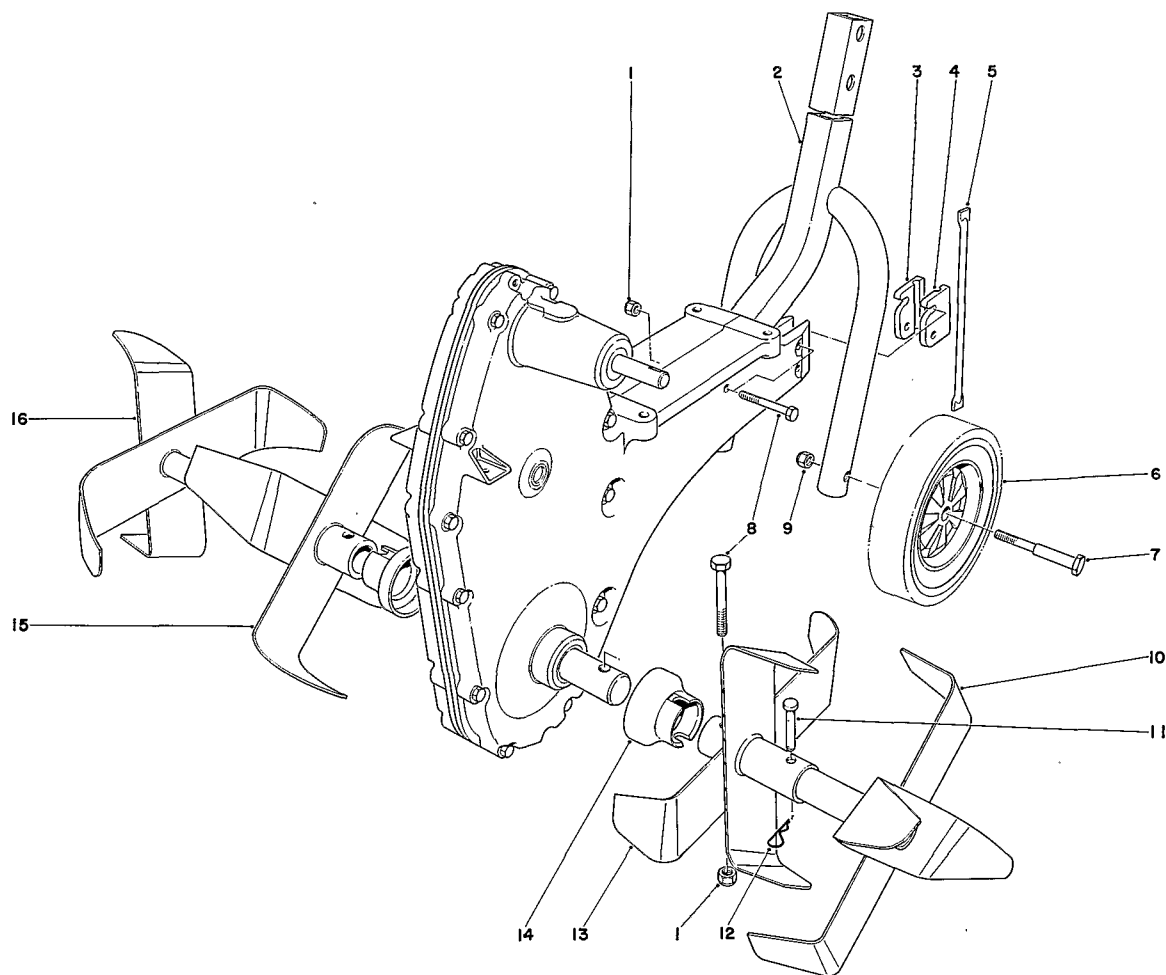

CHAIN CASE AND TINE ASSEMBLY MODEL 58307

Ref. No.	Part No.	Description	No. Used
1	32153-3	Locknut	5
2	28-4980	Lower Handle	1
3	28-2800	Pivot Block R. H.	1
4	28-2810	Pivot Block L. H.	1
5	28-4880	Drag Rod	1
6	27-6210	Wheel and Tire Assembly	2
7	28-3160	Wheel Bolt	2
8	322-10	Hex. Hd. Capscrew	5


Ref. No.	Part No.	Description	No. Used
9	32152-2	Locknut	2
10	28-2900	Outboard Tine L. H.	1
11	283-18	Clevis Pin	2
12	3290-255	Hair Pin Cotter	2
13	28-2910	Inboard Tine L. H.	1
14	28-2920	Dust Cover	2
15	28-2860	Inboard Tine R. H.	1
16	28-2820	Outboard Tine R. H.	1

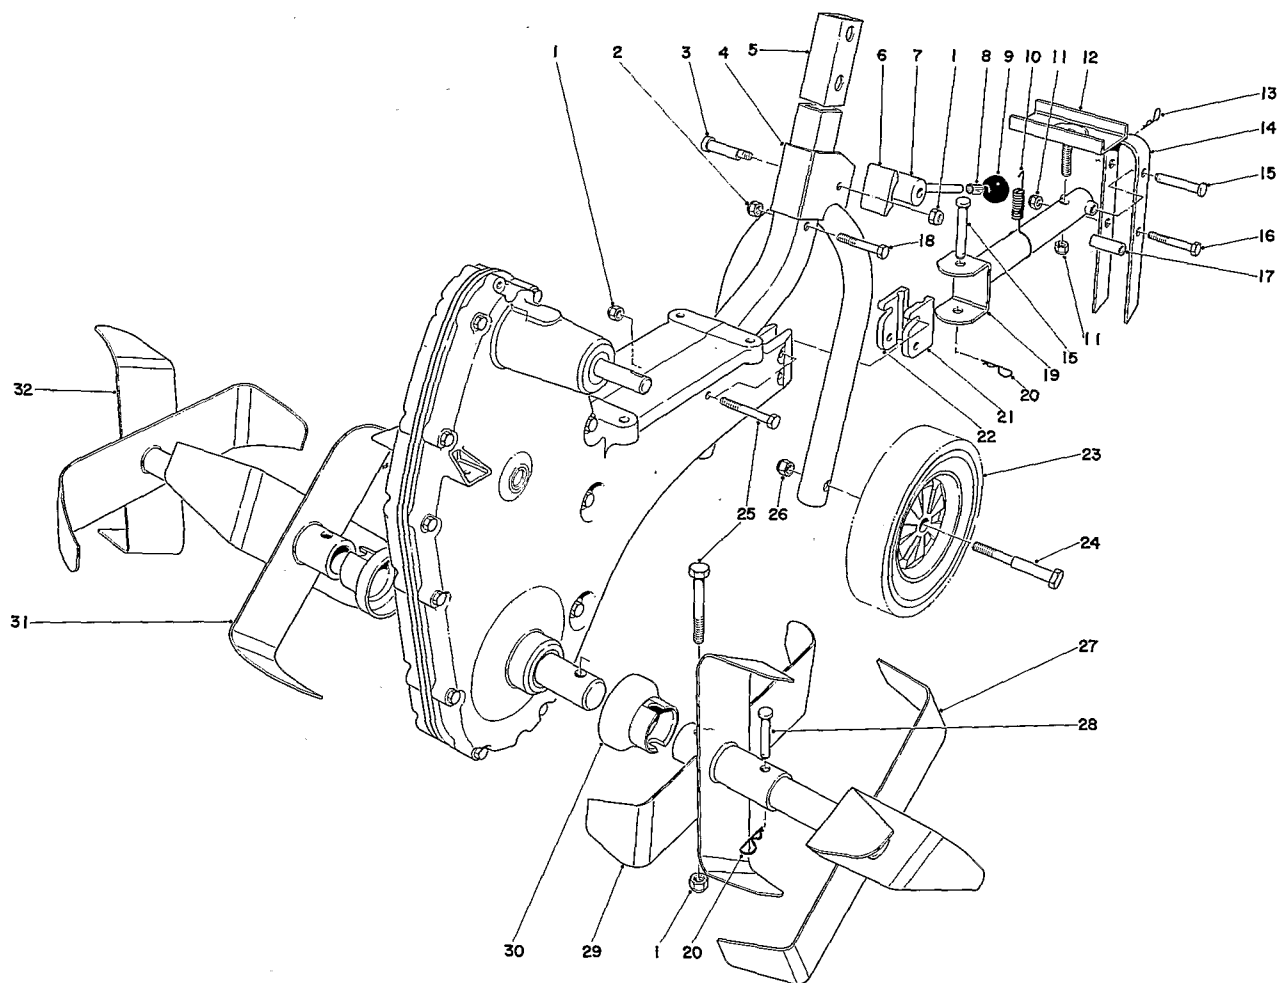

CHAIN CASE AND TINE ASSEMBLY MODEL 58336

Ref. No.	Part No.	Description	No. Used
1	32153-3	Locknut	5
2	32153-4	Locknut	1
3	28-3150	Cam Pivot	1
4	28-3080	Wheel Support	1
5	28-5370	Lower Handle	1
6	28-3110	Cam Shoe	1
7	28-3120	Cam Lever	1
8	233-44	Tolerance Ring	1
9	233-43	Knob	1
10	28-4870	Spring	1
11	32153-2	Locknut	2
12	28-3230	Drawbar Stop	1
13	3290-290	Hairpin Cotter	1
14	28-3220	Dragbar	1
15	283-47	Clevis Pin	1
16	323-12	Hex. Hd. Capscrew	1

Ref. No.	Part No.	Description	No. Used
17	28-3190	Spacer	1
18	321-9	Hex. Hd. Capscrew	1
19	28-3180	Drawbar	1
20	3290-255	Hairpin Cotter	3
21	28-2810	Pivot Block L. H.	1
22	28-2800	Pivot Block R. H.	1
23	27-6200	Wheel & Tire Assembly	2
24	28-3160	Wheel Bolt	2
25	322-10	Hex. Hd. Capscrew	5
26	32152-2	Locknut	5
27	28-2900	Outboard Tine L. H.	1
28	283-18	Clevis Pin	2
29	28-2910	Inboard Tine L. H.	1
30	28-2920	Dust Cover	2
31	28-2860	Inboard Tine R. H.	1
32	28-2820	Outboard Tine R. H.	1

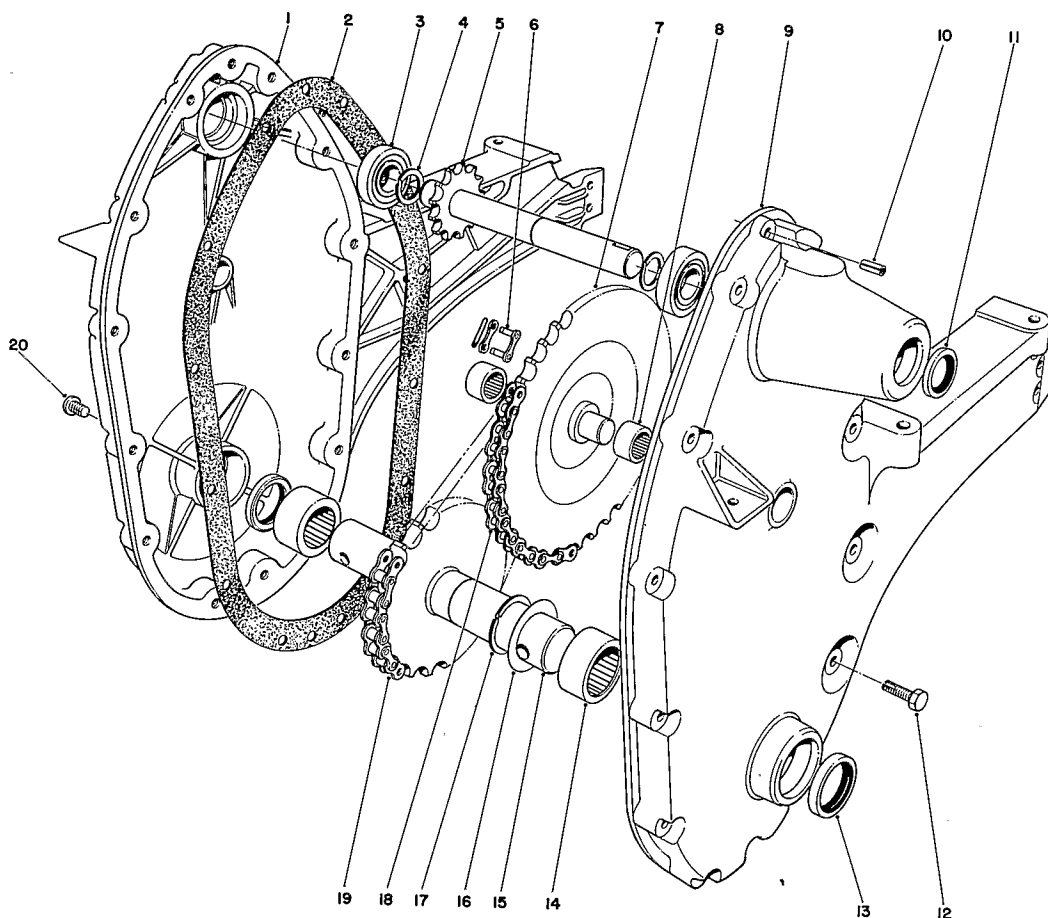


CHAIN CASE ASSEMBLY MODEL 58307 & 58336

Ref. No.	Part No.	Description	No. Used
1	27-9230	Chain Case R H.	1
2	28-2790	Gasket	1
3	251-270	Ball Bearing	2
4	32120-38	Retaining Ring	2
5	28-2770	Upper Shaft	1
6	2710-31	Connecting Link	1
7	28-2740	Sprocket Cluster	1
8	252-90	Needle Bearing	2
9	27-9240	Chain Case L. H.	1
10	32121-11	Roll Pin	2
11	253-61	Oil Seal	1

Ref. No.	Part No.	Description	No. Used
12	32104-97	Screw Self Tapping	12
13	7-0045	Oil Seal	2
14	252-91	Needle Bearing	2
15	28-2720	Tine Shaft	1
16	256-260	Thrust Washer	1
17	32120-14	Retaining Ring	1
18	28-2780	Roller Chain	1
19	28-2730	Roller Chain	1
20	285-19	Plug	1
*	25-9150	Decal — Replacement Serial Plate	1

*Not Illustrated

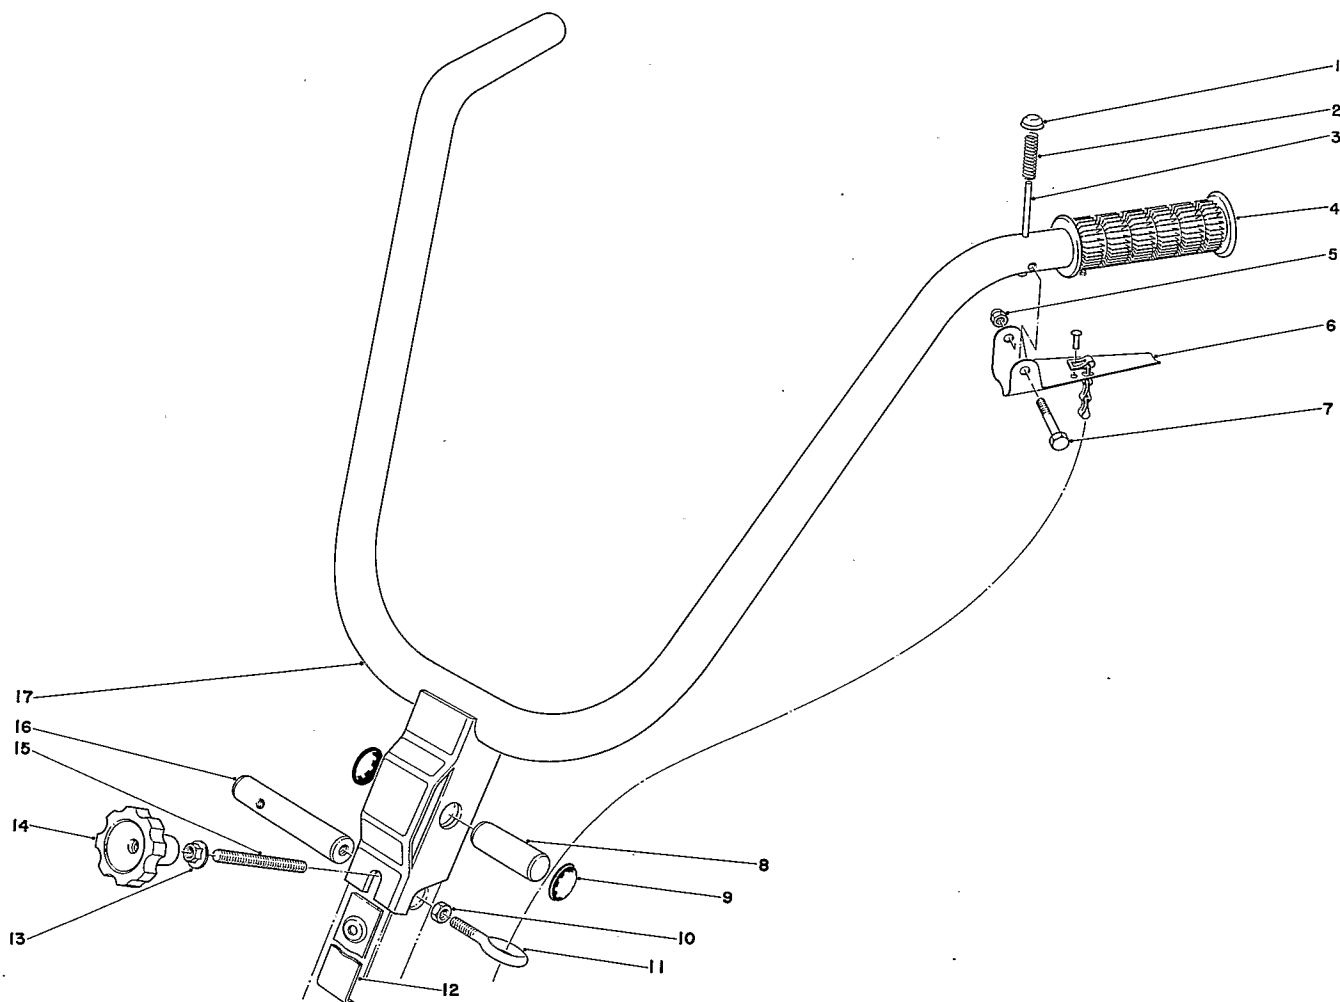


HANDLE ASSEMBLY MODEL 58307 & 58336

Ref. No.	Part No.	Description	No. Used
1	32111-9	Push-On	1
2	5-4723	Spring	1
3	26-3640	Lock Out Pin	1
4	235-21	Hand Grip	2
5	32111-7	Acorn Nut	1
6	28-4930	Lift Bail Chain Assembly	1
7	321-9	Hex. Hd. Capscrew	1
8	28-5000	Pivot Pin	1
9	3290-406	Push-On	2

Ref. No.	Part No.	Description	No. Used
10	3218-1	Jam Nut	1
11	3290-407	Eye Bolt	1
12	28-8350	Stop Wheel Yoke (Model 58336)	1
13	32128-26	Flange Nut	1
14	19-4050	Knob-Hand Screw	1
15	28-5020	Stud	1
16	28-5010	Pin — Handle	1
17	28-4900	Handle Bar	1

ENGINE BRIGGS & STRATTON MODEL 60102-0378-01 2 H. P. TILLER MODEL 58307

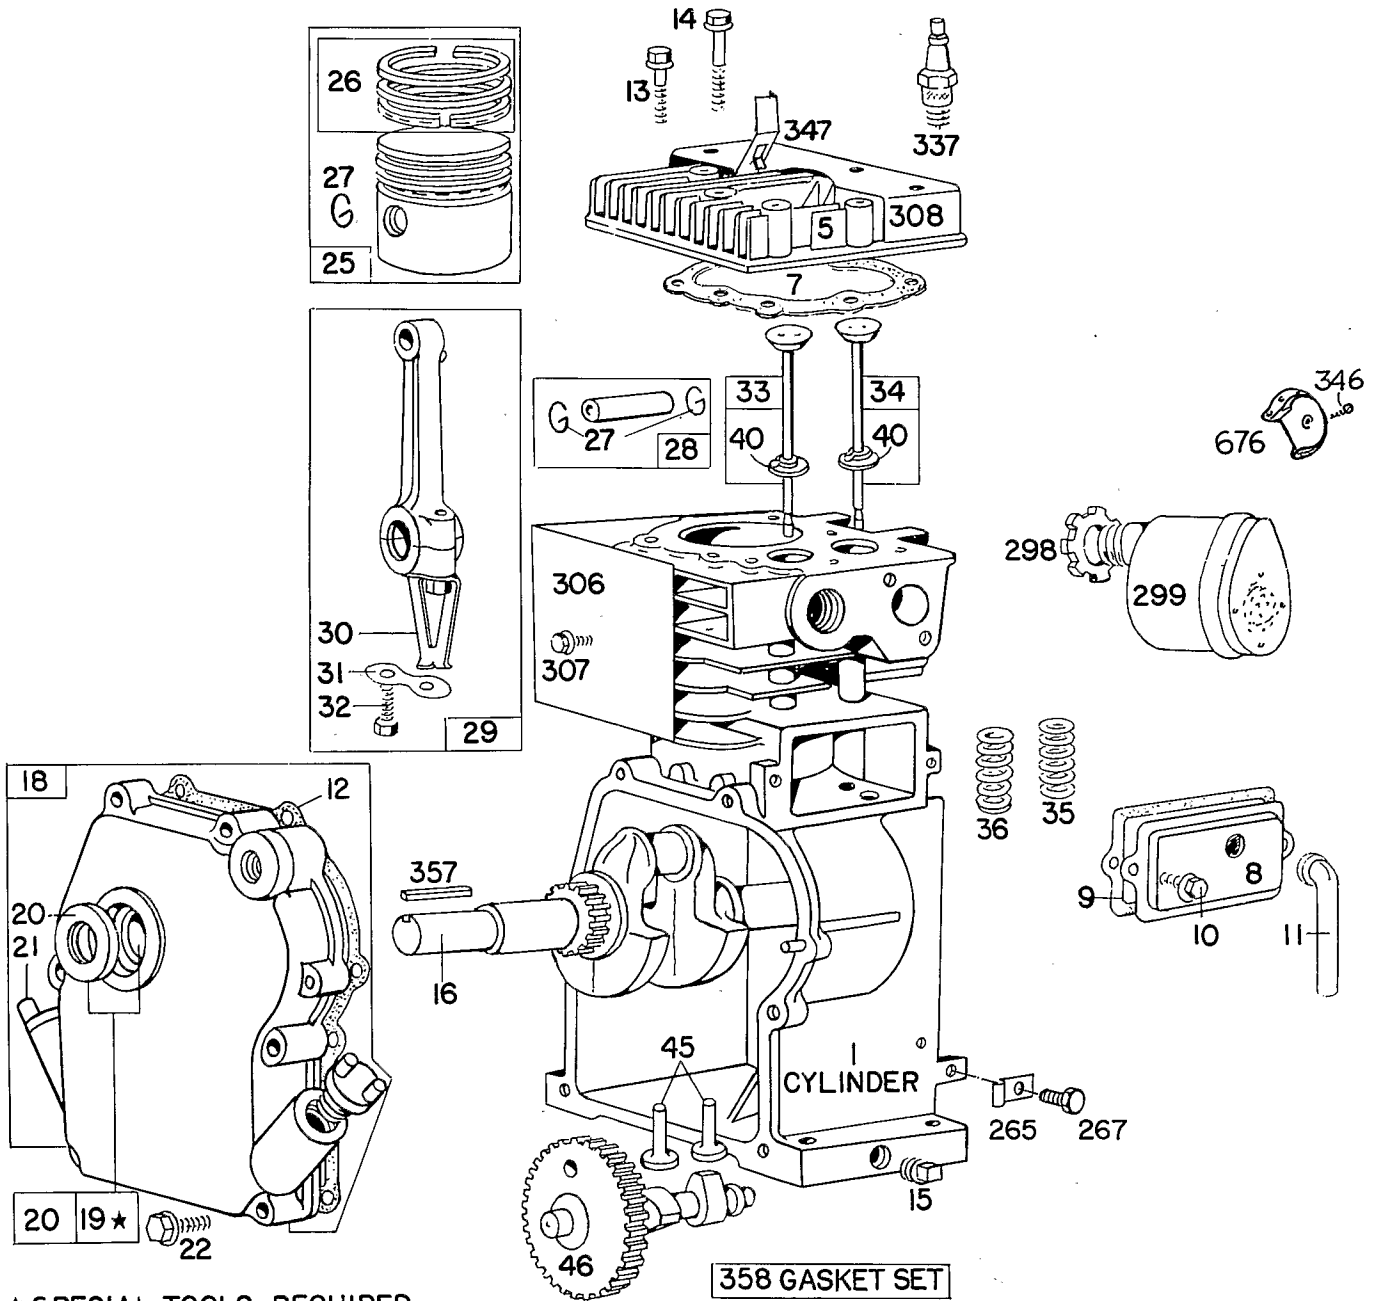

★ SPECIAL TOOLS REQUIRED
TO INSTALL


ENGINE BRIGGS & STRATTON MODEL 60102-0378-01

2 H. P. TILLER MODEL 58307

Ref. No.	Part No.	Description	No. Used
5	210812	Head — Cylinder	1
7	†27670	Gasket — Cylinder Hd.	1
8	294178	Breather — Valve Chamber	1
9	†27549	Gasket — Valve Cover	1
10	93394	Screw — Breather Mounting Sem	1
11	295217	Breather Tube & Spacer	1
12	†27586	Gasket — Crankcase — .015" Thick (Std.)	1
	†27617	Gasket — Crankcase — .005" thick	1
	†27618	Gasket — Crankcase — .009" thick	1
13	93111	Screw — Cylinder Head (1-15/16" long)	1
14	93113	Screw — Cylinder Head (2-5/16" long)	1
15	93448	Plug — Oil Drain	1
16	260271	Crankshaft	1
18	294305	Cover Assembly — Crankcase	1
19	293708	Bushing — Crankcase Cover Note: 293708 Bushing requires special tools for installation.	1
20	89660	Seal — Oil	1
21	66768	Plug — Oil Filler	1
22	93032	Screw — Crankcase	1
25	295587	Piston Assembly — Std.	1
	295588	Piston Assembly — .010" O.S.	1
	295589	Piston Assembly — .020" O.S.	1
	295590	Piston Assembly — .030" O.S.	1
		MODEL 60100 SERIES RING SETS: Note: For Chrome Piston Ring Set for 2-3/8" Bore — standard size — order Part No. 297201.	

Ref. No.	Part No.	Description	No. Used
26	294232	Ring Set — Standard Piston	1
	294224	Ring Set — .010" O.S. Piston	1
	294225	Ring Set — .020" O.S. Piston	1
	294226	Ring Set — .030" O.S. Piston	1
27	26026	Lock — Piston Pin	1
28	298909	Pin Assembly — Piston — Standard	1
	298908	Pin Assembly — Piston — .005" O.S.	1
29	294300	Rod Assembly — Connecting	1
30	220459	Dipper — Connecting Rod	1
31	220460	Lock — Connecting Rod Screw	1
32	92296	Screw — Connecting Rod	1
33	296676	Valve — Exhaust	1
34	296677	Valve — Intake	1
35	260552	Spring — Intake Valve	1
36	26478	Spring — Exhaust Valve	1
40	93312	Retainer — Valve Spring	1
45	230173	Tappet — Valve	1
46	210453	Gear — Cam	1
265	221407	Clamp — Cable	1
267	93351	Screw — Clamp Mtg.	1
298	220859	Locknut — Muffler	1
299	392811	Muffler — Exhaust	1
306	220478	Shield — Cylinder	1
307	93042	Screw — Cylinder Shield Mounting	1
308	220581	Cover — Cylinder Head	1
337	293918	Plug — Spark (with Gasket)	1
346	93705	Screw — Dust Cover Mounting Sem	1
347	220884	Switch — Stop (For 1-1/2" High — 37-42 M.M. Spark Plug)	1
357	91539	Key — 3/16" — Square	1
358	297275	Gasket Set	1
676	222522	Deflector — Muffler	1


† Included in Gasket Set — Part No. 297275.

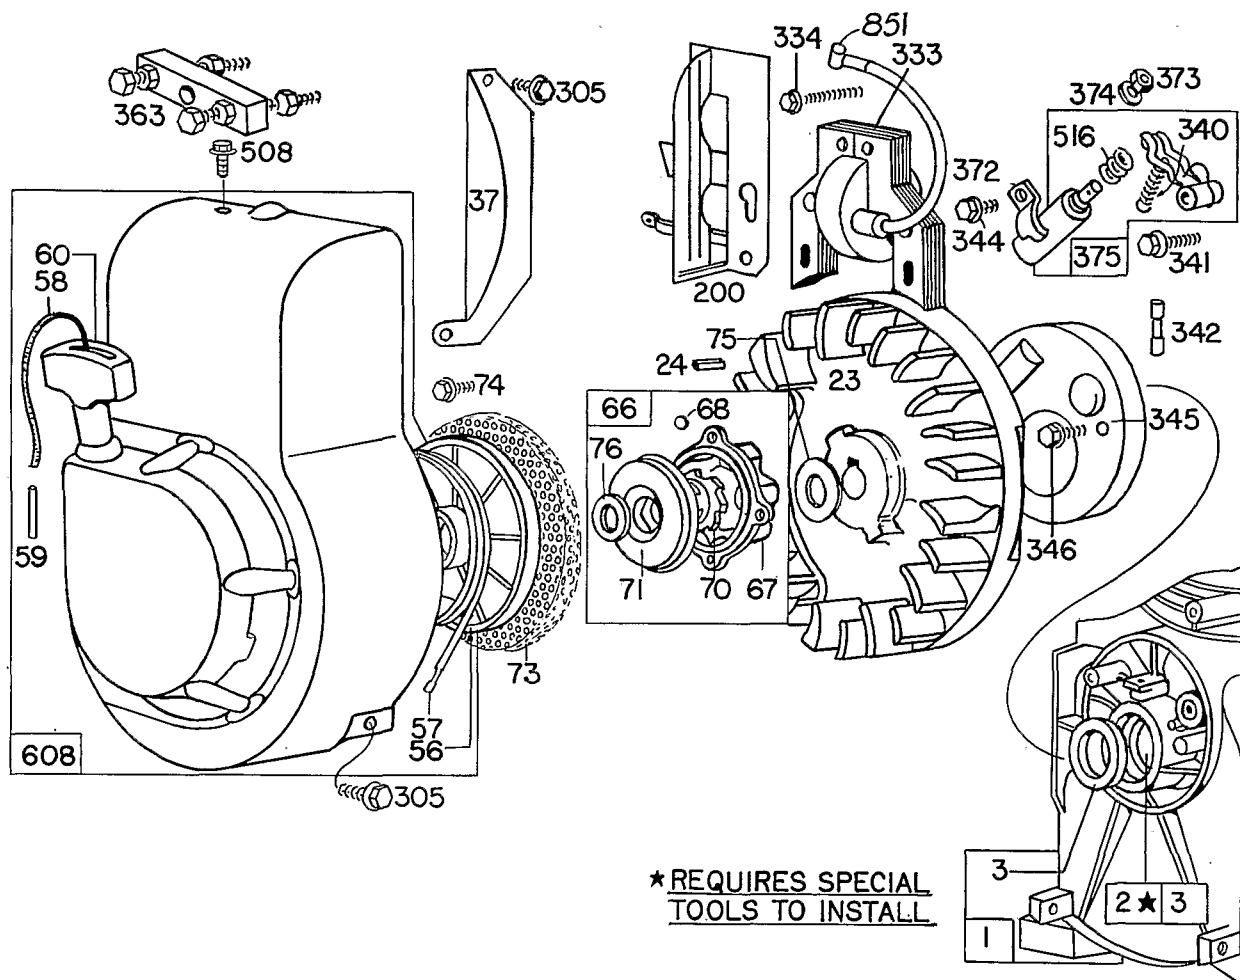

ENGINE BRIGGS & STRATTON MODEL 60102-0378-01 2 H. P. TILLER MODEL 58307

Ref. No.	Part No.	Description	No. Used
1	296561	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
3	89660	Seal — Oil	1
23	296884	Flywheel — Magneto	1
24	61760	Key — Flywheel	1
37	220971	Guard — Flywheel	1
56	280117	Pulley — Rewind Starter	1
57	294303	Spring — Rewind Starter	1
58	66694	Rope — Starter (47-1/8" long)	1
59	230228	Pin — Starter Grip	1
60	66728	Grip — Starter Rope	1
66	298310	Clutch Assembly — Rewind	1
67	211383	Housing — Starter Clutch	1
68	63770	Ball — Clutch	1
70	298436	Ratchet — Rewind	1
71	221653	Washer — Clutch Retainer	1
73	221661	Screen — Rotating	1
74	93490	Screw — Rotating Screen Mounting Sem	1
75	220865	Washer — Spring (Used to Lock Rewind Starter Clutch)	1
76	68238	Washer — Ratchet Sealing	1
200	297310	Blade — Governor	1
305	93158	Screw — Sem	1
333	298502	Armature — Magneto	1
334	93381	Screw — Armature Mounting Sem	1

Ref. No.	Part No.	Description	No. Used
340	26018	Spring — Breaker Arm	1
341	93381	Screw — Breaker Arm Mounting Sem	1
342	65704	Plunger — Breaker Point	1
344	93042	Screw — Condenser Mounting Sem	1
345	220366	Cover Breaker Point and Condenser	1
346	93705	Screw — Dust Cover Mounting Sem	1
363	19069	Puller — Flywheel (Optional Accessory)	1
372	220477	Clamp — Condenser	1
373	92987	Nut — Condenser Term.	1
374	92813	Washer — Lock — Shakeproof No. 1210-06	1
375	294628	Breaker Points and Condenser Set Note: 299061 Ignition Kit Includes: 294628 Point Set, 65704 Plunger, 61760 Key, Flywheel	1
508	93294	Screw — Blower Housing Mounting Sem	1
516	260374	Spring — Connector	1
608	294259	Starter Assembly — Rewind (10 o'clock)	1
851	221798	Terminal — Cable	1

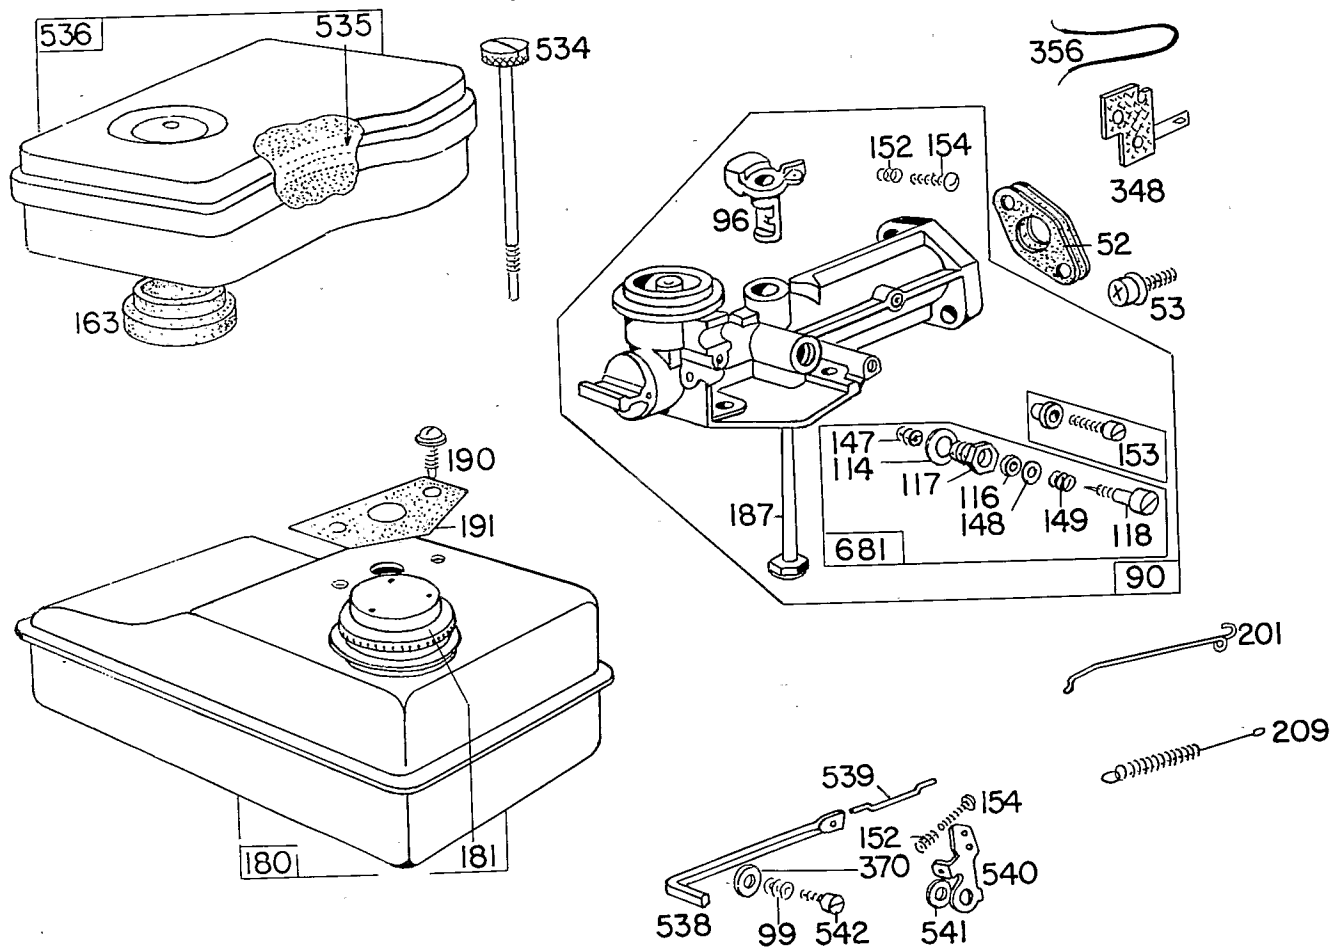


ENGINE BRIGGS & STRATTON MODEL 60102-0378-01 2 H. P. TILLER MODEL 58307

Ref. No.	Part No.	Description	No. Used
52	†27355	Gasket — Intake Elbow	2
53	93357	Screw — Carburetor Mounting Sem	1
90	391338	Carburetor Assembly	1
96	210719	Throttle — Carburetor	1
99	26157	Spring	1
114	65787	Gasket — Needle Valve	1
116	65978	Packing — Needle Valve	1
117	23431	Nut — Needle Valve	1
118	23433	Valve — Needle	1
147	23432	Seat — Needle Valve	1
148	22235	Washer — Needle Valve	2
149	26336	Spring — Needle Valve	1
152	260575	Spring — Speed and Throttle Adjustment	1
153	298031	Screw — Carburetor Lever Note: 93177 Screw — Bell Crank Mounting Used on Model 60100 Series type Nos. 940070, 940085, 940153, 940154.	1
154	92634	Screw — Machine, Rd. Hd.	1

Ref. No.	Part No.	Description	No. Used
163	27870	Gasket — Air Cleaner Mounting	1
180	291834	Tank Assembly — Fuel	1
181	298425	Cap — Fuel Tank	1
187	296476	Pipe — Fuel	1
190	93341	Screw — Fuel Tank Mtg.	1
191	†27404	Gasket — Fuel Tank Mtg.	1
201	260040	Link — Governor	1
209	260041	Spring — Governor	1
348	296110	Plate Assembly — Stop Switch Insulator	1
356	391115	Wire — Ground	1
370	66432	Washer — Plain	1
534	93322	Screw — Air Cleaner	1
535	27987	Element — Air Cleaner	1
536	296767	Cleaner Assembly — Air	1
538	260683	Rod — Speed Control	1
539	260684	Link — Control Rod	1
540	220678	Lever — Speed Adjuster	1
541	22398	Washer — Speed Adjuster to Carburetor	1
542	91359	Screw — Machine, Fil. Hd.	1
681	299059	Needle Valve Kit	1

†Included in Gasket Set — Part No. 297275

ENGINE BRIGGS & STRATTON MODEL 111202-0131-01 4 H. P. TILLER MODEL 58336

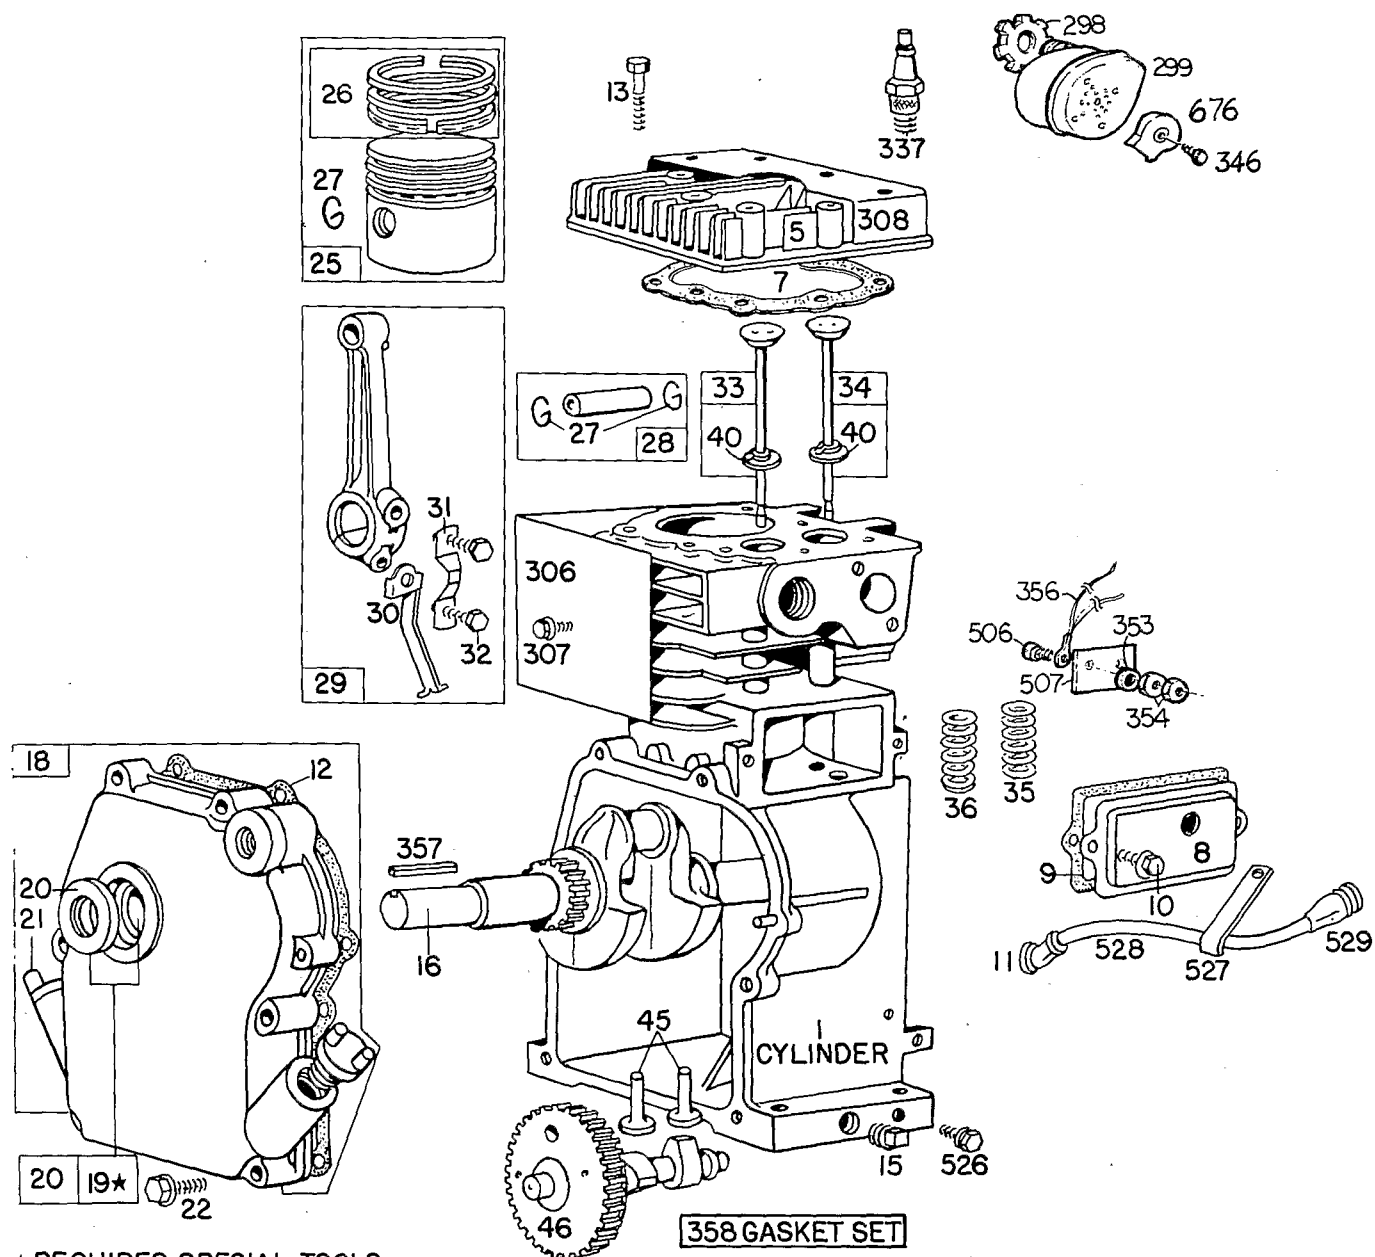

★ REQUIRES SPECIAL TOOLS
TO INSTALL
SEE REPAIR INSTRUCTION
MANUAL


ENGINE BRIGGS & STRATTON MODEL 111202-0131-01

4 H. P. TILLER MODEL 58336

Ref. No.	Part No.	Description	No. Used
1	392857	Cylinder Assembly	1
5	211851	Head — Cylinder	1
7	*270836	Gasket — Cylinder Head	1
8	294178	Breather — Valve Chamber	1
9	*27549	Gasket — Valve Cover	1
10	93394	Screw — Breather Mounting Sem	1
11	66578	Grommet — Breather Tube	1
12	*270833	Gasket — Crankcase — .015" thick (Standard)	1
	*270895	Gasket — Crankcase — .005" thick	1
	*270896	Gasket — Crankcase — .009" thick	1
13	93111	Screw — Cylinder Head (1-15/16" long)	1
15	93448	Plug — Oil Drain (Hex. Socket Head)	1
16	261414	Crankshaft	1
18	392974	Cover Assembly — Crankcase	1
19	293708	Bushing — Crankcase Cover Note: Bushing requires special tools for installation	1
20	299819	Seal — Oil	1
21	66768	Plug — Oil Filler	1
22	93032	Screw — Crankcase Cover Mounting Sem	1
25	391650	Piston Assembly — Std.	1
	391651	Piston Assembly — .010" O.S.	1
	391652	Piston Assembly — .020" O.S.	1
	391653	Piston Assembly — .030" O.S.	1
26	391654	Ring Set — Std. Piston	1
	391656	Ring Set — .010" O.S. Piston	1
	391658	Ring Set — .020" O.S. Piston	1
	391660	Ring Set — .030" O. S. Piston	1
27	26026	Lock — Piston Pin	1

Ref. No.	Part No.	Description	No. Used
28	391649	Pin Assembly — Piston — Standard	1
29	392939	Rod Assembly — Connecting	1
30	220670	Dipper — Connecting Rod	1
31	222390	Lock — Connecting Rod Screw	1
32	93670	Screw — Connecting Rod	1
33	212004	Valve — Exhaust	1
34	261233	Valve — Intake	1
35	260552	Spring — Intake Valve	1
36	26478	Spring — Exhaust Valve	1
40	93312	Retainer — Valve Spring	1
45	261250	Tappet — Valve	1
46	392171	Gear — Cam	1
298	220859	Locknut — Muffler	1
299	392811	Muffler — Exhaust (Lo-Tone)	1
306	222681	Shield — Cylinder	1
307	93042	Screw — Cylinder Shield Mounting Sem	1
308	222679	Cover — Cylinder Head	1
337	293918	Plug — Spark (with gasket) (1-1/2" High — 37-42 M.M.)	1
346	93705	Screw — Dust Cover Mounting	1
353	92791	Washer — Lock — Shakeproof	1
354	90576	Nut — Hex.	1
356	392074	Wire — Ground	1
357	91539	Key — Square	1
358	392856	Gasket Set	1
506	90200	Screw — Machine, Fil. Hd.	1
507	66895	Insulator	1
526	93343	Screw — Tank Bracket Mounting Sem	1
527	221279	Clamp — Breather Tube	1
528	230634	Tube — Breather	1
529	67608	Grommet — Breather Tube	1
676	222522	Deflector — Exhaust	1


*Included in Gasket Set — Part No. 392856

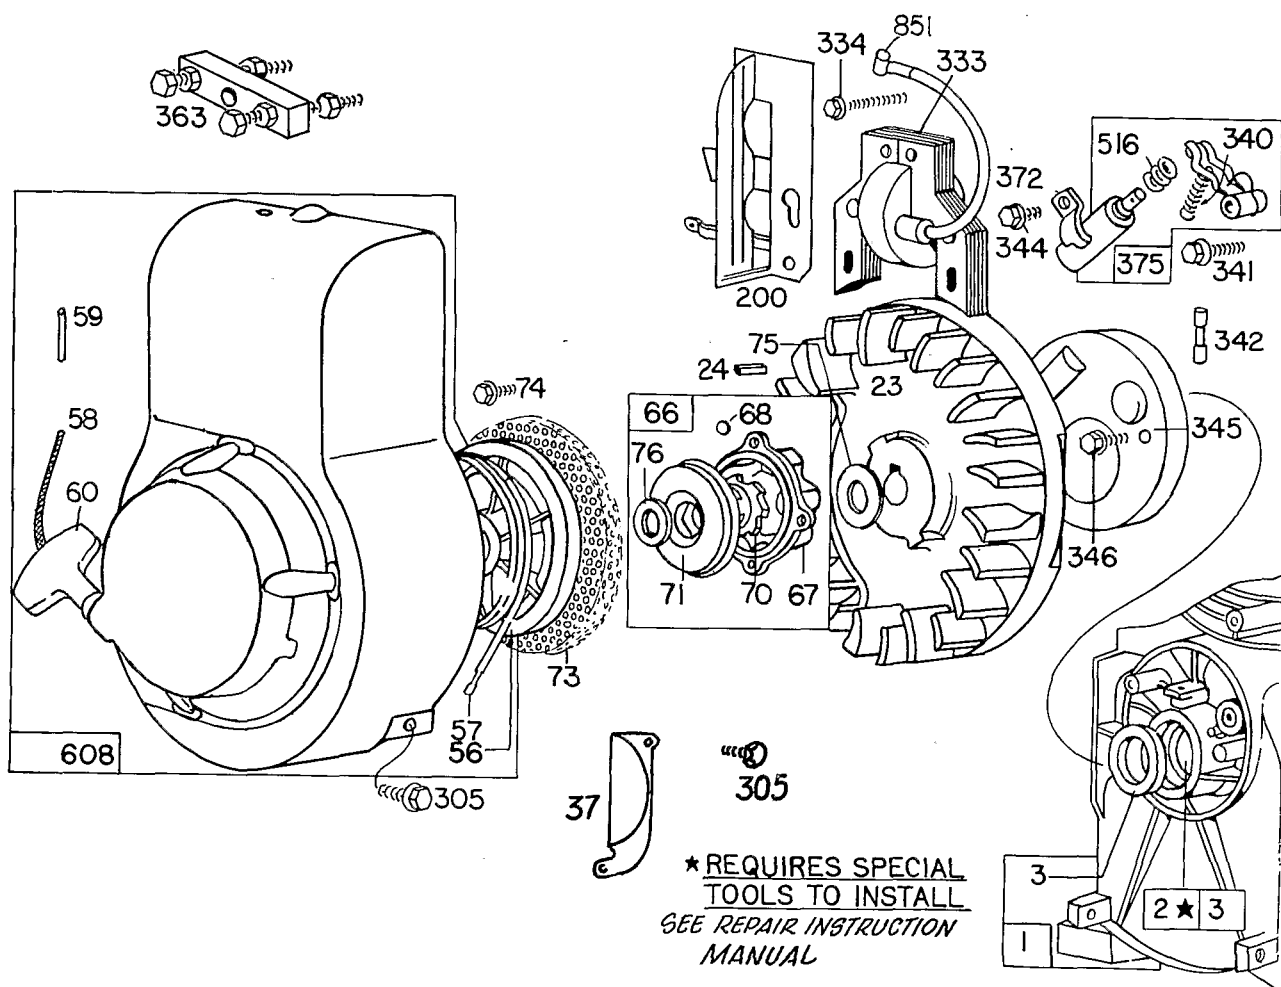

ENGINE BRIGGS & STRATTON MODEL 111202-0131-01 4 H. P. TILLER MODEL 58336

Ref. No.	Part No.	Description	No. Used
1	392857	Cylinder Assembly	1
2	293708	Bushing — Cylinder	1
		Note: Requires special tools for installation.	
3	299819	Seal — Oil	1
23	296884	Flywheel — Magneto	1
24	61760	Key — Flywheel	1
37	222403	Guard — Flywheel	1
56	280117	Pulley — Rewind Starter	1
57	294303	Spring — Rewind Starter	1
58	66694	Rope — Starter — 47-1/8"	1
59	230228	Pin — Starter Grip	1
60	66728	Grip — Starter Rope	1
66	298310	Clutch Assembly — Rewind Starter	1
67	211383	Housing — Starter Clutch	1
68	63770	Ball — Clutch	1
70	298436	Ratchet — Rewind Starter	1
71	221653	Washer — Clutch Retainer	1
73	221661	Screen — Rotating	1
74	93490	Screw — Rotating Screen Mounting Sem	1
75	220865	Washer — Spring	1
76	68238	Washer — Ratchet Sealing	1
200	392913	Blade — Governor	1

Ref. No.	Part No.	Description	No. Used
305	93158	Screw — Sem	1
333	298502	Armature — Magneto	1
334	93381	Screw — Armature Mounting Sem	1
340	26018	Spring — Breaker Arm	1
341	93381	Screw — Sem	1
342	65704	Plunger — Breaker Point	1
344	93042	Screw — Condenser Clamp Mounting Sem	1
345	220366	Cover — Breaker Point and Condenser	1
346	93705	Screw — Dust Cover Mounting	1
363	19069	Puller — Flywheel (Optional Accessory)	1
372	220477	Clamp — Condenser	1
375	294628	Breaker Points and Condenser Set	1
		Note: 299061 Ignition Kit Includes: 294628 Point Set, 65704 Plunger, 61760 Key — Flywheel	
516	260374	Spring — Connector	1
608	392865	Starter Assembly — Rewind (10 o'clock)	1
851	221798	Terminal — Cable	1

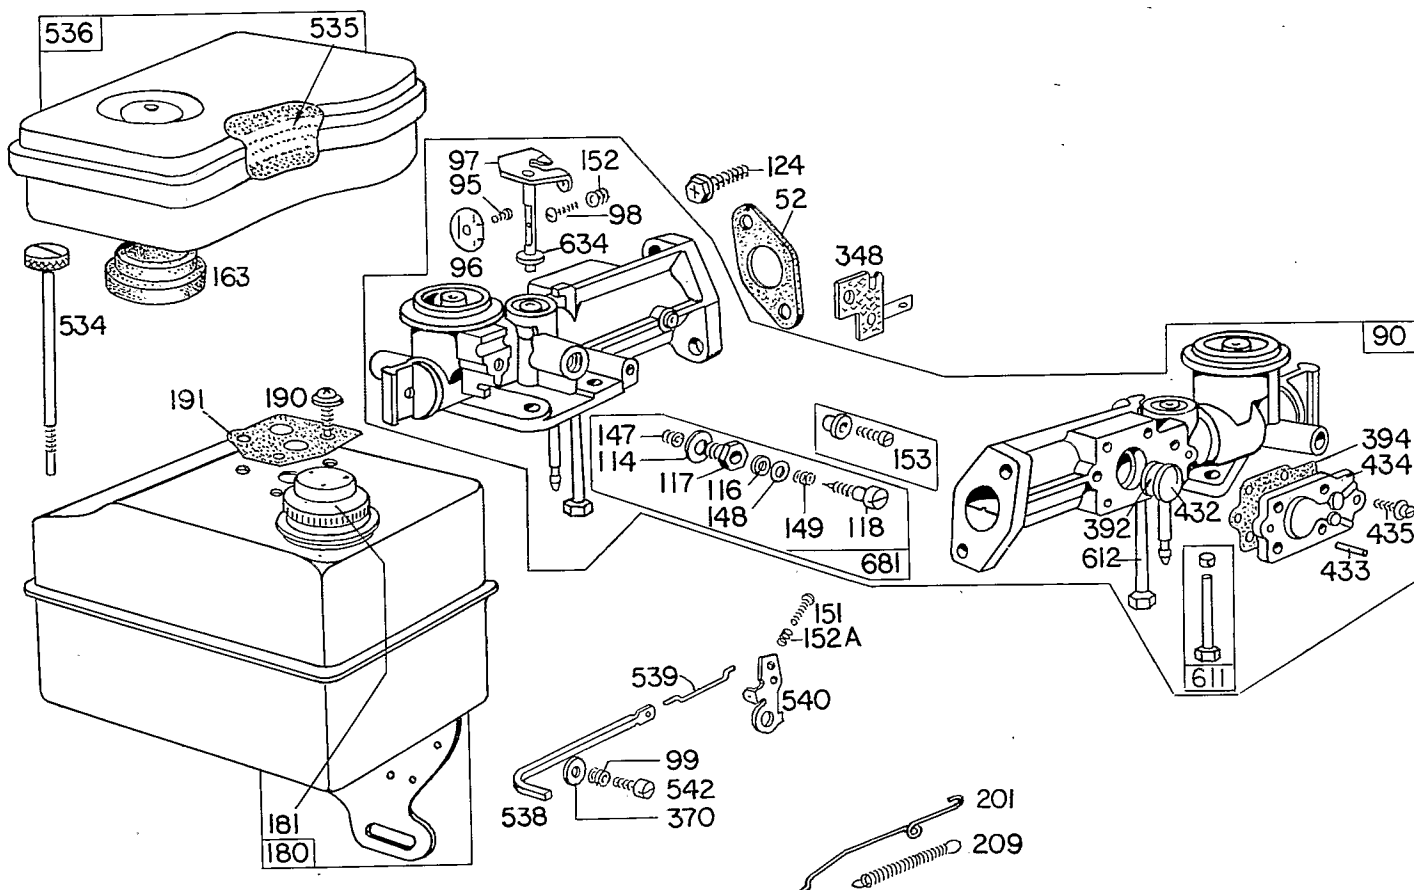

ENGINE BRIGGS & STRATTON MODEL 111202-0131-01 4 H. P. TILLER MODEL 58336

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
52	392854	Gasket — Intake Elbow Mounting	2	190	93341	Screw — Fuel Tank Mounting Sem	1
90	392905	Carburetor Assembly (Manual Choke)	1	191	*27911	Gasket — Fuel Tank Mounting	1
95	93499	Screw — Throttle Valve Mounting Sem	1	201	261372	Link — Governor	1
96	211203	Valve — Throttle	1	209	260687	Spring — Air Vane Governor	1
97	297961	Shaft and Lever — Throttle	1	348	296110	Plate Assembly — Stop Switch Insulator	1
98	93524	Screw — Machine, Rd. Hd.	1	370	66432	Washer — Plain	1
99	26157	Spring	1	392	260455	Spring — Fuel Pump Diaphragm	1
114	66594	Gasket — Needle Valve Nut	1	394	270026	Diaphragm	1
116	65978	Packing — Needle Valve	1	432	221377	Cap — Spring	1
117	230590	Nut — Needle Valve	1	433	93265	Pin — Diaphragm Cover	1
118	23433	Valve — Needle	1	434	210959	Cover — Diaphragm	1
124	93357	Screw — Nex. Hd.	1	435	93141	Screw — Diaphragm Cover	1
147	230591	Seat — Needle Valve	1	534	93322	Screw — Air Cleaner	1
148	22235	Washer — Needle Valve	1	535	27987	Element — Air Cleaner	1
149	26336	Spring — Needle Valve	1	536	297036	Cleaner Assembly — Air	1
151	93350	Screw — Machine, Rd. Hd.	1	538	260683	Rod — Speed Control (square rod)	1
152	260746	Spring Throttle Adjustment	1	539	260684	Link — Rod	1
152A	260575	Spring — Speed and Throttle Adjustment	1	540	220678	Lever — Speed Adjuster	1
153	392922	Screw — Carburetor Cam and Lever	1	542	91359	Screw — Machine, Fil. Hd.	1
163	*27660	Gasket — Air Cleaner Mounting	1	611	391813	Fuel Pipe and Clip Assembly	1
180	296591	Tank Assembly — Fuel (2 quart)	1	612	296811	Pipe — Fuel (1-5/8" long) Plastic	1
181	298425	Cap — Fuel Tank	1	634	270167	Washer — Throttle Shaft (Felt)	1
				681	299060	Needle Valve Kit	1

*Included in Gasket Set — Part No. 392856

PRODUCT CHANGES

In an effort to make improvements available to TORO owners as quickly as possible, minor changes are incorporated into Toro's products from time to time that do not become immediately shown in the Parts Catalog. If such a change apparently has been made in your unit, which is not reflected in your manual, see your TORO Distributor or his Authorized TORO Service Dealer for information and part numbers.

IDENTIFICATION AND ORDERING

Model and Serial Numbers

The Tiller has two identification numbers: a model number and a serial number. The two numbers are stamped on a decal which is located on the left rear side of the chain drive case. In any correspondence concerning the Tiller, supply model and serial numbers to assure that correct information and replacement parts are obtained.

To order replacement parts from an Authorized TORO Service Dealer, supply the following information:

1. Model and serial numbers of the Tiller.
2. Part number, description, and quantity of part(s) desired.

NOTE: Do not order by reference number if a parts catalog is being used; use the PART NUMBER.

The Toro Promise

A One Year Limited Warranty

The Toro Company promises to repair any TORO Product if defective in materials or workmanship. The following time periods from the date of purchase apply:

Residential Product	1 Year
Residential Products Used Commercially	45 Days

The costs of parts and labor are included, but the customer pays the transportation costs. Just return any residential product to an Authorized TORO Service Dealer or TORO Distributor.

Should you feel your TORO is defective and wish to rely on The Toro Promise, the following procedure is recommended:

1. Contact any Authorized TORO Service Dealer, TORO Master Service Dealer, or TORO Distributor (the Yellow Pages of your telephone directory is a good reference source).
2. He will either instruct you to return the product to him or recommend another Authorized TORO Service outlet which might be more convenient.
3. Bring the product along with your original sales slip, or other evidence of purchase date, to the service dealer.
4. The servicing dealer will inspect the unit, advise you whether the product is defective and, if so, make all repairs necessary to correct the defect without extra charge to you.

If for any reason you are dissatisfied with the dealer's analysis of the defect or the service performed, you may contact us.

Write:

TORO Customer Service Department
8111 Lyndale Avenue South
Minneapolis, Minnesota 55420

The above remedy of product defects through repair by an Authorized TORO Service Dealer is the purchaser's sole remedy for any defect.

THERE IS NO OTHER EXPRESS WARRANTY. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY.

Some states do not allow limitation on how long implied warranty lasts, so the above limitation may not apply to you.

This warranty applies only to parts or components which are defective and does not cover repairs necessary due to normal wear, misuse, accidents, or lack of proper maintenance. Regular, routine maintenance of the unit to keep it in proper operating condition is the responsibility of the owner.

All warranty repairs reimbursable under The Toro Promise must be performed by an Authorized TORO Service Dealer using Toro approved replacement parts.

Repairs or attempted repairs by anyone other than an Authorized TORO Service Account are not reimbursable under The Toro Promise. In addition, these unauthorized repair attempts may result in additional malfunctions, the correction of which is not covered by warranty.

The Toro Company is not liable for indirect, incidental or consequential damages in connection with the use of the product including any cost or expense of providing substitute equipment or service during periods of malfunction or non-use.

Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

— 28 —

D
D
D
D
D

[illegible]