

Software Guide

Visit www.Toro.com for product safety and operation training materials, accessory information, help finding a dealer, or to register your product.

Introduction

Access myTurf at http://myturf.toro.com.

myTurf is an asset management system designed to increase the efficiency of your team by utilizing automated processes, which remove manual tasks from your day-to-day work.

myTurf allows you to easily perform the following tasks:

- Order parts online anytime from your Toro Distributor
- Track all assets
- Access the latest Operator's Manual for each Toro machine in your fleet
- Access the latest Service Bulletins and product training for each Toro machine
- · Create and manage work orders
- View cost reports

Contents

Introduction	1
Operation	2
Getting Started	
Navigating myTurf	
Accessing the myTurf Help Center	
Editing Parts Groups	59
Updating Parts Groups	60
Creating an Address for Ordering	
Parts	62
Editing an Address for Ordering Parts	67
Ordering Parts for Repair	
Receiving Parts into Inventory	
Adding a Parts Inventory to a Task	
Receiving Multiple Orders	
Assigning a Wireless Hour Meter	
Adding a Base Station/Repeater	
Adding a Wireless Hour Meter	
Filtering the Wireless Hour Meter IDs	
Managing Attachments	
Managing the Preventive Maintenance	
Schedule	97

Wanaging Work Orders	100
Managing the Maintenance Schedule for an	
Asset	116
Retiring or Scrapping an Asset	. 122
Tracking Fuel Usage and Cost	. 127
Generating Reports	. 129
Creating a One-Time Preventive	
Maintenance Task	. 142
Adding Multiple Custom Parts to a	
Task	. 147
Adding Parts to a Work Order	. 148
Creating and Using Carts	. 151
Downloading End-User Parts	. 160
Accessing an Asset Overview using a QR	
Code	164
Allowing Access for a Distributor to View a	
Customer Asset List	169

Operation

Getting Started

Enrolling in myTurf

Before you can utilize myTurf, you must complete the **Toro myTurf Customer Enrollment**.

Fill out the following Toro myTurf Customer Enrollment form before using myTurf.



Toro myTurf® Customer Enrollment

Registration Details

	Please complete this section in Eng	glish.	
		nd <u>Terms of Use / EULA Acceptance</u> *	
1	Organization Details		
	Organization Name *		
	Type of Organization *	Select ▼	
2	Primary Location Det	ails	
	Country *	USA ▼	
	Location Name *		
	myTurf Display Name *		
	Address Line 1 *		
	Address Line 2		
	City / Town *		
	State / Province / Region	Select ▼	
	Zip / Postal Code *		

Figure 1

1. Fill out the organization details.

2. Fill out the primary location details.

g245192


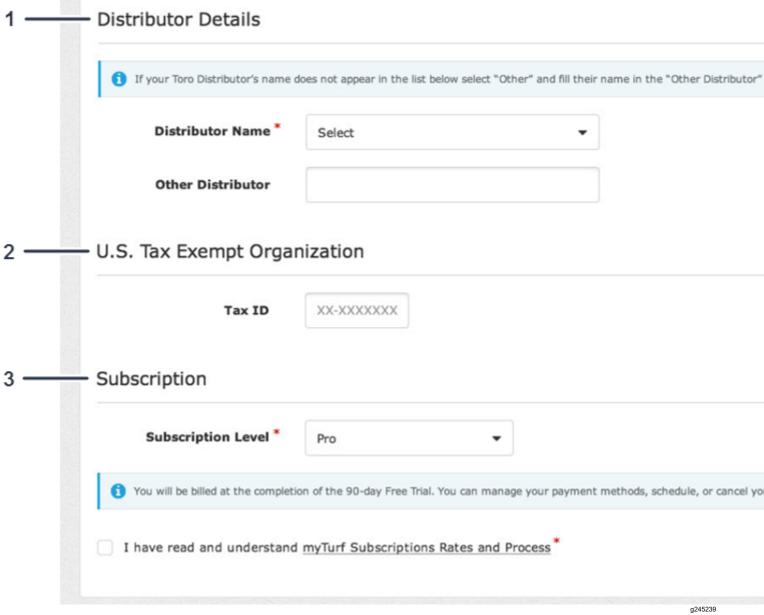


Figure 2

1. Fill out the distributor details.

3. Fill out the subscription details.

2. Fill out the United States Tax Exemption Organization details.

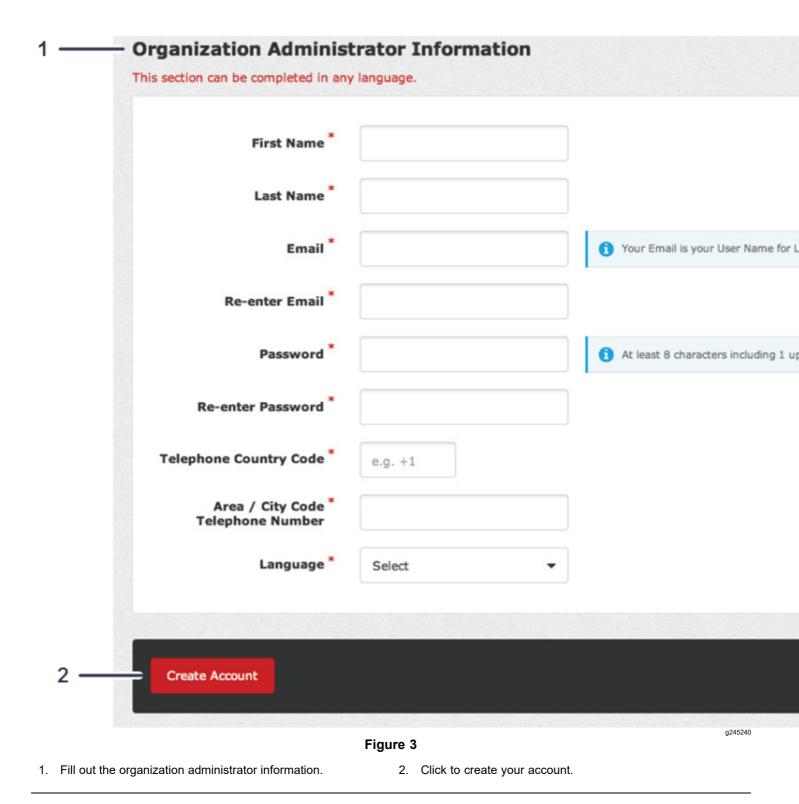

Administering Locations

1. From the Dashboard, click Admin, located in the upper, right corner of the screen (Figure 4).

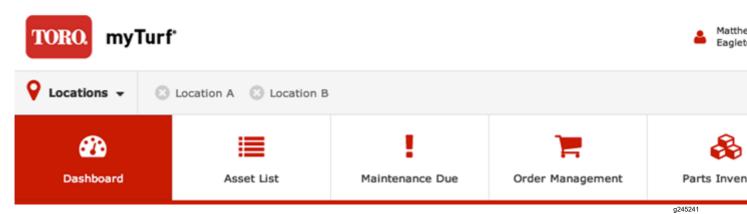


Figure 4

- 1. Click Admin.
- 2. Click the Location Record icon to administer a specific location (Figure 5).



Administration - Eagleton Golf Course

Organization Details

Organization Name Eagleton Golf Course

> Golf Course Type

Administrators Matthew Doty, Greg Bunting, Doug Peterson

Create New Location

	Location Record	Location Name	myTurf Display Name	Address Line 1	City / Town
1 —		Location A	Location A	2100 Jefferson St	Jessup
	B	Location B	Location B	700 Washington Ave	Jessup
	P	Location C	Location C	380 Madison St	Jessup
	B.	Location D	Location D	27904 Georgia Ave	Jessup


Figure 5

g245242

1. Click the location record icon.

From the **Location Record** screen (Figure 6), you can view and update the following information:

• Location details and contact information (Figure 6)

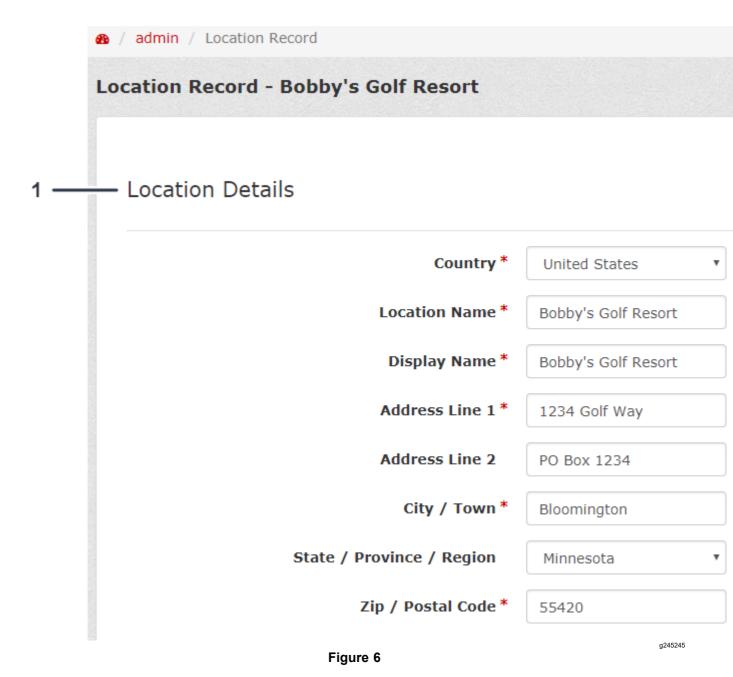


1. Enter the location details.

• Subscription and payment details (Figure 7)

Note: If you are a United States tax exempt organization, enter those details (Figure 7).

1 — Subscription

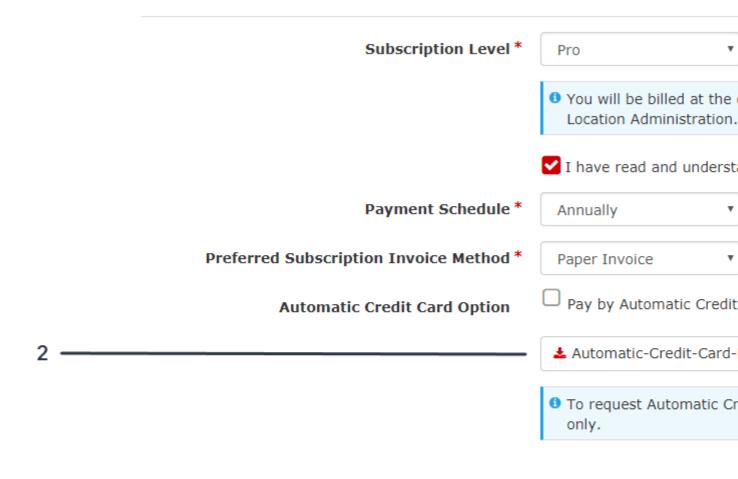

3 — U.S. Tax Exempt Organization

Tax ID XX-XXXXXX

g245246

Figure 7

1. Enter the subscription details.

- If you are a United States tax exempt organization, enter those details.
- 2. If you choose automatic payment, click here to fill out the form.
 - Subscription invoice contact information and subscription invoice address (Figure 8)

1 —— Subscription Invoice Contact Info



2 —— Subscription Invoice Address



- 1. Enter the subscription invoice contact information.
- 2. Enter the subscription invoice address.
- Labor wage and fuel (maintenance labor wage rates); refer to Figure 9
- For operators, average wage rate (Figure 9)

1 — Labor Wage and Fuel


Maintenance Labor (0) Due to Privacy concerns, you may need to attain permission from personnel to V Delete **Last Name** Smith Anderson Washington Bryant Operators Average Wage Per Hour \$

- Figure 9
- 4. Enter the wage for each maintenance employee here.

g245269

5. Click to add new labor.

- 1. Enter the labor wage and fuel information.
- 2. Click the icon to edit personnel details.
- 3. Enter the wage for operators here.
 - Fuel cost (Figure 10)

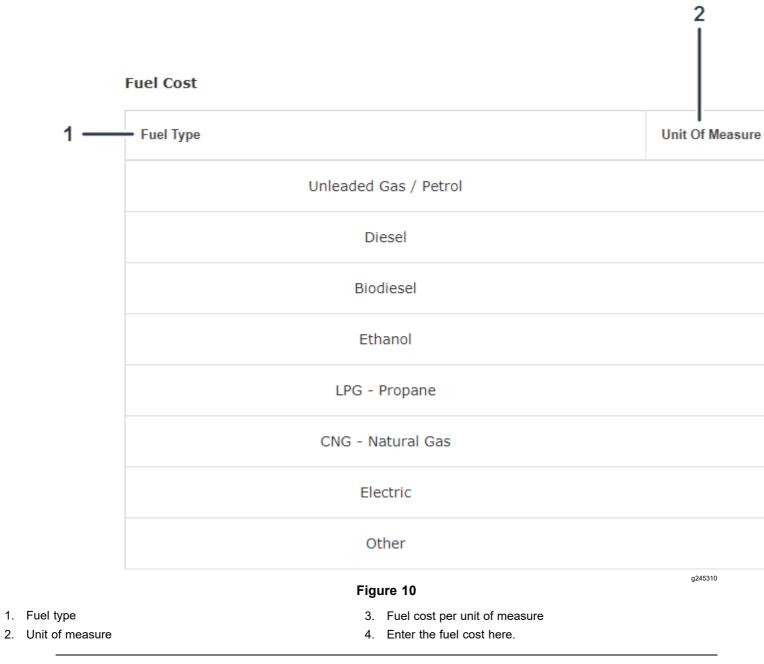

• Locale settings (Figure 11)

1 — Locale Settings

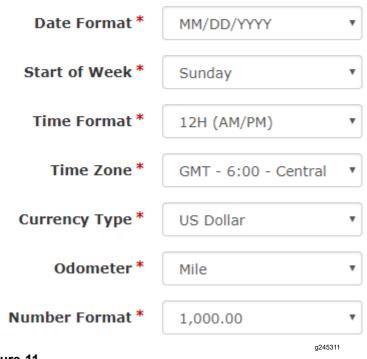


Figure 11

1. Enter the locale settings.

Creating a New User

This feature allows you to manage the users in your myTurf.

1. From the Location Record screen, click Users (Figure 12).

Location Details

Location Administrators

Subscription

U.S. Tax Exempt Organization

Subscription Invoice Contact Info

Subscription Invoice Address

Labor Wage and Fuel

Locale Settings

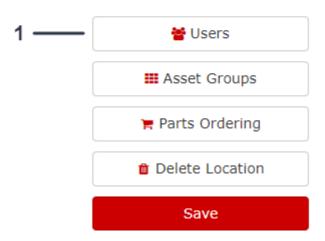


Figure 12

g245322

- 1. Click users.
- 2. Click Create New User (Figure 13).

Manage Users - Eagleton Golf Course (9)

≗ ∔ Cre	eate New User	1		
T Filter				
User Record	Last Name	First Name	Status	User Role
<u>F</u>	Adams	Peter	Active	Monitor
	Bryant	Nicholas	Active	Technician
B	Butler	James	Active	Supervisor
P	Flores	Michael	Inactive	Monitor
B	Hill	Robert	Active	Asset Manager
B	Miller	Eric	Active	Technician
B	Price	Timothy	Active	Asset Manager
B	Richardson	Raymond	Inactive	Technician
P	Robinson	Jimmy	Active	Technician

Figure 13

g245323

^{1.} Click create new user.


Fill out the Create New User form (Figure 14).

Note: The password that you enter is a temporary password. The user will create their new password.

1 —— Create New User		
User Details		
First Name *		
Last Name *		
Title		
Email (User Name) *		
Re-enter Email *		
Password *		6 At least 8 characters i number and 1 special
		This is a temporary password.
Re-enter Password *		
Country Code *	e.g. +1	
Area / City Code * Telephone Number		
Language *	Select •	
	Figure 14	g245324
Fill out the create new user information.		

- 1.
- 4. Assign the User Role and Administration Role for the new user (Figure 15).
- If you have multiple location, assign the locations that the new user can work in and view (Figure 15). 5.

- 6. Assign the **User Status** to **Active** (Figure 15).
- 7. Click **Save** to add the new user (Figure 15).

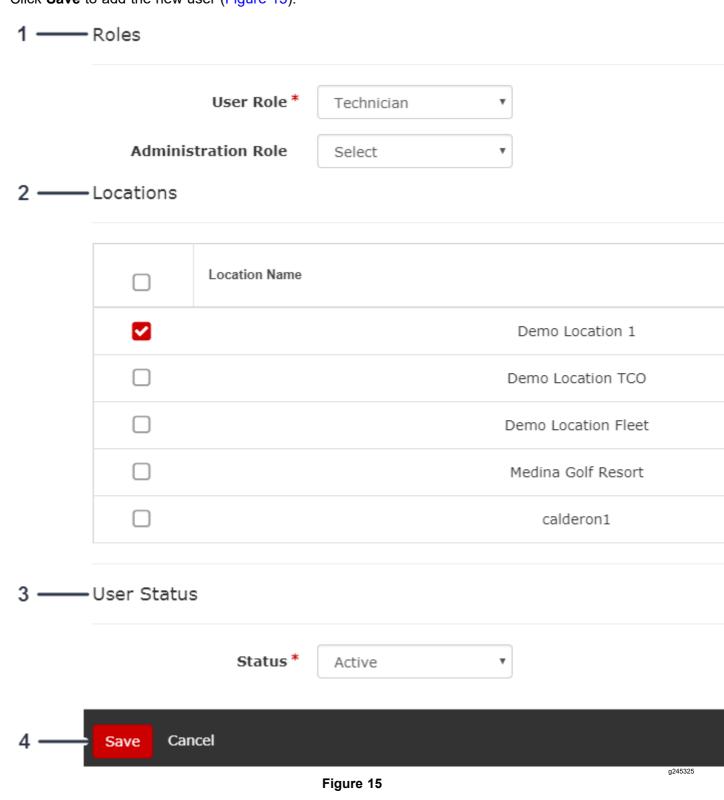

- 1. Assign the roles of the user.
- 2. Assign the location in which you want the user to apply.
- 3. Select the user's status.
- 4. Click save to create the user.

Managing Asset Groups

Managing asset groups allows you to label and set up for groups for your assets.

Setting up Parts Ordering

This feature allows you to set up who your order your parts from (e.g., distributor), as well as your shipping sold to and bill to information.

Deleting a Location

Administrator Function Only

If you want to remove a location from your myTurf, click **Delete Location**.

Creating Asset Groups

1. From the **Dashboard**, click **Admin** (Figure 16).

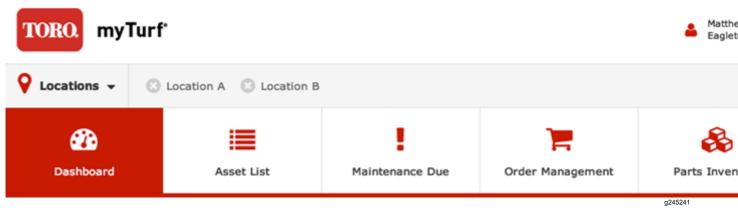


Figure 16

- 1. Click Admin.
- 2. Click the **Edit Location** Icon (Figure 17).

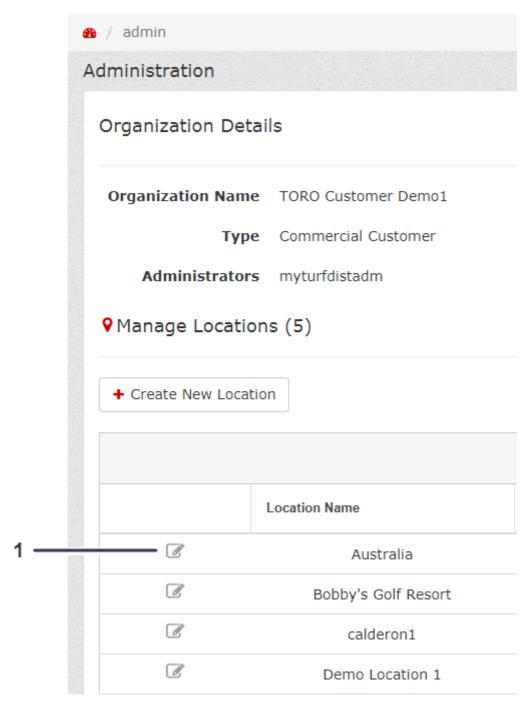



Figure 17

g246195

Click to edit the location.

3. From the Location Record, click Asset Groups (Figure 18).

19

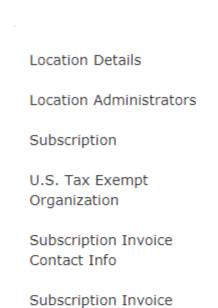

Address

Labor Wage and Fuel

Locale Settings


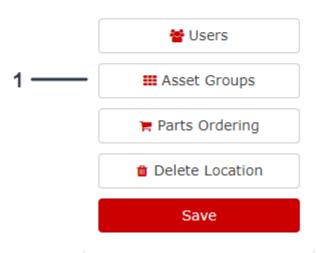


Figure 18

g246206

- 1. Click Asset Groups.
- 4. From Manage Asset Groups, click Create New Group (Figure 19).

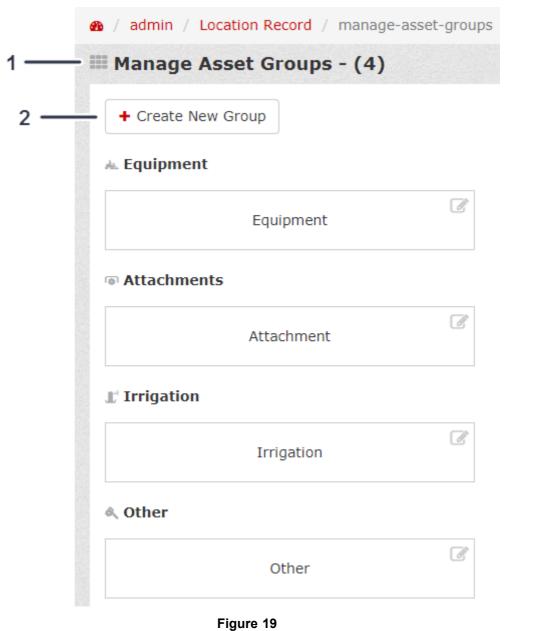


1. Manage Asset Groups

2. Click Create New Group.

g246207


- 5. Select the **Asset Type** and enter the **Group Name** that you want assigned to the new group (Figure 20).
- 6. Click **Create** to create the new asset group (Figure 20).

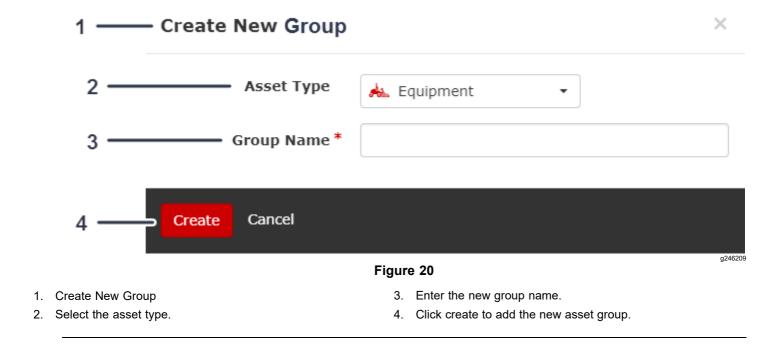

Adding Assets and Attachments

Adding a Single Asset

- 1. From the Asset List, click the Add/Update Assets drop-down (Figure 21).
- 2. Click Add Single Asset from the drop-down (Figure 21).

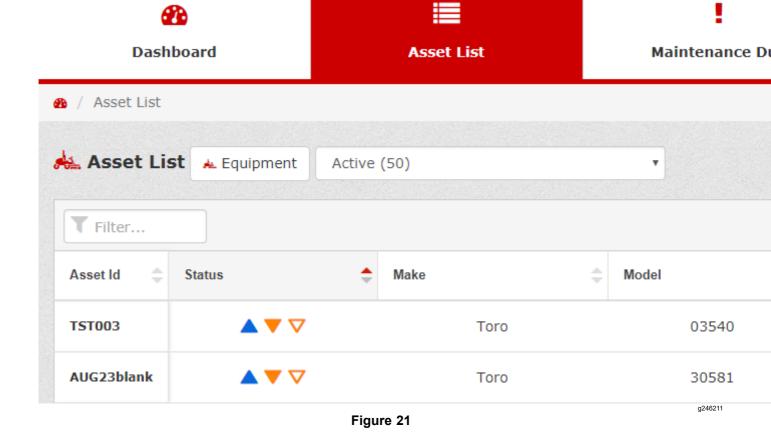


2. Click Add Single Asset.

3. Fill out the Create New Asset form (Figure 22, Figure 23, and Figure 24).


1. Click the Add/Update Assets drop-down.

1 — Basic Information

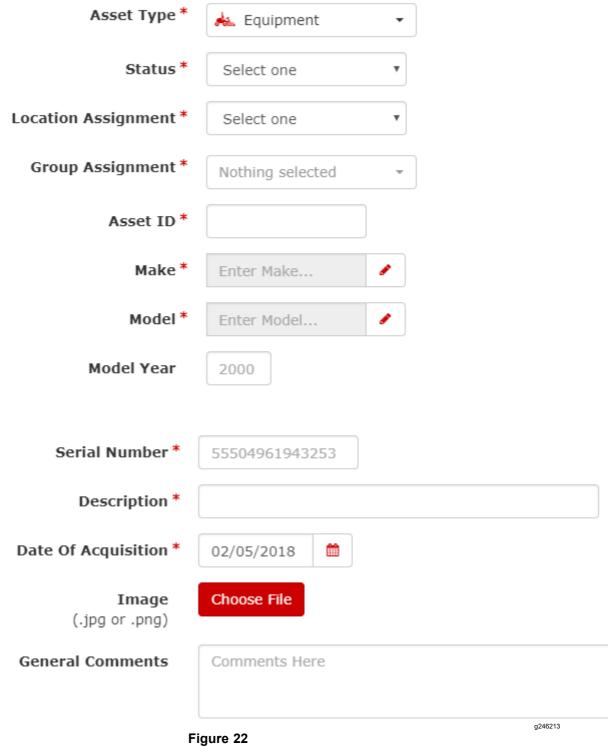


1. Fill out the basic information for the asset.


1 — Utilization

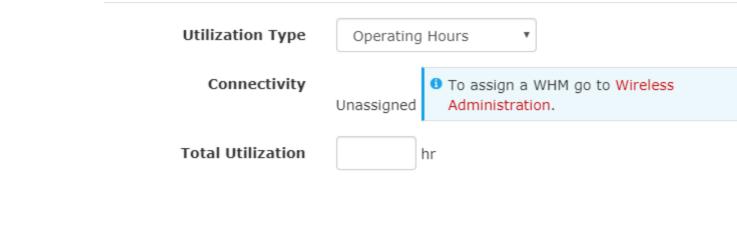

2 — Fuel Usage

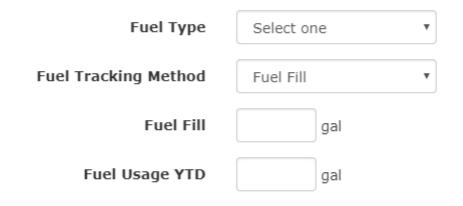


3 —— Acquisition Costs

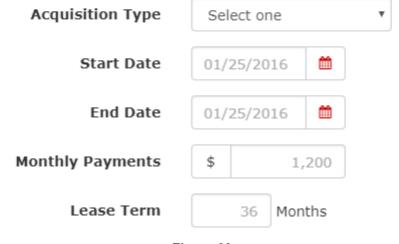


- Figure 23
- 1. Fill out the utilization information for the asset.
- 2. Fill out the fuel usage information for the asset.
- 3. Fill out the acquisition costs information for the asset.

g246217

4. When you finish filling out the form, click Create Asset (Figure 24).

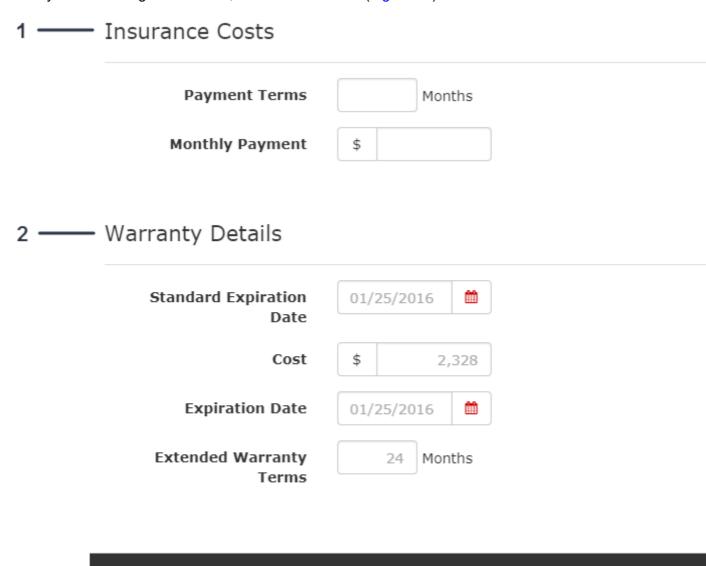

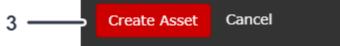

g2/6218

Figure 24

- 1. Fill out the insurance costs information for the asset.
- 2. Fill out the warranty details for the asset.

3. Click to create the asset.

Adding Multiple Assets

- 1. From the Asset List, click the Add/Update Assets drop-down (Figure 25).
- 2. Click **Bulk Upload** from the drop-down (Figure 25).

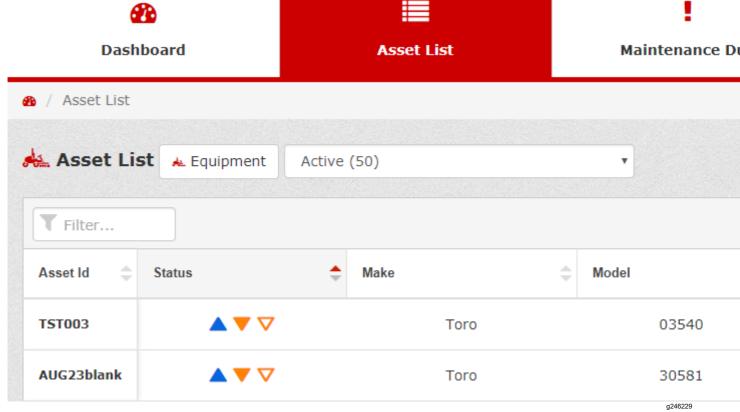


Figure 25


1. Click the Add/Update Assets drop-down.

2. Click Bulk Upload.

3. Click **Choose File** and select the file to upload multiple assets or download a starter template to upload bulk assets (Figure 26).

Note: You can also view or edit pending asset uploads.

Bulk Asset Upload

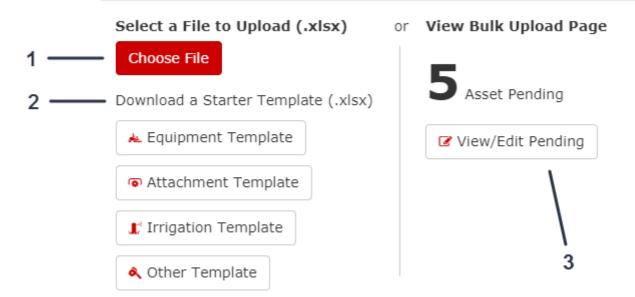

g246230

 \times

Figure 26

- 1. Click Choose File to upload the assets.
- 2. Click one of the subsequent templates to download a starter template to upload bulk assets.
- 3. Click to view or edit pending asset uploads.

Adding an Attachment

1. From the Asset List, select an asset, and click Asset Overview (Figure 27).

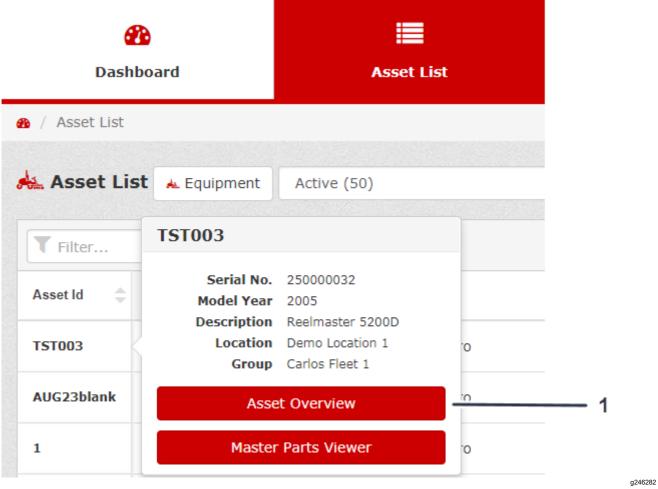


Figure 27

1. Click to view the asset overview.

2. From the Asset Overview, click Create New Attachments (Figure 28).

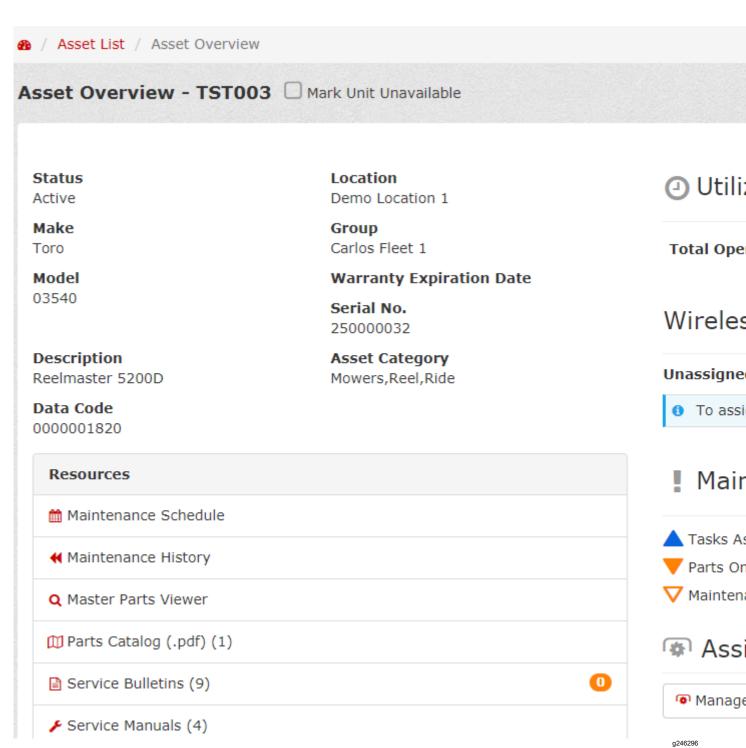


Figure 28

- 1. Click to create a new attachment.
- 3. Fill out the **Create New Attachment** form (Figure 29, Figure 30, and Figure 31).
- 4. When you finish filling out the form, click **Create Attachment** (Figure 31).


Create New Attachment

1 — Basic Information


1. Fill out the basic information for the attachment.

Asset Type	Attachment
Status	Active
Parent Asset Code	TST003
Location Assignment	Demo Location 1
Group Assignment *	Select one ▼
Asset ID *	
Make *	Enter Make
Model *	Enter Model
Model Year	2000
Serial Number *	55504961943253
Description *	55504961943253
Date Of Acquisition *	01/25/2016
Image	Choose File
General Comments	Comments Here
ı	Figure 29

1 — Utilization

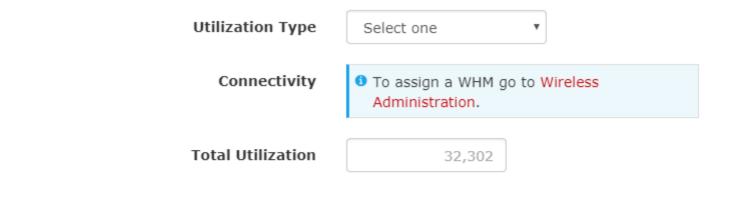


2 — Acquisition Costs

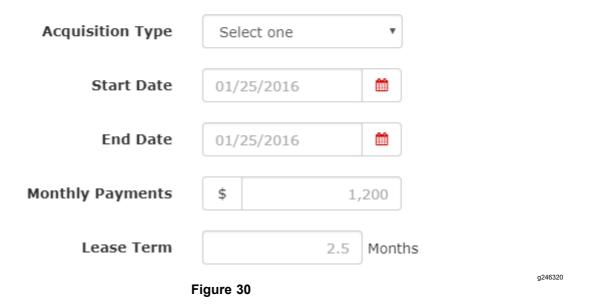

- 1. Fill out the utilization details for the attachment.
- 2. Fill out the acquisition cost details for the attachment.

1 — Warranty Details



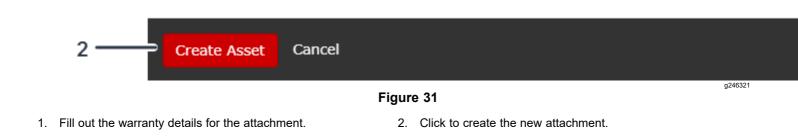

Navigating myTurf

Dashboard

When you first enter myTurf, the dashboard appears. The dashboard is the overall summary of your system.

From the dashboard, you can access following tabs:

- Asset List (page 40)
- Maintenance Due (page 46)
- Order Management (page 49)
- Parts Inventory (page 51)
- Reports (page 54)
- Wireless (page 55)

myTurf Status

As shown in the example screen (Figure 32), the dashboard provides the status of your fleet when you first enter myTurf.

The myTurf status tells you the following at-a-glance information:

- Machines in your fleet are under repair or maintenance
- Maintenance is due and parts are needed for machines in your fleet
- · Maintenance is due and you have the parts on hand for machines in your fleet
- Parts with safety stock alert

- Open work orders
- Service bulletin alerts
- Any error occurring with a wireless device


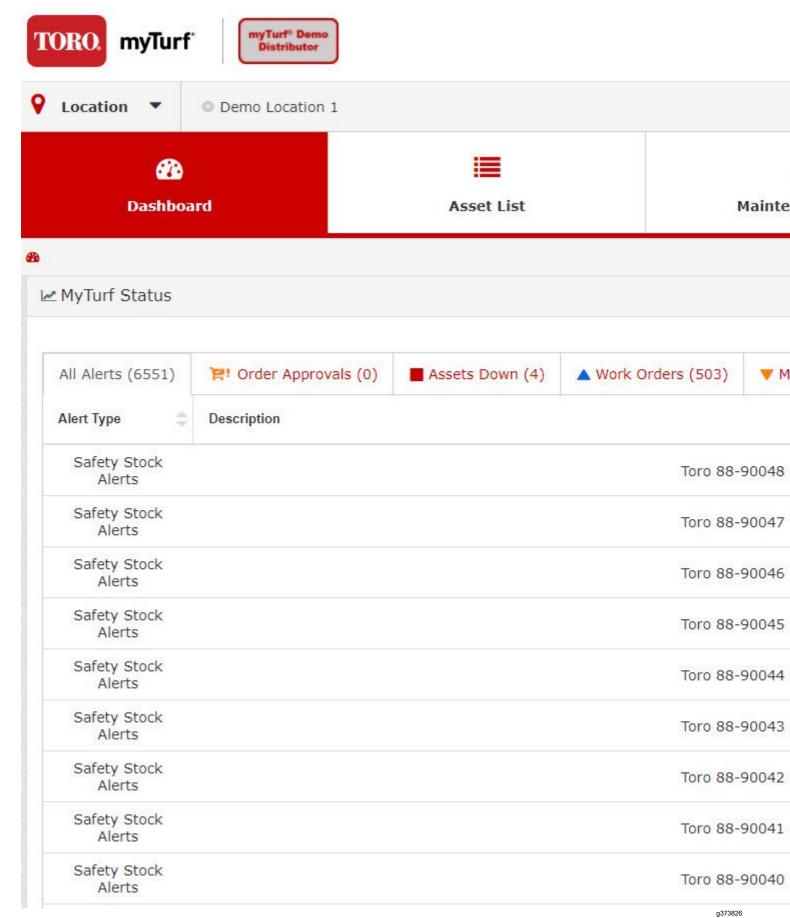


Figure 32

Selecting Locations

From the **Dashboard**, you can select the location(s) that you want to view.

After you select the desired location(s), click **Apply** to set the location(s) as shown in Figure 33.

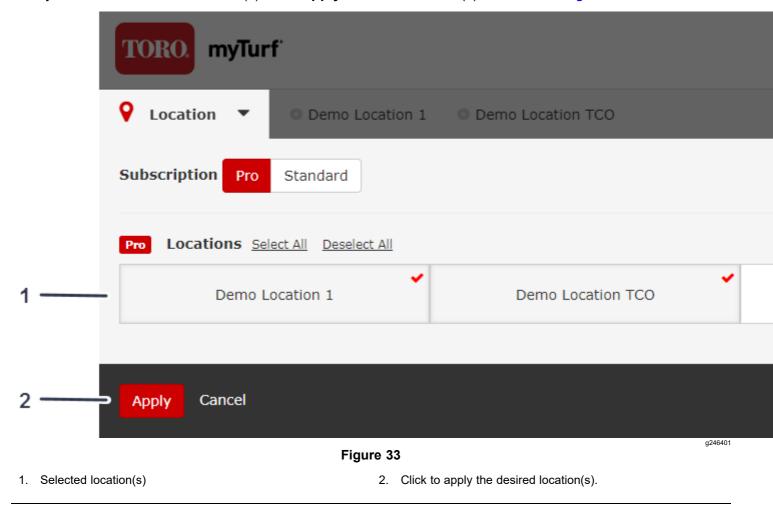

Filtering Assets by Group

1. From the **Dashboard**, click **Equipment** (Figure 34).

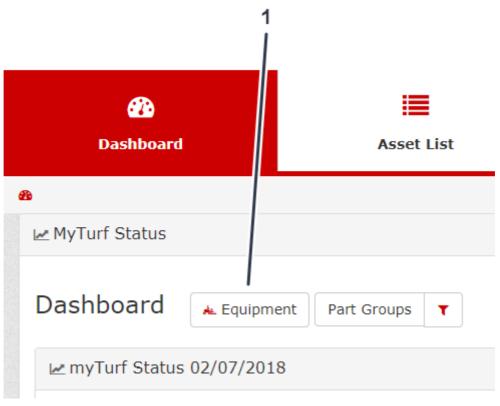


Figure 34


g246433

1. Click Equipment.

2. From the **Dashboard**, click the **Filter Assets by Group** drop-down to filter your assets so that you can view those groups only (Figure 35).

You can select the groups of equipment, attachments, irrigation, or other assets that you would like to view, regardless of location. After selecting the desired groups, you can view the assets in your **Asset List** (Figure 35).

Filter Asset by Group

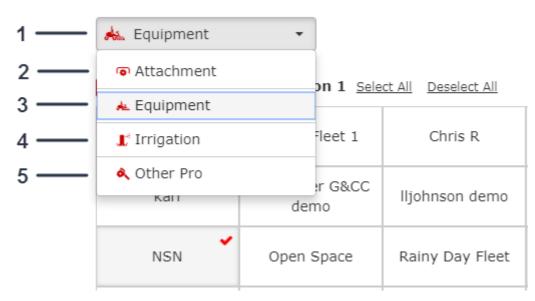

g246435


Figure 35

- 1. Filter assets by group drop-down
- 2. Attachment group selection
- 3. Equipment group selection

- 4. Irrigation group selection
- 5. Other group selection

3. Select the particular location(s) that you want to filter (Figure 36).

Filter Asset by Group

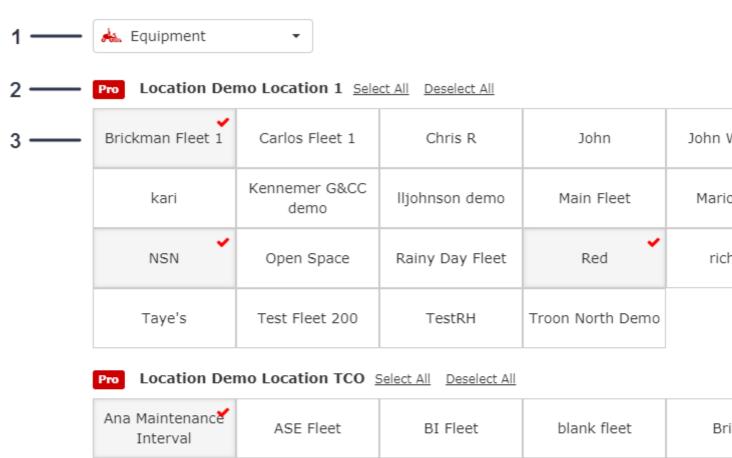

Carlos Fleet	Classic Club	CLC One of Each	CLC Test Fleet	Club
Dan Fleet	De Enk G&G	DeEnk	Demo Fleet 1	Demo
Facilities	Fleet	Ft Myers 2	GIS 2011	Greens m

Figure 36

2. Location

g246436

^{1.} Filter assets by group drop-down

^{3.} Select the particular locations.

^{4.} Click **Apply** to filter the assets by the selected locations (Figure 37).

TCO Fleet	test	test 123	Toro Demo Fleet	Toro San
TPC Fleet	Trevor			



Figure 37

1. Click to apply the filter.

Asset List

From the **Dashboard**, click the **Asset List** tab.

The asset list provides the summary of your assets (Figure 38).

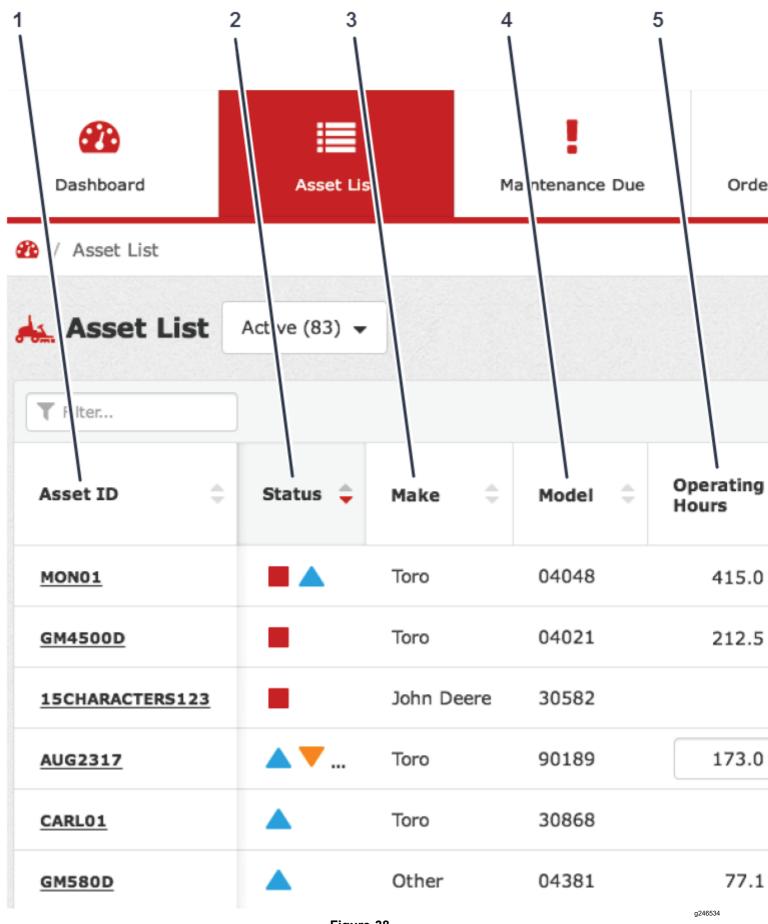


Figure 38

1. Asset ID

4. Asset model number

5. Total operating hours

- 7. Wireless hour meter connection
- 8. New Service Bulletin 41 indicator
- 10. Fuel type
- 11. Click the arrow to view the fuel usage (year-to-date) and the fuel fill


Asset make

2. Asset status

Odometer

Asset attachments

When viewing your **Asset List**, you can display a select number of assets at a time by selecting a number, or you can click **All** to display all your assets at once (Figure 39).

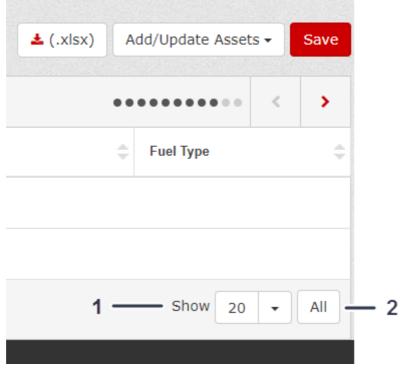

g250654

- Figure 39
- 1. Click to display a select number of assets at a time.
- Click to view all assets.

Asset ID/Asset Overview

From the Asset List, you can select a particular Asset ID to view details pertaining to that asset.

To view an asset, select that particular **Asset ID** to view the **Asset Overview** (Figure 40).

You can download the asset overview as a document (Figure 40).


You can change details about the asset by clicking **Asset Record** (Figure 40).

Note: After altering the **Asset Record**, click **Save**.

The **Asset Overview**, allows you to view the following information for an asset:

- · Asset details:
 - Status
 - Make
 - Model number
 - Serial number
 - Description (example: Groundsmaster 4500-D, Workman HDX-D, Reelmaster 5010-H, etc.)
 - Location
 - Group
 - Warranty expiration date (if applicable)
 - Extended protection expiration date (if applicable)
- Utilization and fuel details:
 - Total operating hours
 - Fuel type
 - Fuel usage (year-to-date)

- Fuel fill
- Wireless hour meter connection (if applicable)
- · Maintenance status
- Assigned attachments
 - Manage attachments
 - Create a new attachment
- Notes
- Resources
 - Maintenance schedule
 - Maintenance history
 - Master parts viewer
 - Parts Catalog
 - Service Bulletins
 - Service Manuals
 - Operator's Manuals
 - My uploads
 - Training videos
 - Product training

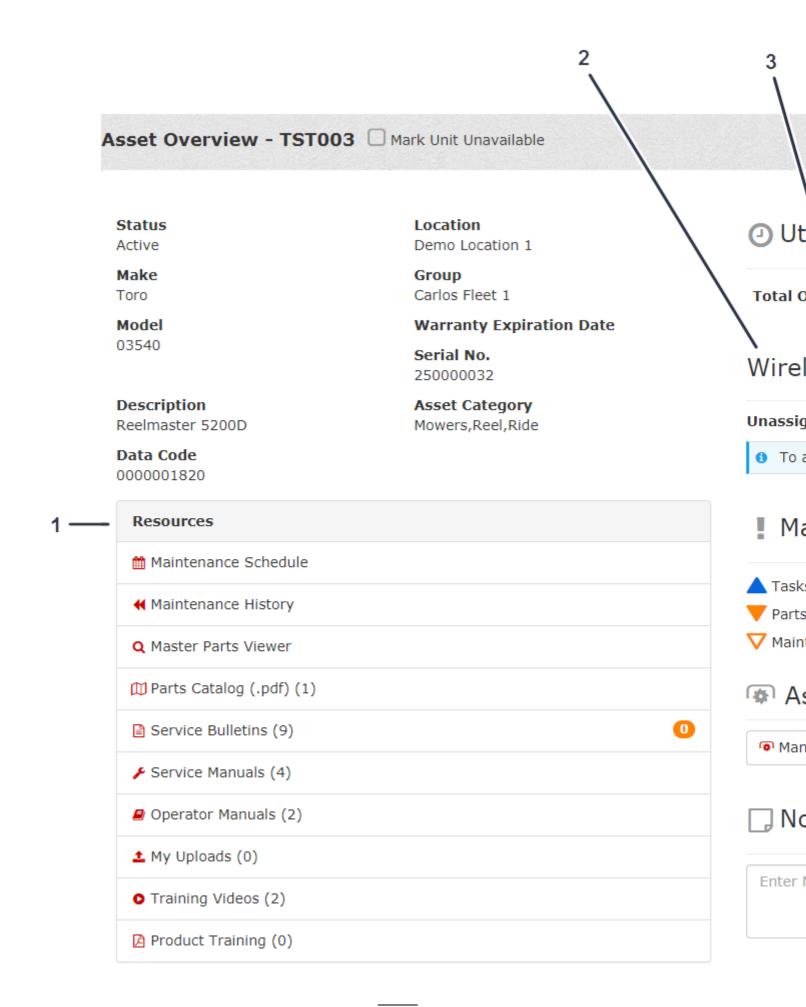

Asset Types

You can select the asset type that you want to view in your asset list by clicking one of the tabs shown in Figure 41.

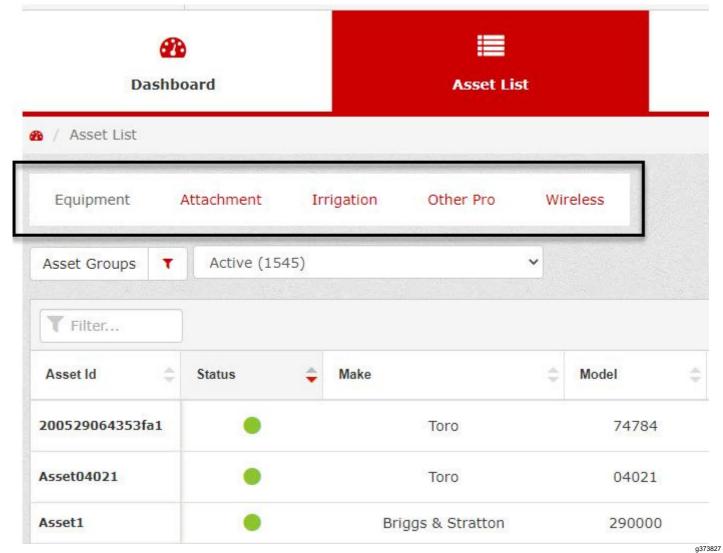


Figure 41

Status

The status of an asset in your fleet is designated as follows:

Symbol	Status
	Asset is in good, operating condition
	Work order created/tasks assigned
	Maintenance due, parts on hand
	Maintenance due, parts needed
•	Safety stock alert

Maintenance coming due
Asset under repair or maintenance

Maintenance Due

The **Maintenance Due** tab allows you to view the following information:

- Asset ID—allows you to select a particular asset to view all the maintenance tasks for that asset (Figure 42 and Figure 43).
- Status—refer to the Status (page 45) table for the current status of an asset.
- Task—states the task that you need to complete (Figure 42).
- Task Type—the type of task is categorized as general, preventive, or repair (Figure 42).
- Parts Needed—click the number below the column to view the parts necessary for the maintenance task (Figure 42).
- Work Order—click the work order number to view the work order details and to see who is assigned to the work order (Figure 42).
- Attachments—click the number below the column to view the associate attachments to the asset. If there is a tool icon next to the number of attachments, attachments also need service (Figure 42).





Maintenance Due

Dashboard

♠ / Maintenance						
🚣 Mainte	nance Due	🚣 Equipmen	t All (333) •			
T Filter Only show tasks associated with me						
Select	Asset ID 🔷	Status	Task			
	WHM01	∇	Replace engine oil filter			
	WHM01	•	Check cutting unit drive belt adjustment			
	WHM01	•	Check air filter, dust cup, & baffle			
	WHM01	•	Clean under cutting unit belt covers			
	WED1	▽	Change brake fluid			
	WED0	A	Replace thermostat(s)			
	WED0	A	Replace moving hoses	g247729		
			Figure 42			



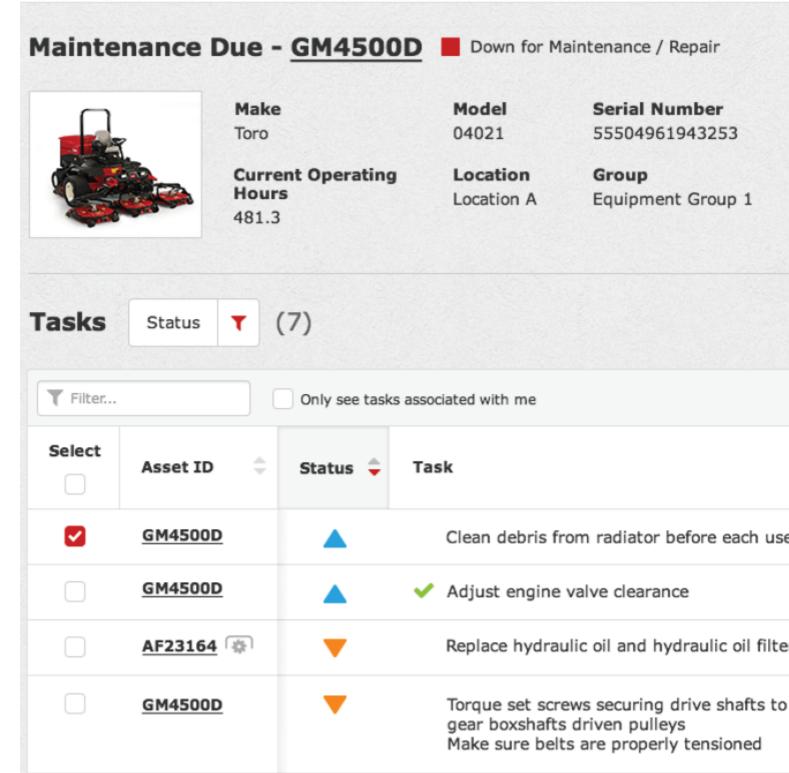


Figure 43

Inspect engine oil level before each use

g247760

JAKE01 🐞

Order Management

The **Order Management** tab allows you to view the following information for current or past orders:

- Cart ID—click the Cart ID to view all the particular information that cart (Figure 44).
- Name—tells you to whom the cart belongs (Figure 44)
- **Location**—states the location of the cart (Figure 44)
- Cart Status—tells you whether a cart is still being compiled, if a cart is ready to order, or if the cart is awaiting approval from the supervisor (Figure 44)
- Reorder Cart—click the reorder cart icon to order the same parts again (Figure 44).
- Parts—states the total number of parts in the order (Figure 44)
- Total Cost—states the total cost of the parts in the order (Figure 44)
- Created By—states who created the order (Figure 44)
- Date Modified—states the date that the order was last modified (Figure 44)

If you want to delete a cart, select the cart, and click **Delete Selected** (Figure 44).



Dashboard



Asset List





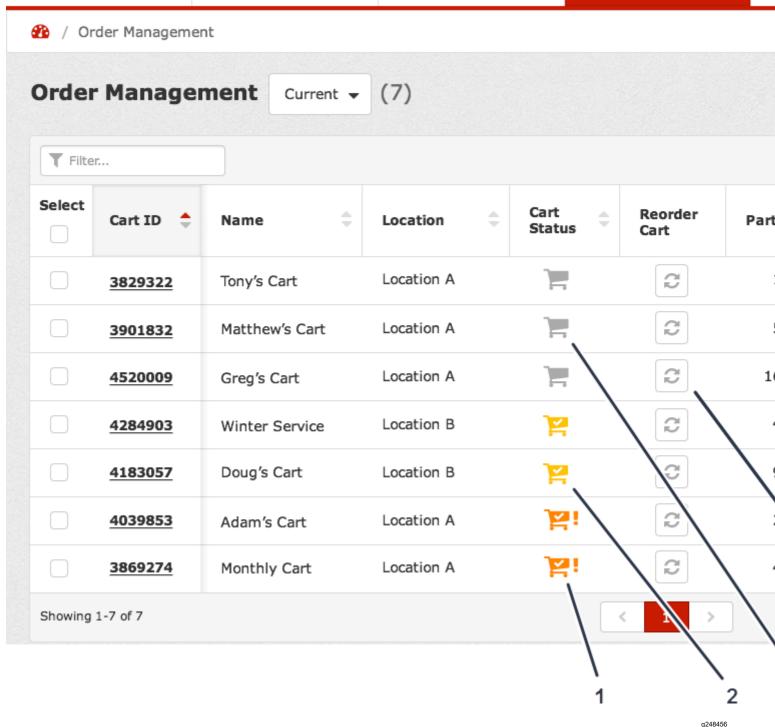


Figure 44

- 1. Icon indicating that a cart is awaiting supervisor approval
- 2. Icon indicating that a cart is ready to order

- 3. Icon indicating that a cart is still being compiled
- 4. Click the reorder cart icon.

Parts Inventory

The **Parts Inventory** tab allows you to view the following information for the parts in your inventory:

- **Part Number**—states the part number that you want to order (Figure 45)

 Click the "i" icon next to a part number for additional information. The part you have in your inventory may have been superseded, cross-referenced, discontinued, etc. (Figure 45).
- **Status**—tells you whether or not you have the required parts in your inventory, if you need to order parts, or if the parts have been ordered but are in process (Figure 45)
- Make—lists the manufacturer of the part (Figure 45)
- Description—provides a description of the part (Figure 45)
- Cost Per Unit of Measure—states how much each part costs (Figure 45)
- Quantity in Stock—states how many of that particular part that you have in your inventory (Figure 45)
- Unit of Measure—provides how the part is measured (i.e., each, fl oz, mg, gram, etc.); refer to Figure 45
- Subtotal—states the subtotal cost of the parts (Figure 45)
- Bin Number—enter the bin number where you want the part located (Figure 46).
- Location—states the location in which the parts exist (Figure 46)
- Needed for Open Work Orders—tells you the quantity of the parts you need to fulfill the current open work orders (Figure 46)
- Available—states the total quantity of the part currently available (Figure 46)
- **Needed for Maintenance Due**—tells you the quantity of the parts you need to fulfill for the machines due for maintenance (Figure 46)
- On Order—states the quantity of the parts you currently have on order, but are in your inventory yet (Figure 46)
- Last Used Date—states the date that the parts were last used for maintenance (Figure 46)
- Show Related Assets—click the icon to view related assets (Figure 46).



Dashboard



Asset List





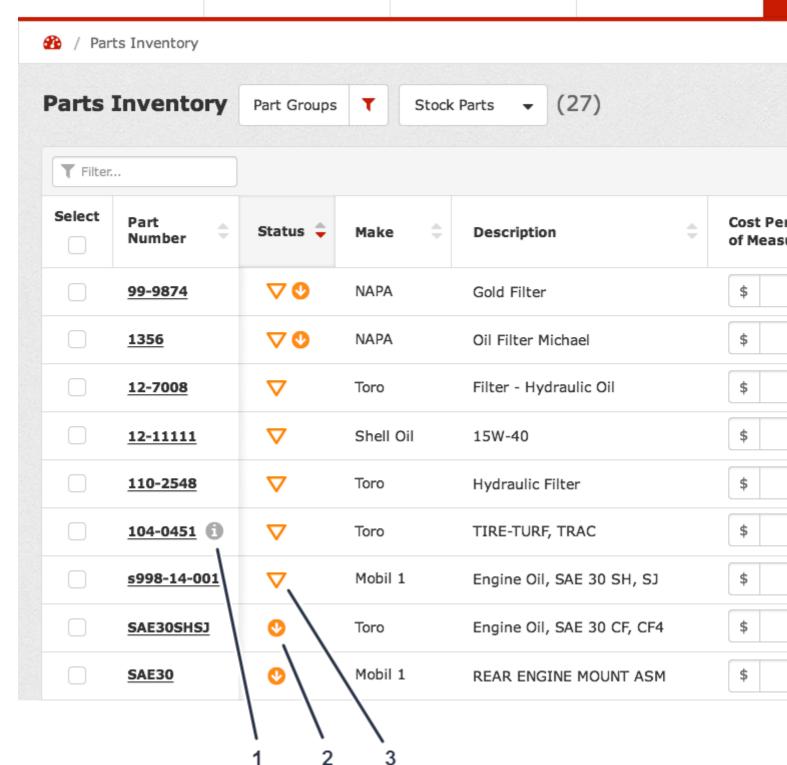


Figure 45

- Click the "i" icon next to a part number for additional information.
- 2. Icon indicating that you parts have been ordered but are in process
- 3. Icon indicating that you need to order the parts

g248466




Dashboard







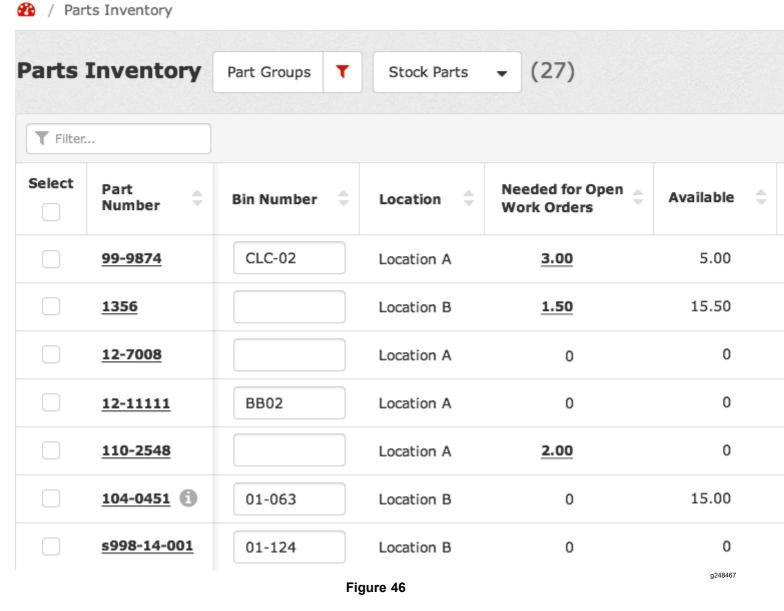

Select the parts that you want to order, and click **Order Selected** to order the selected parts (Figure 47). If you want to delete parts, select the parts, and click **Delete Selected** (Figure 47).

	110-2548	•	Mobil 1	TIRE-TURF, TRAC
	104-0451	•	Toro	Engine Oil, SAE 30 SH, SJ
	s998-14-001		Mobil 1	Engine Oil, SAE 30 CF, CF4
	SAE30SHSJ		Mobil 1	REAR ENGINE MOUNT ASM
	SAE30		Toro	KIT-GREASABLE ASM
	RP2000		Toro	PO-17
	CLC0001		Toro	Best Oil
	110-2548		Toro	KIT-GREASABLE ASM
Showing 1-20 of 27				< 1 2
📜 Ord	ler Selected	Delete Se	elected	
	1	2		
			Figure 47	

1. Click to order the selected parts.


2. Click to delete the selected parts.

Reports

The **Reports** tab (Figure 48) allows you to generate the following types of reports:

- Asset Utilization
- Location Maintenance Cost
- · Maintenance Due and Parts Needed
- Part Orders Placed
 - Option 1—by carts
 - Option 2—by part numbers
- Total Cost of Ownership



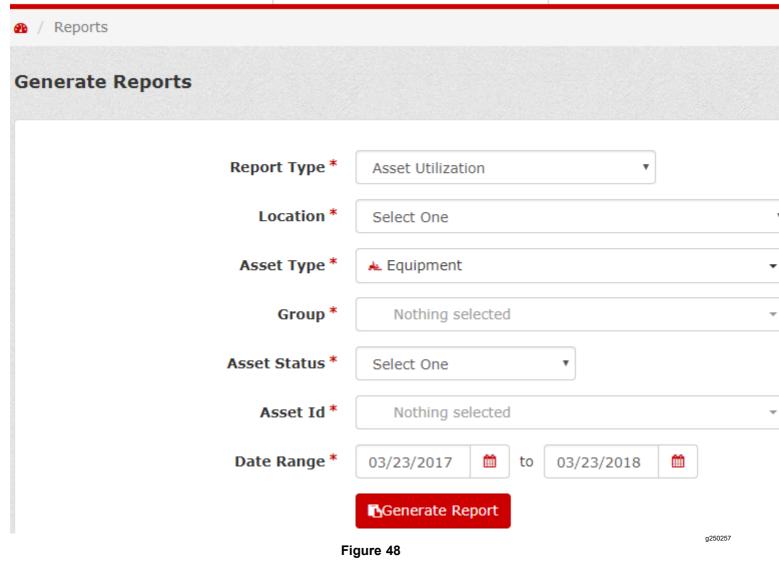

To generate a report, refer to Generating Reports (page 129).

Wireless

The **Wireless** tab allows you to view the following information for base stations/repeaters:

- Base Station/Repeater ID—states the identification number of the base station/repeater (Figure 49)
- Status—tells you if the base station/repeater is not connected or is out of range (Figure 49)
- Location—states the location in which the base station/repeater exists (Figure 49)
- Last Update Received—states when the base station/repeater most recently received an update (Figure 49)



Dashboard



Asset List








Wireless

Wireless

Base Stations / Repeaters (3)

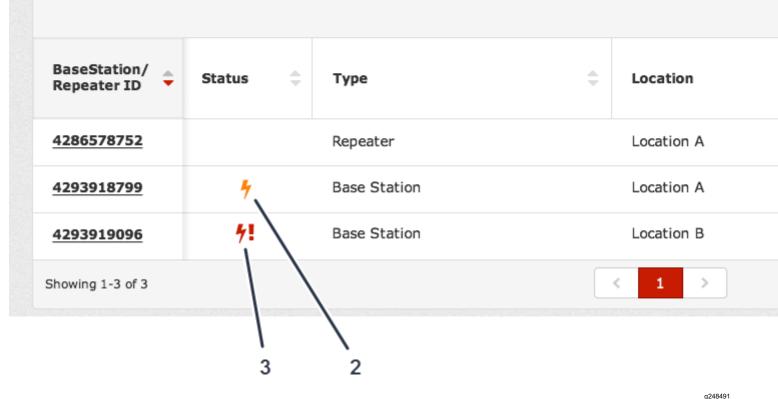


- Figure 49
- 1. Click to add a base station or repeater.
- 2. Indicates that a firmware update is needed.
- 3. Indicates that a base station or repeater is not communicating.

The Wireless tab also allows you to view the following information for assigned or unassigned wireless hour meters:

- Wireless Hour Meter ID—states the identification number of the wireless hour meter (Figure 50)
- Active or Inactive—states whether the wireless hour meter is active or inactive (Figure 50)
- Status—tells you if the base station/repeater is not connected or is out of range (Figure 50)

- Asset Type—tells you which type of asset the wireless hour meter is paired with (Figure 50)
- Group—states the group in which the base station/repeater exists (Figure 50)
- Asset ID—state the asset ID associated with the wireless hour meter (Figure 50)
- Meter Reading—provides the current wireless hour meter reading (Figure 50)
- Last Update Received—states when the wireless hour meter most recently sent an update (Figure 50)

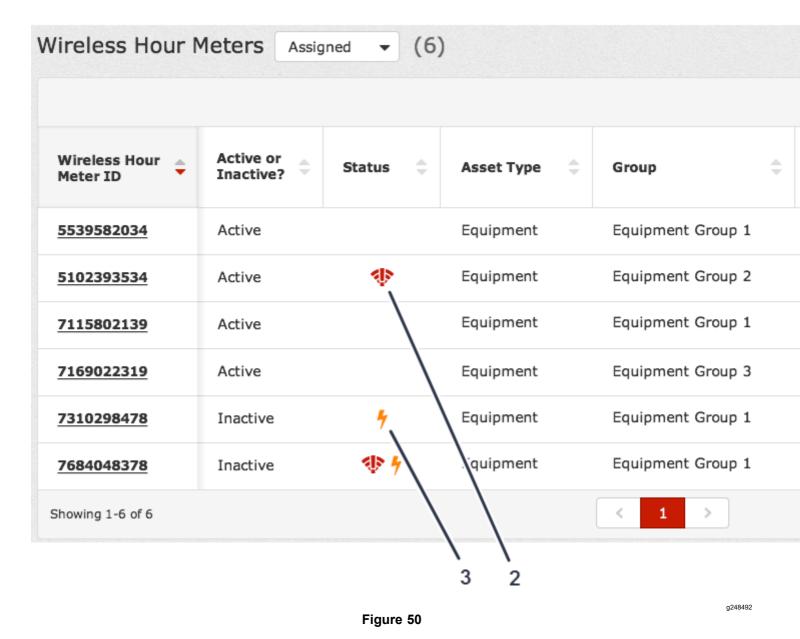

- 1. Click to add a wireless hour meter.
- 2. Indicates that a firmware update is needed.
- 3. Indicates that the wireless hour meter is not communicating.

To add a base station/repeater, click **Add Base Station/Repeater ID** (Figure 49); refer to Adding a Base Station/Repeater (page 90).

To add a wireless hour meter, click **Add Wireless Hour Meter** (Figure 50); refer to Adding a Wireless Hour Meter (page 92).

Accessing the myTurf Help Center

From the top of the myTurf page, regardless of whether you are logged in or not, you can click **Site Help** to access the **myTurf Help Center** (Figure 51).



Figure 51

g373190

Using the **myTurf Help Center**, you can view the full manual, how-to guides, video training, and frequently asked questions (Figure 52).

myTurf Help Center

Full Manual

myTurf Pro Manual - English

How-to Guides (standard operating procedures, 1-3 pages each)

- . Customer Adding an asset to the asset list, manually or via QR code
- Customer Bulk parts upload using a template
- · Customer -Ordering and receiving parts into inventory
- · Customer Creating a work order
- · myTurf Administrative Overview
- Distributor Viewing a customer's asset list
- · Distributor Order Management
- Distributor Uploading a price list (non-integrated)

Video Training

- · General overview, login and user profile management
- Adding an asset and asset list overview
- Parts ordering and cart management
- Maintenance management
- Work order management
- · Reports and Excel downloads
- Location record management and deleting assets

Frequently Asked Questions

- Pricing doesn't show, how do I troubleshoot?
- . I am an international customer, having issues with pricing not showing, how do I troubleshoot?
- · How do I un-associate a wireless hour meter from an asset?
- My password isn't working, how do I get it reset?
- How do I update my username?

g373191

Editing Parts Groups

Location administrators can create, delete (if there are no associated parts only), and edit (change the name) of **Parts Groups**.

1. From the Location Record, click Asset Groups (Figure 53).



Figure 53

2. At the bottom of the screen, click **Create New Part Group** or click the **Edit** icon next to the **Part Group** (Figure 54).



Figure 54

1. Click to create a new part group.

2. Click to edit a part group.

3. To create a new part group, enter the **Group Name** and click **Create** (Figure 55).

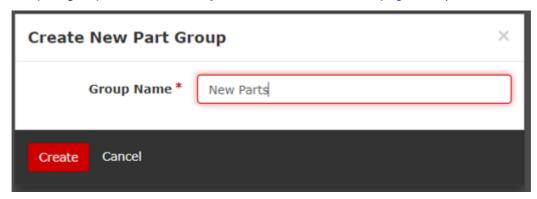


Figure 55

4. To edit or delete a **Part Group**, enter the **Group Name** and click **Save** or click the trash can icon to delete the group (Figure 56 and Figure 57).



Figure 56

g357488

a357485

g357484


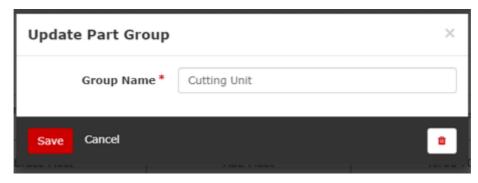


Figure 57


g357487

Updating Parts Groups

- 1. From the **Parts Inventory**, select the parts (Figure 58).
- 2. Click **Update Group** at the bottom of the page to move the selected parts from one group to another group (Figure 58).

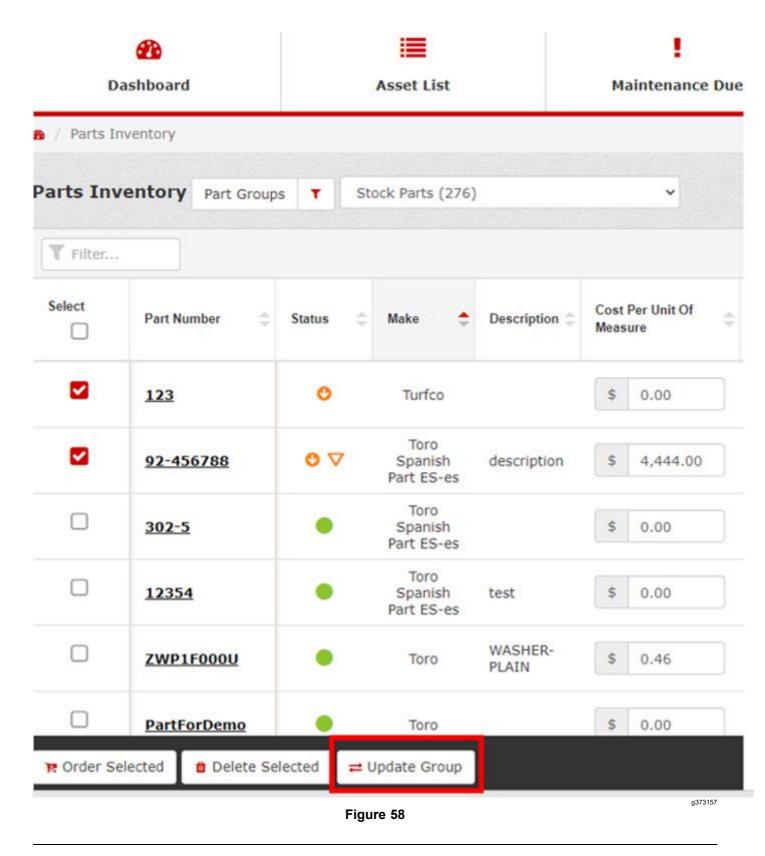


3. In the pop-up screen, select the new **Part Group** and click **Save** (Figure 59).

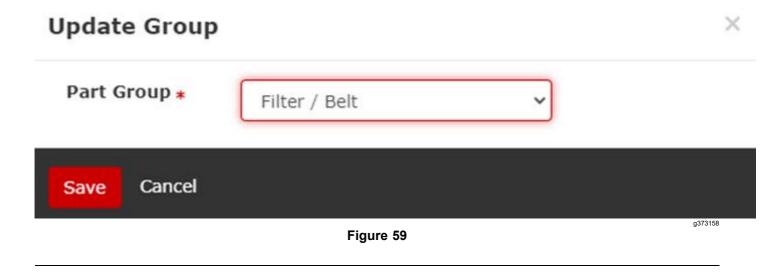

Creating an Address for Ordering Parts

1. From the **Dashboard**, click **Admin**, located in the upper, right corner of the screen (Figure 60).

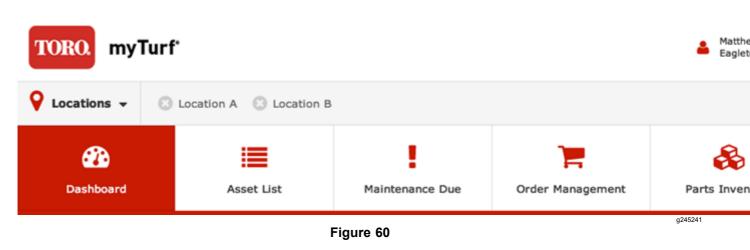

1. Click Admin.

2. Click the Edit Location Icon (Figure 61).

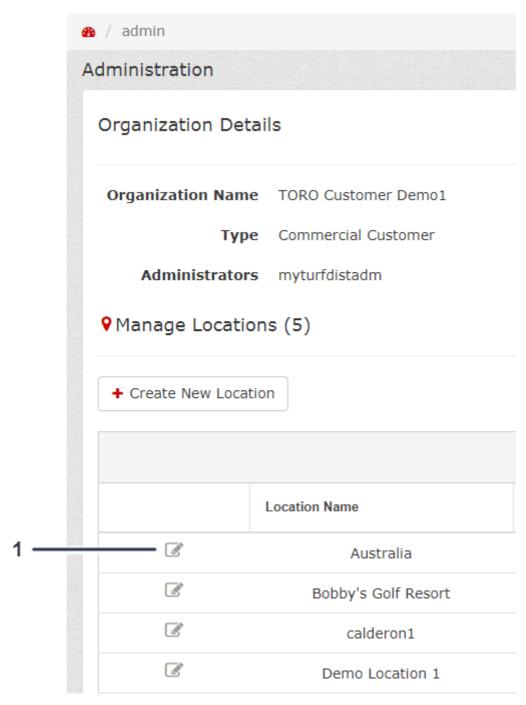


Figure 61

g246195

1. Click to edit the location.

3. From the Location Record, click Parts Ordering (Figure 62).



Contact Info

Subscription Invoice Address

Labor Wage and Fuel

Locale Settings

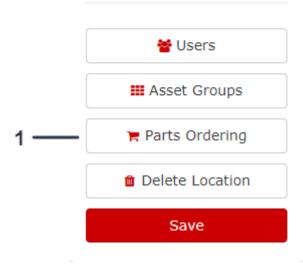


Figure 62

g248504

- 1. Click Parts Ordering.
- 4. From the Manage Parts Ordering screen, click Create New Address (Figure 63).


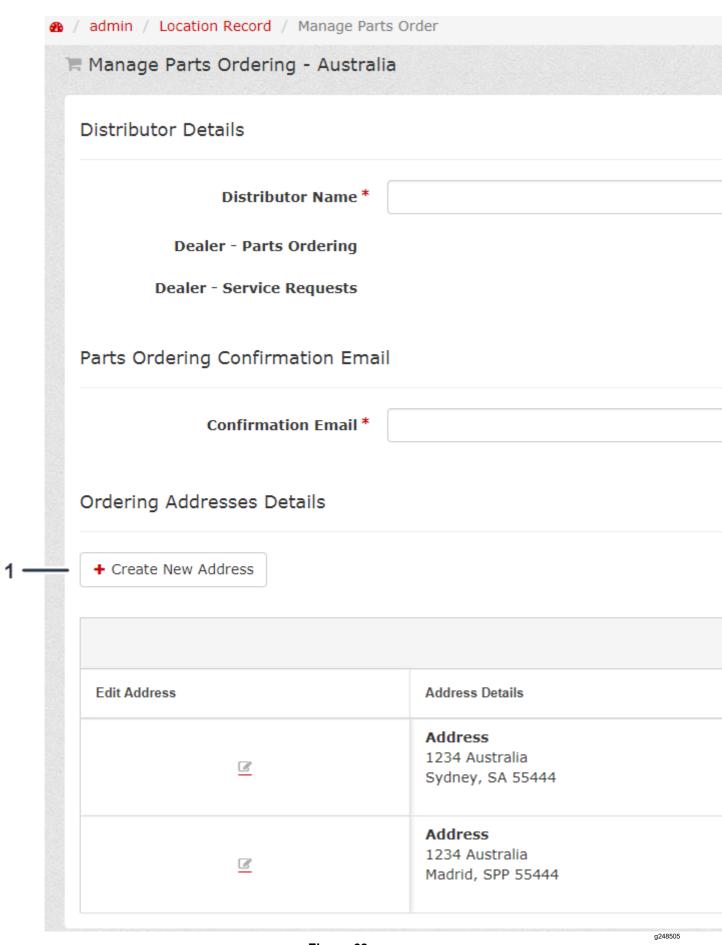


Figure 63

1. Click to create a new address for ordering.

5. Fill out the Create New Address form, and click Create to complete the process (Figure 64).

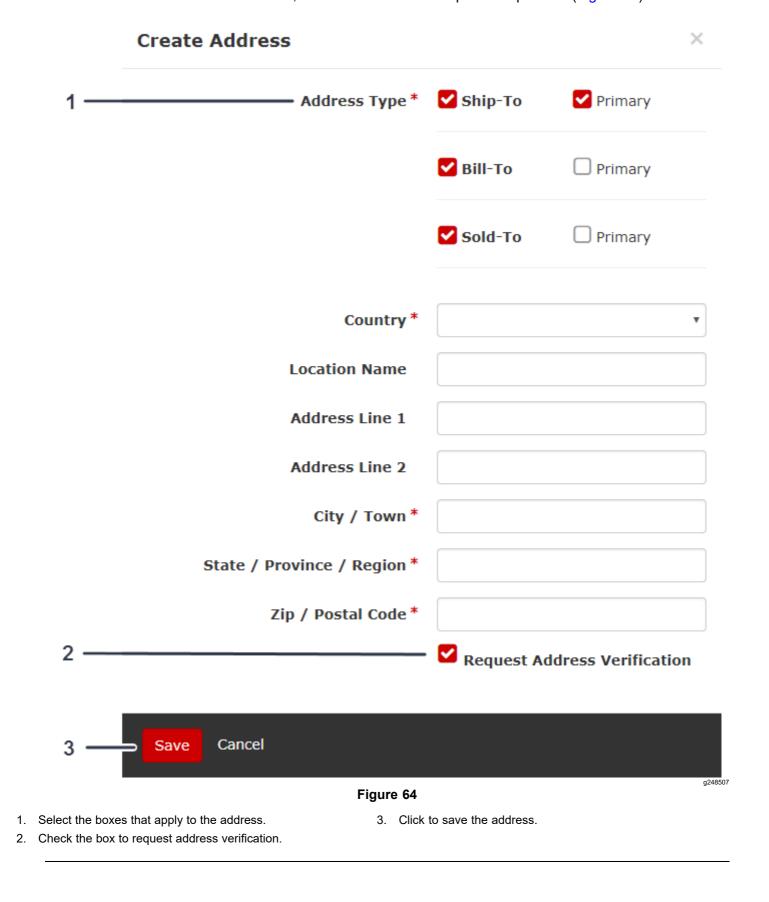

Editing an Address for Ordering Parts

- 1. From the **Dashboard**, click **Admin**, located in the upper, right corner of the screen (Figure 60).
- 2. Click the **Edit Location** Icon (Figure 61).
- 3. From the Location Record, click Parts Ordering (Figure 62).
- 4. From the Manage Parts Ordering screen, click the Edit Address icon (Figure 65).


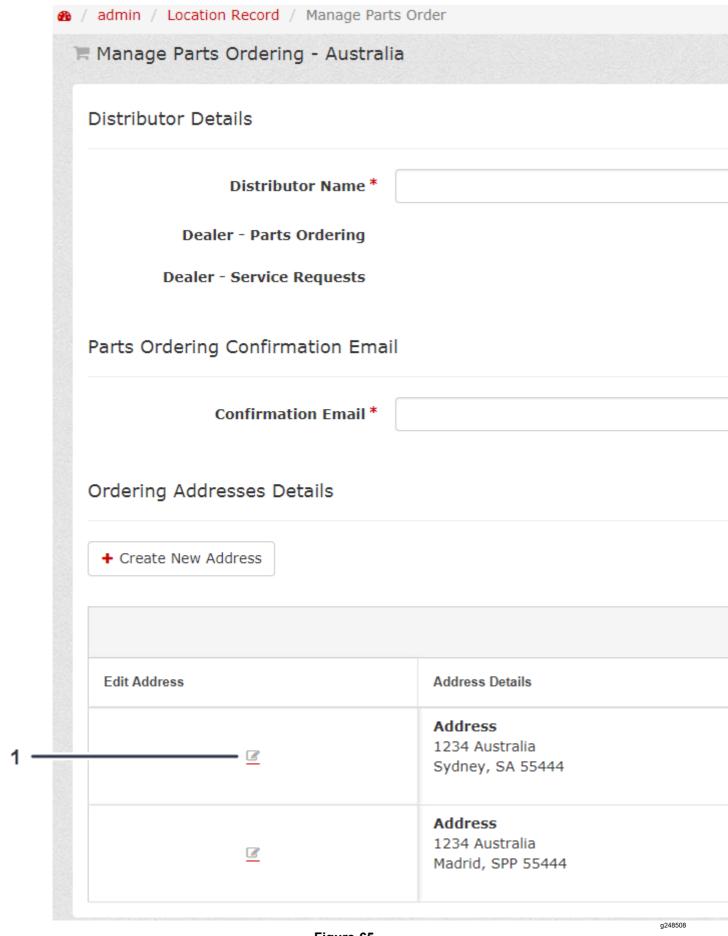


Figure 65

1. Click the icon to edit the address.

5. Fill out the Edit Address form, and click Save after you make the changes (Figure 66).


Note: You can delete the address by clicking the trash can icon (Figure 66).

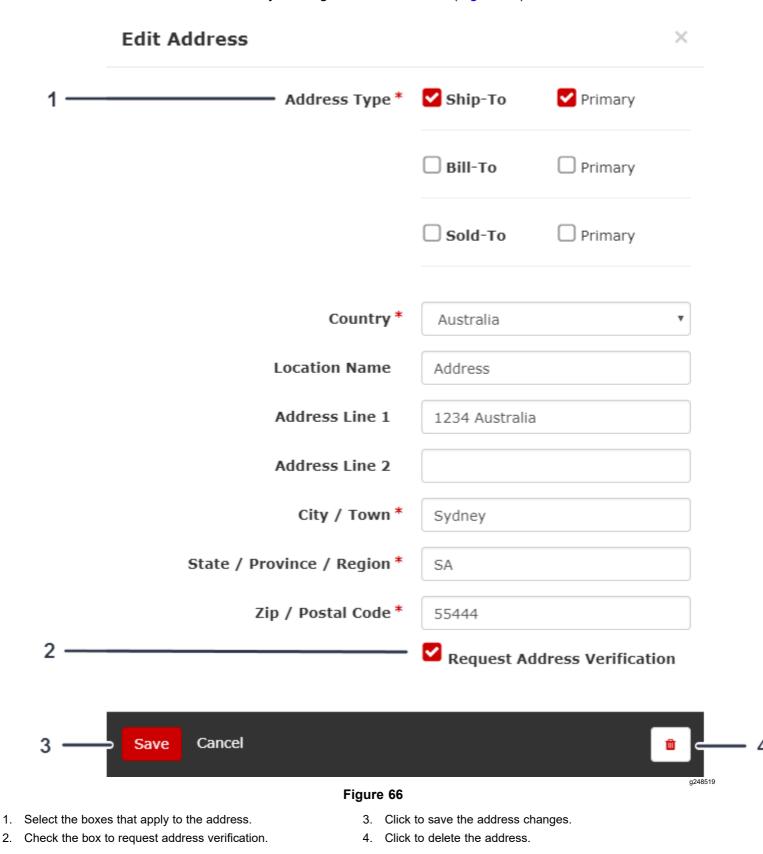

Ordering Parts for Repair

- 1. Click the Asset List tab.
- 2. Click the desired **Asset ID** (Figure 67).
- 3. Click Master Parts Viewer (Figure 67).

Note: You can also access the Master Parts Viewer from the Asset Overview.

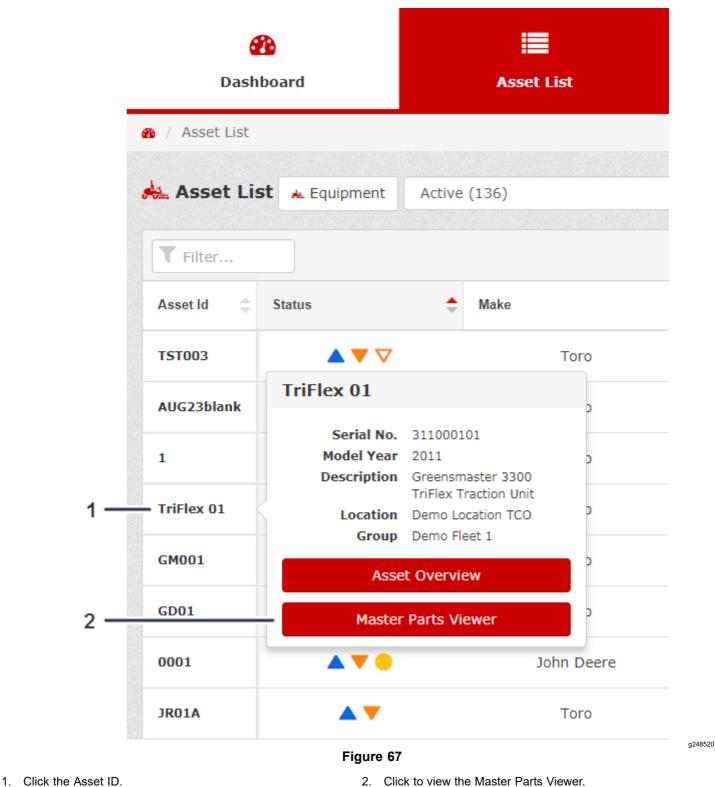

4. Find the appropriate assembly drawing that includes the part(s) you need (Figure 68).

Greensmaster 3300 TriFlex Traction Unit


Model Number: 04510 Change

Serial Number: 311000001 - 3110

Parts

Search for a part within assembly drawings:

Enter Part Name/Number

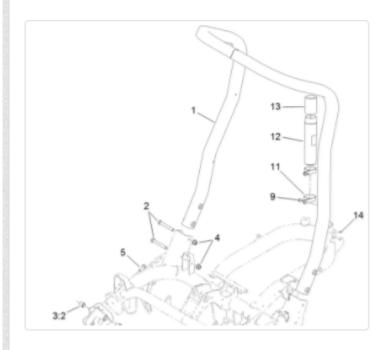



Brake Cable Grommet Assembly

g248551

Roll-Over Protection System Assembly

Figure 68

5. After you find the parts you need, select them on the left side of the assembly drawing and click **Add to Cart** (Figure 69).

Groundsmaster 4500-D

Model Number: 30873 Change Serial Number: 316000001 - 316999999 Change

3 Way Manifold Valve Assembly (121-3077)

	Select	#	Part	Quantity
1 —	- 🗸	<u>2</u>	125-7554 VALVE-SOLENOID	1
		<u>2:1</u>	125-7561 1 SEAL KIT	1
	A	<u>3</u>	115-8733 SCREW -HSH	2
		4	340-2 FITTING-HYD, STRAIGHT	1
	2	4:1	237-22 O-RING	1
	~	<u>4:2</u>	237-42 O-RING	1
		<u>5</u>	92-9258 ADAPTER-CHECK	1
	✓	<u>6</u>	340-86 FITTING-TEE	1





6. After you receive the message indicating that you successfully added the parts, click your **Shopping Cart** (Figure 70).

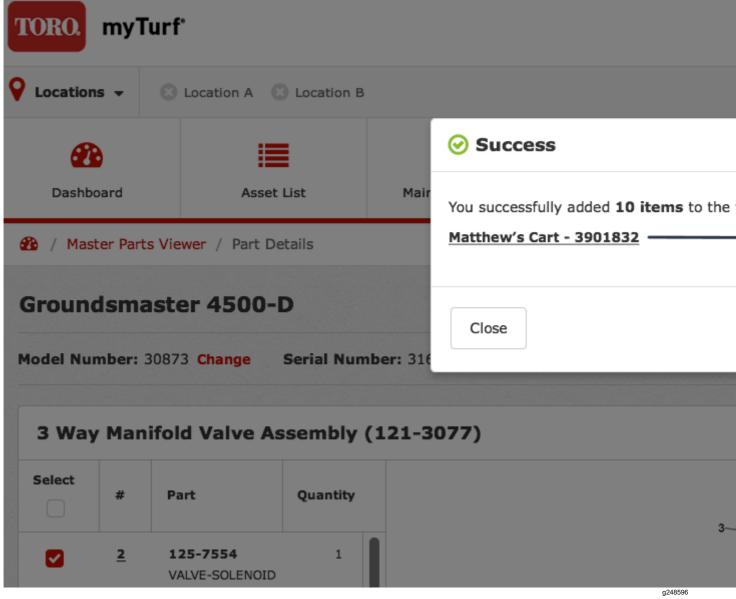


Figure 70

- 1. Click your shopping cart.
- 7. Review the parts and the quantities of the parts in your **Shopping Cart**, and ensure that they are correct (Figure 71).
 - If you want to delete any parts from your cart, select them on the left side, and click **Delete Selected**.
- 8. Click **Prepare Order** and fill out the necessary information (Figure 71).

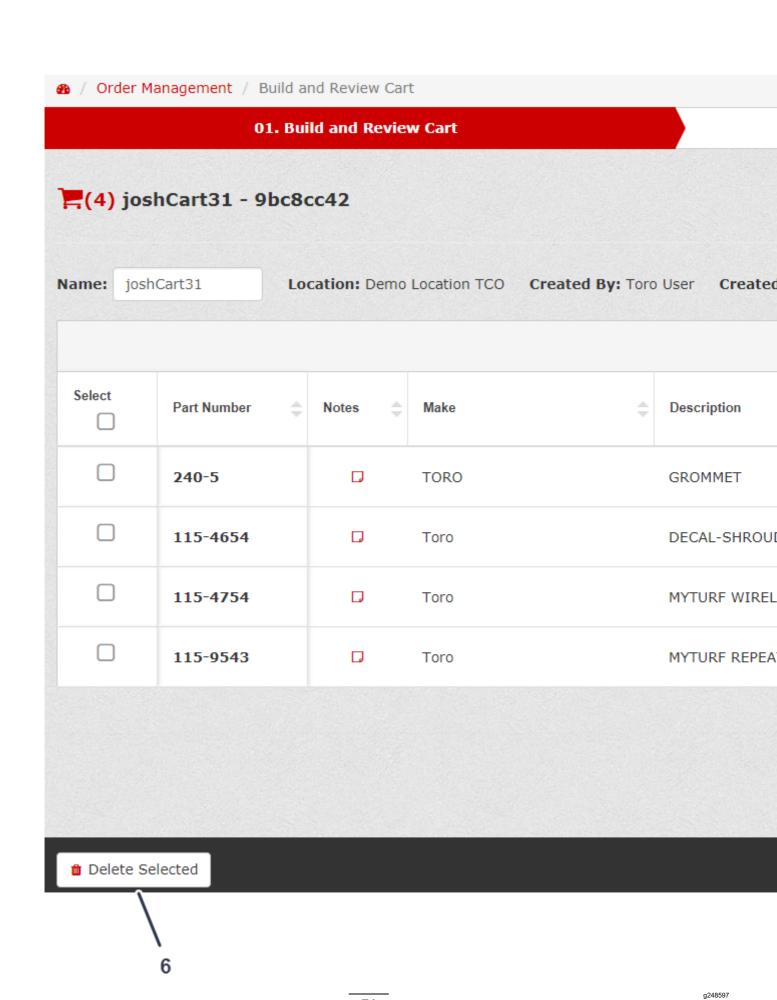



Figure 71

1. Click to delete the entire cart.

4. Click to save changes made to the cart.

To add parts by **Bulk Upload**, do the following:

- Click Add Parts (Figure 72).
- Click Bulk Upload (Figure 72).

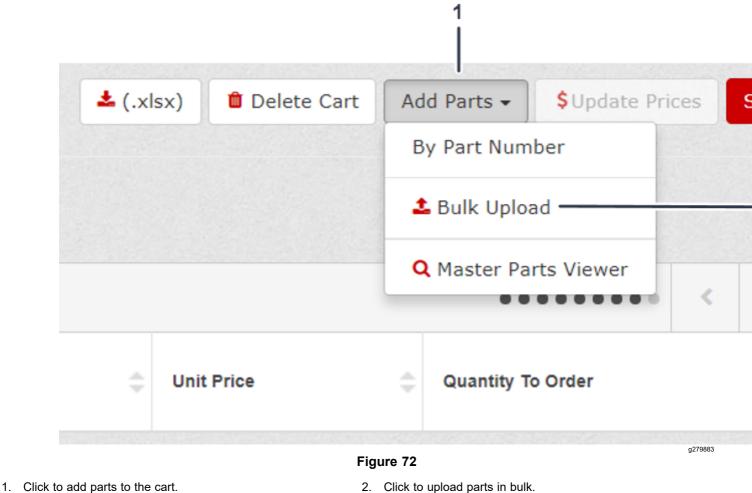

2. Click to upload parts in bulk.

C. In the Bulk Order Upload, click and download the Bulk Part Order Template (Figure 73).



Figure 73

- 1. Click to download the template.
 - D. Fill out the spreadsheet and save it to your computer (Figure 74).

Note: Do not exceed 50 line items.

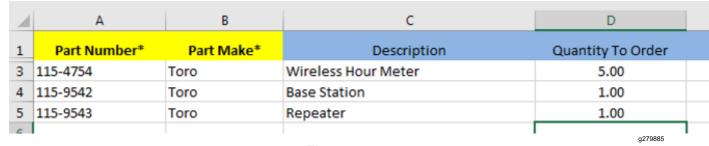


Figure 74

E. In the Bulk Order Upload, click Choose File and upload your saved file (Figure 75).



Figure 75

1. Click to select and upload your saved file.

9. After reviewing the payment and shipping information, click Review and Place Order (Figure 76).

01. Build and Review Cart

ayment and other imen	mation	
Order Method *		
Purchase Order Number*	test31	
Payment Type *	Account	
Phone Number		
Email Address	torodemo1@	MyTurf.com
Shipping Information		
Shipping Method		Standard
Ship Whe	en Complete	□ <u>•</u>
		3/6/2018

Figure 76


g248599

1. After verifying the payment and shipping information, click Review and Place Order.

10. Ensure that all the details are correct, then either click **Place Order** or select **Mark for Approval** (for supervisor approval) and click **Place Order**.

Receiving Parts into Inventory

- 1. Click the Order Management tab (Figure 77).
- 2. Select **Purchased** orders to view the orders that were placed, but you have not received, and orders that you received (Figure 77).
- 3. After receiving your parts, click the **Receive Parts** icon to view the parts from that order (Figure 77).

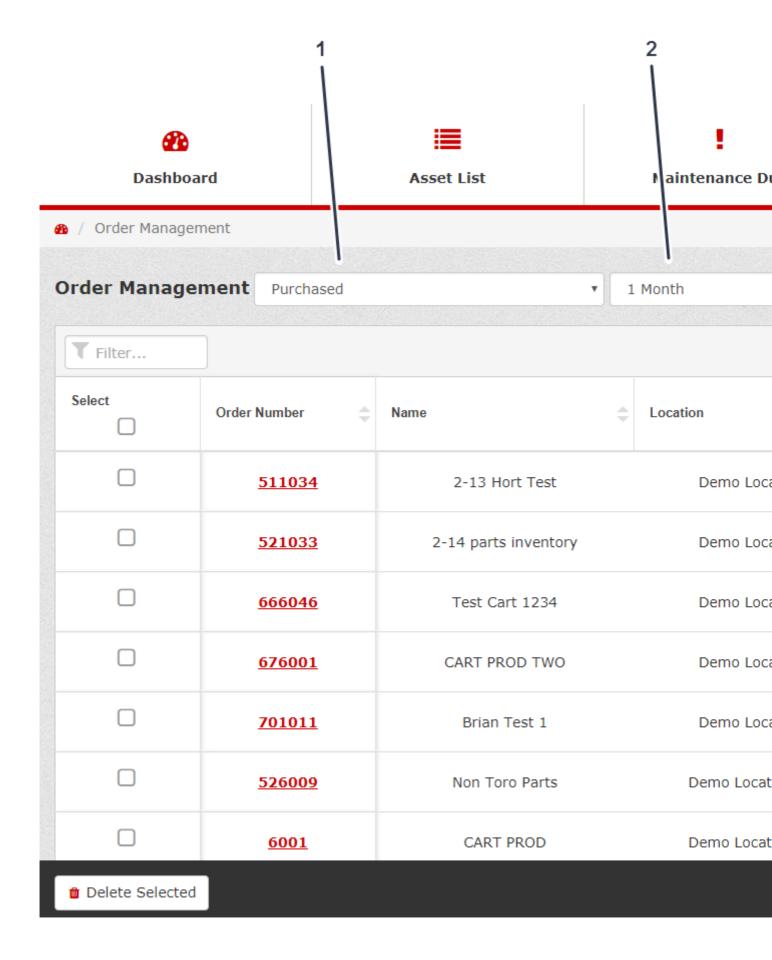


g248686

Fägure 77

4. Select the parts you received, then, if necessary, adjust the **Part Group** they belong to, the cost, and/or the quantity of each part received (Figure 78).

Note: You can also adjust the shipping and tax costs before adding the parts to your inventory.

Receive Parts from 2-14 parts inventory - 521033

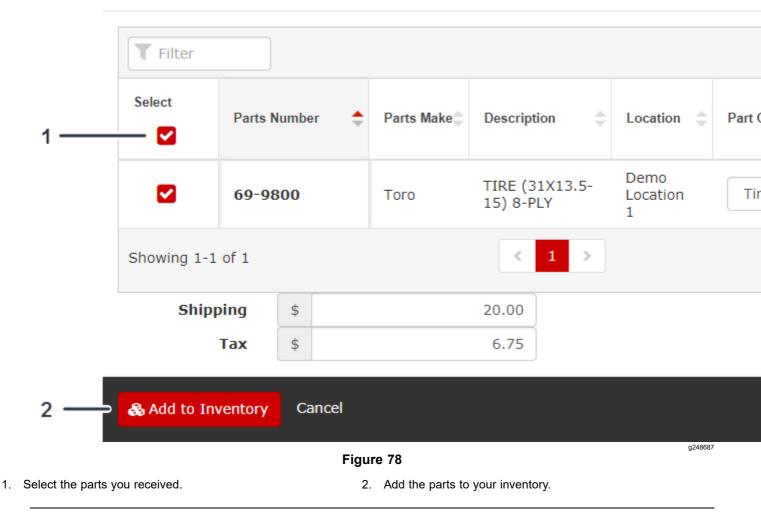

5. Click **Add to Inventory** to add the selected parts to your inventory (Figure 78).

Note: If this was done properly, you should receive a message indicating that you successfully received the parts into your inventory.

Adding a Parts Inventory to a Task

To quickly load large parts inventories to a **Task Record**, you can upload a **Part Inventory** using the **Add Part** feature.

1. From a Task Record, click Add Part, then click Part Inventory (Figure 79).

The Add Parts to Task screen will display with a subset of Parts Data, including the Part Number, Status, Make, Description, Cost per Unit of Measure, Quantity in Stock, and Unit of Measure (Figure 80).

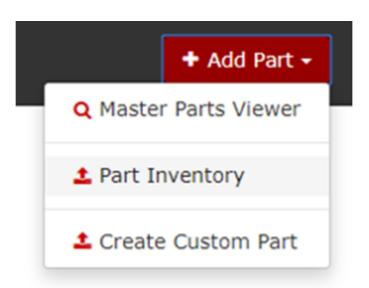


Figure 79

g357577

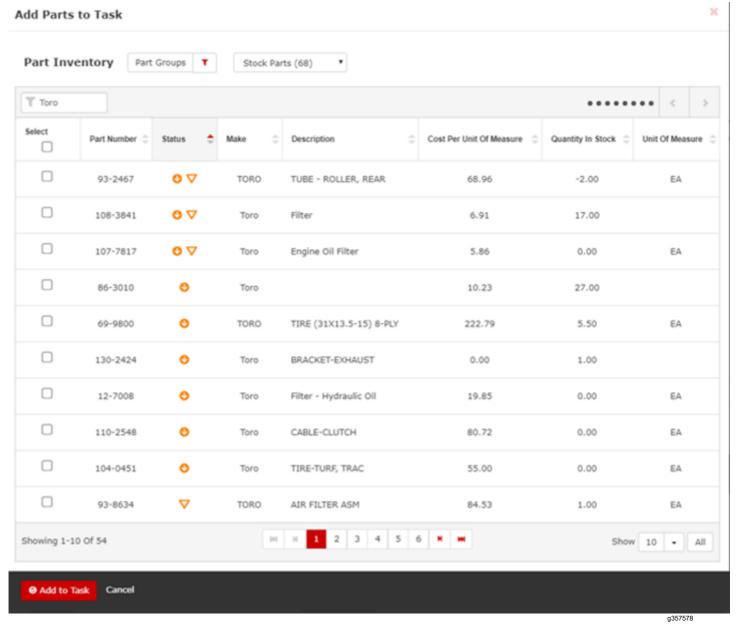


Figure 80

Once you find the part you want to add, select the part and click Add to Task (Figure 81).

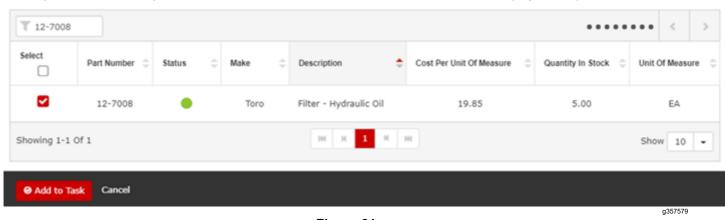


Figure 81

3. From the pop-up screen enter the Quantity and click Apply (Figure 82).

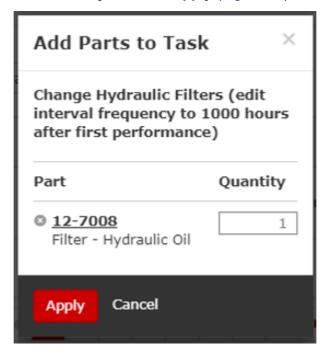


Figure 82

g357580

4. Click Save.

Receiving Multiple Orders

This feature allows you to select multiple carts and change their status to **Received** (but does not add the parts to **Inventory**) at the same time.

- 1. In Order Management, select Purchased (Figure 83).
- 2. Select the carts you want to Mark As Received (Figure 83).
- Click Mark As Received (Figure 83).

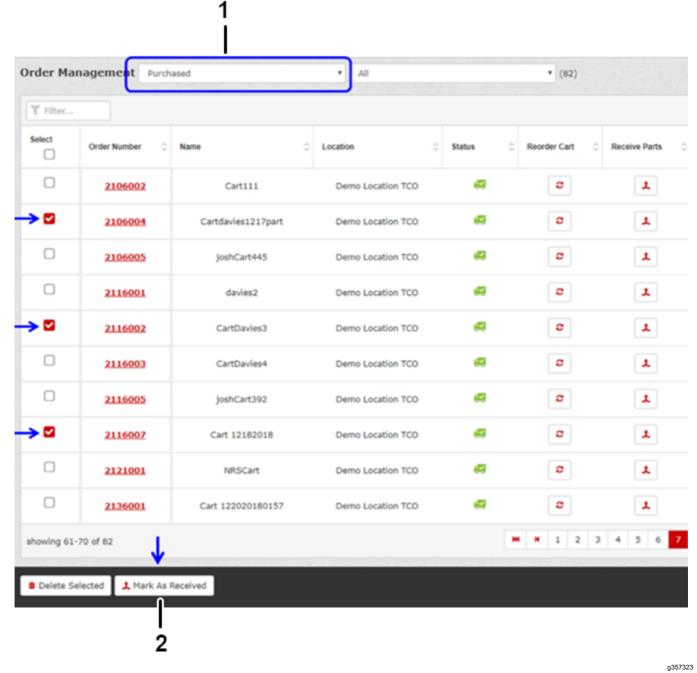


Figure 83

1. Select Purchased from the drop-down menu.

2. Click to mark the orders as received.

4. From the Receive Selected pop-up, click OK (Figure 84).

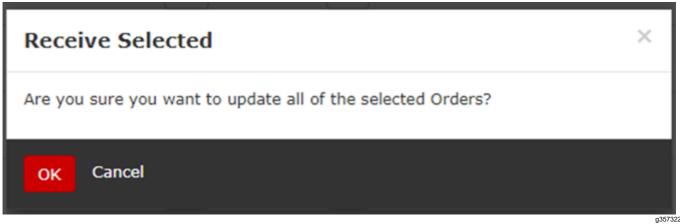


Figure 84

Assigning a Wireless Hour Meter

- 1. Click the Wireless tab (Figure 85).
- Under Wireless Hour Meters, select Unassigned from the drop-down (Figure 85). 2.
- Click the desired Wireless Hour Meter ID (Figure 85). 3.







Dashboard Asset List

Mainte

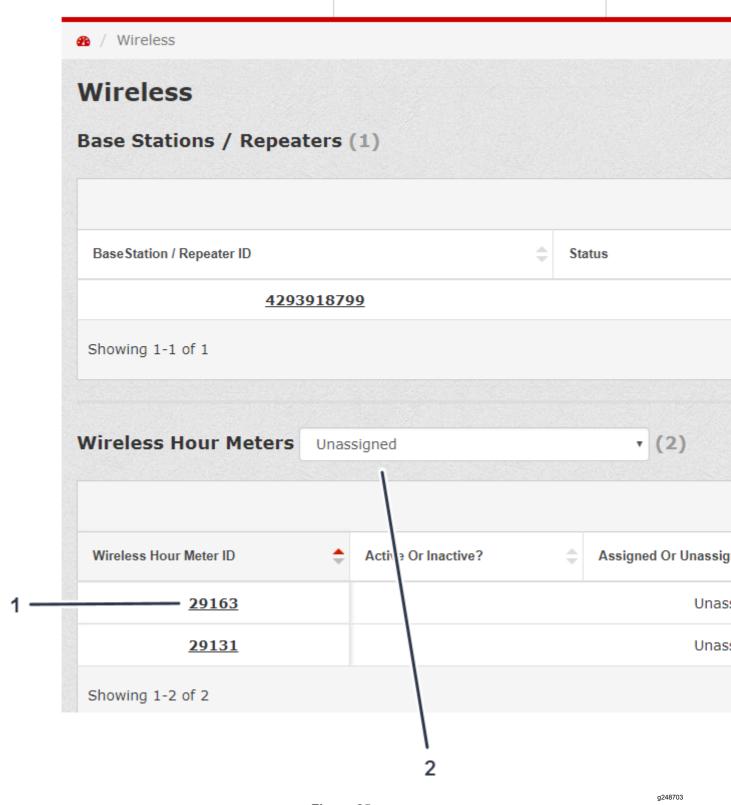


Figure 85

1. Select Unassigned from the drop-down.

2. Select the wireless hour meter ID.

4.	From the Wireless Hour Meter Record, select the Location, Asset Type, Group, and Asset ID that
	you would like to assign the wireless hour meter with (Figure 86).

5. Enter the **Meter Reading** shown on your wireless hour meter (Figure 86).

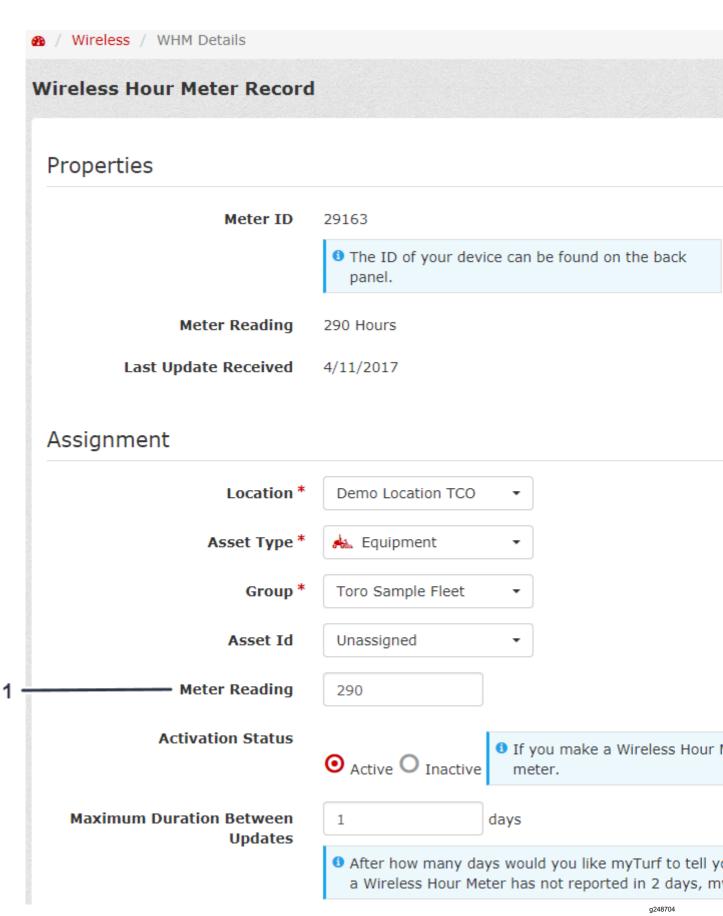



Figure 86

1. Enter the meter reading shown on your wireless hour meter.

- 6. Enter the desired **Maximum Duration Between Updates** (Figure 87).
- 7. Click Assign/Update Wireless Hour Meter (Figure 87).

Note: Prior to assigning or updating the wireless hour meter, park the machine within range of the wireless hour meter, and ensure that it is in the ON position.

- Click Send Test Signal to test the connection (Figure 87).
- 9. After successful connection, click **Save** on the right side of the screen (Figure 87).

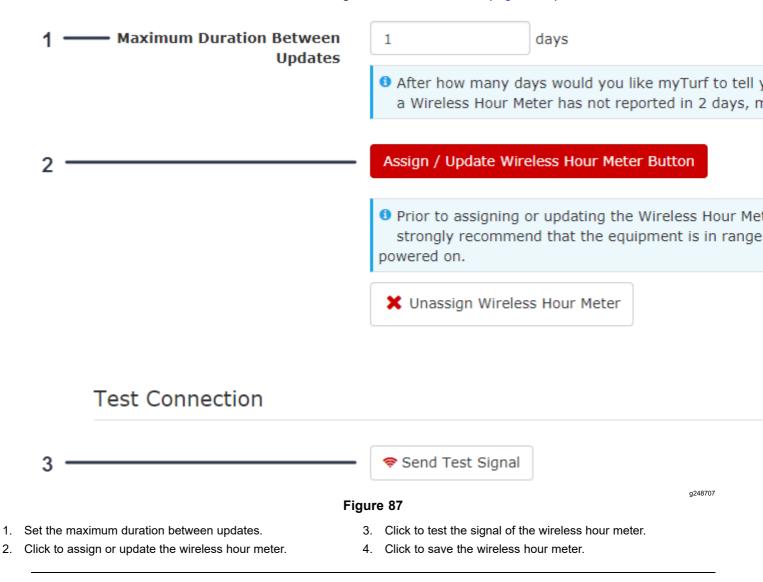

Adding a Base Station/Repeater

- 1. Click the Wireless tab.
- 2. Click Add Base Station/Repeater (Figure 88).

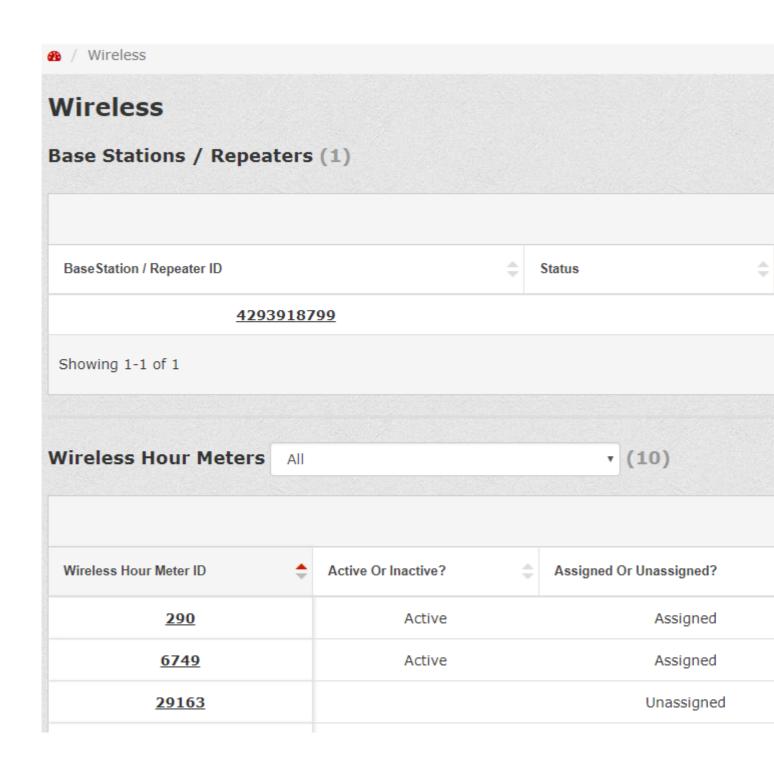


Figure 88

g249050

3. Select the **Type**, enter the base station or repeater **ID**, and assign the **Location** for base station or repeater (Figure 89).

4. Click Create (Figure 89).

Create New Base Station / Repeater

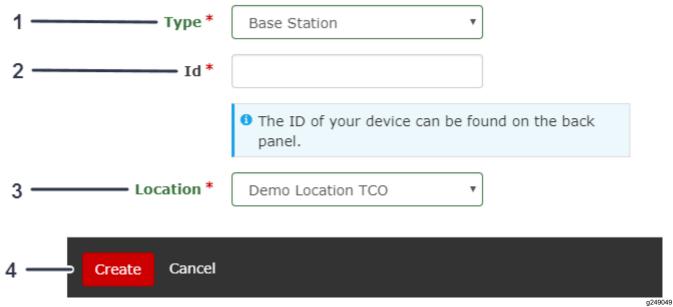


Figure 89

- 1. Select whether it is a base station or repeater.
- 2. Enter the ID.


3. Select the location for the wireless hour meter.

 \times

4. Click to create the new base station or repeater.


Adding a Wireless Hour Meter

- 1. Click the Wireless tab.
- 2. Click Add Wireless Hour Meter (Figure 88).
- 3. Enter the Wireless Hour Meter ID and assign the Location for the wireless hour meter (Figure 90).
- 4. Click Create (Figure 90).

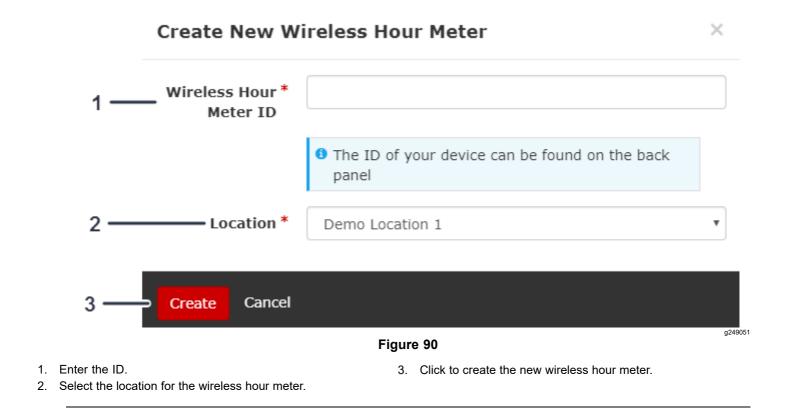

Filtering the Wireless Hour Meter IDs

From the **Wireless Hour Meters** screen, enter the wireless hour meter ID or asset ID to filter the results (Figure 91).

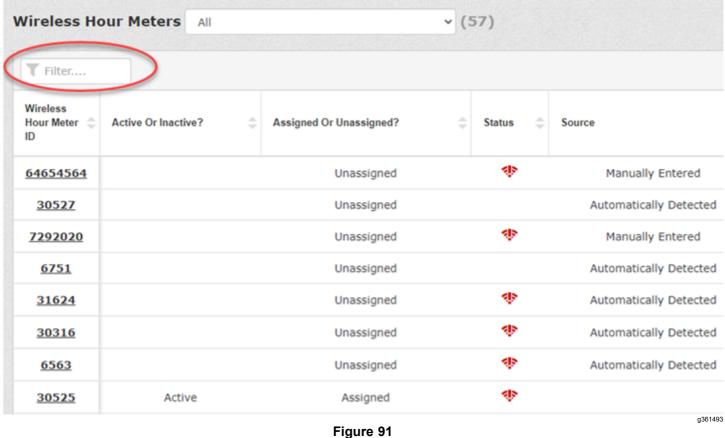

Managing Attachments

- Click the Asset List tab.
- Click the desired Asset ID and click Asset Overview (Figure 92).

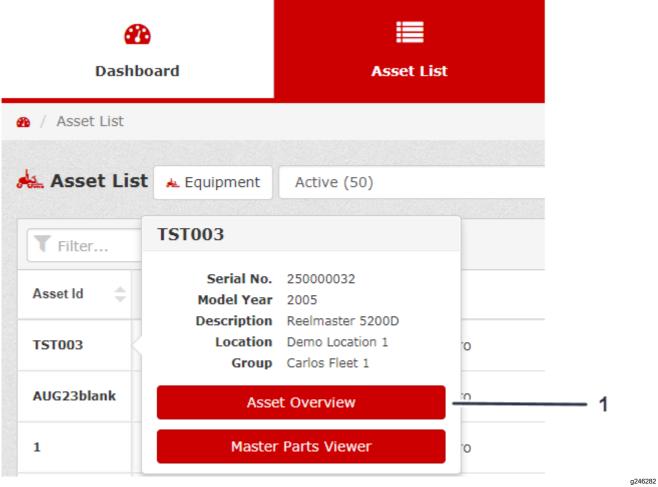


Figure 92

1. Click to view the asset overview.

3. Click Manage Attachments (Figure 93).


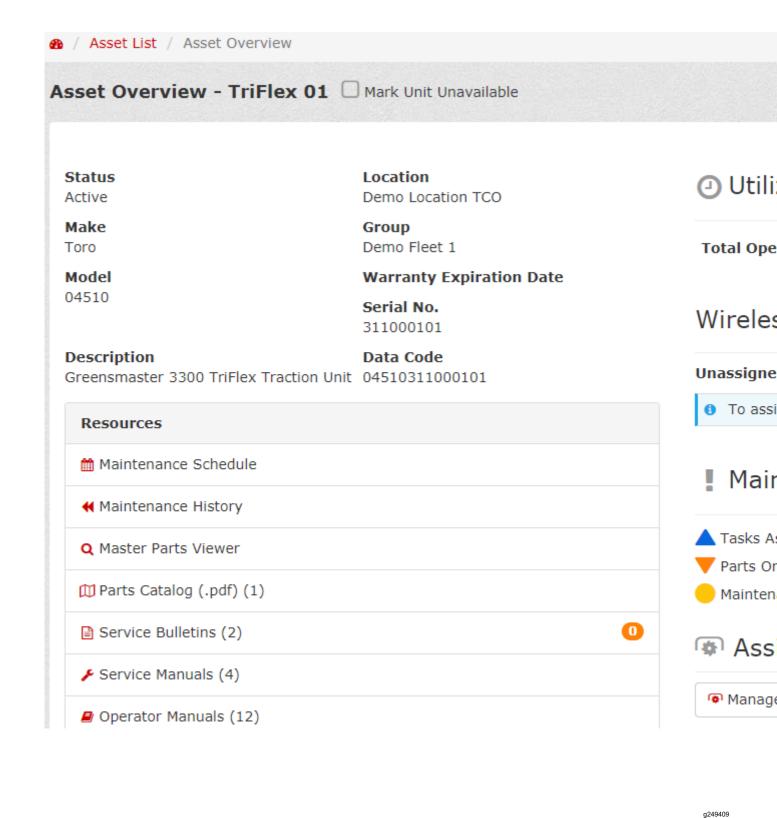


Figure 93

- 1. Click Manage Attachments.
- 4. Select the attachments that you want to assign to the asset (Figure 94).
- Click Save to assign the attachments (Figure 94).

Manage Attachments

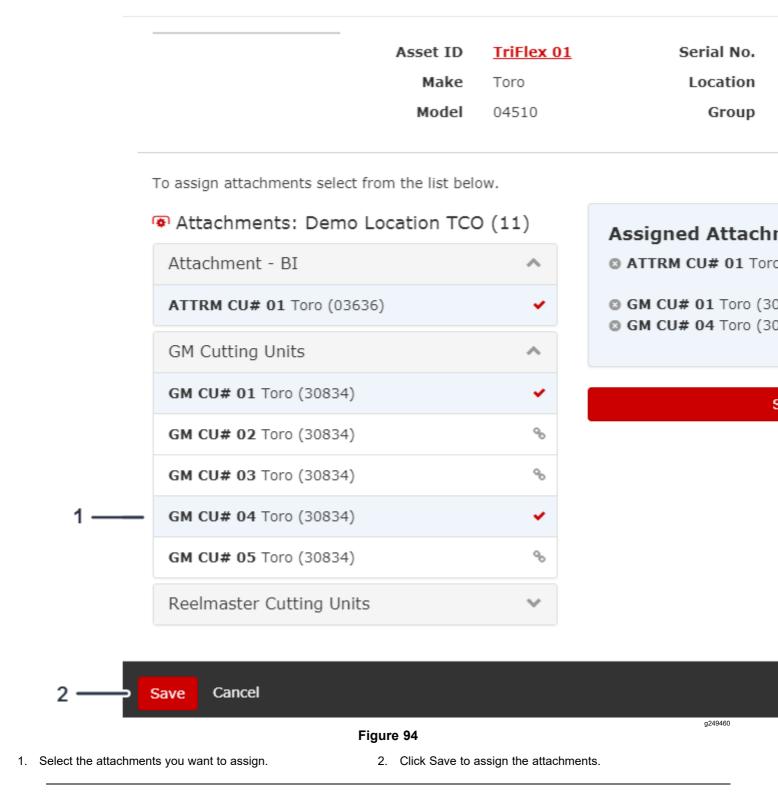

Managing the Preventive Maintenance Schedule

When you load an asset into myTurf, the **Preventive Maintenance Schedule** for that asset automatically populates.

Accessing the Maintenance Schedule

You can access the Maintenance Schedule in the following 2 ways:

From the Asset Overview of an asset, click Maintenance Schedule (Figure 95).

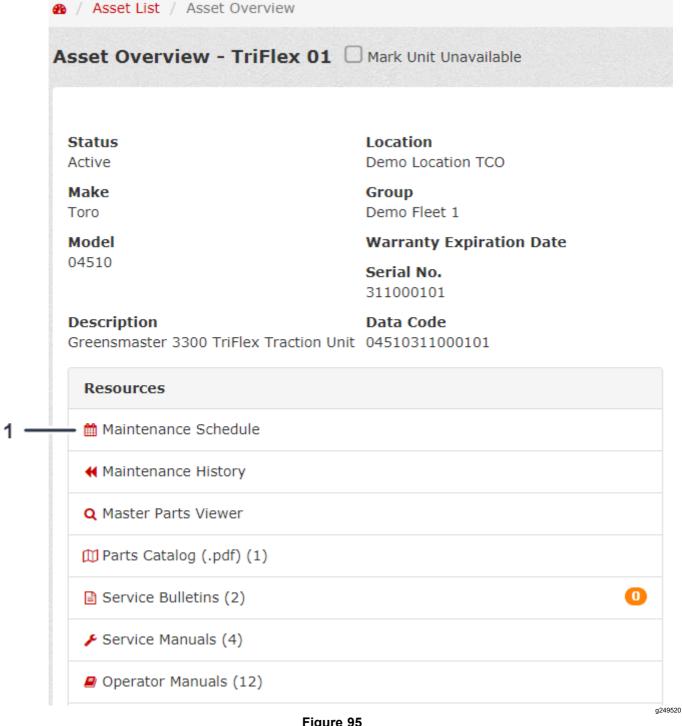


Figure 95

1. Click to access the Maintenance Schedule.

From the Asset List, click on the Status for the asset, and click Maintenance Schedule (Figure 96).

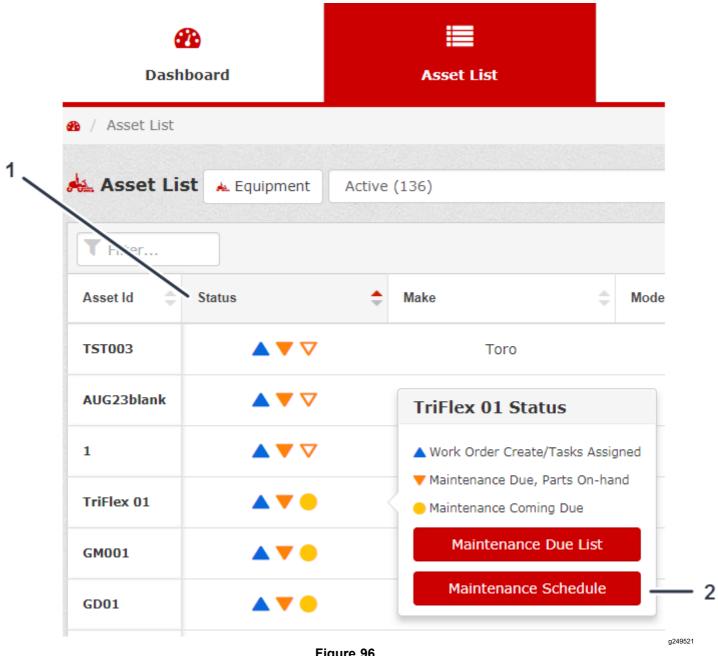


Figure 96

1. Click on the status for the asset.

2. Click to access the Maintenance Schedule.

Downloading a Maintenance Schedule

Click the **Download (.xlsx)** button to download your **Preventive Maintenance Schedule**.

Adding a Maintenance Task

If there are maintenance tasks not listed in the Preventive Maintenance Schedule, you can manually add them.

When adding a maintenance task, you can choose one of the following task types:

- Scheduled Maintenance
- As Needed Inspection
- Daily Checks
- Break-In Maintenance

Copying a Maintenance Task

You can copy a maintenance task to your asset from another asset in your fleet by clicking **Copy Schedule** from the **Preventive Maintenance Schedule** screen (Figure 97).

Resetting the Preventive Maintenance Schedule

You can reset the **Preventive Maintenance Schedule** to the Toro default schedule by clicking **Reset to Default** from the **Preventive Maintenance Schedule** screen (Figure 97).

Editing a Maintenance Task

1. From the Preventive Maintenance Schedule screen, click the Task Record icon (Figure 97).

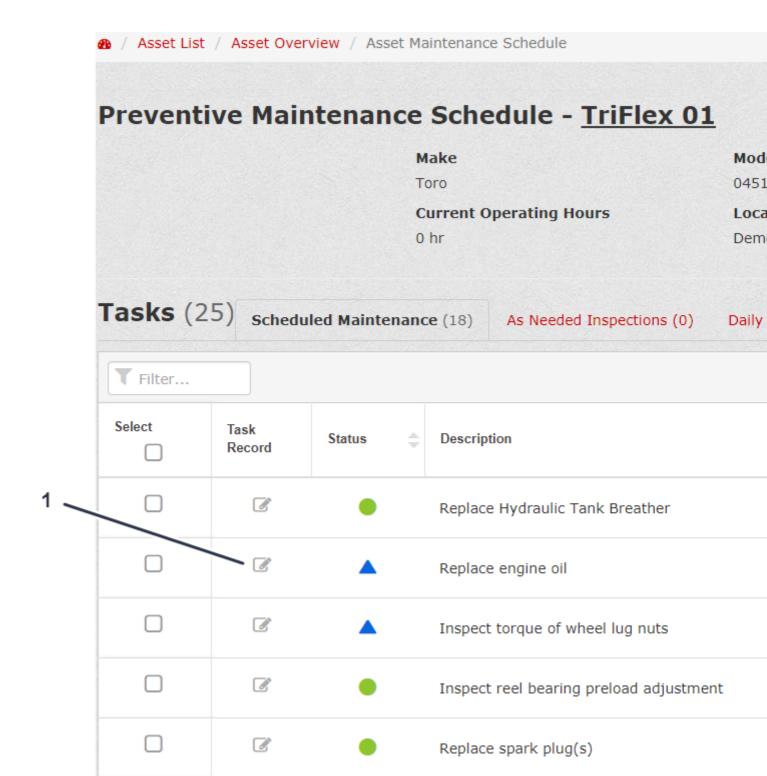


Figure 97

1. Click the Task Record icon.

^{2.} From the **Task Record** screen, you can turn the **Task** to the ON or OFF position, edit the **Task Type**, **Sub Type**, **Description**, **Parts Needed** for the task (you can add or delete parts here), **Interval Type**, **Interval**, when the task is **Next Due**, and you can attach a file for the task (Figure 98).

^{3.} After you edit the task, click Save (Figure 98).

Multi-Selecting a Make Due Now Maintenance Schedule

This functionality in the **Preventive Maintenance Schedule** allows you to select multiple **Tasks** and make them all due now at the same time.

If you are starting from the **Asset—Maintenance Due**, do the following:

1. Click View Maintenance Schedule (Figure 99).



Figure 99

g356856

 From the new Maintenance Schedule tab, select the tasks that you want to Make Due Now, and click Make Due Now (Figure 100).

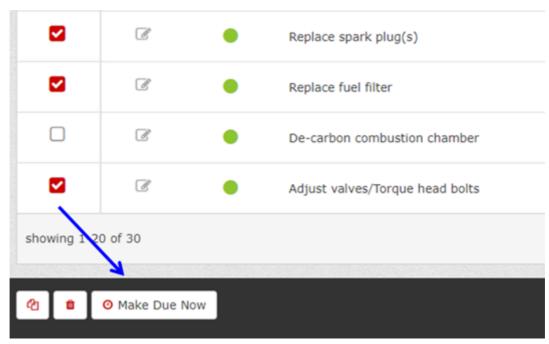


Figure 100

g356853

3. Click Continue (Figure 101).

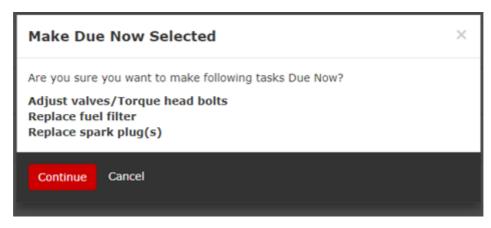


Figure 101

a356855

g356854

Note: You will automatically return to the **Asset—Maintenance Due** screen with the **Due Now** tasks visible (Figure 102).

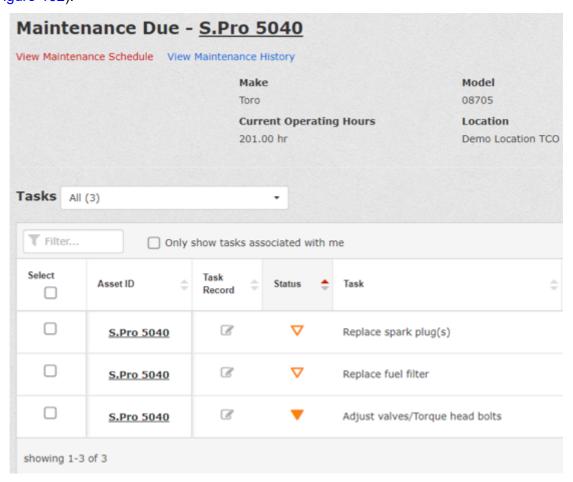


Figure 102

Changing the Selected Asset in Maintenance Due

The **Change Asset** drop-down menu allows you to switch the **Maintenance Due** list of a different **Asset** without returning to the **Asset List**.

From the **Maintenance Due** menu, click the Change **Asset** drop-down menu (Figure 103) and select the **Asset** ID of the **Asset** that you want to change to in **Maintenance Due** (Figure 104).



Figure 103

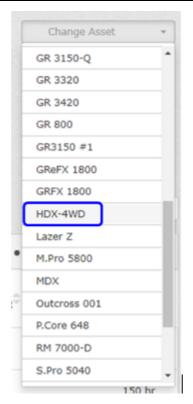


Figure 104

g357496

Updating the Parts Prices for a Maintenance Task

While in the work order for a specific maintenance task, click **Update Prices** to update the prices for the parts used in the maintenance task (Figure 105).

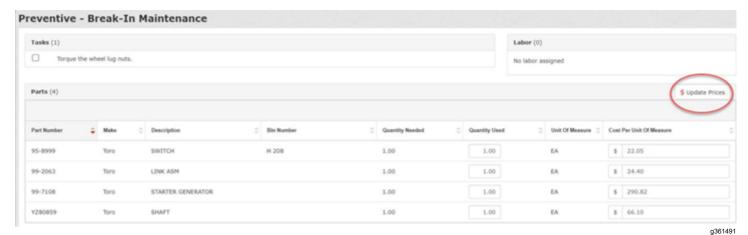


Figure 105

Managing Work Orders

Adding Maintenance Labor

1. From the **Dashboard**, click **Admin**, located in the upper, right corner of the screen (Figure 106).

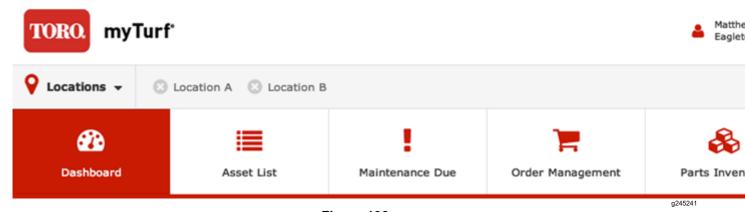


Figure 106

- 1. Click Admin.
- 2. Click the **Edit Location** Icon (Figure 107).

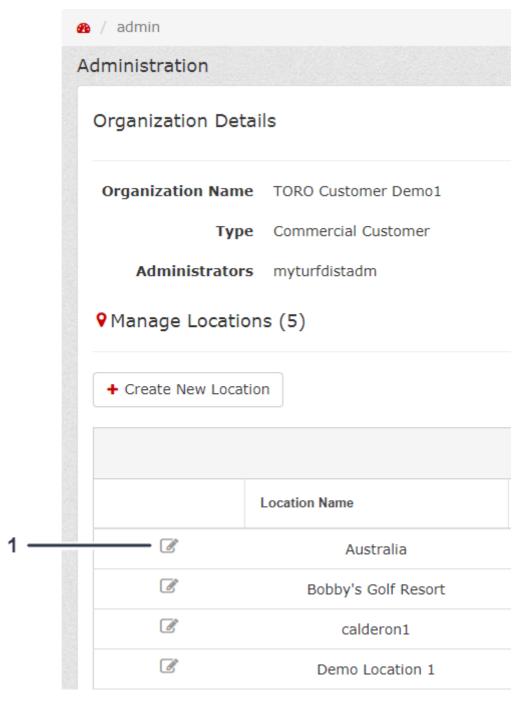


Figure 107

.

g246195

- 1. Click to edit the location.
- 3. From the Location Record, click Add New Labor (Figure 108).
- 4. Enter the individual's name and their wage per hour (Figure 108).

Labor Wage and Fuel

Maintenance Labor (4)

Due to Privacy concerns, you may need to attain permission from personnel to assign a persona

Delete	Last Name		First
8		User	
8		Johnson	
8		Anderson	
		User	
		Smith	
		Washington	
			g249602

Figure 108

1. Click to add new labor.

5. Click **Save** on the right side of the screen.

Creating a Work Order

- 1. Click the **Maintenance Due** tab (Figure 109).
- 2. Select the **Task** in the list that you need to create a work order for, and click **Create Work Order** (Figure 109).





Maintenan


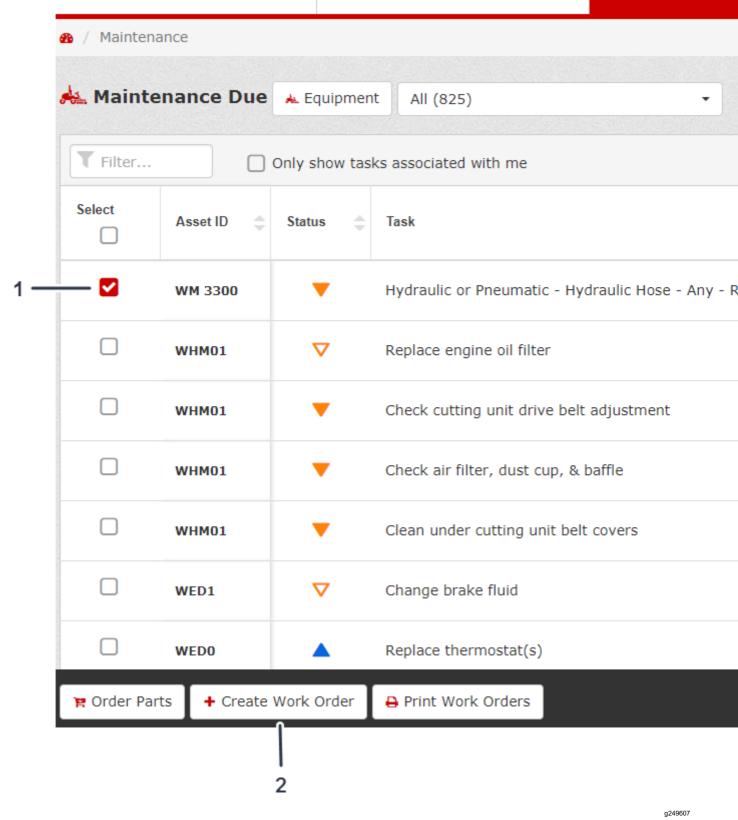


Figure 109

Select the task.
 Click to create the new work order.

3. Complete the **Create New Work Order** form by selecting the individual that you want to assign the work order to and click **Save to Work Order** (Figure 110).

Create New Work Order

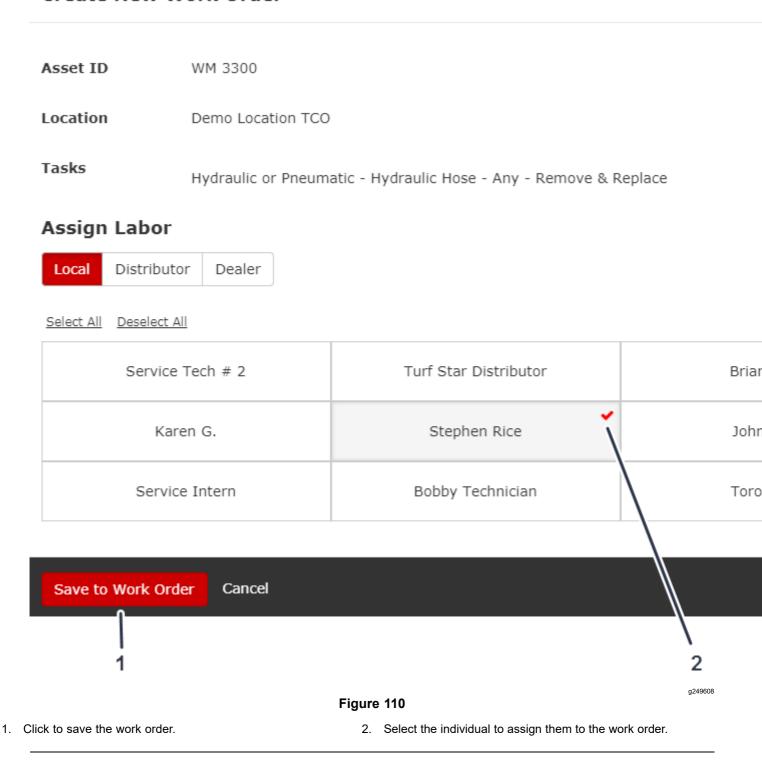


Completing a Work Order


Completing a Work Order by Work Order List

1. After creating the work order, select Work Order List (Figure 111).


2. Click a work order number (Figure 111).

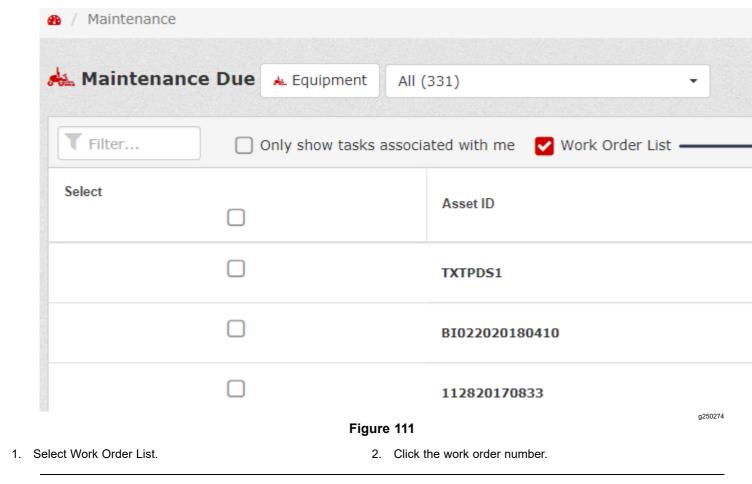

- 3. Check the tasks completed in the work order, enter the time the individual spent on the task, enter any associated miscellaneous costs, and record any equipment downtime that occurred during the task (Figure 112).
- 4. Click Complete/Incomplete (Figure 112).

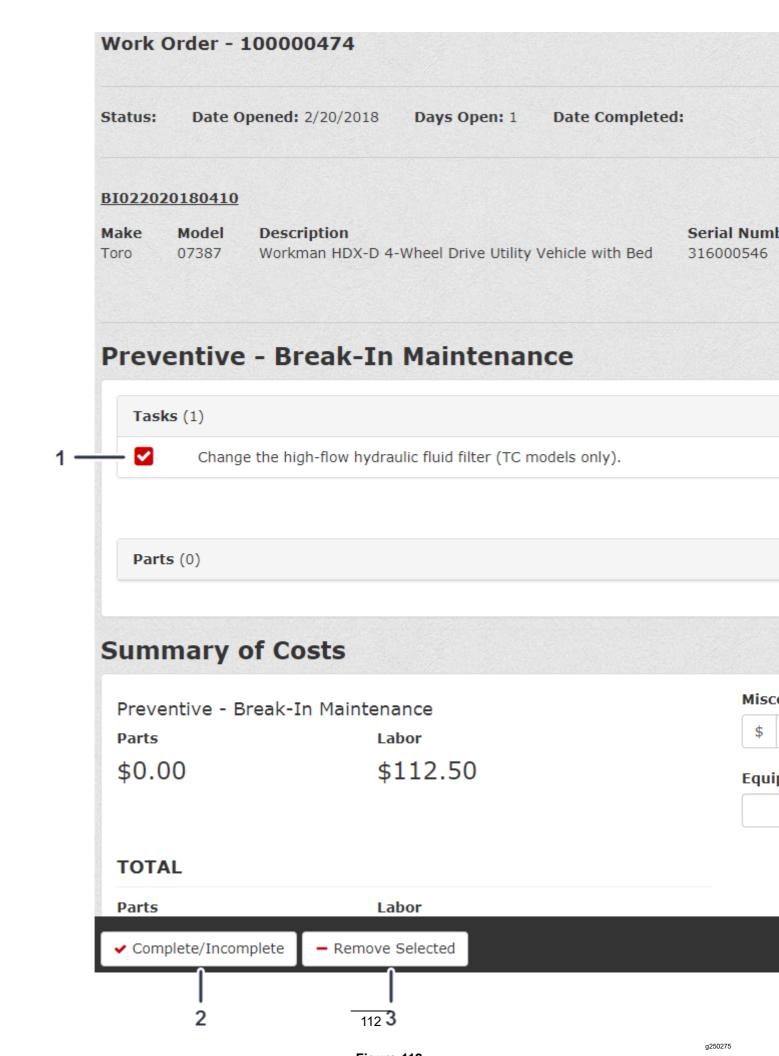


5. Enter the updated Utilization and click Complete/Incomplete (Figure 113).

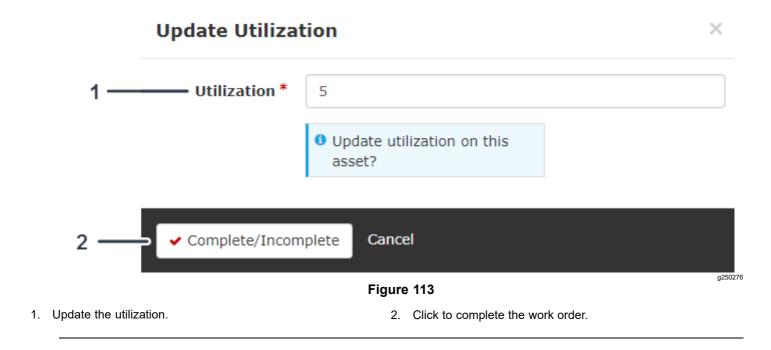

Completing a Work Order by Task List

1. After creating the work order, click the Work Order number on the right side of the screen (Figure 114).



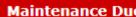


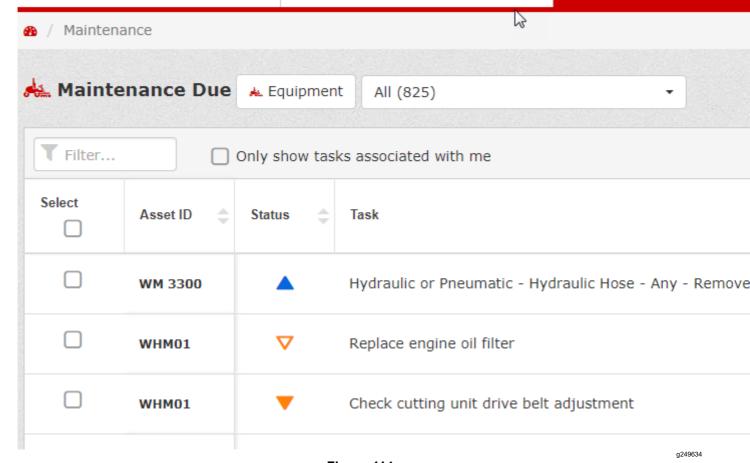



Figure 114

- 1. Click the work order number.
- 2. Check the tasks completed in the work order, enter the time the individual spent on the task, enter any associated miscellaneous costs, and record any equipment downtime that occurred during the task (Figure 115).
- 3. Click **Complete/Incomplete** to complete the work order (Figure 115).

Note: You will receive a message indicating that you updated the work order and when you return to the screen, the completed tasks will have green check marks next to them.

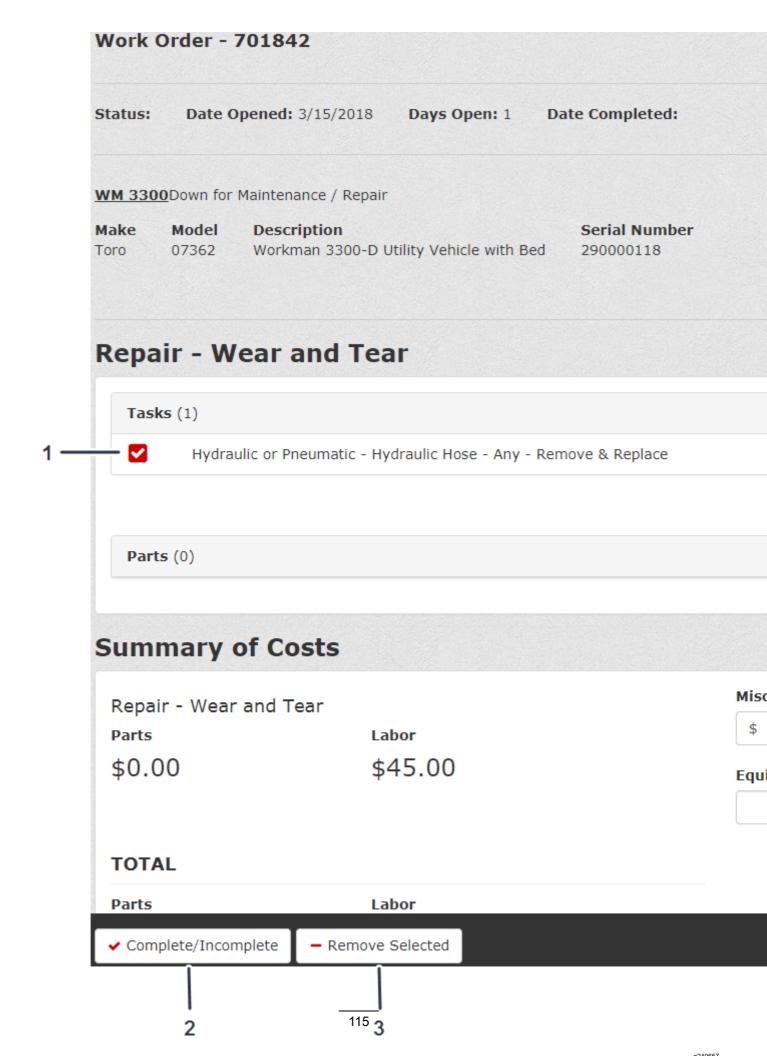

4. Enter the updated **Utilization** and click **Complete/Incomplete** (Figure 116).

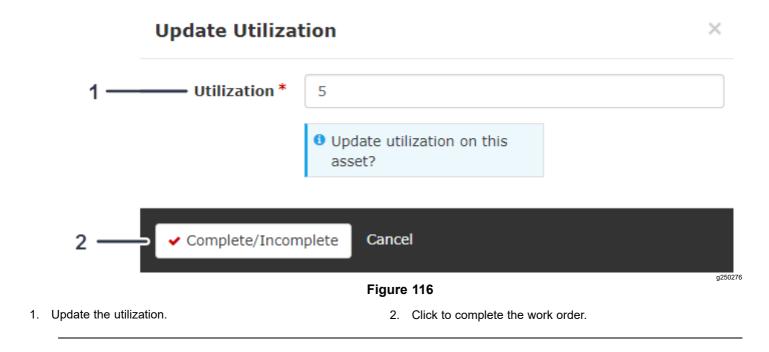


Closing a Work Order

After completing the work order, click Close Work Order (Figure 115).

Managing the Maintenance Schedule for an Asset

Accessing the Maintenance Schedule

 From the Asset List, click the Asset ID of the asset you want to manage, and click Asset Overview (Figure 117).

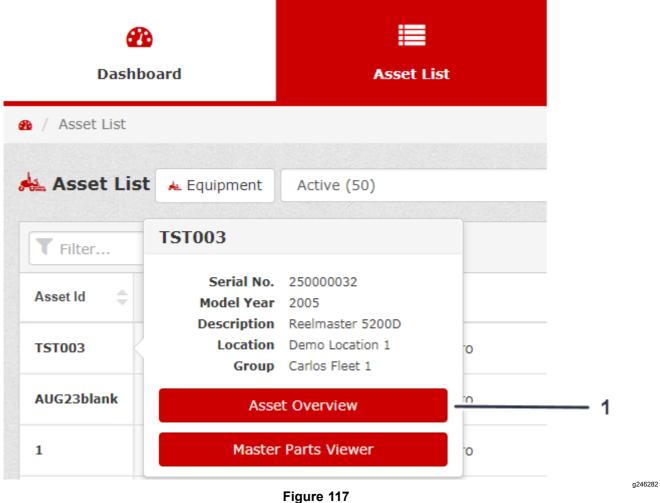

riguie

1. Click to view the asset overview.

2. From the Asset Overview, click Maintenance Schedule (Figure 118).

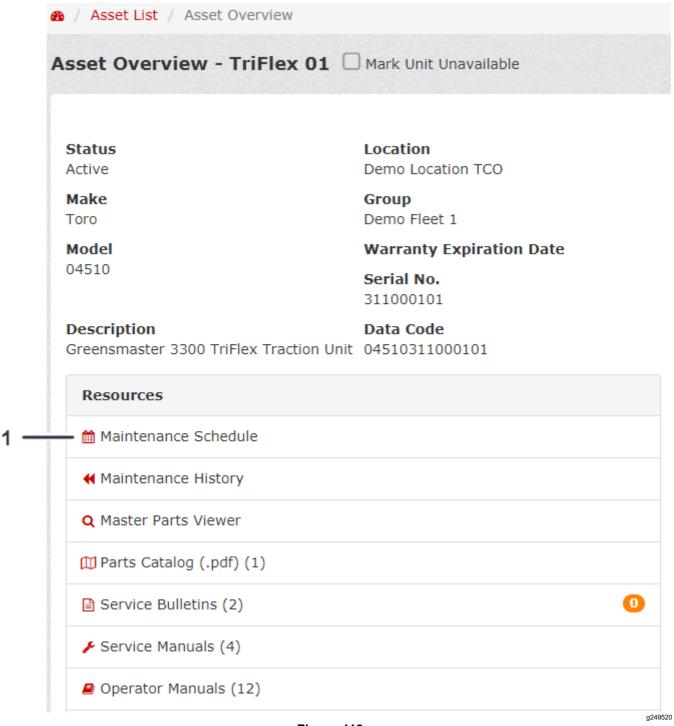


Figure 118

1. Click to access the Maintenance Schedule.

Adding a Task to the Maintenance Schedule

1. From the Maintenance Schedule, click Add a Task (Figure 119).



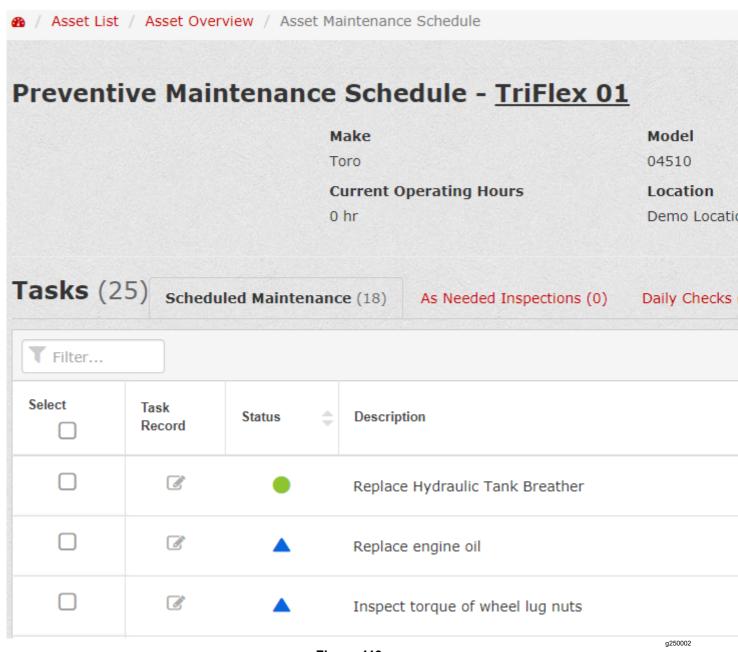


Figure 119

1. Click to add a new task.

- 2. Fill out the Create New Task form (Figure 120).
- 3. Click **Save** to add the task to your maintenance schedule (Figure 120).

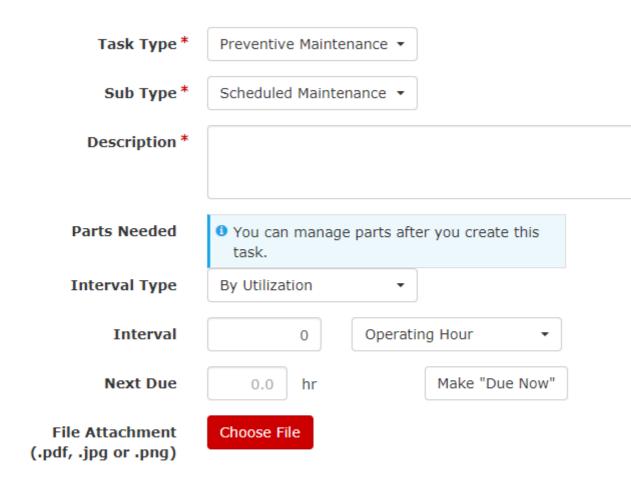

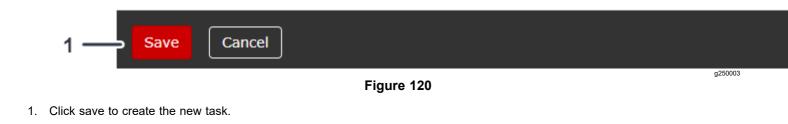

Copying a Maintenance Schedule to Other Equipment Assets

Note: Performing this task deletes any maintenance schedule and replaces it with a copy of the current maintenance schedule that you copy.

1. From the Maintenance Schedule, click Copy Schedule (Figure 121).


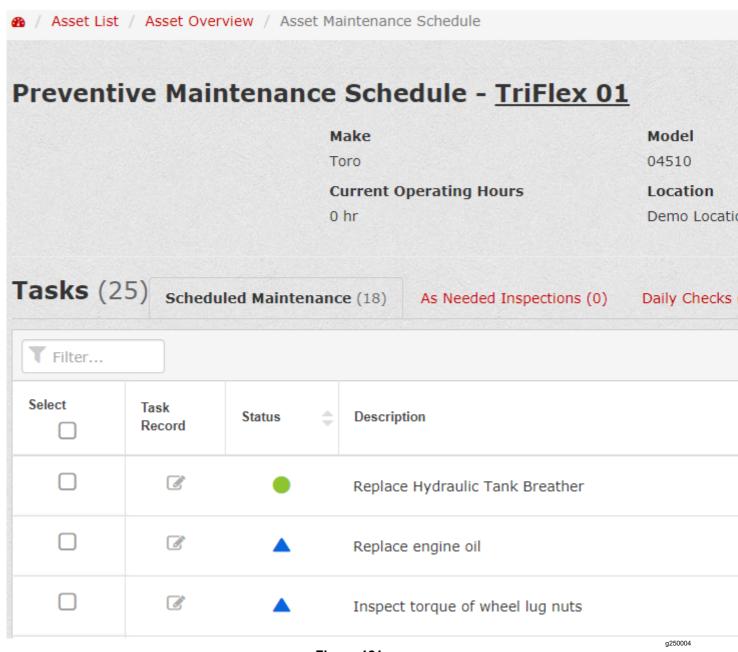


Figure 121

1. Click to copy a schedule.

- 2. Select the asset **Location** and **Group** from which you want to copy the schedule (Figure 122).
- 3. Select the machine from which you want to copy the schedule (Figure 122).
- After selecting the machine, click Replace Selected (Figure 122).

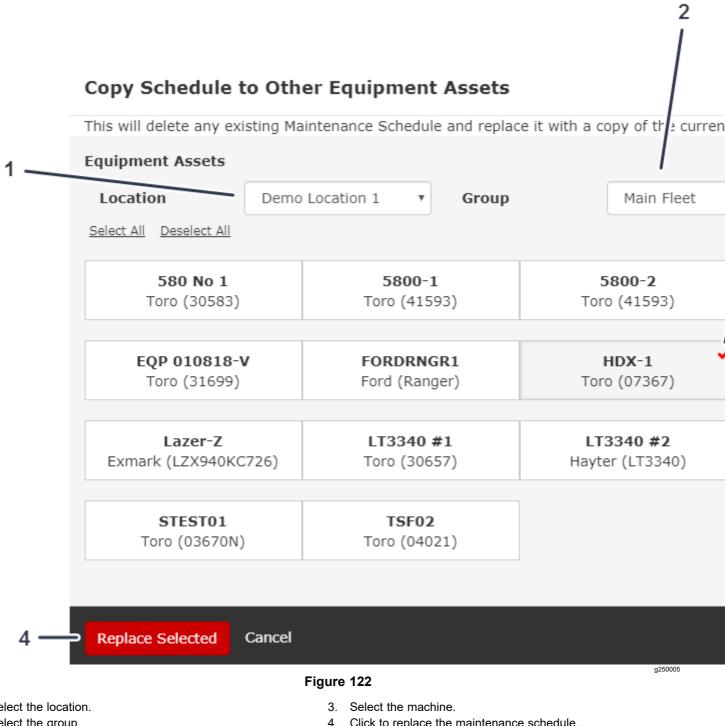

- 1. Select the location.
- 2. Select the group.

4. Click to replace the maintenance schedule.


Retiring or Scrapping an Asset

An asset can have 1 of the following 3 statuses:


Active—describes an asset that is currently being managed, operated, and is part of your maintenance program. You will receive maintenance alerts pertaining to an active asset.

- Retired—describes an asset that is no longer active. You can still use the data of a retired asset in reports.
 Retired assets may still physically exist at your location, but is not in current use. You will not receive any
 maintenance alerts pertaining to a retired asset.
- Scrapped/Sold/Lease Returned—describes an asset that is no longer in your possession. After a designated date, this asset will be deleted from your inventory and will no longer be available in reports.

From the any group of assets, you can select 1 of the 3 statuses. Within the **Asset List**, you can select from a drop-down list which asset state you want to view (Figure 123).

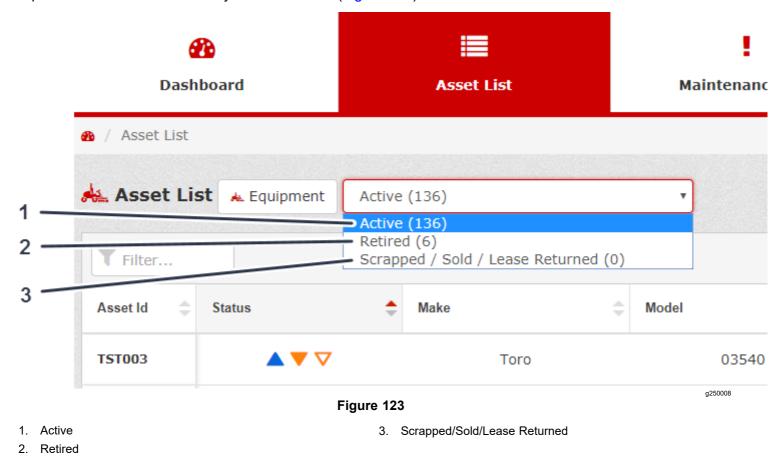


To retire an asset, select the desired asset in the **Asset Record**, then select **Retired** from the **Status** drop-down list (Figure 124). Save the edits to the **Asset Record**.

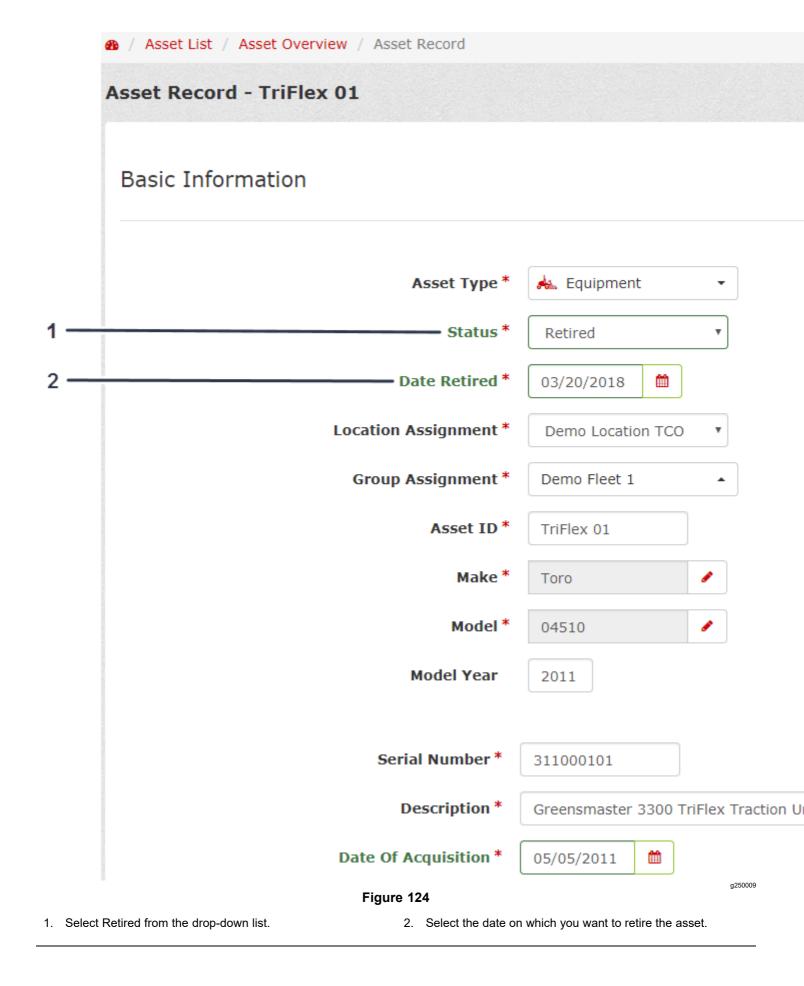

To delete an asset, select the desired asset in the **Asset Record**, then select **Scrapped/Sold/Lease Returned** from the **Status** drop-down list (Figure 125). Save the edits to the **Asset Record**.

Note: It is recommended that you set the **Asset End Date** as January 1 of the following year, but you can set it for the day, if desired.

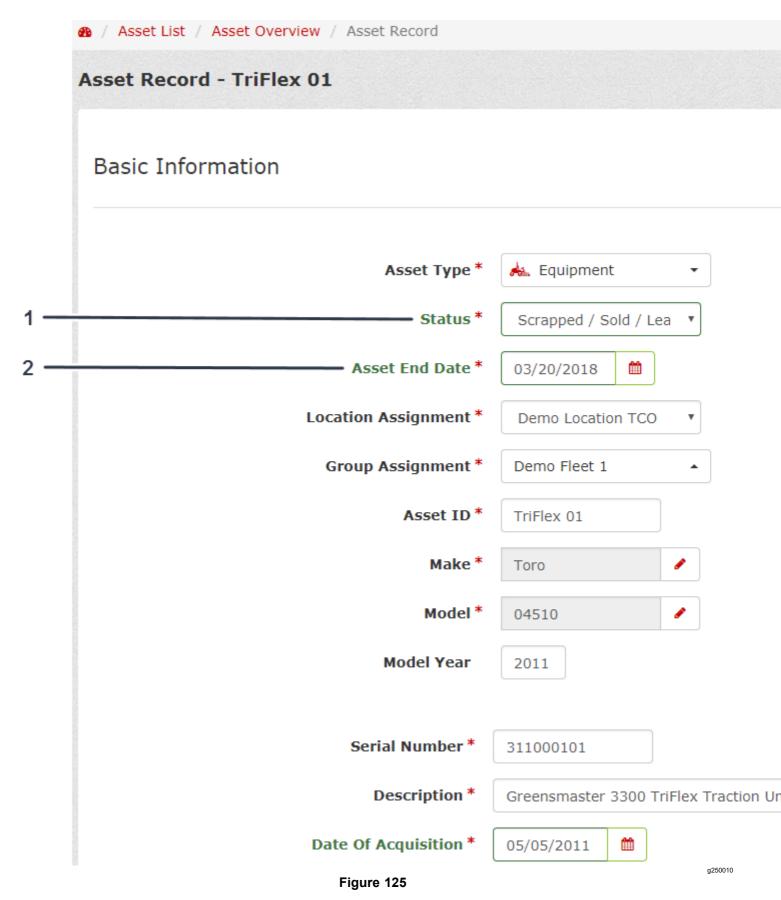

- Select Scrapped/Sold/Lease Returned from the drop-down list
- 2. Select the date on which you want to remove the asset.

Tracking Fuel Usage and Cost


You can track fuel usage/cost for your equipment. This data is included in both the **Utilization Report** and the **Total Cost of Ownership** report.

There are 2 primary ways to track your fuel usage for equipment:

- Entry of Fuel Fill (fill-up) amounts or update of Fuel Used Year-to-Date (YTD)
- Use of an estimated amount/operating hour

Setting up the Location for Fuel Tracking

To set up fuel tracking, fill out the **Fuel Cost** table in your **Location Record** (Location Administration). In the table, you can update the **Unit of Measure** for each fuel type and the **Fuel Cost per Unit of Measure** (Figure 126).

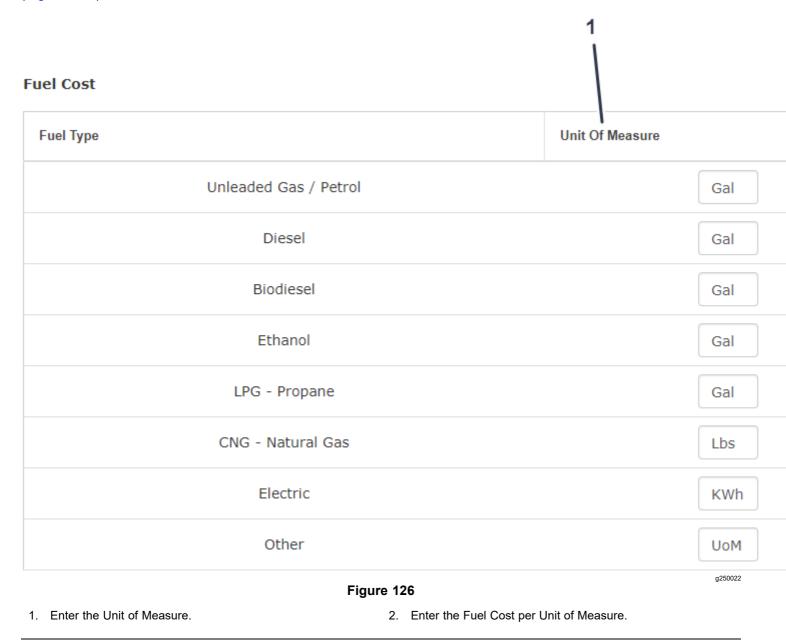


Setting up Fuel Tracking for an Asset

1. From the Asset Overview, navigate to the Asset Record for which you would like to set up fuel tracking.

2. From the **Asset Record**, navigate to the **Fuel Tracking** section (Figure 127).

Fuel Usage

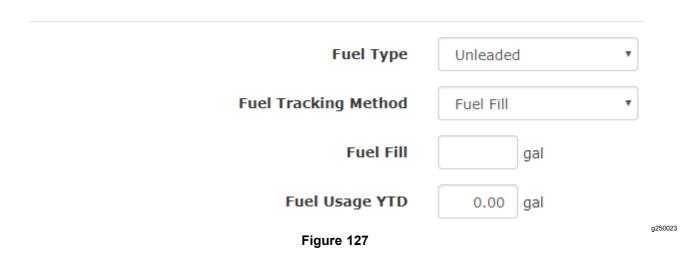


- 3. Select the method that you want to use for fuel tracking.
 - Average Fuel Usage:

Enter the Fuel Per Utilization and Fuel Usage Year-to-Date (YTD) as shown in Figure 128.

Note: The system automatically increments the Fuel Usage Year-to-Date (YTD) as the asset accrues operating hours or miles/km. This provides an estimated fuel usage.

Fuel Usage

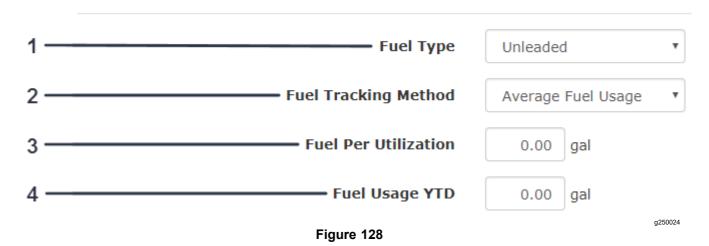


- 1. Select the Fuel Type.
- 2. Select Average Fuel Usage for the Fuel Tracking Method.
- 3. Enter the Fuel Per Utilization.
- 4. Enter the Fuel Usage Year-to-Date (YTD).

Fuel Fill:

Enter the Fuel Fill and Fuel Usage Year-to-Date (YTD) as shown in Figure 129.

Note: The fill amount increments the Fuel Usage Year-to-Date (YTD) by that amount.

Fuel Usage

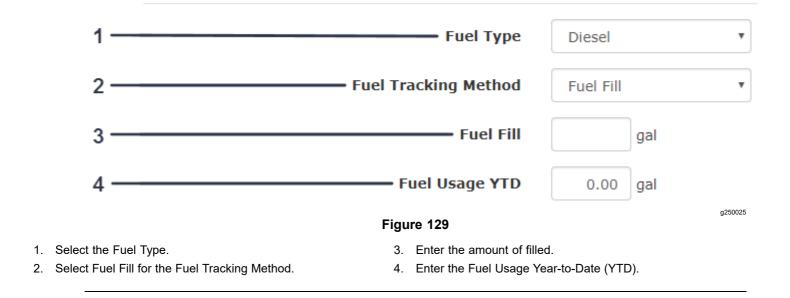

Generating Reports

Note: If your selected report has no data, a spreadsheet does not generate.

- 1. Click the **Reports** tab (Figure 130).
- Select which Report Type you want to generate, the Location, Asset Type, Group, Asset ID, and Date Range (Figure 130).

Note: If you select **Asset Utilization**, **Location Maintenance Cost**, or **Maintenance Due and Parts Needed** as the **Report Type**, you can select 1, multiple, or all **Groups** or **Asset IDs** (Figure 131 and Figure 132).


Note: You can select from 5 types of reports; refer to Reports (page 54).







Maintenance Du

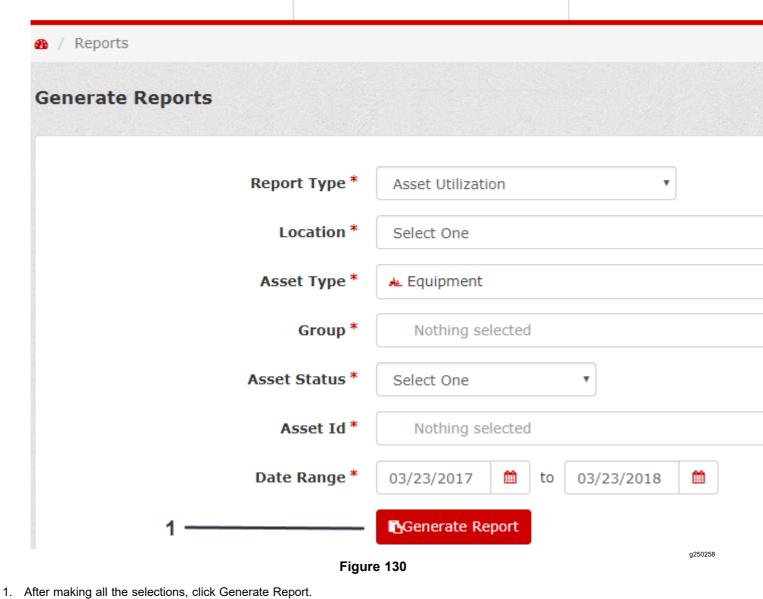

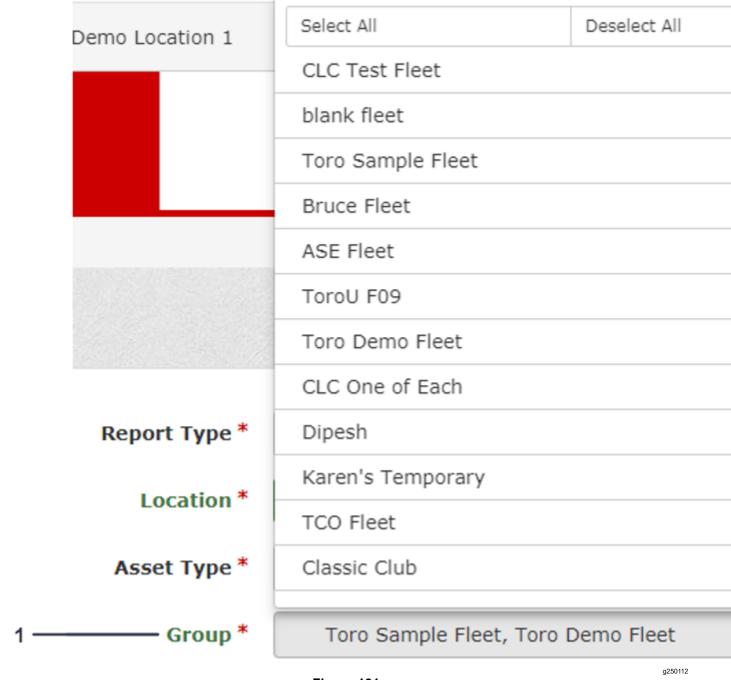


Figure 131

1. Click Group to get the list of all available groups. 2.

2. Multiple groups selected

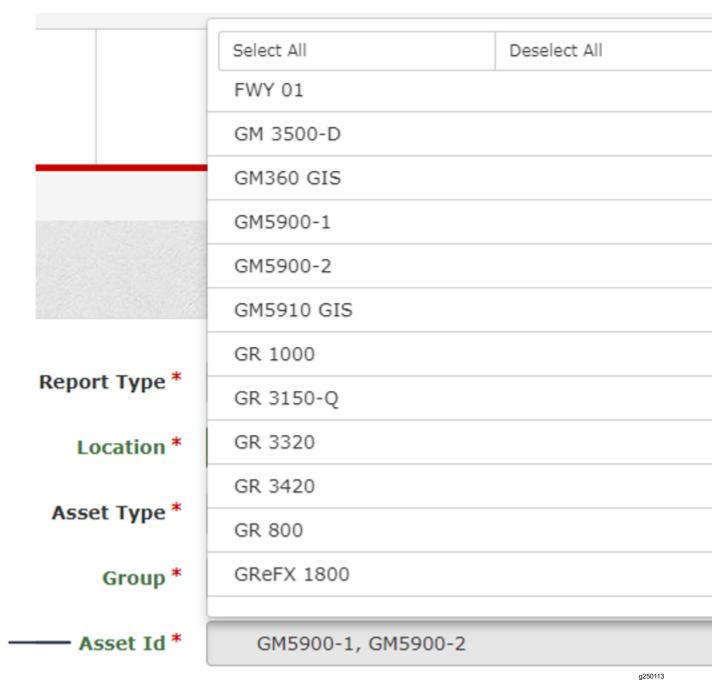


Figure 132

1. Click Asset ID to get the list of all available assets.

2. Multiple Asset IDs selected


Click Generate Report (Figure 130).

Note: After you click Generate Report, the report generates as a spreadsheet.

Generating an Asset Utilization Report

- Select Asset Utilization as the Report Type (Figure 133).
- 2. Select the Location, Asset Type, Group, Asset Status, Asset ID, and Date Range (Figure 133).
- Click Generate Report (Figure 133).


After you generate an **Asset Utilization** report, a spreadsheet generates with the Asset Code (Asset ID), Make, Model, Serial Number, Group, Utilization within Date Range, Fuel Usage within Date Range, Operating Labor Cost, Fuel Total Cost, Total Labor Cost, and Total Cost (Labor + Fuel).

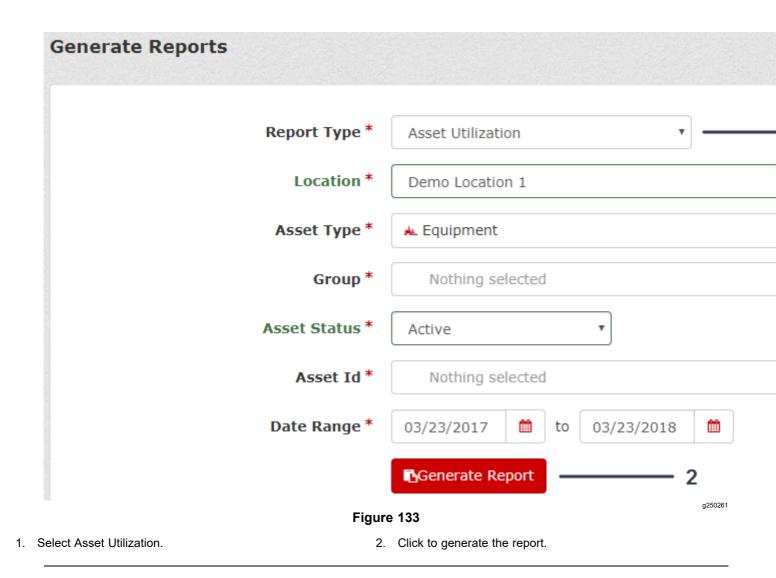

Generating a Location Maintenance Cost Report

- 1. Select Location Maintenance Cost as the Report Type (Figure 134).
- 2. Select the Location, Asset Type, Group, Asset Status, Asset ID, Task Type, and Date Range (Figure 134).
- 3. Click Generate Report (Figure 134).


After you generate a **Location Maintenance Cost** report, a spreadsheet generates with the Asset Code (Asset ID), Preventive Maintenance Parts Cost, Preventive Labor Cost, Repair Part Cost, Repair Labor Cost, General Parts Cost, General Labor Cost, Miscellaneous Cost, Downtime Days, and Report Totals.

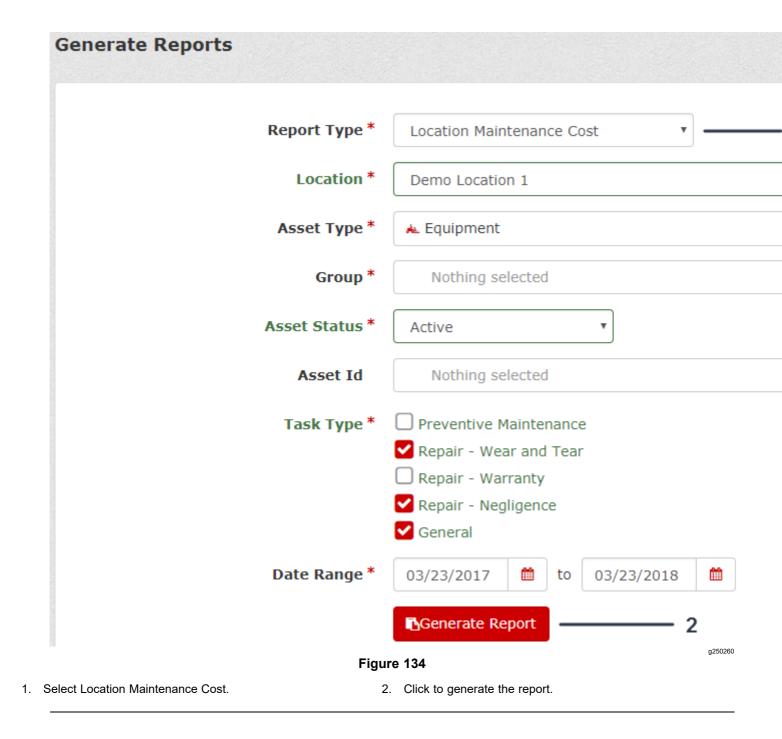

Generating a Maintenance Due and Parts Needed Report

- 1. Select Maintenance Due and Parts Needed as the Report Type (Figure 135).
- 2. Select the Location, Asset Type, Group, Asset Status, Asset ID, Interval Type (Utilization or Date), and Due Within (Operating Hour, Mile, or Kilometer) as shown in Figure 135.
- 3. Click Generate Report (Figure 135).

After you generate a **Location Maintenance Cost** report, a spreadsheet generates with the Asset Code (Asset ID), Make, Model, Serial Number, Current Utilization (total), Task, Task Type, Next Due (utilization or date), Parts Needed, and Quantity Available.

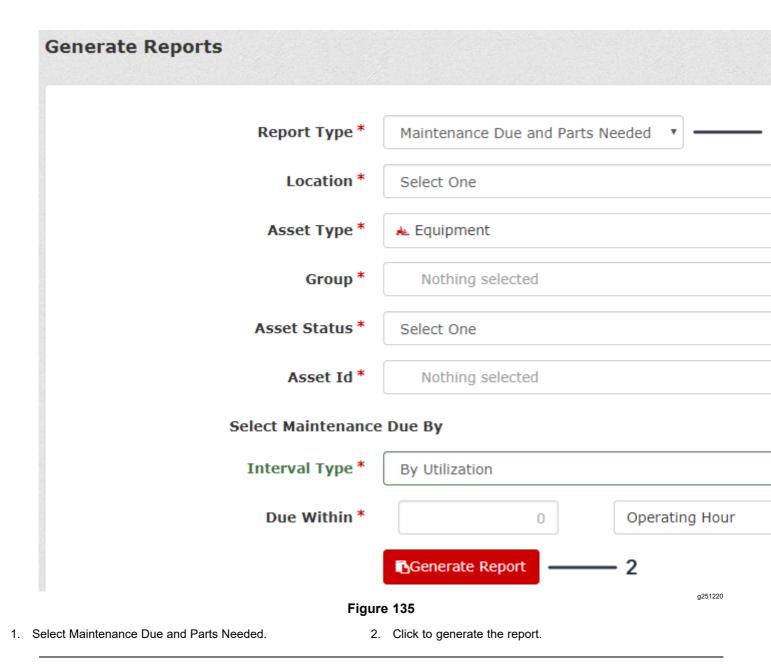


Generating a Parts Orders Placed Report

For Purchased Carts

- 1. Select Parts Orders Placed as the Report Type (Figure 136).
- 2. Select the Location, Date Range, and View By Purchased Carts (Figure 136).
- Click Generate Report (Figure 136).


After you generate a **Parts Orders Placed** report, a spreadsheet generates with the Cart Name, Order Number, Date Placed, Created By (user), Number of Parts (total number of items in the cart), Part Total Cost, Shipping Cost, Tax Cost, and Summary (report totals).

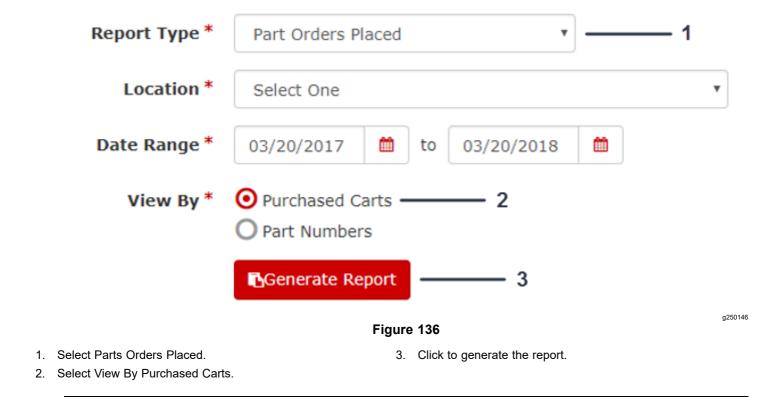

For Part Numbers

- 1. Select Parts Orders Placed as the Report Type (Figure 137).
- 2. Select the Location, Date Range, and View By Part Numbers (Figure 137).
- 3. Click Generate Report (Figure 137).


After you generate a **Parts Orders Placed** report, a spreadsheet generates with the Make, Part Number, Description, Quantity Ordered, Unit Price Cost, Extended Total (part quantities cost), and Summary (report totals).

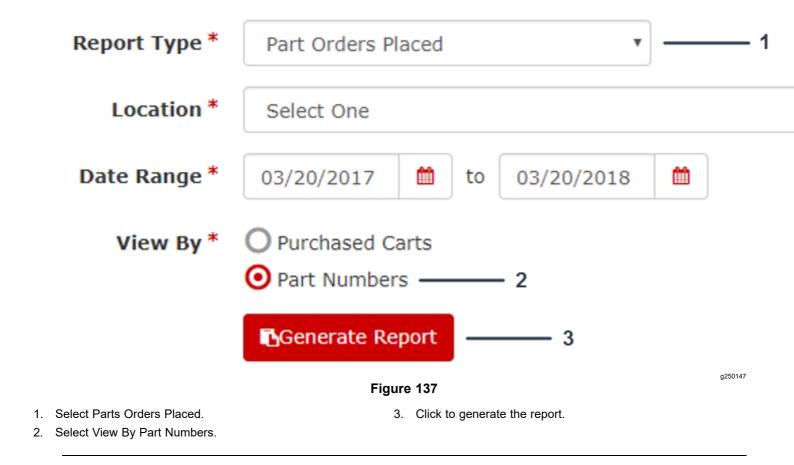

Generating a Total Cost of Ownership Report

- 1. Select Total Cost of Ownership as the Report Type (Figure 138).
- 2. Select the Location, Asset Type, Group, Asset Status, and Asset ID (Figure 138).
- 3. Click Generate Report (Figure 138).


After you generate a **Total Cost of Ownership** report, a spreadsheet generates with full details of what an asset cost in total.

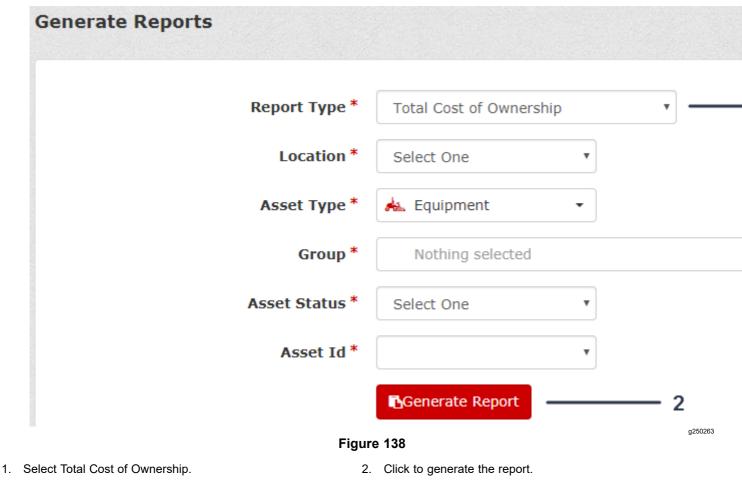

1. Select Parts Optimization as the Report Type (Figure 139).

Generating a Parts Optimization Report


- 2. Select the Location, the Group(s) you want to view, and Date Range (Figure 139).
- Click Generate Report (Figure 139).
 After you generate a Parts Optimization report, a spreadsheet generates with the full details.

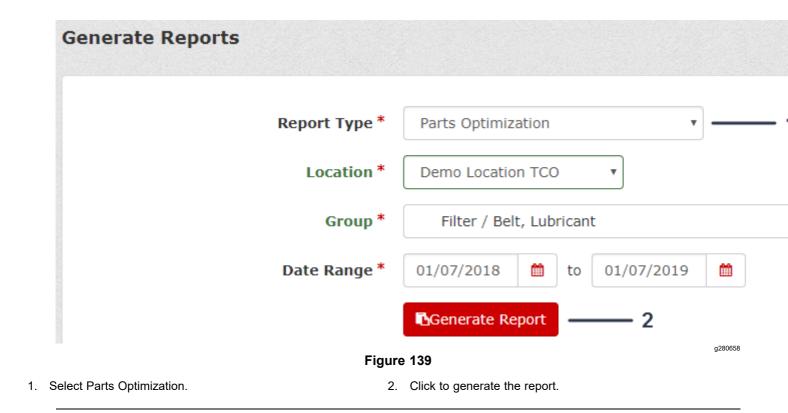

Generating a Closed Work Order by Labor Report

The purpose of this report is to determine whom worked on which assets and the time and cost incurred from that work.

- 1. Select Closed Work Order by Labor as the Report Type (Figure 140).
- Select the Location, Laborer, Asset Type, Group(s) you want to view, the Asset Status, Asset ID, and Date Range (Figure 140).
- Click Generate Report (Figure 140).
 After you generate a Closed Work Order by Labor report, a spreadsheet generates with the full details.

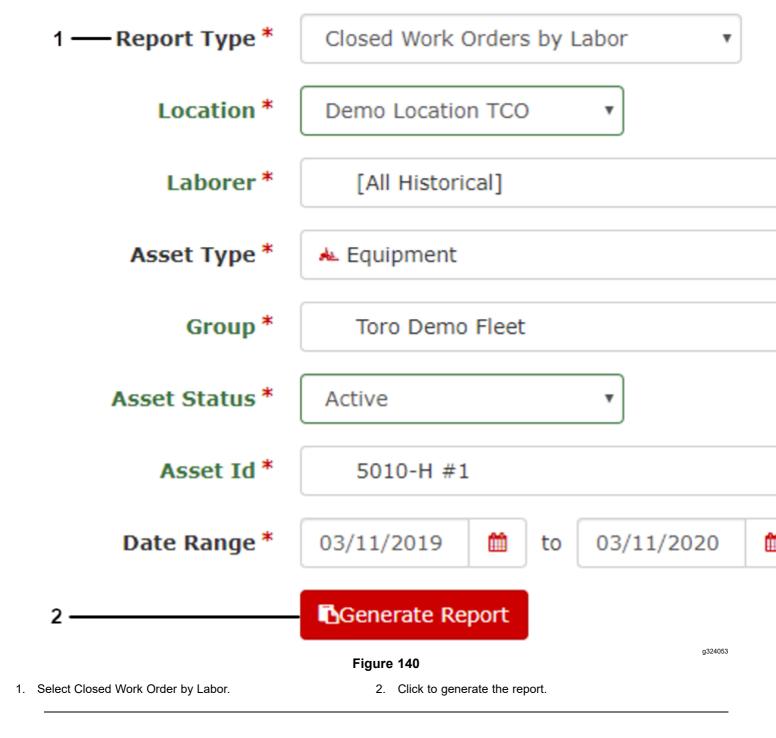

Generating a Parts Used in Maintenance Report

- Select Parts Used in Maintenance Report as the Report Type (Figure 141).
- Select the Location, Asset Type, Group, Asset Status, Asset ID, and Date Range (Figure 141).
- 3. Click Generate Report (Figure 141).


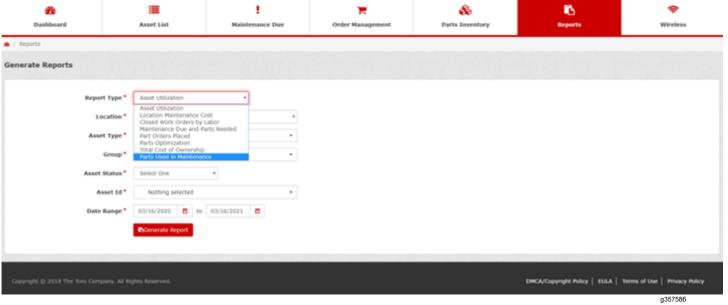


Figure 141

Generating a Fuel Usage Log

1. Select the Fuel Type and enter the Total Fuel and Fuel Fill (Figure 142).



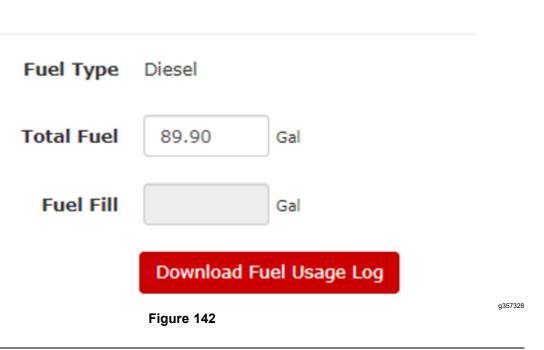

2. Click **Download Fuel Usage Log** (Figure 142) and a report generates (Figure 143).

4	Α	В	С	D	E	F
		Amount	Unit of	Fuel Cost per	Subtotal Cost	Cumulative
1	Date	Incremented	Measure	Unit of Measure	of Fuel	Total
2	8/28/2020 4:35:53 PM -05:00	7	Gal	\$3.99	\$27.93	74.5
3	8/31/2020 4:36:59 PM -05:00	7	Gal	\$3.99	\$27.93	81.5
4	9/1/2020 4:42:27 PM -05:00	8.4	Gal	\$3.99	\$33.51	89.9

Figure 143

g357327

Creating a One-Time Preventive Maintenance Task

The one-time preventive maintenance task allows you to create a task that logs costs as preventive maintenance, but does not record the task as a recurring task in the **Asset Preventive Maintenance Schedule**. The task is designed to track items, such as preventive maintenance, but are not part of the standard scheduled maintenance tasks. The one-time preventive maintenance task functions similarly to **Repair** or **General** tasks, in that it due immediately upon creation and it has no interval.

1. From the Asset Overview of an asset, click Maintenance Schedule (Figure 144).

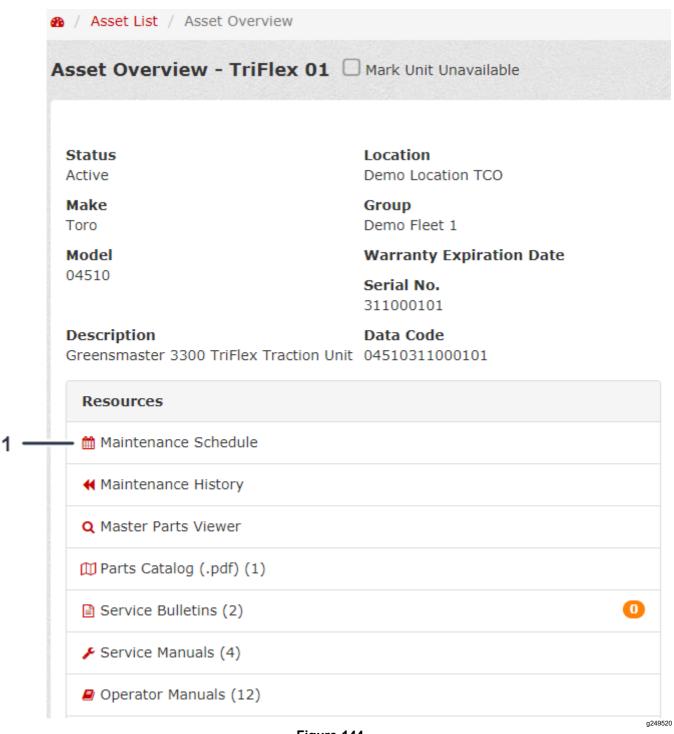


Figure 144

1. Click to access the Maintenance Schedule.

2. Click Add a Task (Figure 145).


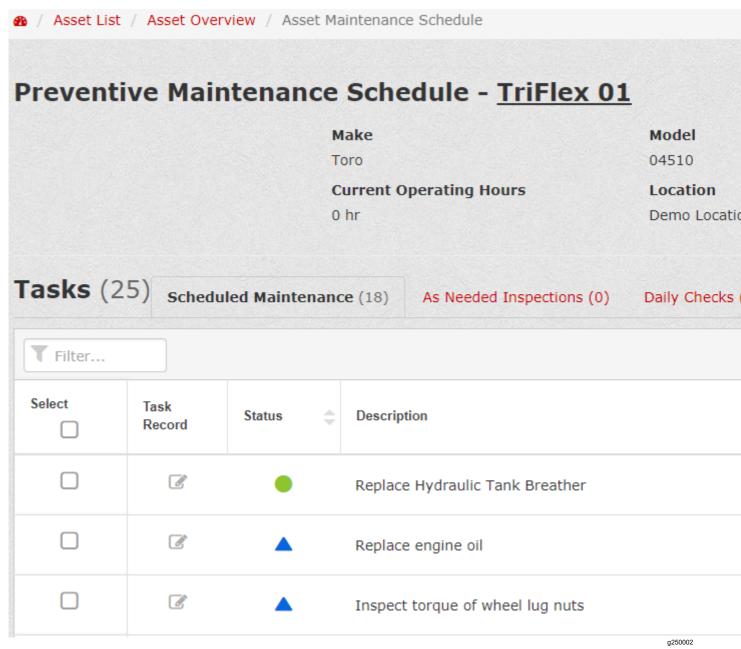



Figure 145

1. Click to add a task.

- 3. Under the **Task Type**, select **Preventive Maintenance** (Figure 146).
- 4. Under the **Sub Type**, select **One Time** (Figure 146).
- 5. Fill out the Create New Task form and click Save (Figure 146).


Create New Task

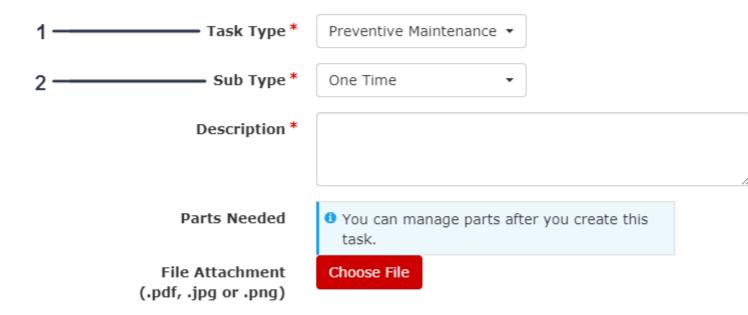

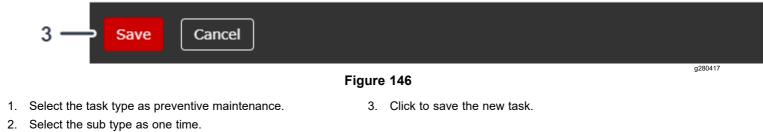


If you want to add parts to the **One Time** task, do the following:

A. From the **Success** screen, click **Task Record** (Figure 147).

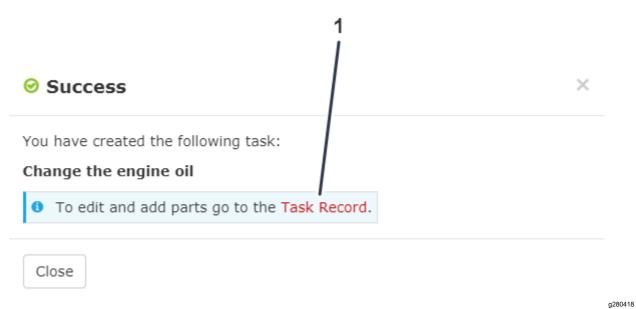

- 1. Click to access the task record.
 - B. Fill out the task record, add parts, and click **Save** (Figure 148).

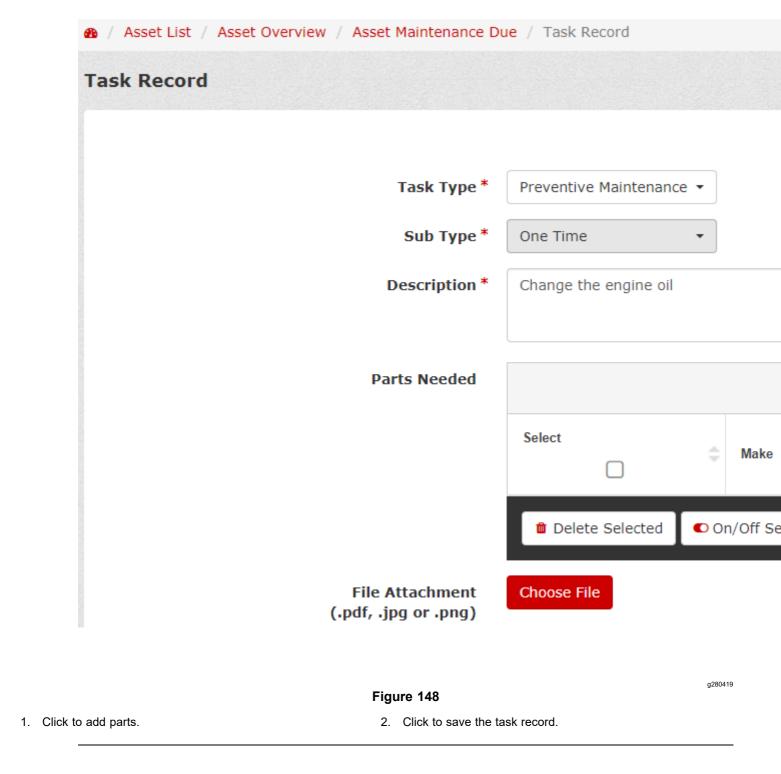

Adding Multiple Custom Parts to a Task

From the **Add Part** drop-down, you can create multiple custom parts for a **Task Record**.

1. From the Task Record, click Add Part, and click Create Custom Part (Figure 149).

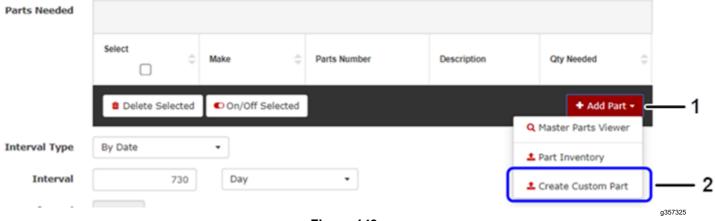


Figure 149

1. Click the Add Part drop-down menu.

- 2. Click to create a custom part.
- Enter the Part Number, Make, Description, and Quantity Needed for each custom part (Figure 150).
 Click Add Part to add another part to the Add Parts Task list (Figure 150).
- 3. Click Add to Task (Figure 150).

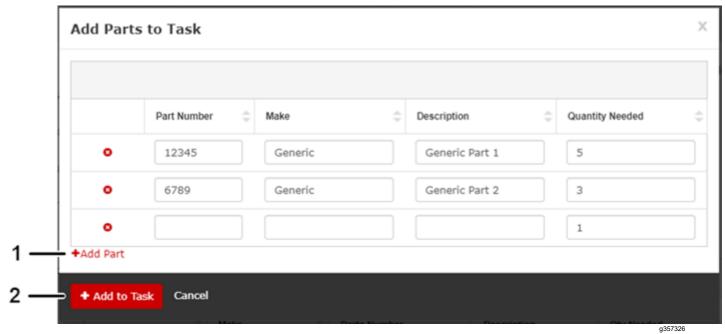



Figure 150

1. Click to add another custom part.


2. Click to add the custom parts to the task.

Adding Parts to a Work Order

- 1. Click the Maintenance Due tab (Figure 151).
- Click the desired Work Order (Figure 151).

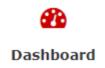



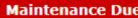

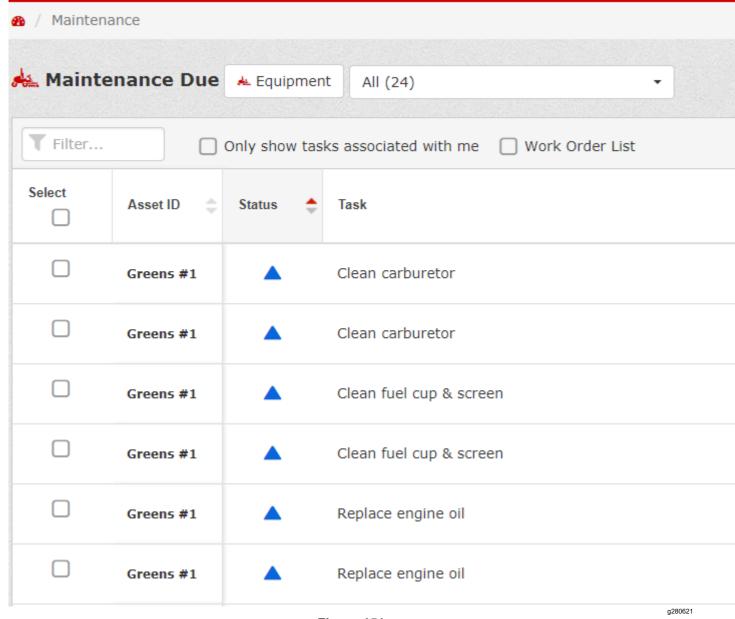


Figure 151

1. Click the work order.

3. Click Add Parts (Figure 152).

Note: After clicking **Add Parts**, a new one-time preventive maintenance task with the description "Parts Replaced" appears.

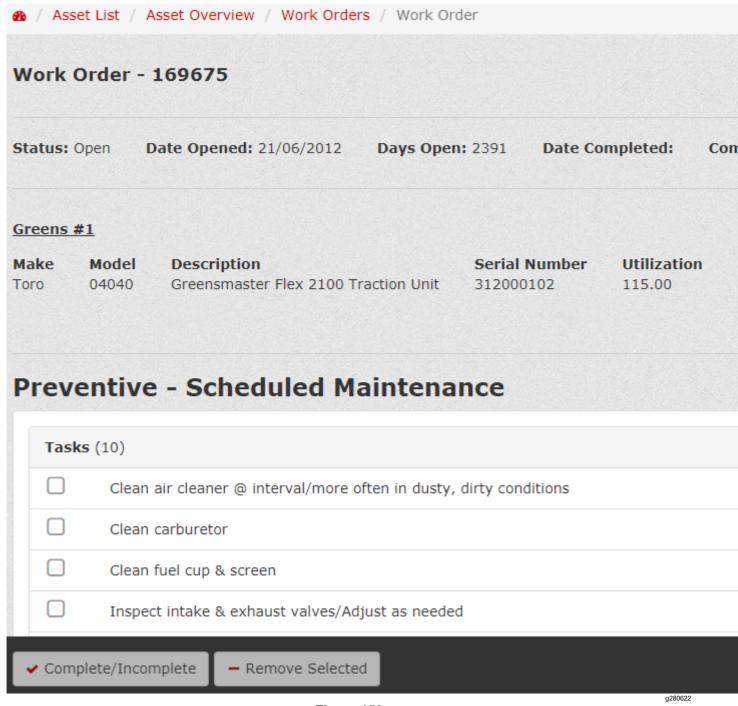



Figure 152

1. Click to access the task record and add parts.

4. Fill out the **Task Record** and add the parts to the work order (Figure 153).

Note: You can add parts to the **Task Record** using the standard **Master Parts Viewer**, **Part Inventory**, or **Create Custom Part** (Figure 153).

5. After you add the parts to the **Work Order**, click **Save**, then **Close** (Figure 153).

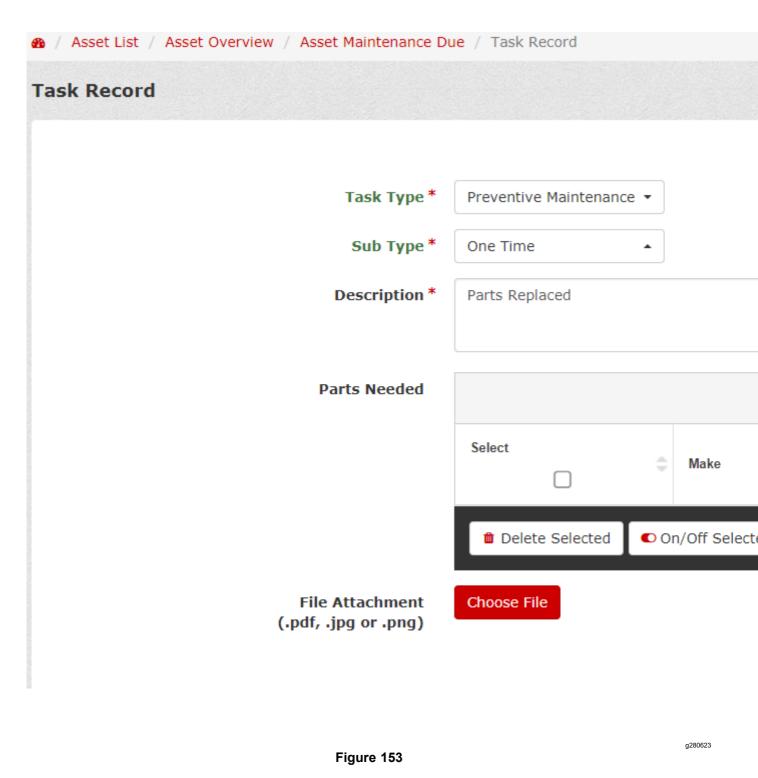

1. Click to add parts to the work order.

2. Save the changes.

3. Close the work order.

Creating and Using Carts

Creating a Cart to Use

- 1. Click Order Parts, located in the upper, right corner of the screen (Figure 154).
- 2. Click Create New Cart at the bottom of the menu (Figure 154).


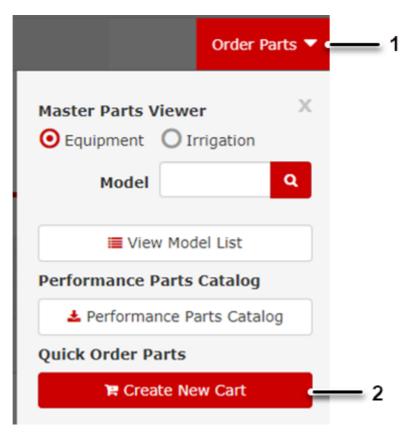


Figure 154

1. Click order parts.

- 2. Click to create a new cart.
- 3. Select the desired **Location** for the cart, edit the **Cart Name**, and click **Create** (Figure 155). This creates the cart and start the ordering process; refer to Using a Cart (page 155).

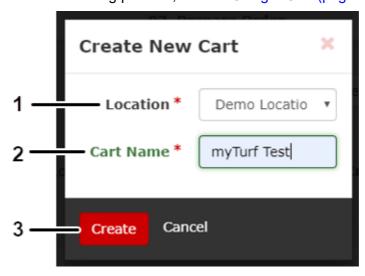

g323583

Figure 155

- 1. Select the desired location.
- 2. Edit the cart name.

3. Click to create the cart.

Creating a Cart in Parts Inventory and Maintenance Due

1. If you want to create and select a new cart, click **Select a Cart** in the upper, right corner of the ordering screen (Figure 156).

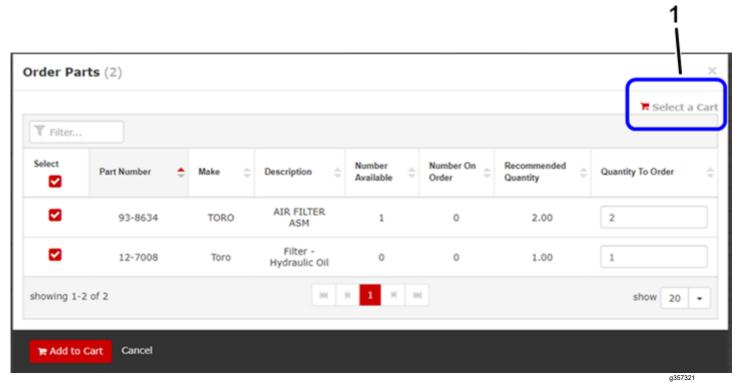


Figure 156

- Click Select a Cart.
- 2. Select Create New Cart and click Apply (Figure 157).


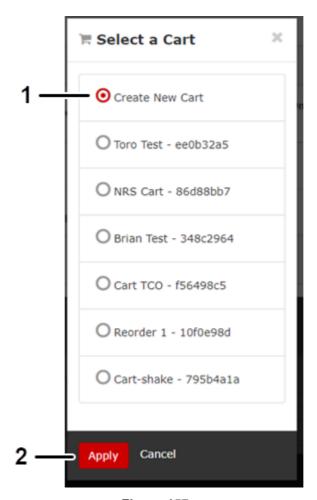


Figure 157

1. Select to create a new cart.

- 2. Click to apply the selection.
- 3. Select the Location for the cart and enter the Cart Name (Figure 158).
- 4. Click Apply (Figure 158).

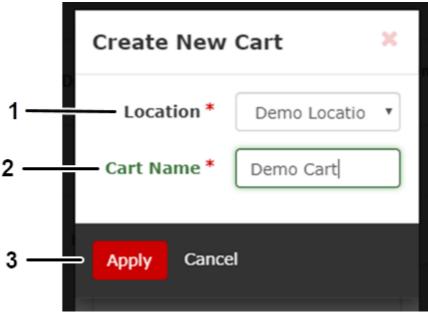

g357319


- 1. Select a location.
- 2. Enter the cart name.

3. Click to apply the cart.

Using a Cart

After creating a cart, you can add parts from multiple locations.

From the Build and Review Cart screen, click Add Parts (Figure 159).

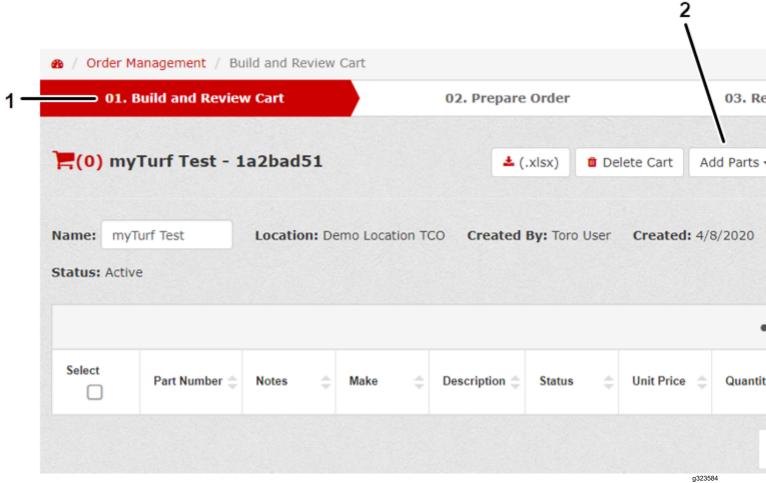


1. Build and Review Cart screen

2. Click to add parts.


q323585

Note: You can add parts **By Part Number** (if you know the part number), **Bulk Upload** by Excel spreadsheet, **Parts Inventory**, or by searching the **Master Parts Viewer** as shown in Figure 160.

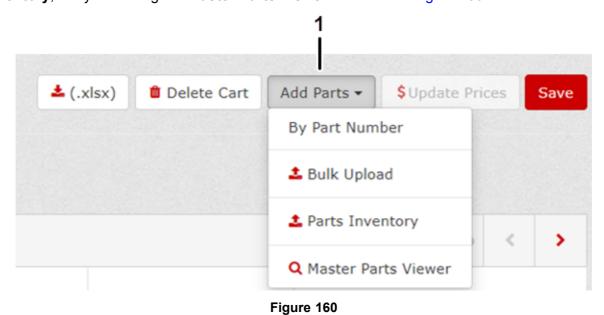

1. Click to add parts by part number, bulk upload, through part inventory, or master parts viewer.

Note: If you leave the **Build and Review Cart** screen, the cart follows you (Figure 161) to continue adding parts to the cart. This can be done from the **Master Parts Viewer**, **Parts Inventory**, or **Maintenance Due List**.

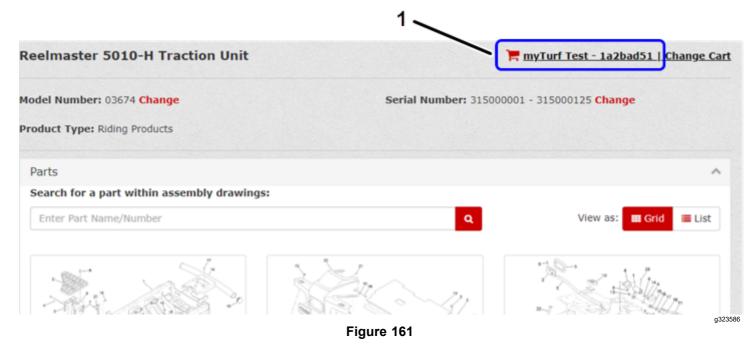


1. Example of a cart following you through adding parts.

Choosing a Different Cart

There are 2 ways to choose a different cart than the cart you are currently using:

Click the Order Management tab and click the cart you want to use (Figure 162).
 When you enter the Build and Review Cart screen, the cart follows you to continue adding parts to the cart.

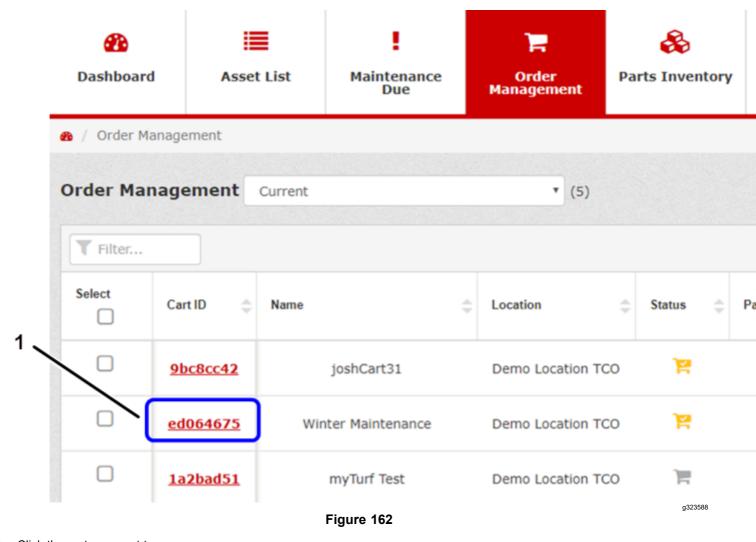

1. Click the cart you want to use.

• When you go through the ordering process in the Master Parts Viewer, Parts Inventory, or Maintenance Due List, click Change Cart (Figure 163).

When you click **Change Cart**, you can either create a new cart or select an existing cart (Figure 164).

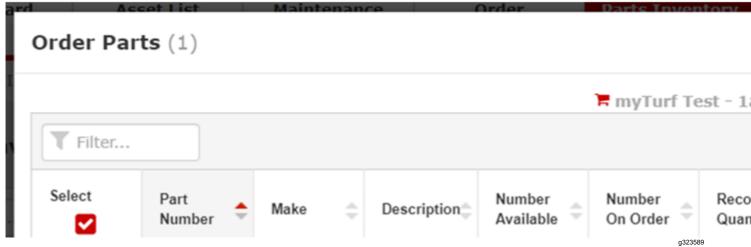


Figure 163

1. Click to change the cart to create a new cart or select an existing cart.

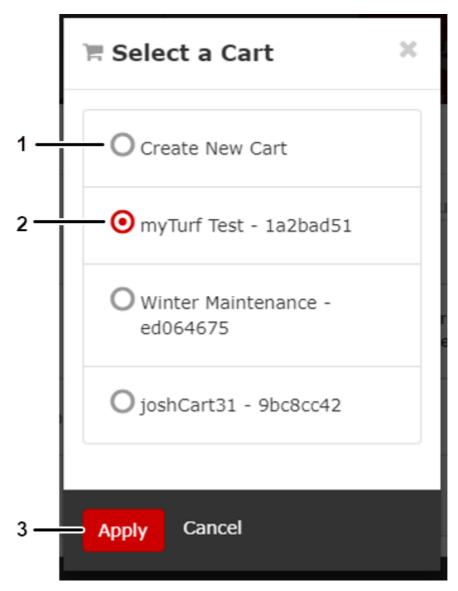


Figure 164


- 1. Select to create a new cart.
- 2. Select an existing cart.

3. Click apply to select the desired cart.

Downloading End-User Parts

In **Asset Overview Resources**, click **End User Parts** (Figure 165) to view a list of Toro-designated end user parts for the machine model number and serial number.

From this list, you can add parts to a cart or download a spreadsheet of the parts list.

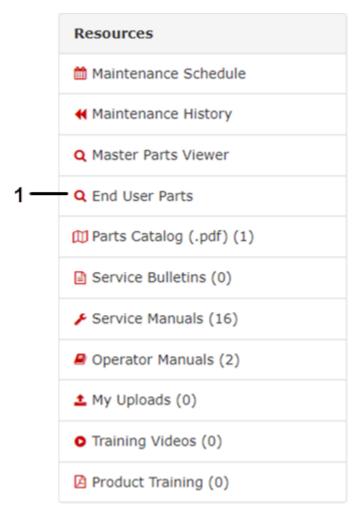

g330050

1. Click End User Parts.

Ordering End-User Parts

- 1. Ensure that the correct cart is selected or create a new cart (Figure 166).
- 2. Select the part(s) that you want to order (Figure 166).
- 3. Click Add to Cart (Figure 166).


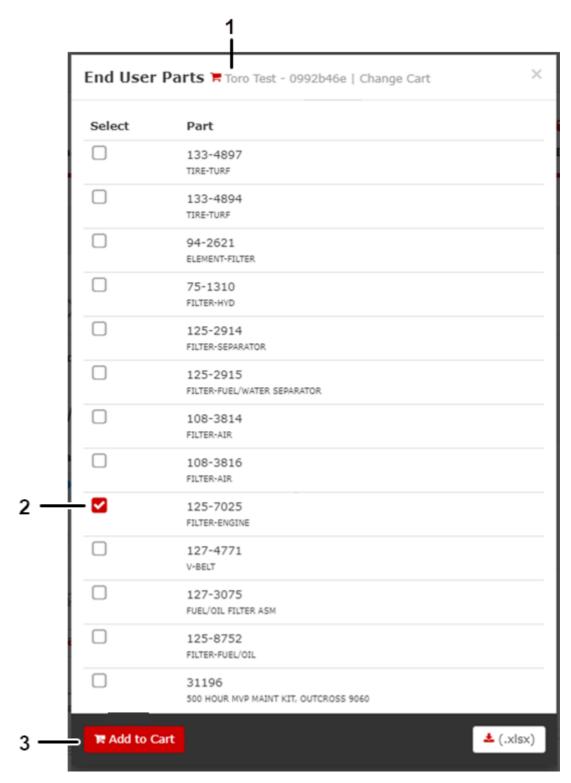


Figure 166

- 1. Ensure that the correct cart is selected or create a new cart. 3. Click to add the part(s) to the cart.
- 2. Select the part(s) that you want to order.
- 4. After the next screen appears, enter the quantity of the part and click Add to Cart (Figure 167).

Note: If this was done properly, you should receive a message indicating that you successfully added the end-user parts to the cart.

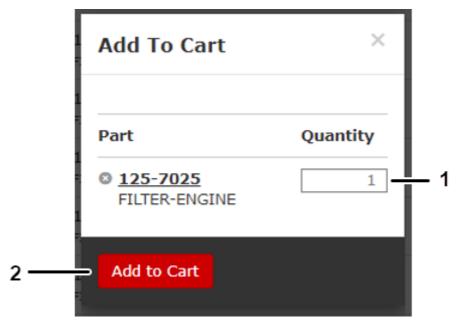

1. Enter the quantity of the part.

2. Click to add the part(s) to the cart.

Downloading a Spreadsheet of End-User Parts

- 1. In Asset Overview Resources, click End User Parts (Figure 165).
- 2. Click **Download .xlxs**, located in the lower, right corner of the screen (Figure 168).



Figure 168

g330053

g330052

Note: The system will download an Excel file of the end-user parts list (Figure 169).

4	Α	В	С
1	Part Number	Part Description	Part Class Description
2	133-4897	TIRE-TURF	TIRES
3	133-4894	TIRE-TURF	TIRES
4	94-2621	ELEMENT-FILTER	FILTER (HYDRAULIC)
5	75-1310	FILTER-HYD	FILTER (HYDRAULIC)
6	125-2914	FILTER-SEPARATOR	FILTER, WATER
7	125-2915	FILTER-FUEL/WATER SEPARATOR	FILTER (FUEL)
8	108-3814	FILTER-AIR	FILTER (AIR)
9	108-3816	FILTER-AIR	FILTER (AIR)
10	125-7025	FILTER-ENGINE	FILTER (ENGINE OIL)
11	127-4771	V-BELT	BELT
12	127-3075	FUEL/OIL FILTER ASM	FILTER (FUEL)
13	125-8752	FILTER-FUEL/OIL	FILTER (FUEL)
14	31196	500 HOUR MVP MAINT KIT, OUTCROSS 9060	MVP KITS-ROUTINE MAINT
Figure 169			

Accessing an Asset Overview using a QR Code



Figure 170

g357492


1. Using your mobile device, click **Scan** in the **Help Menu** (Figure 171).



Figure 171

g357490

2. When myTurf requests access your mobile device, click Allow (Figure 172).

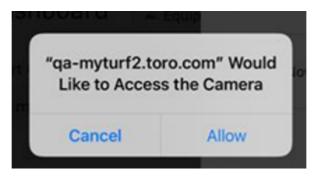

g357489


3. Scan the QR Code (Figure 173).



Figure 173


g357493

 If the Equipment exists as an Asset in the authorized Location(s) for the user, you will be directed to the Asset Overview for that Asset. This enables quick access to Resources, updating operating hours, etc. (Figure 174).

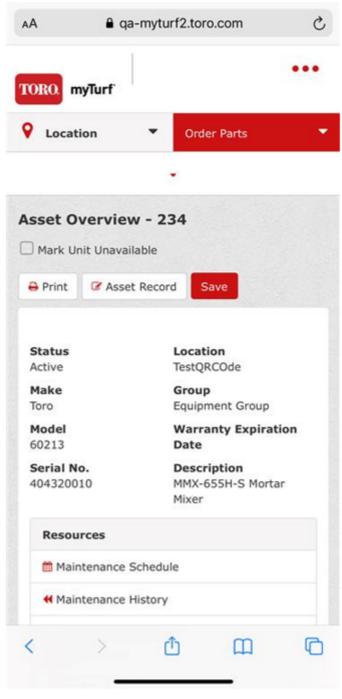

g357491

• If the **Equipment** does not exist in the **Organization** or if the user does not have access to the **Location** in which the asset is located, myTurf delivers a warning message with the option to **Create Asset** (Figure 175).

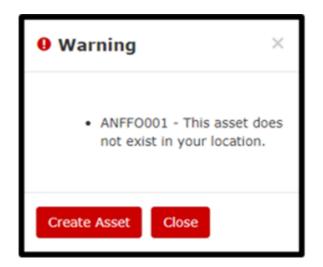

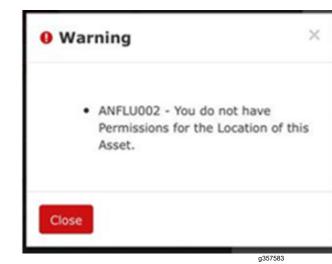


Figure 175

If you click **Create Asset**, you will be directed to the **Add Asset** screen (Figure 176). Enter all the **Asset** information and click **Create Asset** (Figure 176).

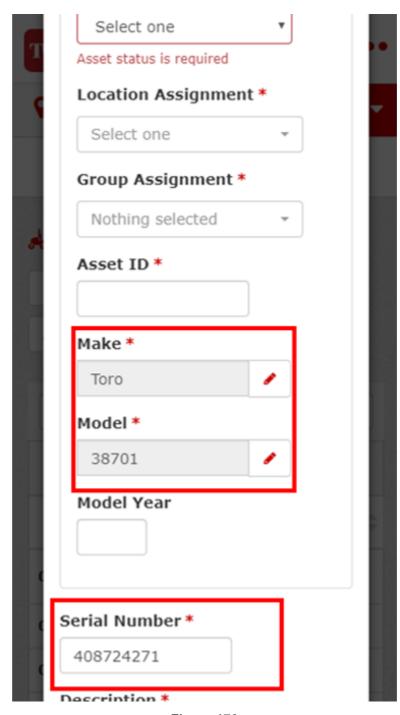


Figure 176

Allowing Access for a Distributor to View a Customer **Asset List**

For a distributor to be able to view their customer's asset list, that customer need to allow the distributor permission to view their assets.

- To grant permission, the customer needs to log in and click the **Admin** menu at the top of the screen.
- From the Distributor Permissions screen, click I authorize my distributor to view my asset list and click Save (Figure 177).

