



Form No. 3450-382 Rev A

Count on it.

Parts Catalog

81cm (32in)

Mid-Size Rear-Discharge Deck

Model No. 02710—Serial No. 410000000 and Up



Ordering Replacement Parts

To order replacement parts, please supply the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form a:b. The a represents the reference number of the entire service assembly and the b represents a sequential number unique to each part within the service assembly.

For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually. Reference numbers of this type appear in illustration and in parts lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form nX y. The n represents the quantity of the part, the X is the multiplication symbol, and the y represents the reference number.

For example, in an illustration, the reference number 2X 37 means that two of the parts identified by reference number 37 are indicated.

Contents

32in Deck Assembly 4


Spindle and Blade Assembly 6

Idler Arm Assembly 8

Caster Assembly 10

Guard and Drag Shield Assembly 12


32in Deck Assembly

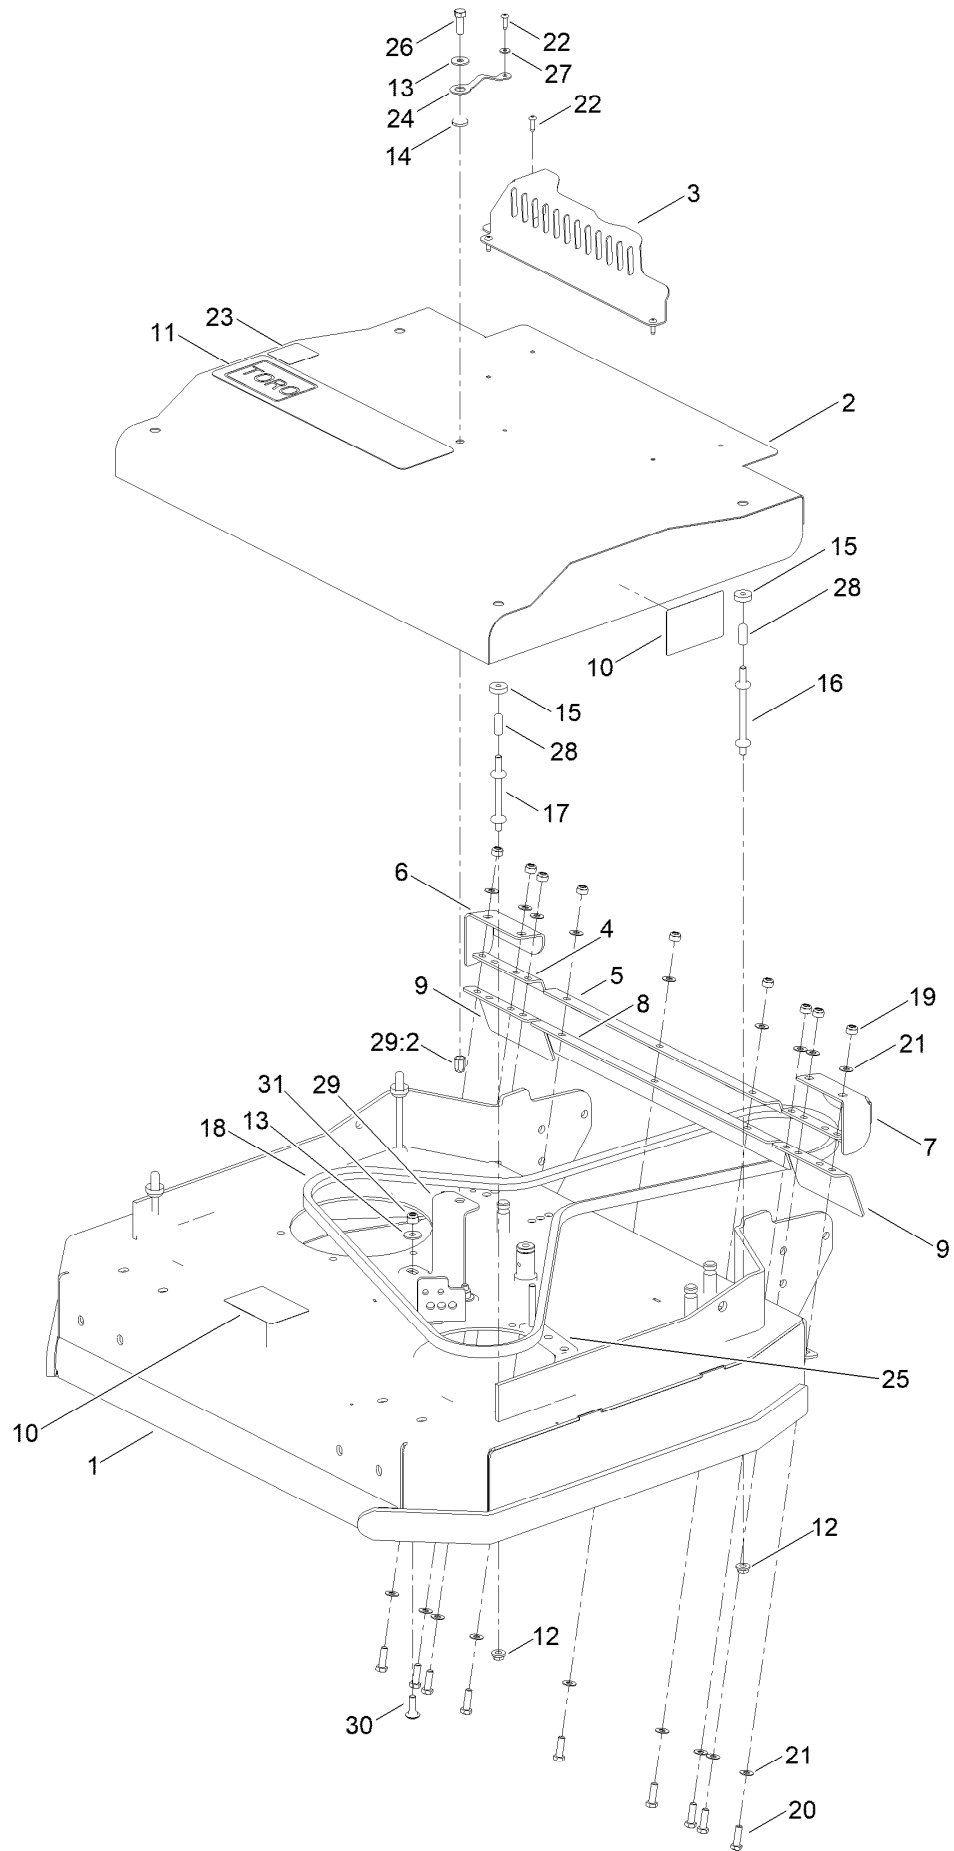

32in Deck Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-2835-01	1	32 Inch Deck ASM	17	1-303537	2	Stud-Shield, Belt (Short)
2	111-3923-01	1	Cover-Deck	18	110-9594	1	Belt-V
3	111-4929-01	1	Guard-Pipe, Exhaust	19	ZNN3E000U	9	Nut-Nyloc
4	111-2851-01	2	Bracket-Deflector, Side	20	ZDH3E016U	9	Screw-HH
5	111-1545-01	1	Bracket-Deflector, Center	21	09475	18	Washer
6	111-1643-01	1	Guard-Discharge, RH	22	09320	4	Rivet
7	111-1644-01	1	Guard-Discharge, LH	23	111-1979	1	Decal-Noise
8	111-1547	1	Deflector-Centre, Rubber	24	117-8339	1	Lanyard-3 Inch
9	111-2848	2	Deflector-Side, Rubber	25	111-2470-03	1	Guide-Belt
10	139-5557	3	Decal-Danger, CE	26	03162	1	Screw-HH
11	111-2849	1	Decal	27	09257	1	Washer
12	32128-20	4	Nut-HF	28	111-3882	4	Cap-End, Rubber
13	09267	3	Washer-Plain	29	111-3887	1	Bracket-Guard
14	111-3697	1	Nut-Retainer	29:2	111-7683	1	Nut-Rivet
15	1-323417	4	Washer	30	09373	2	Bolt-Coach
16	1-303536	2	Stud-Shield, Belt (Long)	31	09442	2	Nut


Spindle and Blade Assembly

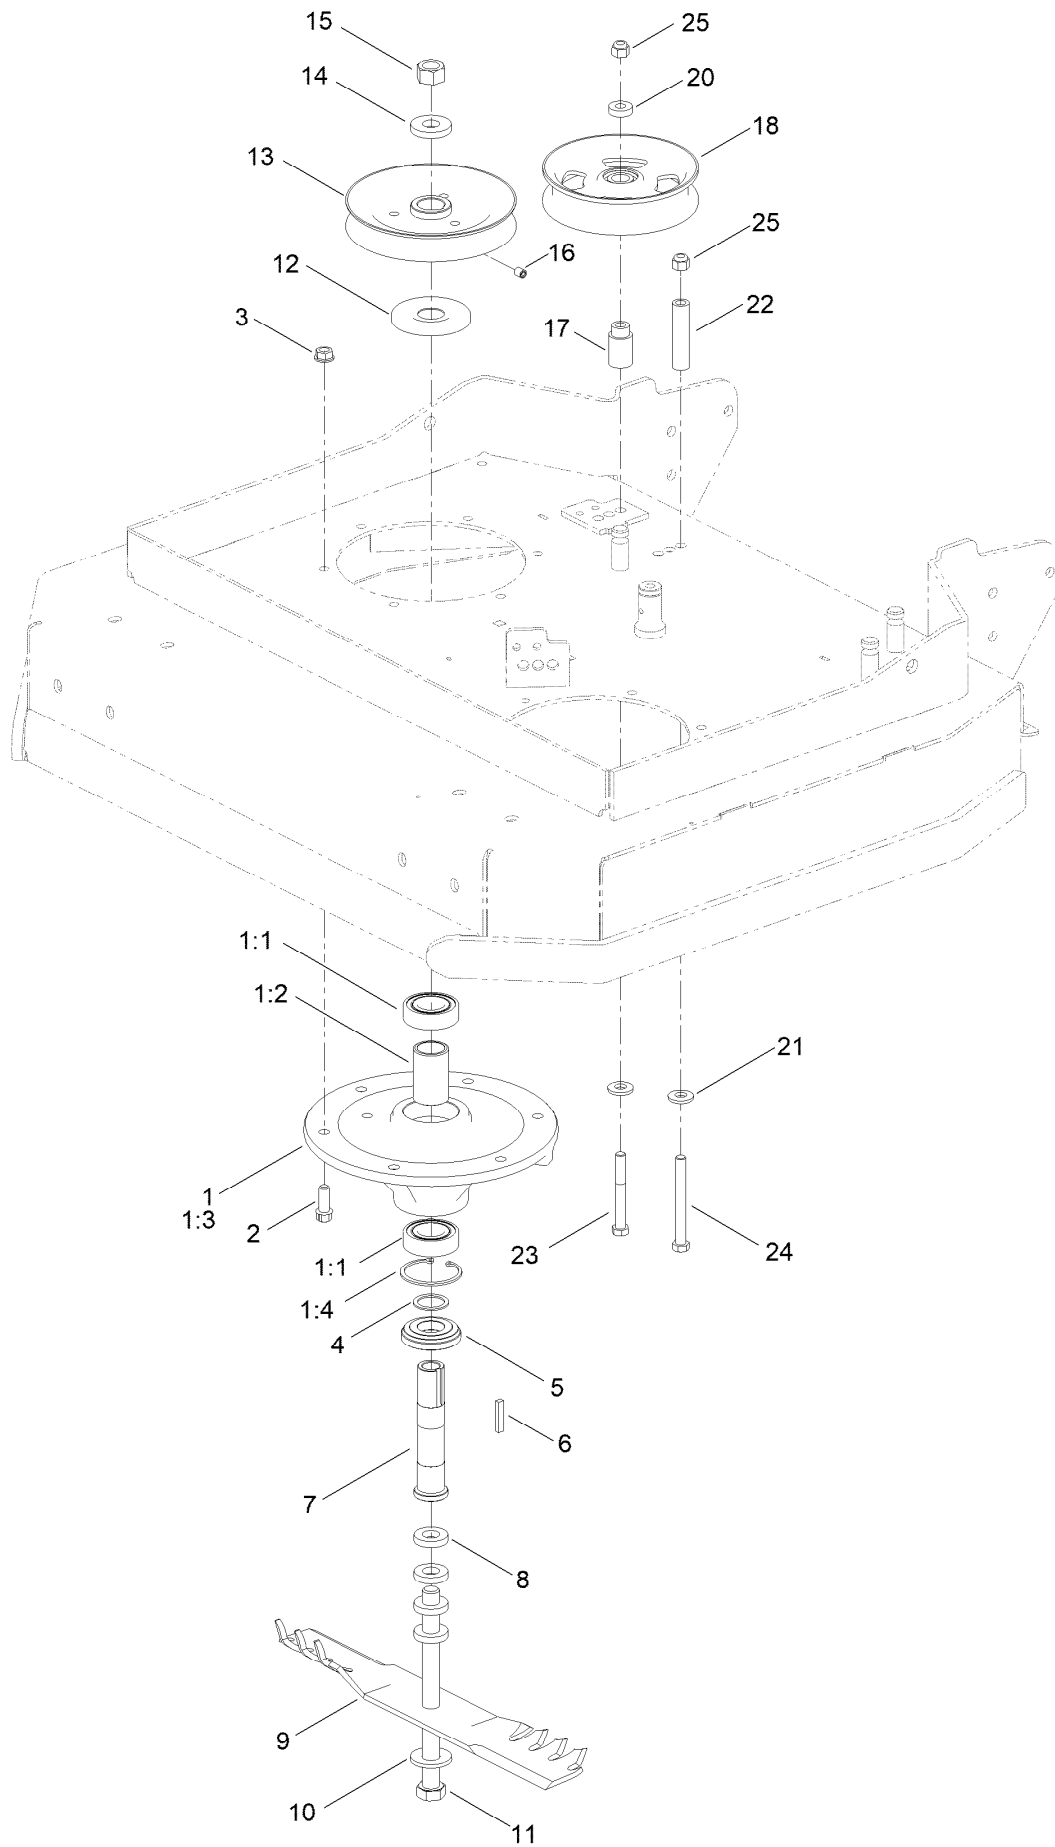

Spindle and Blade Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	108-6697	2	Spindle Housing ASM	11	1-800861	2	Screw-Cap, HH
1:1	119-7857	2	Bearing-Ball, 1 Inch	12	103-1330	2	Guard-Bearing, Top
1:2	110-2116	1	Spacer-Bearing	13	1-403183	2	Sheave
1:3	108-6694	1	Housing-Spindle	14	1-323339	2	Washer-Retainer, Sheave
1:4	32120-8	1	Ring-Snap	15	3219-6	2	Nut-Hex
2	95-1726	12	Screw-Taptite	16	1-803310	2	Screw-Set
3	3290-357	12	Nut-HSF	17	1-413113	1	Bushing-Idler
4	110-4888	2	Washer-Spacer	18	136-5405	1	Pulley-Idler, Flat
5	103-2535	2	Spacer-Guard, Bottom	20	5-0652	1	Spacer
6	1-807267	2	Key	21	98-5975	2	Washer-Belleville
7	1-323529	2	Tube-Spindle, Short	22	1-403188	1	Spacer
8	1-323539	8	Spacer	23	09353	1	Screw-HH
9	104-8595	2	Blade-Atomic	24	323-15	1	Screw-HH
10	1-513208	2	Washer-Spring	25	3296-39	2	Nut-Lock, NI

Idler Arm Assembly

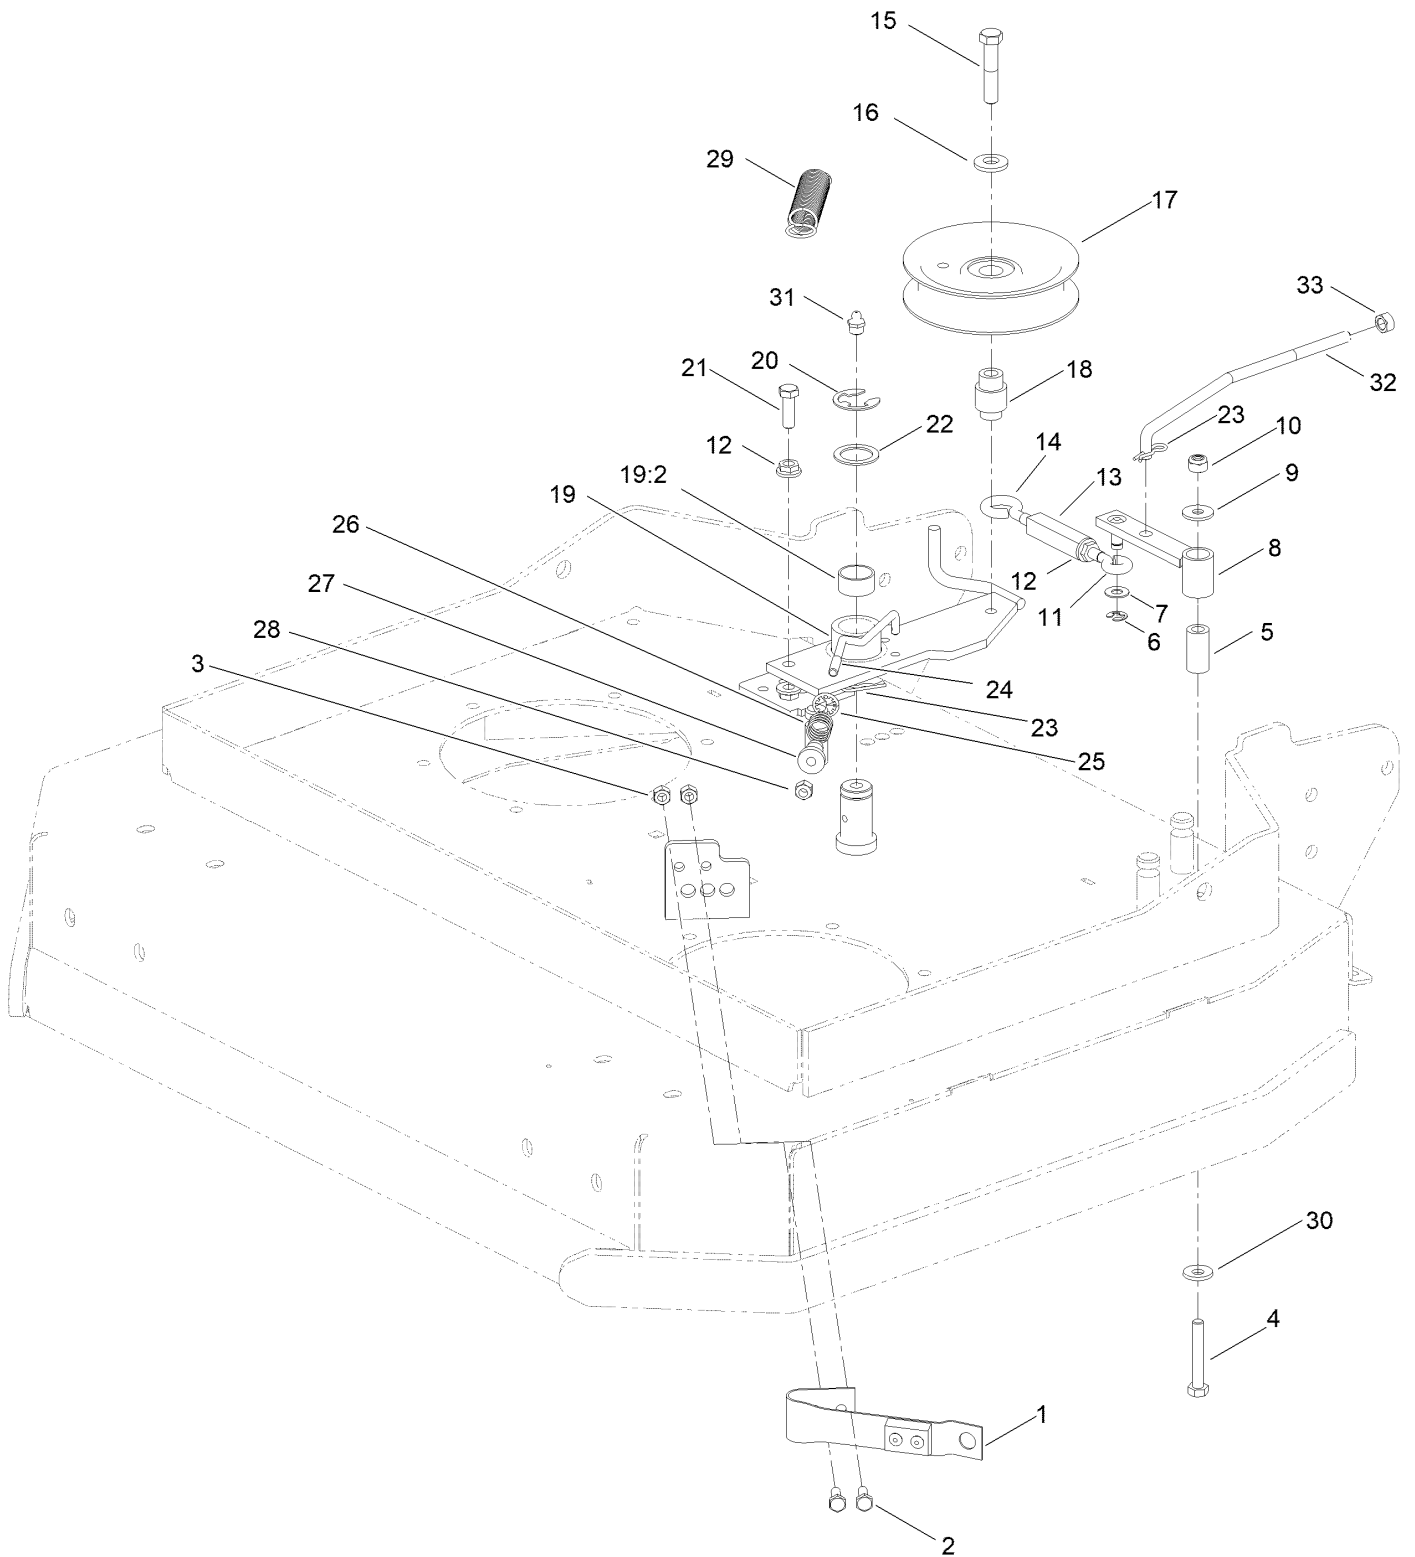


Idler Arm Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	1-324372	1	Pad And Spring ASM	17	132-4718	1	Pulley-Idler, Flat
1:1	1-323709	1	Pad-Brake ●	18	1-303434	1	Bushing-Engagement
1:2	1-323710	1	Spring ●	19	103-3600	1	Idler Arm ASM
1:3	103-0138	2	Rivet-Pop ●	19:2	1-323729	2	Sleeve-Bearing
2	09821	2	Screw-HH	20	32151-103	1	Ring-Retaining, EXT
3	3296-42	2	Nut-Lock, NI	21	ZDH3E016U	1	Screw-HH
4	322-10	1	Screw-HH	22	1-303352	1	Washer-Spindle
5	1-403179	1	Tube-Pivot	23	1-806003	2	Pin-Cotter
6	32120-35	1	Ring-Retaining, EXT	24	1-323718	1	Rod-Brake
7	09475	1	Washer	25	1-323748	1	Ring-Push On
8	1-322235	1	Arm-Assist, 32/36	26	1-323747	1	Spring-Compression
9	09267	1	Washer-Plain	27	1-323746	1	Spacer-Flanged
10	ZNN3E000U	1	Nut-Nyloc	28	3296-42	1	Nut-Lock, NI
11	1-303238	1	Eyebolt-Thread, RH	29	1-323071	1	Spring-Extension
12	32128-20	3	Nut-HF	30	1-303334	1	Washer-Spring
13	1-303236	1	Body-Turnbuckle	31	10-11-017	1	Fitting-Straight
14	1-303348	1	Eyebolt-Thread, LH	32	111-1629	1	Rod-Linkage, Drive
15	702809	1	Screw-HH	33	09207	1	Nut
16	98-5975	1	Washer-Belleville				

● Not illustrated

Caster Assembly

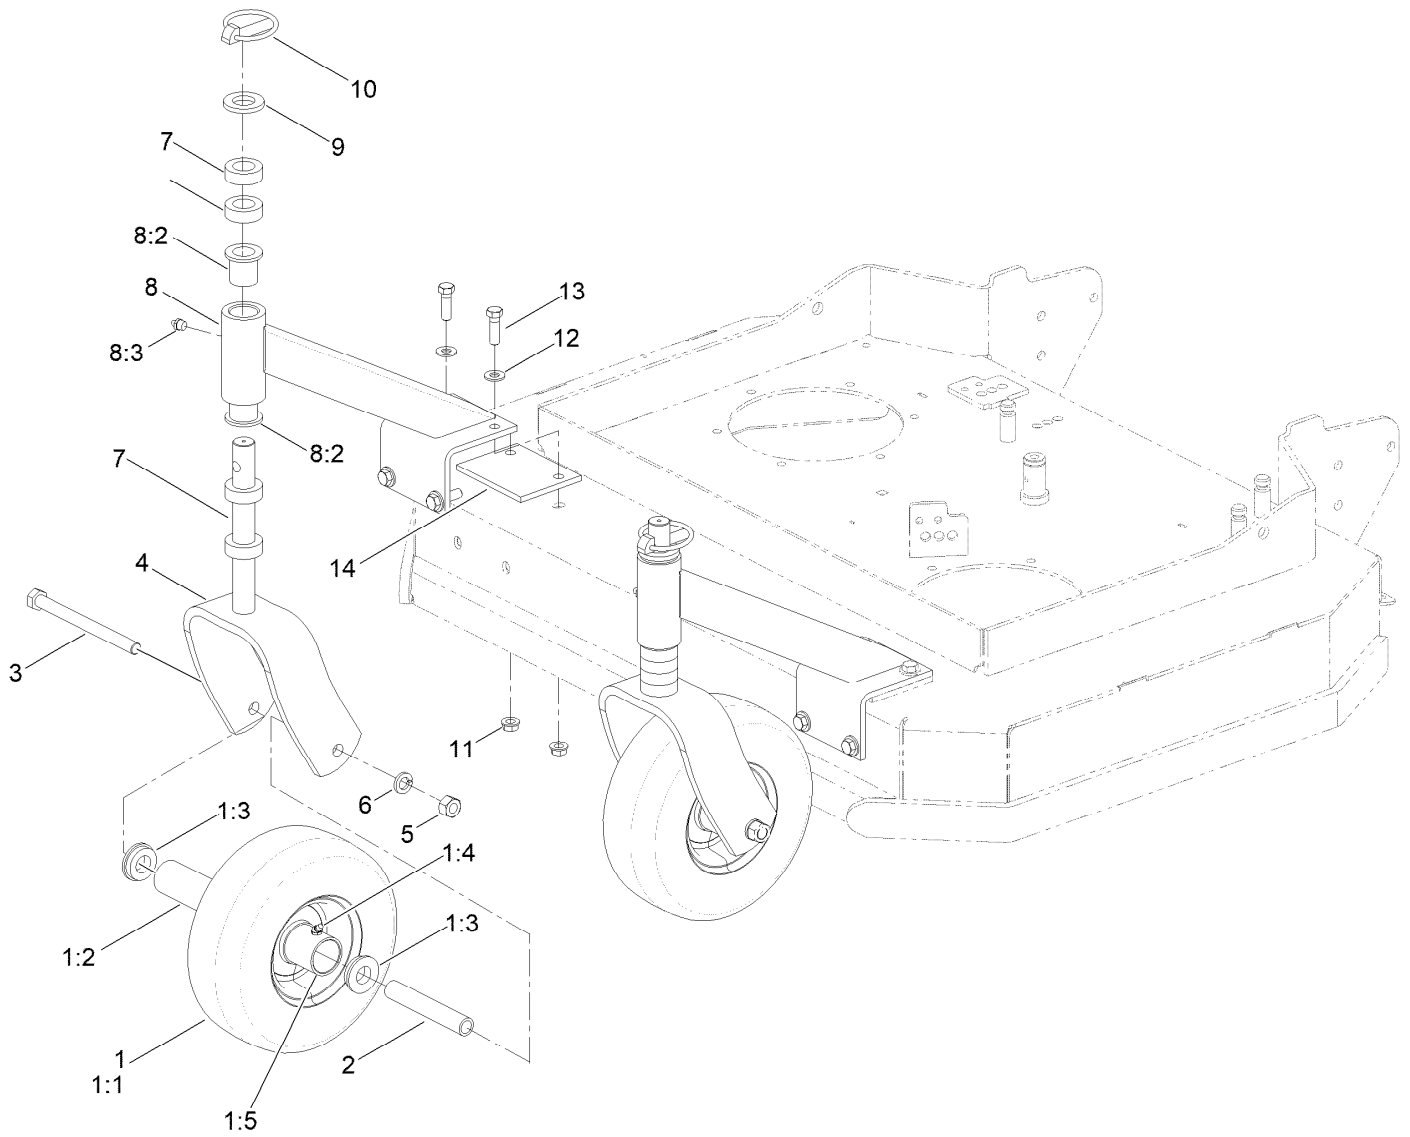


Caster Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>	<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	110-5023	2	Wheel And Tire ASM	7	1-303314	8	Spacer-Caster
1:1		1	Tire ●	8	110-2130	2	Support ASM
1:2	1-513809	1	Bearing	8:2	1-303514	2	Bearing-Flanged
1:3	1-513810	2	Bushing	8:3	302-52	1	Fitting-Grease
1:4	302-61	1	Fitting-Grease	9	1-513338	2	Washer-Flat
1:5		1	Wheel ●	10	1-809020	2	Pin
2	1-513547	2	Spacer	11	3290-357	8	Nut-HSF
3	325-20	2	Screw-HH	12	ZWQ1J000U	8	Washer-Plain
4	116-7942-01	2	Fork-Caster	13	323-7	8	Screw-HH
5	3217-9	2	Nut-HH	14	111-1900-01	2	Spacer-Caster
6	3253-7	2	Washer-Lock				

● Not serviced separately

Guard and Drag Shield Assembly

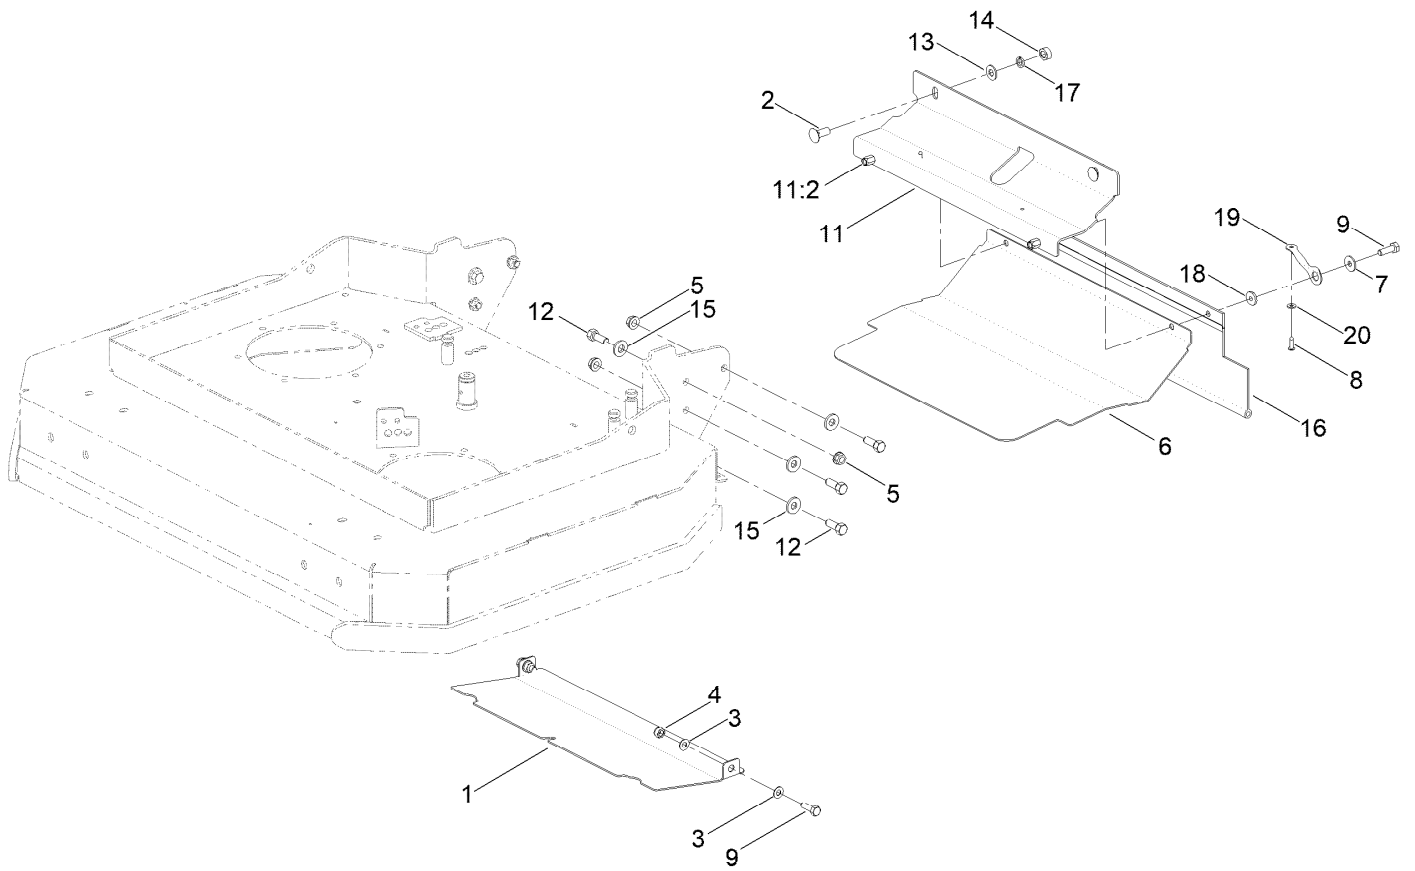

Guard and Drag Shield Assembly (continued)

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
1	111-1408-01	1	Guard-Discharge, Center
2	15-11-003	2	Bolt-CARR
3	09475	4	Washer
4	09441	2	Nut-Hex, NI
5	3290-357	8	Nut-HSF
6	111-1655-01	1	Guard-Underside
7	09267	2	Washer-Plain
8	09320	2	Rivet
9	03162	4	Screw-HH
11	111-1986	1	Guard-Drive

<i>Ref.</i>	<i>Part Number</i>	<i>Qty.</i>	<i>Description</i>
11:2	111-7683	2	Nut-Rivet
12	HY103653	8	Screw-HH
13	ZWQ1J000U	2	Washer-Plain
14	09449	2	Nut
15	98-5975	8	Washer-Belleville
16	103-2056	1	Shield-Drag
17	09480	2	Washer-Lock
18	111-3697	2	Nut-Retainer
19	117-8339	2	Lanyard-3 Inch
20	09257	2	Washer

Notes:

Notes:



Count on it.