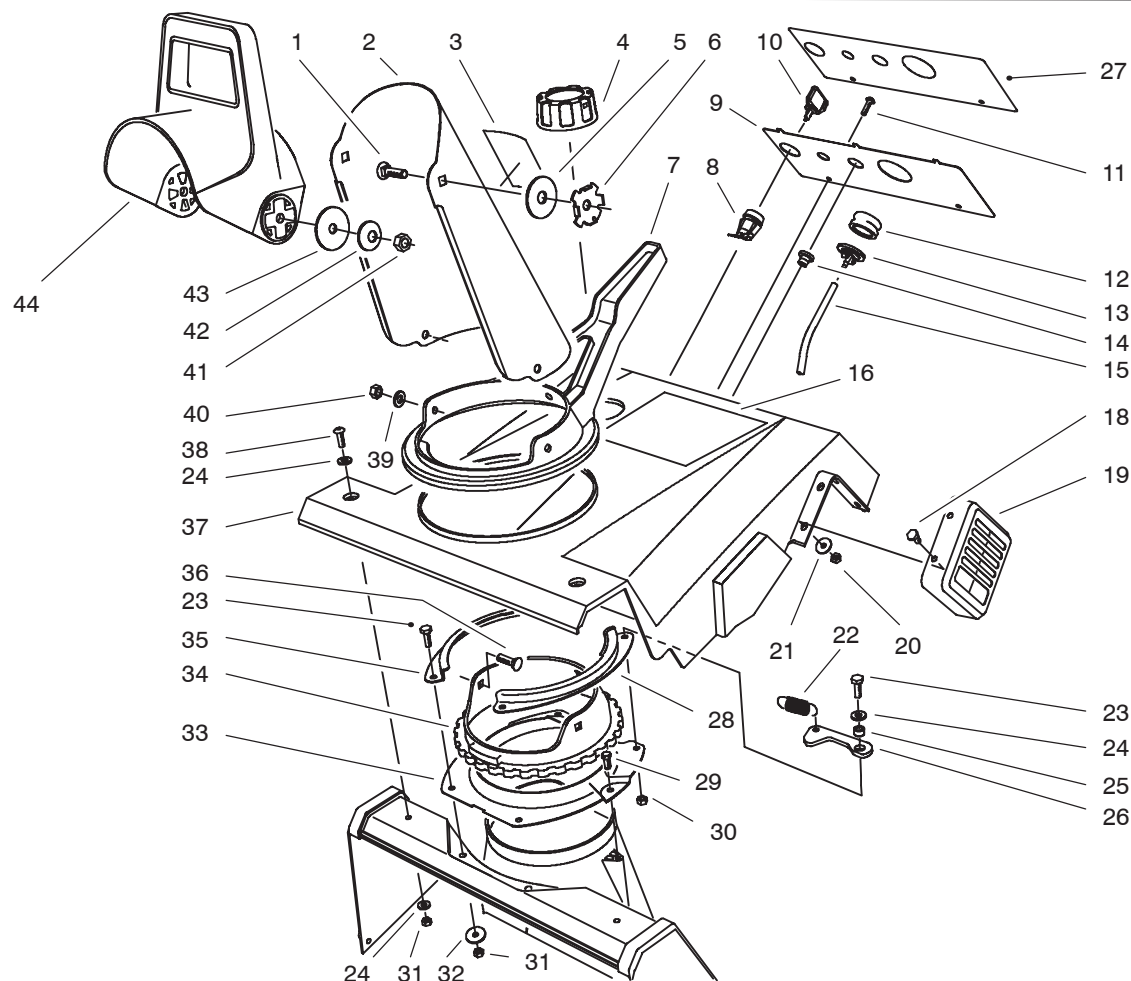


LAWN-BOY®
MODEL NO. 28221-7900001 & UP
MODEL NO. 28223-7900001 & UP
PARTS
CATALOG
320 SNOWTHROWER INT'L
320E SNOWTHROWER INT'L


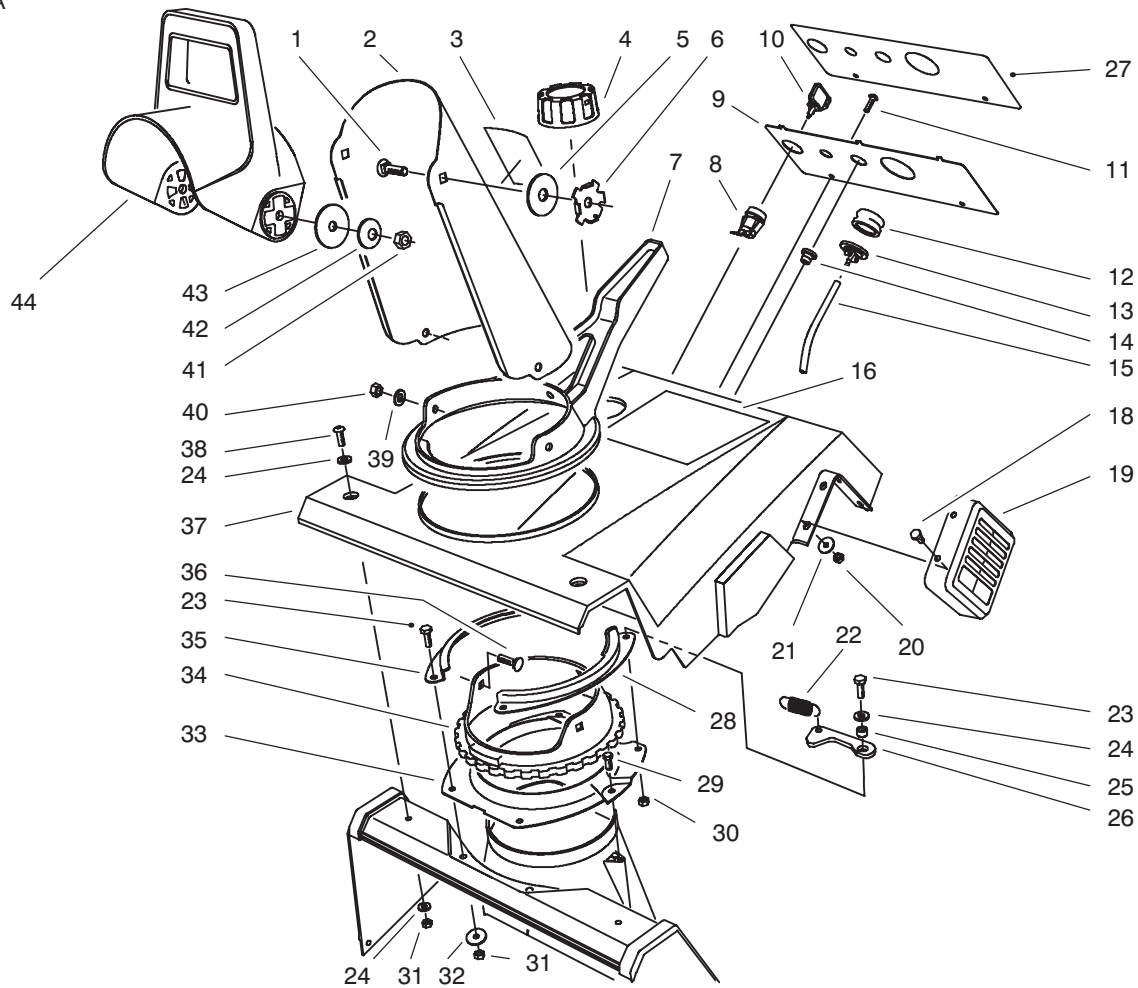
C-1740

UPPER SHROUD ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	3230-22	Bolt – Carriage	2
2	94-2791	Discharge Chute Assembly (Incl. Ref. #3)	1
3	94-2901	Decal – Danger	1
4	55-3573	Gas Cap Assembly	1
5	20-4320	Washer – Rubber	2
6	55-8950	Plate – Friction	2
7	71-4940	Handle – Chute	1
8	40-5940	Switch – On-Off	1
9	71-5240	Panel – Control (Model No. 28221)	1
*	71-5241	Panel – Control (Model No. 28223)	1
10	63-8360	Key – Ignition	1
11	32144-53	Screw – Slotted Flange Hd.	2
12	66-7460	Bulb – Primer	1
13	44-2750	Body – Primer	1
14	23-7470	Guide – Rope	1

Ref. No.	Part No.	Description	No. Used
15	44-3173	Hose – Primer	1
16	94-9878	Decal – 320 (Model No. 28221)	1
*	94-9879	Decal – 320E (Model No. 28223)	1
18	3290-359	Screw – Hex. Hd.	4
19	71-5340	Guard – Muffler	1
20	3296-2	Nut – Lock	4
21	3256-61	Washer – Flat	4
22	71-5590	Spring – Extension	1
23	321-4	Screw – Hex. Hd.	4
24	3256-22	Washer – Flat	5
25	55-9370	Spacer – Detent Arm	1
26	80-4610	Arm – Detent	1
27	94-2567	Decal – Control Panel (Model No. 28221)	1
*	94-2566	Decal – Control Panel (Model No. 28223)	1

*Not Illustrated




C-1740

UPPER SHROUD ASSEMBLY (Continued)

Ref. No.	Part No.	Description	No. Used
28	71-4980	Retainer – Chute Ring L.H.	1
29	46-8092	Screw – Hex. Flange Hd.	2
30	3296-56	Nut – Lock	1
31	3296-42	Nut – Lock	4
32	3256-22	Washer – Flat	2
33	55-8921	Support – Chute Ring	1
34	71-4950	Ring – Chute	1
35	71-4990	Retainer – Chute Ring R.H.	1
36	3230-16	Bolt – Carriage	3

Ref. No.	Part No.	Description	No. Used
37	94-8888	Shroud – Upper	1
38	3250-32	Screw – Pan Hd.	2
39	3256-70	Washer – Flat	3
40	32149-1	Nut – Keps	3
41	3296-29	Nut – Lock	2
42	3290-456	Washer – Belleville	2
43	3256-68	Washer – Flat	2
44	56-2680	Deflector – Discharge	1

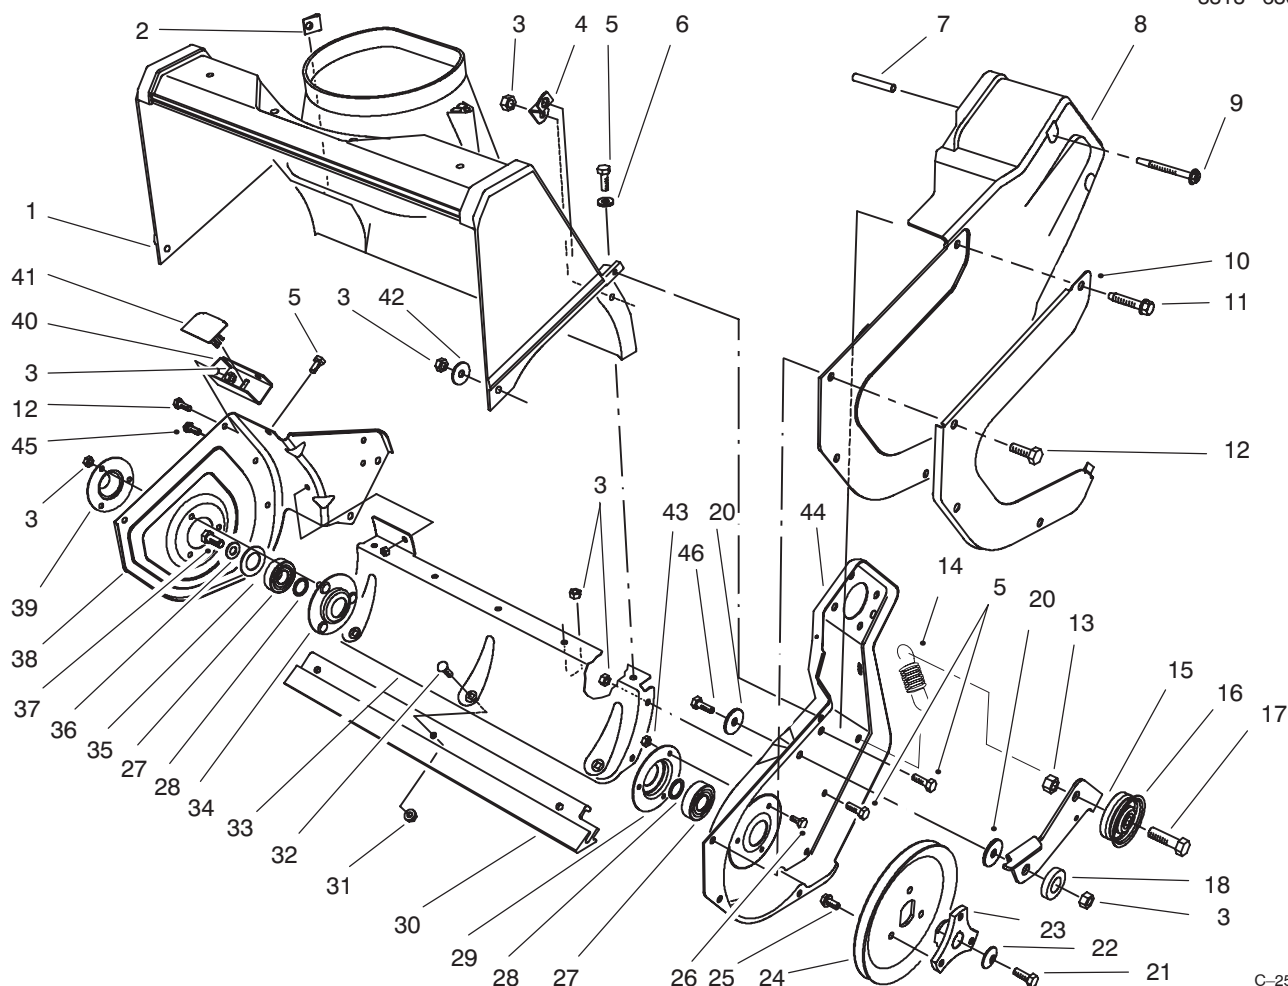


C-2569

ROTOR HOUSING ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-8700	Housing – Rotor	1
2	32115-14	Nut – U	1
3	3296-42	Nut – Lock	21
4	55-9430	Bracket – Z	1
5	321-4	Screw – Hex. Hd.	10
6	3256-22	Washer – Flat	5
7	57-3830	Tube	2
8	71-5030	Cover – Drive	1
9	71-5350	Screw – Thread Forming	2
10	71-5150	Guard – Drive Cover	1
11	36-3860	Screw – Special	1
12	32105-15	Screw – Hex. Flange Hd.	7
13	3296-39	Nut – Lock	1
14	94-8866	Spring – Extension Auger	1
15	71-5160	Arm – Brake	1
16	71-5260	Pulley – Idler	1
17	323-44	Screw – Hex. Hd.	1
18	80-4620	Washer – Spacer	1
20	3256-55	Washer	2
21	321-30	Screw – Hex. Hd.	1
22	3290-456	Washer – Belleville	1
23	71-5070	Hub – Pulley	1
24	71-5410	Pulley – Rotor	1

Ref. No.	Part No.	Description	No. Used
25	12-3270	Screw – Hex. Flange Hd.	3
26	32105-8	Screw – Hex. Hd.	3
27	38-7820	Bearing – Ball	2
28	52-7280	Washer – Thrust	2
29	38-8620	Flange – Bearing	1
30	71-5390	Scraper	1
31	32128-10	Nut – Flange Lock	3
32	3229-11	Bolt – Carriage	3
33	71-4930	Housing – Lower	1
34	52-9110	Flange – Bearing	1
35	52-7270	Washer – Rubber	1
36	3256-24	Washer – Flat	1
37	3234-25	Screw – Hex. Hd.	1
38	71-4920	Sideplate – R.H.	1
39	52-7290	Retainer – Bearing	1
40	71-5310	Bracket – Support	1
41	71-5270	Cover – Bracket	1
42	3256-67	Washer – Flat	2
43	3296-2	Nut – Lock	3
44	71-4911	Sideplate – L.H.	1
45	321-39	Screw – Hex. Washer Hd.	1
46	321-6	Screw – Hex Hd. Cap	1

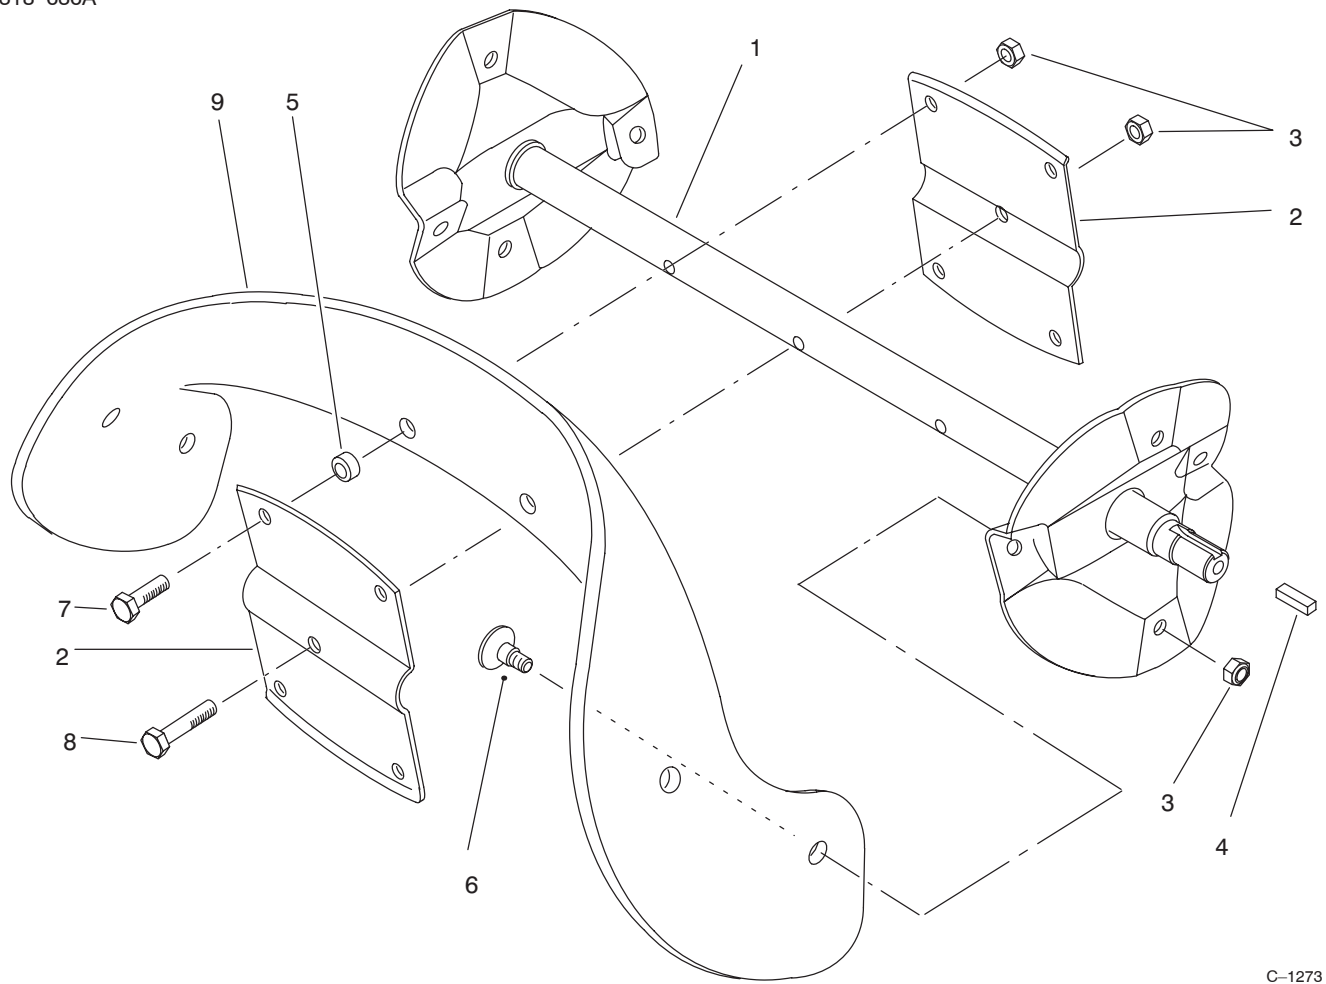


C-1273

ROTOR ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	55-9202	Rotor Shaft Assembly	1
2	66-6600	Plate - Rotor	2
3	3296-56	Nut - Lock	13
4	10-8040	Key - Square	1
5	55-9370	Spacer	4

Ref. No.	Part No.	Description	No. Used
6	84-1971	Screw - Countersunk	8
7	321-4	Screw - Hex. Hd.	4
8	321-8	Screw - Hex. Hd.	1
9	88-0781	Blade - Rotor	2

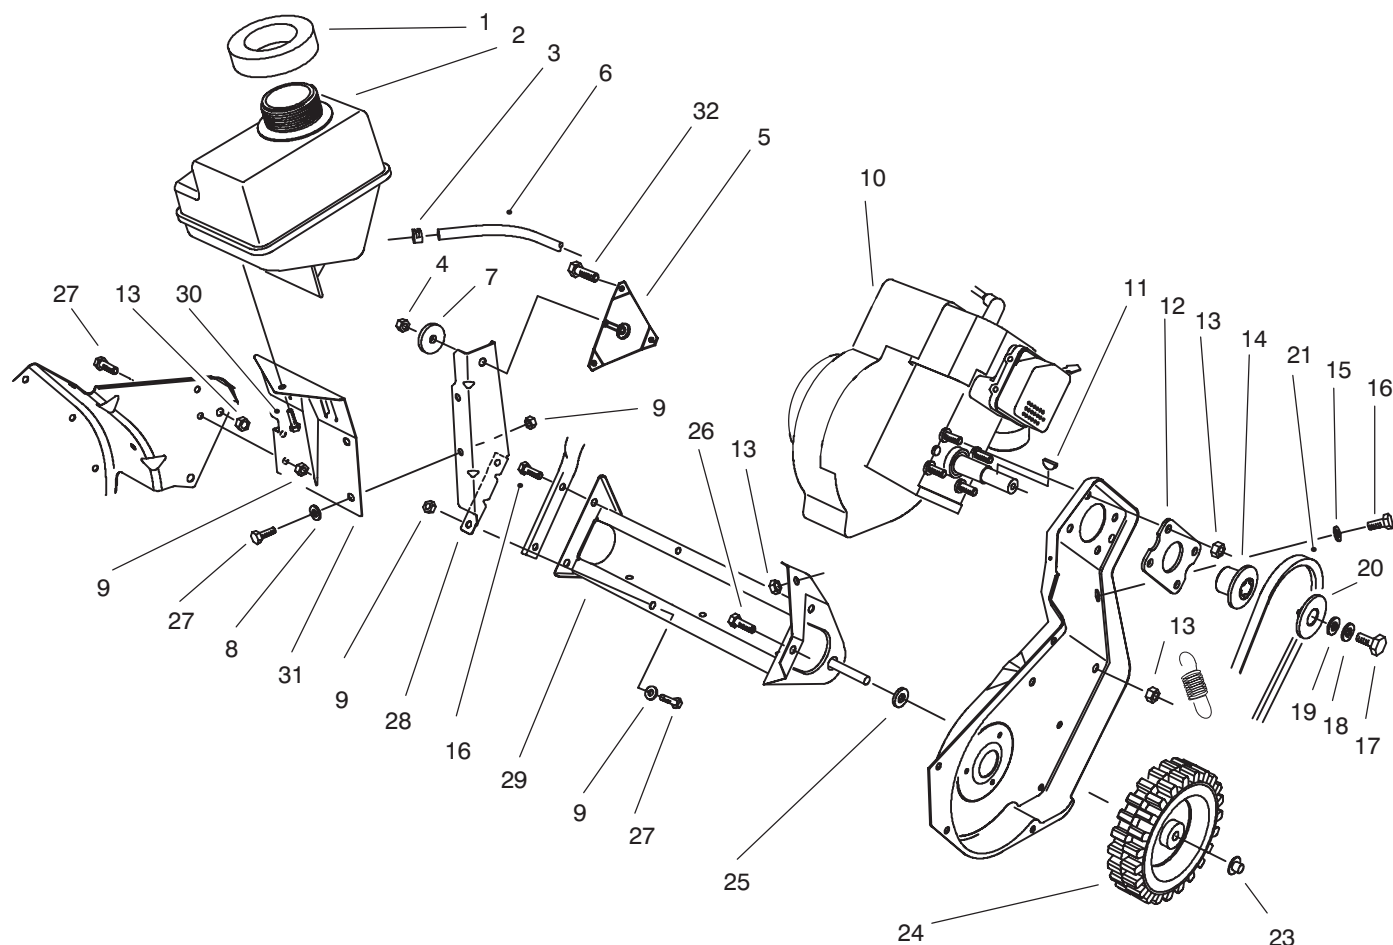


C-2570

ENGINE & FRAME ASSEMBLY MODEL NO. 28221 (RECOIL)

Ref. No.	Part No.	Description	No. Used
1	55-9310	Seal - Fuel Tank	1
2	71-5020	Tank - Fuel	1
3	2412-98	Clamp - Hose	2
4	3296-16	Nut - Lock	1
5	92-6012	Bracket - & Stud Assembly	1
6	49-2482	Hose - Fuel	1
7	71-5320	Washer - Engine Support	1
8	3256-22	Washer - Flat	4
9	3296-42	Nut - Lock	6
†10		Engine - Tecumseh No. HSK600-1681S	1
11	3257-3	Key - Woodruff	1
12	71-5290	Plate - Engine	1
13	3296-29	Nut - Lock	8
14	71-5050	Hub - Sheave	1
15	3256-23	Washer - Flat	1

Ref. No.	Part No.	Description	No. Used
16	322-3	Screw - Hex. Hd.	3
17	3235-6	Screw - Locking Hex. Hd.	1
18	3290-456	Washer - Belleville	1
19	3256-71	Washer - Flat	2
20	71-5060	Cap - Sheave	1
21	71-5381	Belt - Drive	1
23	3290-320	Nut - Push	2
24	23-3250	Wheel	2
25	71-5440	Spacer - Wheel	2
26	322-5	Screw - Hex. Hd.	1
27	321-4	Screw - Hex. Hd.	6
28	71-5210	Support - Engine	1
29	71-5200	Frame Assembly	1
30	32144-53	Screw - Thread Forming	1
31	71-5220	Bracket - Fuel Tank	1
32	92-6019	Screw - Thread Form.	3

† Obtain from your local Tecumseh dealer.

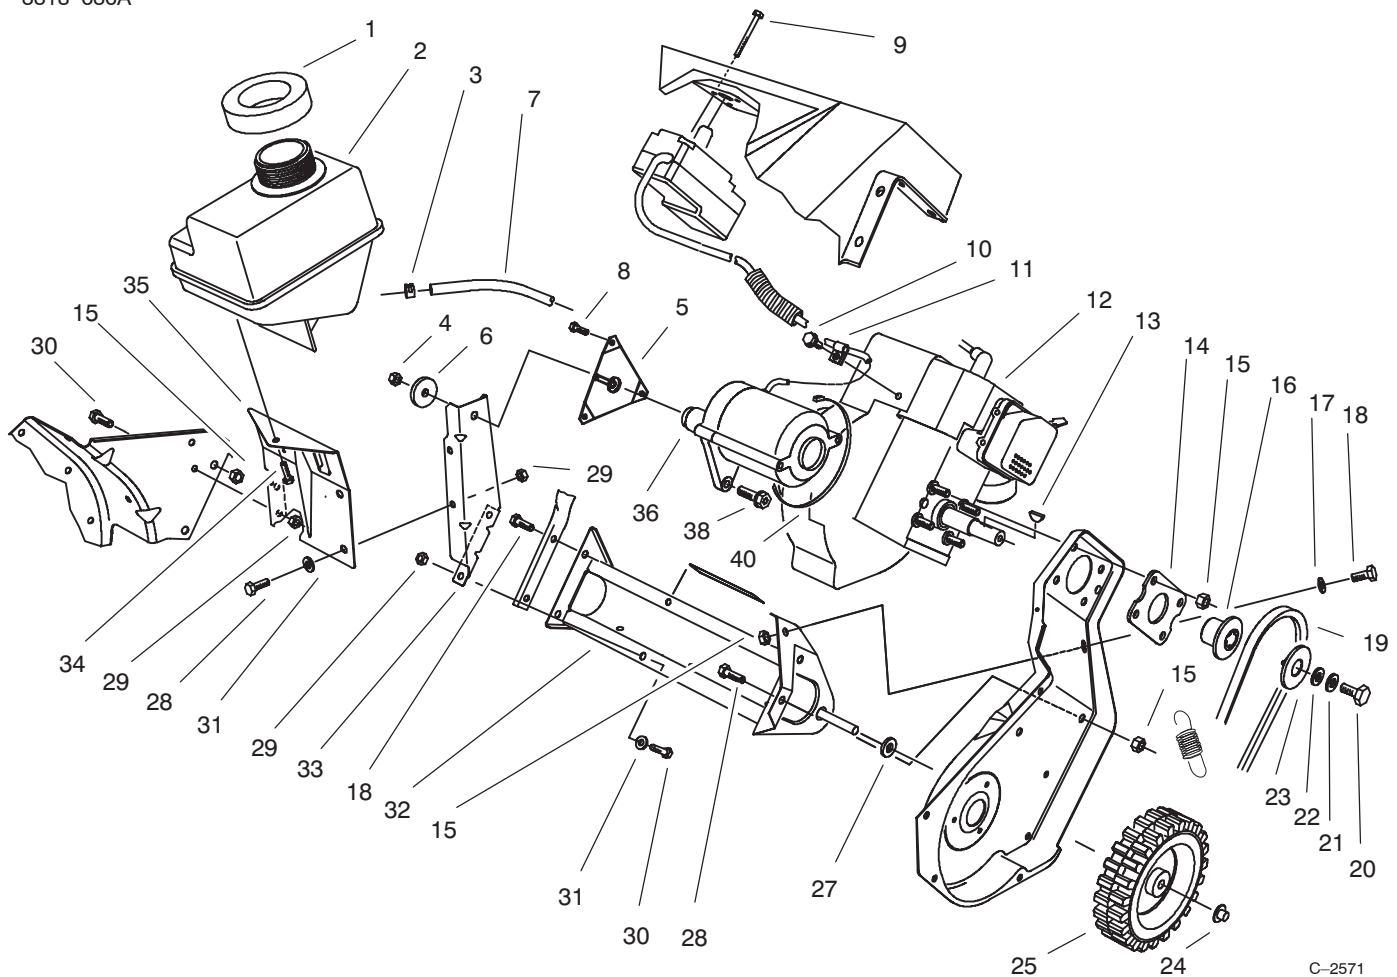


C-2571

ENGINE & FRAME ASSEMBLY MODEL NO. 28223 (ELECTRIC)

Ref. No.	Part No.	Description	No. Used
1	55-9310	Seal – Fuel Tank	1
2	71-5020	Tank – Fuel	1
3	2412-98	Clamp – Hose	2
4	3296-16	Nut – Lock	1
5	92-6012	Bracket & Stud Assembly	1
6	71-5320	Washer – Engine Support	1
7	49-2482	Hose – Fuel	1
8	92-6019	Screw – Thread Forming	3
9	32144-27	Screw – Thread Forming	3
10	32144-10	Screw – Thread Forming	1
11	2412-91	Clamp – Cable	1
†12		Engine – Tecumseh No. HSK600-1681S	1
13	3257-3	Key – Woodruff	1
14	71-5290	Plate – Engine	1
15	3296-29	Nut – Lock	8
16	71-5050	Hub – Sheave	1
17	3256-23	Washer – Flat	1
18	322-3	Screw – Hex. Hd.	3

Ref. No.	Part No.	Description	No. Used
19	71-5381	Belt – Drive	1
20	3235-6	Screw – Locking Hex. Hd.	1
21	3290-456	Washer – Belleville	1
22	3256-71	Washer – Flat	1
23	71-5060	Cap – Sheave	1
24	3290-320	Nut – Push	2
25	23-3250	Wheel	2
27	71-5440	Spacer – Wheel	2
28	322-5	Screw – Hex. Hd.	1
29	3296-42	Nut – Lock	6
30	321-4	Screw – Hex. Hd.	6
31	3256-22	Washer – Flat	4
32	71-5200	Frame Assembly	1
33	71-5210	Support – Engine	1
34	32144-53	Screw – Thread Forming	1
35	71-5220	Bracket – Fuel Tank	1
36	77-0402	Starter Motor Assembly	1
38	80-0700	Screw – Hex. Torx	2
40	250-7	Strap – Starter Tie Down	1

† Obtain from your local Tecumseh dealer.

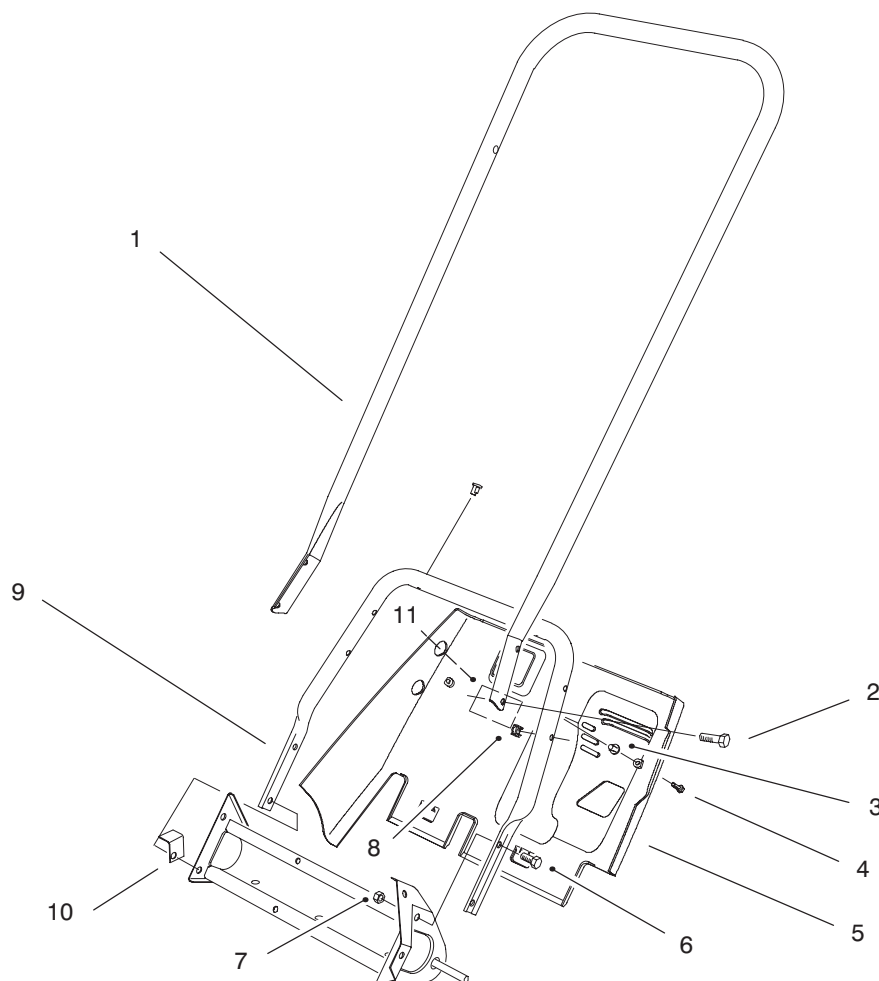


C-2573

HANDLE ASSEMBLY

Ref. No.	Part No.	Description	No. Used
1	71-5090	Handle - Upper	1
2	32105-11	Screw - Hex. Hd.	4
3	3290-486	Nut - Push	5
4	32144-53	Screw - Thread Forming	3
5	94-8889	Shroud - Lower	1
6	322-3	Screw - Hex. Hd.	2

Ref. No.	Part No.	Description	No. Used
7	3296-29	Nut - Lock	2
8	3290-225	Nut - Speed	4
9	71-5370	Handle - Lower	1
10	71-5600	Bracket - Shroud	1
11	61-4790	Decal - Warning CSA	1


*Not Illustrated

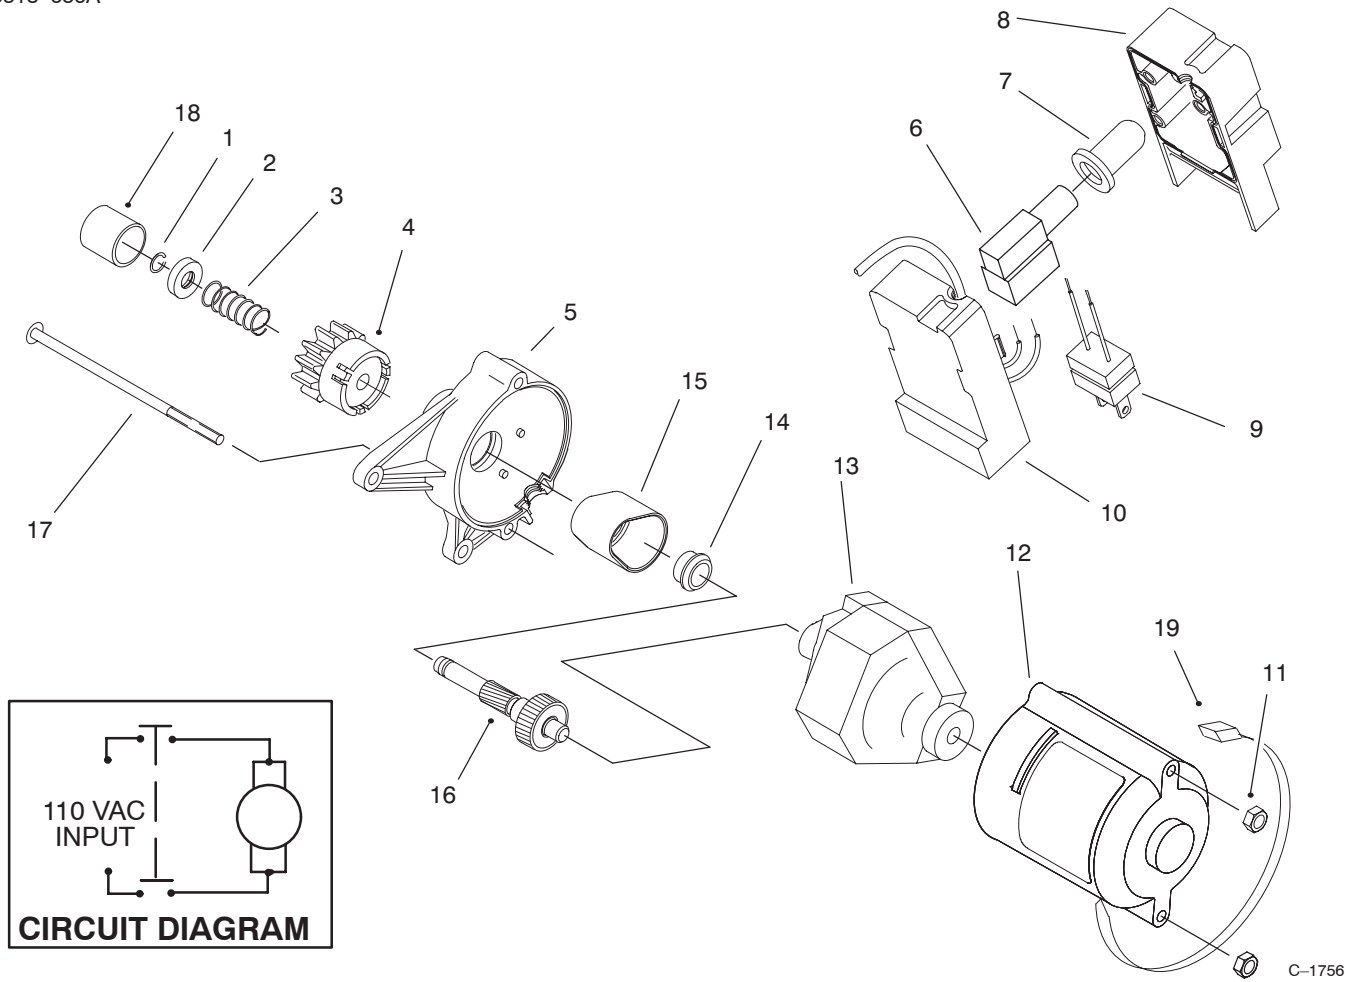

**STARTER MOTOR ASSEMBLY
MODEL NO. 28223 (ELECTRIC)**


Ref. No.	Part No.	Description	No. Used
1	61-4680	Ring – Lock	1
2	61-4670	Stop – Pinion	1
3	61-4690	Spring – Anti Drift	1
4	84-5240	Pinion Assembly	1
5	70-7810	Housing – Upper Starter	1
6	61-4820	Switch – Starter	1
7	61-4810	Boot – Switch	1
8	80-3740	Cap – Switch Housing	1
9	94-9933	Plug – Power	1
10	80-3730	Base – Switch Housing	1
11	3296-2	Nut – Lock	2

Ref. No.	Part No.	Description	No. Used
12	70-7820	Housing – Lower Starter	1
13	70-7802	Motor	1
14	70-7900	Bushing – Upper	1
15	70-7850	Cover – Gear	1
16	92-6003	Gear & Shaft Assembly	1
17	32144-101	Screw – Machine	2
18	70-7890	Cap – Pinion	1
19	250-7	Cable Tie	1
*	77-0402	Starter Motor Assembly (Incl. Ref. #1-5,11-19)	1
*	28-9170	Cord – 7 Ft.	1

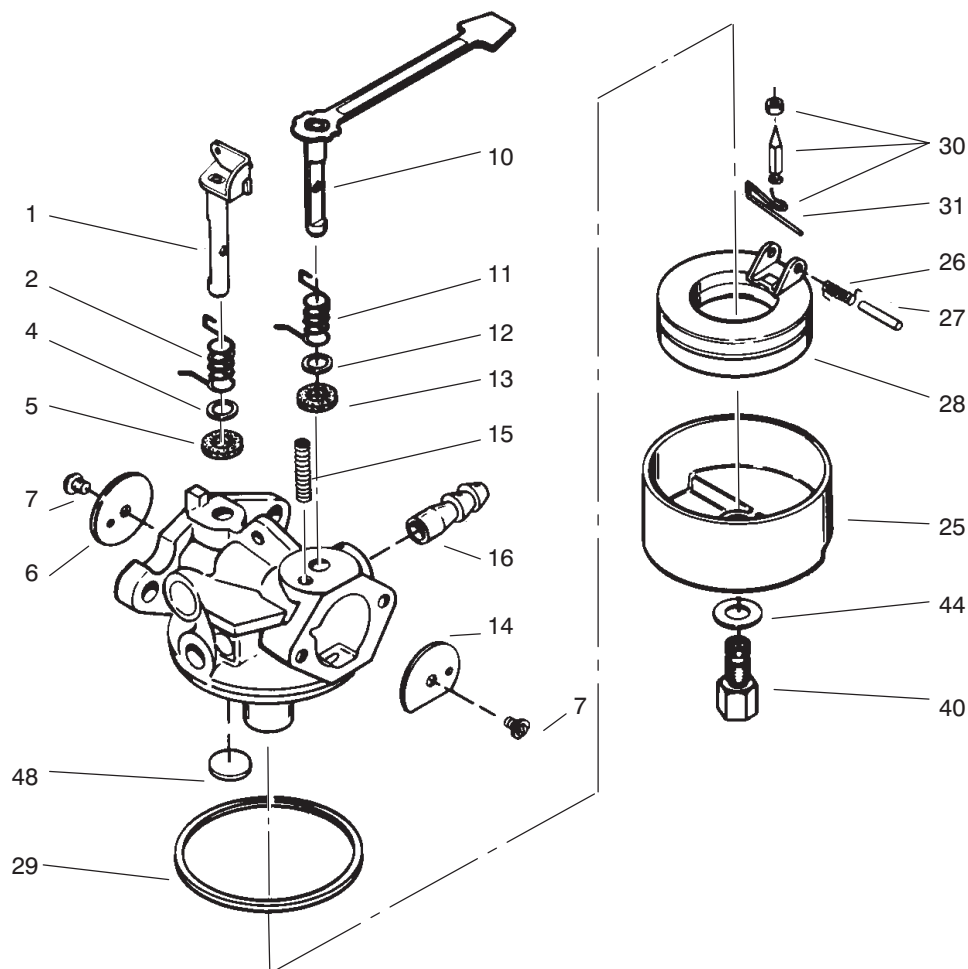


CARBURETOR NO. 632641

Ref. No.	Part No.	Description	No. Used	Ref. No.	Part No.	Description	No. Used
1	632166	Throttle Shaft & Lever Asm.	1	25	631700	Float Bowl	1
2	632169	Throttle Return Spring	1	26	632386	Float Dampening Spring	1
4	6311844	Dust Seat Washer	1	27	631024	Float shaft	1
5	631183	Dust Seat (Throttle)	1	28	632019	Float	1
6	631621	Throttle Shutter	1	29	631028	Float Bowl "O" Ring	1
7	650506	Shutter Screw	2	30	631021	Inlet Needle, Seat & Clip (Incl. Ref. #31)	1
10	632553	Choke Shaft & Lever Asm. (Incl. Ref. # 11-13)	1	31	631022	Spring Clip	1
14	631815	Choke Shutter	1	40	632385	High Speed Bowl Nut	1
15	630735	Choke Positioning Spring	1	44	631334	Bowl Nut Washer	1
16	632164	Fuel Fitting	1	48	631027	Welch Plug	1

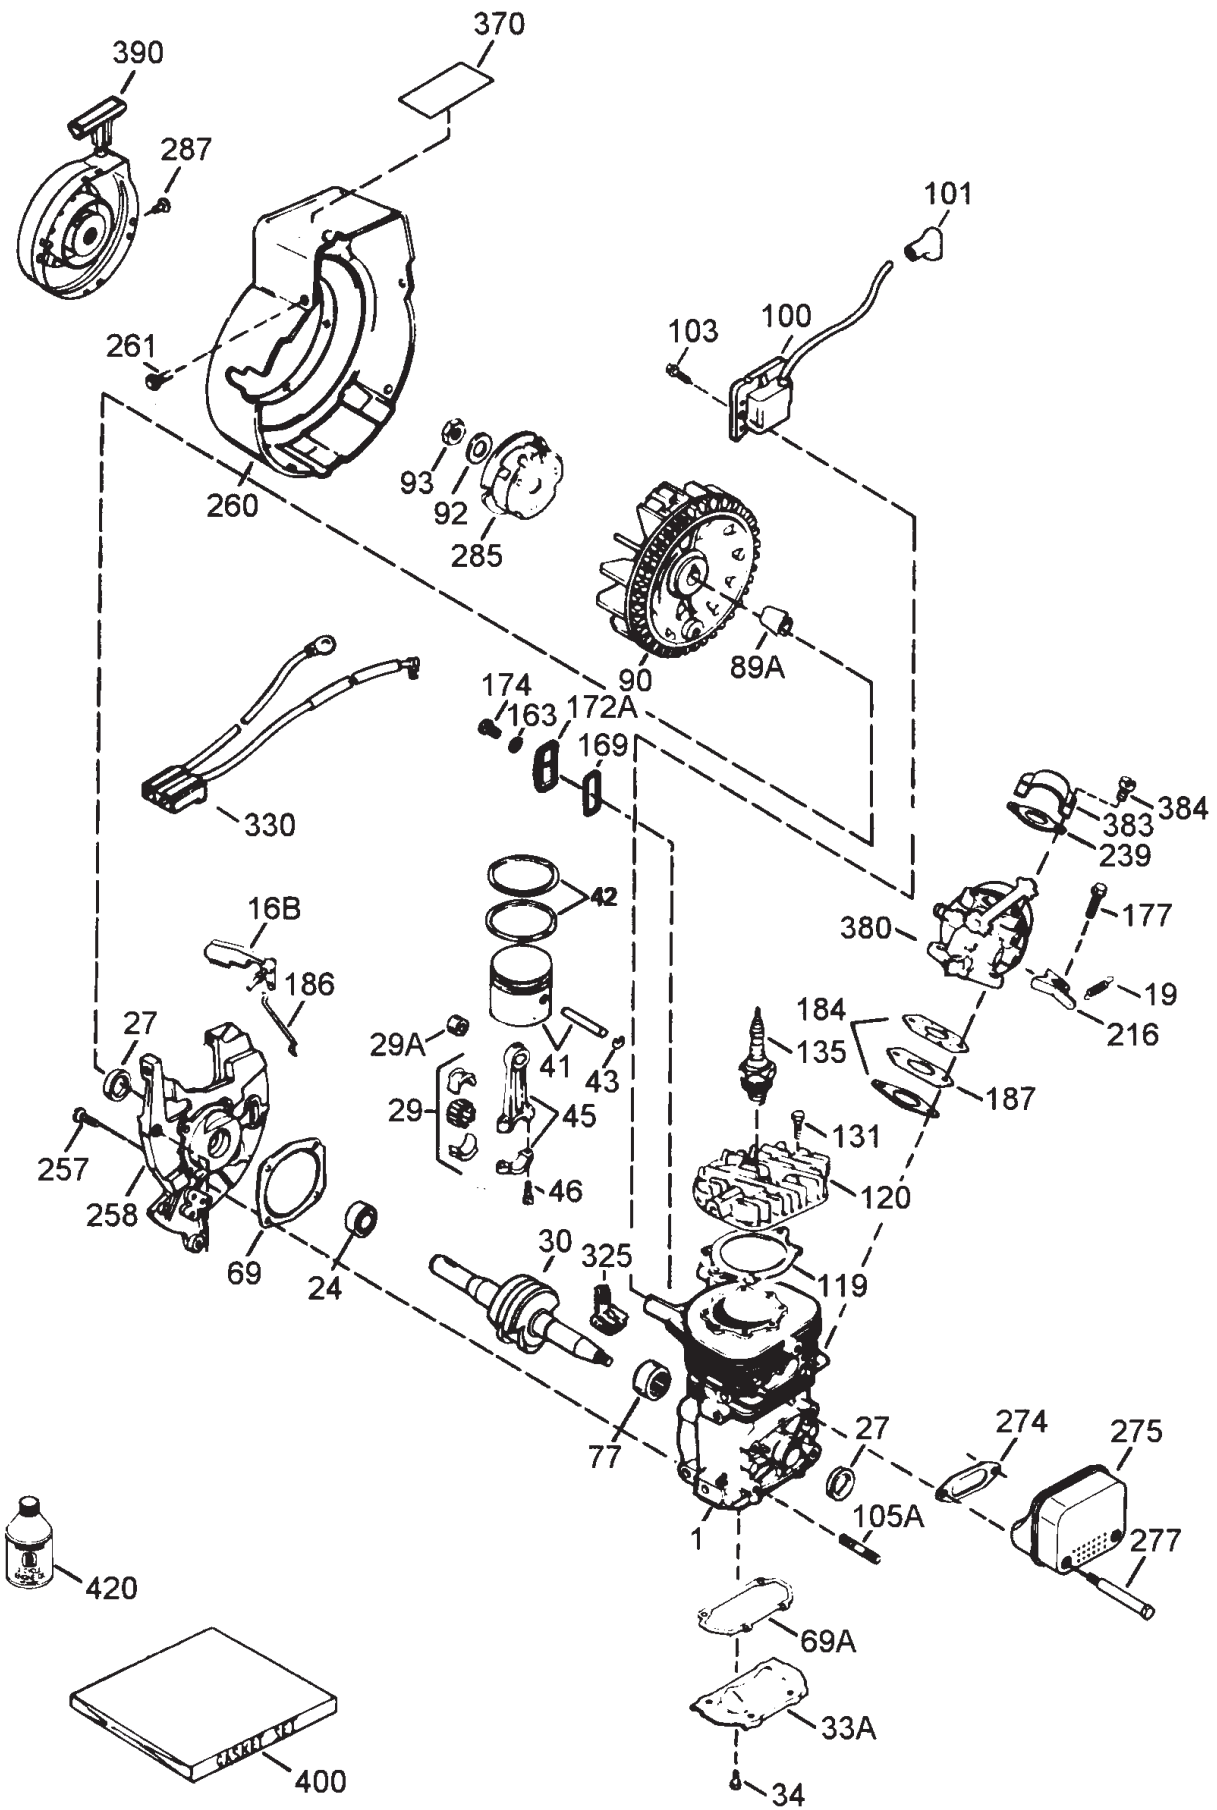

Ref. No.	Part No.	Description	No. Used
1		Cylinder (Order Short Block if Replacement is needed)	1
16B	490291A	Air Vane	1
19	570707	Extension Spring	1
24	530110	Ball Bearing	1
27	510319	Oil Seal	2
29	530150	Needle Bearing & Liner Set (37 Needles)	1
29A	530104A	Cartridge Bearing	1
30	290602	Crankshaft	1
33A	570644	Cover Plate	1
34	650579	Screw, Torx T–25	4
41	310283A	Piston & Pin Assembly	1
42	310190	Ring Set	2
43	310167	Piston Pin Retaining Ring	2
45	310235B	Connecting Rod Assembly (Incl. Ref. #29, 29A, & 46)	1
46	650633	Connecting Rod Bolt	4
*69	510292A	Cylinder Cover Gasket	1
*69A	510323A	Cover Plate Gasket	1
77	53–105	Cartridge Bearing	1
89	611032	Adapter Sleeve	1
90	611066	Flywheel	1
92	650815	Belleville Washer	1
93	650390	Flywheel Nutt	1
100	34443A	Solid State Ignition (Incl. Ref. #101)	1
101	610118	Spark Plug Cover	1
103	650814	Screw, Torx T–15	2
105A	650796	Stud	4
*119	510274A	Cylinder Head Gasket	1
120	250240B	Cylinder Head	1
131	650477	Screw, Torx T–30	5
135	611049	Resistor Spark Plug	1
163	650838	Washer	1
*169	510325A	Cover Plate Gasket	1
172A	570708	Compression Release	


Ref. No.	Part No.	Description	No. Used
		Cover	1
174	650579	Screw, Torx T–25	1
177	650959	Screw	2
*184	510326A	Carburetor Gasket	2
186	490322	Governor Link	1
187	570428A	Spacer	1
216	570645	R.P.M. Adjusting Lever	1
239	35815	Air Cleaner Gasket	1
257	650911	Screw, Torx T–30	4
258	350422	Blower Housing Base (Incl. Ref. #27)	1
260	350437	Blower Housing	1
261	650737	Screw	4
*274	510346A	Exhaust Gasket	1
275	390330	Muffler (Incl. Ref. #274 & 277)	1
277	650869	Screw	2
285	590551	Starter Cup	1
287	650926	Screw	3
325	29443	Wire Clip	1
330	611153	Wire Harness	1
370	35977	Instruction Decal	1
380	632641	Carburetor (Incl. Ref. #184)	1
383	570434	Spit Cup	1
384	650229	Screw, Torx T–25	2
390	590652	Rewind Starter	
390	590735	Rewind Starter	
		NOTE: This engine could have been built with a 590735 starter. Refer to the design of the air intake louvers for part identification. Individual starter parts do not interchange.	1
400	510324	Gasket Set	1
420	730227A	2–Cycle Oil (8 oz.)	1

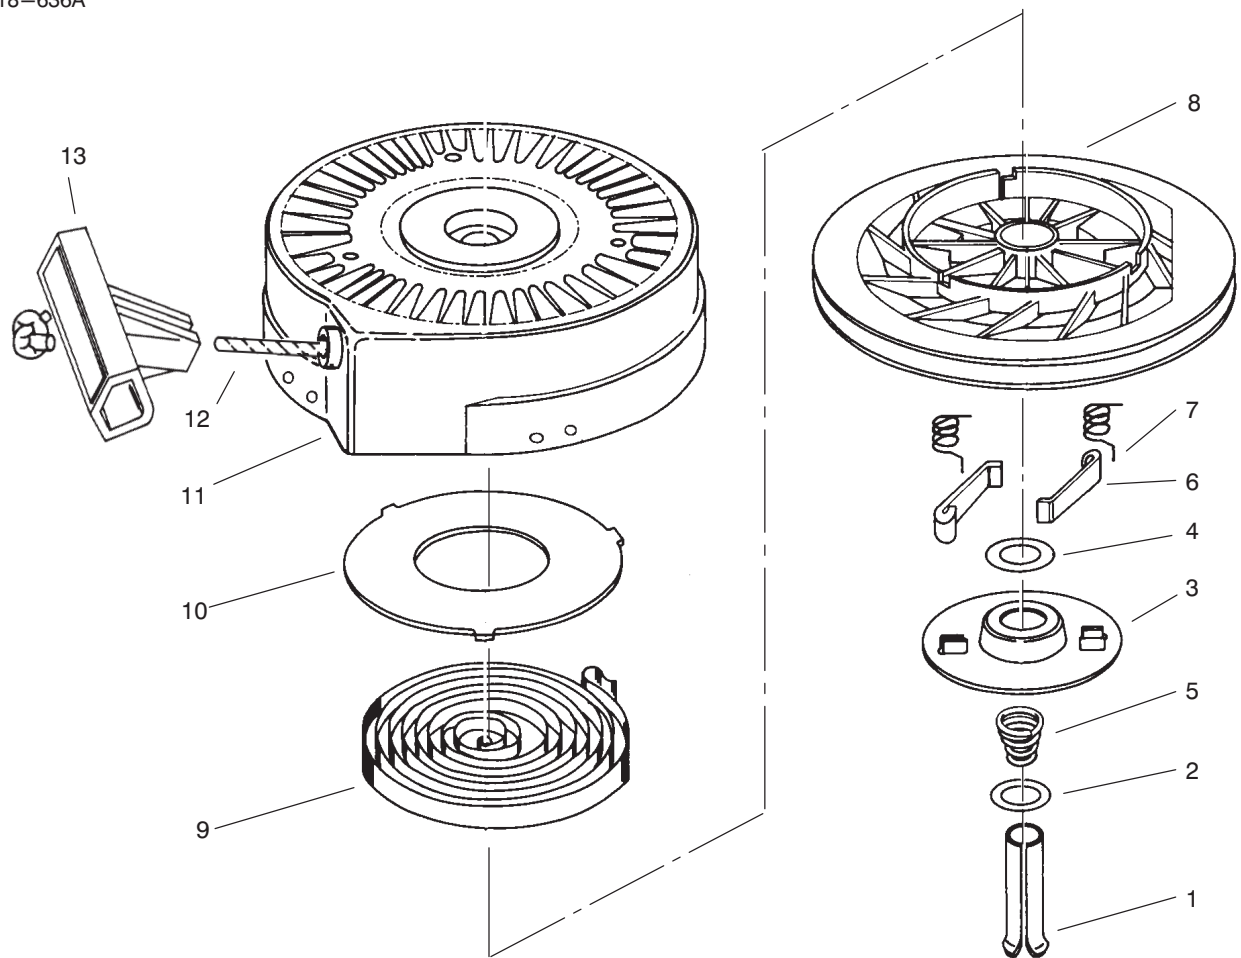

C-1750

Ref. No.	Part No.	Description	No. Used
1	590599A	Spring Pin (Incl. Ref. #4)	1
2	590600	Washer	1
3	590615	Retainer	1
4	590601	Washer	1
5	590598	Brake Spring	1
6	590616	Starter Dog	2
7	590617	Dog Spring	2

Ref. No.	Part No.	Description	No. Used
8	590645A	Pulley Assembly (Incl. Ref. #9 & 10)	1
9	590619	Rewind Spring	1
10	590620	Spring Cover	1
11	590643	Starter Housing Assembly	1
12	590535	Starter Rope	1
13	590452	Starter Handle	1

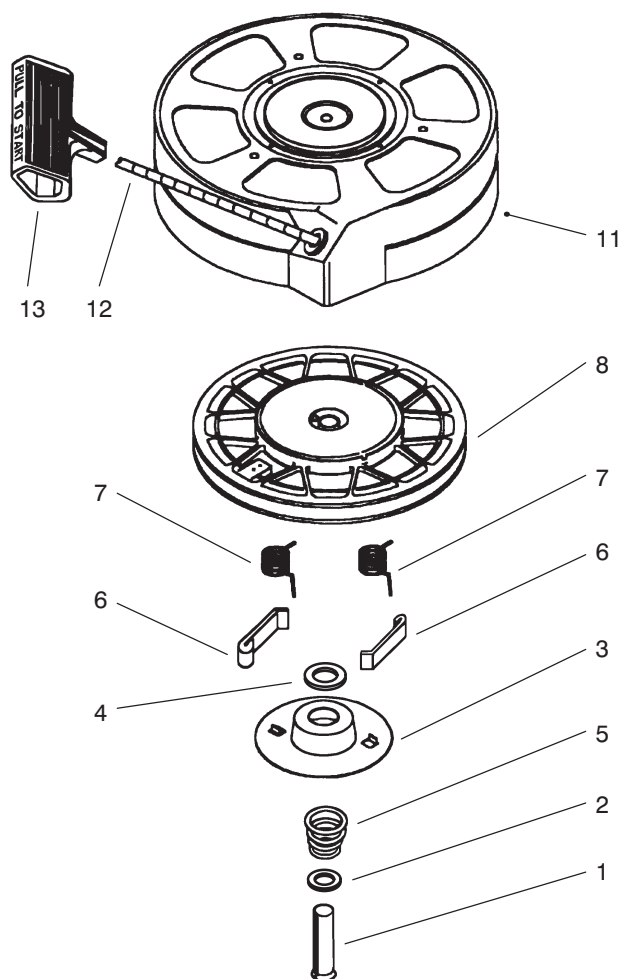

Ref. No.	Part No.	Description	No. Used
1	590599A	Spring Pin (Incl. Ref. #4)	1
2	590600	Washer	1
3	590696	Retainer	1
4	590601	Washer	1
5	590697	Brake Spring	1
6	590698	Starter Dog	2

Ref. No.	Part No.	Description	No. Used
7	590699	Dog Spring	2
8	590709	Pulley & Rewind Spring Assembly	1
11	590703	Starter Housing Assembly	1
12	590535	Starter Rope	1
13	590701	Starter Handle	1

LAWN-BOY PART NUMBER INDEX

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
10-8040	Key - Square	4 4 1	71-5160	Arm - Brake	3 15 1
12-3270	Screw - Hex. Flange Hd.	3 25 3	71-5200	Frame Assembly	5 29 1
20-4320	Washer - Rubber	1 5 2	71-5200	Frame Assembly	6 32 1
23-3250	Wheel	5 24 2	71-5210	Support - Engine	5 28 1
23-3250	Wheel	6 25 2	71-5210	Support - Engine	6 33 1
23-7470	Guide - Rope	1 14 1	71-5220	Bracket - Fuel Tank	5 31 1
28-9170	Cord - 7 Ft.	8 * 1	71-5220	Bracket - Fuel Tank	6 35 1
36-3860	Screw - Special	3 11 1	71-5240	Panel - Control	1 9 1
38-7820	Bearing - Ball	3 27 2	71-5241	Panel - Control	1 * 1
38-8620	Flange - Bearing	3 29 1	71-5260	Pulley - Idler	3 16 1
40-5940	Switch - On-Off	1 8 1	71-5270	Cover - Bracket	3 41 1
44-2750	Body - Primer	1 13 1	71-5290	Plate - Engine	5 12 1
44-3173	Hose - Primer	1 15 1	71-5290	Plate - Engine	6 14 1
46-8092	Screw - Hex. Flange Hd.	2 29 2	71-5310	Bracket - Support	3 40 1
49-2482	Hose - Fuel	5 6 1	71-5320	Washer - Engine Support	6 6 1
49-2482	Hose - Fuel	6 7 1	71-5320	Washer - Engine Support	5 7 1
52-7270	Washer - Rubber	3 35 1	71-5340	Guard - Muffler	1 19 1
52-7280	Washer - Thrust	3 28 2	71-5350	Screw - Thread Forming	3 9 2
52-7290	Retainer - Bearing	3 39 1	71-5370	Handle - Lower	7 9 1
52-9110	Flange - Bearing	3 34 1	71-5381	Belt - Drive	6 19 1
55-3573	Gas Cap Assembly	1 4 1	71-5381	Belt - Drive	5 21 1
55-8700	Housing - Rotor	3 1 1	71-5390	Scraper	3 30 1
55-8921	Support - Chute Ring	2 33 1	71-5410	Pulley - Rotor	3 24 1
55-8950	Plate - Friction	1 6 2	71-5440	Spacer - Wheel	5 25 2
55-9202	Rotor Shaft Assembly	4 1 1	71-5440	Spacer - Wheel	6 27 2
55-9310	Seal - Fuel Tank	5 1 1	71-5590	Spring - Extension	1 22 1
55-9310	Seal - Fuel Tank	6 1 1	71-5600	Bracket - Shroud	7 10 1
55-9370	Spacer	4 5 4	77-0402	Starter Motor Assembly	8 * 1
55-9370	Spacer - Detent Arm	1 25 1	77-0402	Starter Motor Assembly	6 36 1
55-9430	Bracket - Z	3 4 1	80-0700	Screw - Hex. Torx	6 38 2
56-2680	Deflector - Discharge	2 44 1	80-3730	Base - Switch Housing	8 10 1
57-3830	Tube	3 7 2	80-3740	Cap - Switch Housing	8 8 1
61-4670	Stop - Pinion	8 2 1	80-4610	Arm - Detent	1 26 1
61-4680	Ring - Lock	8 1 1	80-4620	Washer - Spacer	3 18 1
61-4690	Spring - Anti Drift	8 3 1	84-1971	Screw - Countersunk	4 6 8
61-4790	Decal - Warning CSA	7 11 1	84-5240	Pinion Assembly	8 4 1
61-4810	Boot - Switch	8 7 1	88-0781	Blade - Rotor	4 9 2
61-4820	Switch - Starter	8 6 1	92-6003	Gear & Shaft Assembly	8 16 1
63-8360	Key - Ignition	1 10 1	92-6012	Bracket & Stud Assembly	6 5 1
66-6600	Plate - Rotor	4 2 2	92-6012	Bracket - & Stud Assembly	5 5 1
66-7460	Bulb - Primer	1 12 1	92-6019	Screw - Thread Form.	5 32 3
70-7802	Motor	8 13 1	92-6019	Screw - Thread Forming	6 8 3
70-7810	Housing - Upper Starter	8 5 1	94-2566	Decal - Control Panel	1 * 1
70-7820	Housing - Lower Starter	8 12 1	94-2567	Decal - Control Panel	1 27 1
70-7850	Cover - Gear	8 15 1	94-2791	Discharge Chute Assembly	1 2 1
70-7890	Cap - Pinion	8 18 1	94-2901	Decal - Danger	1 3 1
70-7900	Bushing - Upper	8 14 1	94-8866	Spring - Extension Auger	3 14 1
71-4911	Sideplate - L.H.	3 44 1	94-8888	Shroud - Upper	2 37 1
71-4920	Sideplate - R.H.	3 38 1	94-8889	Shroud - Lower	7 5 1
71-4930	Housing - Lower	3 33 1	94-9878	Decal - 320	1 16 1
71-4940	Handle - Chute	1 7 1	94-9879	Decal - 320E	1 * 1
71-4950	Ring - Chute	2 34 1	94-9933	Plug - Power	8 9 1
71-4980	Retainer - Chute Ring L.H.	2 28 1	2412-91	Clamp - Cable	6 11 1
71-4990	Retainer - Chute Ring R.H.	2 35 1	2412-98	Clamp - Hose	5 3 2
71-5020	Tank - Fuel	5 2 1	2412-98	Clamp - Hose	6 3 2
71-5020	Tank - Fuel	6 2 1	250-7	Cable Tie	8 19 1
71-5030	Cover - Drive	3 8 1	250-7	Strap - Starter Tie Down	6 40 1
71-5050	Hub - Sheave	5 14 1	321-4	Screw - Hex. Hd.	3 5 10
71-5050	Hub - Sheave	6 16 1	321-4	Screw - Hex. Hd.	4 7 4
71-5060	Cap - Sheave	5 20 1	321-4	Screw - Hex. Hd.	1 23 4
71-5060	Cap - Sheave	6 23 1	321-4	Screw - Hex. Hd.	5 27 6
71-5070	Hub - Pulley	3 23 1	321-4	Screw - Hex. Hd.	6 30 6
71-5090	Handle - Upper	7 1 1	321-6	Screw - Hex Hd. Cap	3 46 1
71-5150	Guard - Drive Cover	3 10 1	321-8	Screw - Hex. Hd.	4 8 1

*Not Illustrated

LAWN–BOY PART NUMBER INDEX (Cont.)

Part No.	Description	Pg. Ref. No. No. Qty.	Part No.	Description	Pg. Ref. No. No. Qty.
321–30	Screw – Hex. Hd.	3 21 1	3290–456	Washer – Belleville	5 18 1
321–39	Screw – Hex. Washer Hd.	3 45 1	3290–456	Washer – Belleville	6 21 1
322–3	Screw – Hex. Hd.	7 6 2	3290–456	Washer – Belleville	3 22 1
322–3	Screw – Hex. Hd.	5 16 3	3290–456	Washer – Belleville	2 42 2
322–3	Screw – Hex. Hd.	6 18 3	3290–486	Nut – Push	7 3 5
322–5	Screw – Hex. Hd.	5 26 1	3296–2	Nut – Lock	8 11 2
322–5	Screw – Hex. Hd.	6 28 1	3296–2	Nut – Lock	1 20 4
323–44	Screw – Hex. Hd.	3 17 1	3296–2	Nut – Lock	3 43 3
3229–11	Bolt – Carriage	3 32 3	3296–16	Nut – Lock	5 4 1
3230–16	Bolt – Carriage	2 36 3	3296–16	Nut – Lock	6 4 1
3230–22	Bolt – Carriage	1 1 2	3296–29	Nut – Lock	7 7 2
3234–25	Screw – Hex. Hd.	3 37 1	3296–29	Nut – Lock	5 13 8
3235–6	Screw – Locking Hex. Hd.	5 17 1	3296–29	Nut – Lock	6 15 8
3235–6	Screw – Locking Hex. Hd.	6 20 1	3296–29	Nut – Lock	2 41 2
3250–32	Screw – Pan Hd.	2 38 2	3296–39	Nut – Lock	3 13 1
3256–22	Washer – Flat	3 6 5	3296–42	Nut – Lock	2 31 4
3256–22	Washer – Flat	5 8 4	3296–42	Nut – Lock	3 3 21
3256–22	Washer – Flat	1 24 5	3296–42	Nut – Lock	5 9 6
3256–22	Washer – Flat	6 31 4	3296–42	Nut – Lock	6 29 6
3256–22	Washer – Flat	2 32 2	3296–56	Nut – Lock	4 3 13
3256–23	Washer – Flat	5 15 1	3296–56	Nut – Lock	2 30 1
3256–23	Washer – Flat	6 17 1	32105–8	Screw – Hex. Hd.	3 26 3
3256–24	Washer – Flat	3 36 1	32105–11	Screw – Hex. Hd.	7 2 4
3256–55	Washer	3 20 2	32105–15	Screw – Hex. Flange Hd.	3 12 7
3256–61	Washer – Flat	1 21 4	32115–14	Nut – U	3 2 1
3256–67	Washer – Flat	3 42 2	32128–10	Nut – Flange Lock	3 31 3
3256–68	Washer – Flat	2 43 2	32144–10	Screw – Thread Forming	6 10 1
3256–70	Washer – Flat	2 39 3	32144–27	Screw – Thread Forming	6 9 3
3256–71	Washer – Flat	5 19 2	32144–53	Screw – Slotted Flange Hd.	1 11 2
3256–71	Washer – Flat	6 22 1	32144–53	Screw – Thread Forming	7 4 3
3257–3	Key – Woodruff	5 11 1	32144–53	Screw – Thread Forming	5 30 1
3257–3	Key – Woodruff	6 13 1	32144–53	Screw – Thread Forming	6 34 1
3290–225	Nut – Speed	7 8 4	32144–101	Screw – Machine	8 17 2
3290–320	Nut – Push	5 23 2	32149–1	Nut – Keps	2 40 3
3290–320	Nut – Push	6 24 2			
3290–359	Screw – Hex. Hd.	1 18 4			

MAINTENANCE RECORD

[illegible]